


ASSEMBLY INSTRUCTIONS

USAAM100083 ☐

USAAM100084 ☐

(QT034OFD)



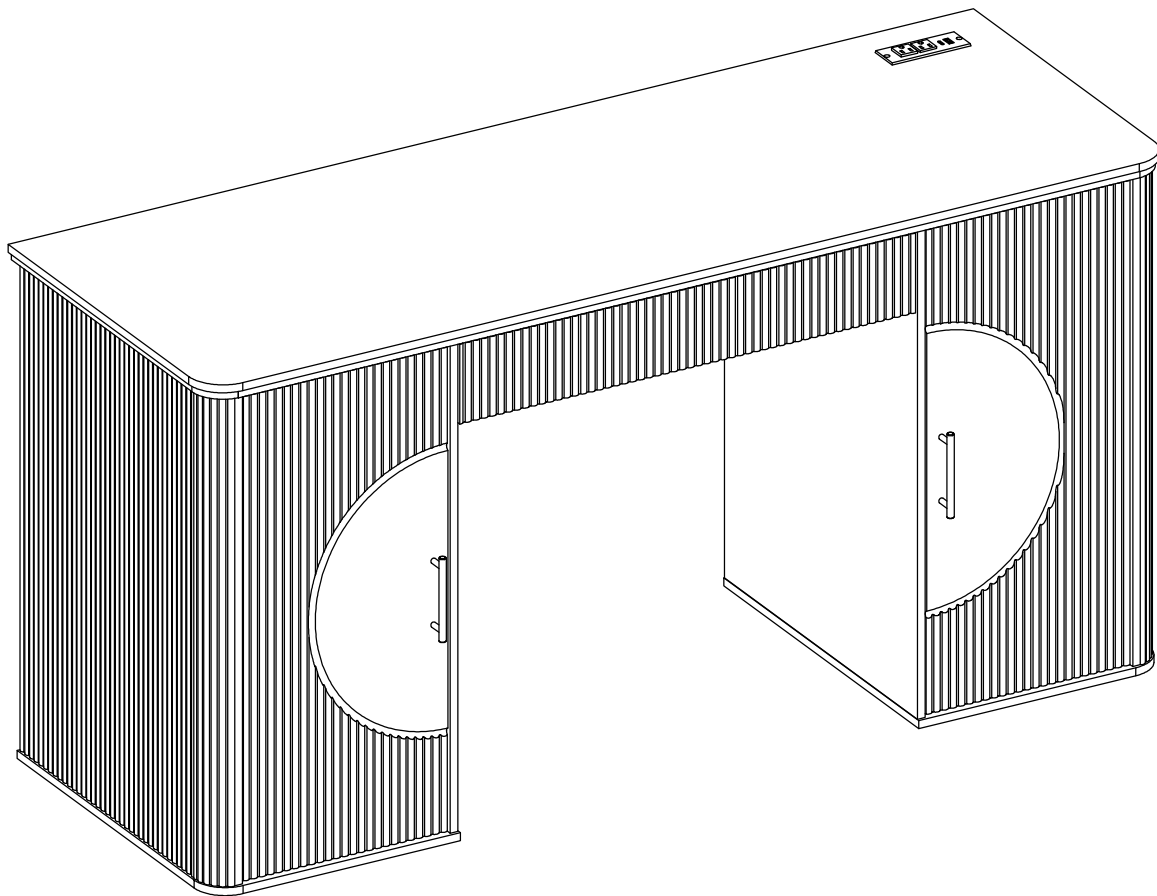


SAFETY TIPS: Static charge may cause dust on foam
– clean with a dry or damp cloth. Small foam strands may be
present – handle gently and dispose of properly. Do not burn
or incinerate. Check local recycling guidelines.

Lot Code: 20251201

Before You Start


1. Read through each step carefully and follow the proper order.
2. Separate and count all your parts and hardware.
3. Give yourself enough room for the assembly process.
4. Assemble this product on the empty carton or carpet to avoid scratching.
5. Two people are recommended for ease in the assembly of this product.
6. Keep all small parts of this product away from children. They may cause serious injury.
7. Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer.

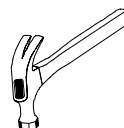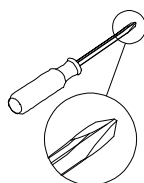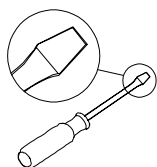


8. Note: Power tools should not be recommended to assemble this product. If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when the screw is tight. Failure to do so may result in stripping the screw.

HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS






1. Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure the Cam Bolt goes into the pre-drilled hole on the end of the panel for the Cam Lock.
2. Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of the Cam Lock points towards the Cam Bolt.
3. Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
4. Use the sticker to conceal the Cam.

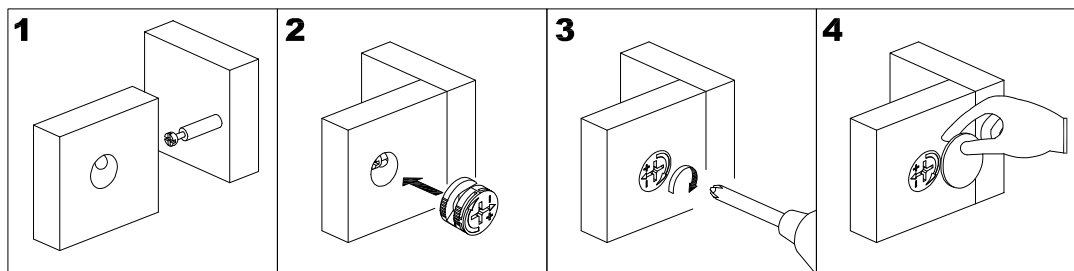



PARTS LIST

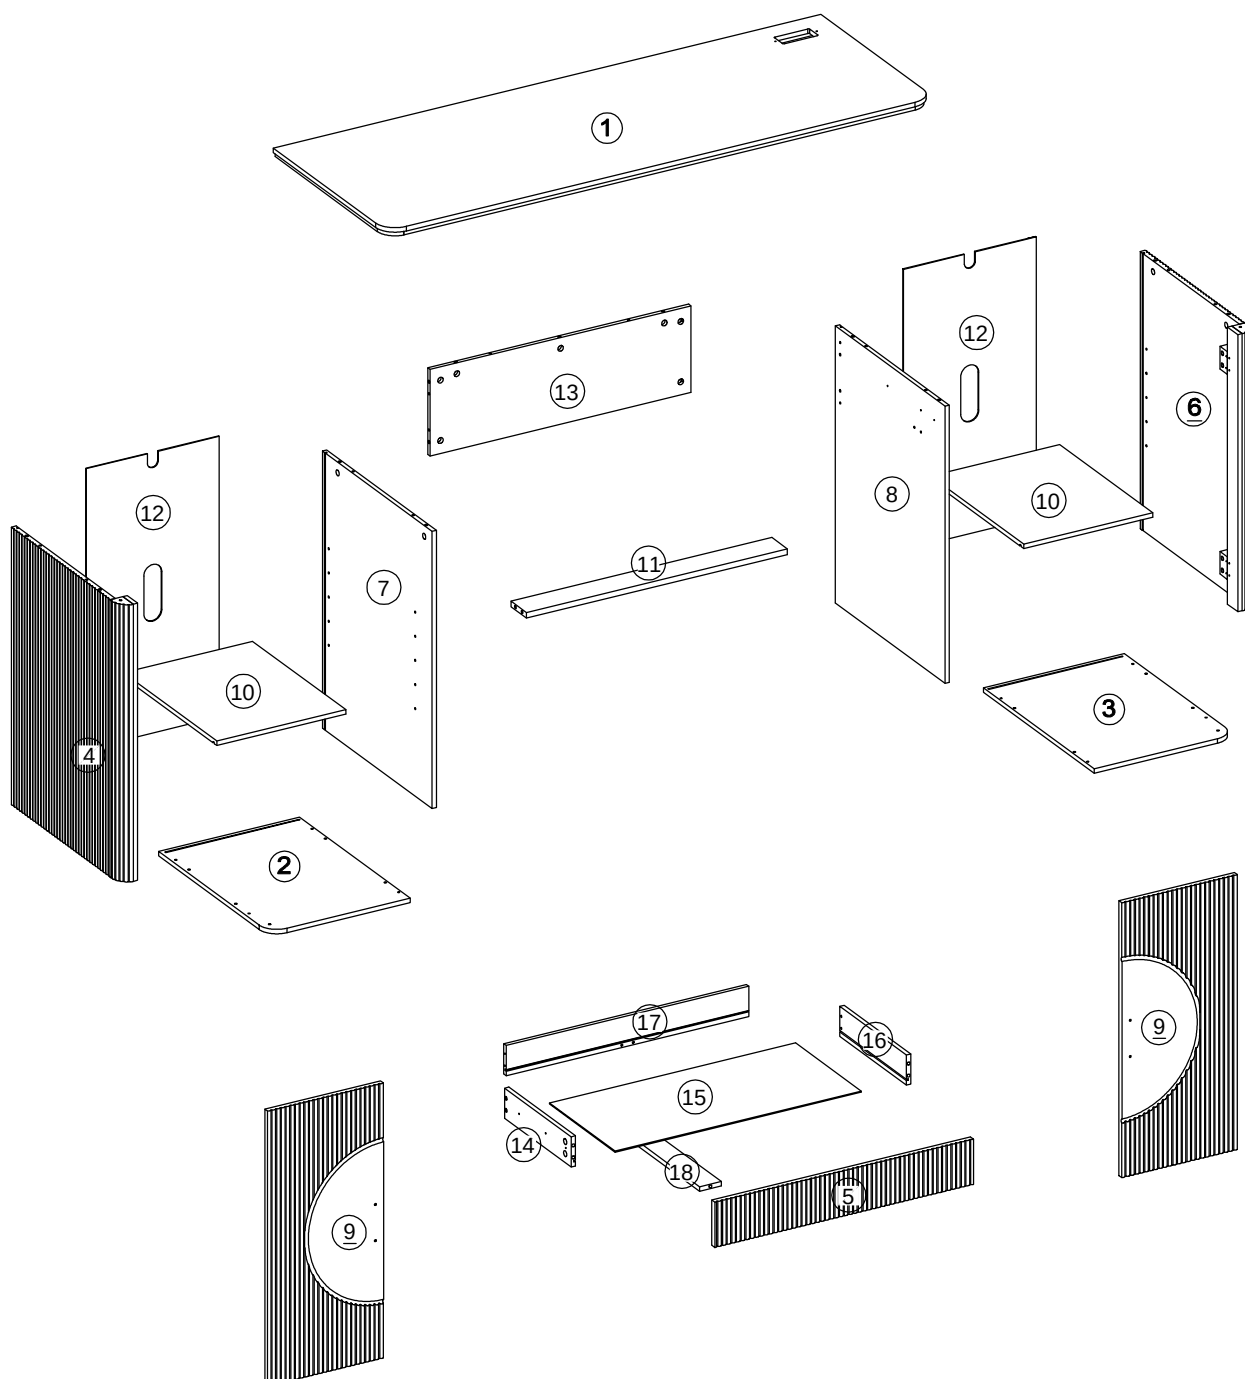

HARDWARE LIST


A		Ø6x35mm	Cam bolt	24 pcs
B		Ø15x9.5mm	Cam lock	24 pcs
C		Ø20mm	Cam cover	24 pcs
D		Ø6x30mm	Wooden dowel	26 pcs
E			Door stopper	2 pcs
F		Ø35mm	Europe Hinge	4 pcs
G		Ø5x16mm	Shelf support	8 pcs
H			Plastic wedge	16 pcs
I		Ø3x15mm	Flat-head screw	20 pcs
J		Ø3.5x12mm	Screw	14 pcs
K			Handle	2 pcs
L		Ø4x22mm	Handle bolt	4 pcs
M		Ø3.5x14mm	Hinge screw	24 pcs
N		Ø4x38mm	Screw	6 pcs
P		Ø5x45mm	Screw	8 pcs
Q		300mm	Drawer slider	1 set
R			Power strip with USB	1 pc
T			Tipping restraint	2 pcs

STEP 1

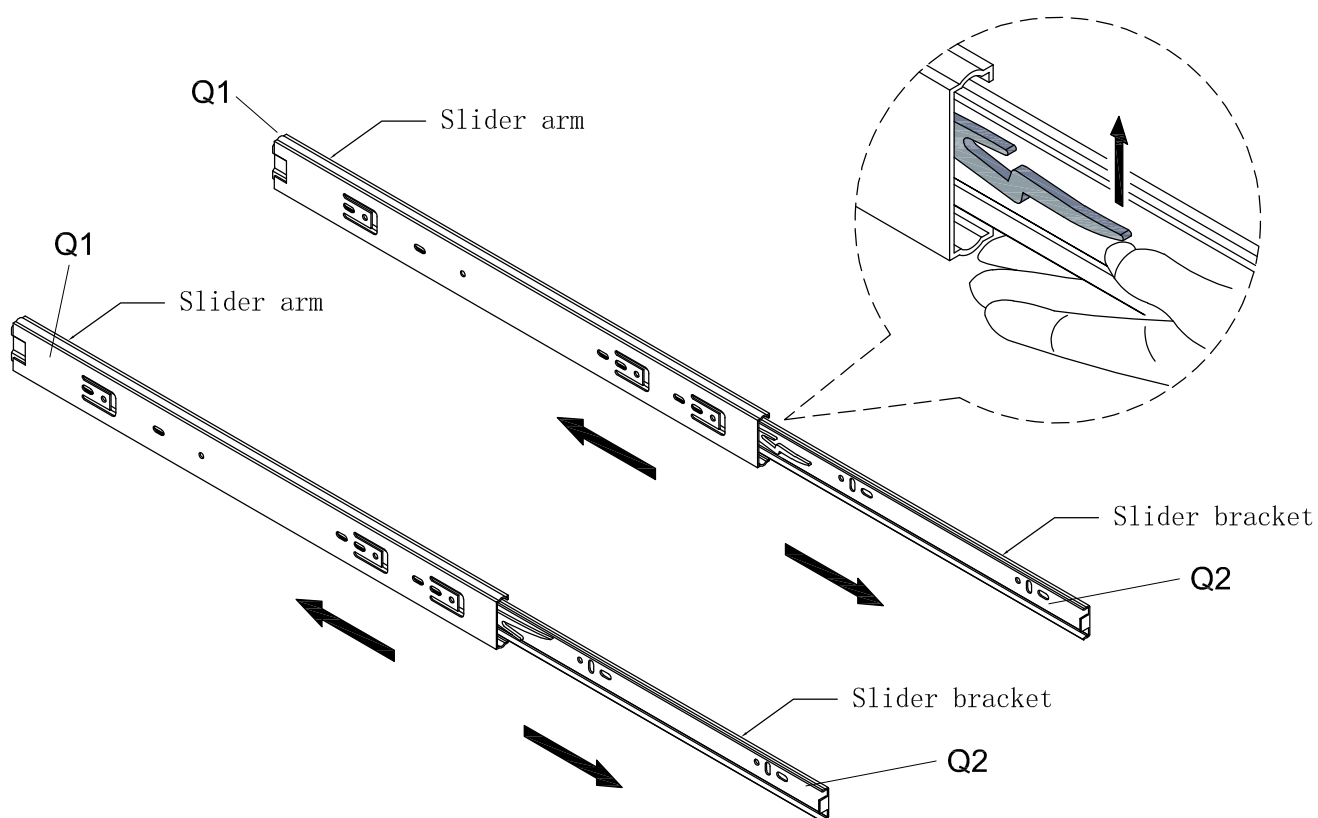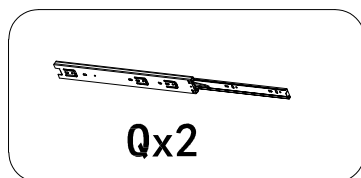

Sperate the side runners by extending the slide runner all the way forward. Press the plastic release lever of the ball bearing slides up pull the slide runner complete out.


STEP 2








Ax8



Jx6



Q1x2

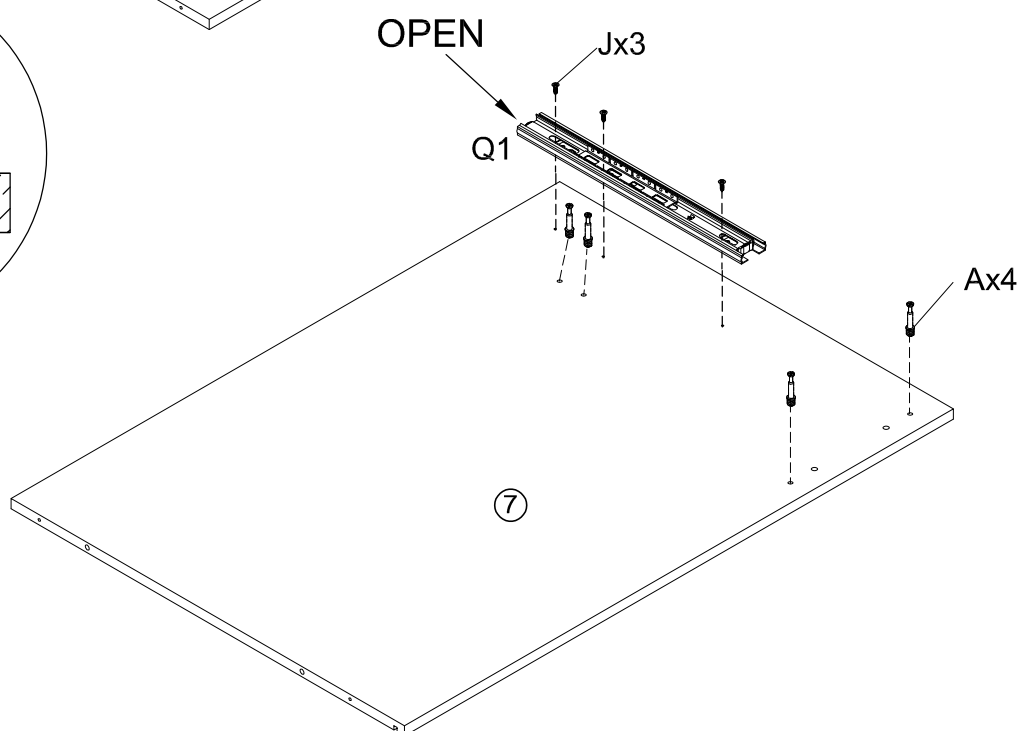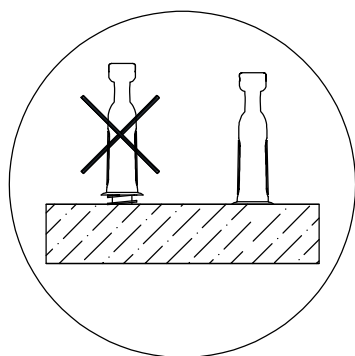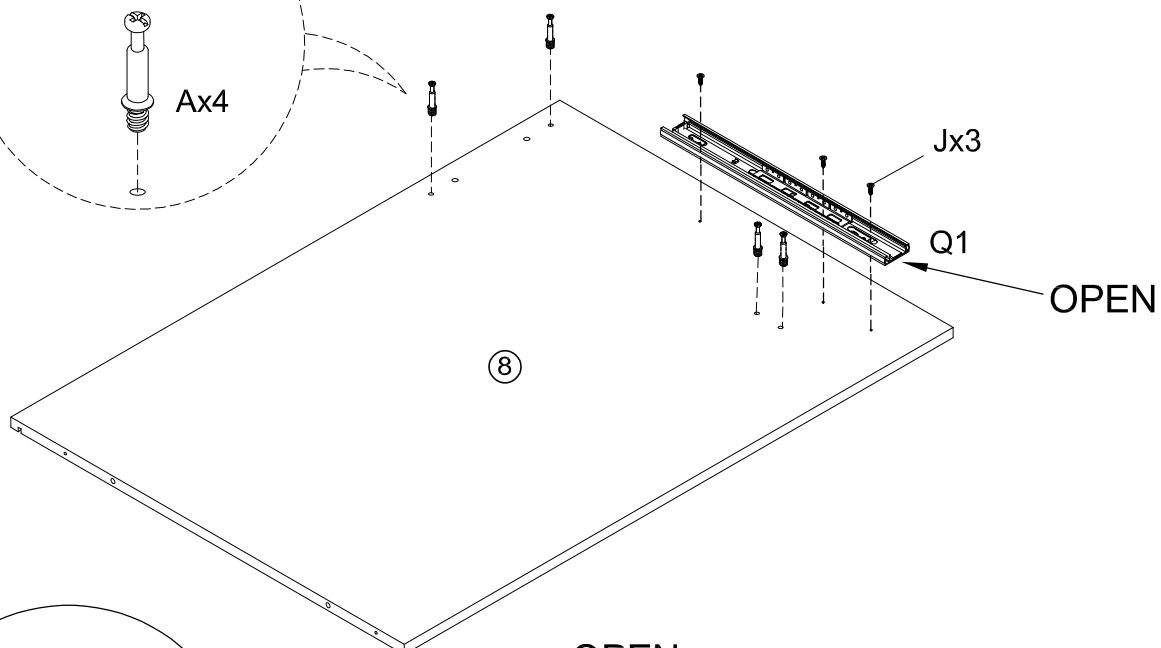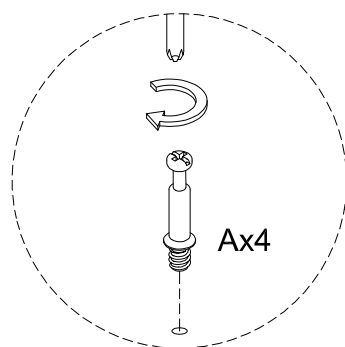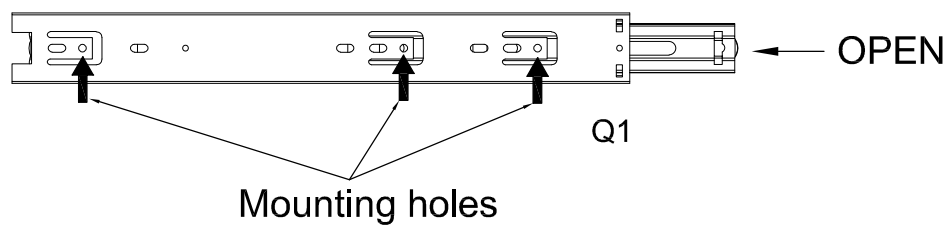


STEP 3

Dx10

Px8



The round corner should be upward.

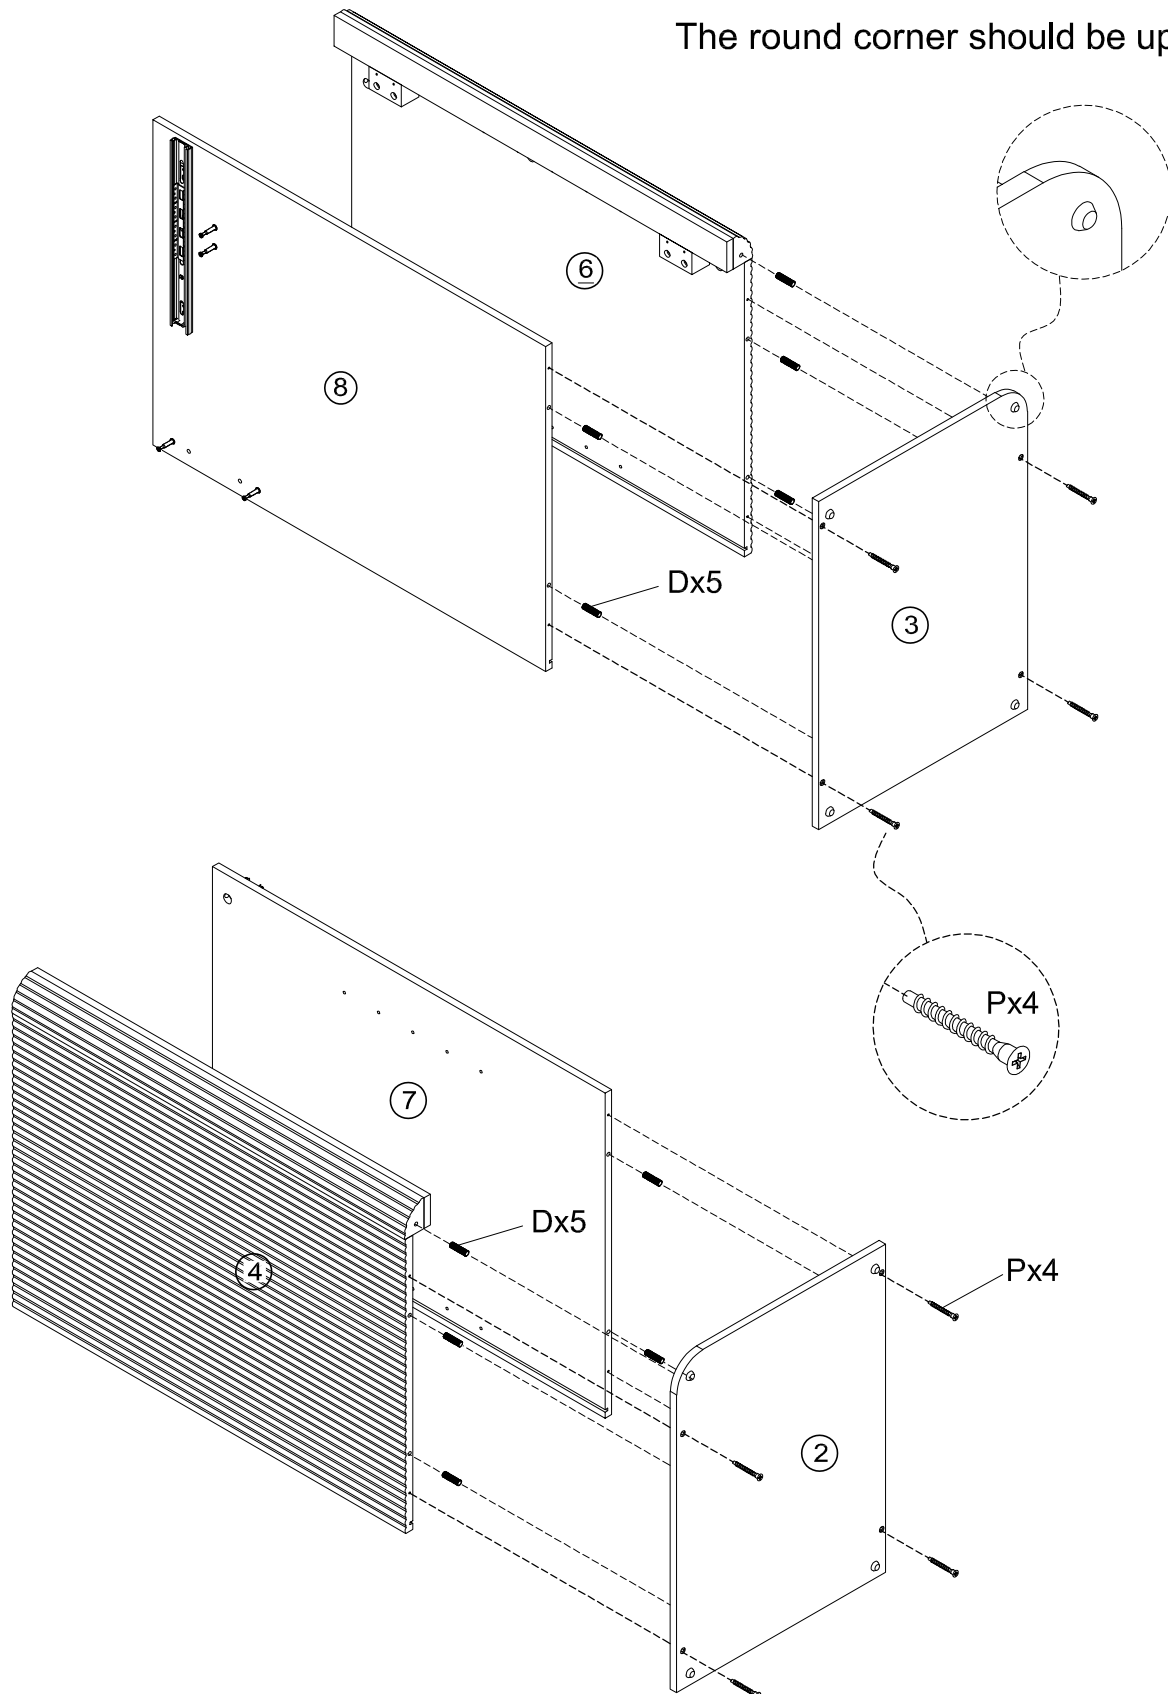

STEP 4


Bx8



Dx4

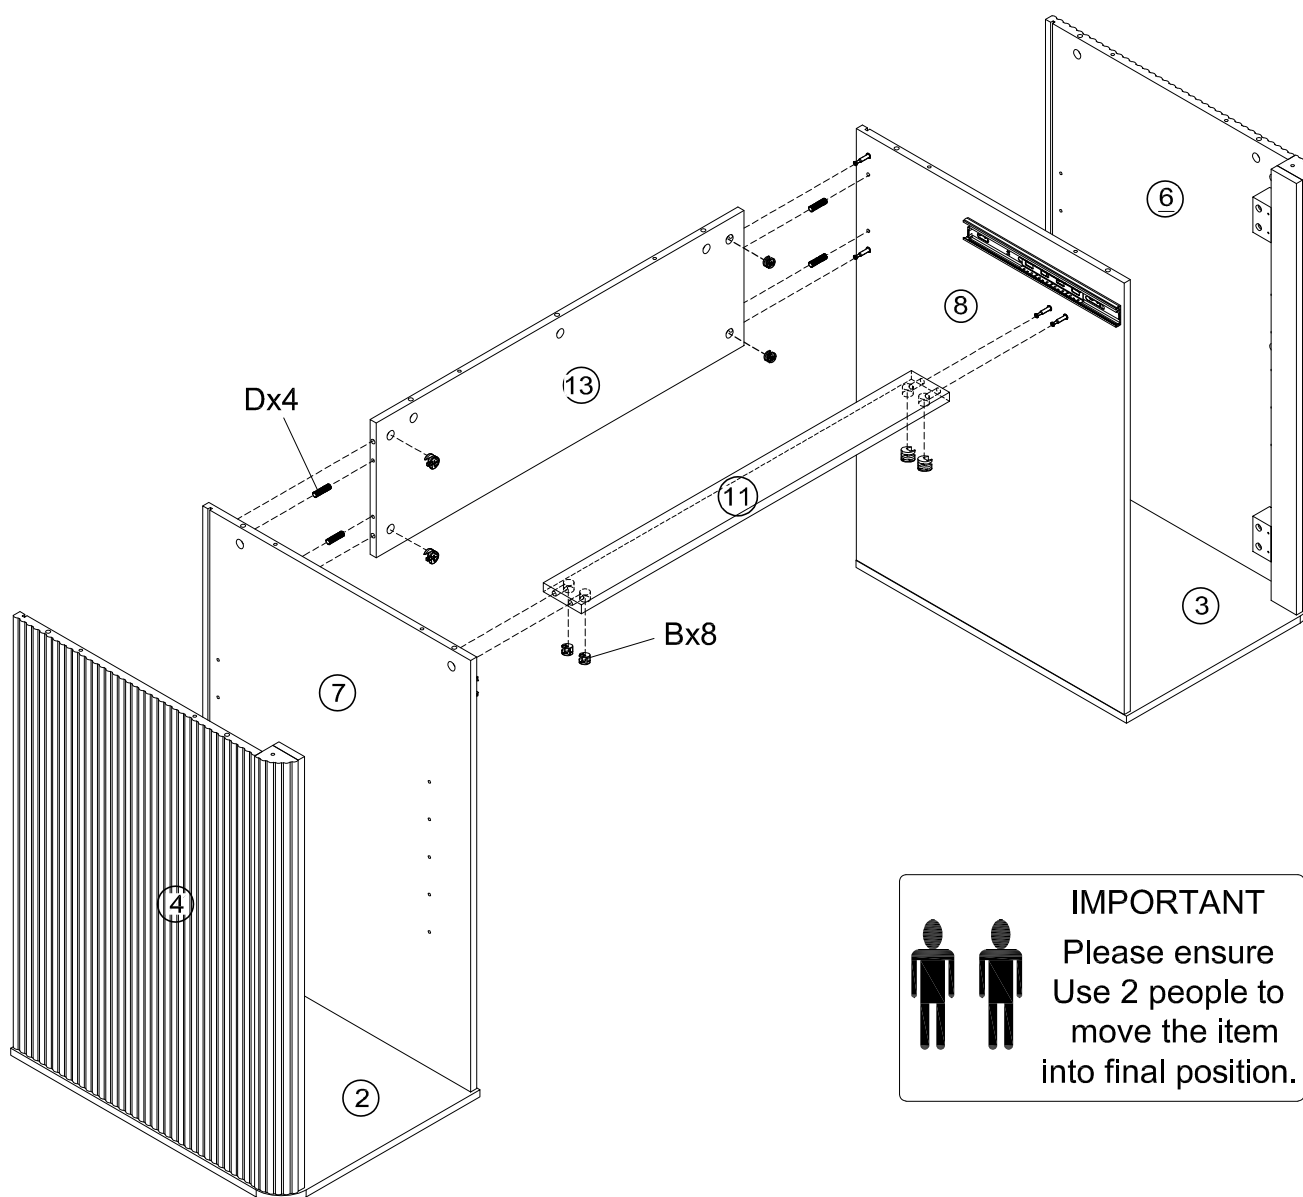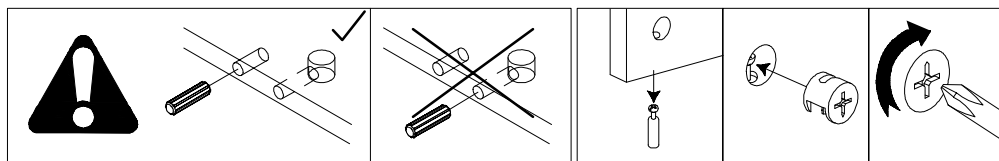

IMPORTANT

Please ensure
Use 2 people to
move the item
into final position.

STEP 5




Ax11





Ix4



Ex2






Tx2

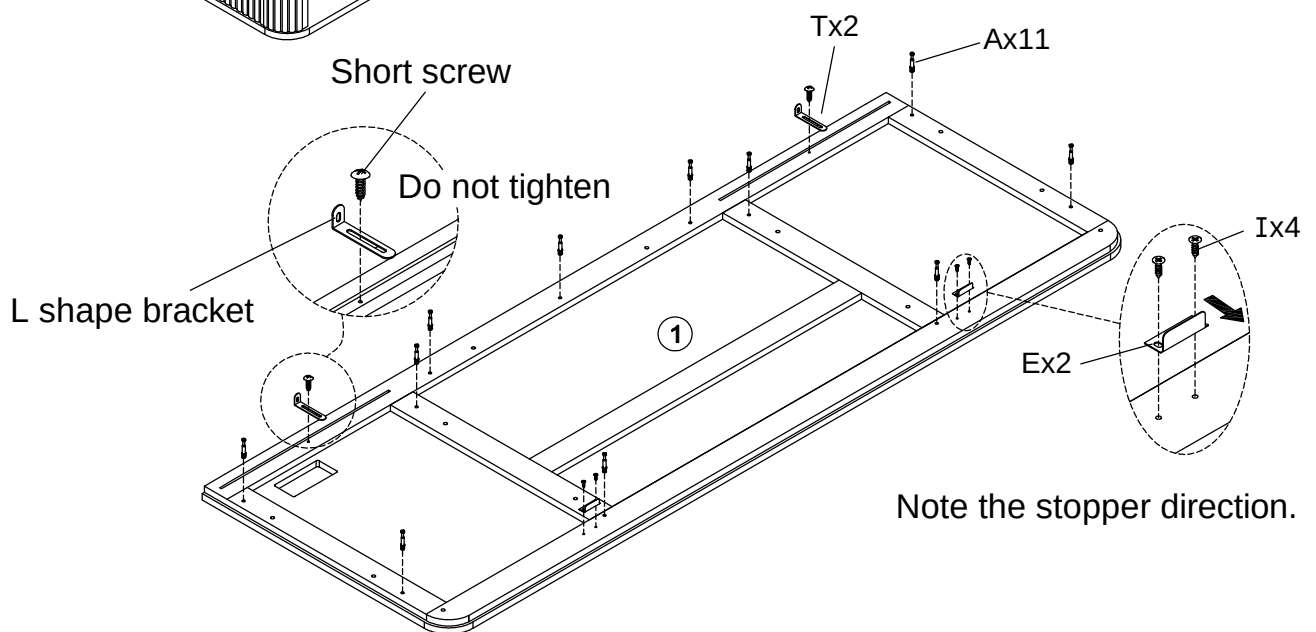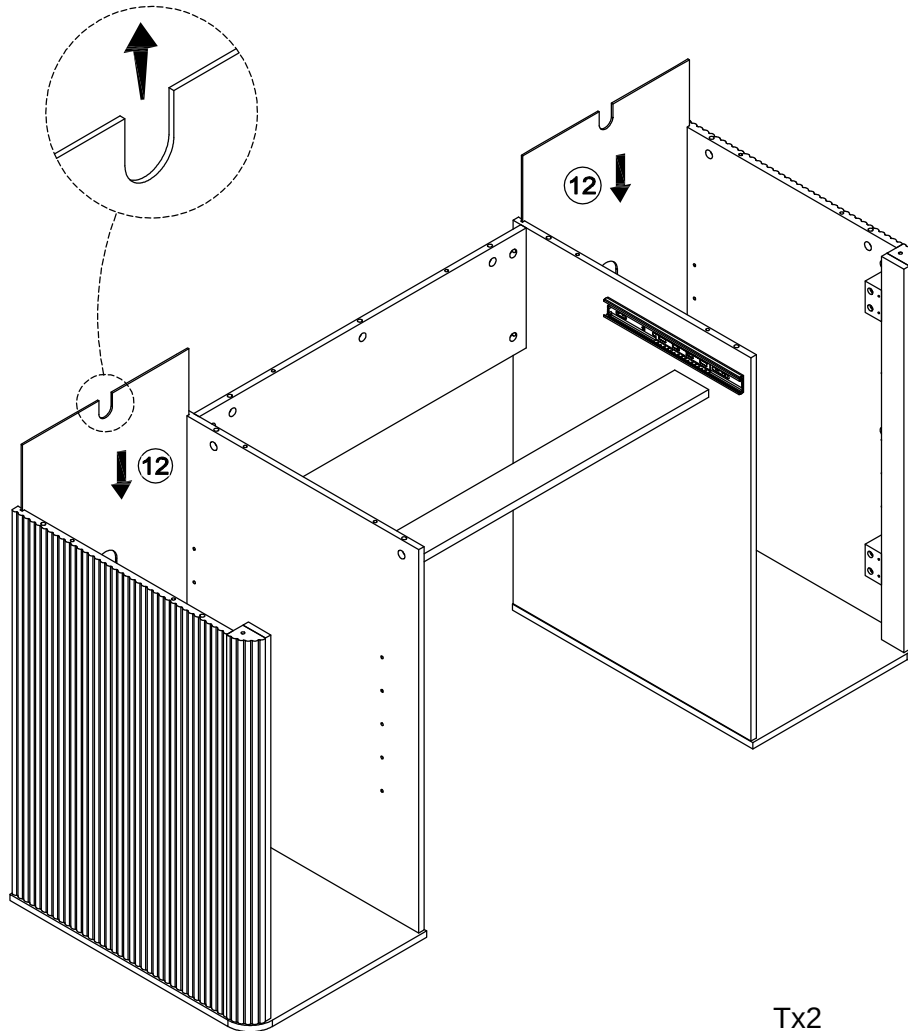

STEP 6

Bx11

Dx12

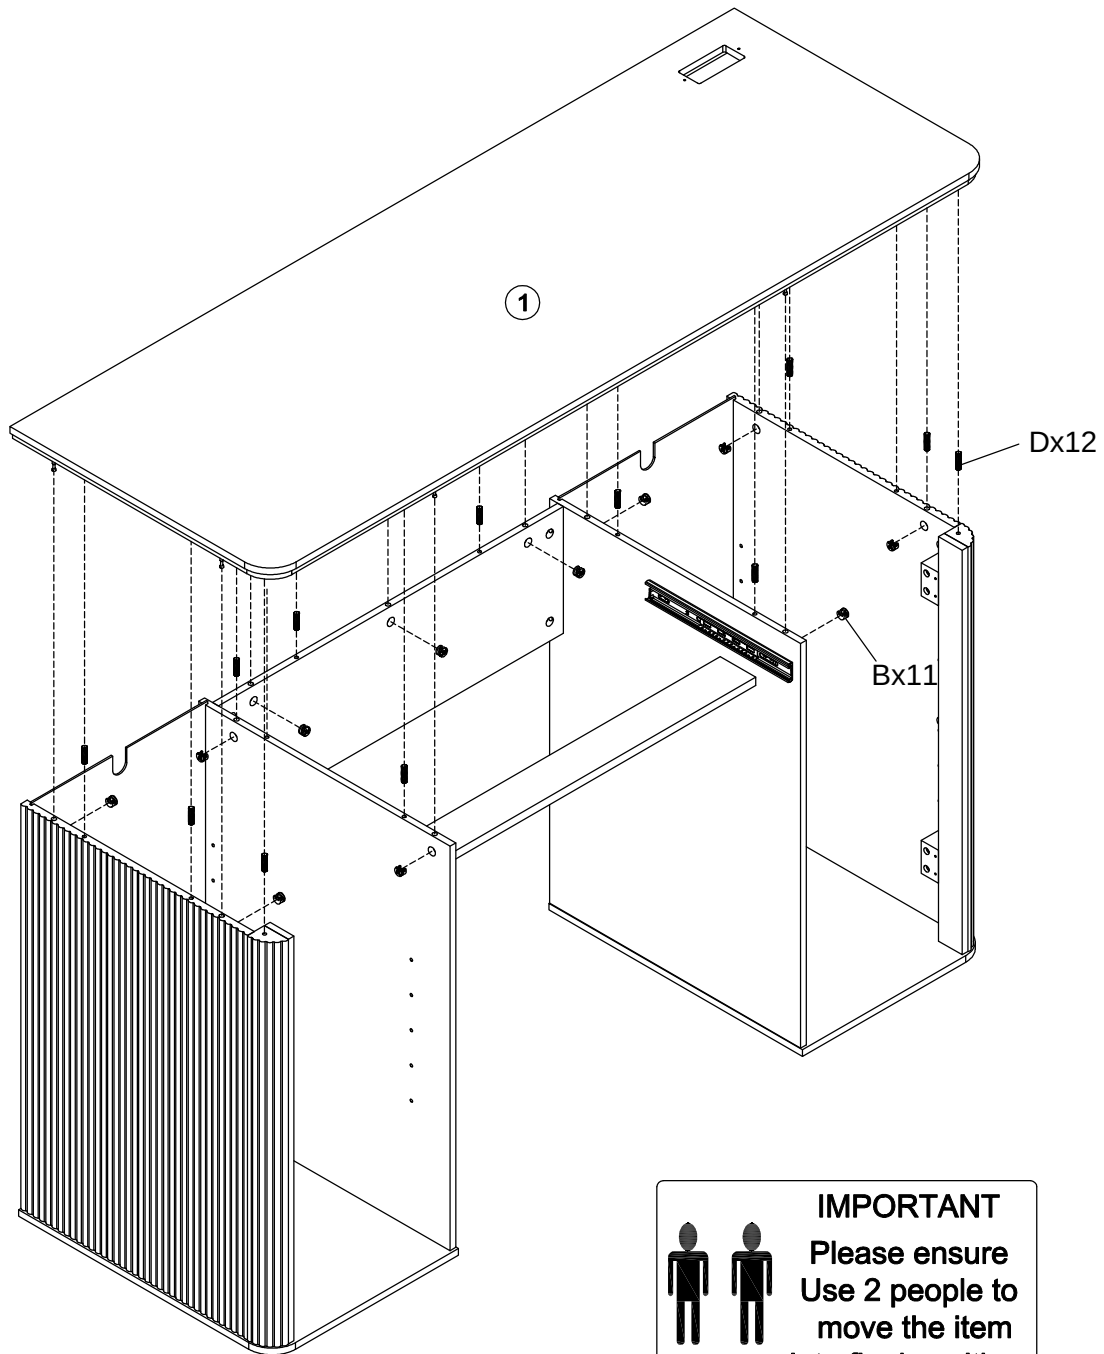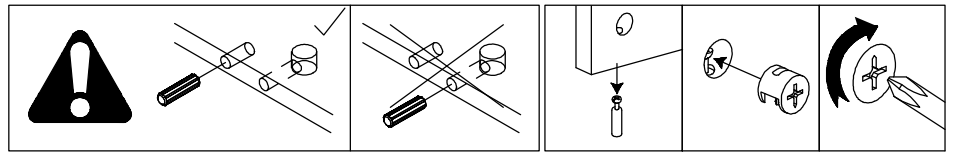

IMPORTANT
Please ensure
Use 2 people to
move the item
into final position.


STEP 7



Hx16




Ix16


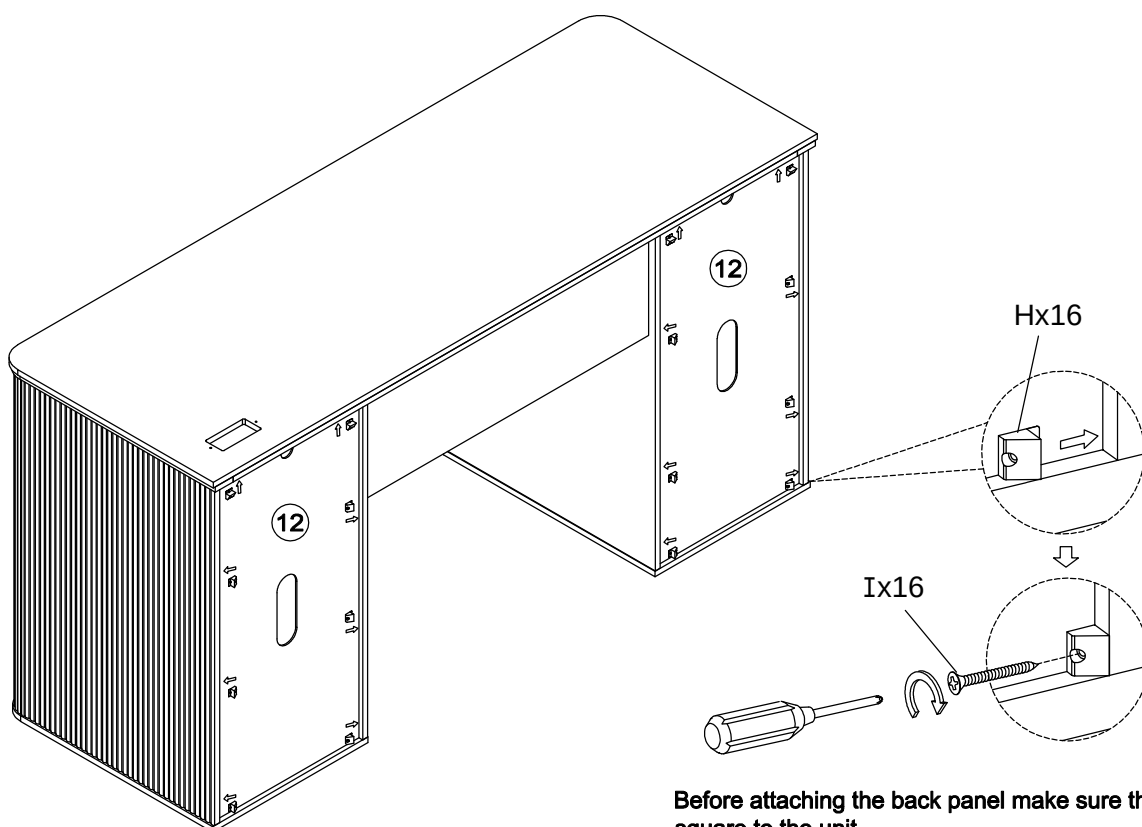


Before attaching the back panel make sure that it is square to the unit .

STEP 8

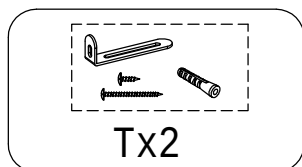

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over, we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

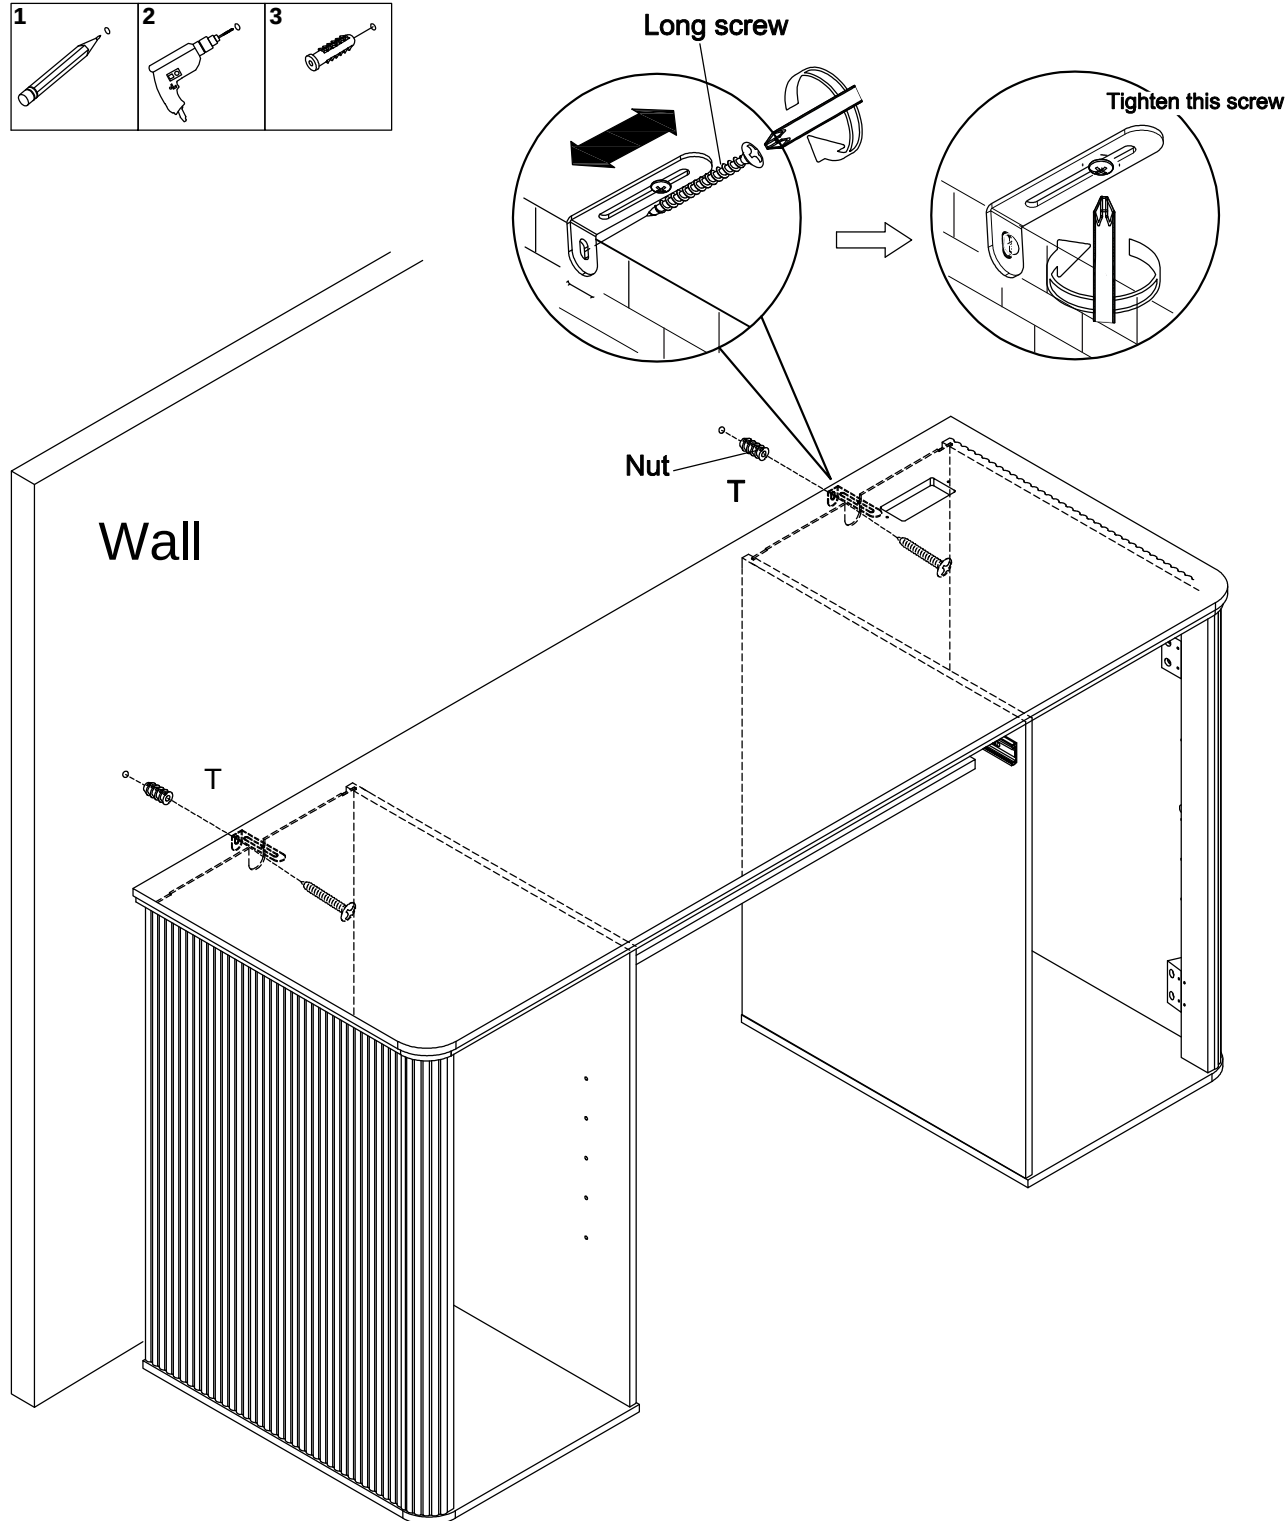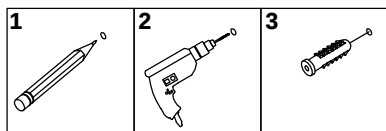


STEP 9




Gx8

Rx1

Jx2

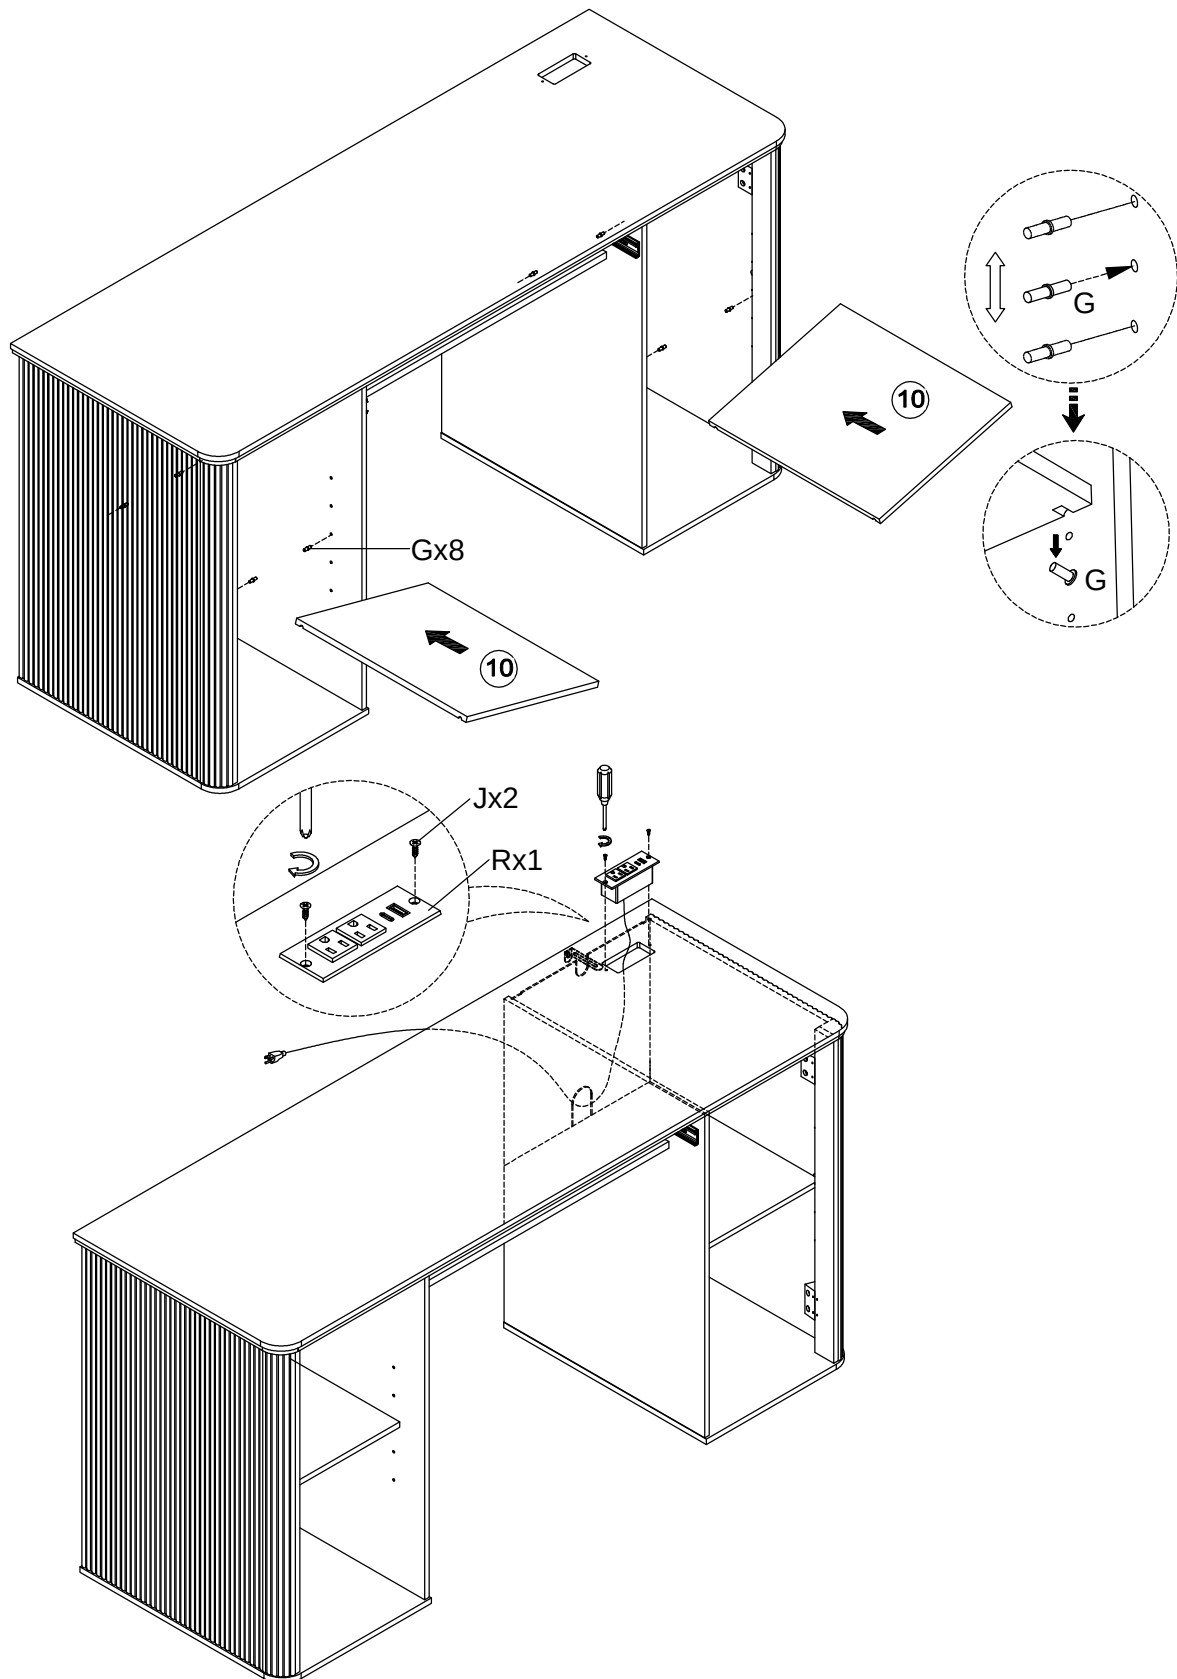


STEP 10

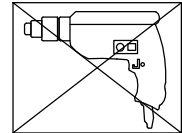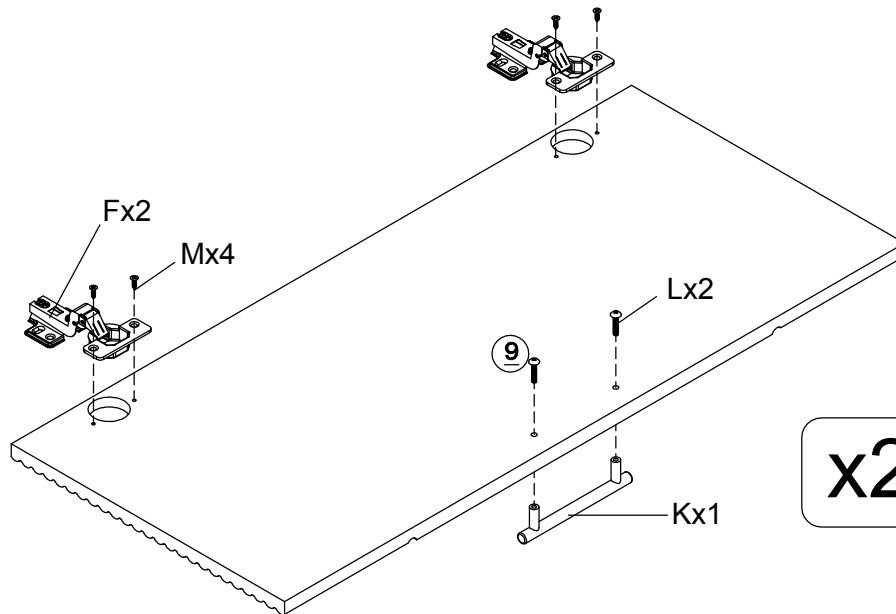
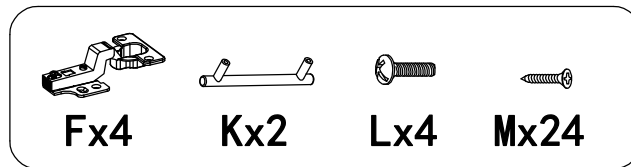


Power tools should not be used to assemble and adjust the doors.

x2

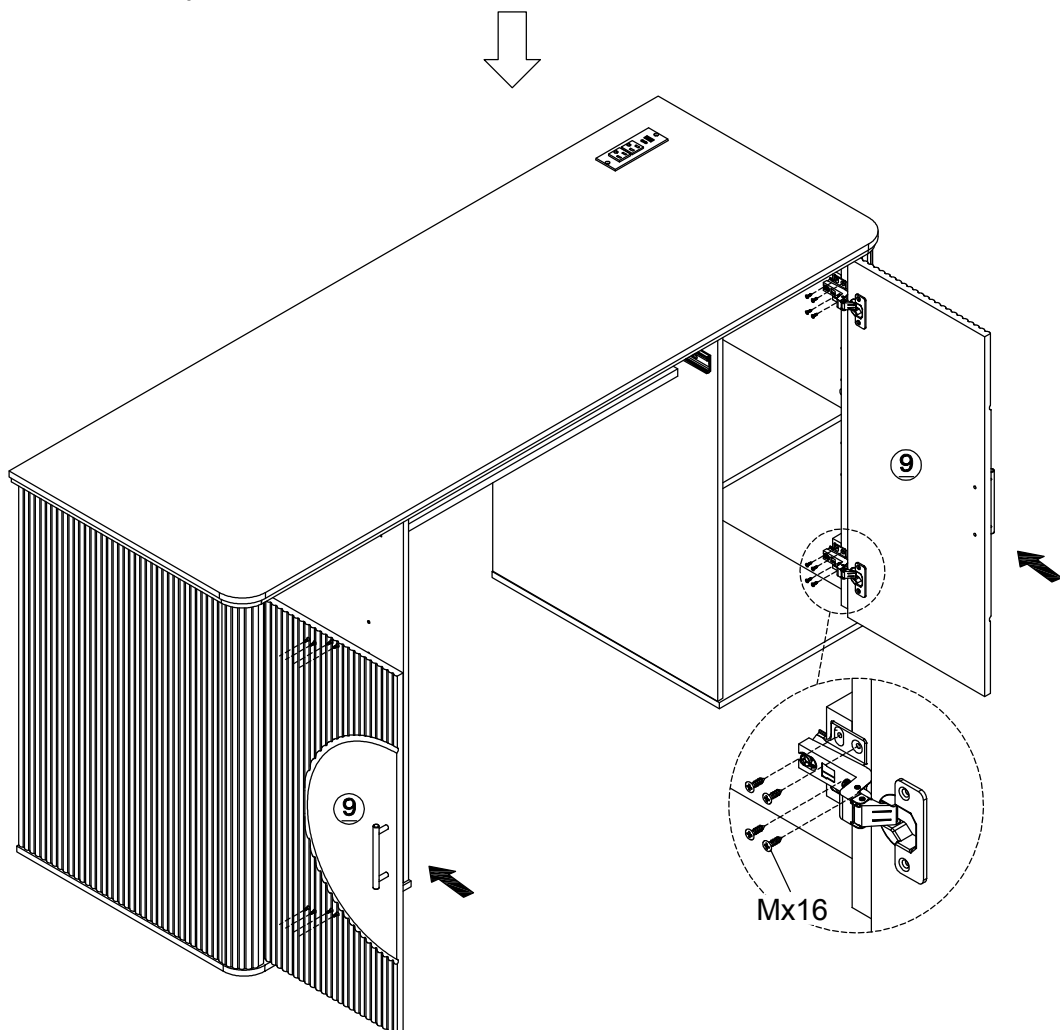


STEP 11

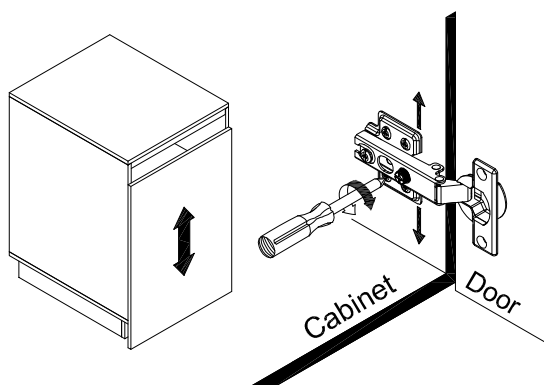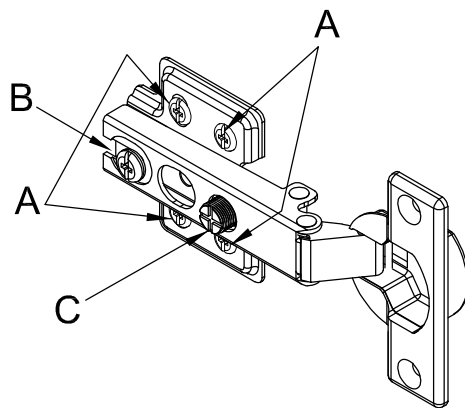


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

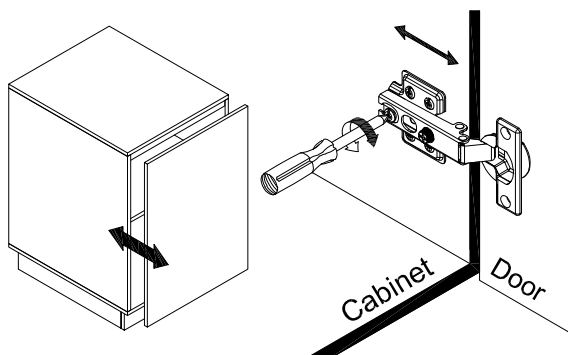

To adjust depth.


Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

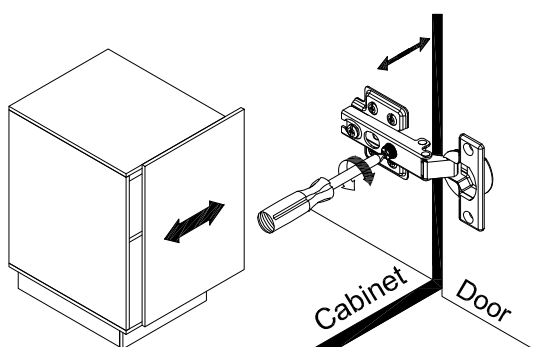


To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.


STEP 12



Nx6

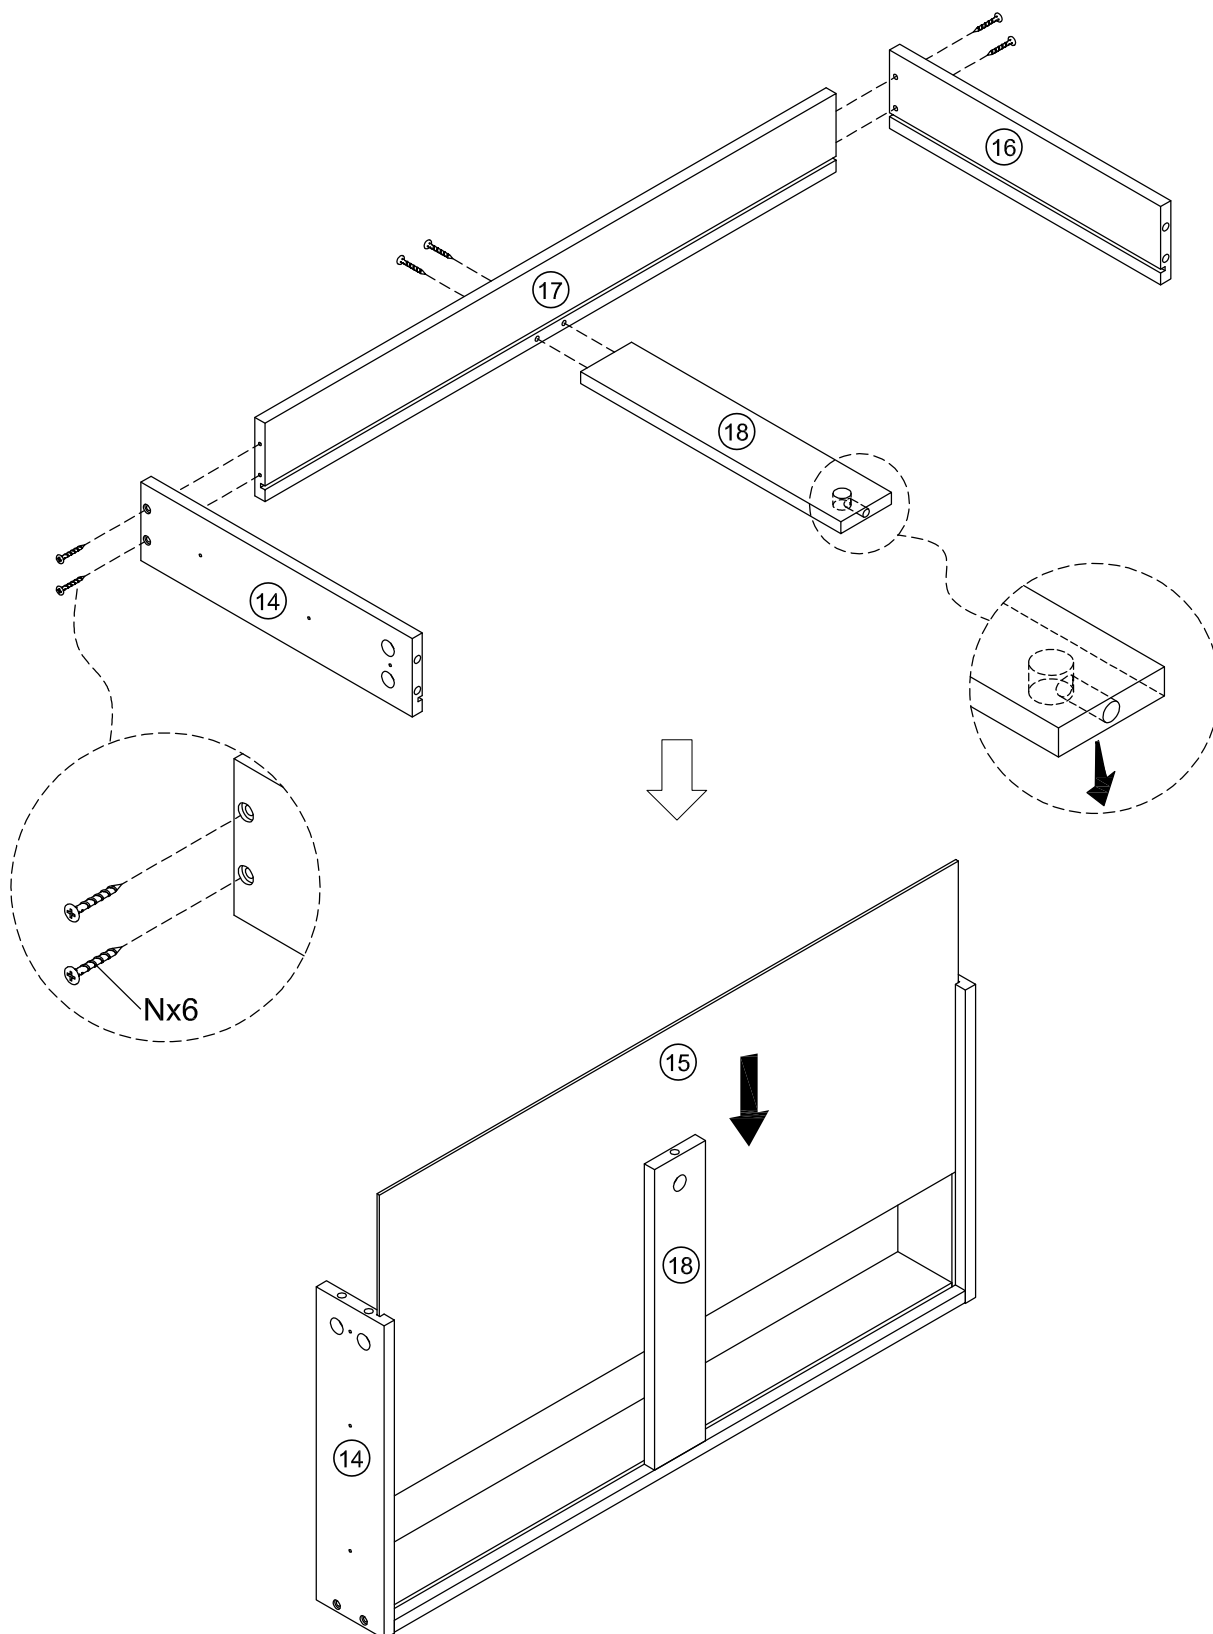

STEP 13





Ax5



Bx5



Cx24

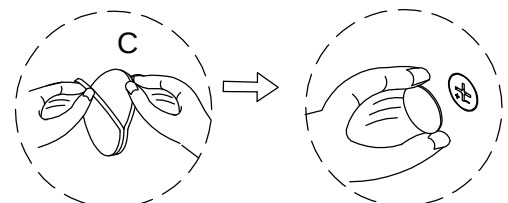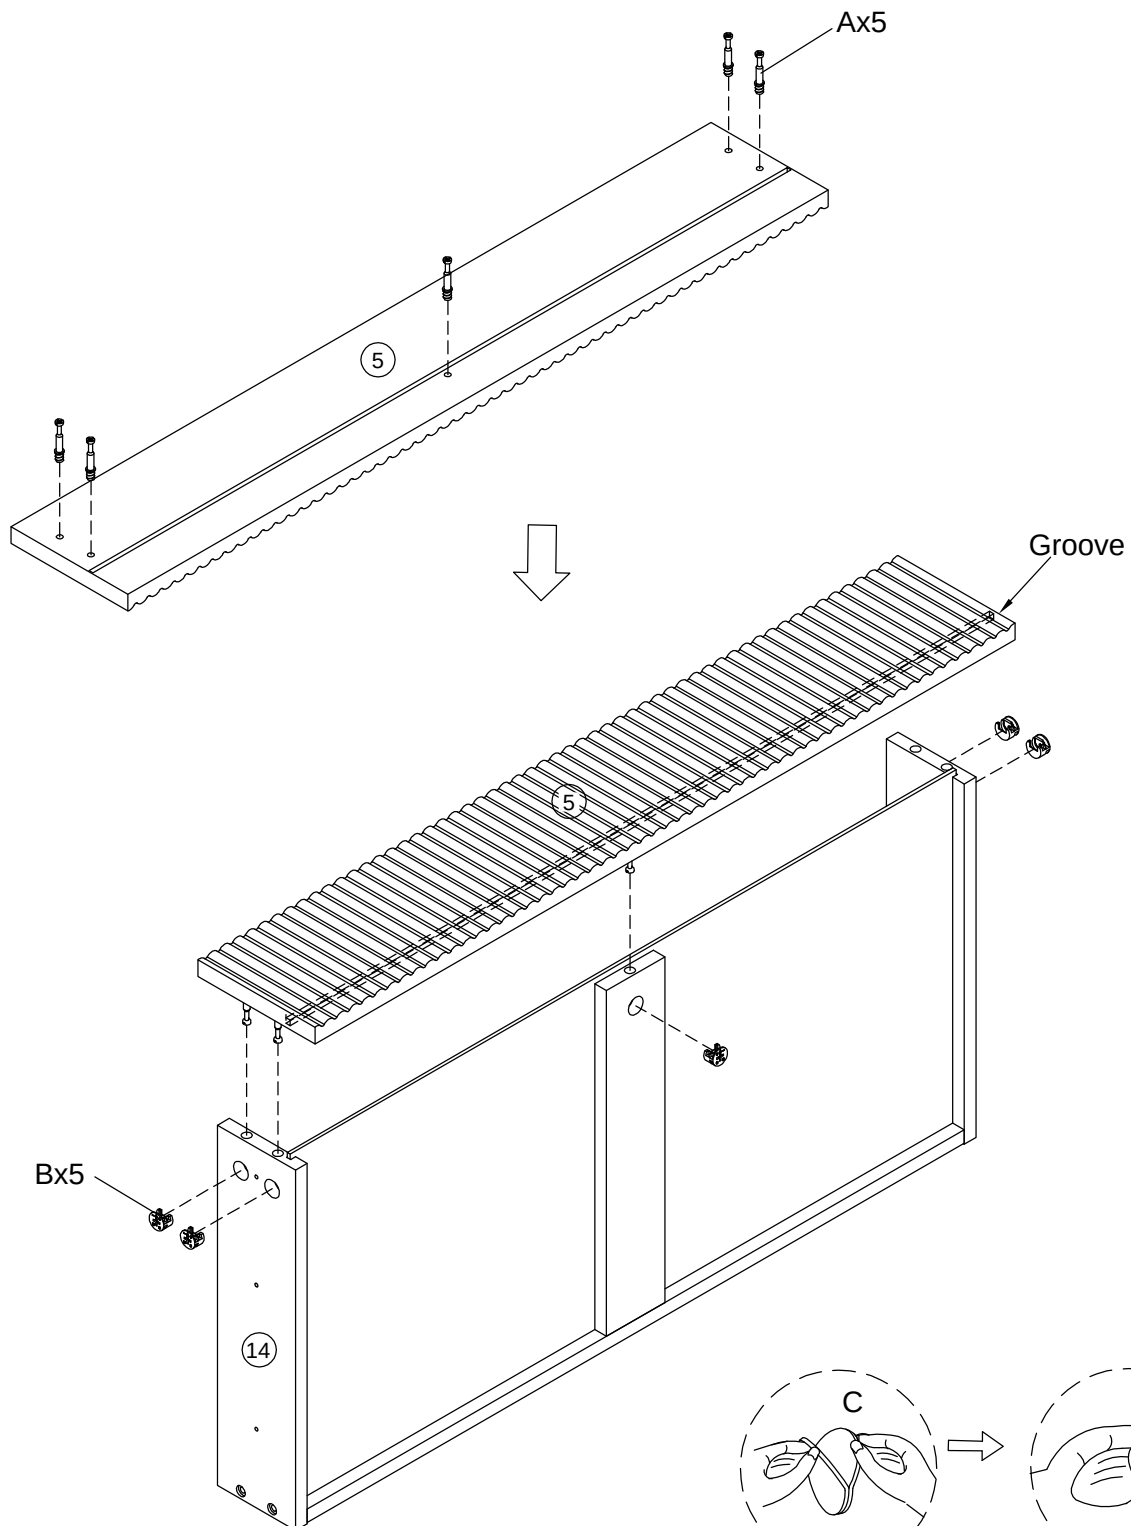


· Stick stickers (C) on cam locks (B) .


STEP 14





Jx6



Q2x2

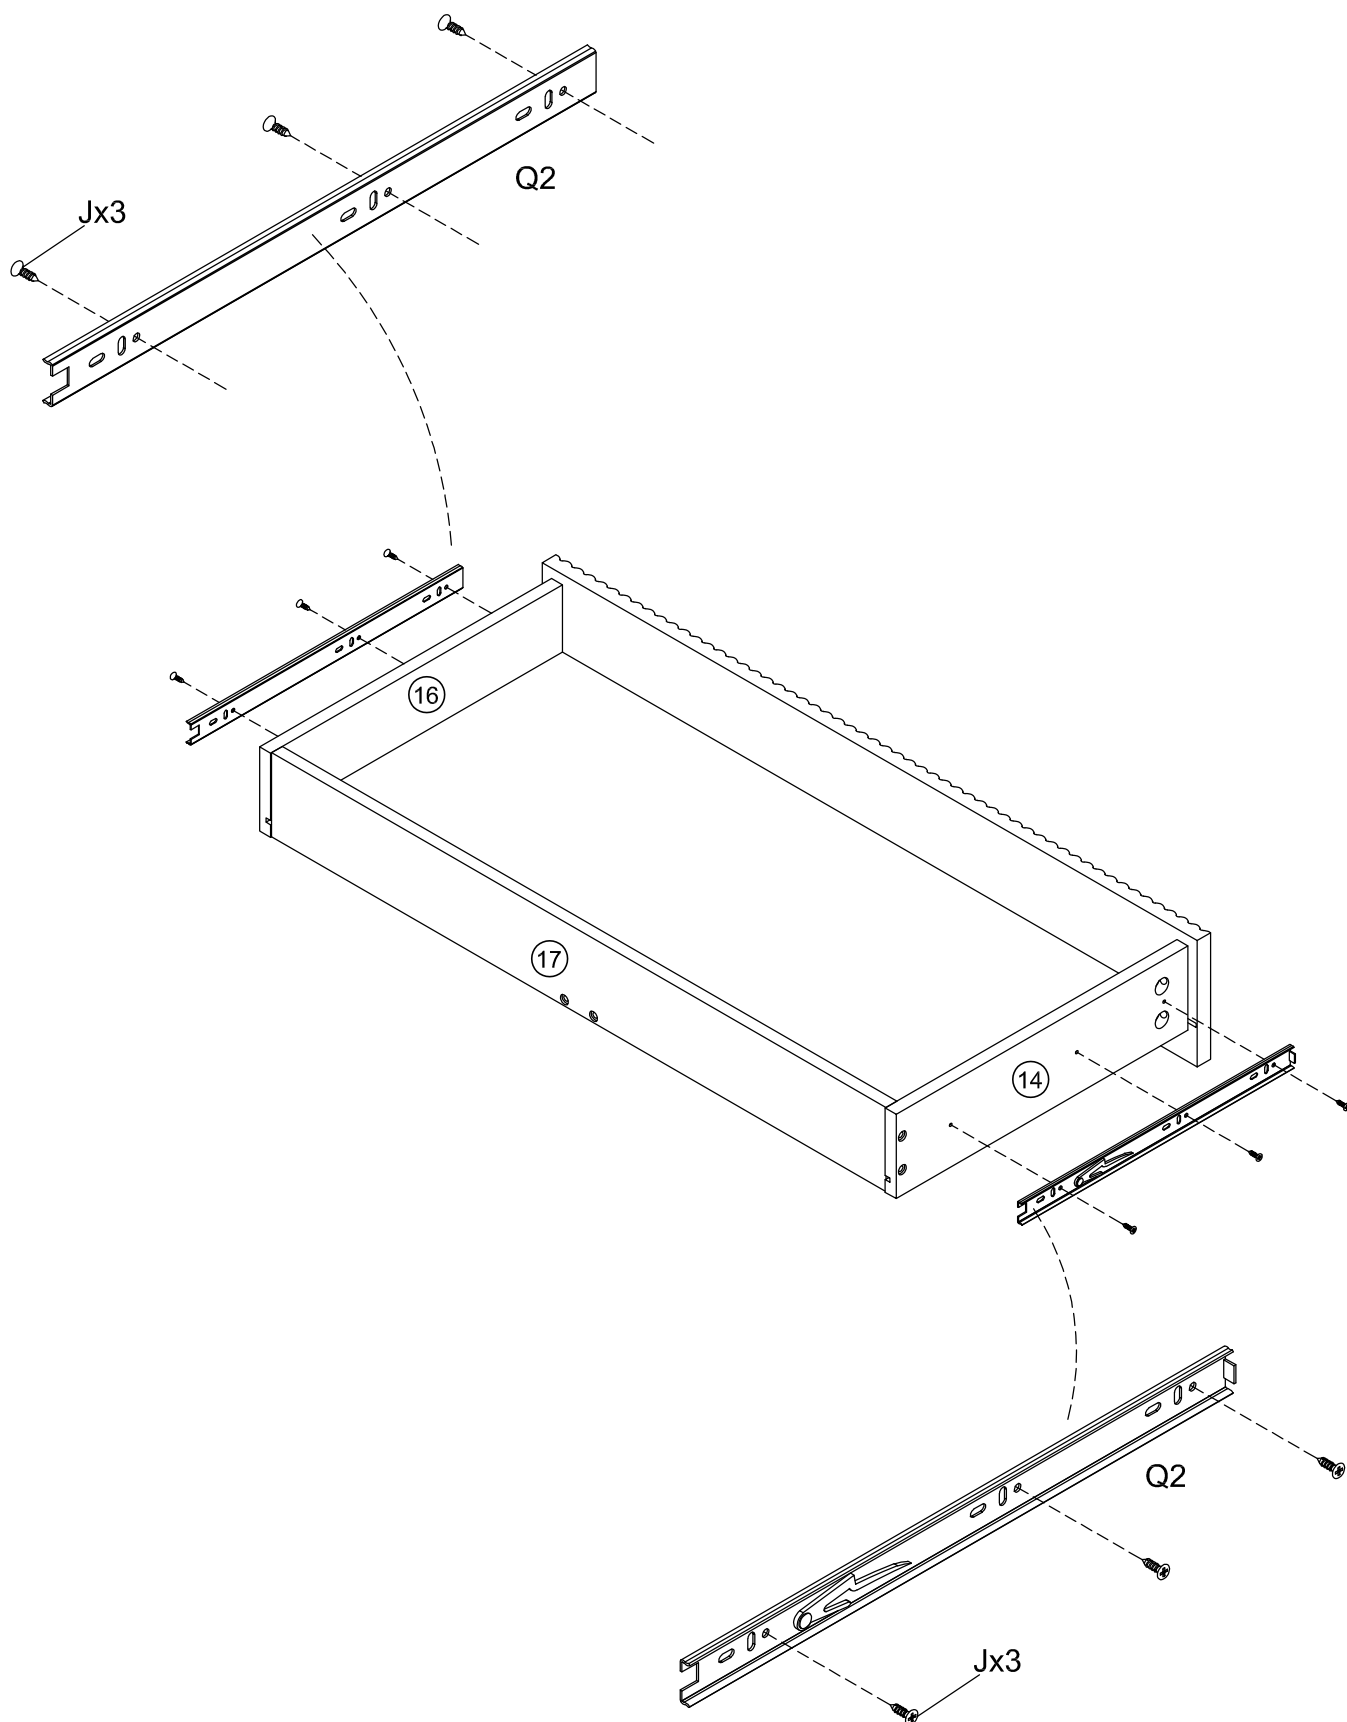

STEP 15

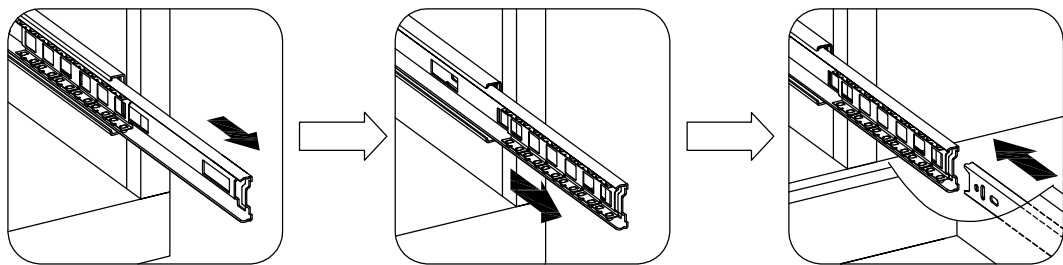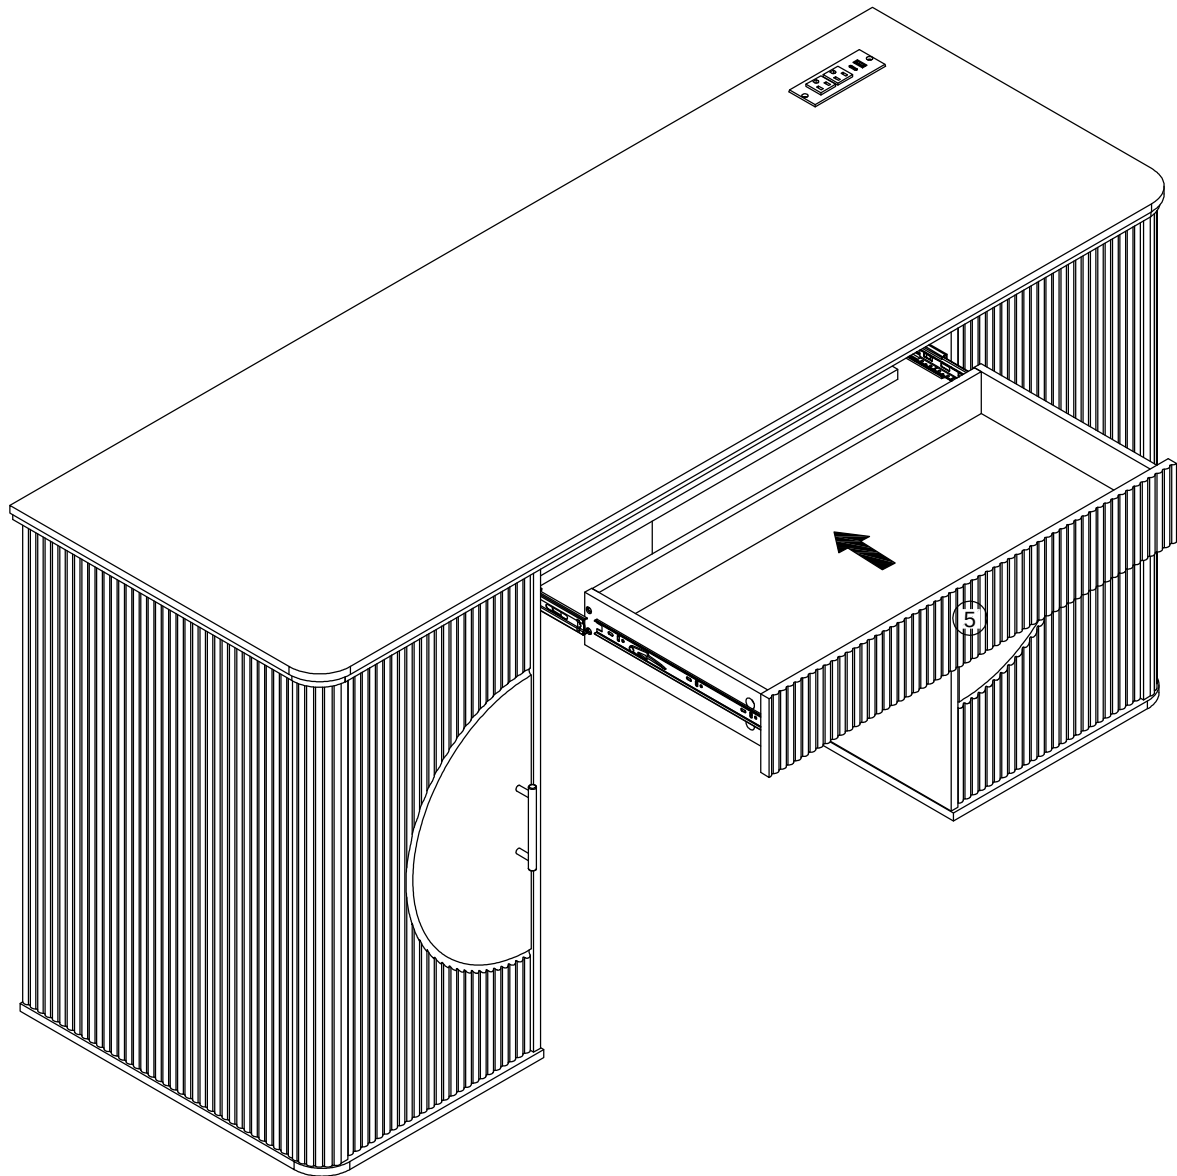

Final Assembly