


Metal Roof  
Aluminum Gazebo

8.5X8.5FT

SKU:A-TPSB24-G032-1  
A-TPSB24-G032-2

# ASSEMBLY INSTRUCTIONS

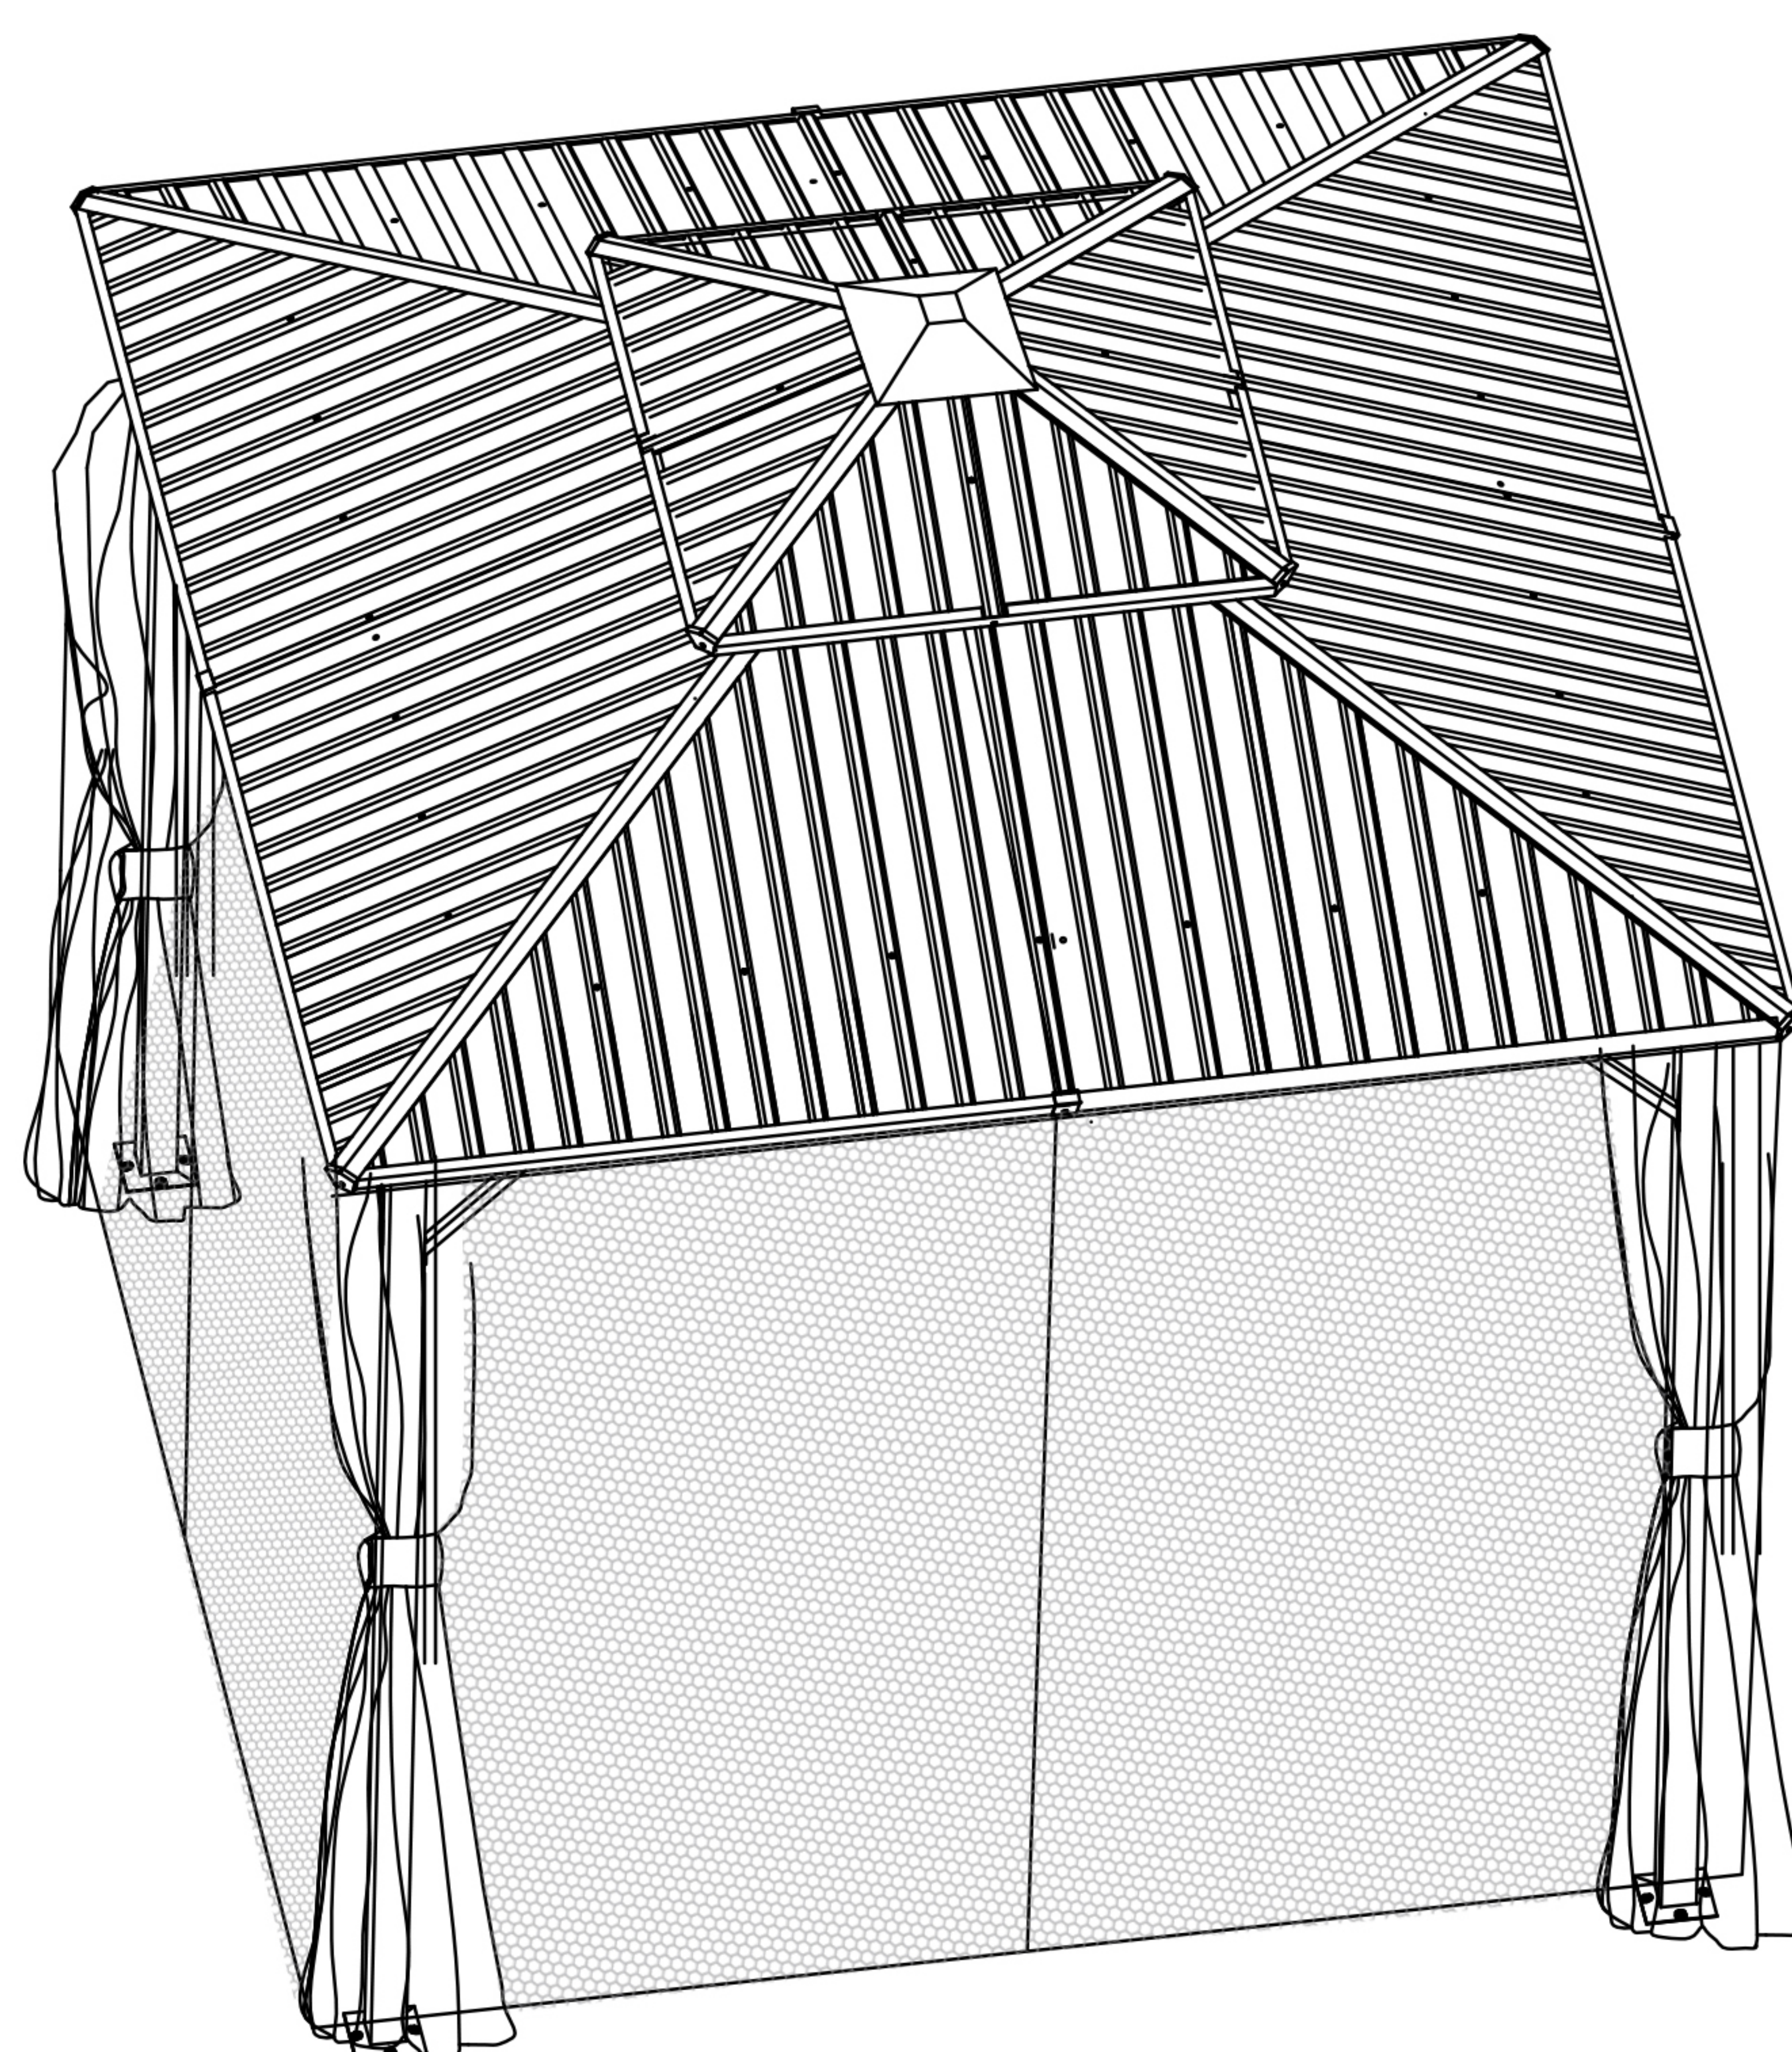

Please check the number of parts in the following accessory catalogue when unpacking. We have sent you more small parts for spare. If there is any missing or any questions about the installation. Please feel free to contact us. We will reply within 24 hours.




E-mail: [cs.helper01@gmail.com](mailto:cs.helper01@gmail.com)



## TOOLS RECOMMENDED

\*NOTE: The recommended tools are not included in boxes and need to be prepared by yourself.

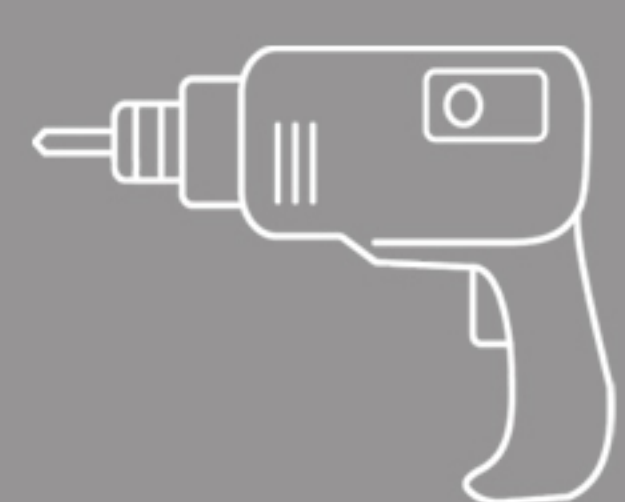

DRILL



RUBBER Mallet




STEPLADDER  
(6.5Ft Or More)



SAFETY HAT




GLOVES

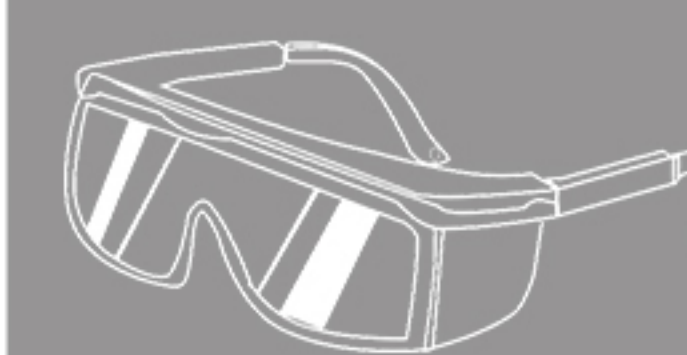

SAFETY GOGGLES



## ATTENTIONS

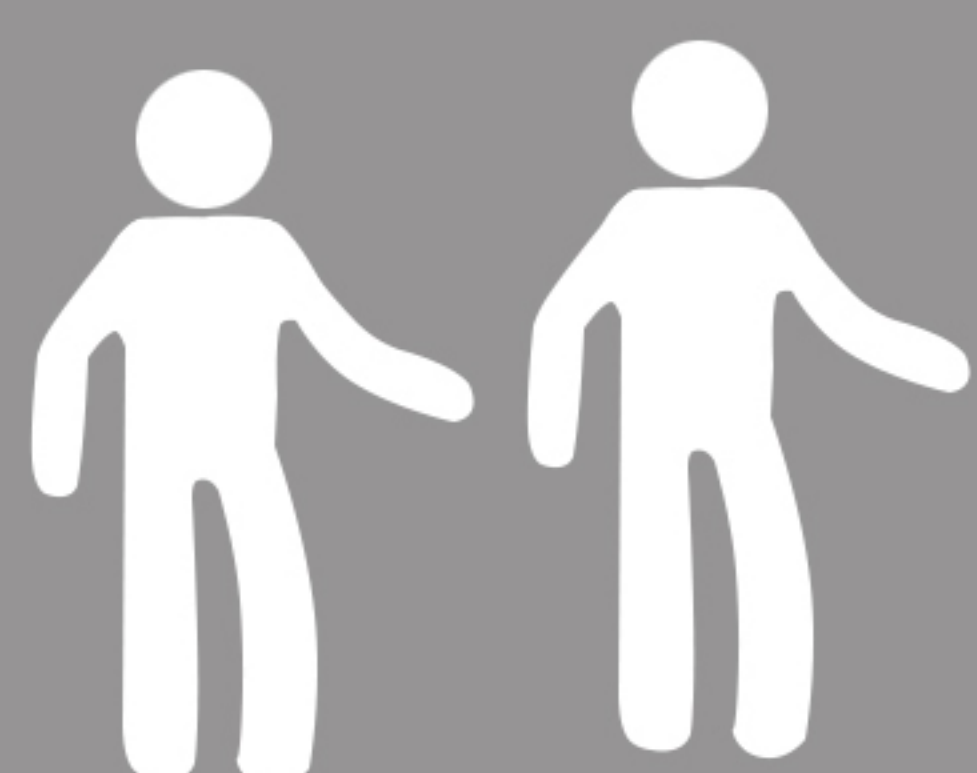

Two or more people  
are required for  
assembly



To better align the screws  
for practical situations, do  
not fully tighten screws  
initially



Please reinforced the Gazebo  
and do not use in heavy winds  
or inclement weather



Make sure all screws are  
tightened before use and  
check all screws, buckles and  
straps every 90 days



Since it is easy to lose many  
small accessories during the  
installation, please collect all the  
the screw accessories before the  
assembly is completed








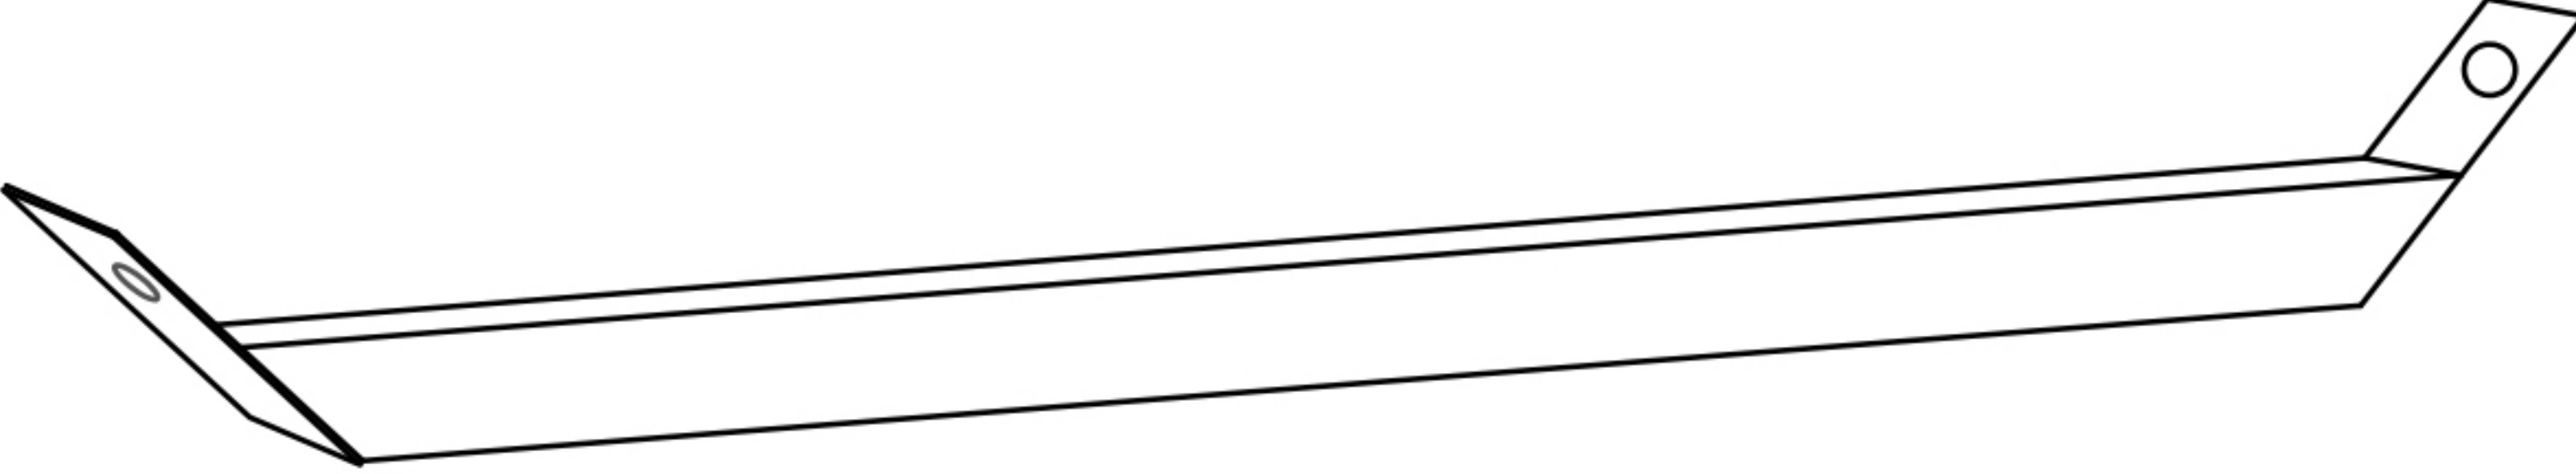
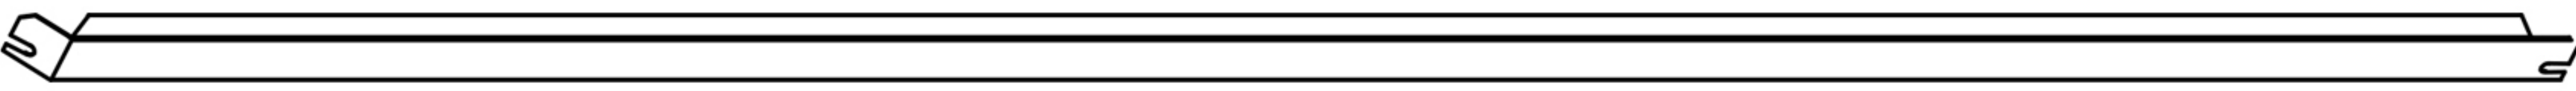


Please clear the snow off the  
roof in time for the heavy  
snowfall and do not use it







# ACCESSORY CATALOGUE

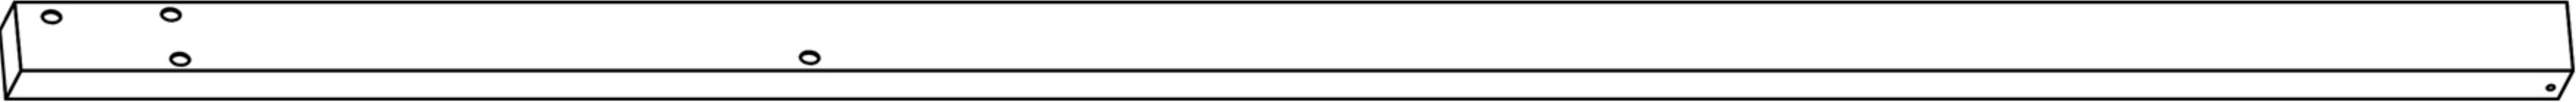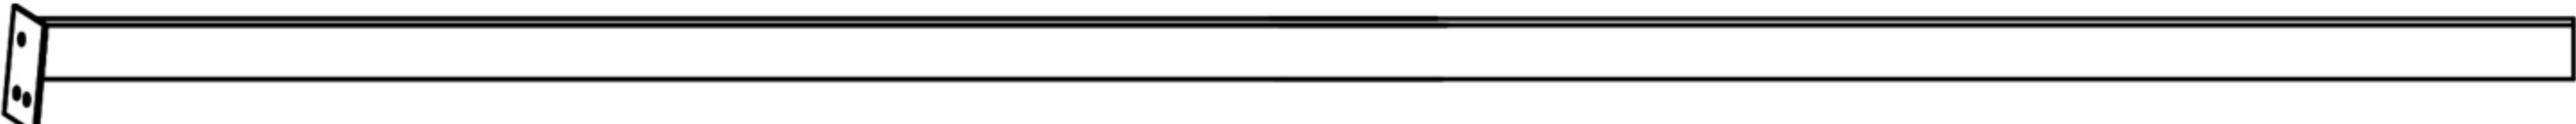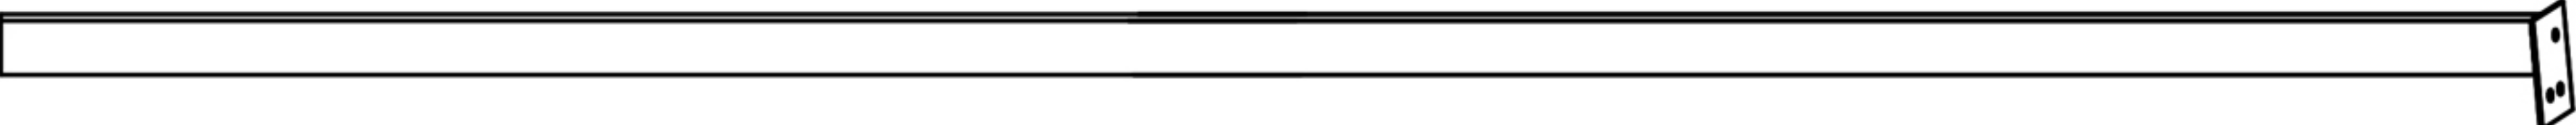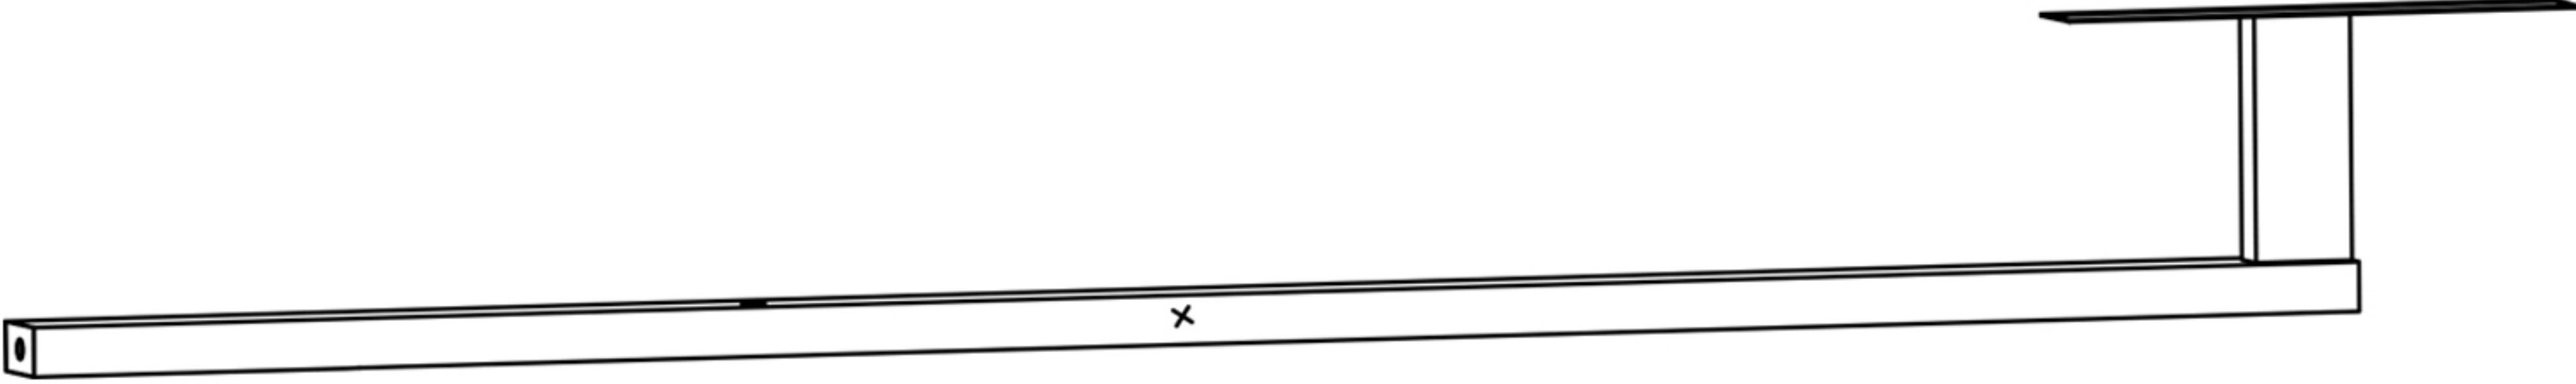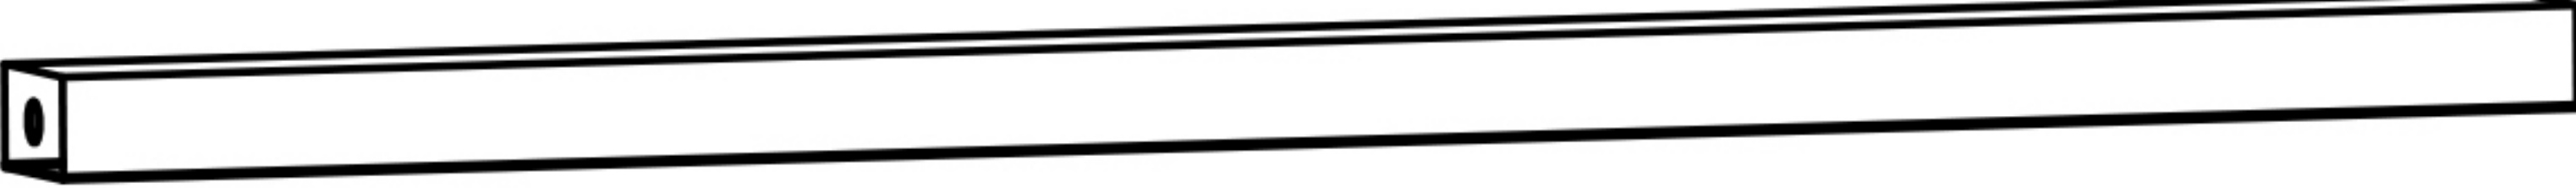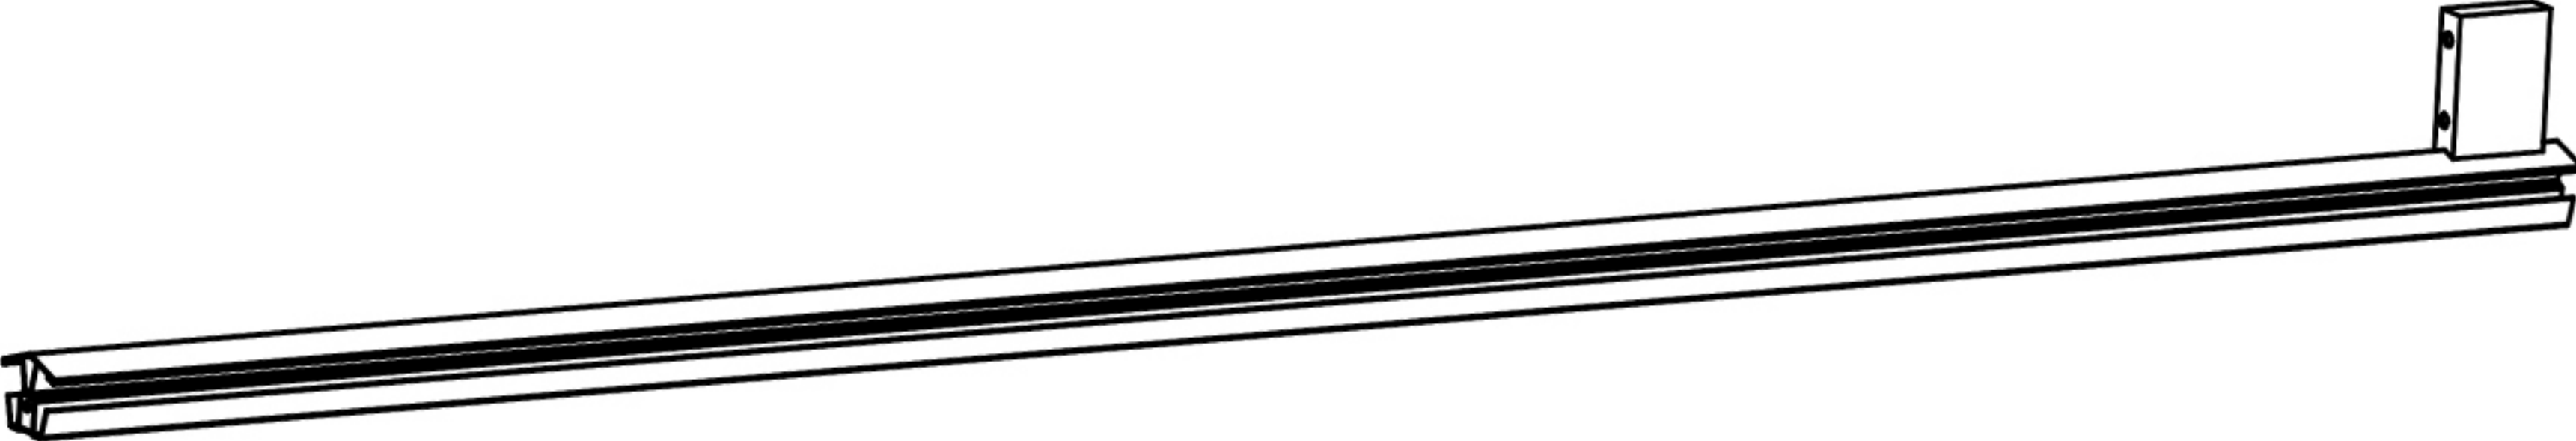











**BOX 1** SKU:A-TPSB24-G032-1

Item no.	Reference Image	Qty.
A		4
C		4
C1		4
D		4
D1		4
E		4
E1		4
F		8
G		4

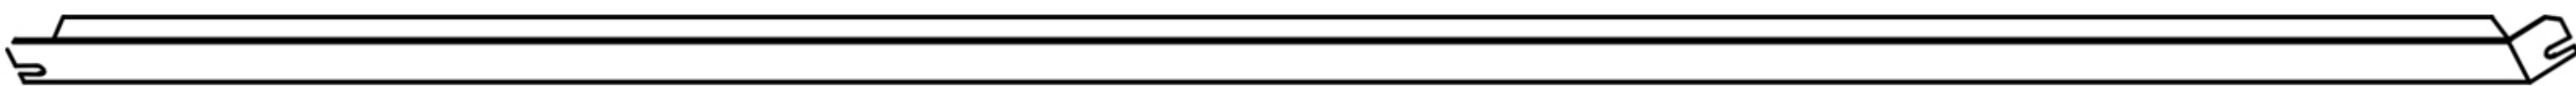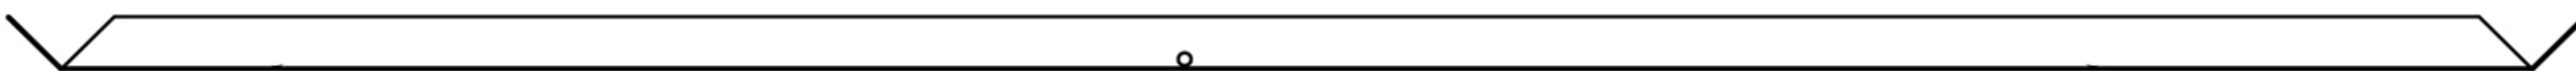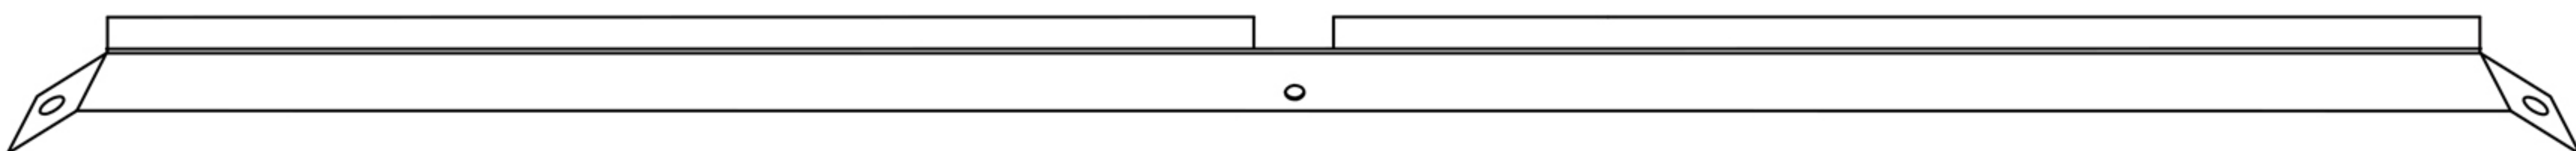










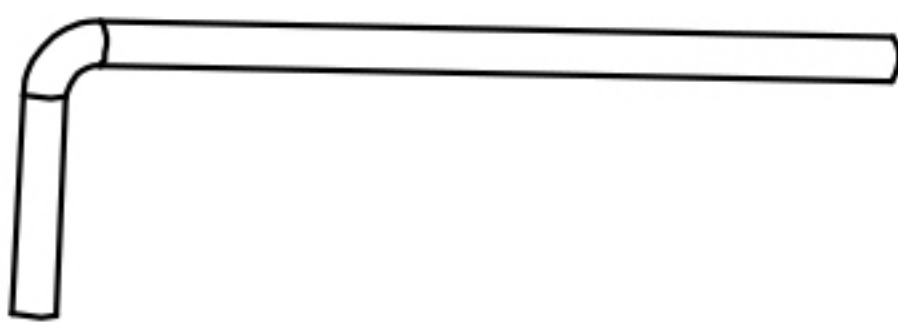

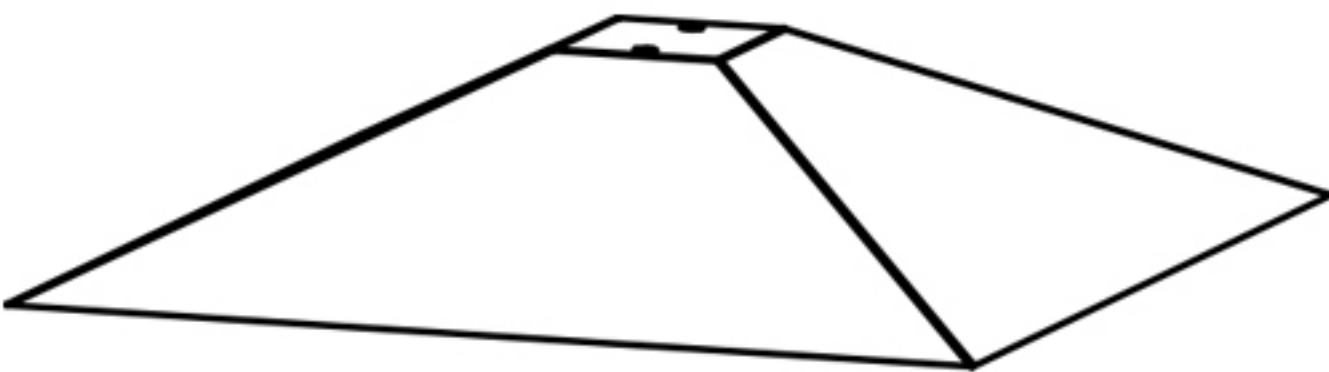
# ACCESSORY CATALOGUE

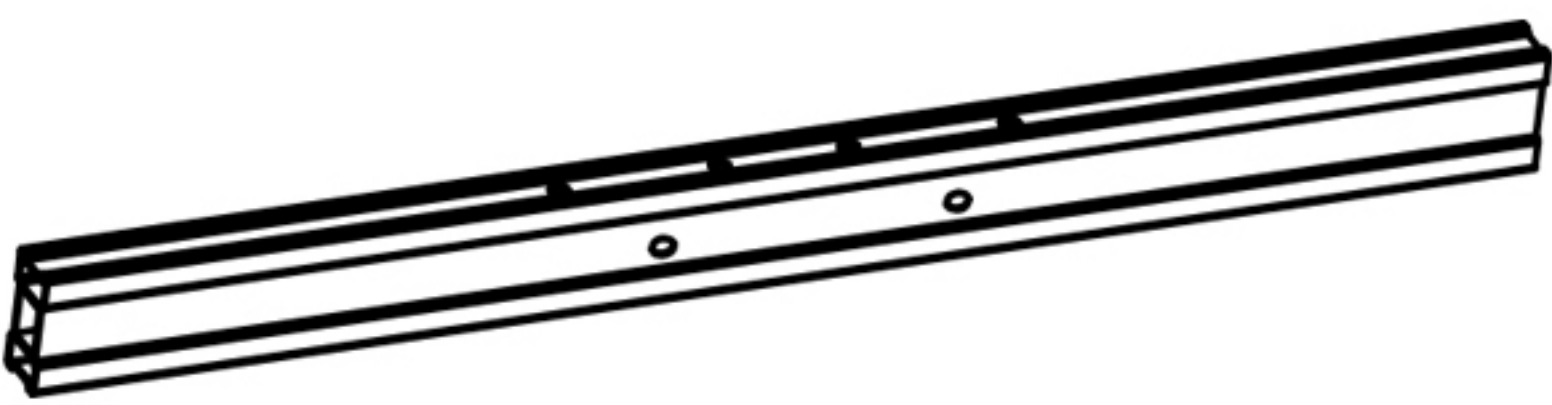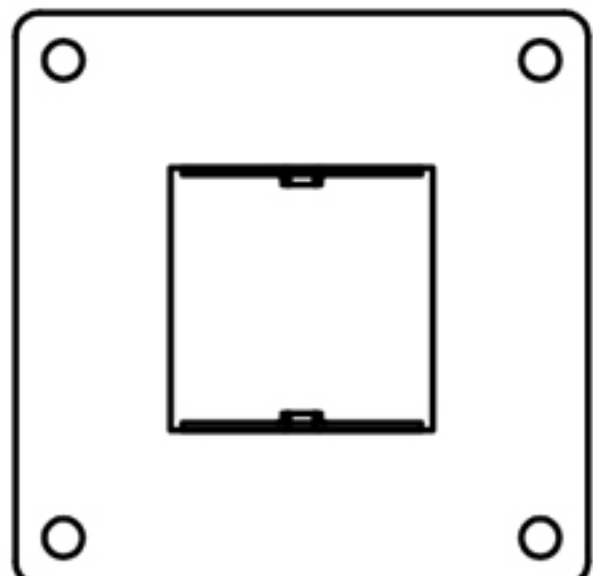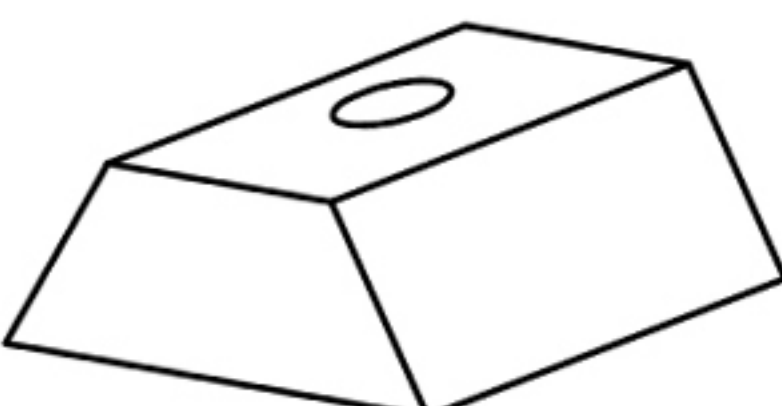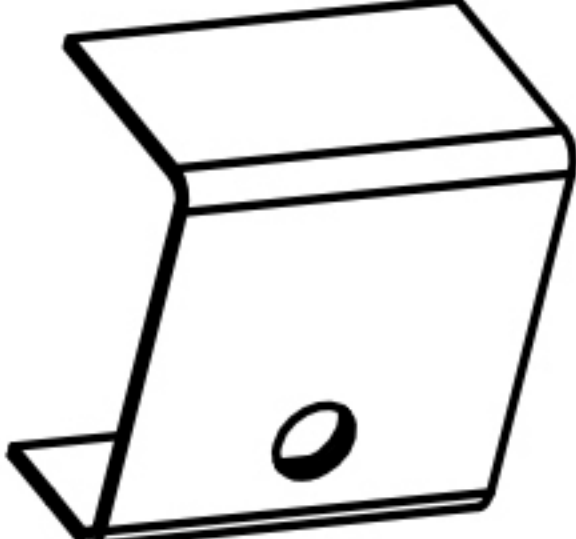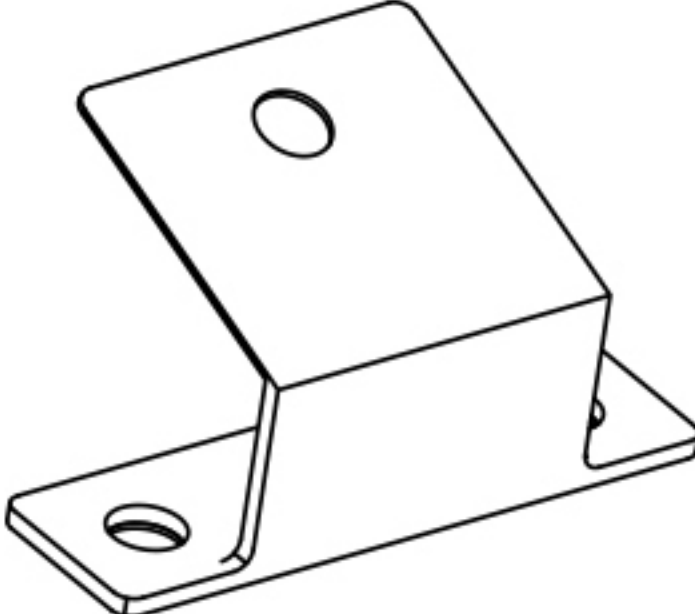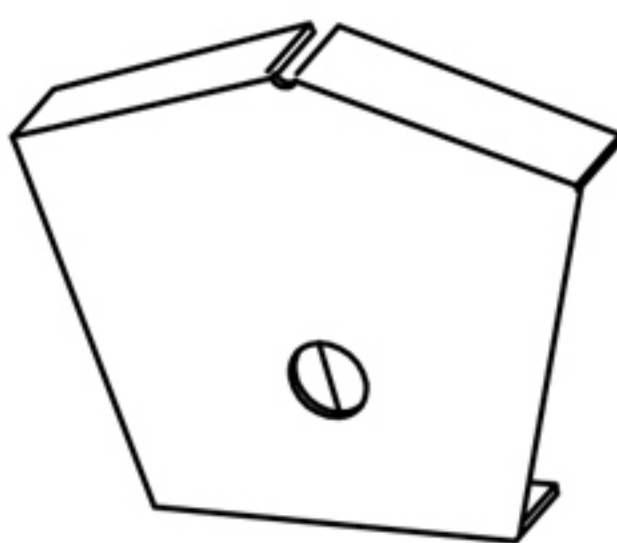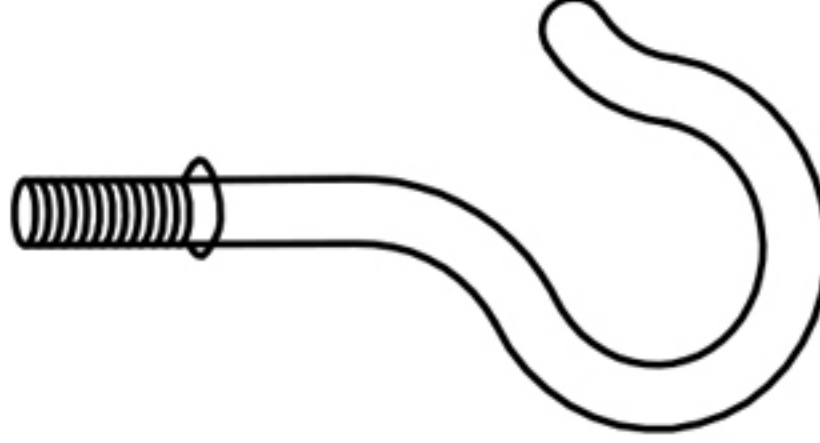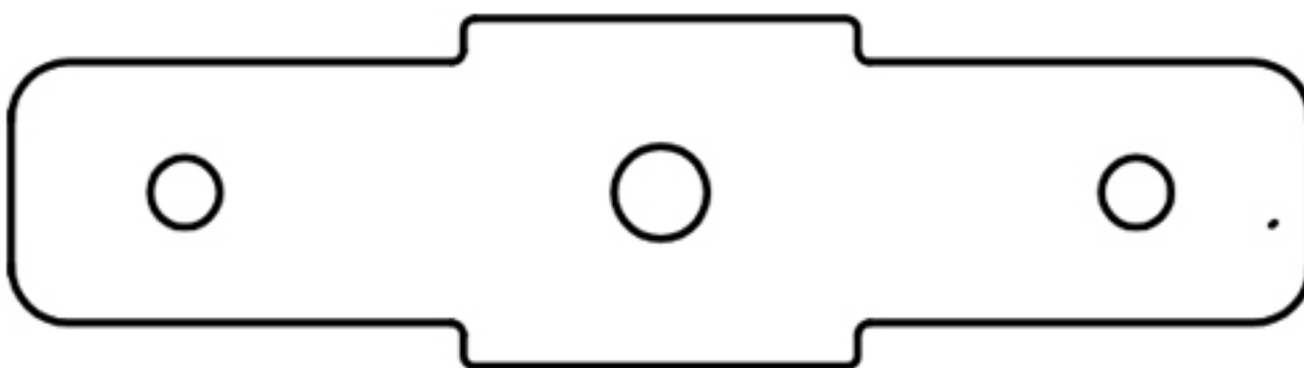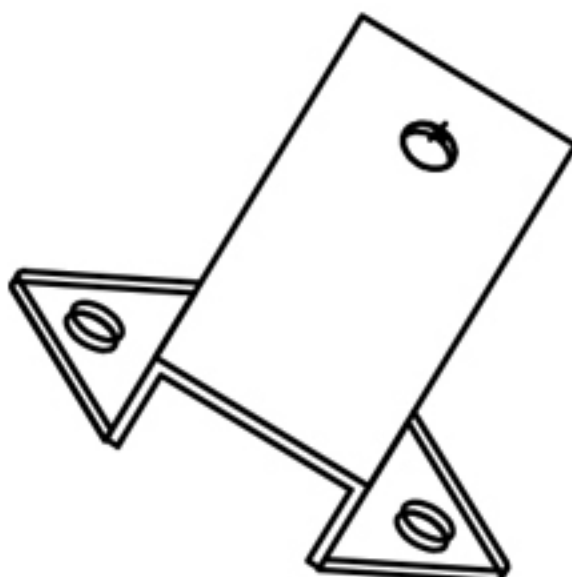Item no.	Reference Image	Qty.
<b>G1</b>		4
<b>G5</b>		4
<b>G10</b>		4
<b>H</b>		8







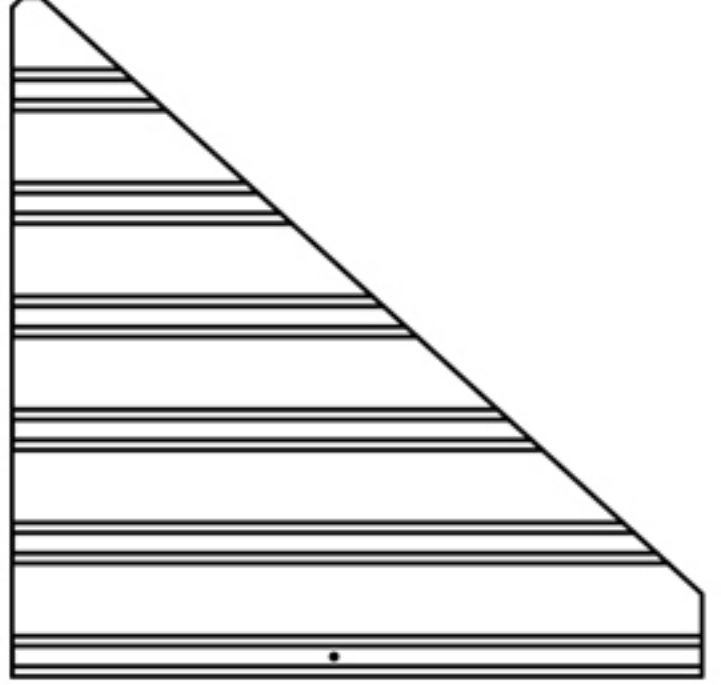
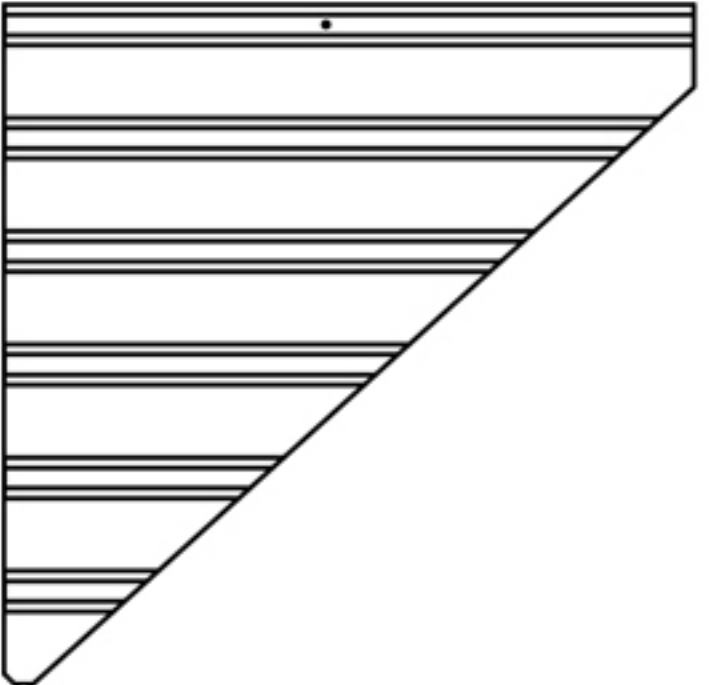
Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
<b>K</b>		1	<b>M4</b>		4
<b>K1</b>		1	<b>P</b>		4
<b>L</b>		4	<b>M5</b>		32
<b>M1</b>		4	<b>M6</b>		4
<b>M2</b>		8	<b>M7</b>		1
<b>M3</b>		4	<b>M8</b>		4

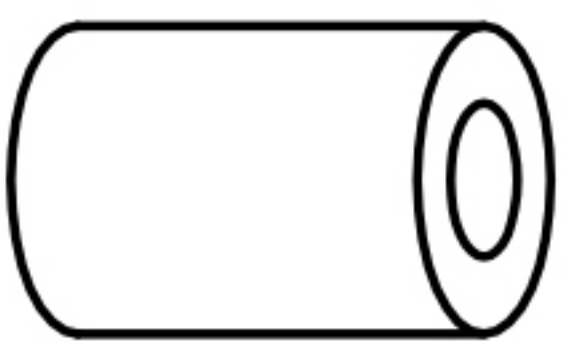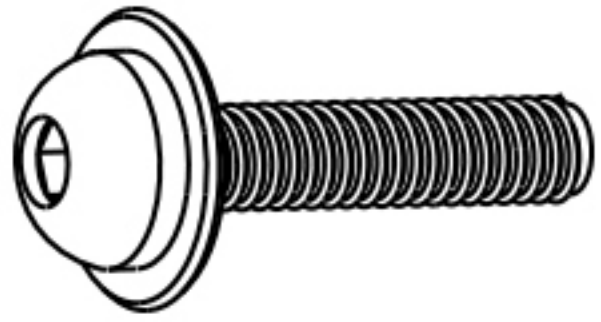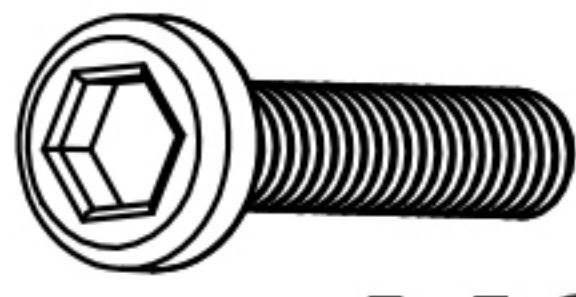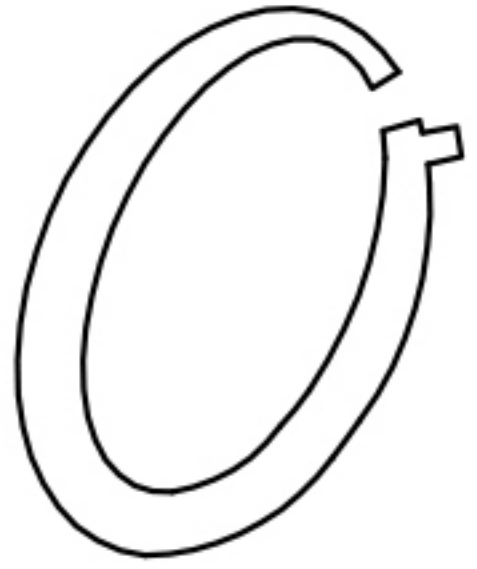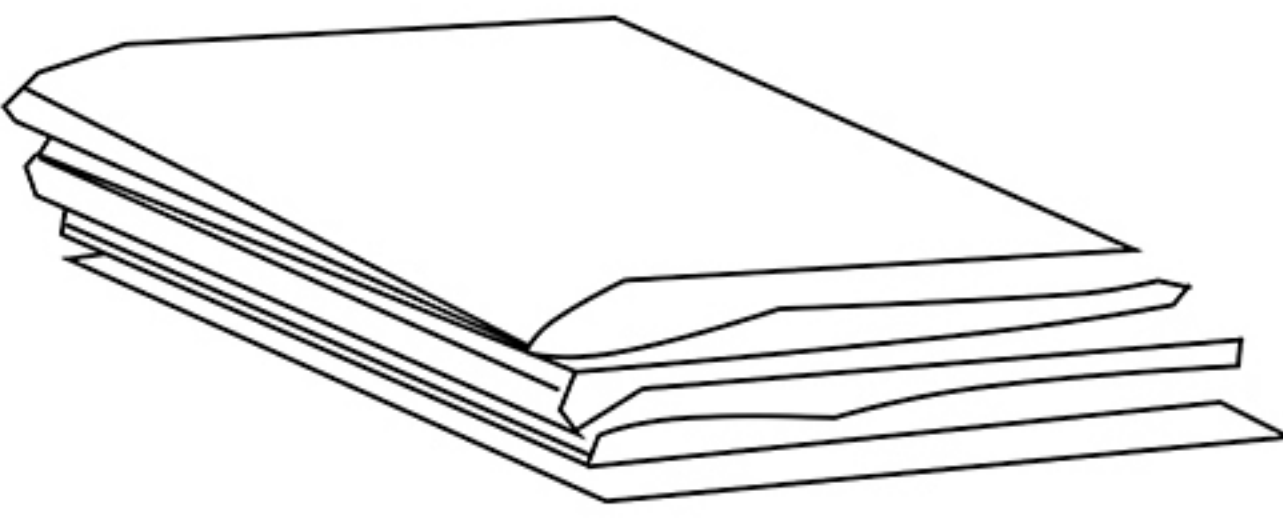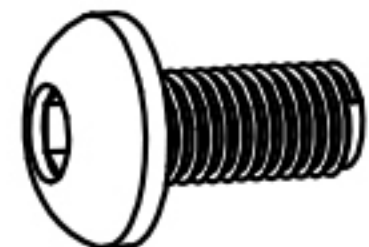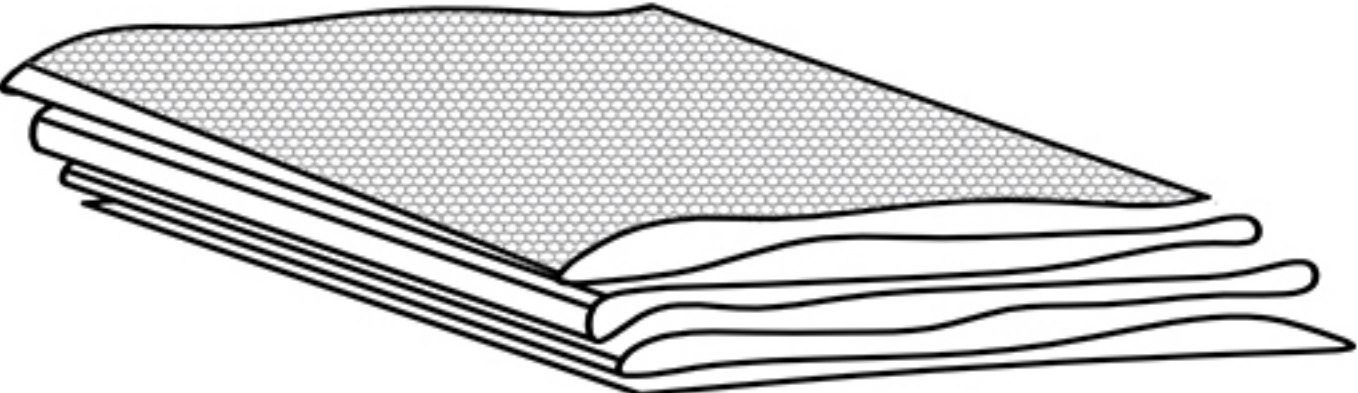

# ACCESSORY CATALOGUE

Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
M9		16	X3	 M6X30mm	4
J		8	X4	 M6X45mm	16
Q		24	Z		1
X	 M6X15mm	176	Z1		1
X1	 M6X38mm	4	1		8
X2	 M6X42mm	28	2		1


**BOX 2** SKU:A-TPSB24-G032-2

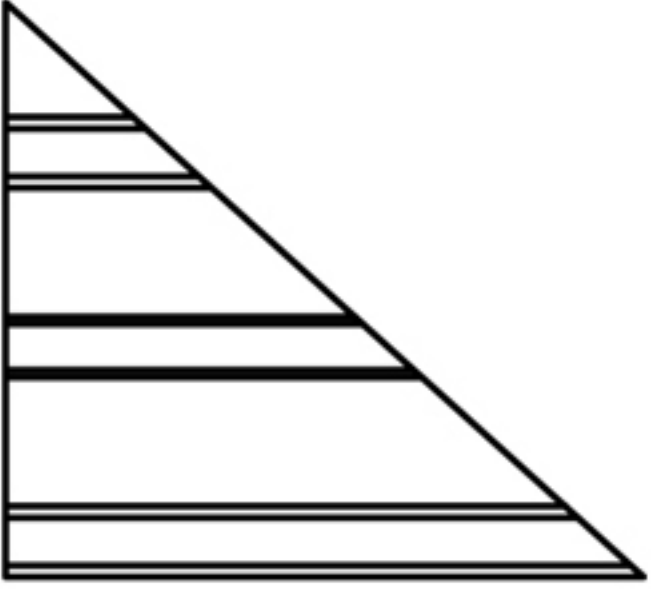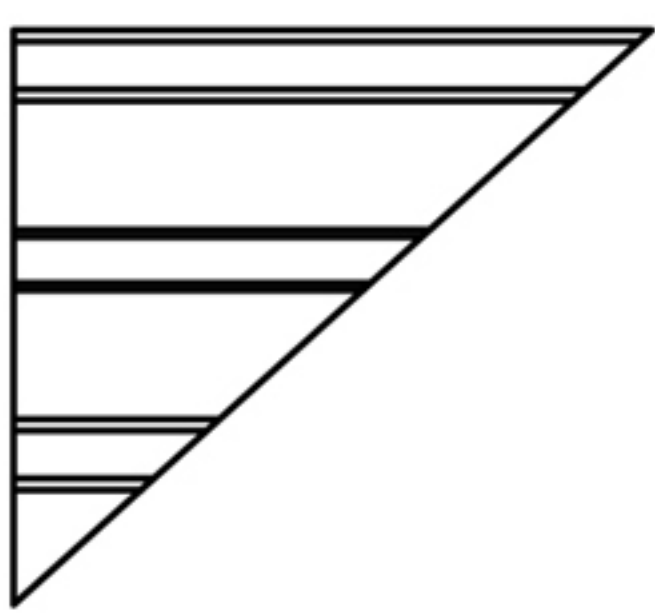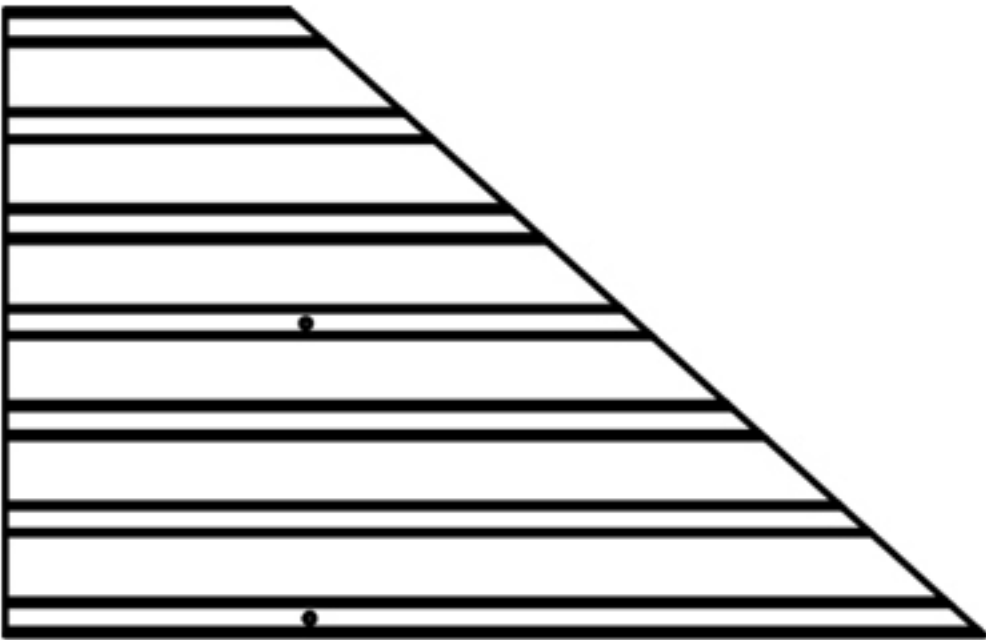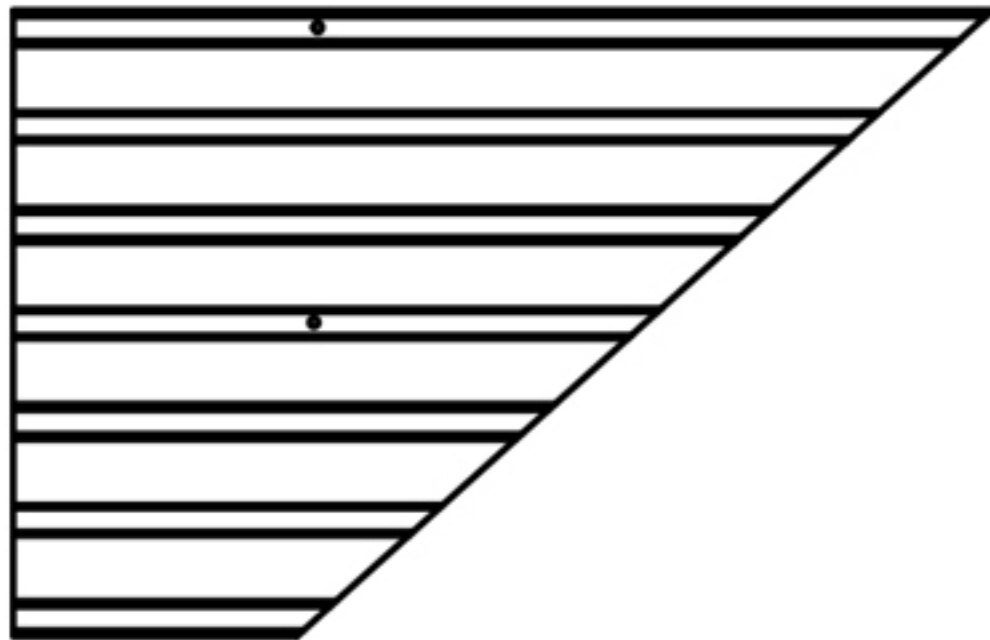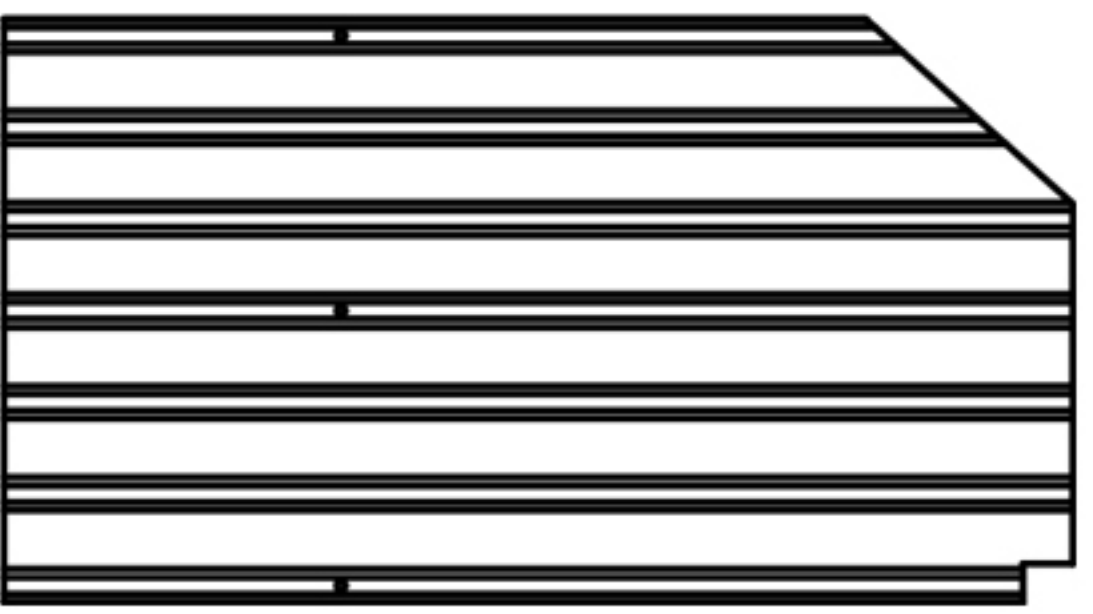Item no.	Reference Image	Qty.	Item no.	Reference Image	Qty.
O1		4	V1		4
O2		4	V2		4
O3		4	V3		4
O4		4	V4		4




# STEP 1


Parts required

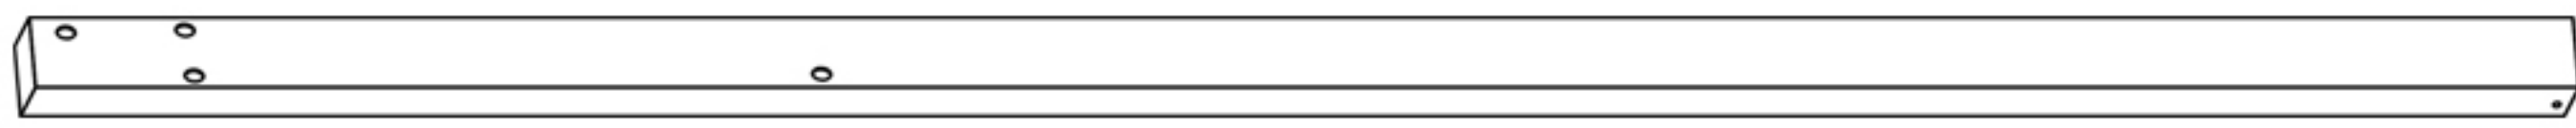

**A** 4pcs



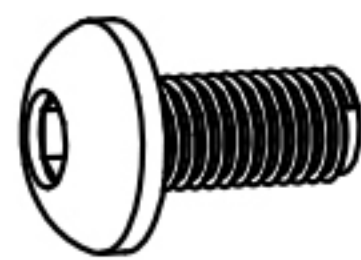


**X** 8pcs

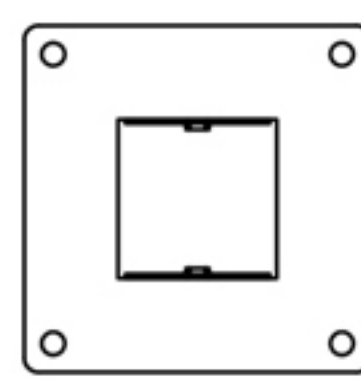

**L** 4pcs

**1** → **2**

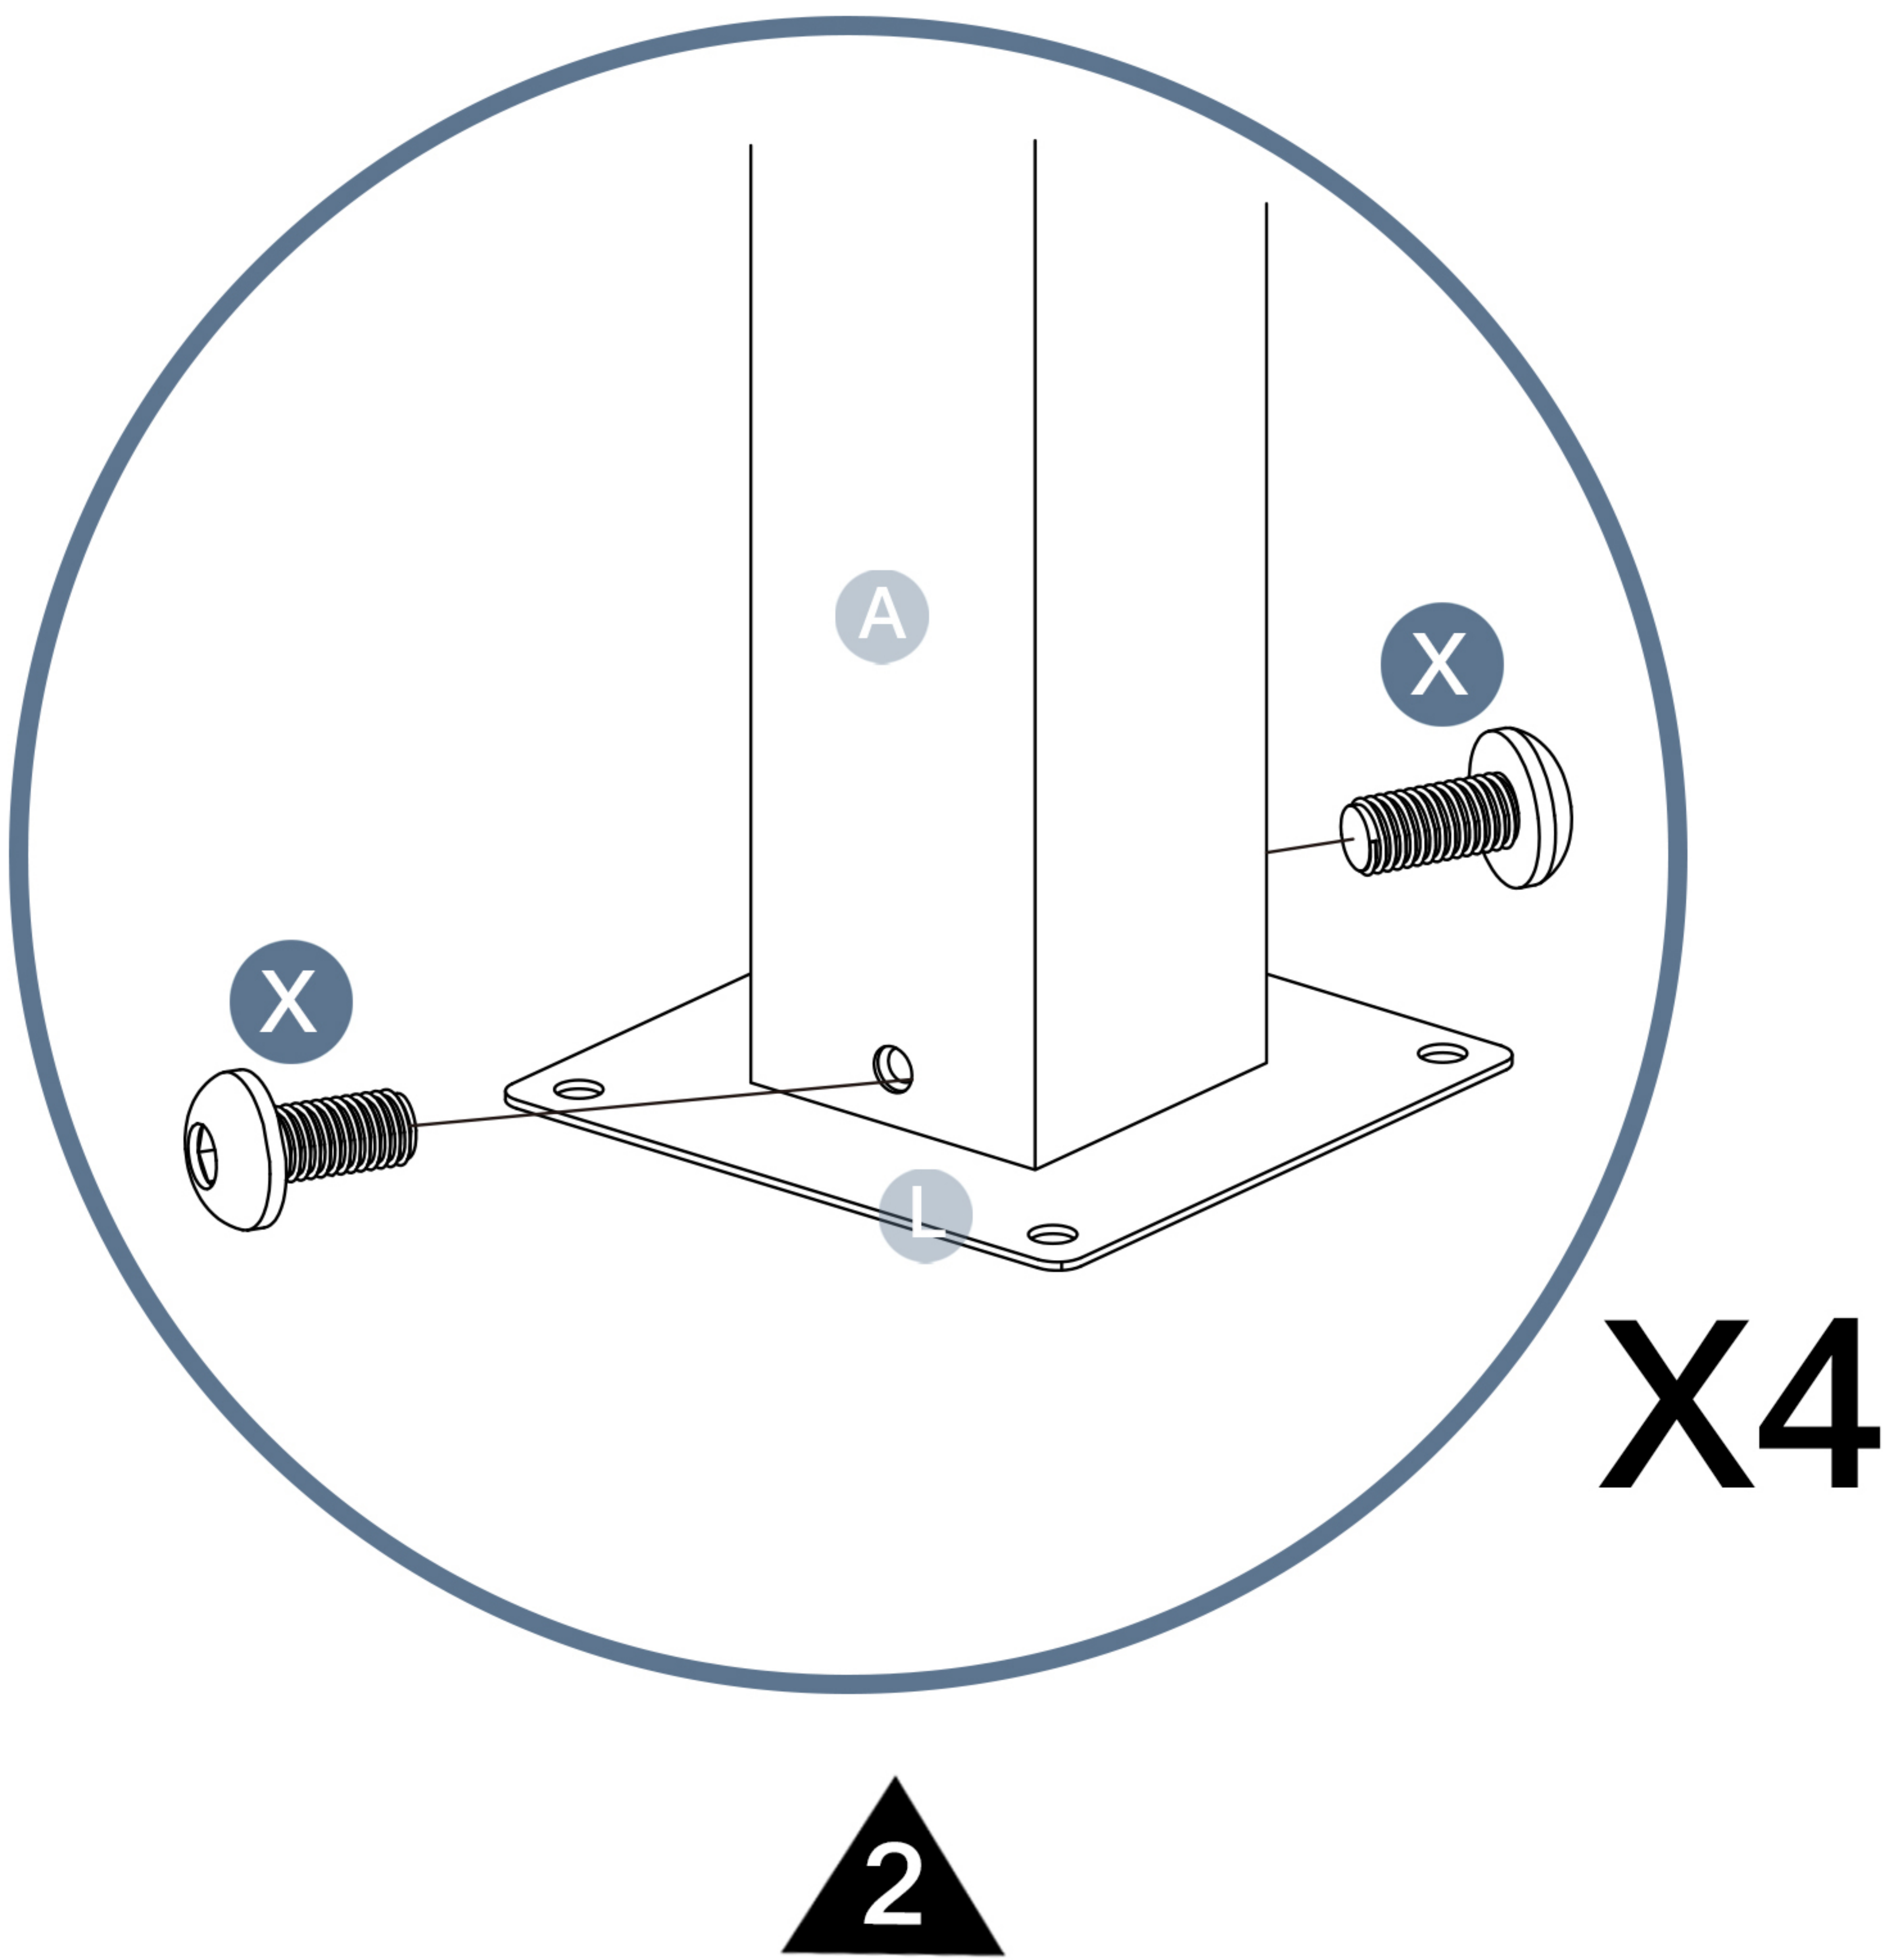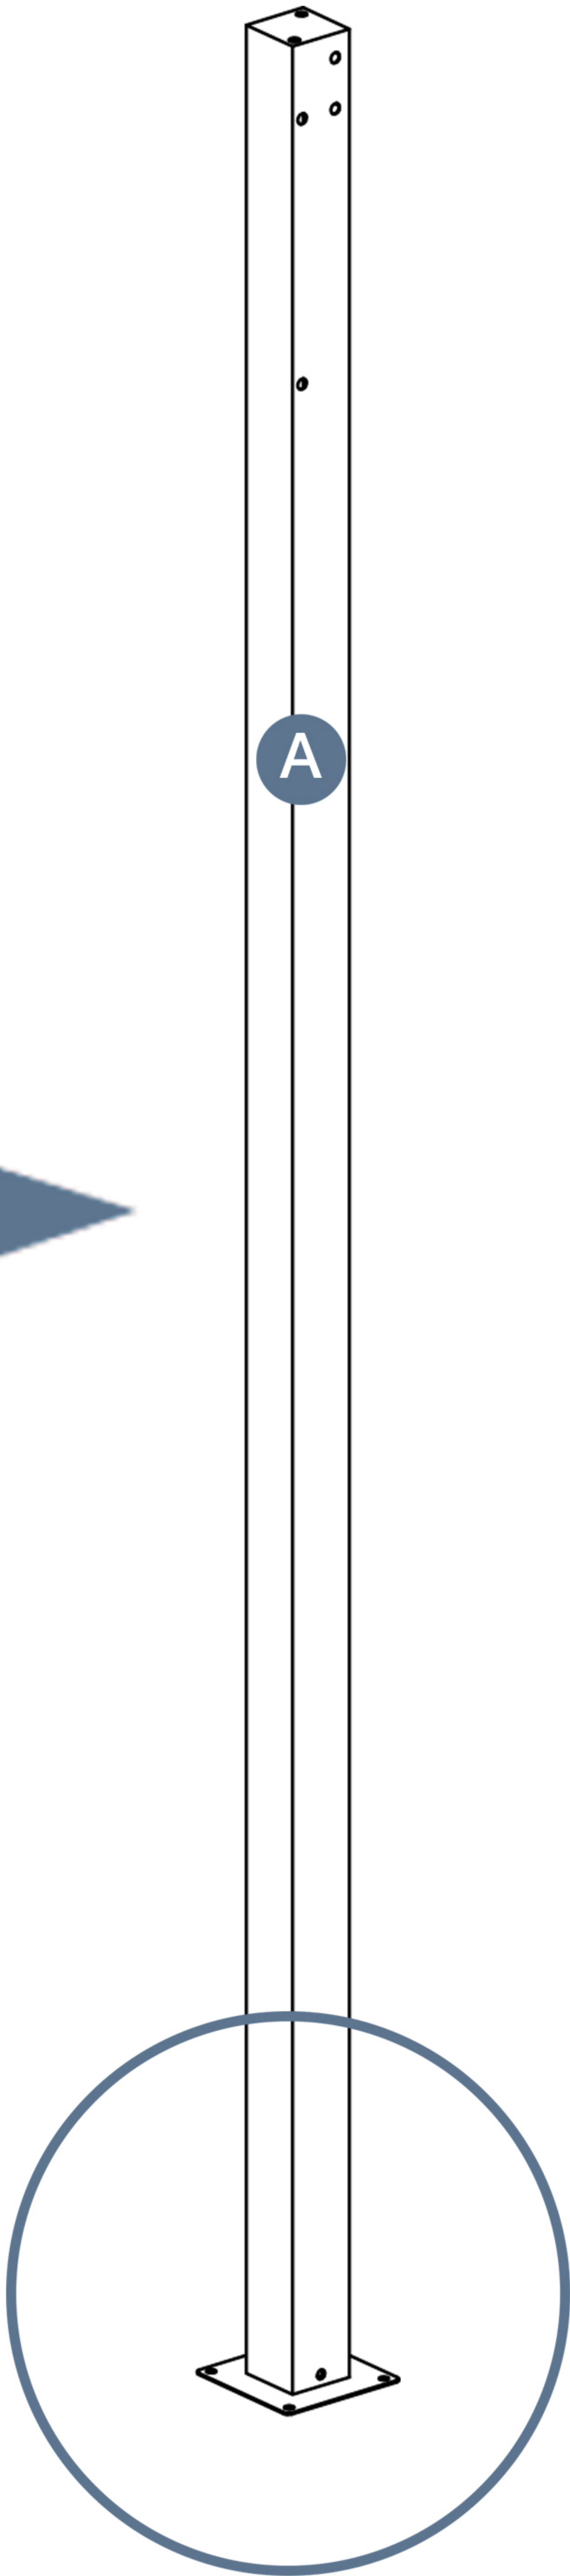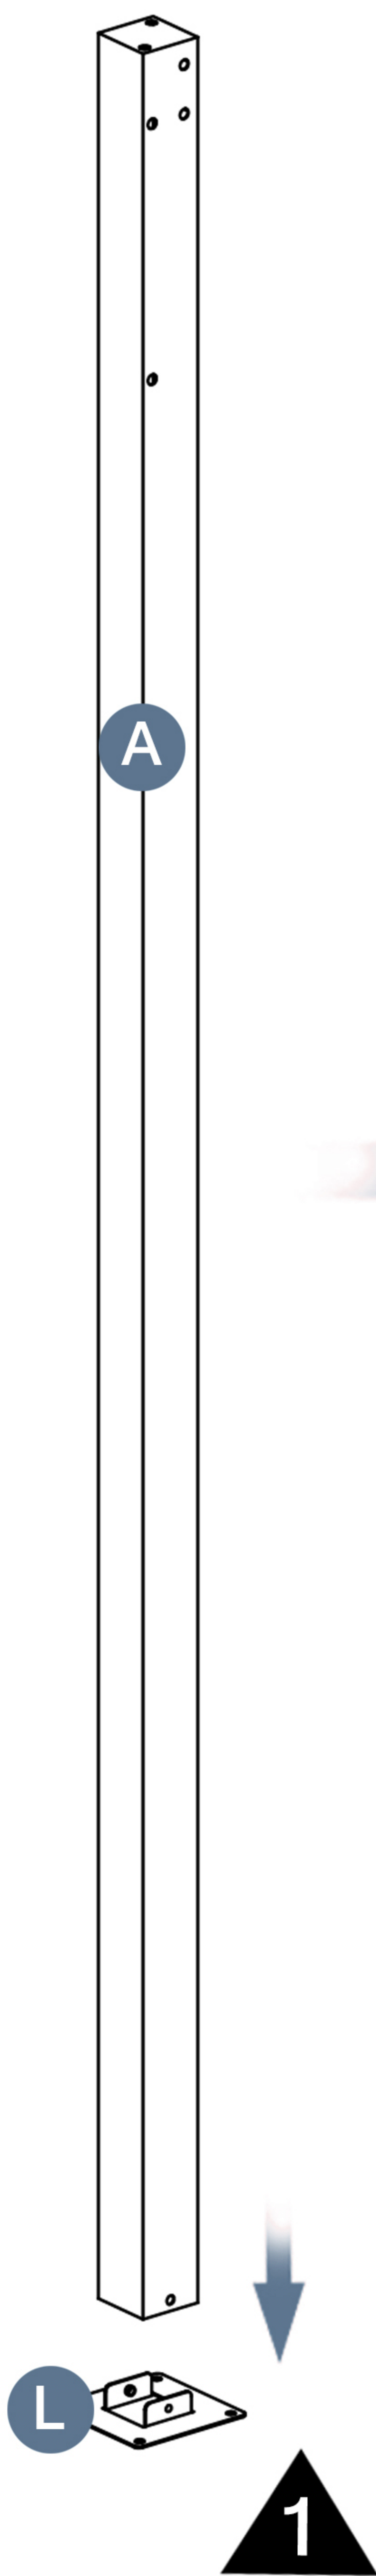




# STEP2


Parts required




C 4pcs

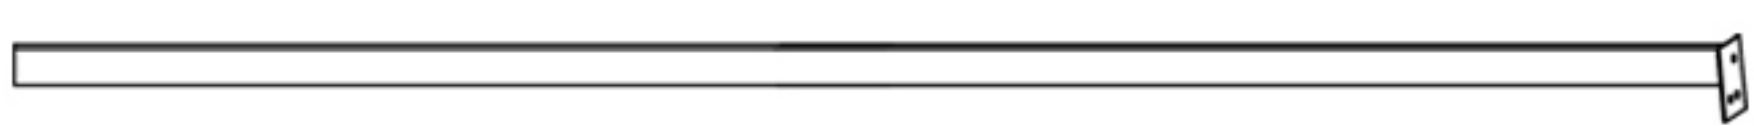

C1 4pcs

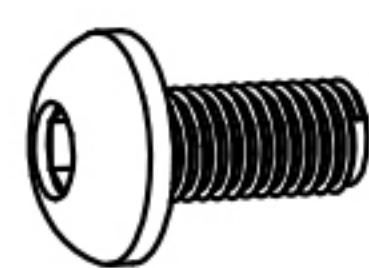


X 24pcs

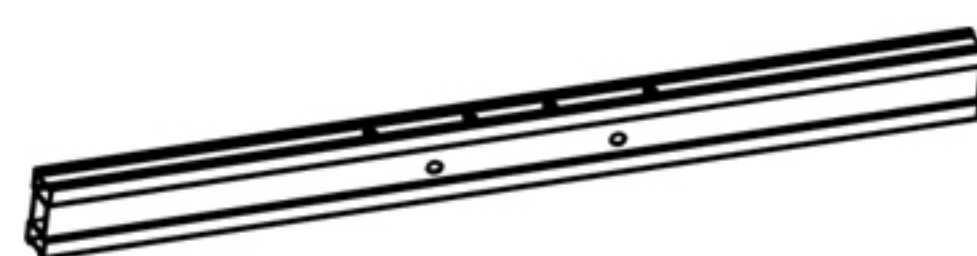

P 4pcs

1

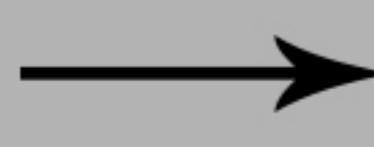


2




Be careful not to screw in the red circle. The seventh step is to install M6 .


M6

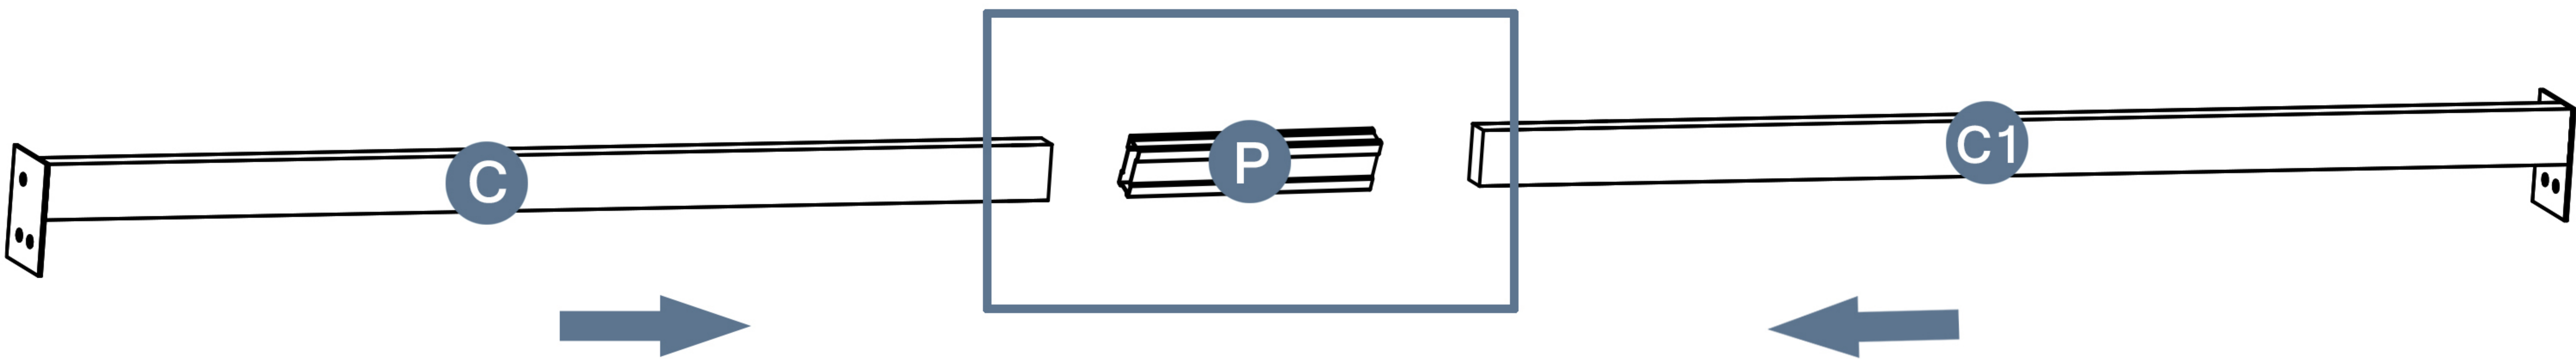

X4

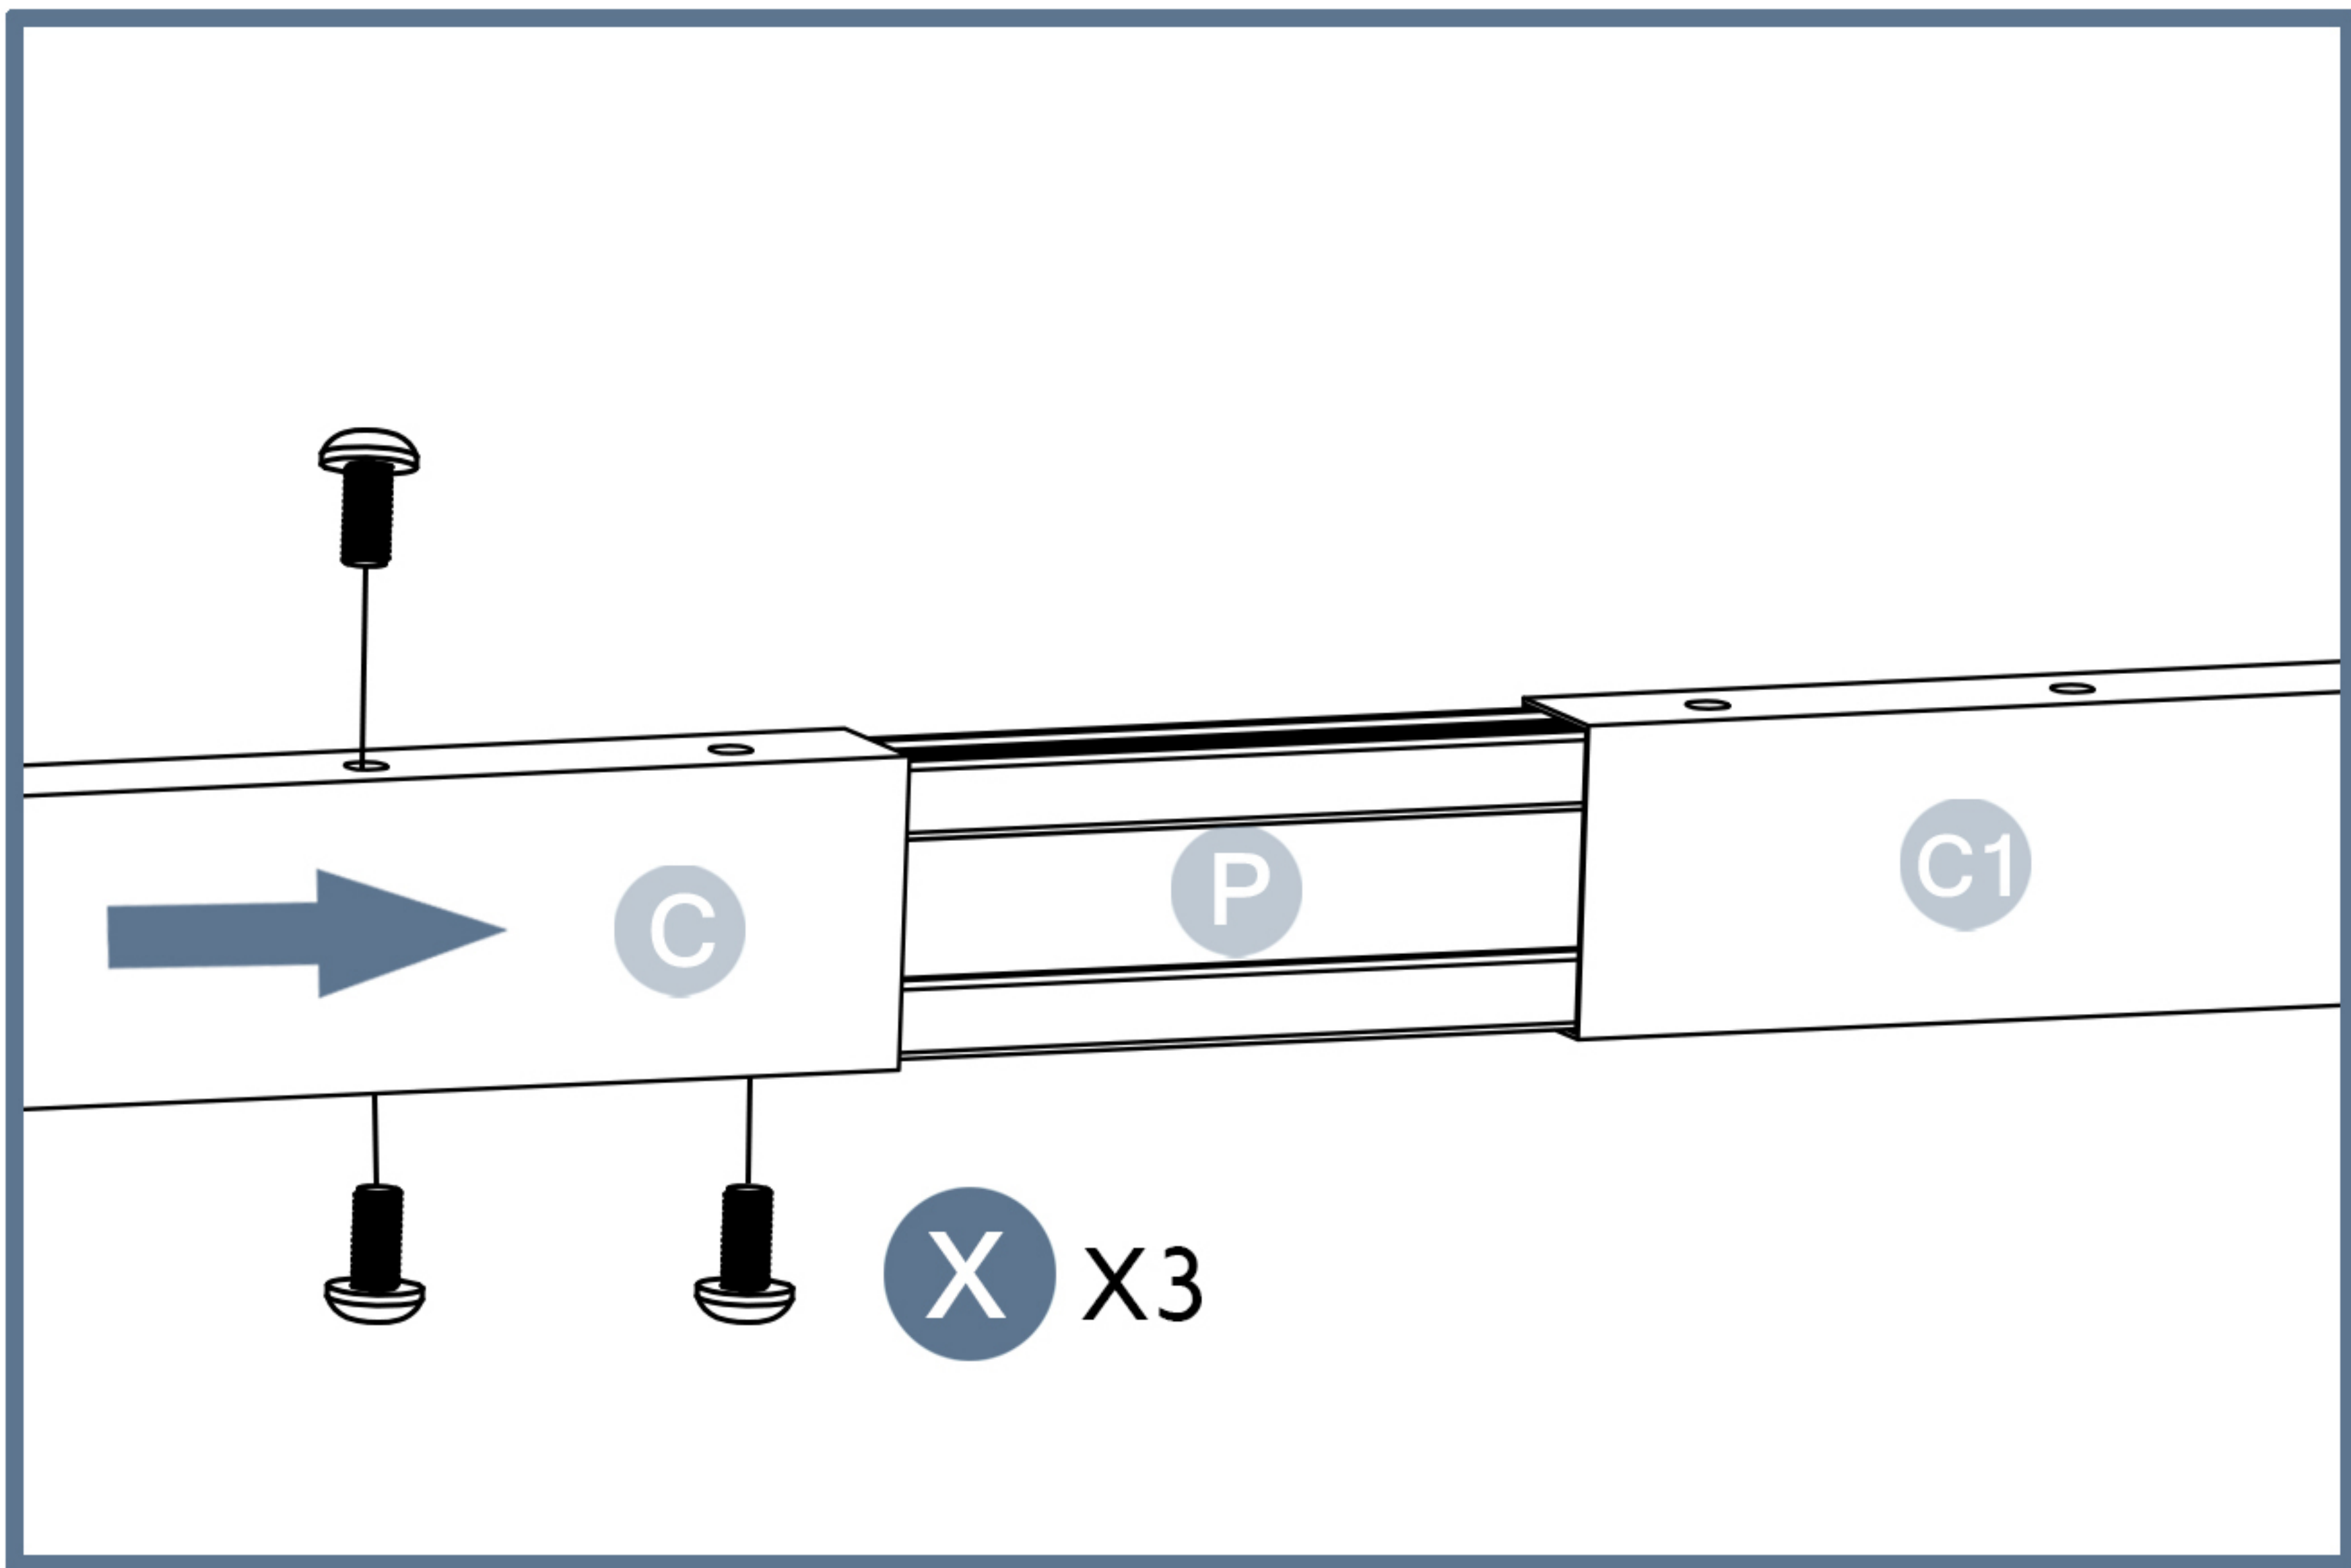

1

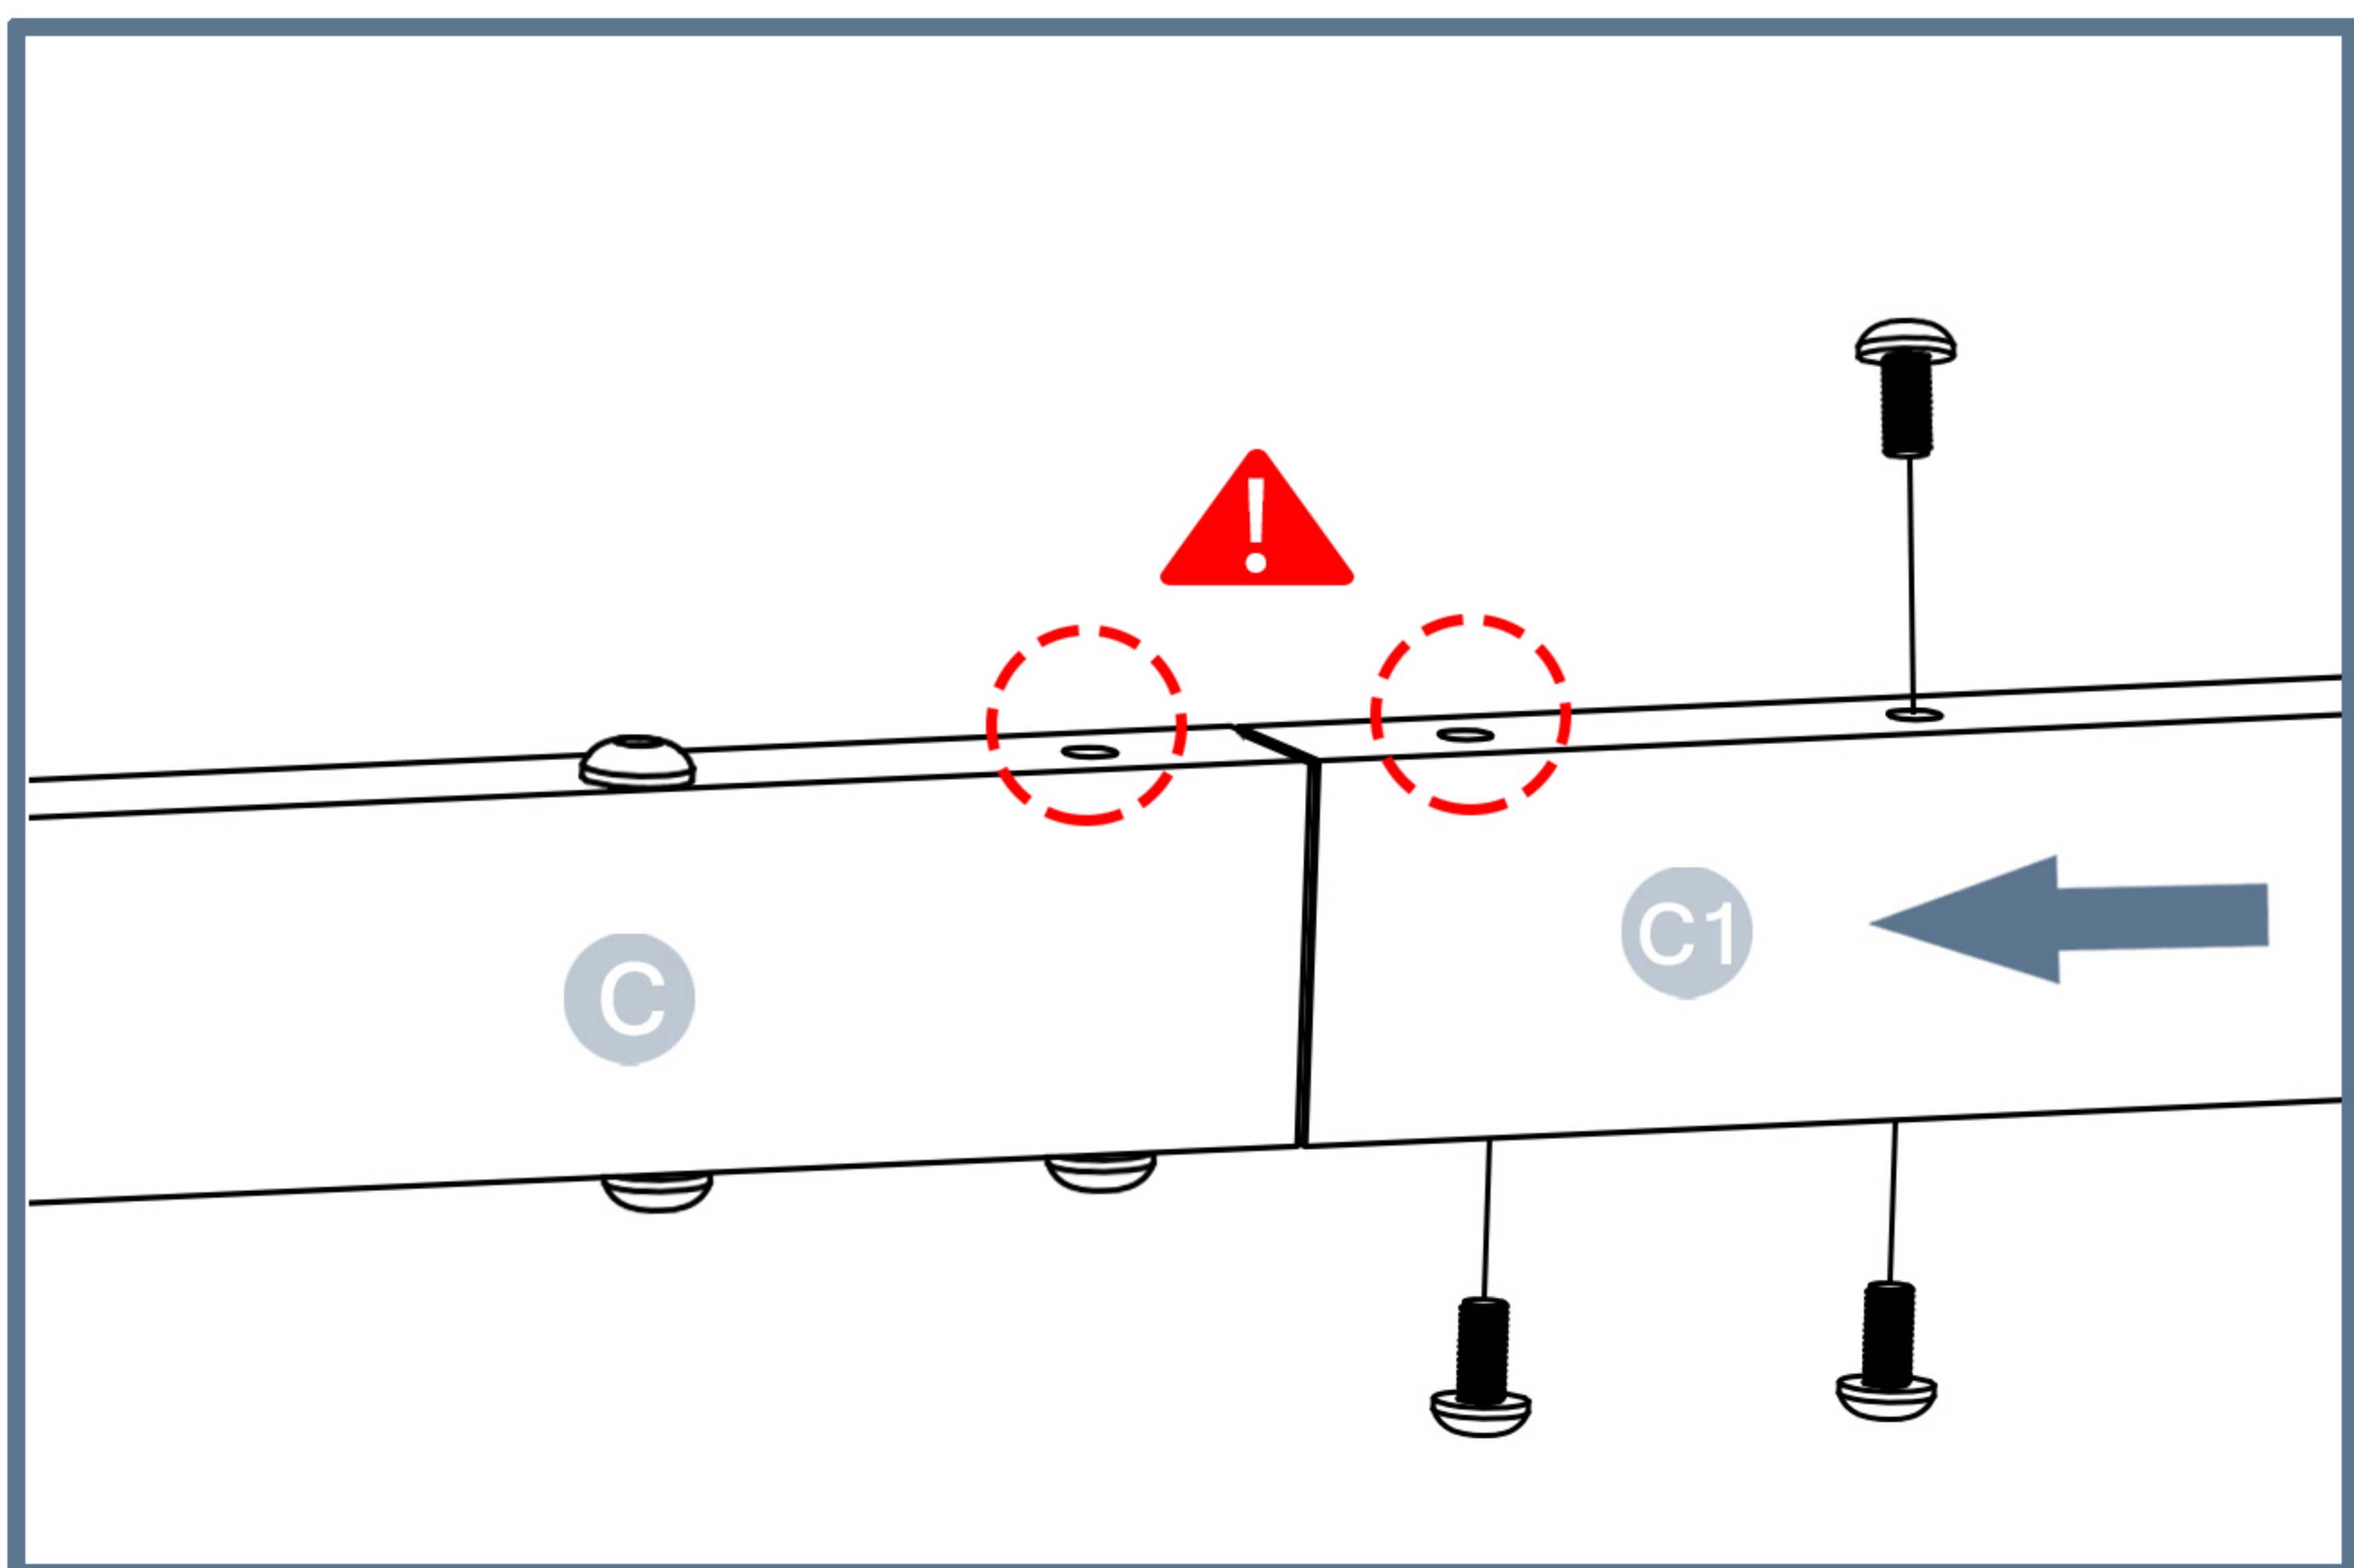


2




# STEP3


Parts required




J 8pcs

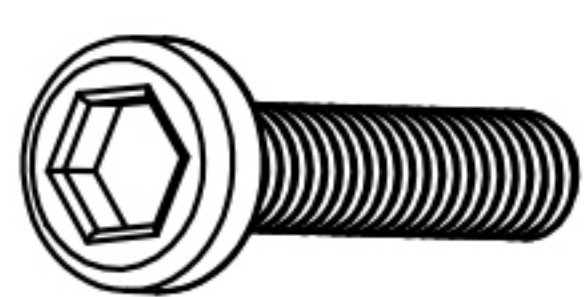


X4 16pcs

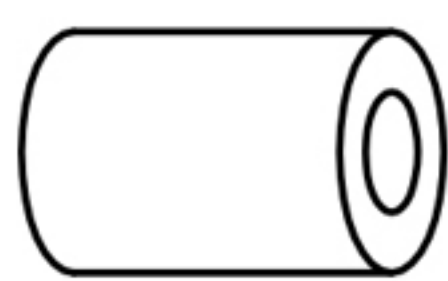

M9 16pcs

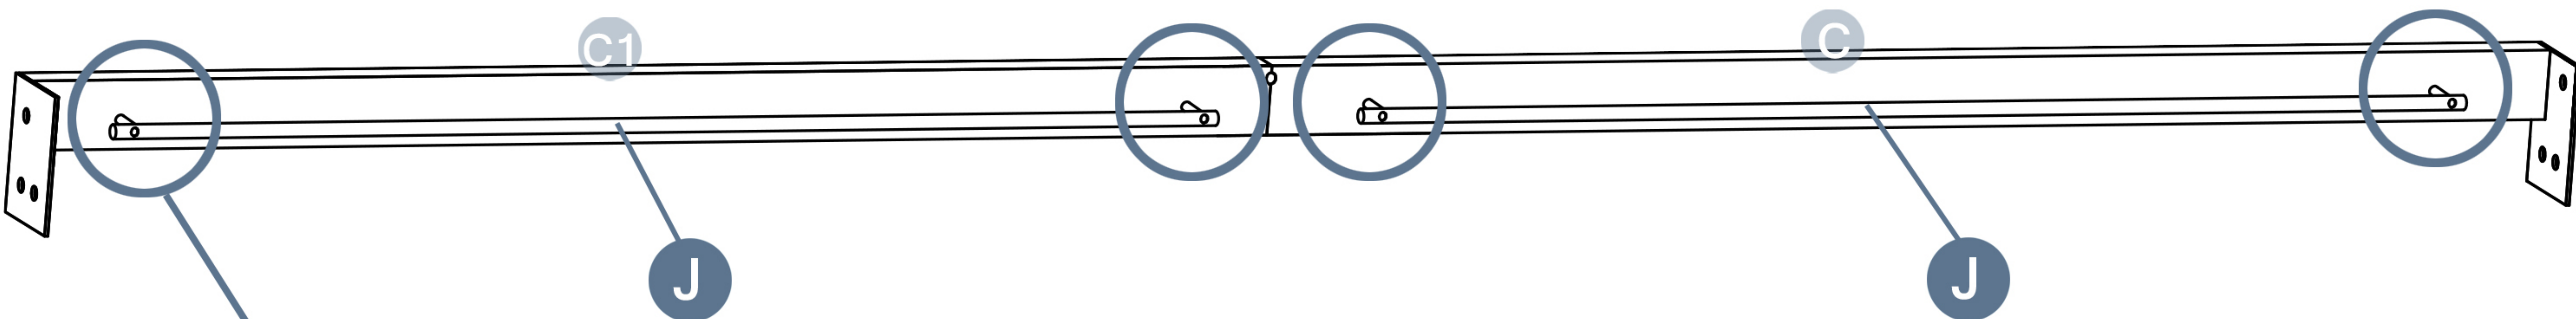


X4

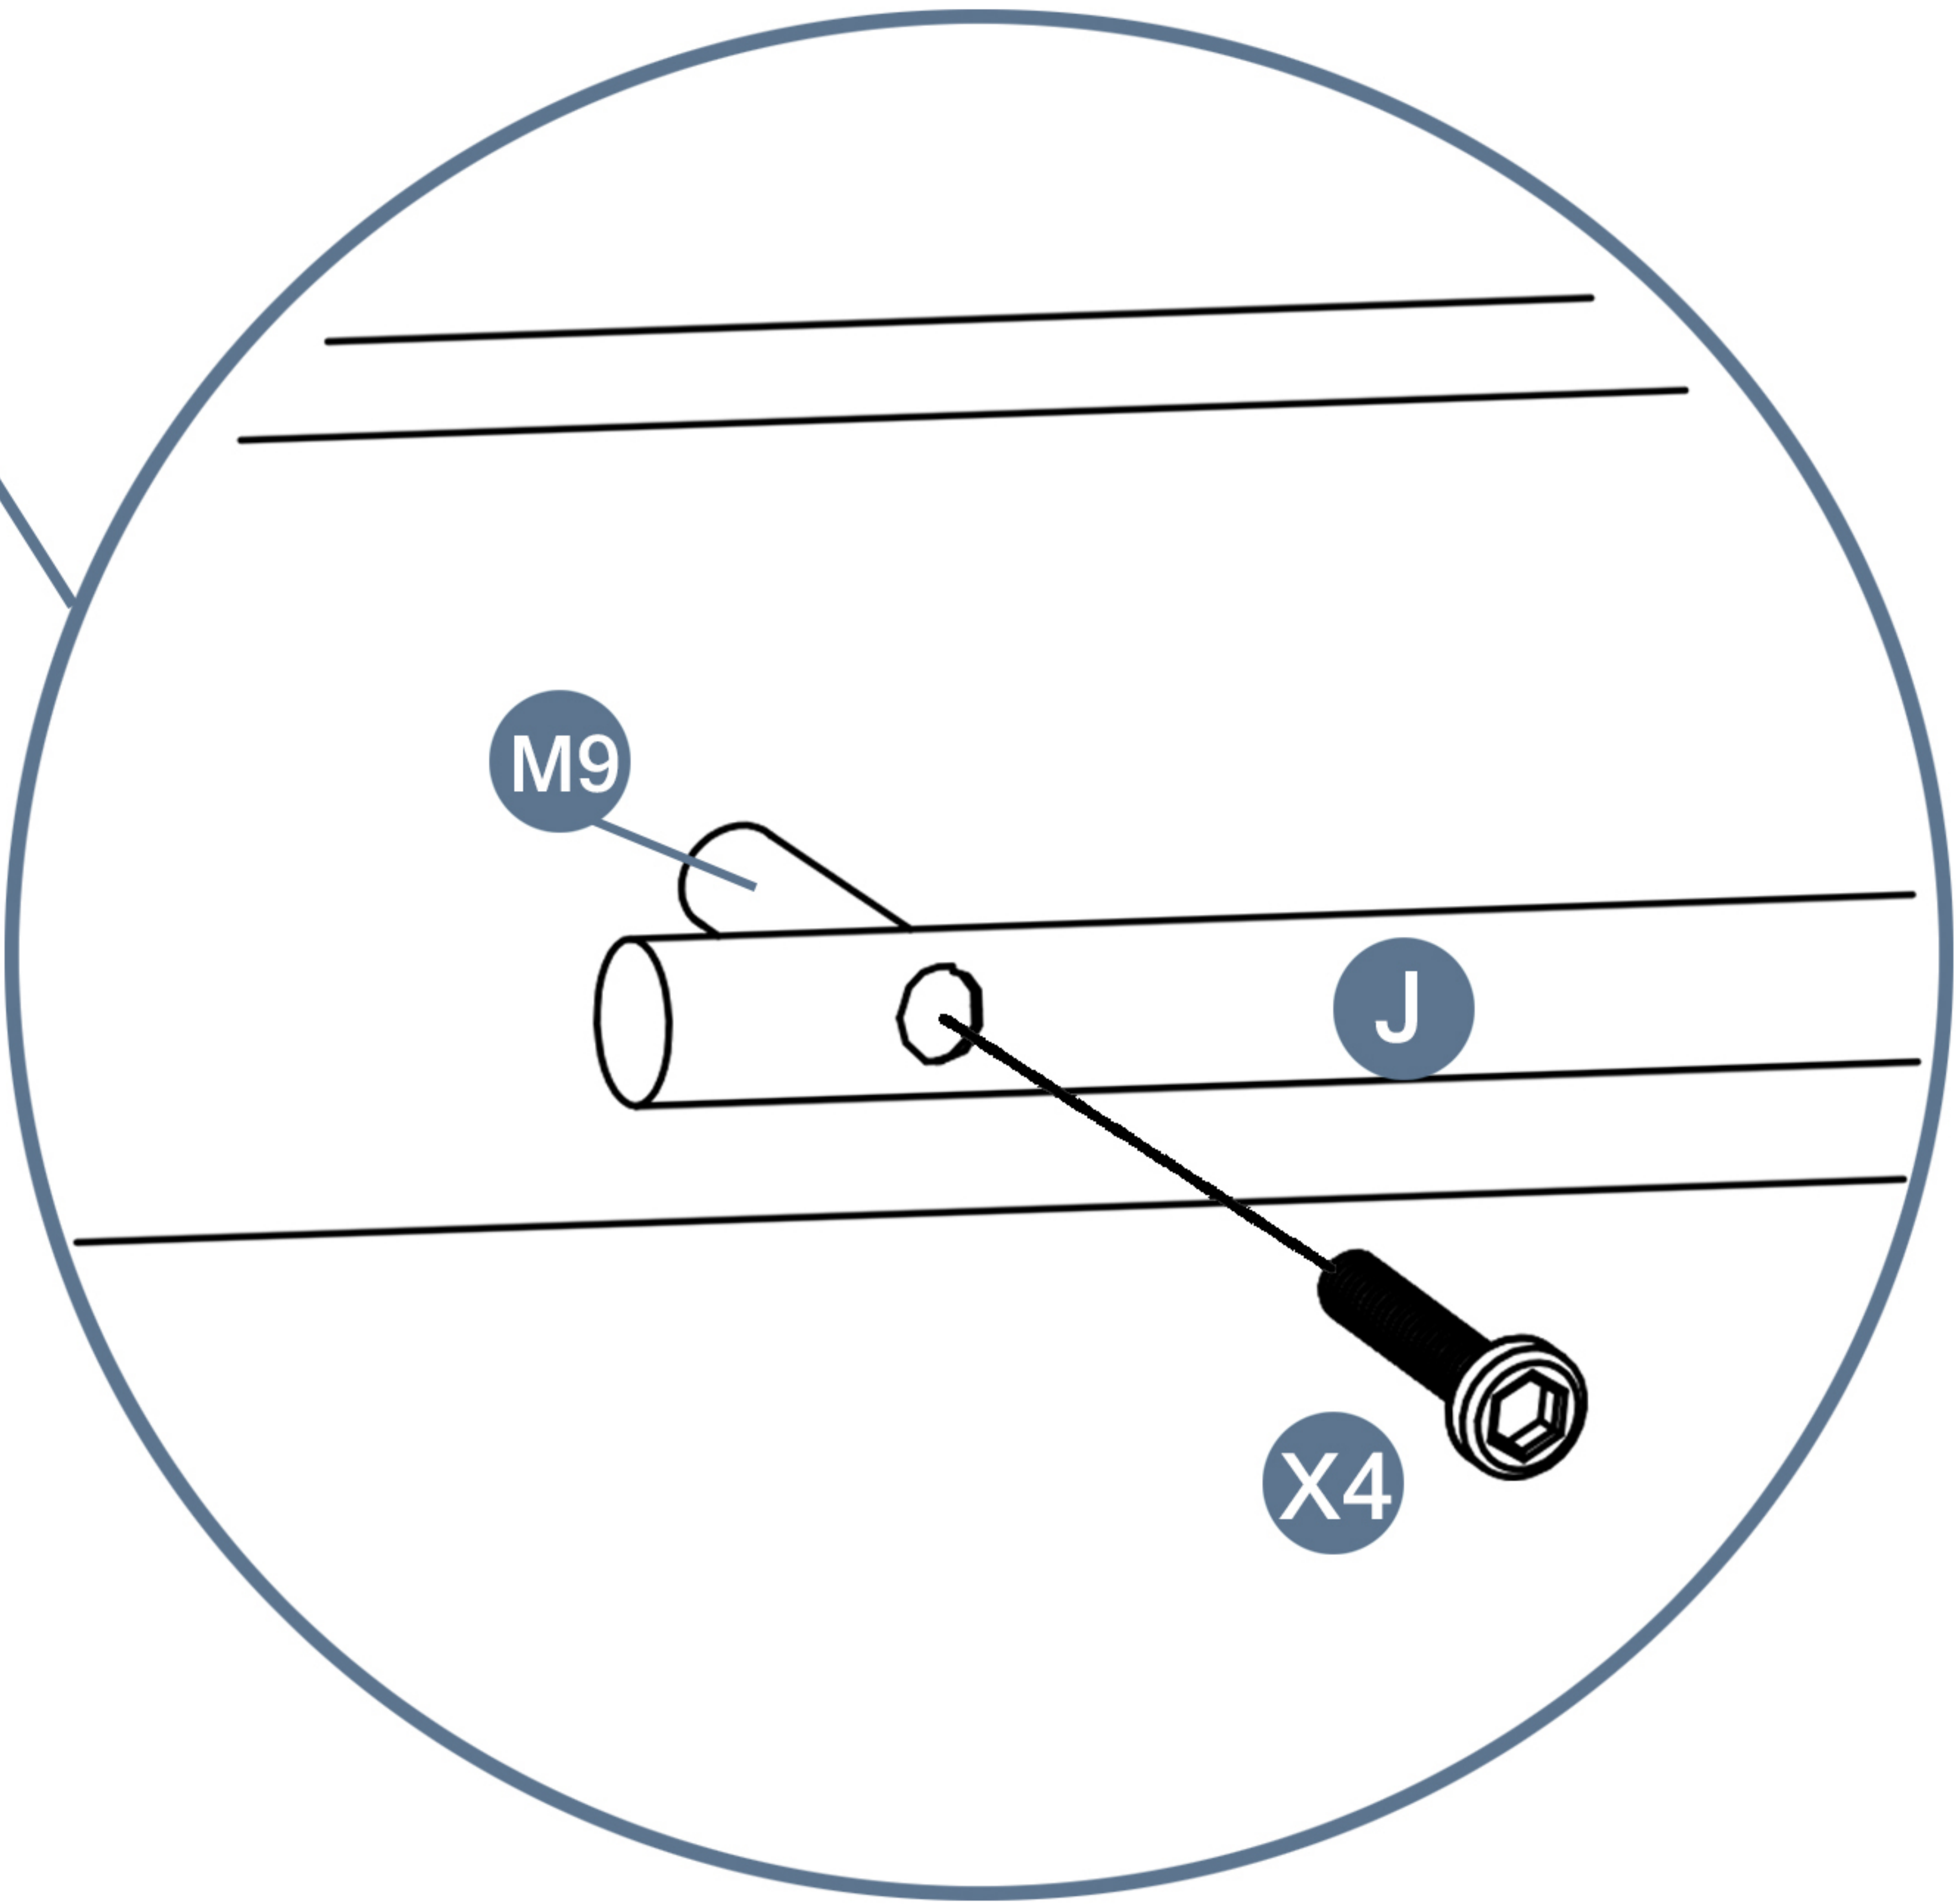




# STEP4

Parts required

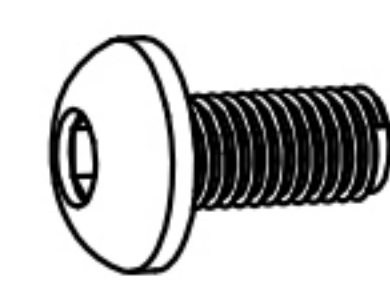


X 24pcs

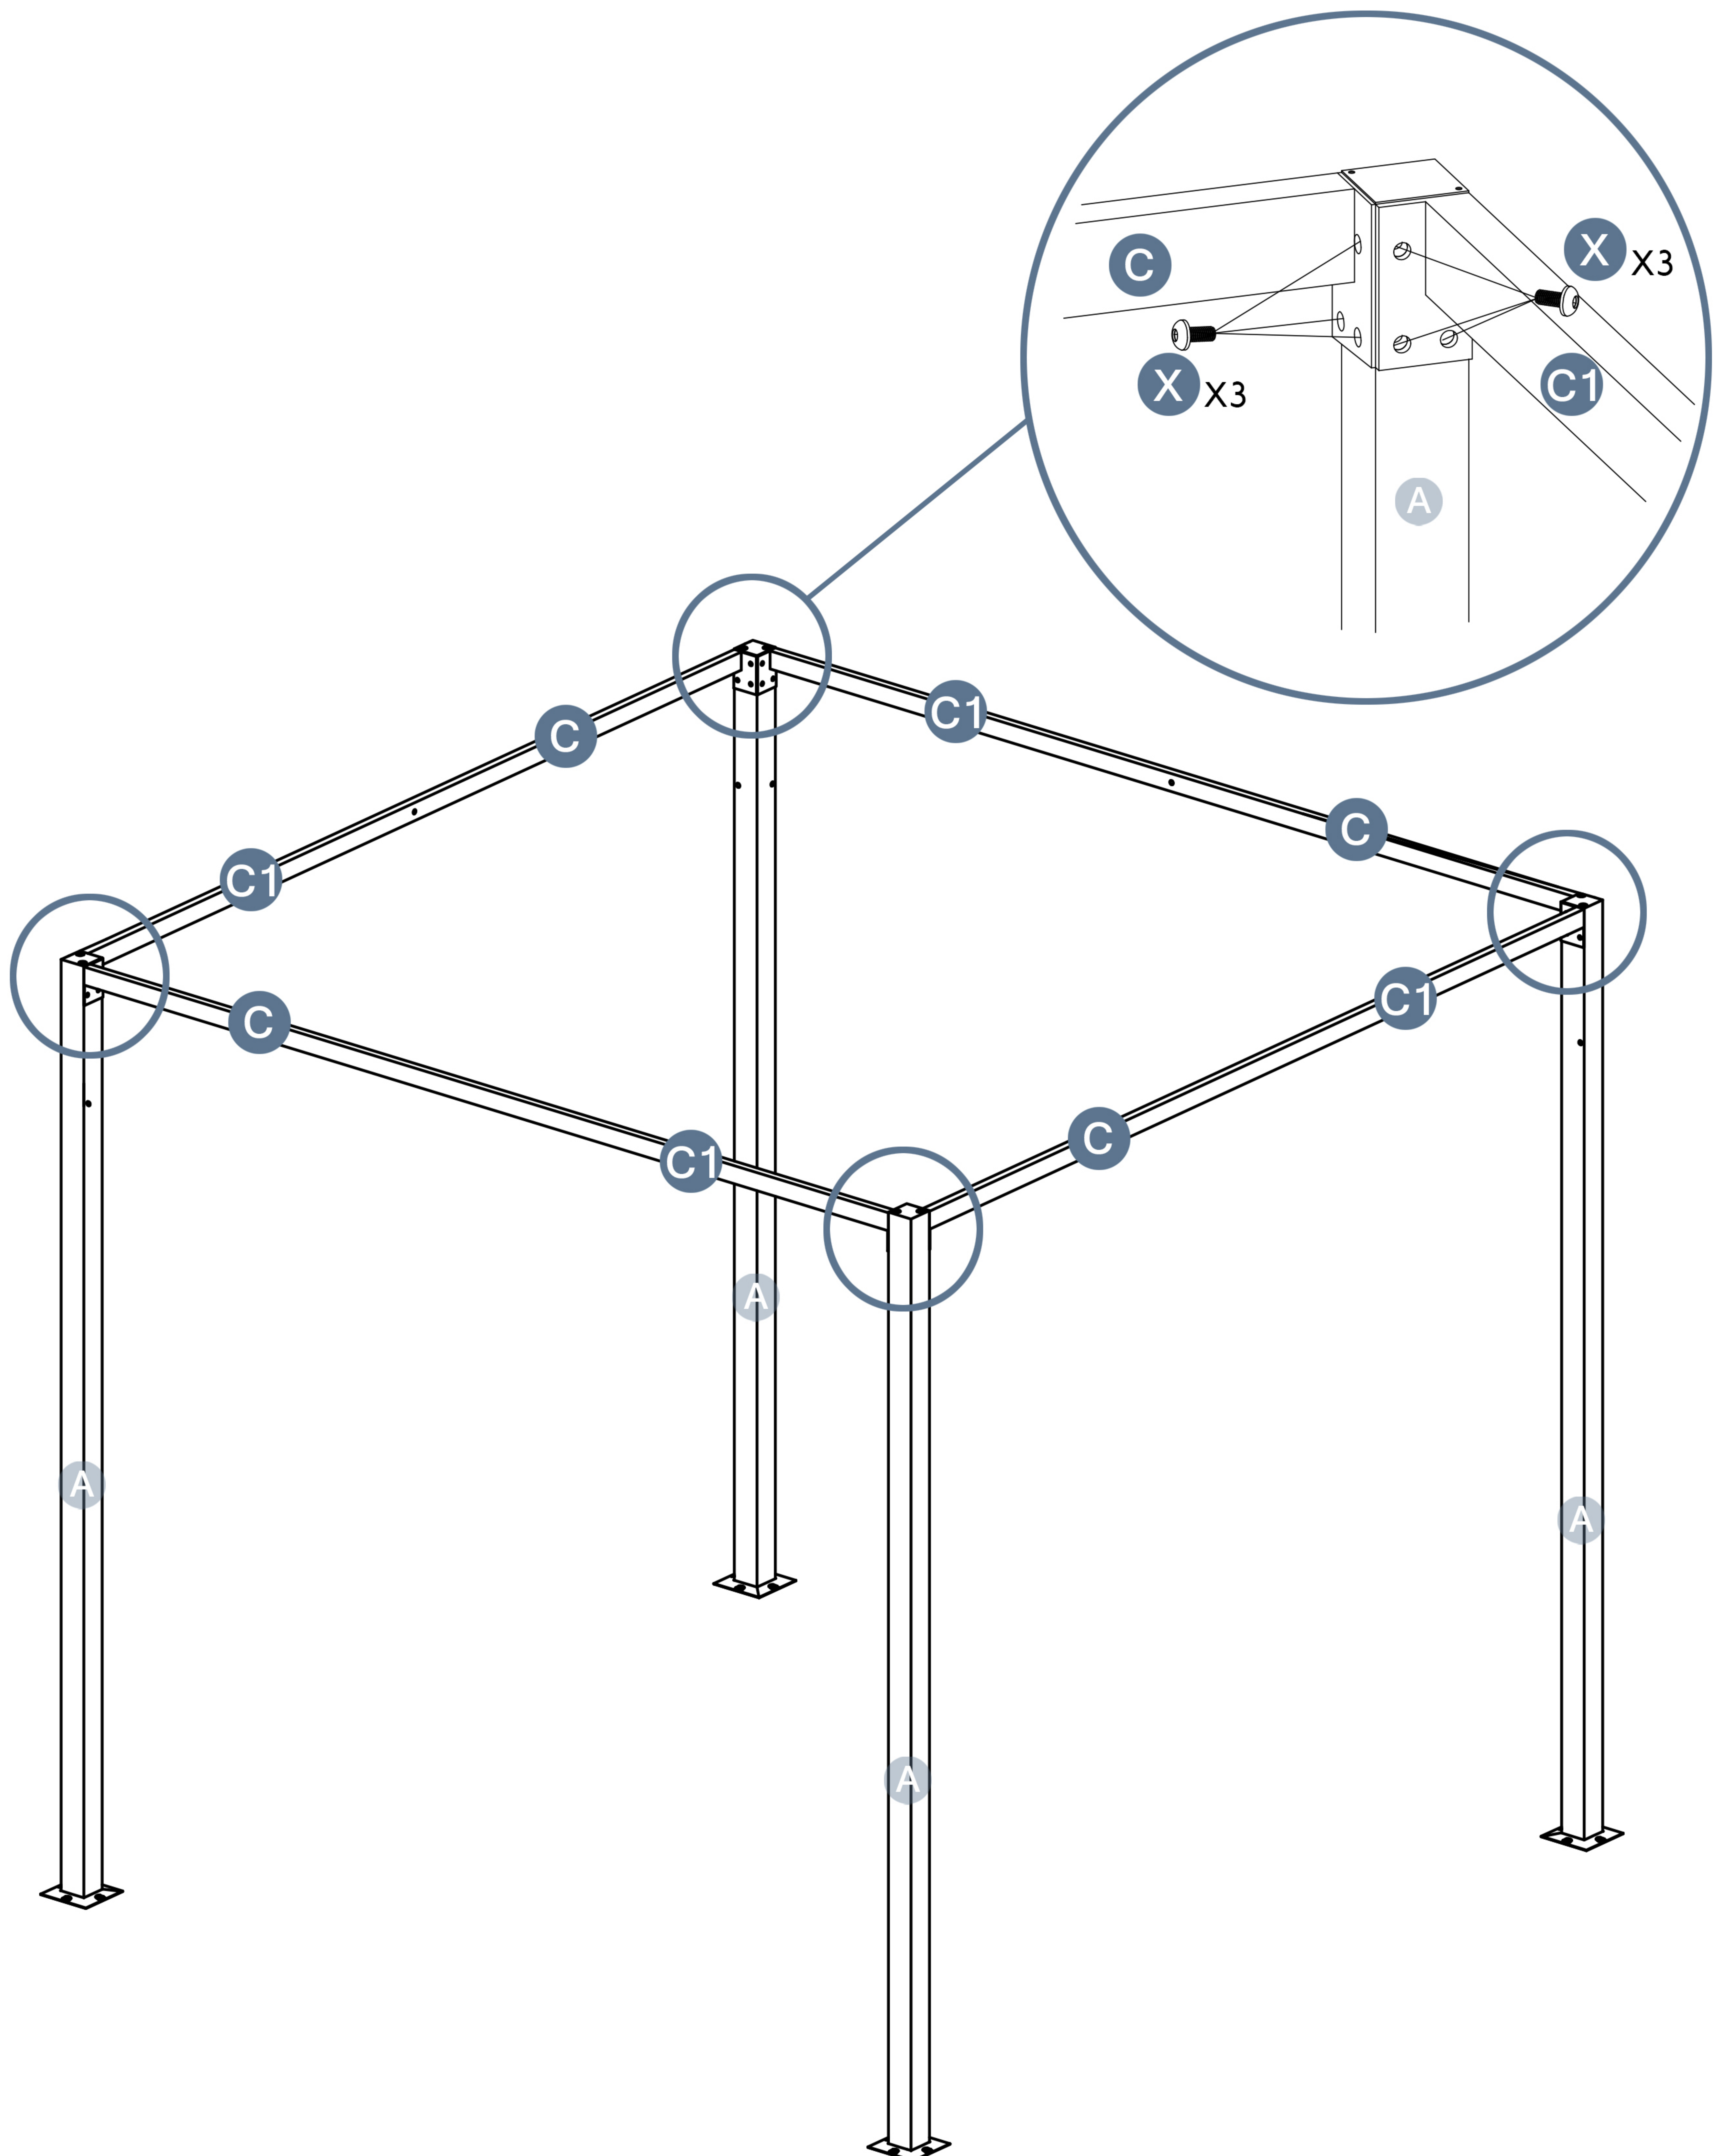




# STEP 5

Parts required

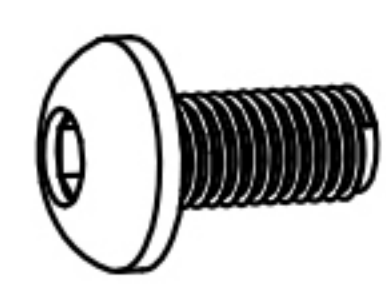


X

16pcs

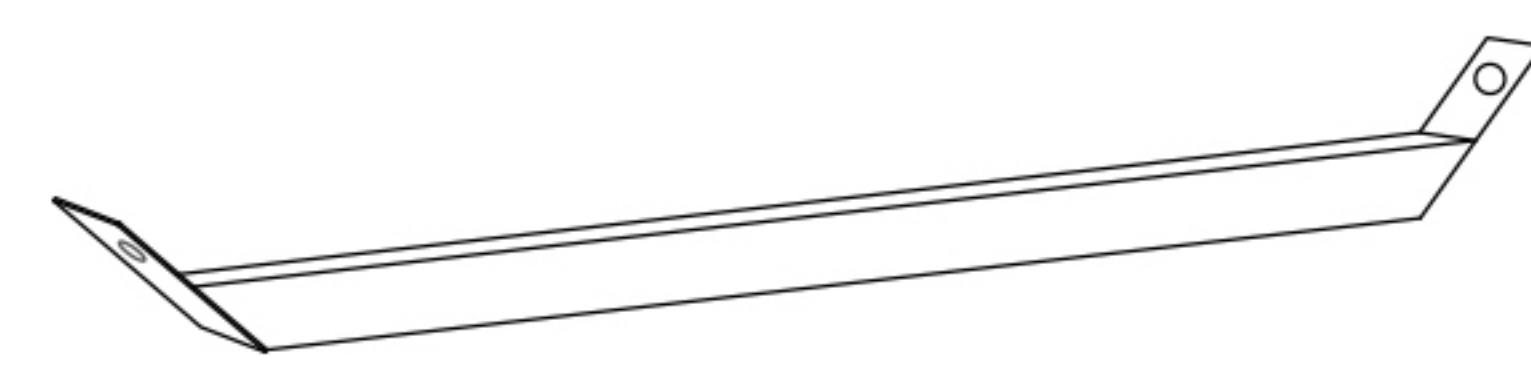

F


8pcs

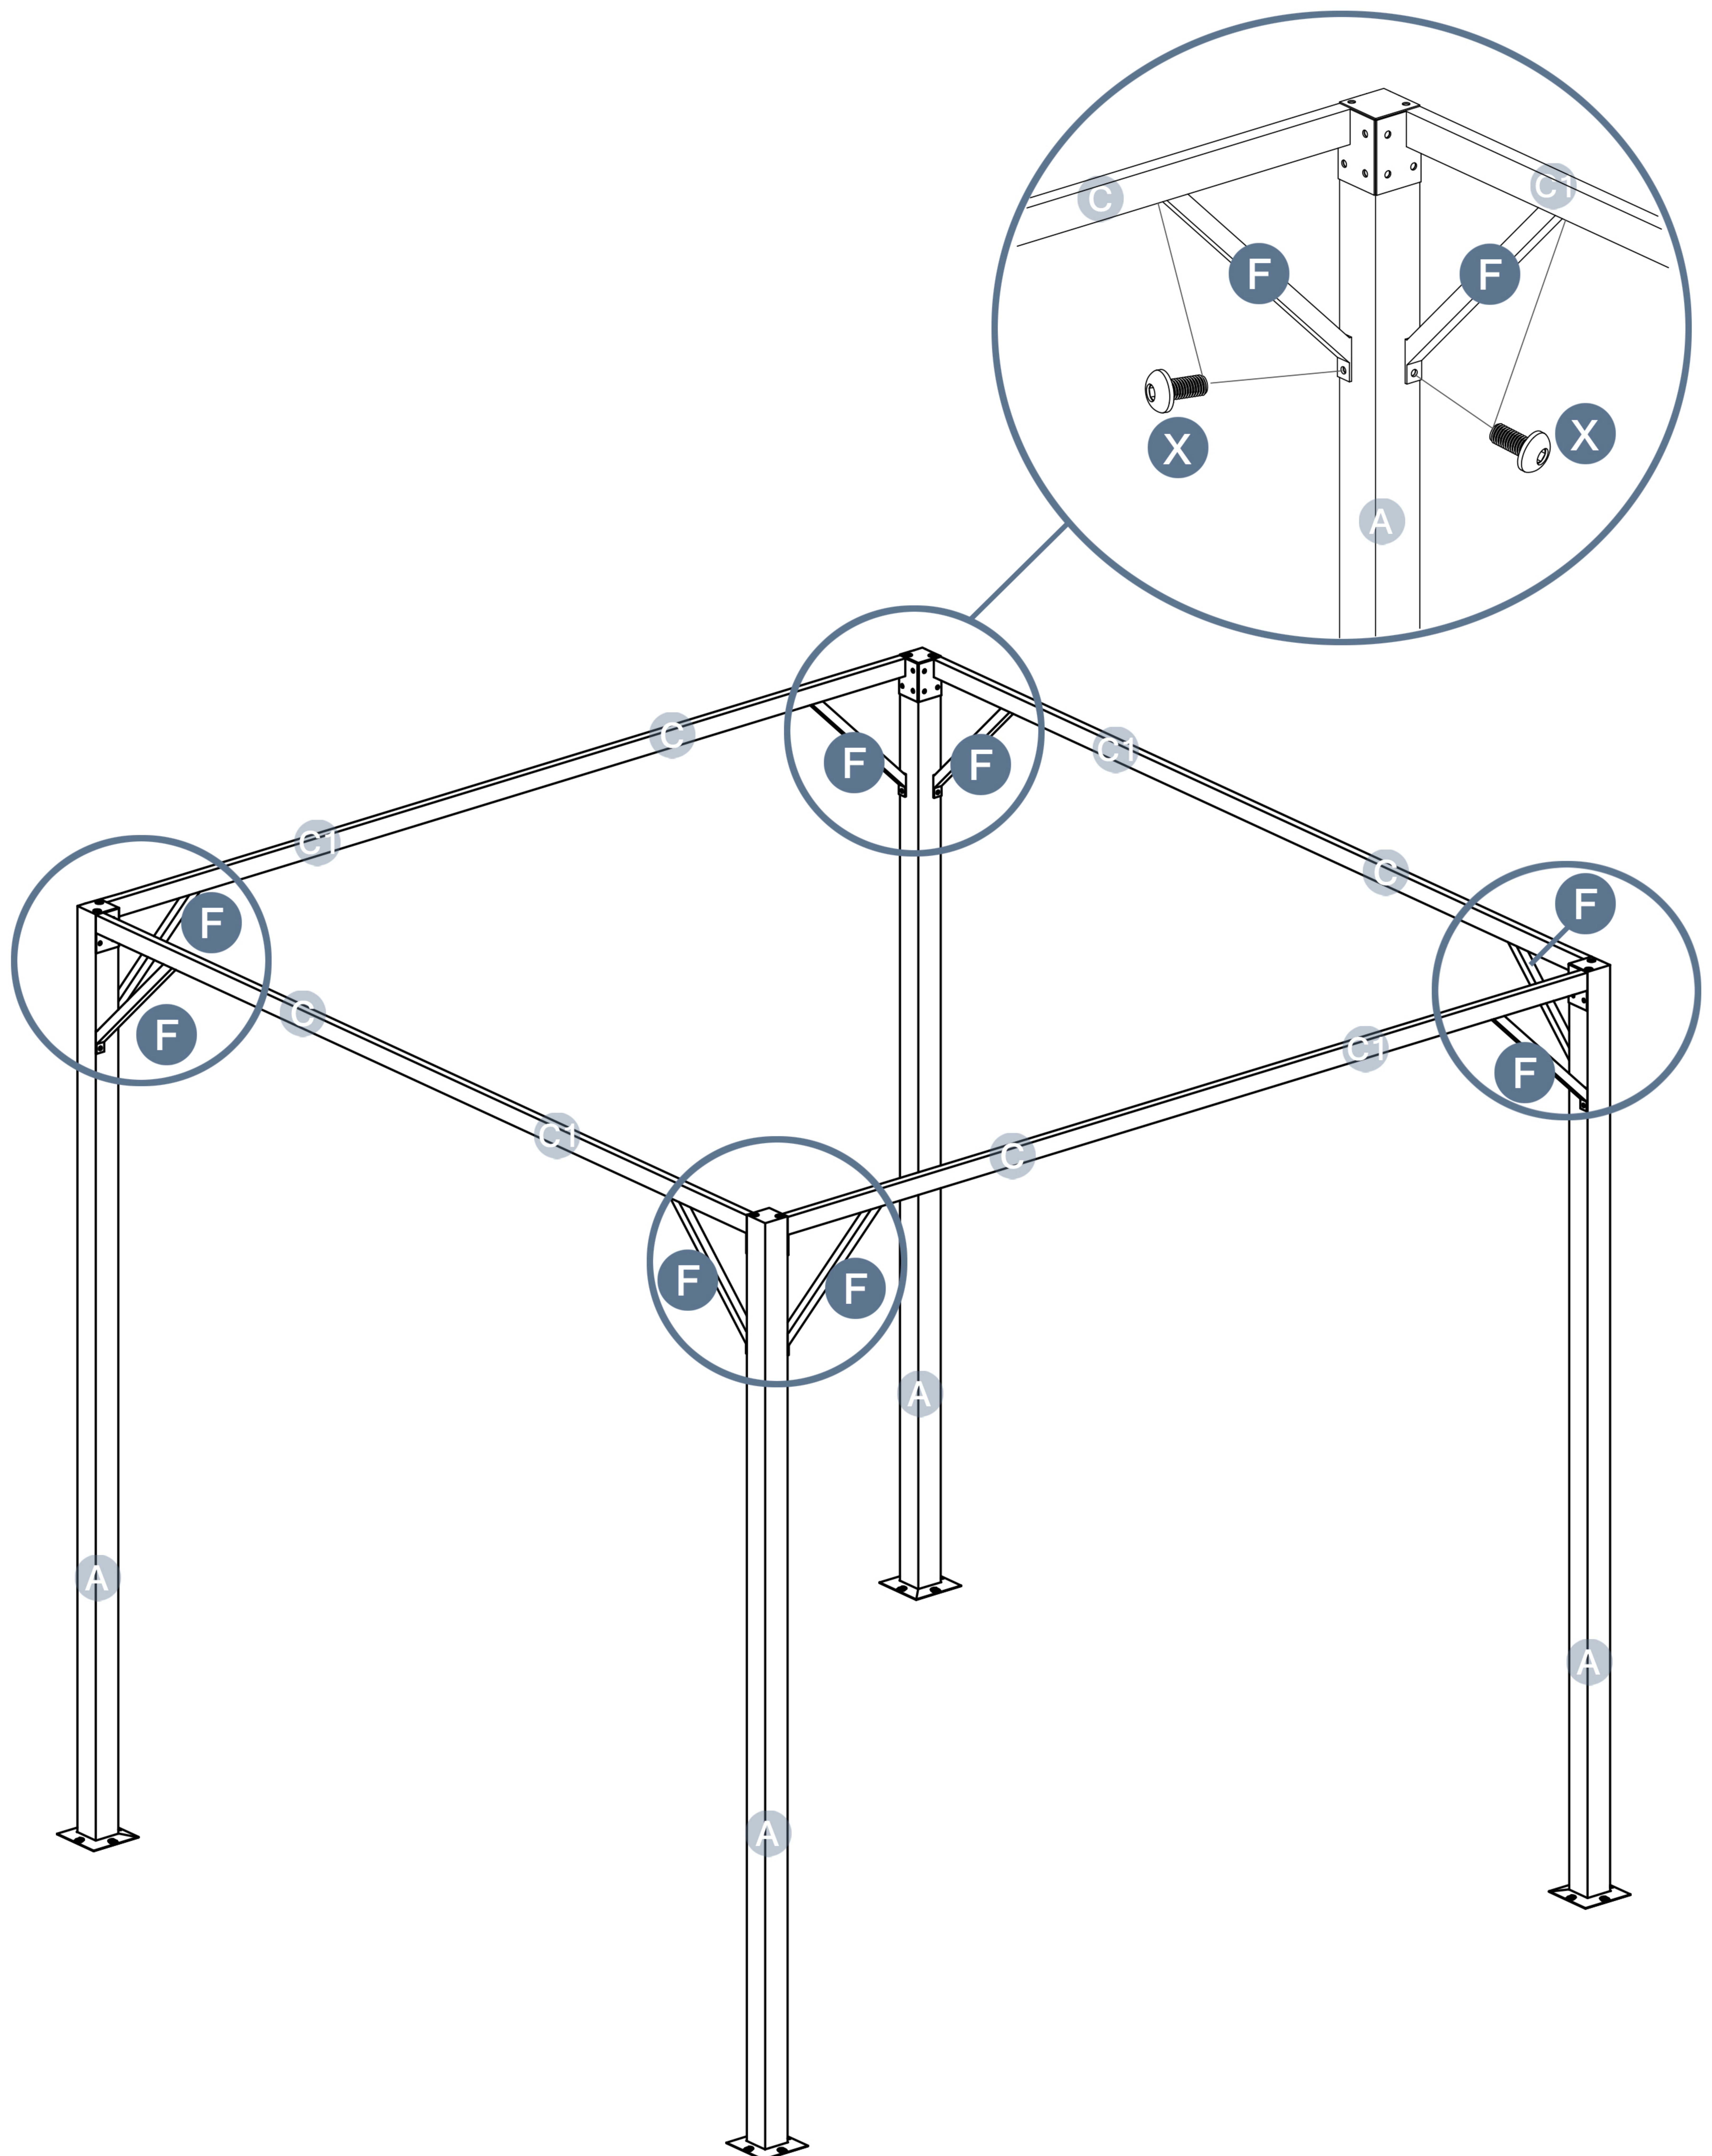




# STEP6

Parts required

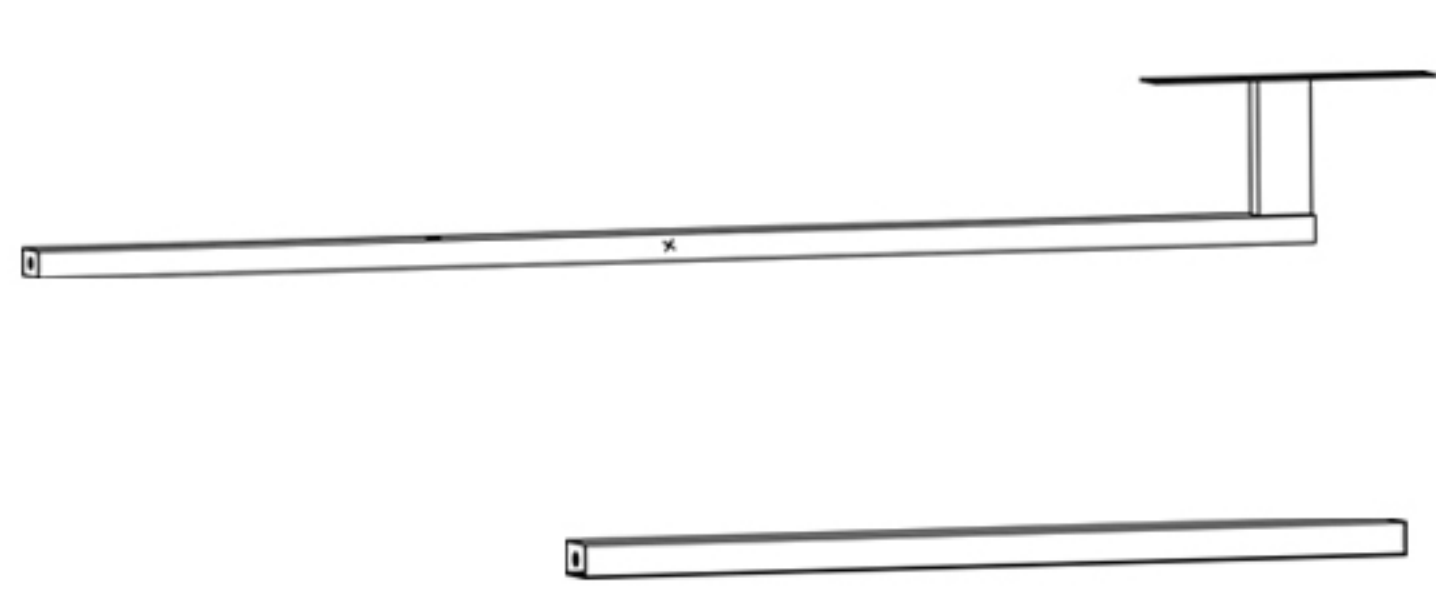


D 4pcs

D1 4pcs

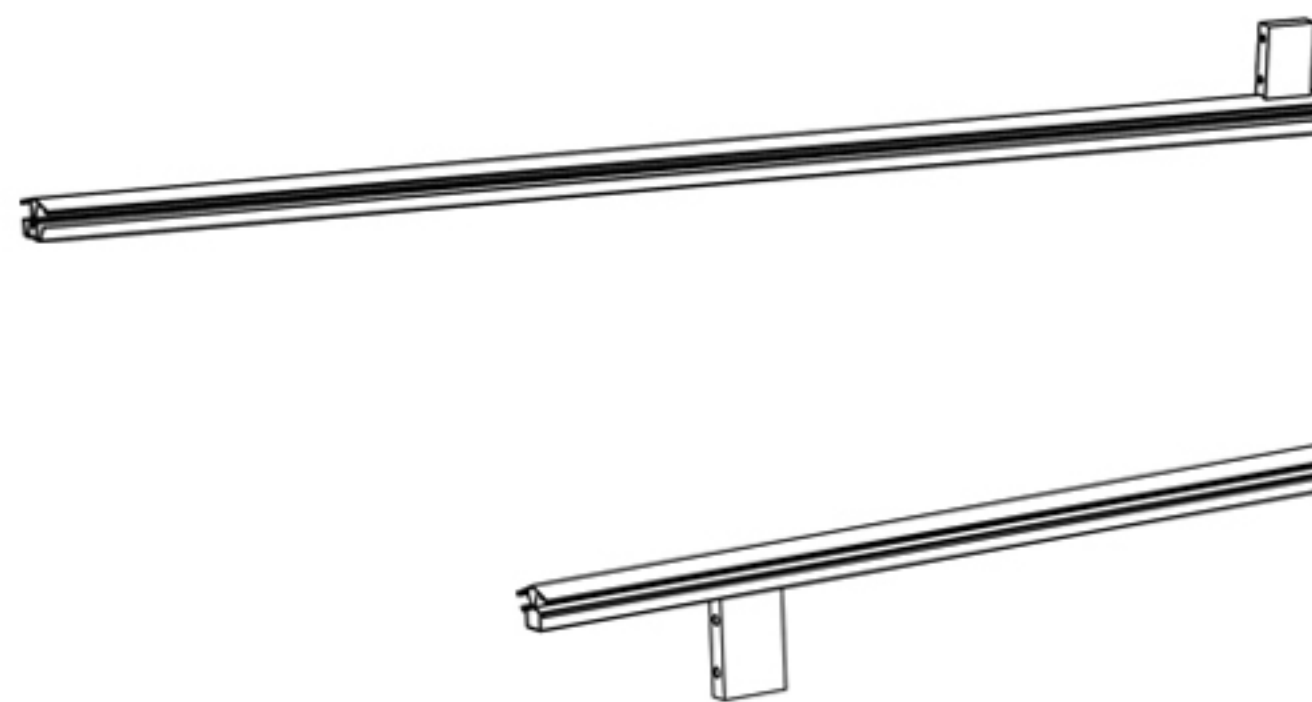


E 4pcs

E1 4pcs

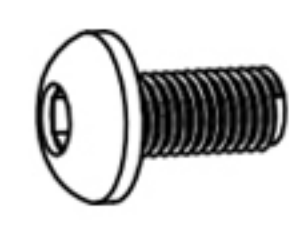

X 28pcs

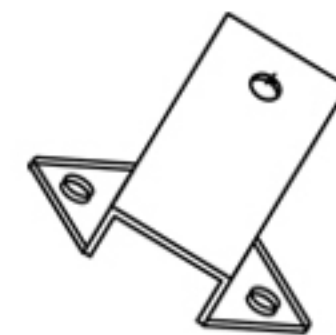

M8 4pcs




1



2




3

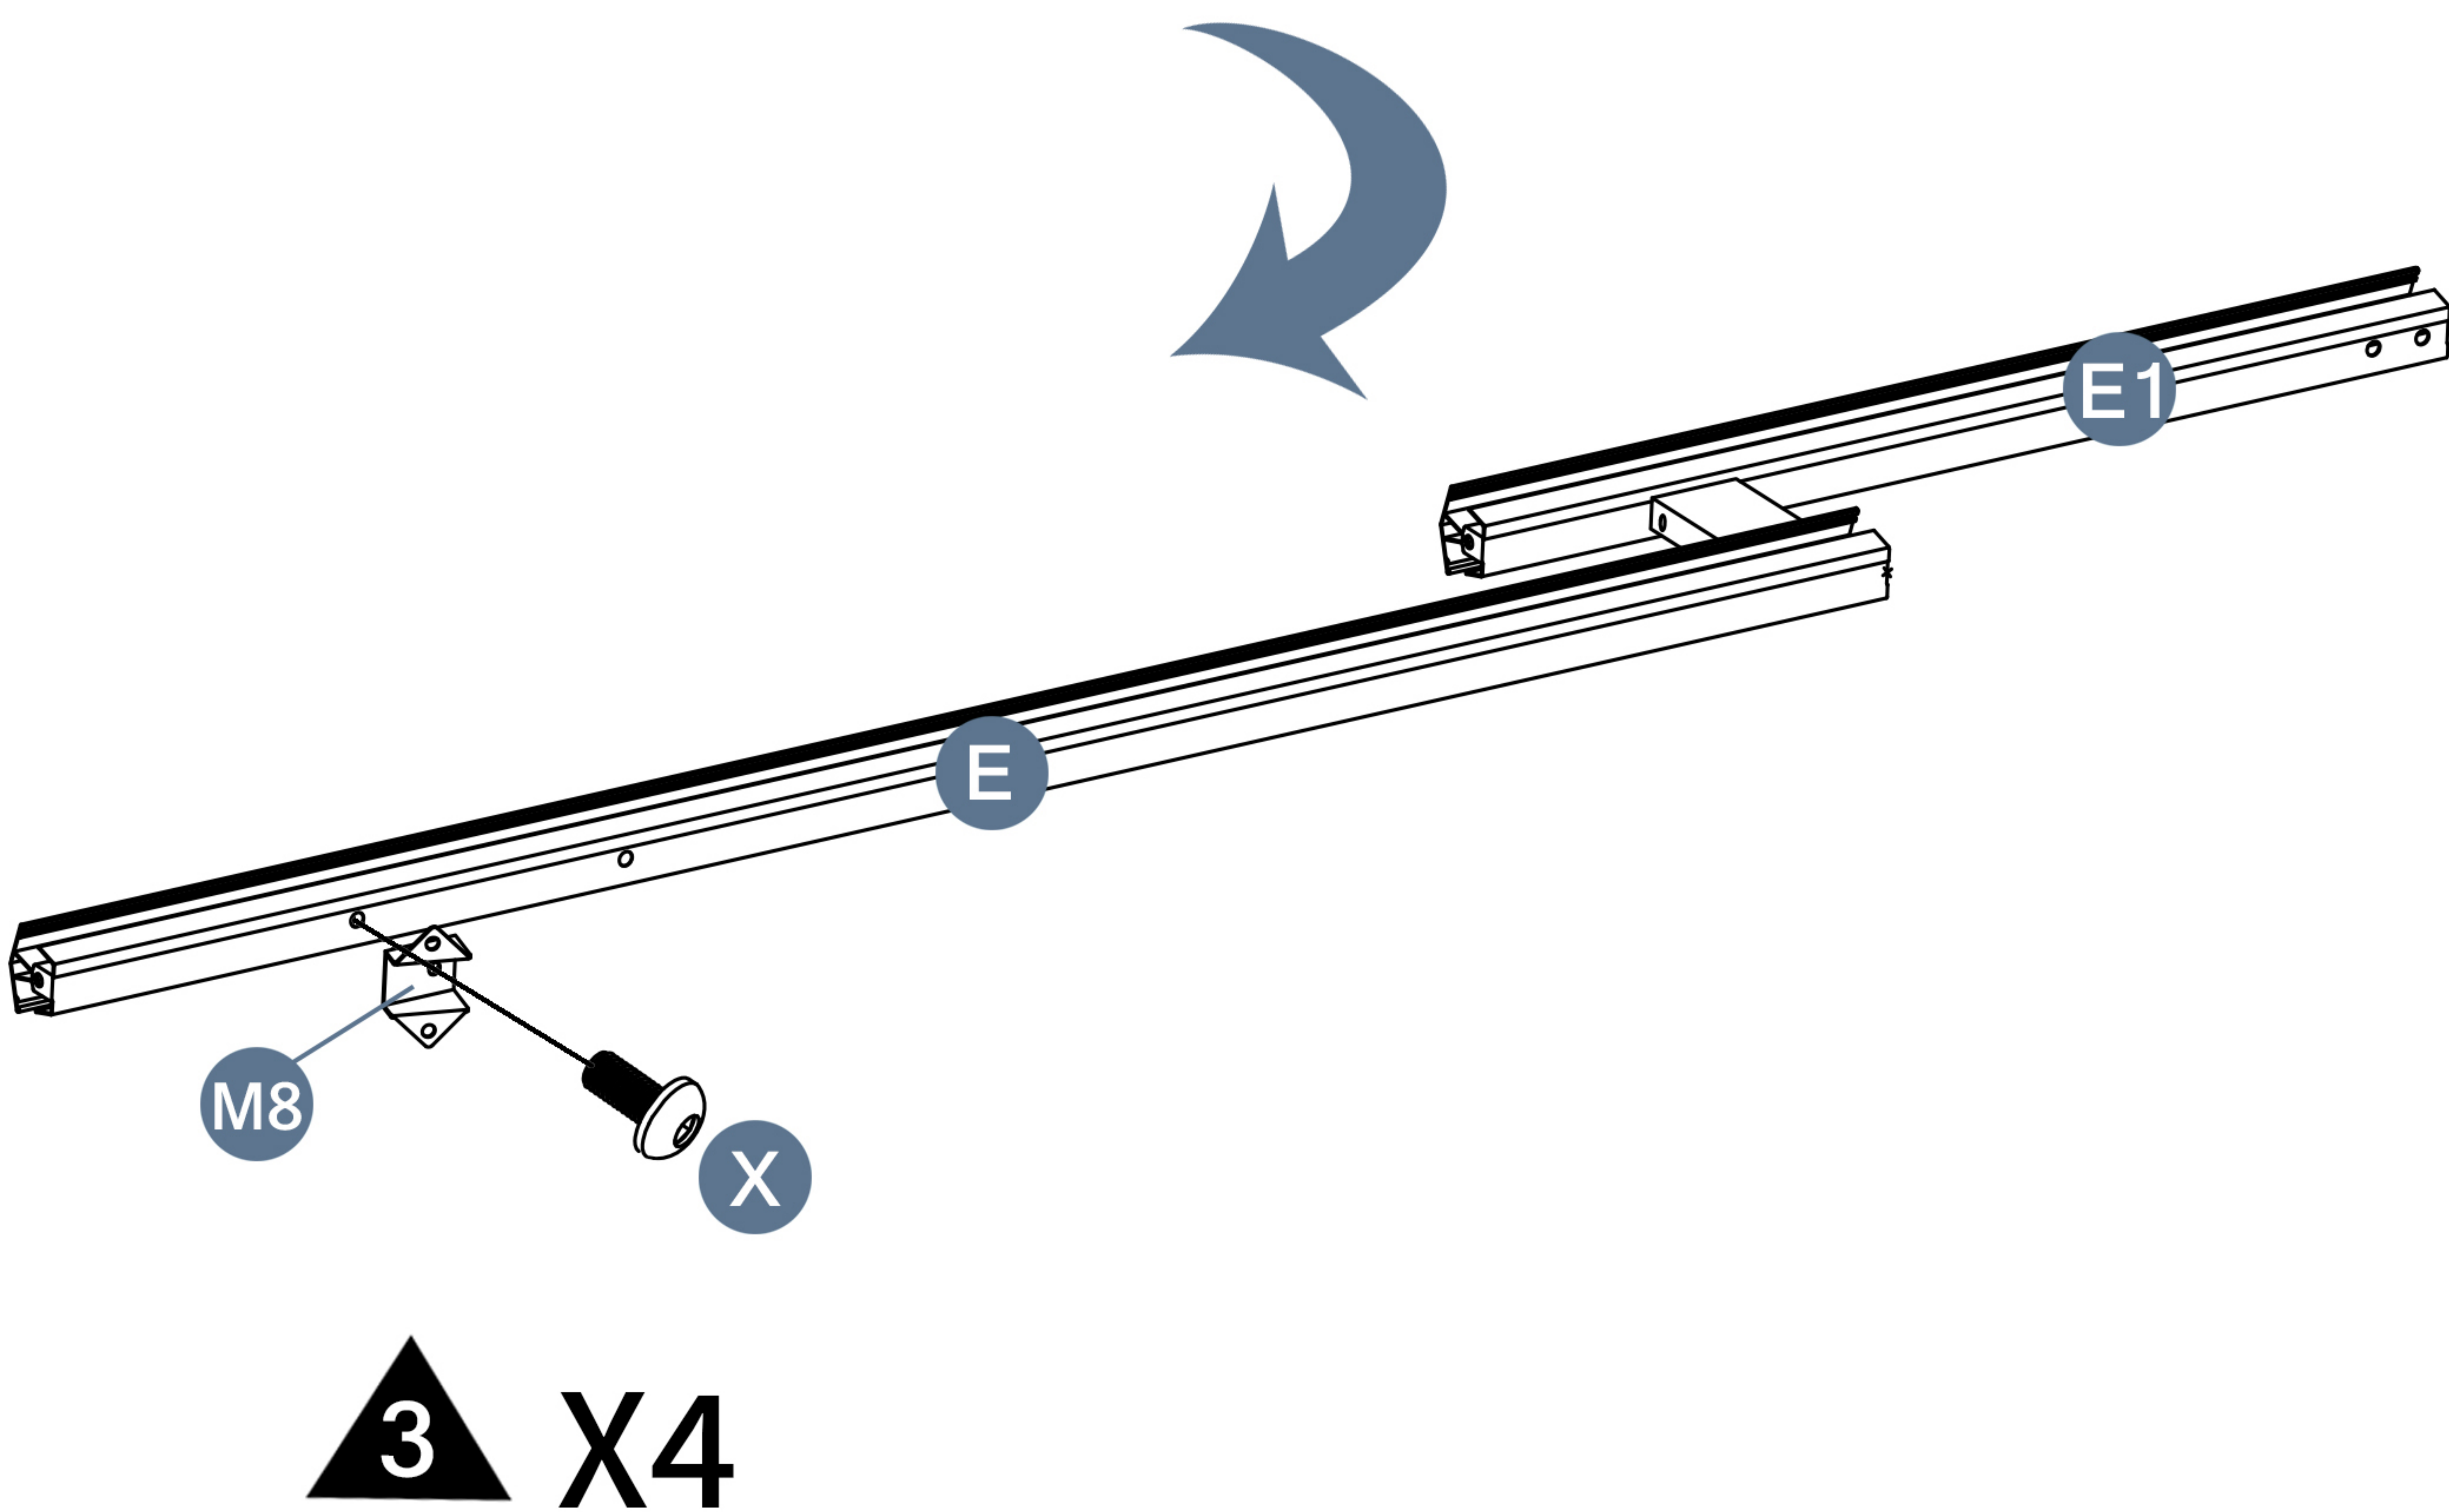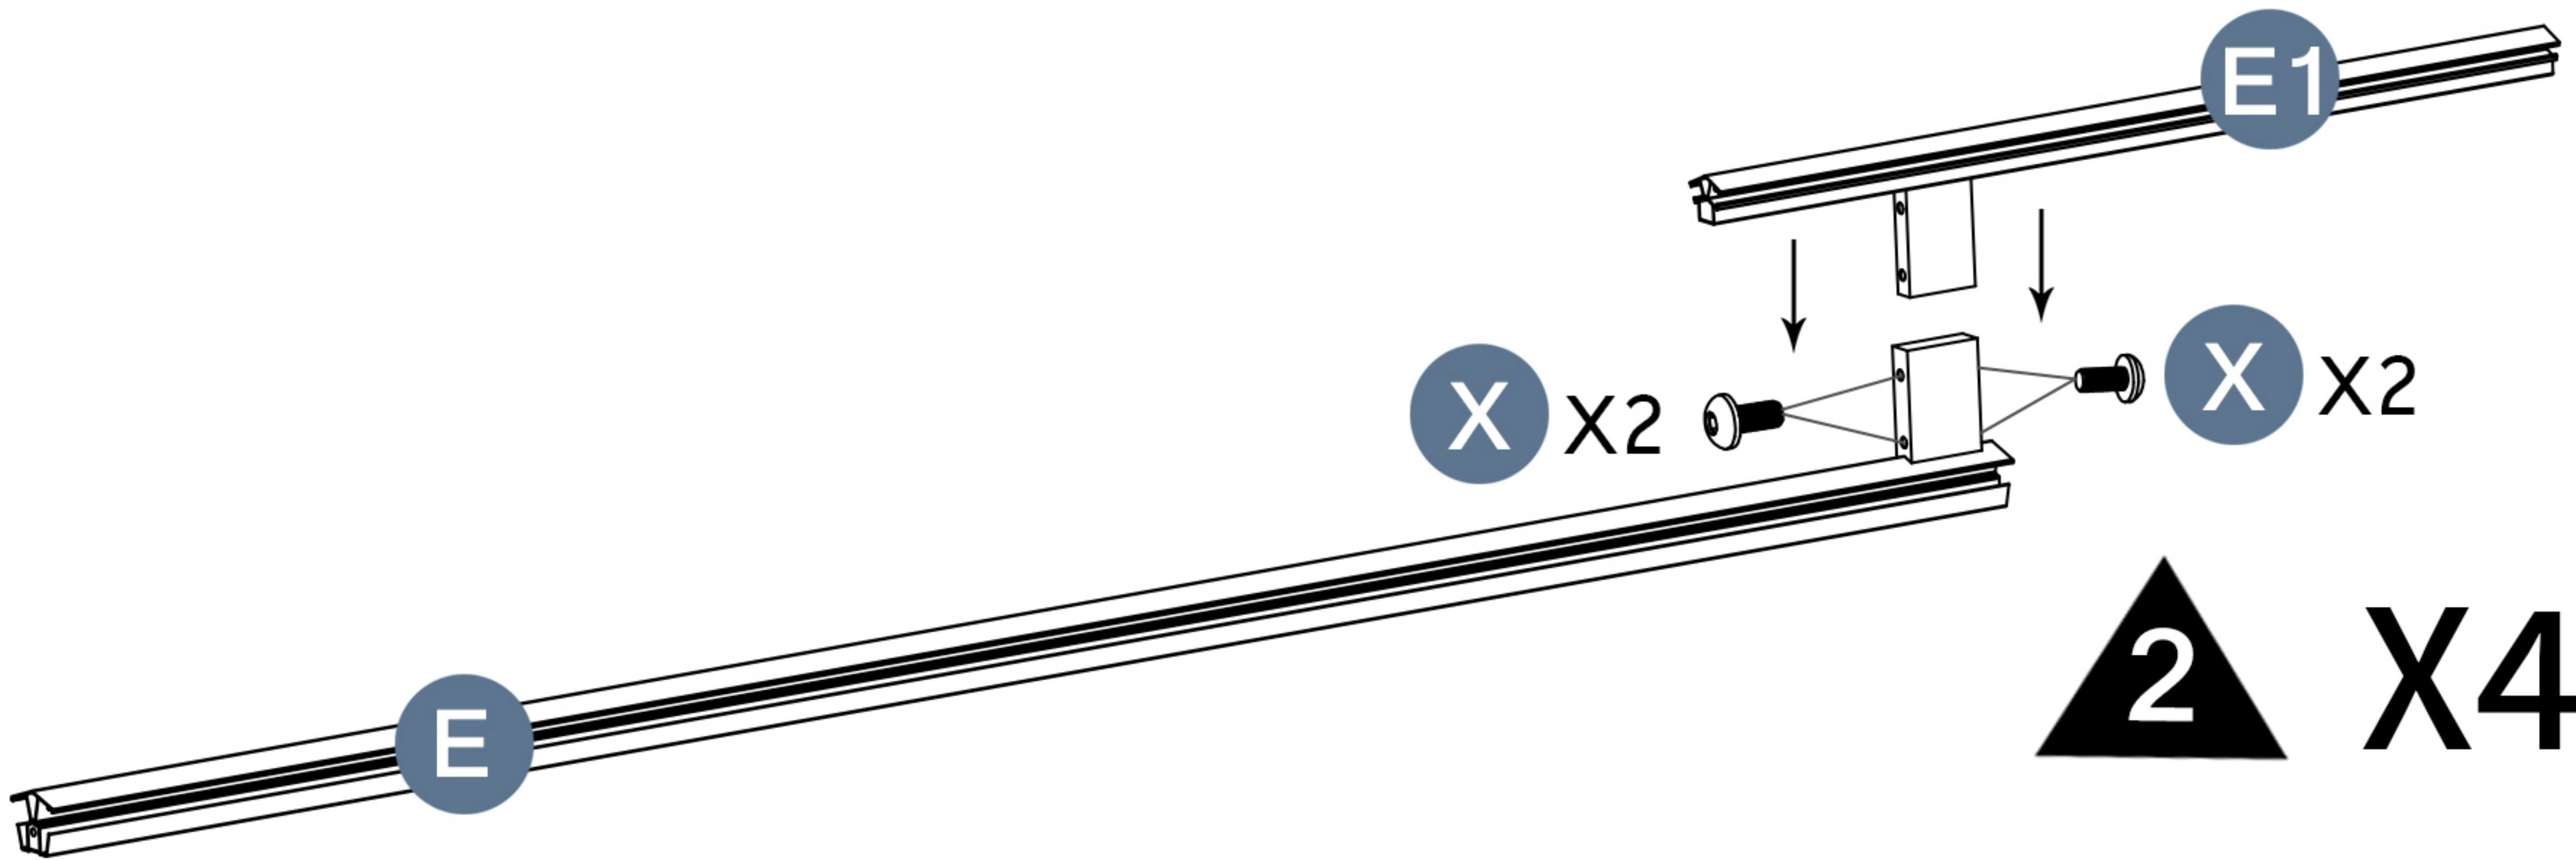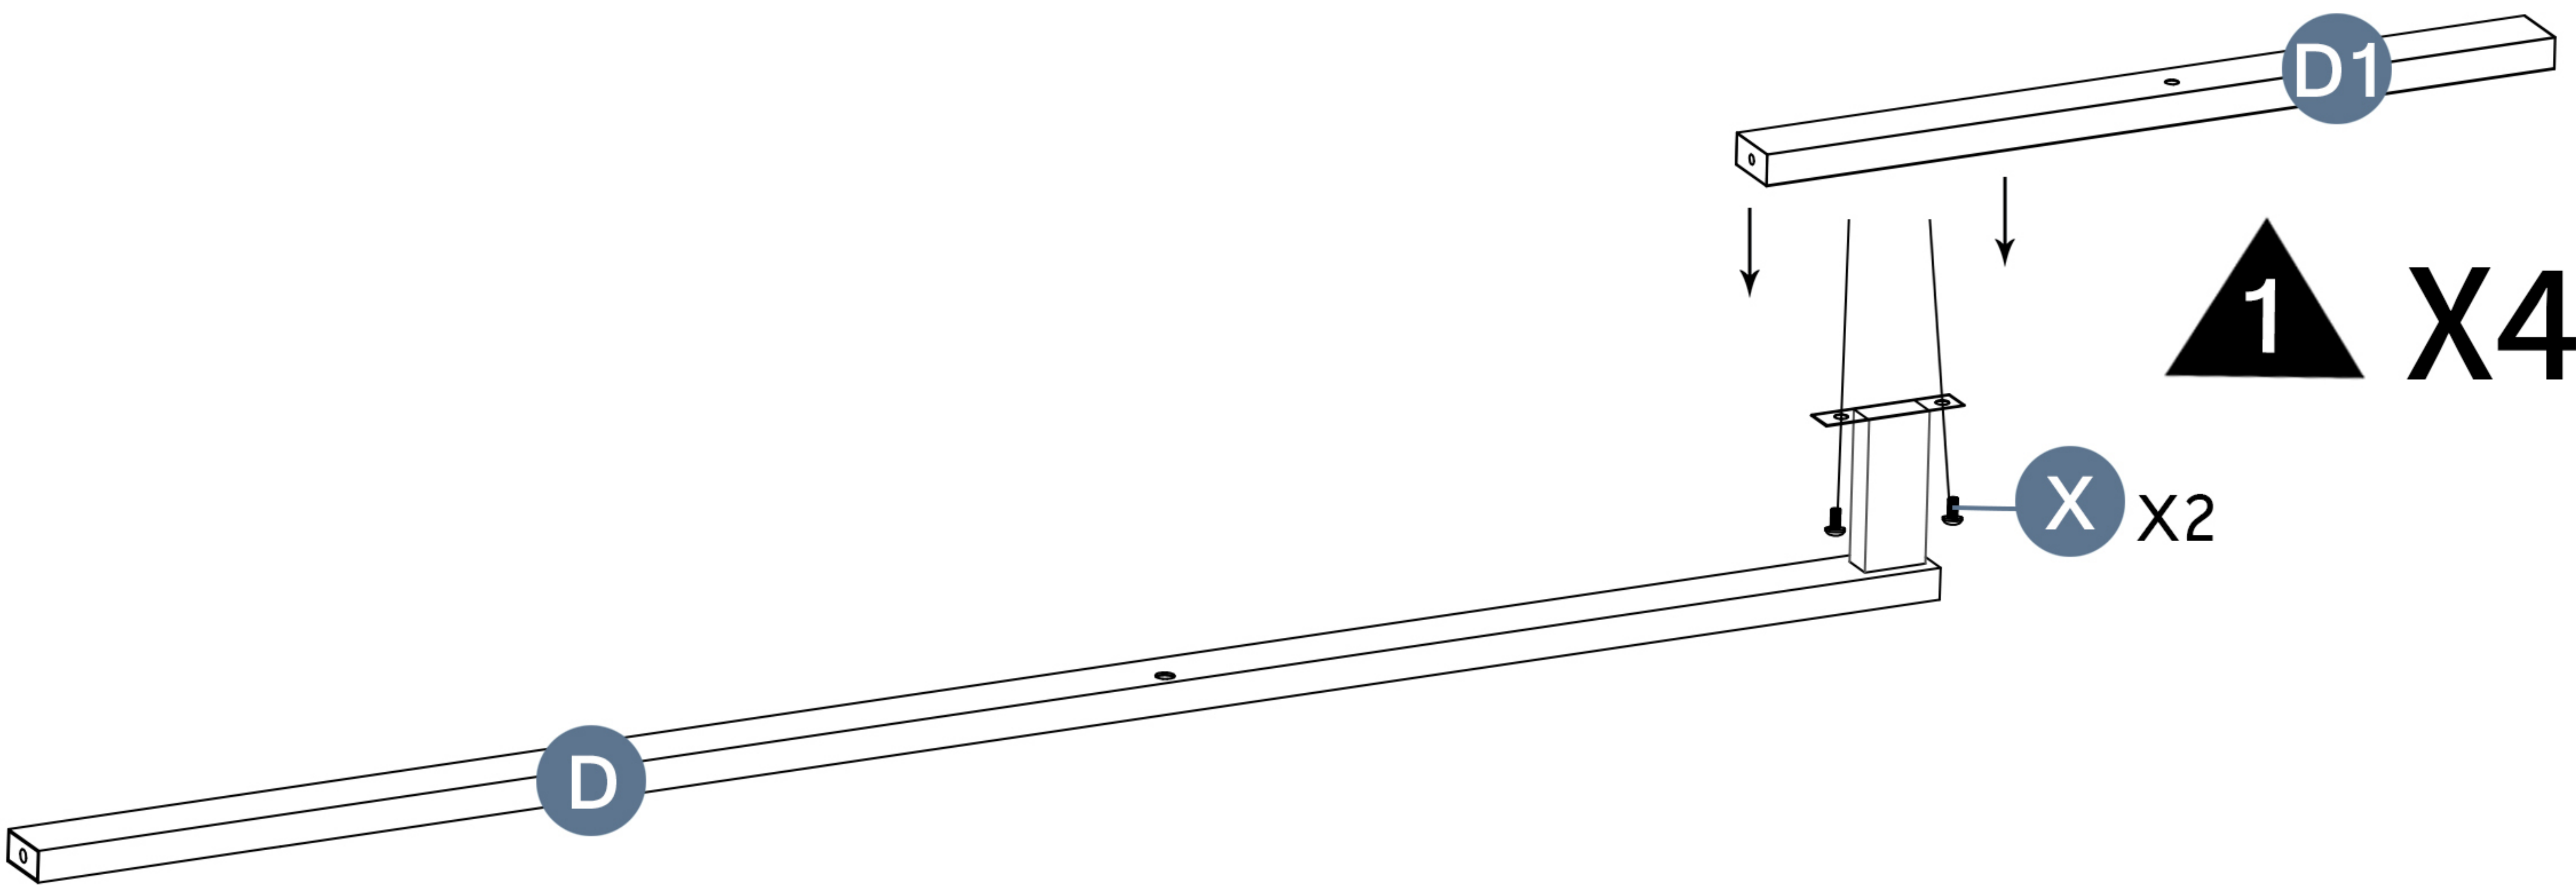




# STEP 7



Parts required

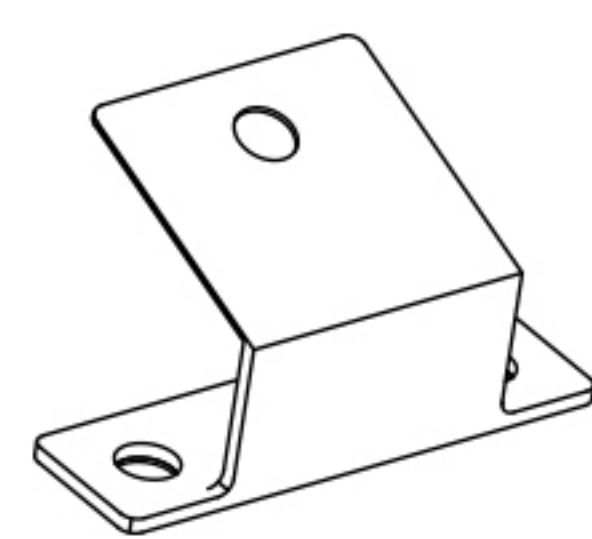

M6 4pcs

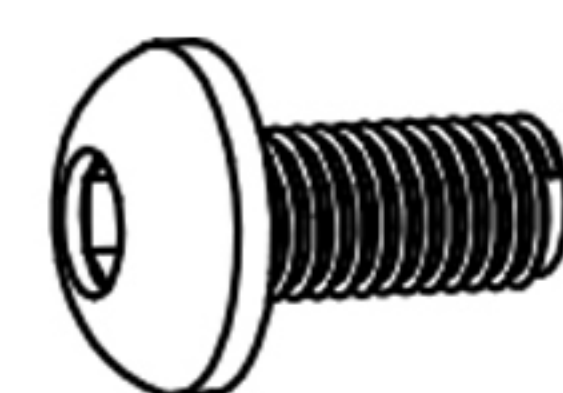


X 8pcs

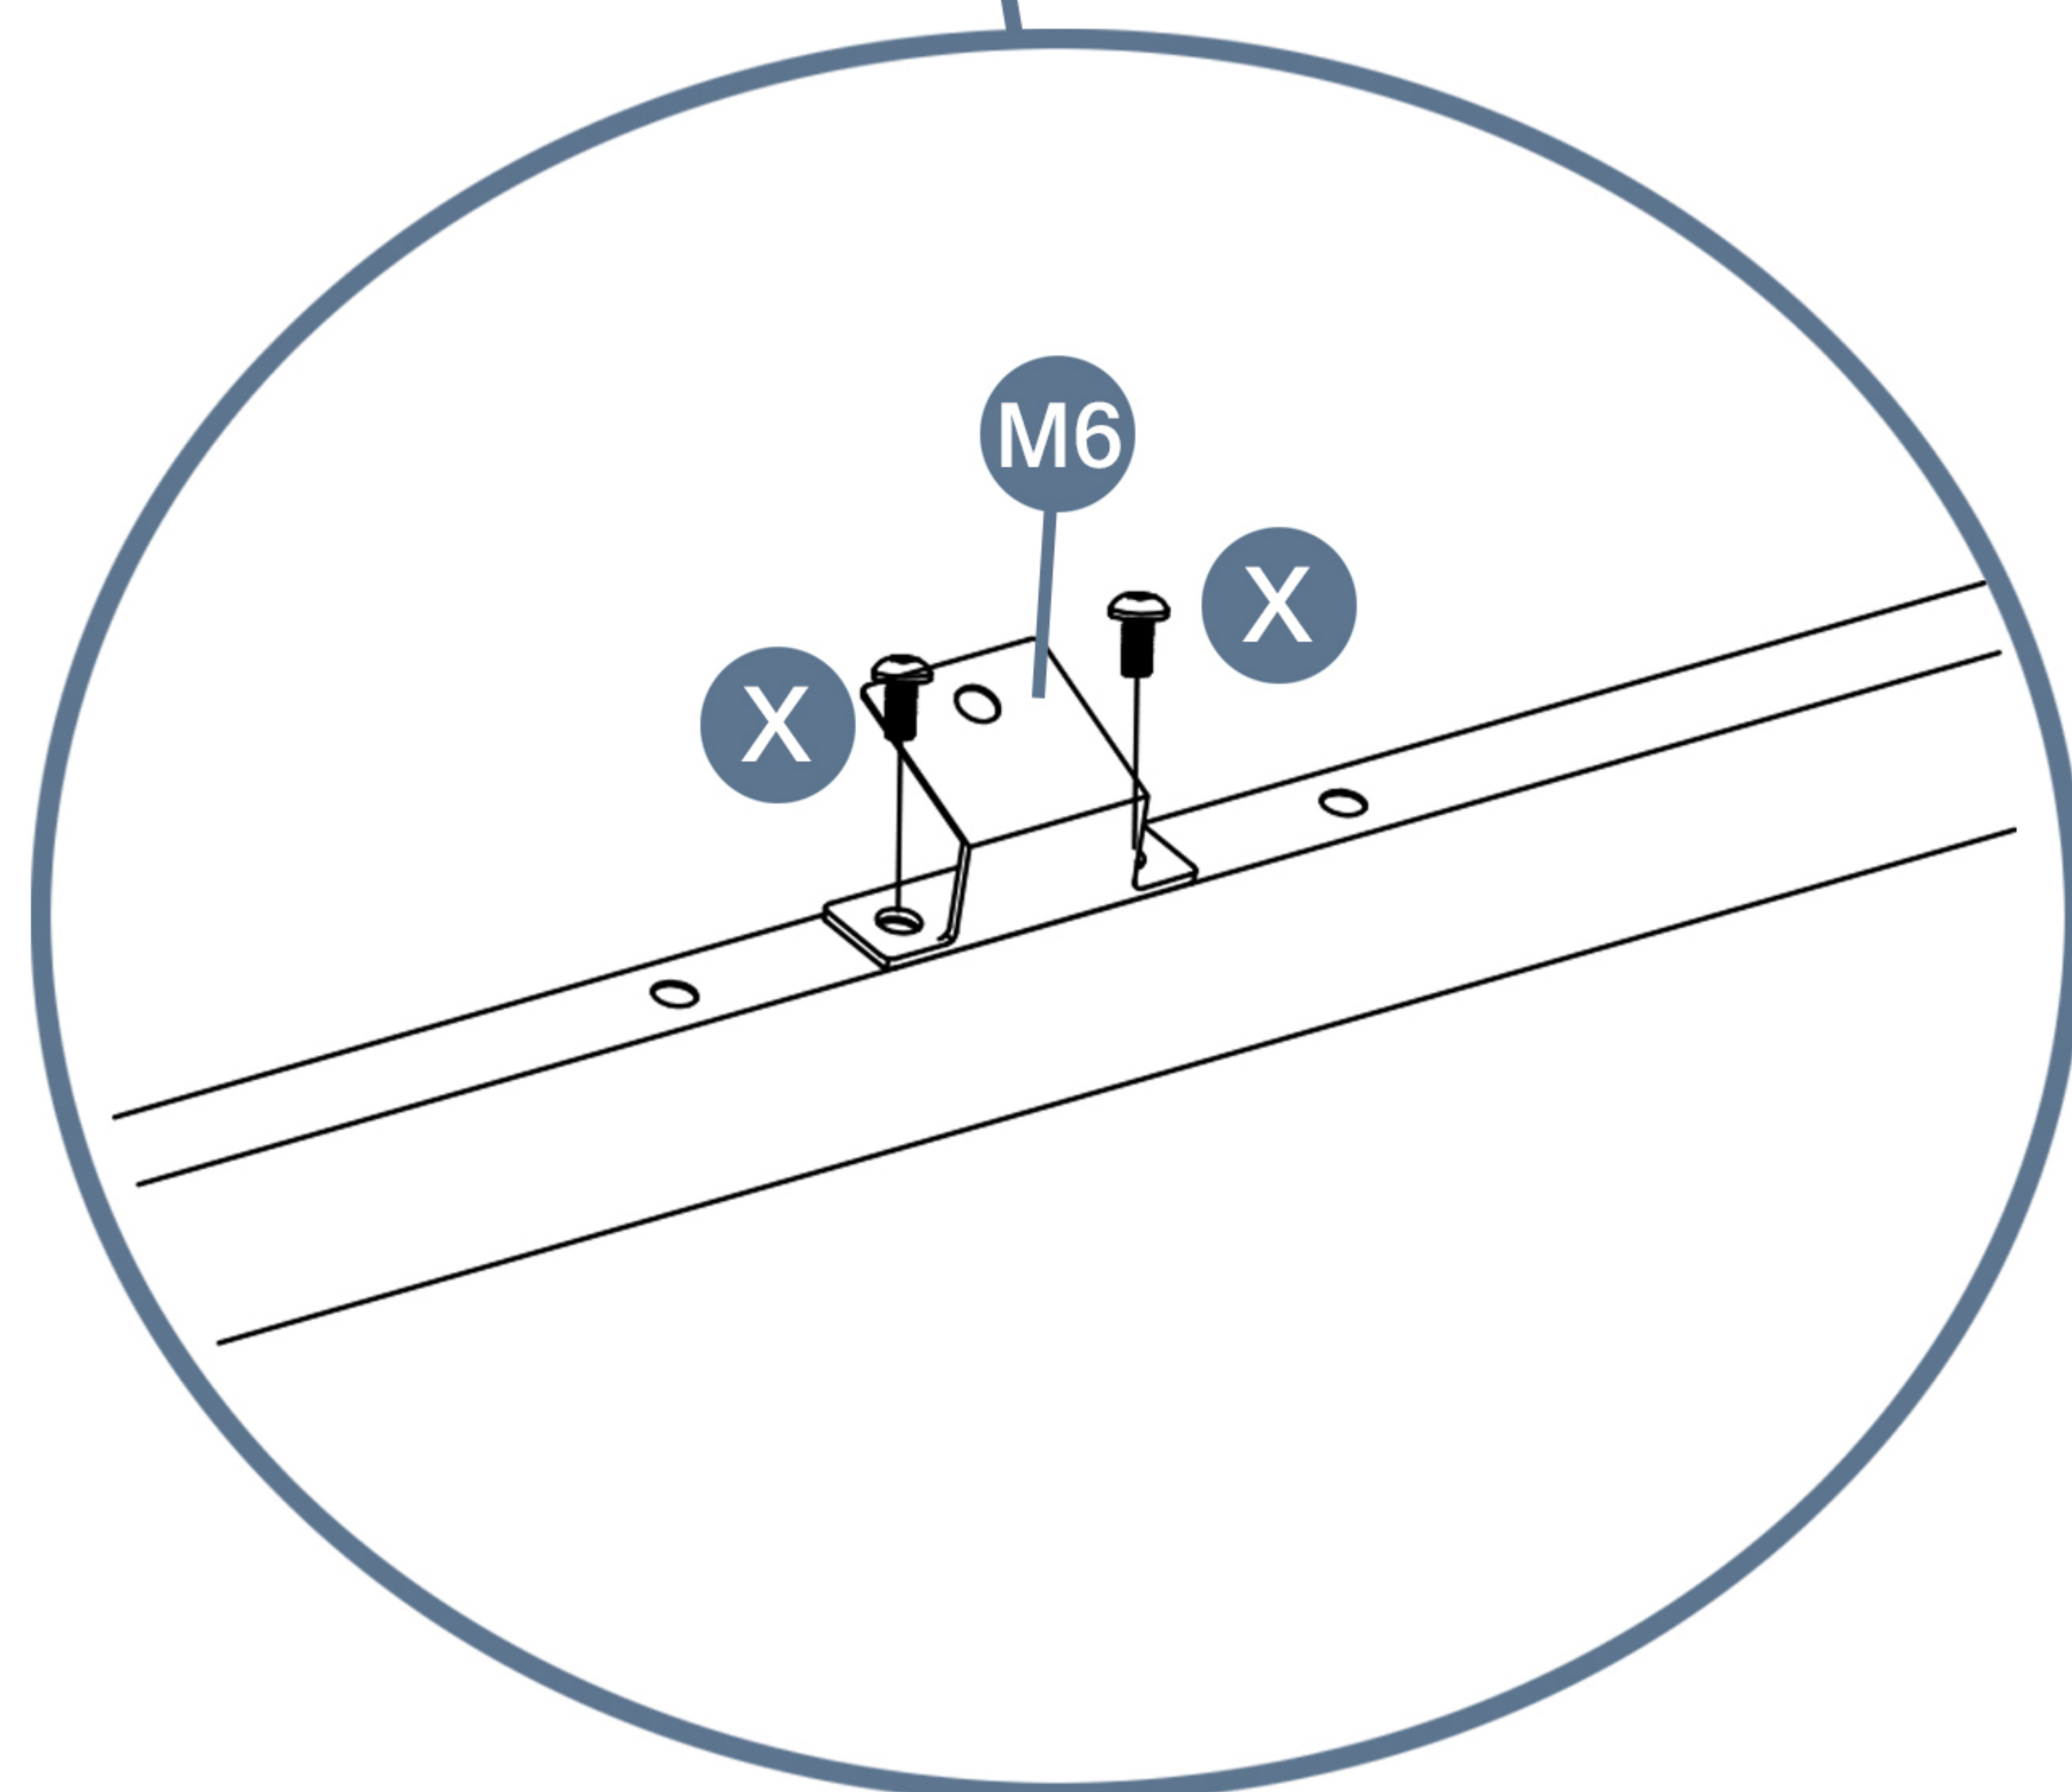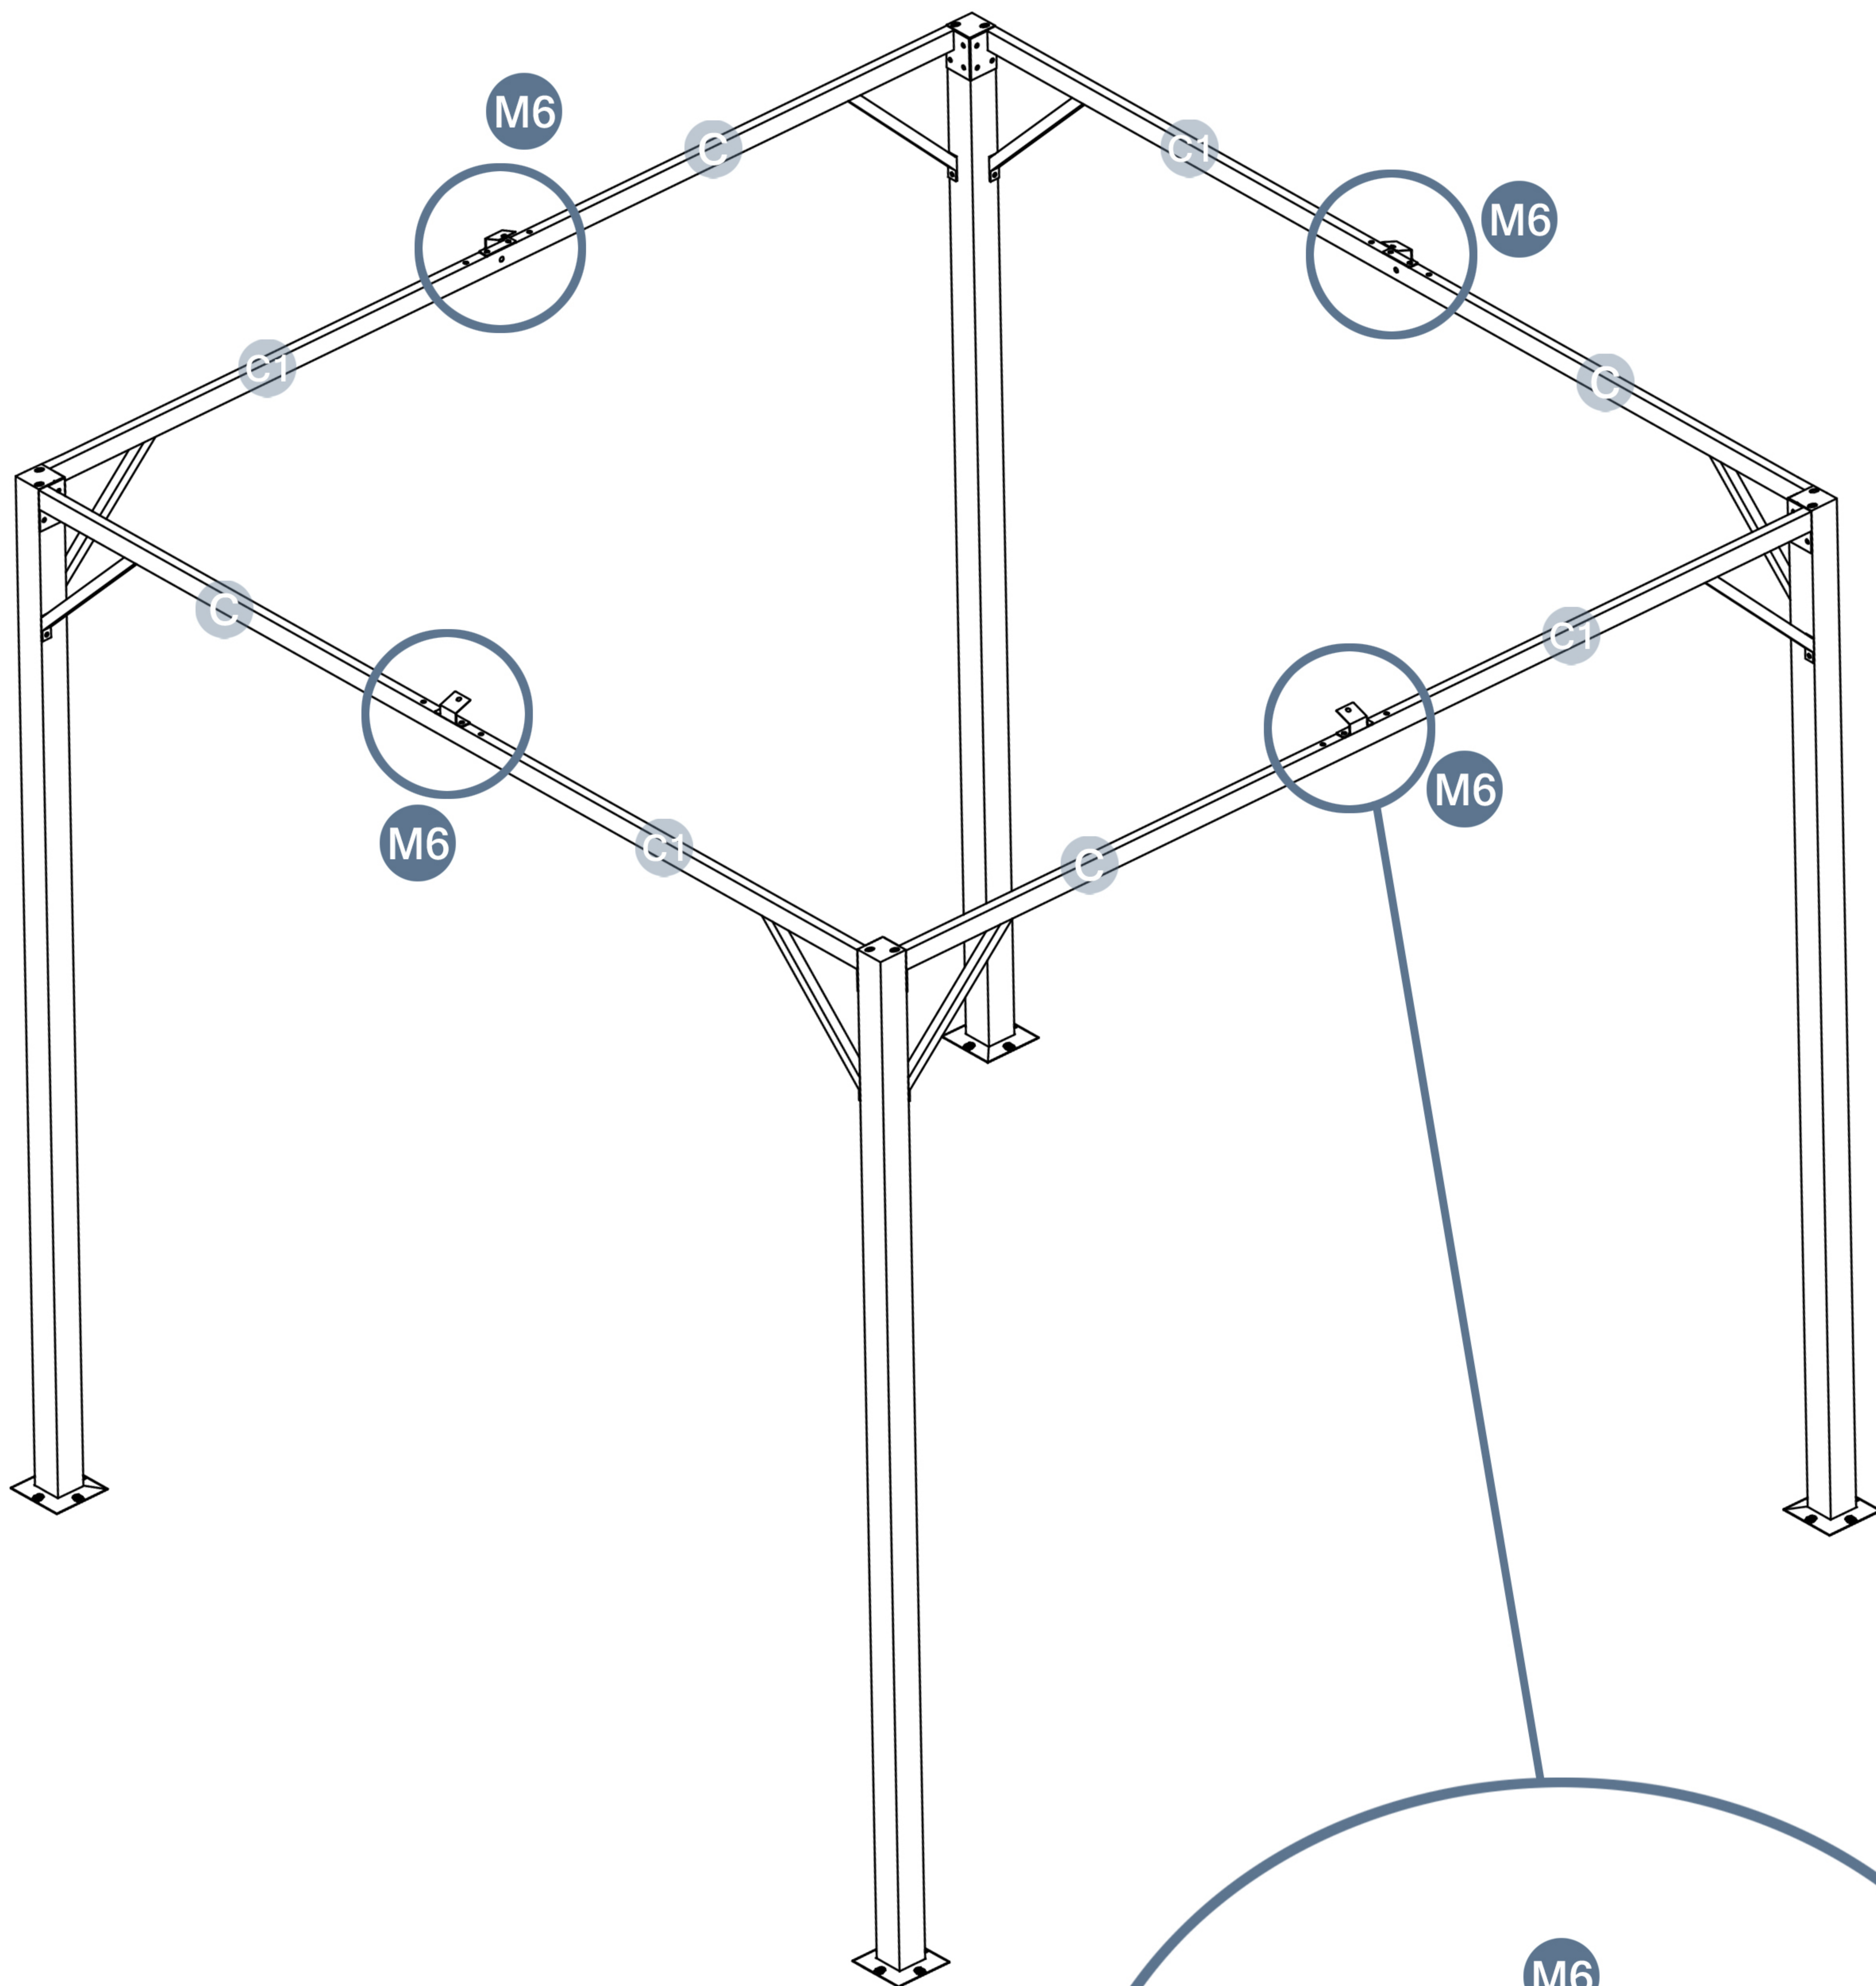




# STEP8

Parts required

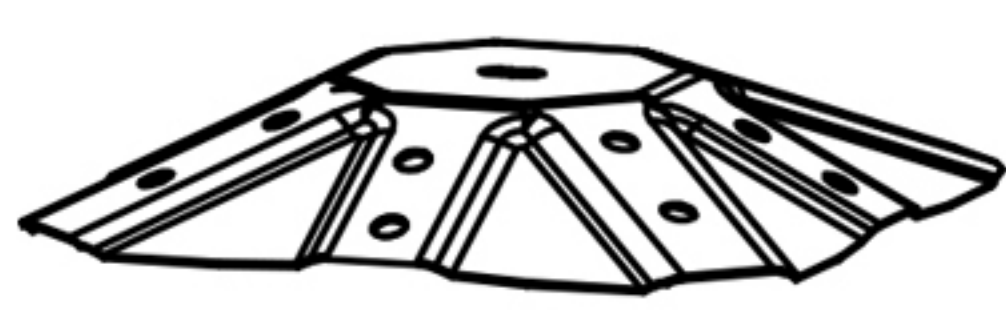


K1 1pcs

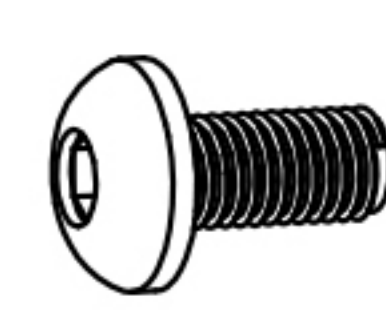



X 8pcs

1 → 2

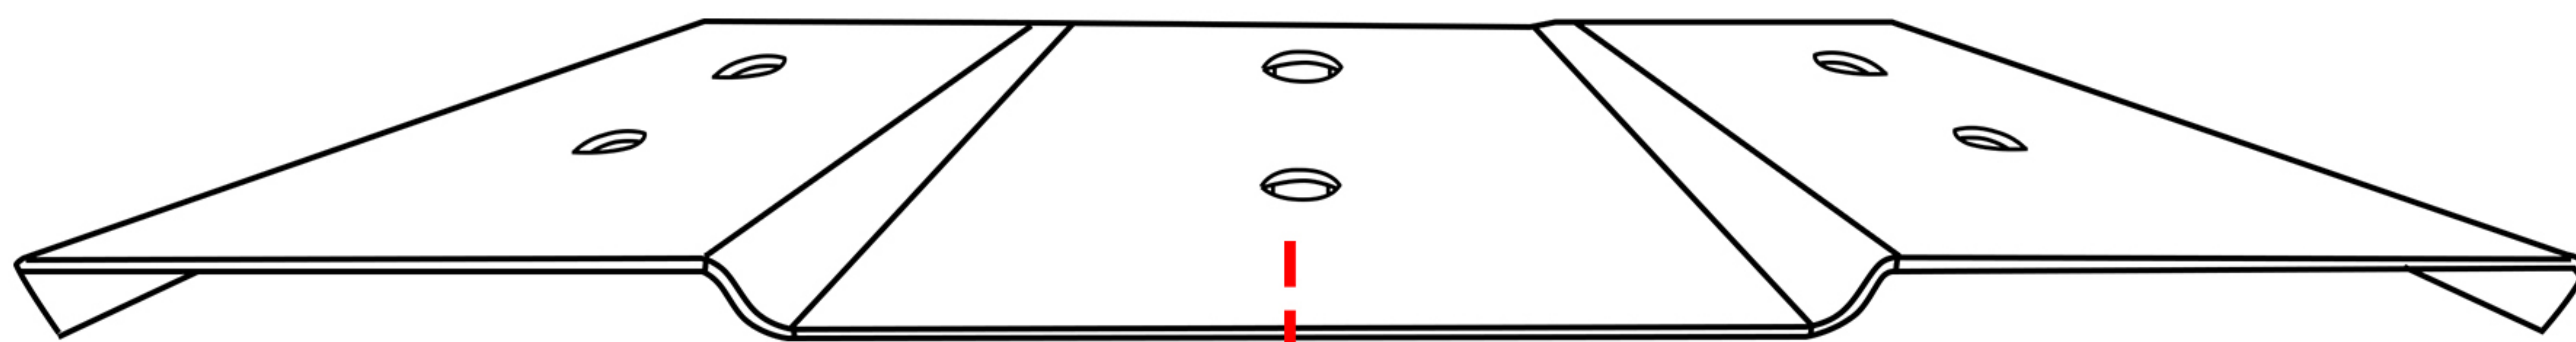

concave side of the top plate


Placed to D1 tube , then fix by X

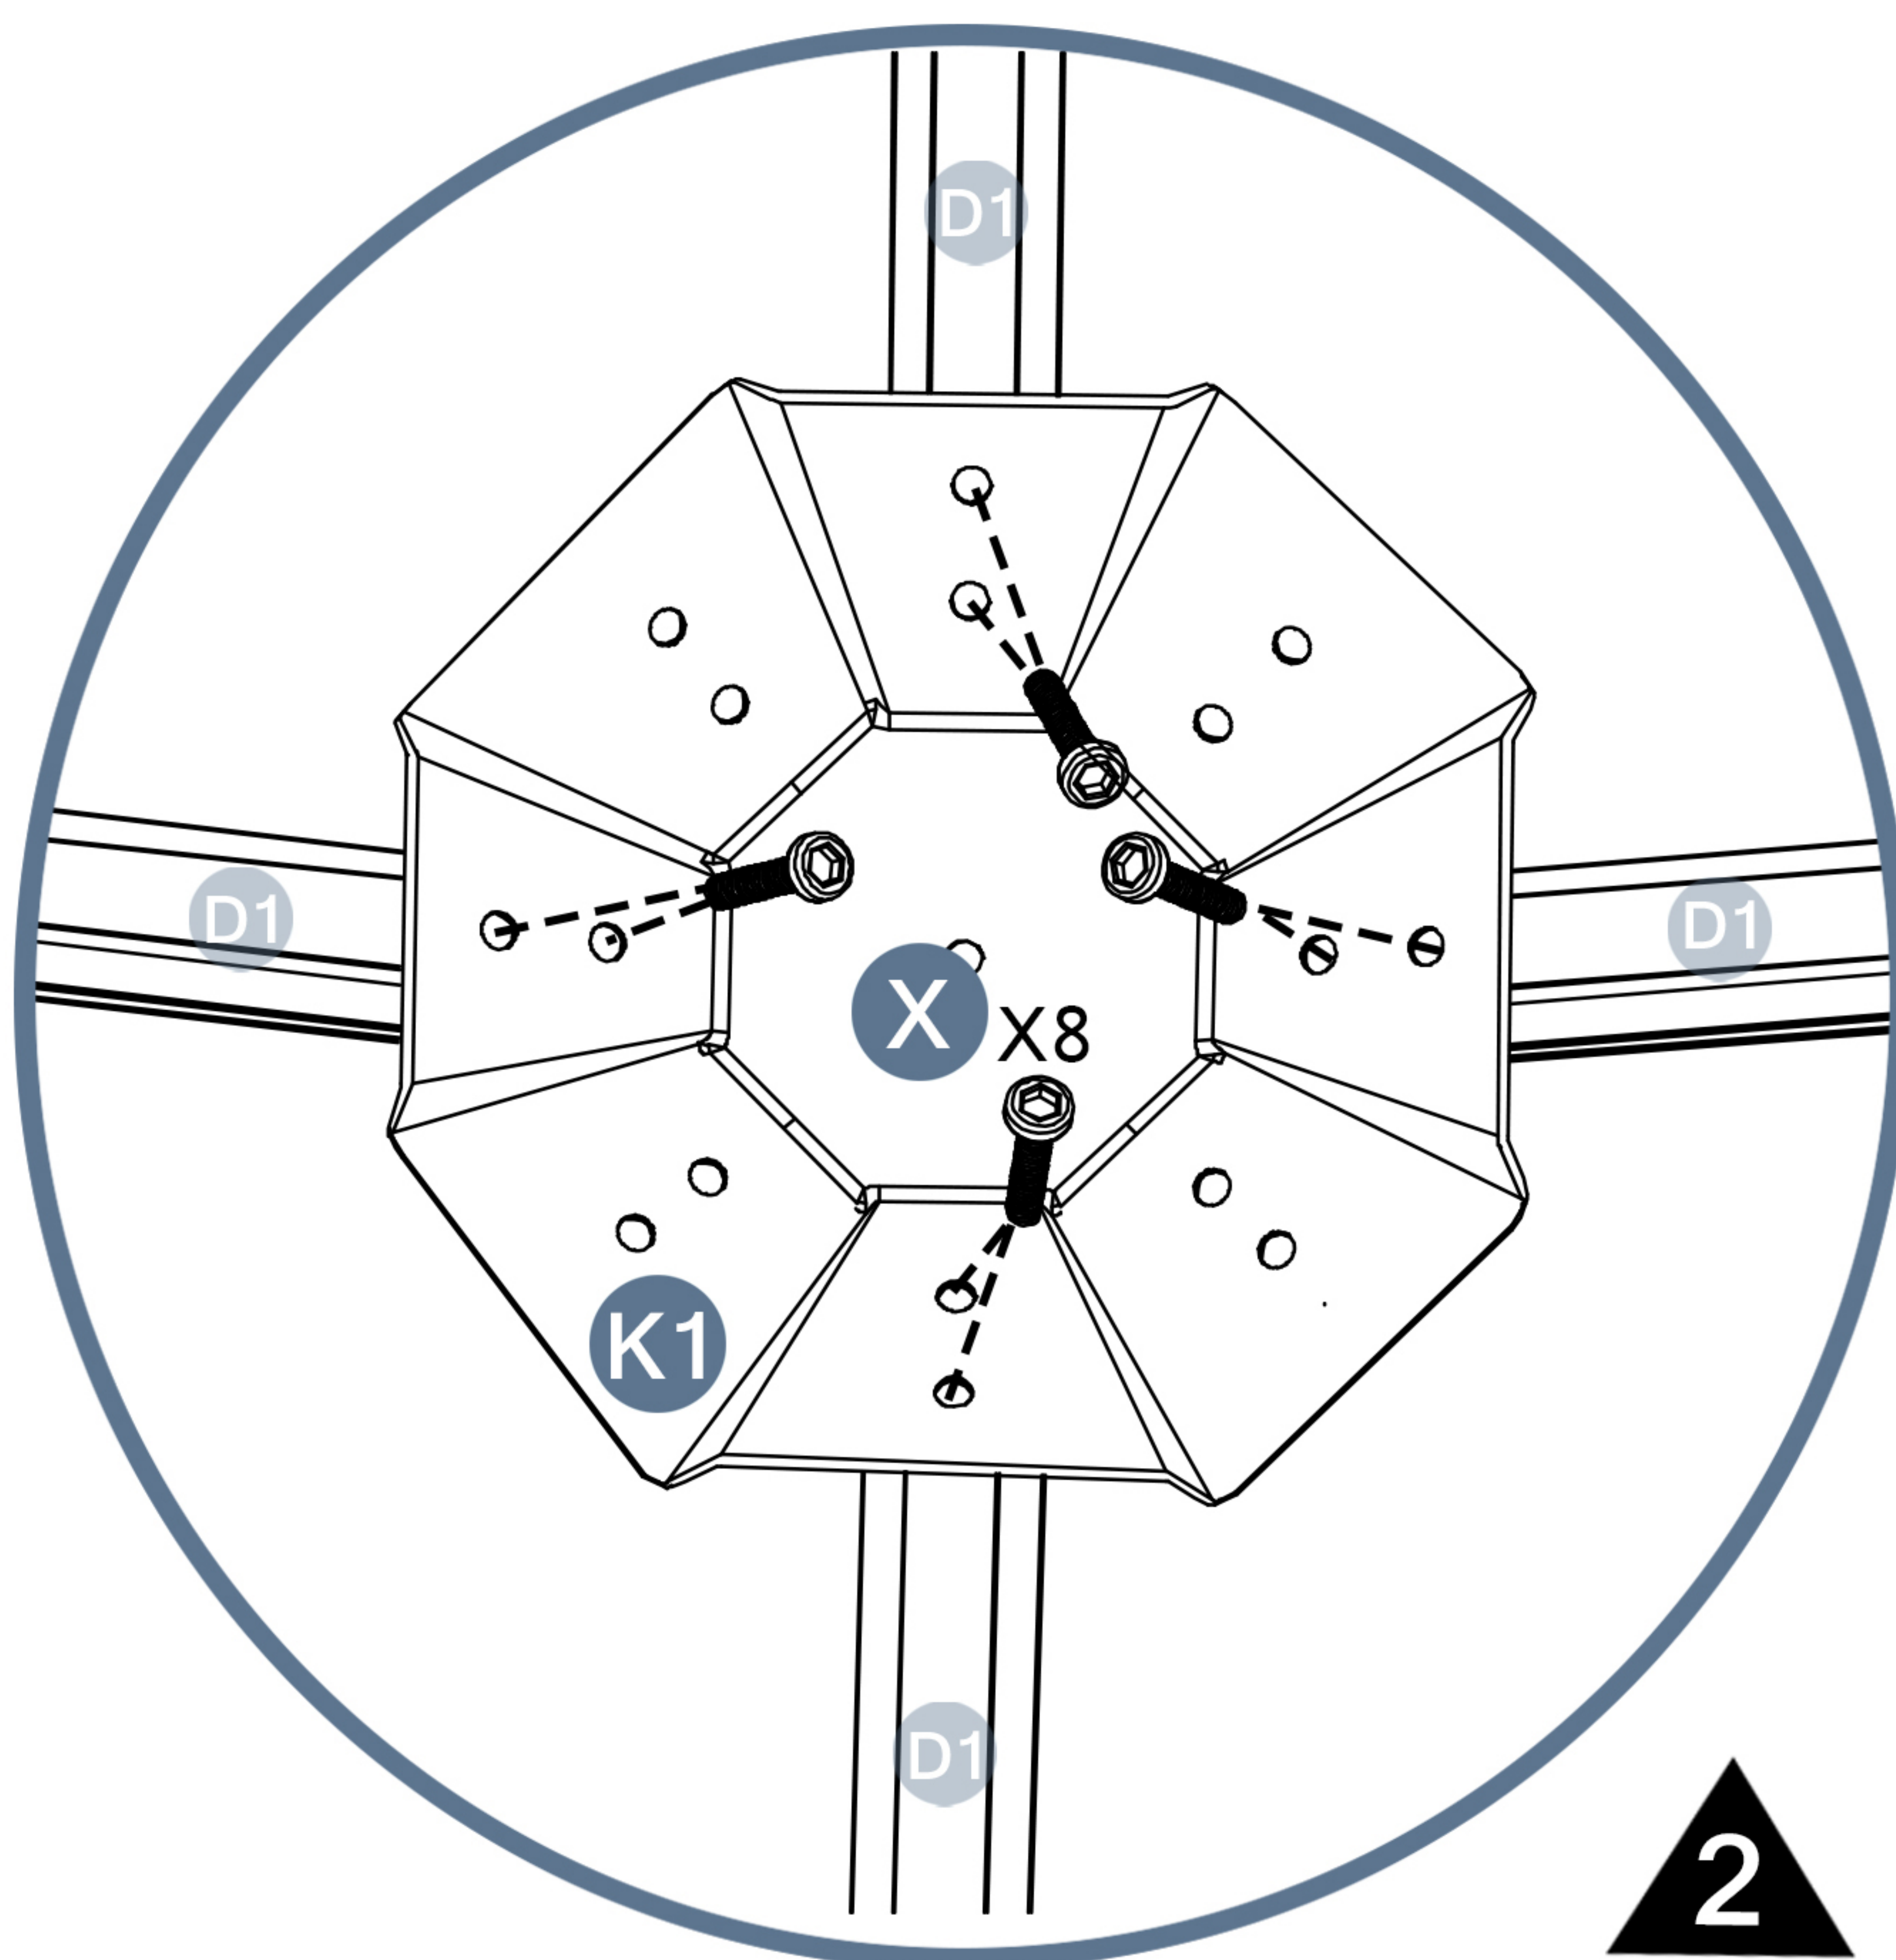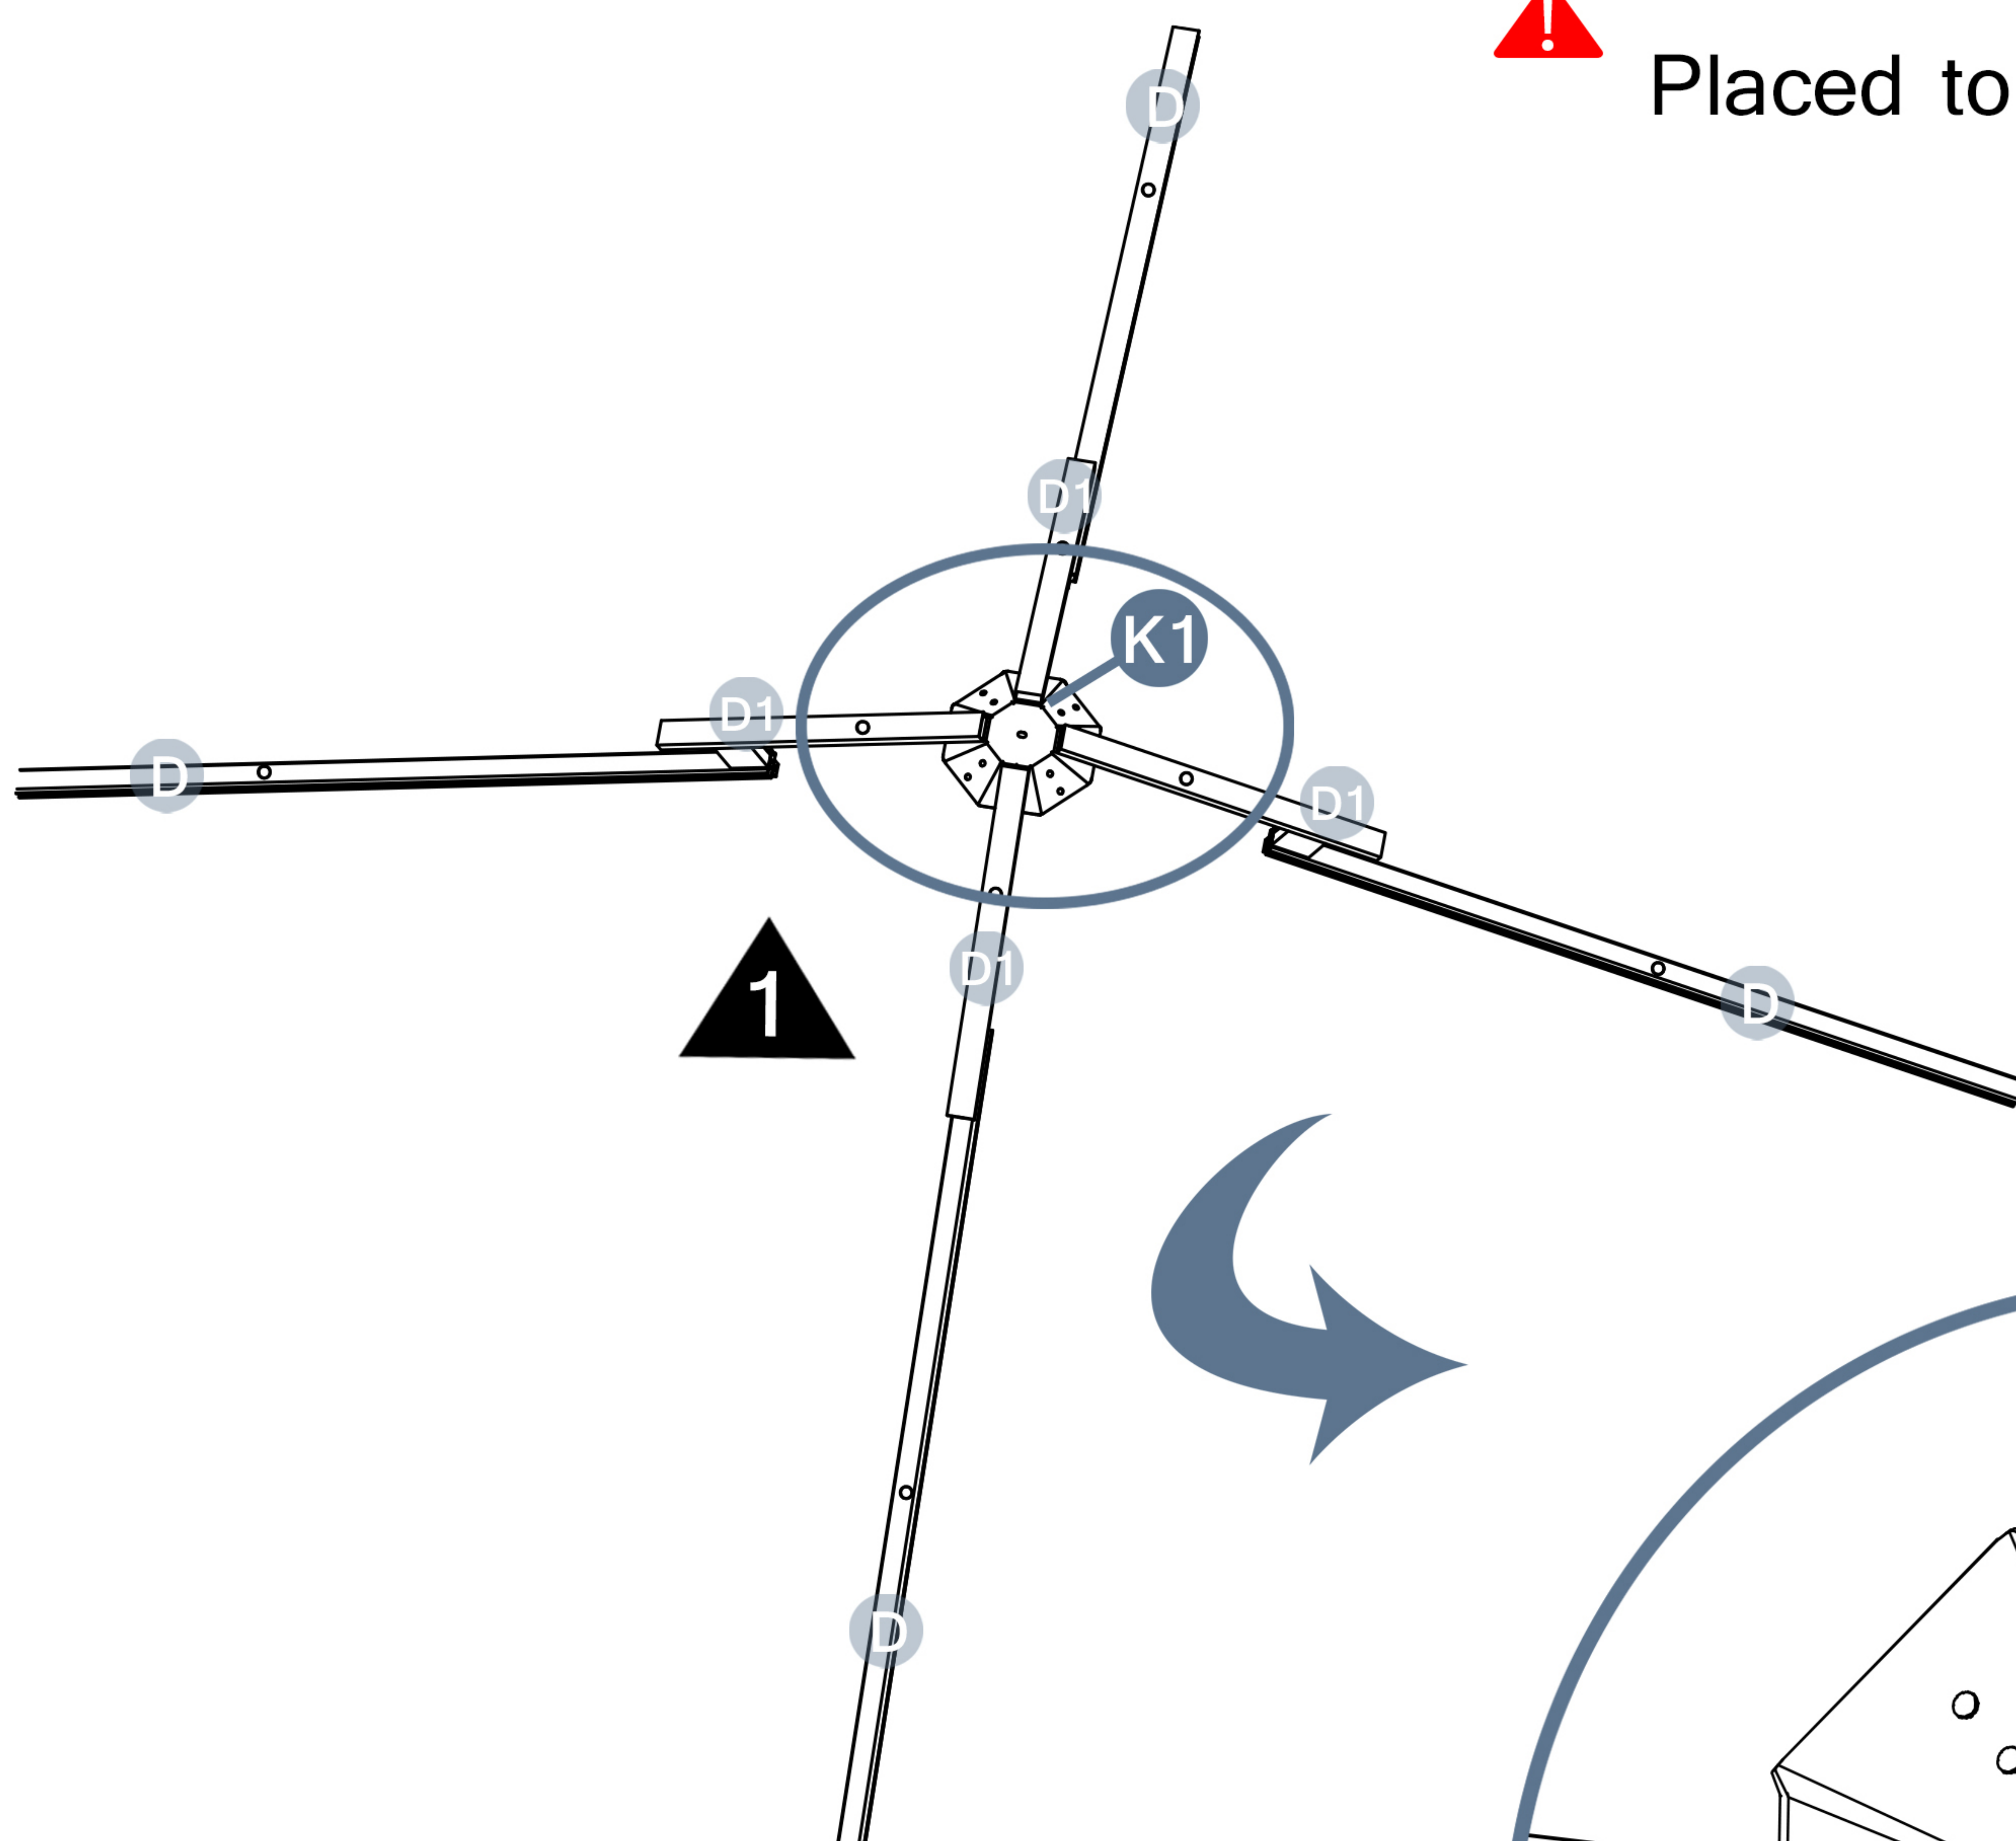




# STEP9

Parts required

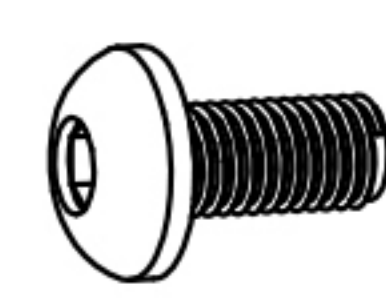

X


4pcs

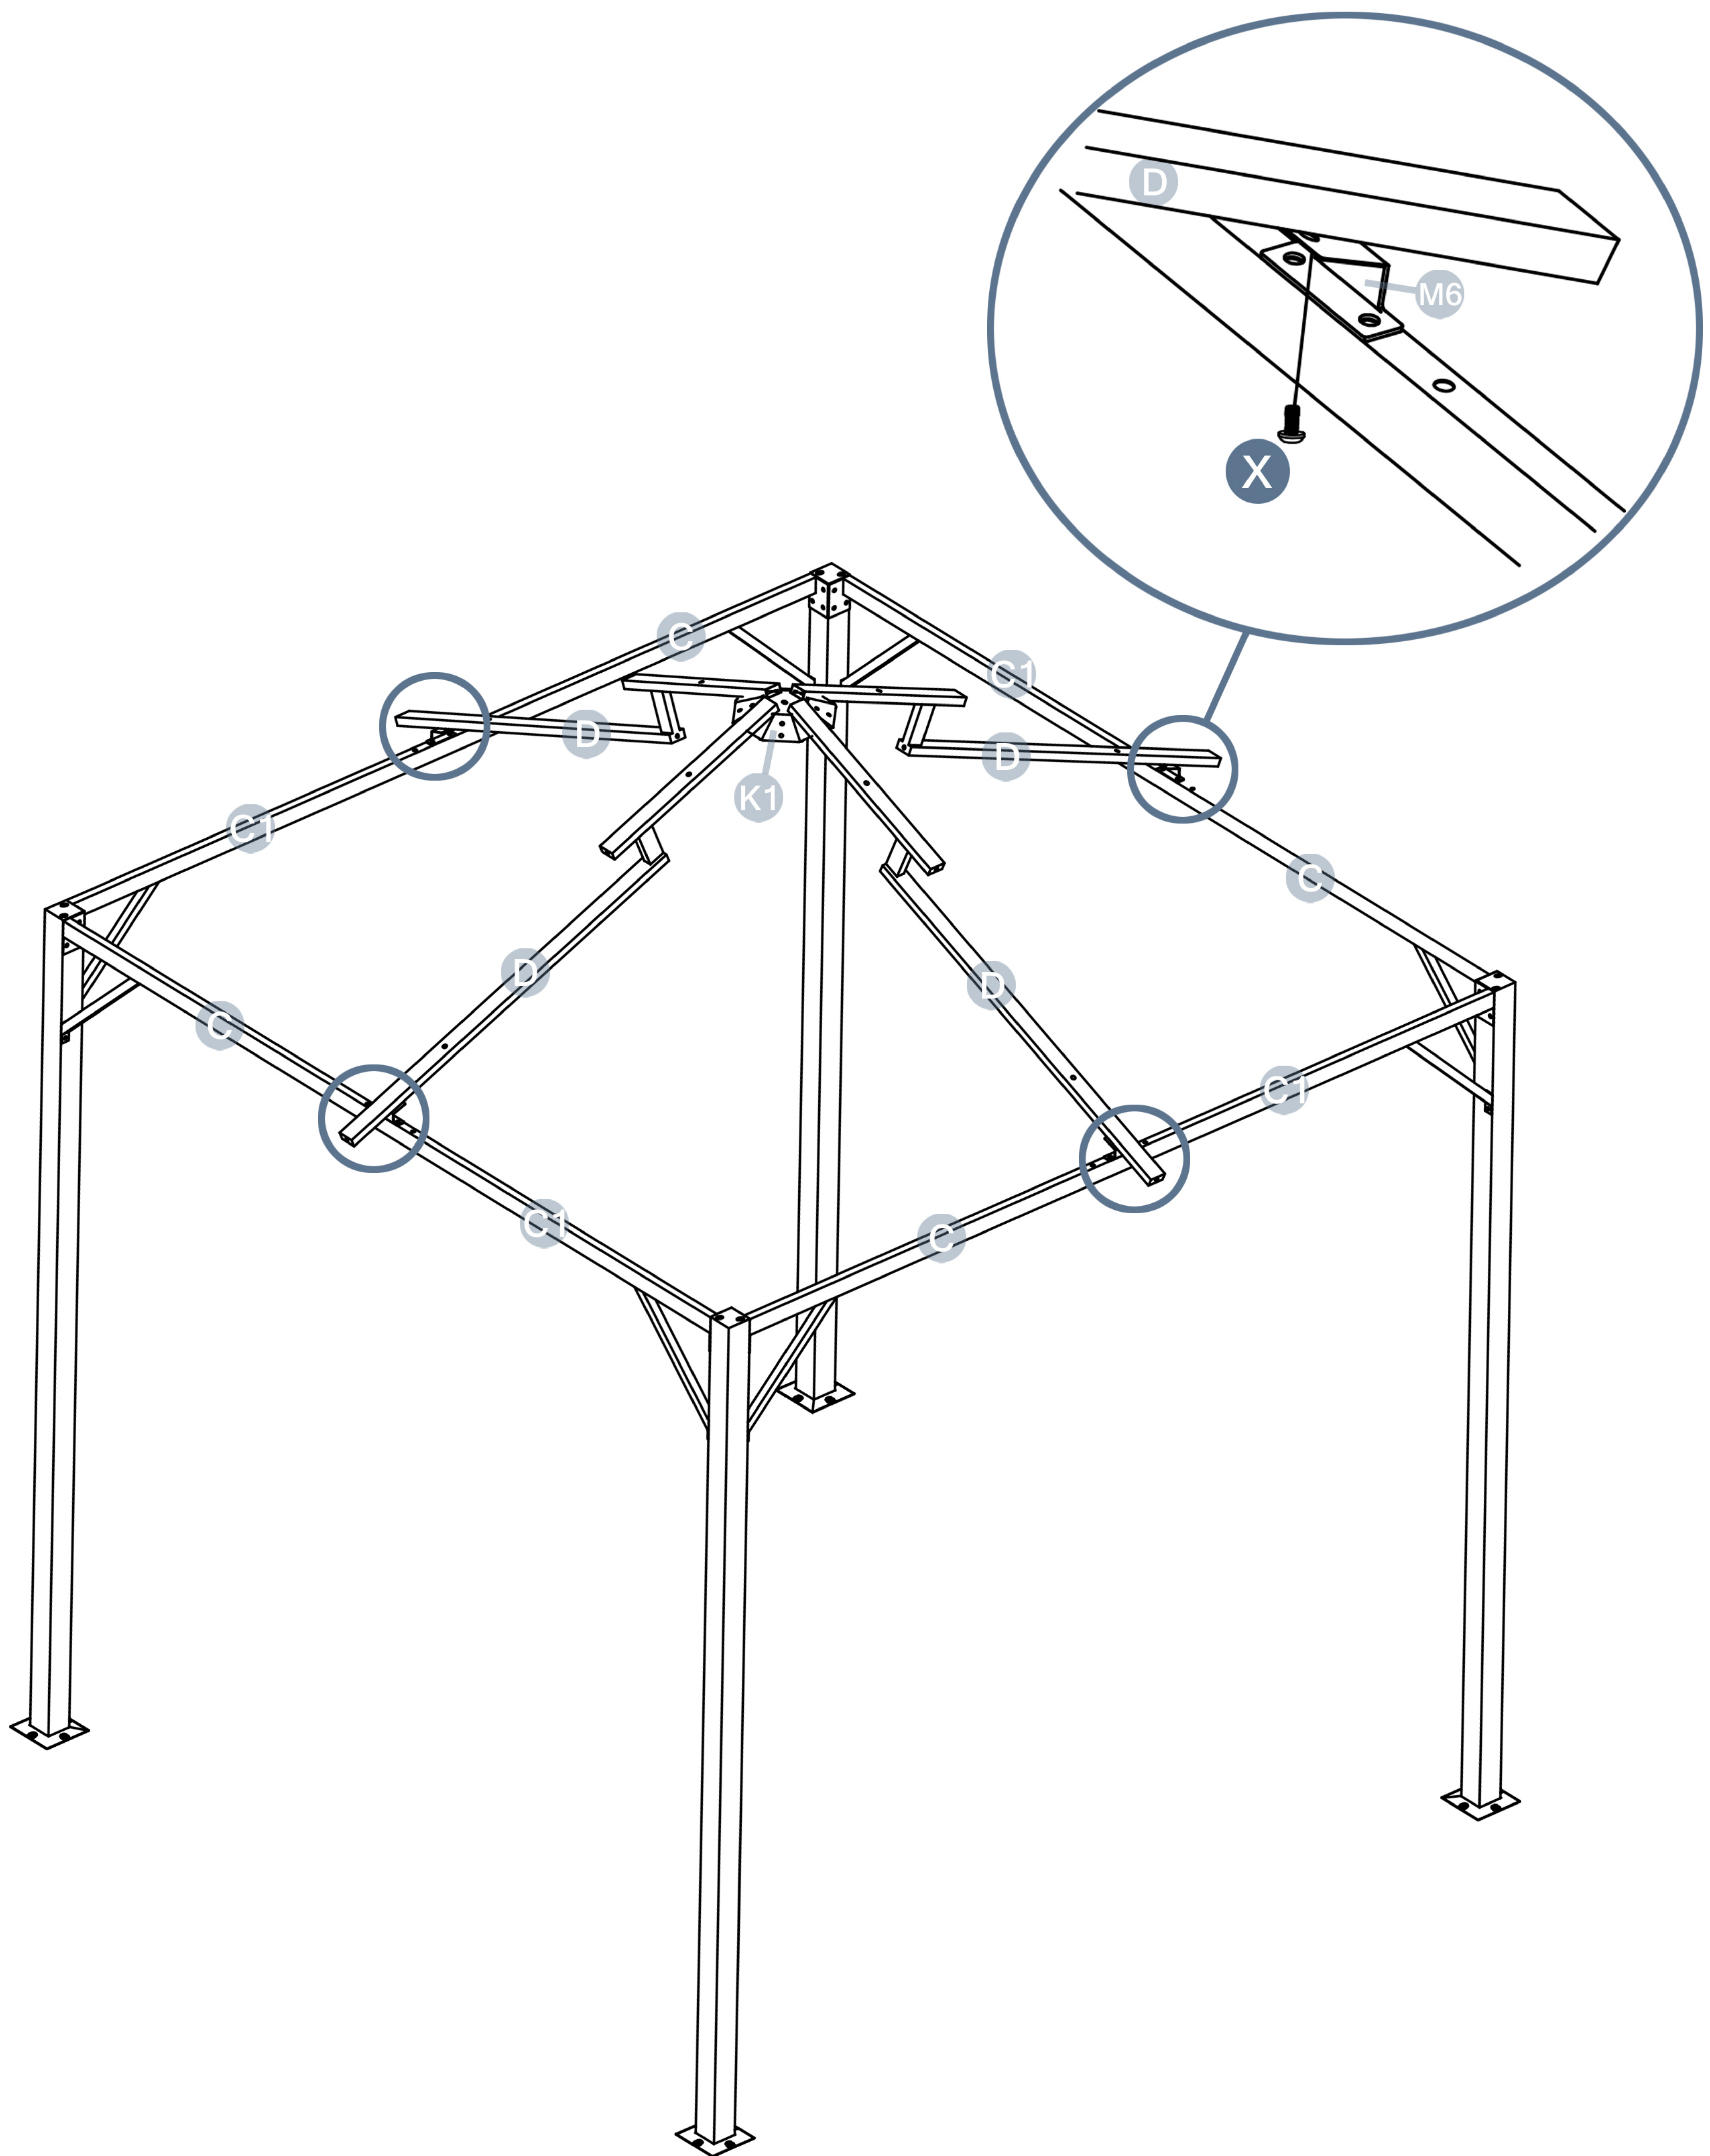






# STEP 10

Parts required

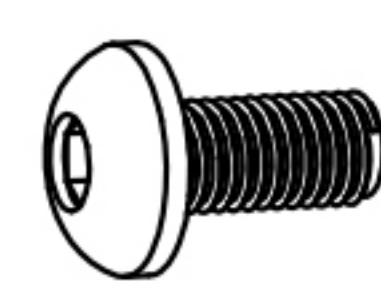

X 16pcs



1 → 2

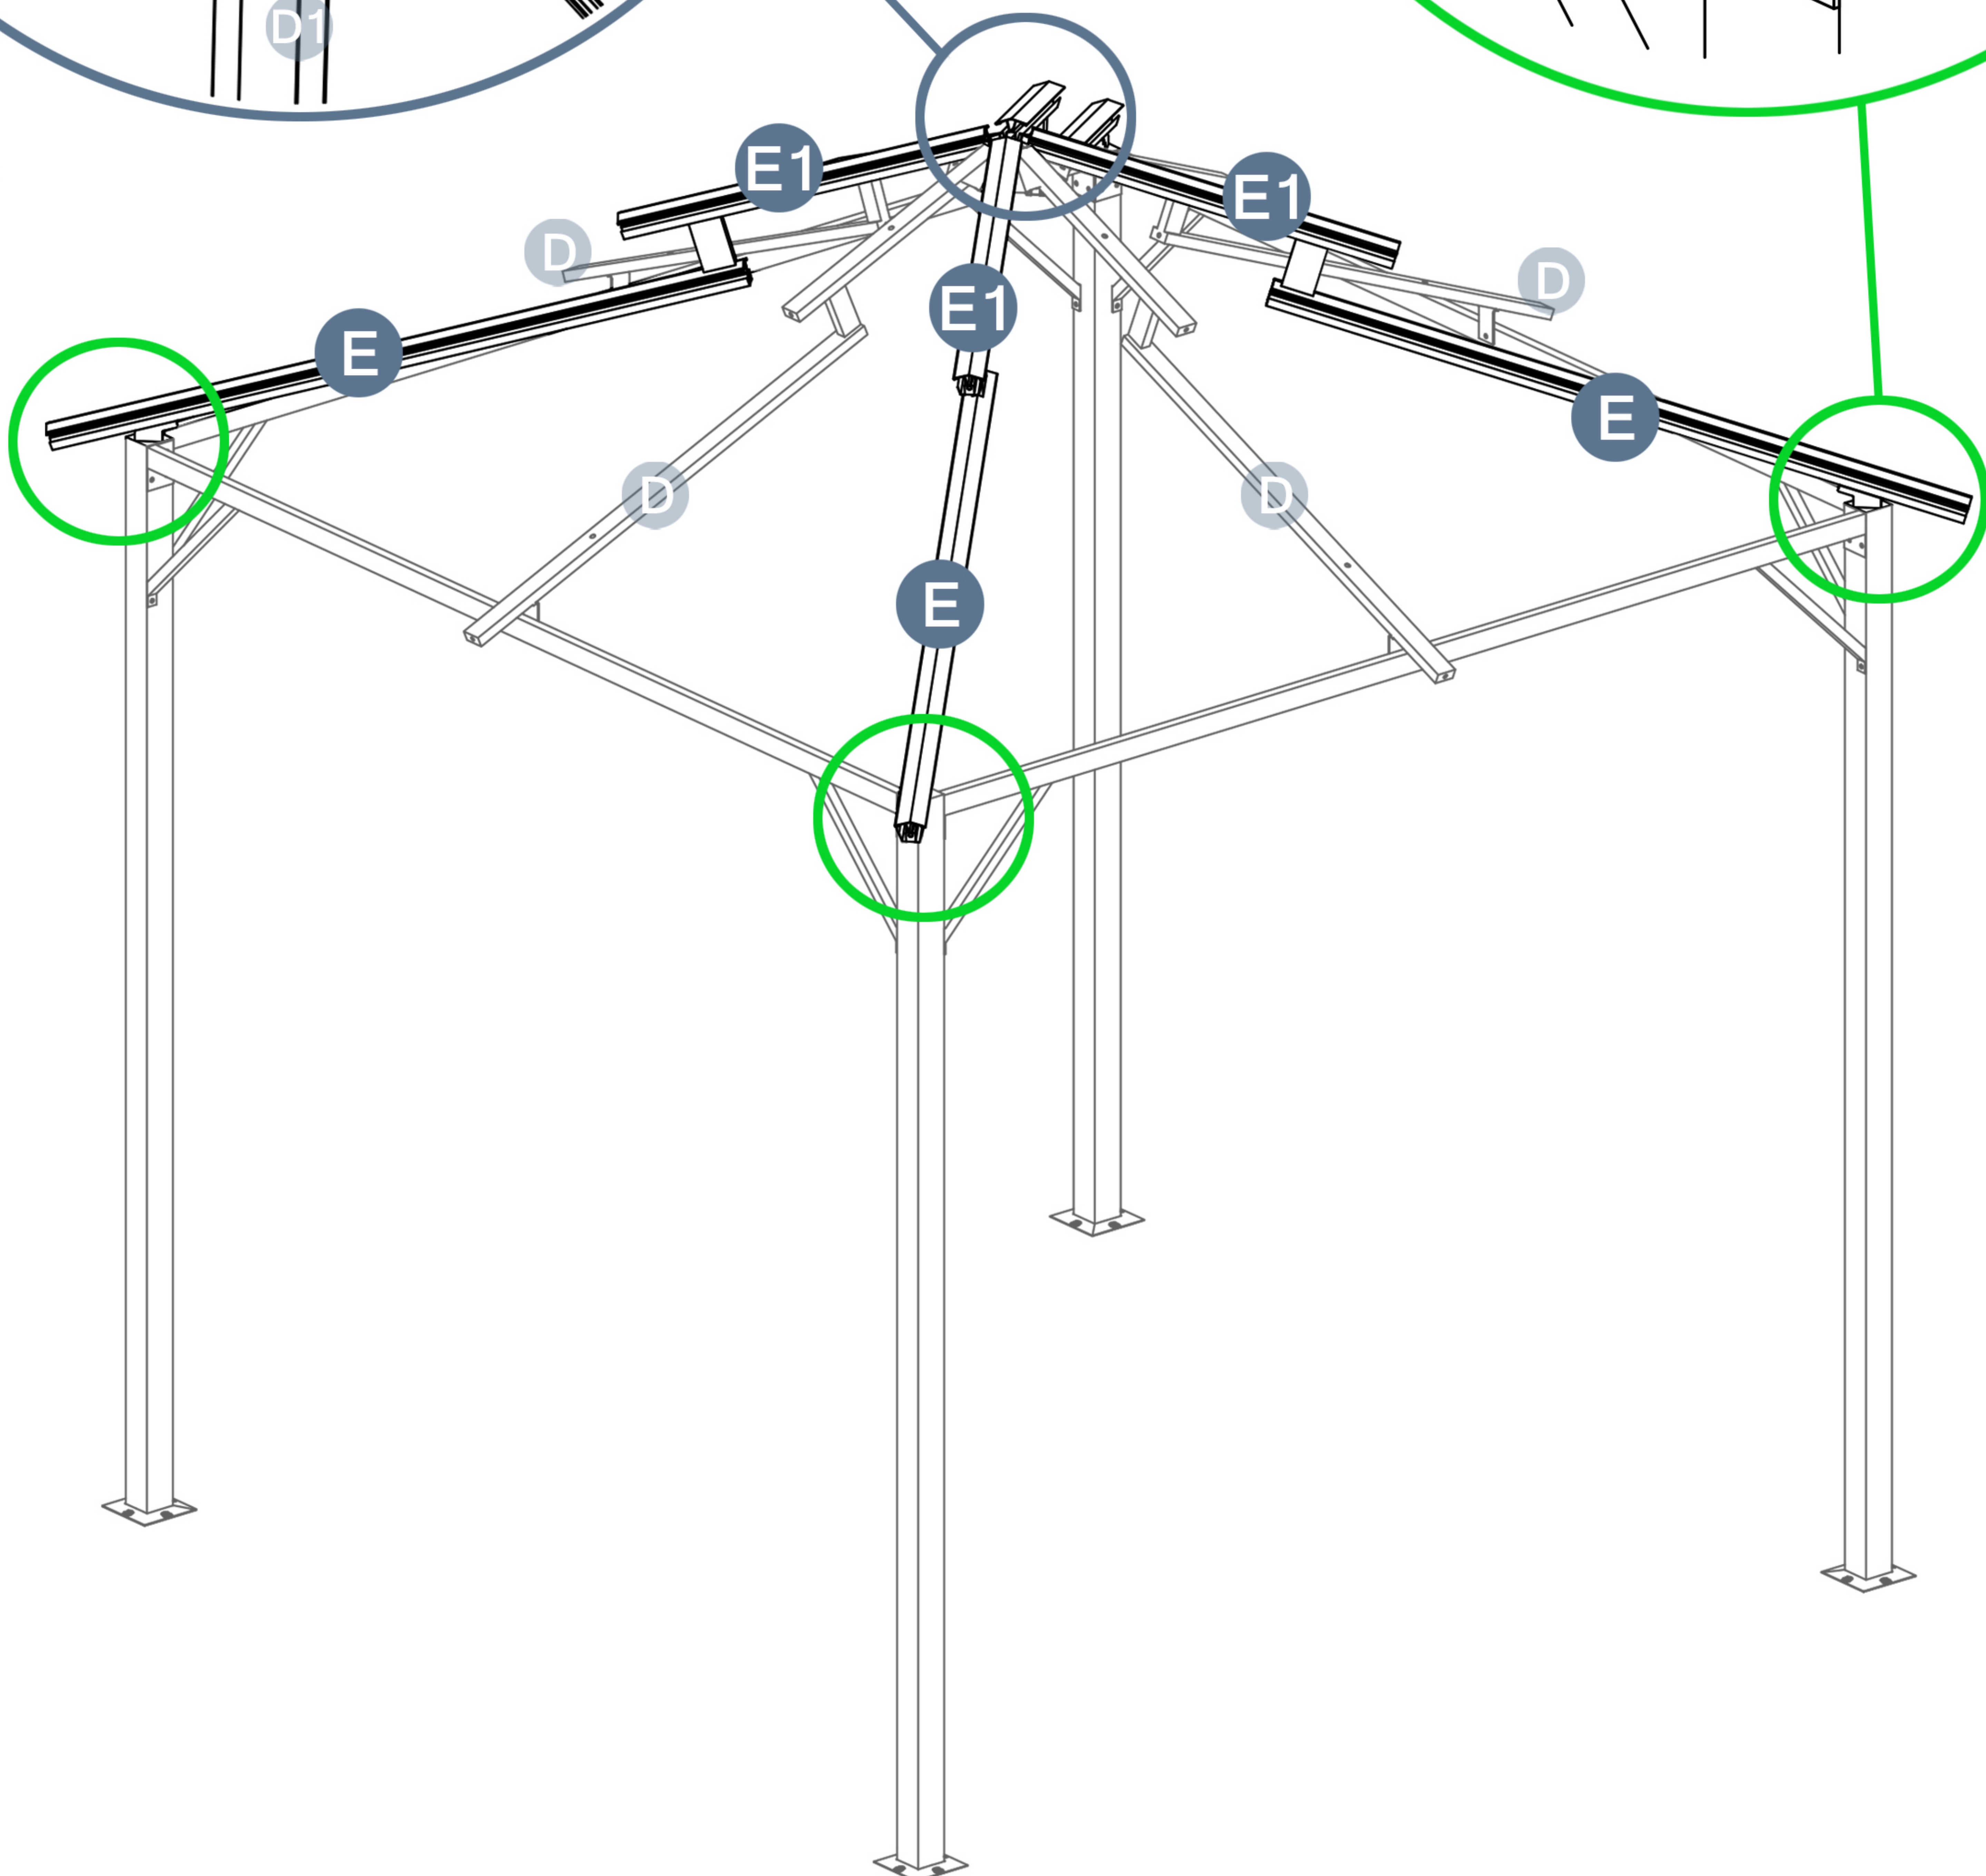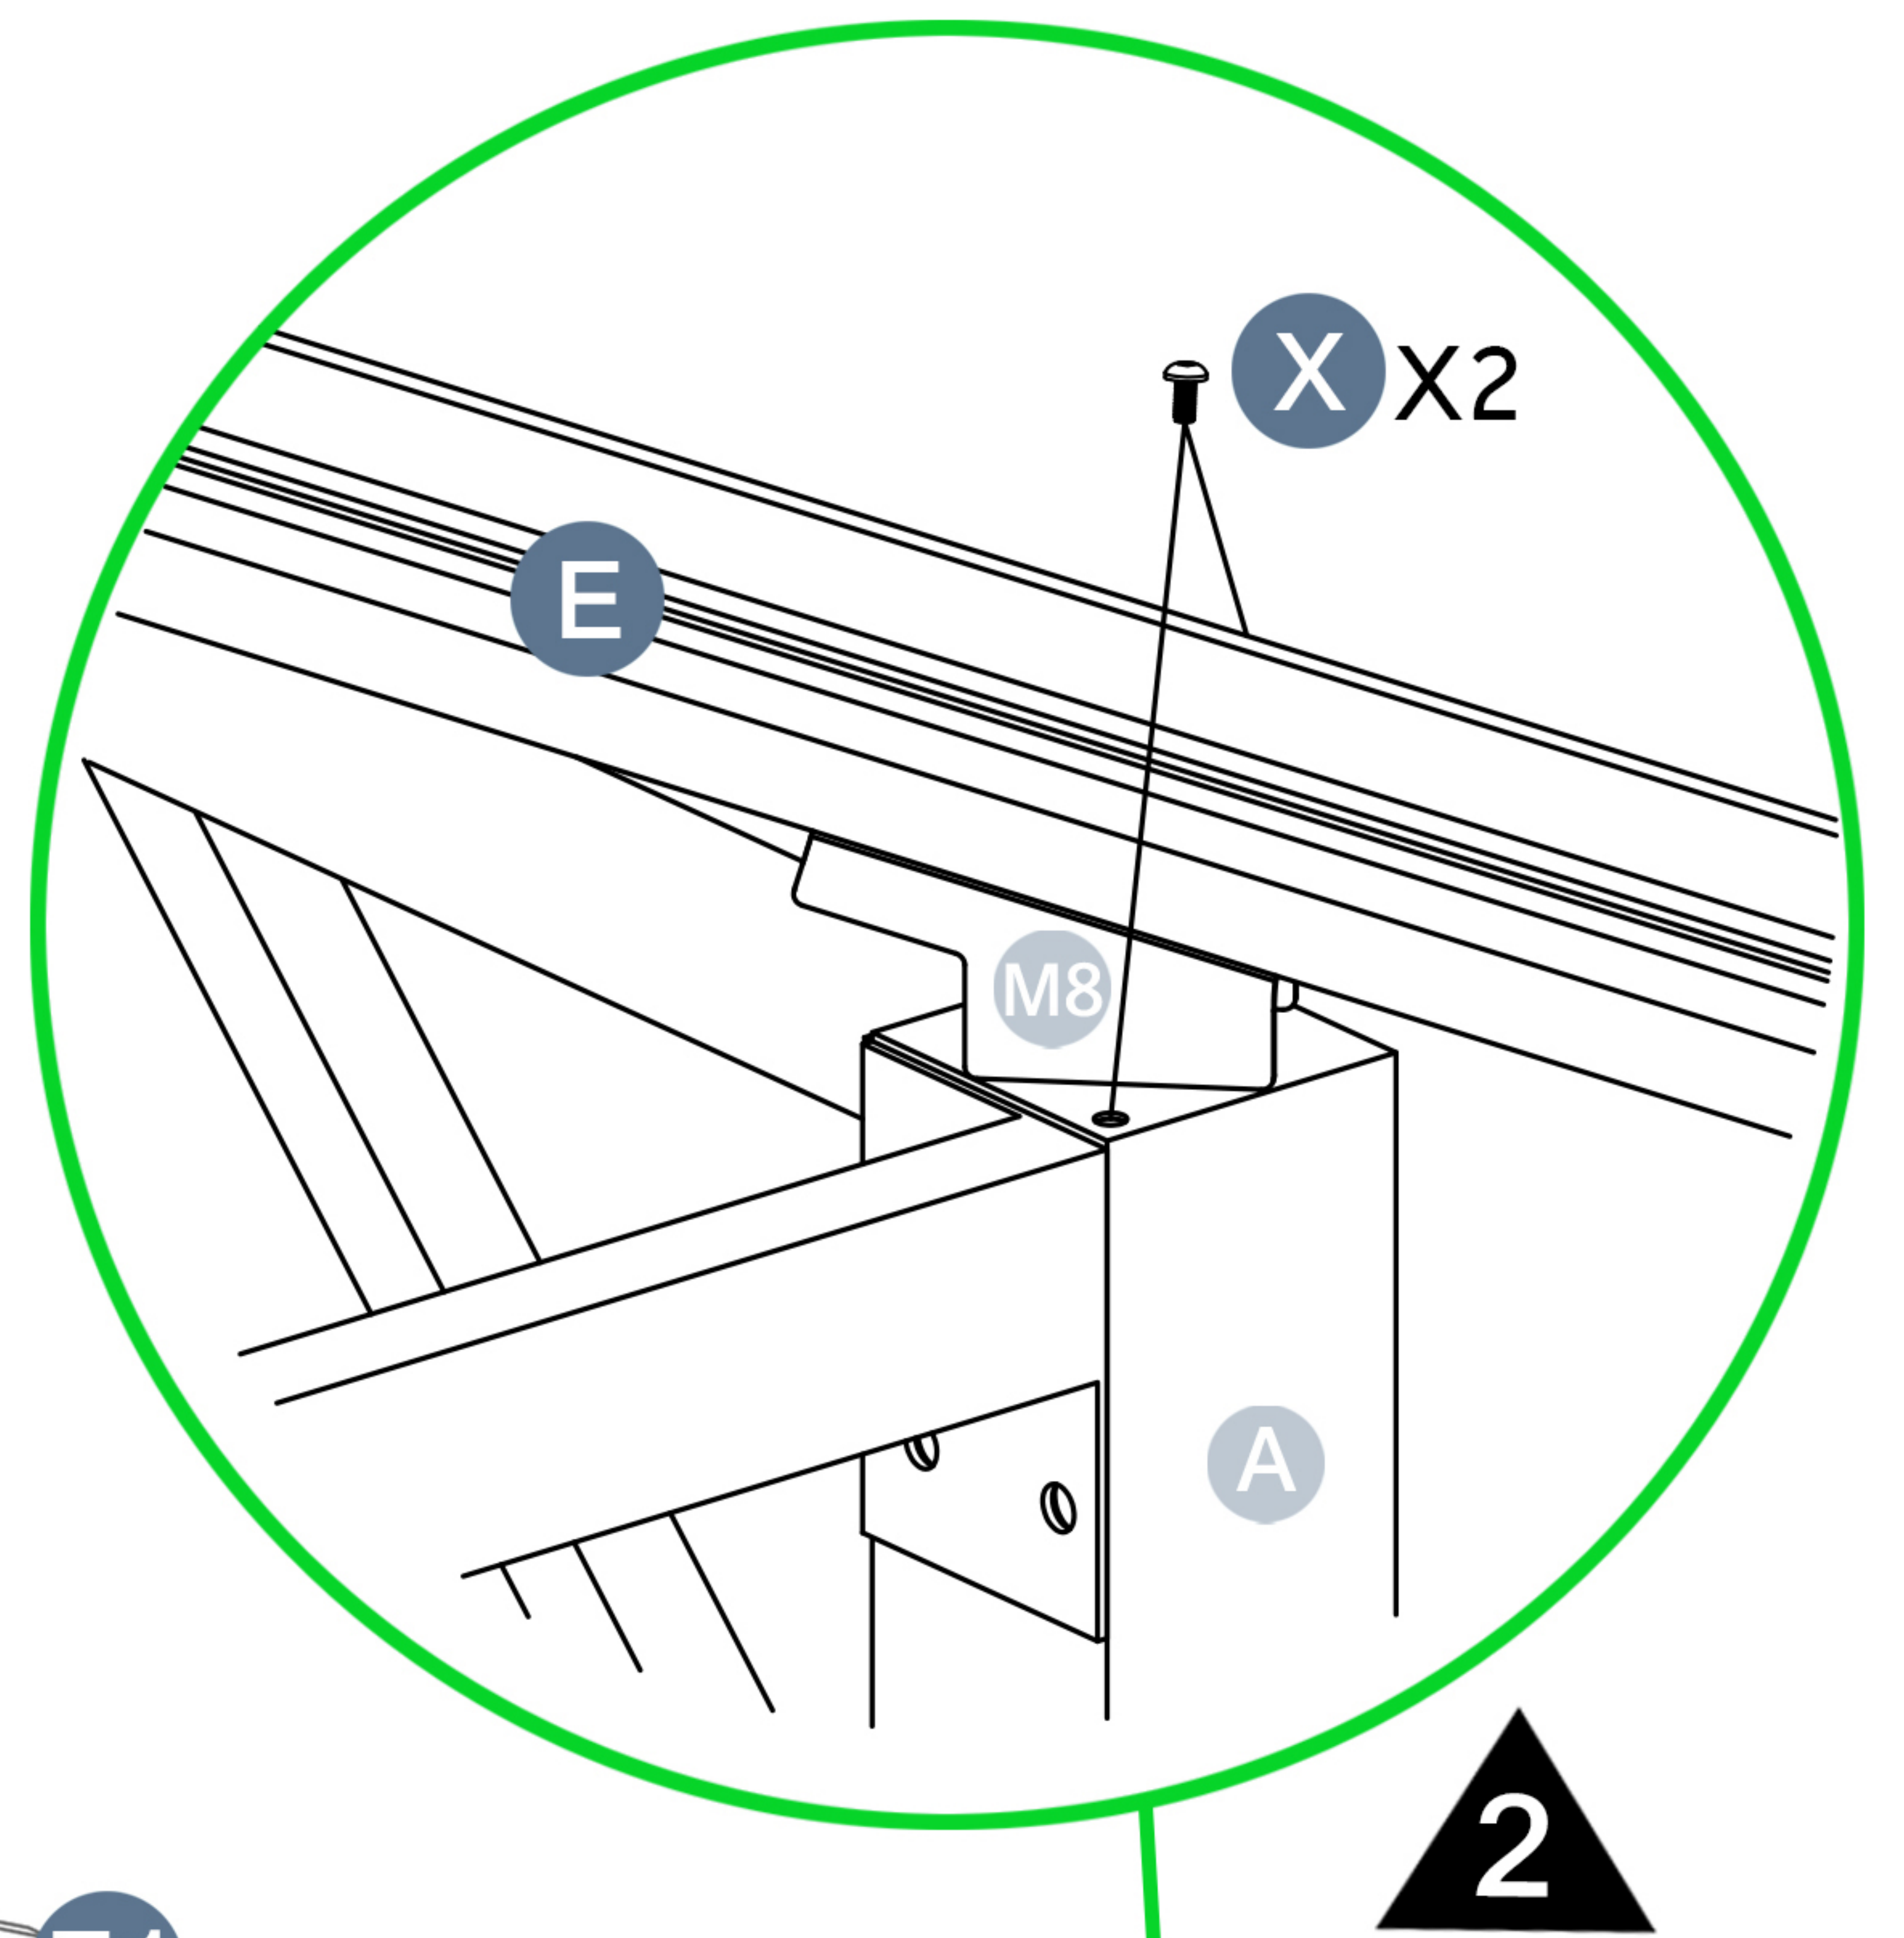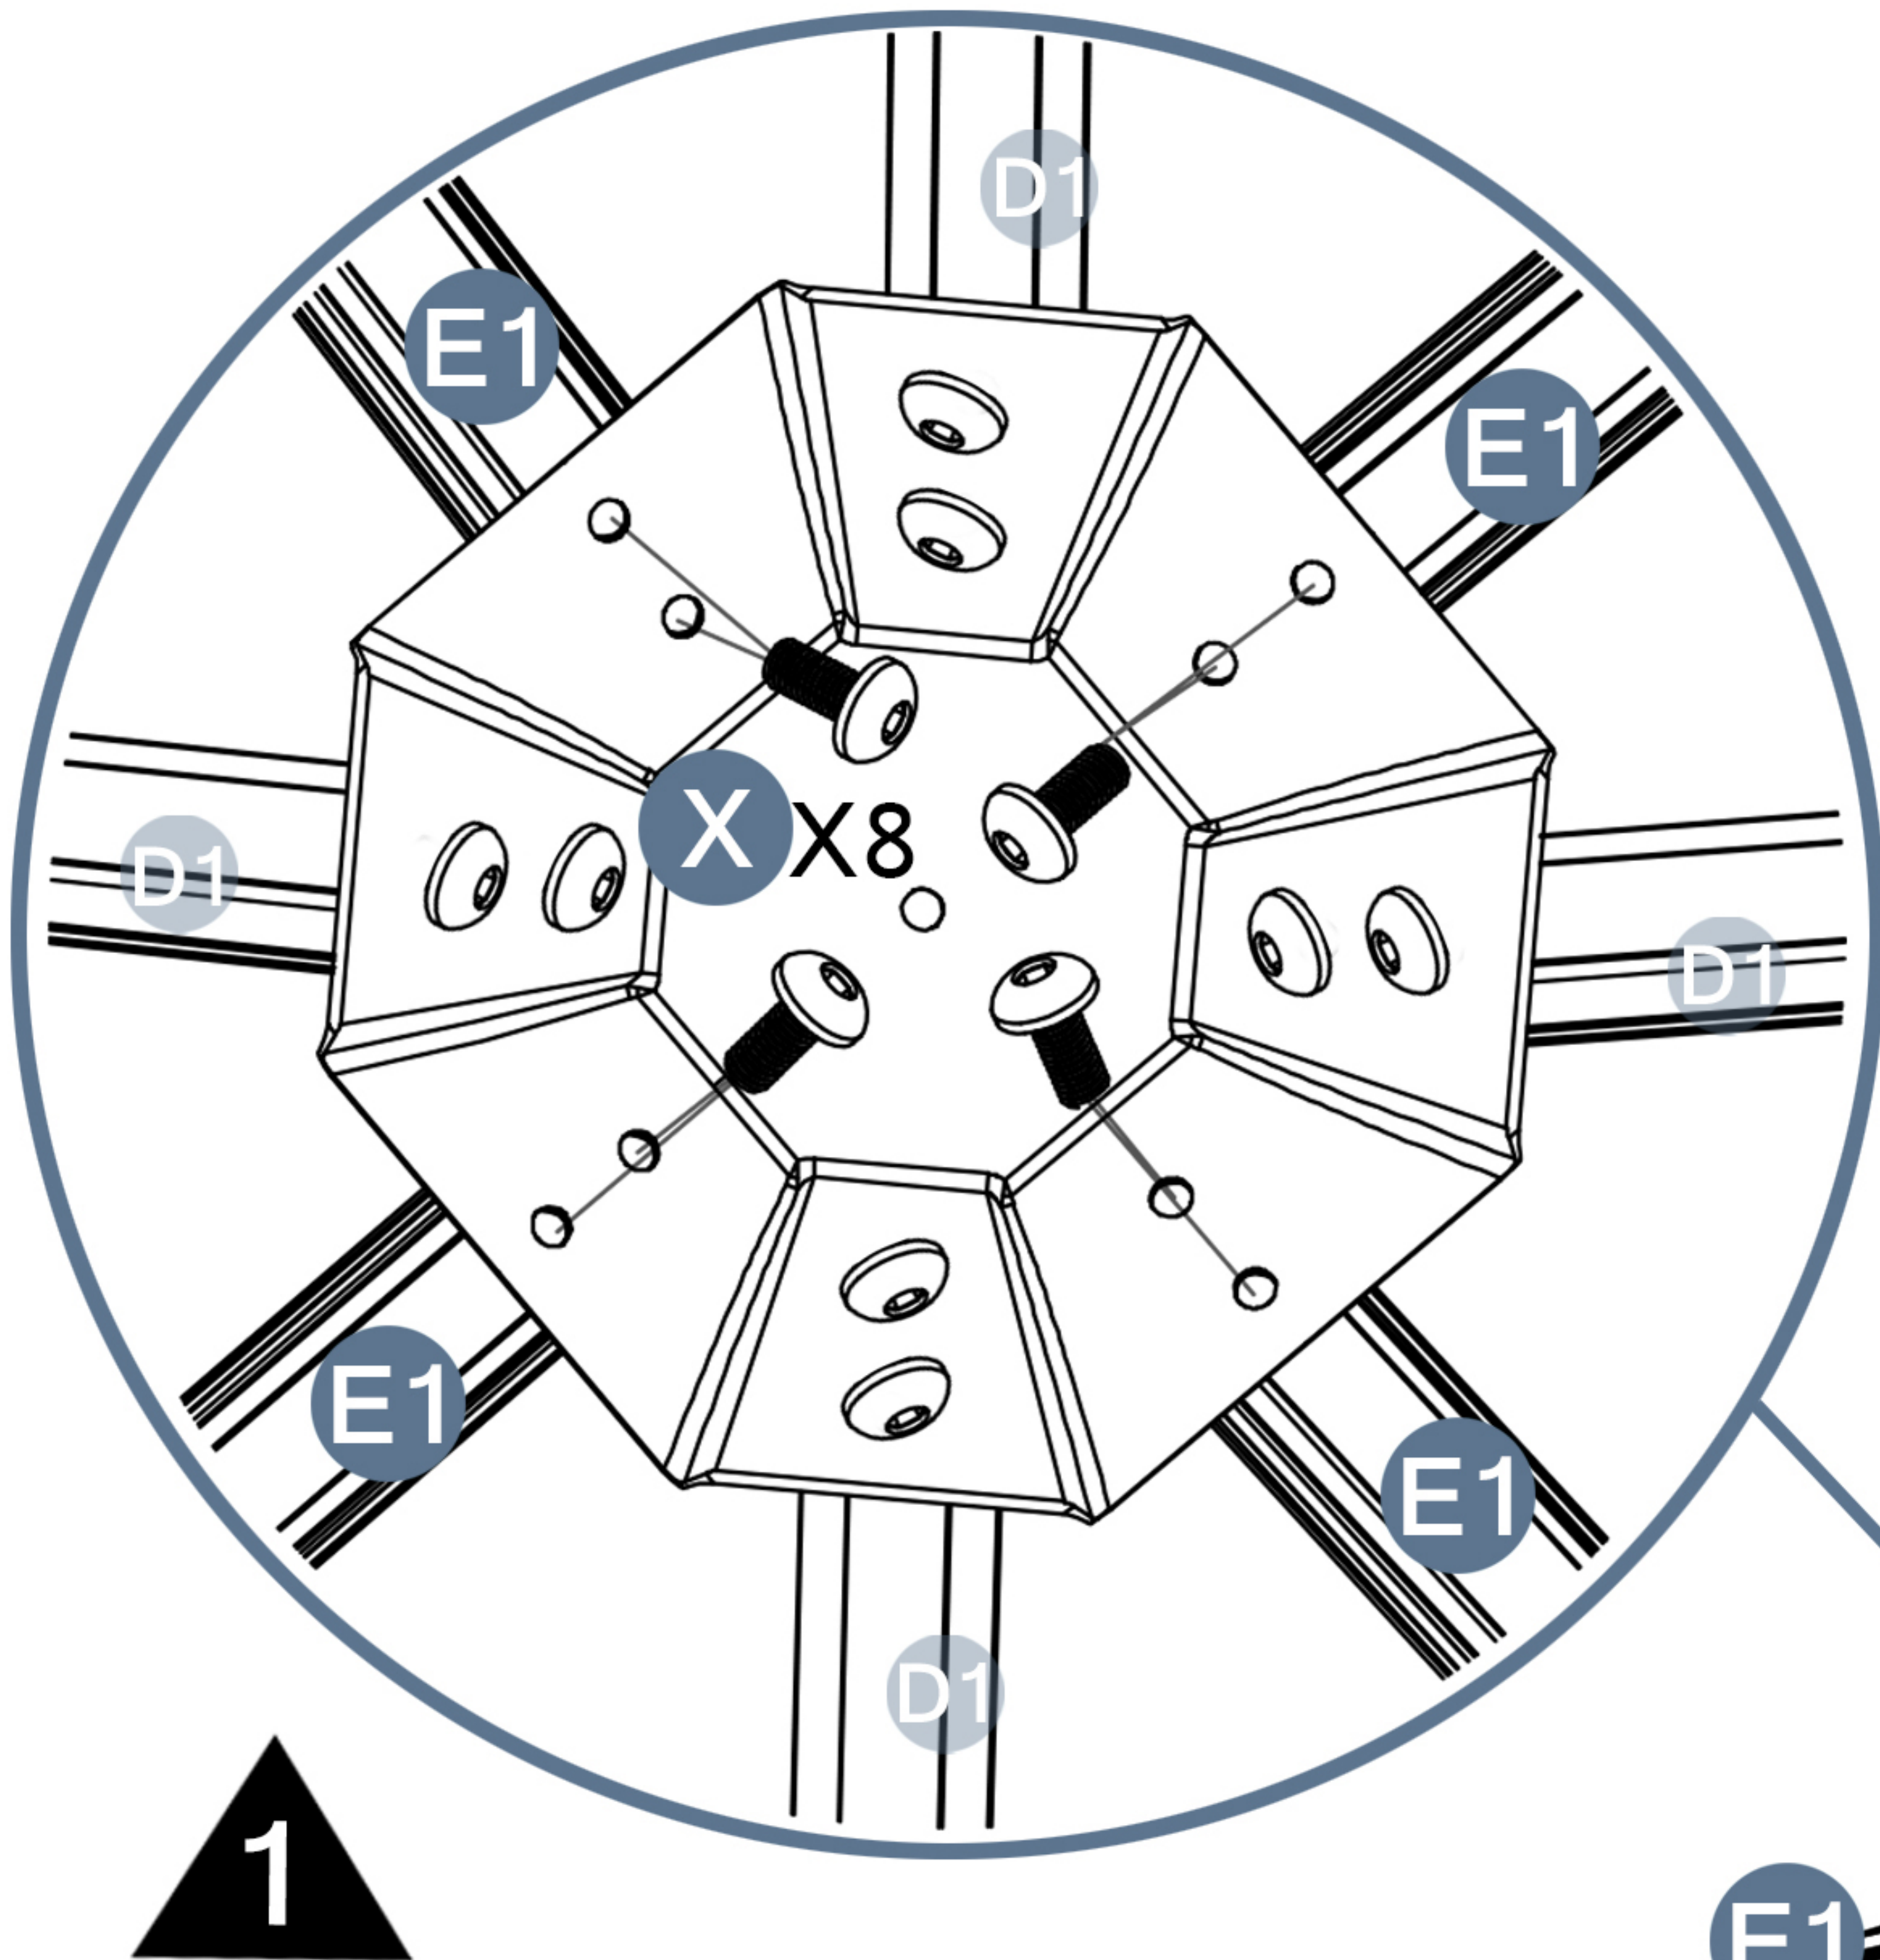




# STEP 11

Parts required

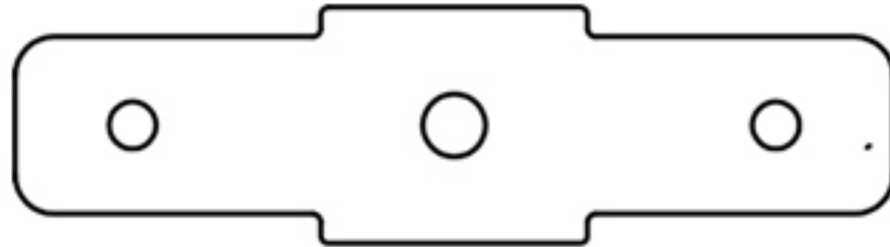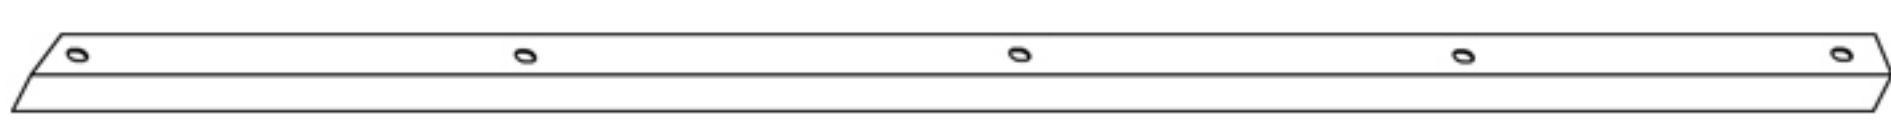


**H** 8pcs  
**M3** 4pcs

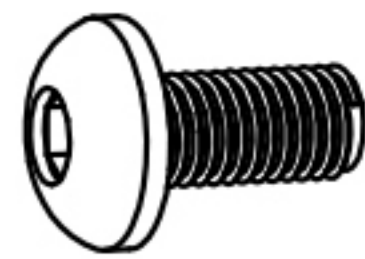

**X** 8pcs


 Part H should be placed as shown in the picture.

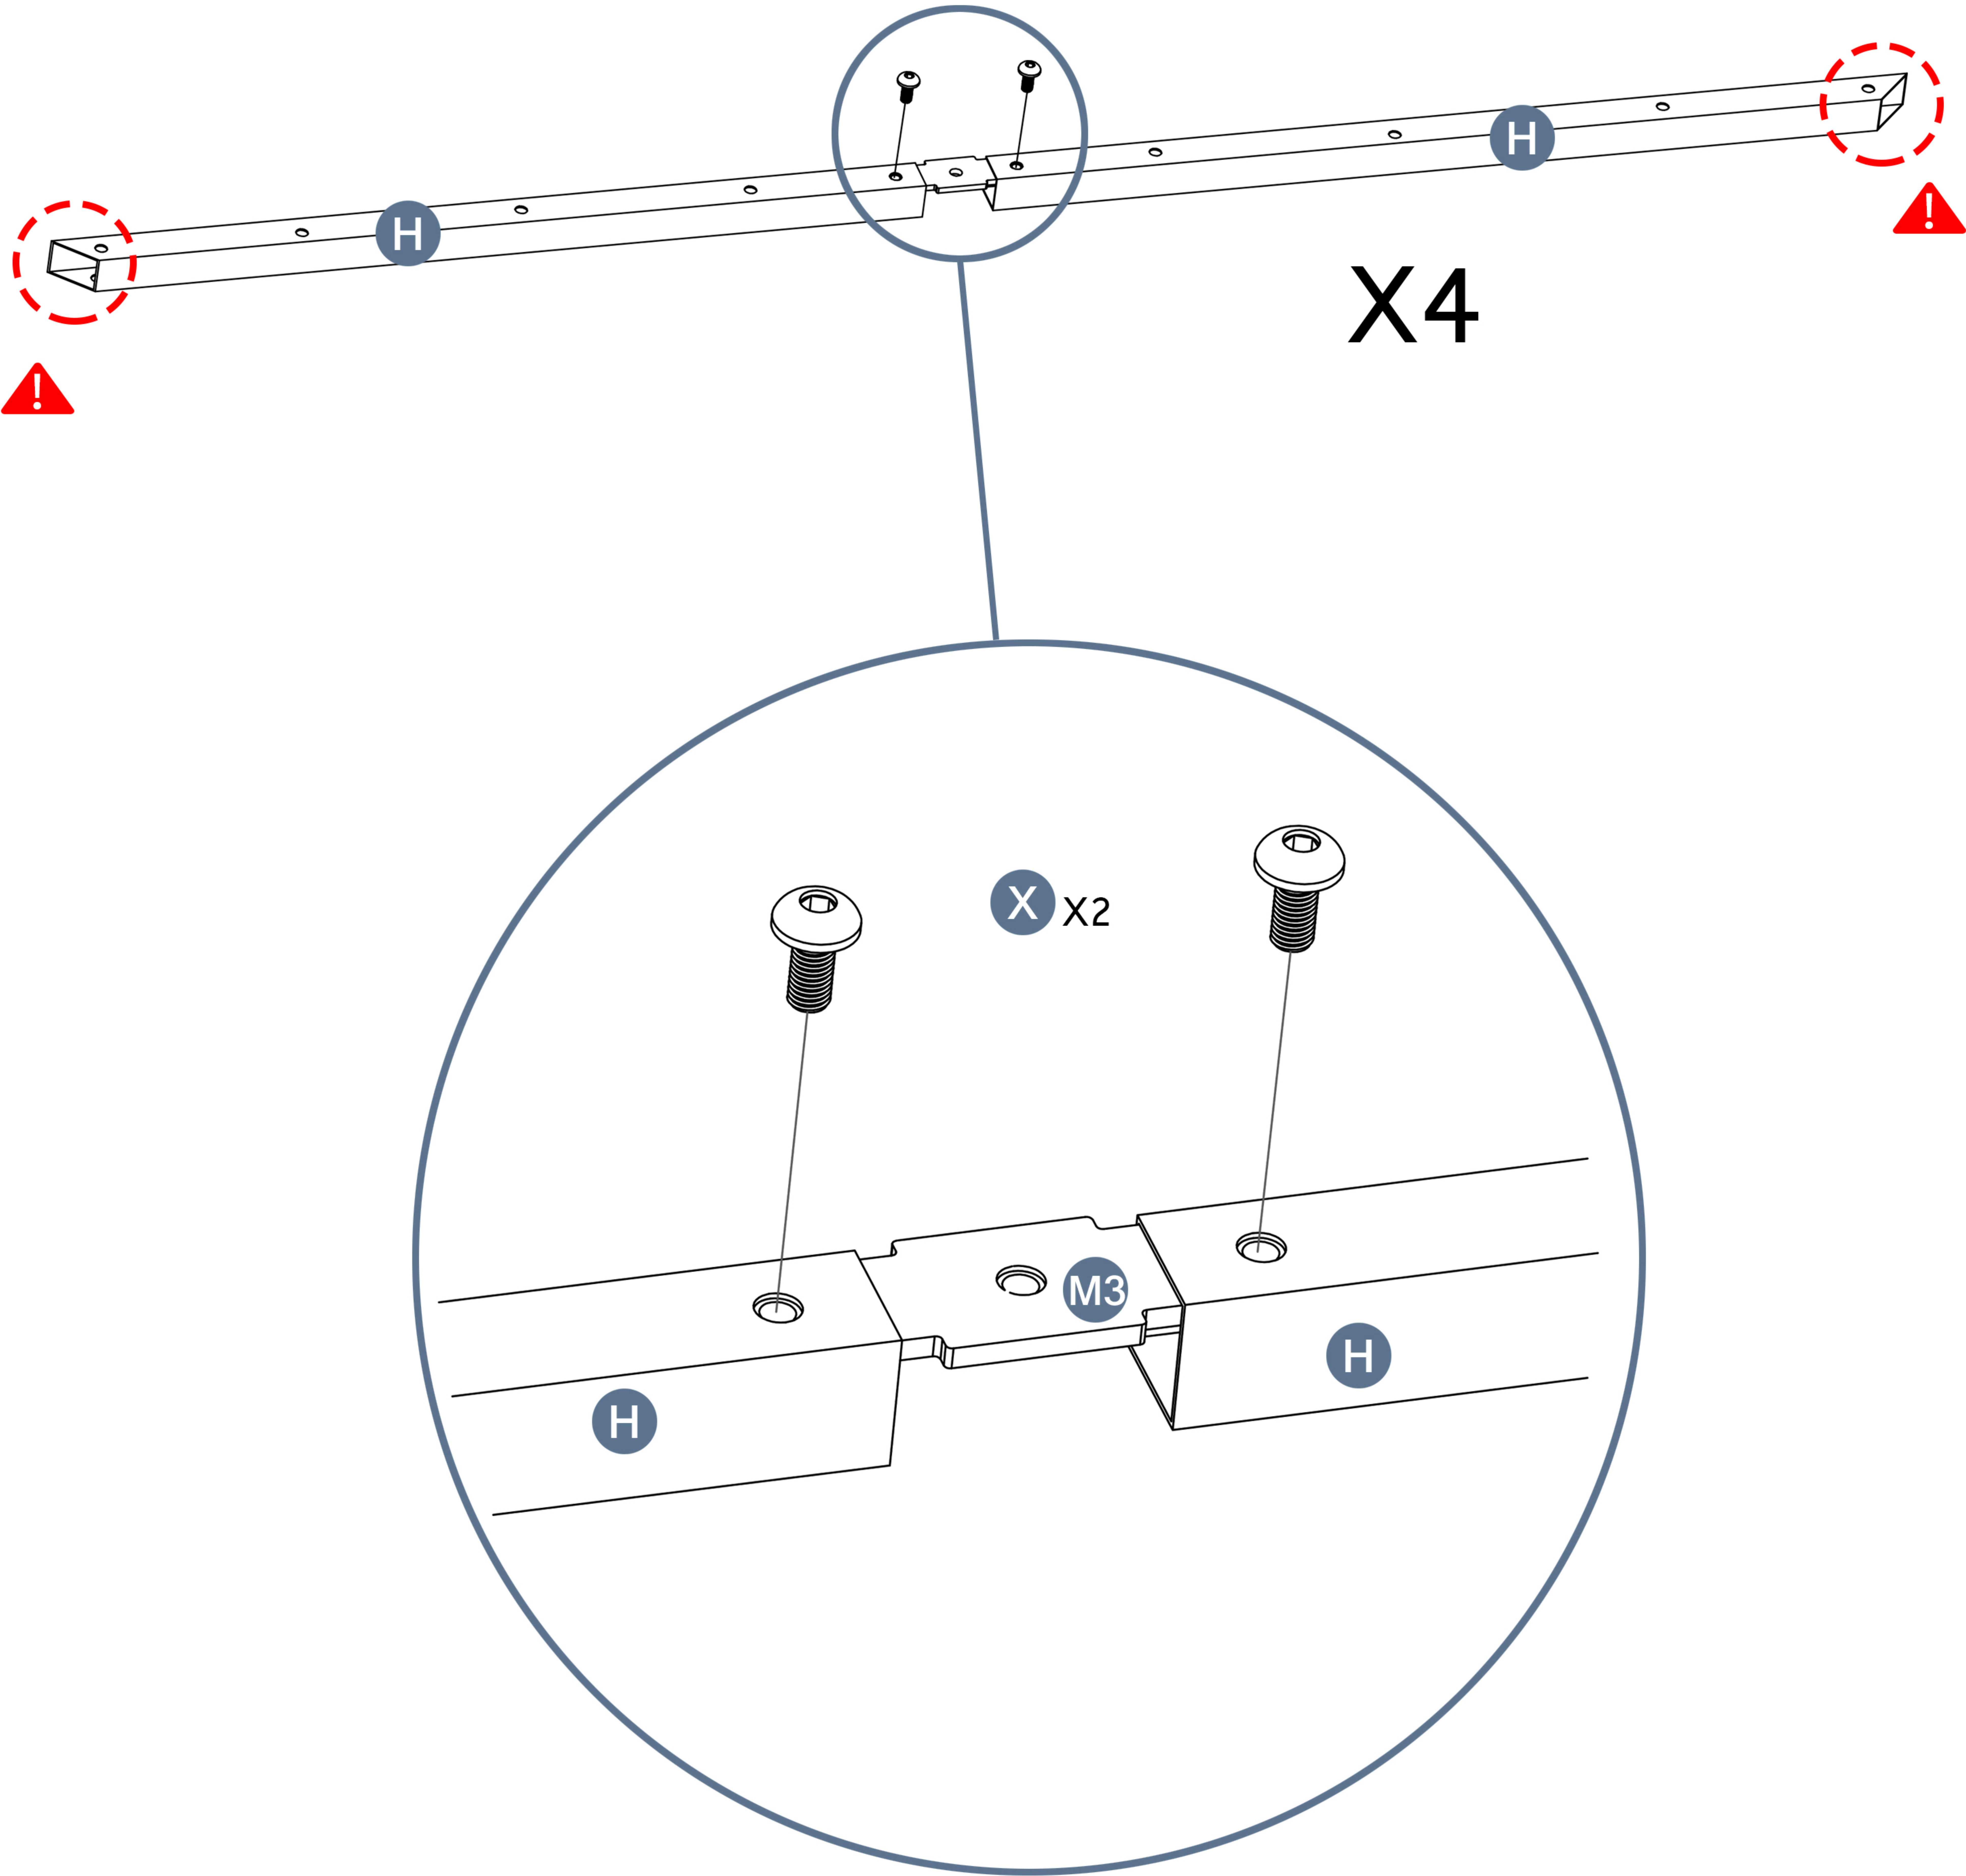




# STEP 12

Parts required

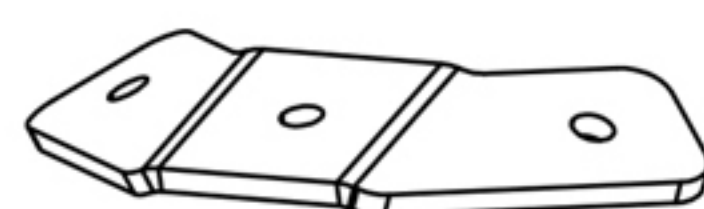

M4 4pcs

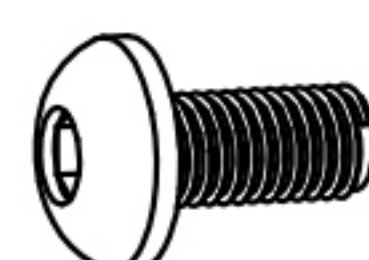


X 12pcs




X2 4pcs

1 → 2


Only X2 screws are used in this step. Please store the X2 nuts. Steps 16 will be used.  
To better align the screws for practical situations, do not fully tighten screws initially.  
! Pay attention to the differences in screws.

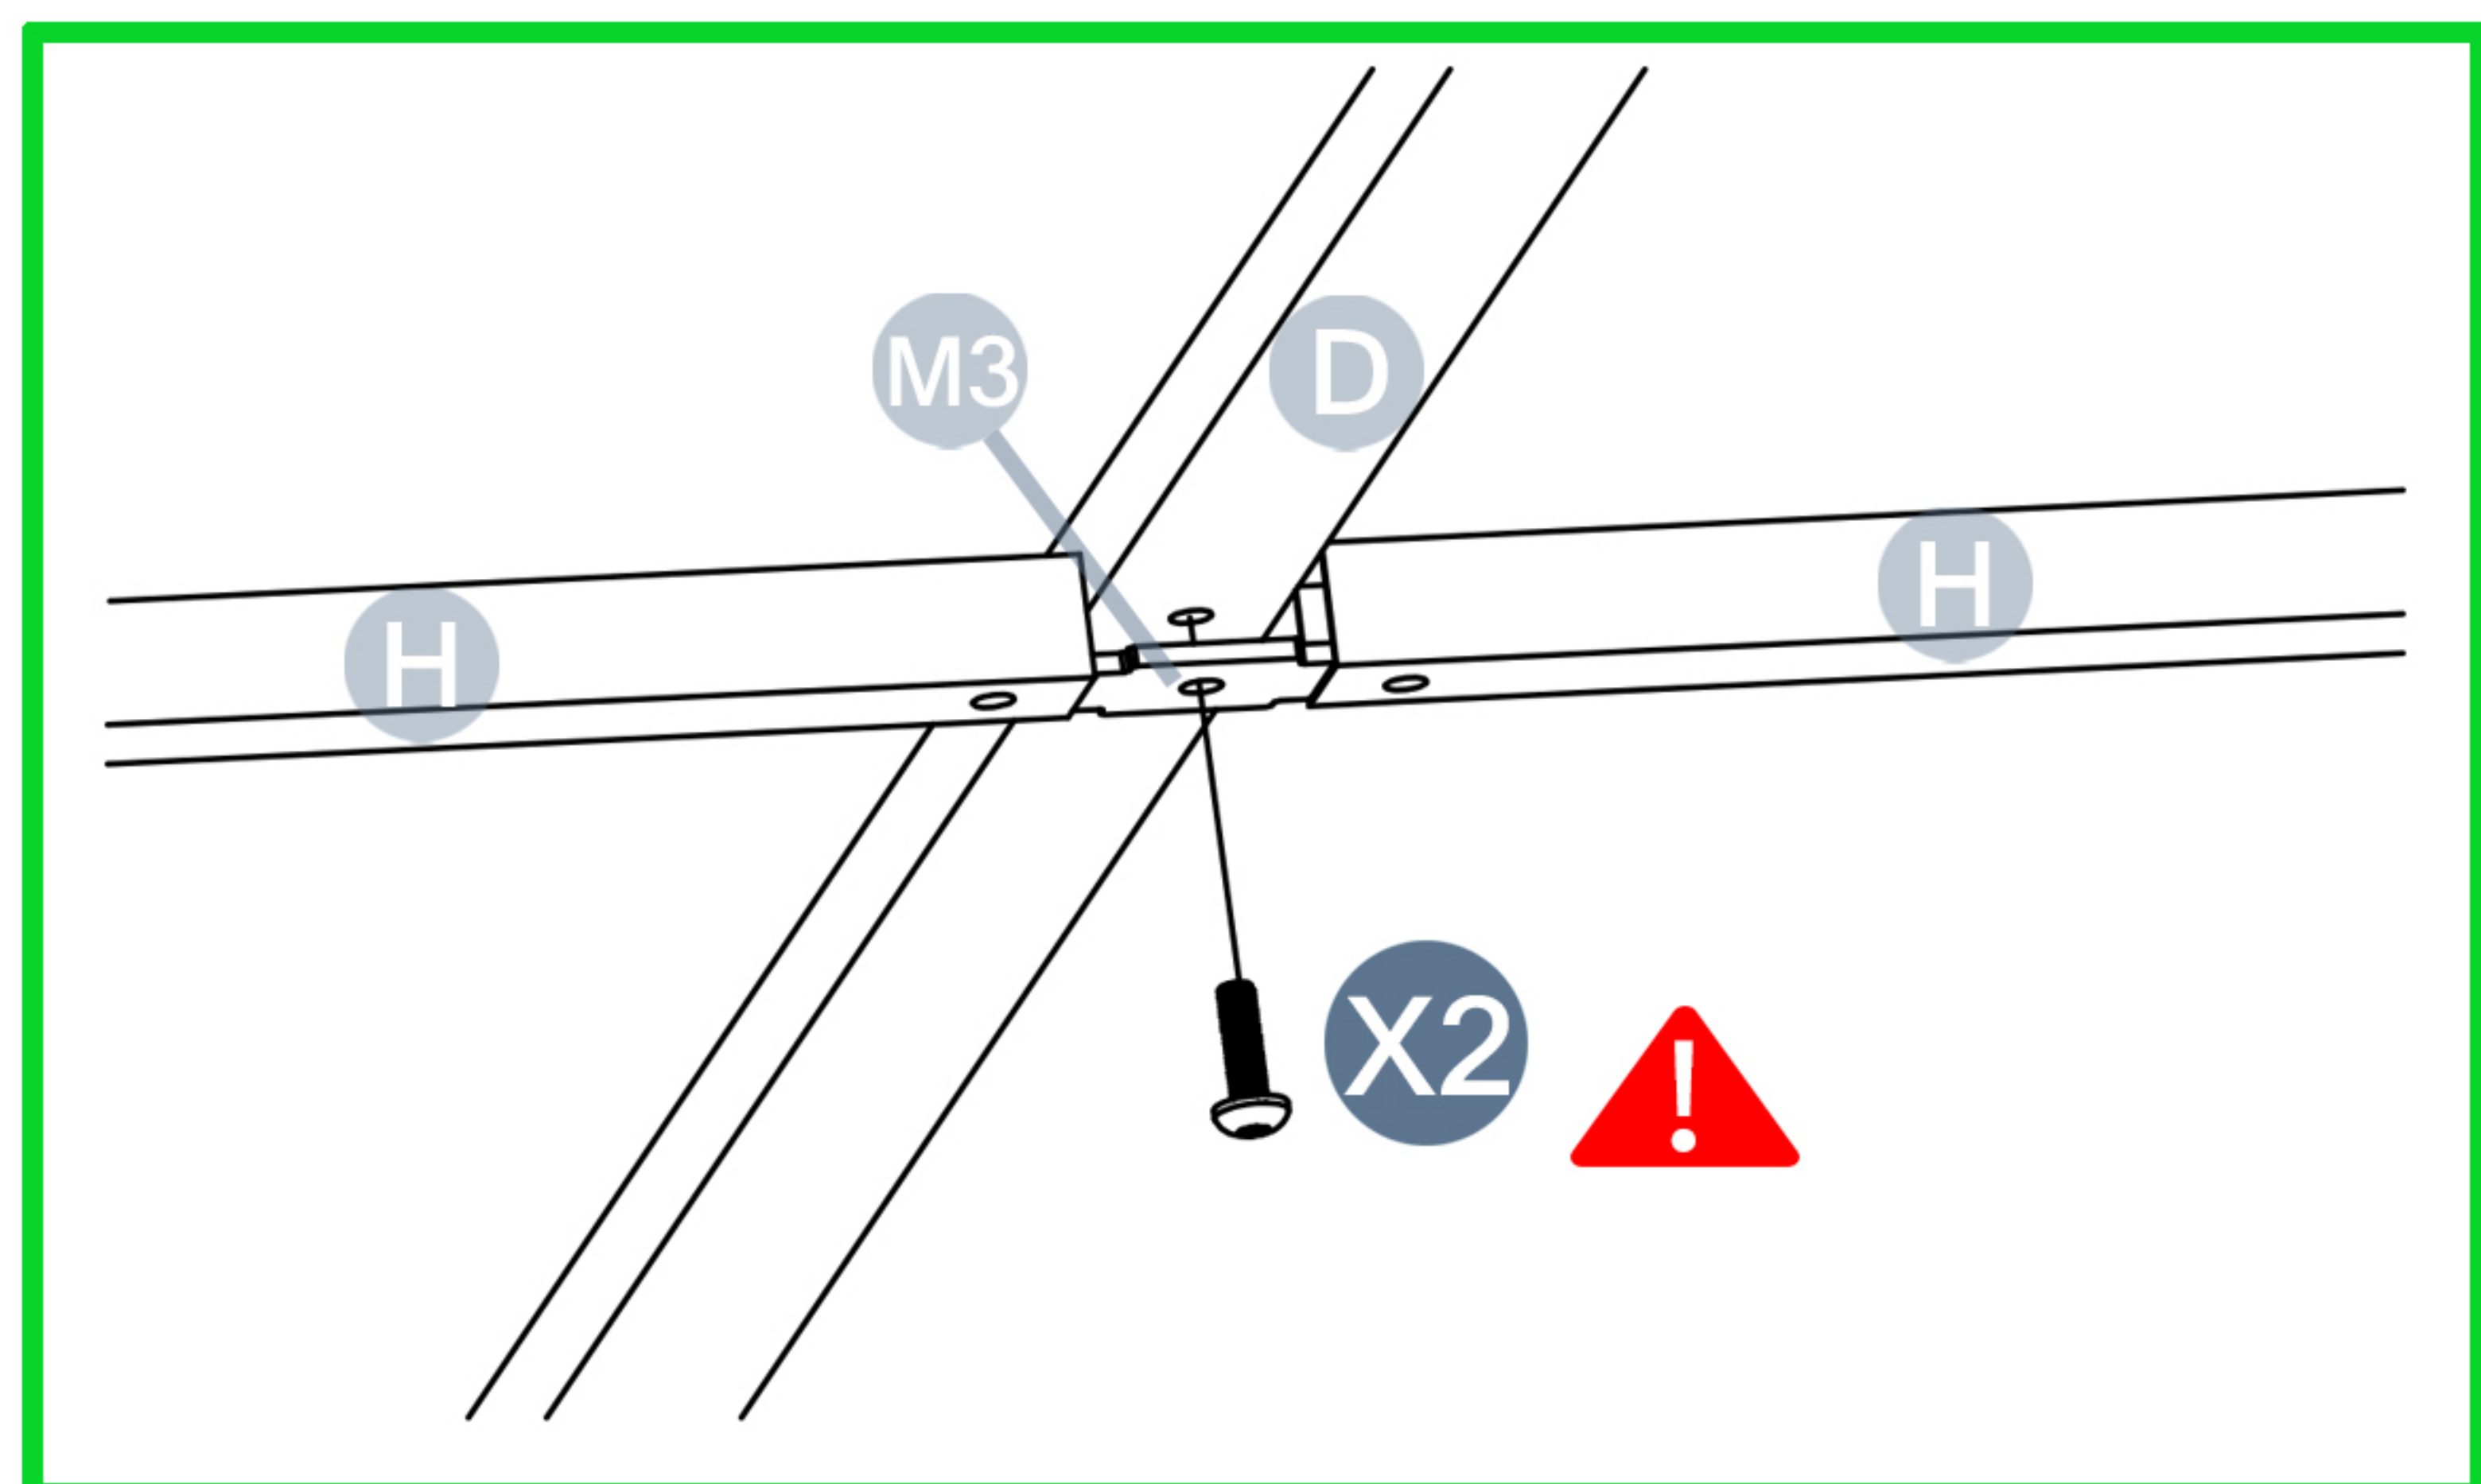

1

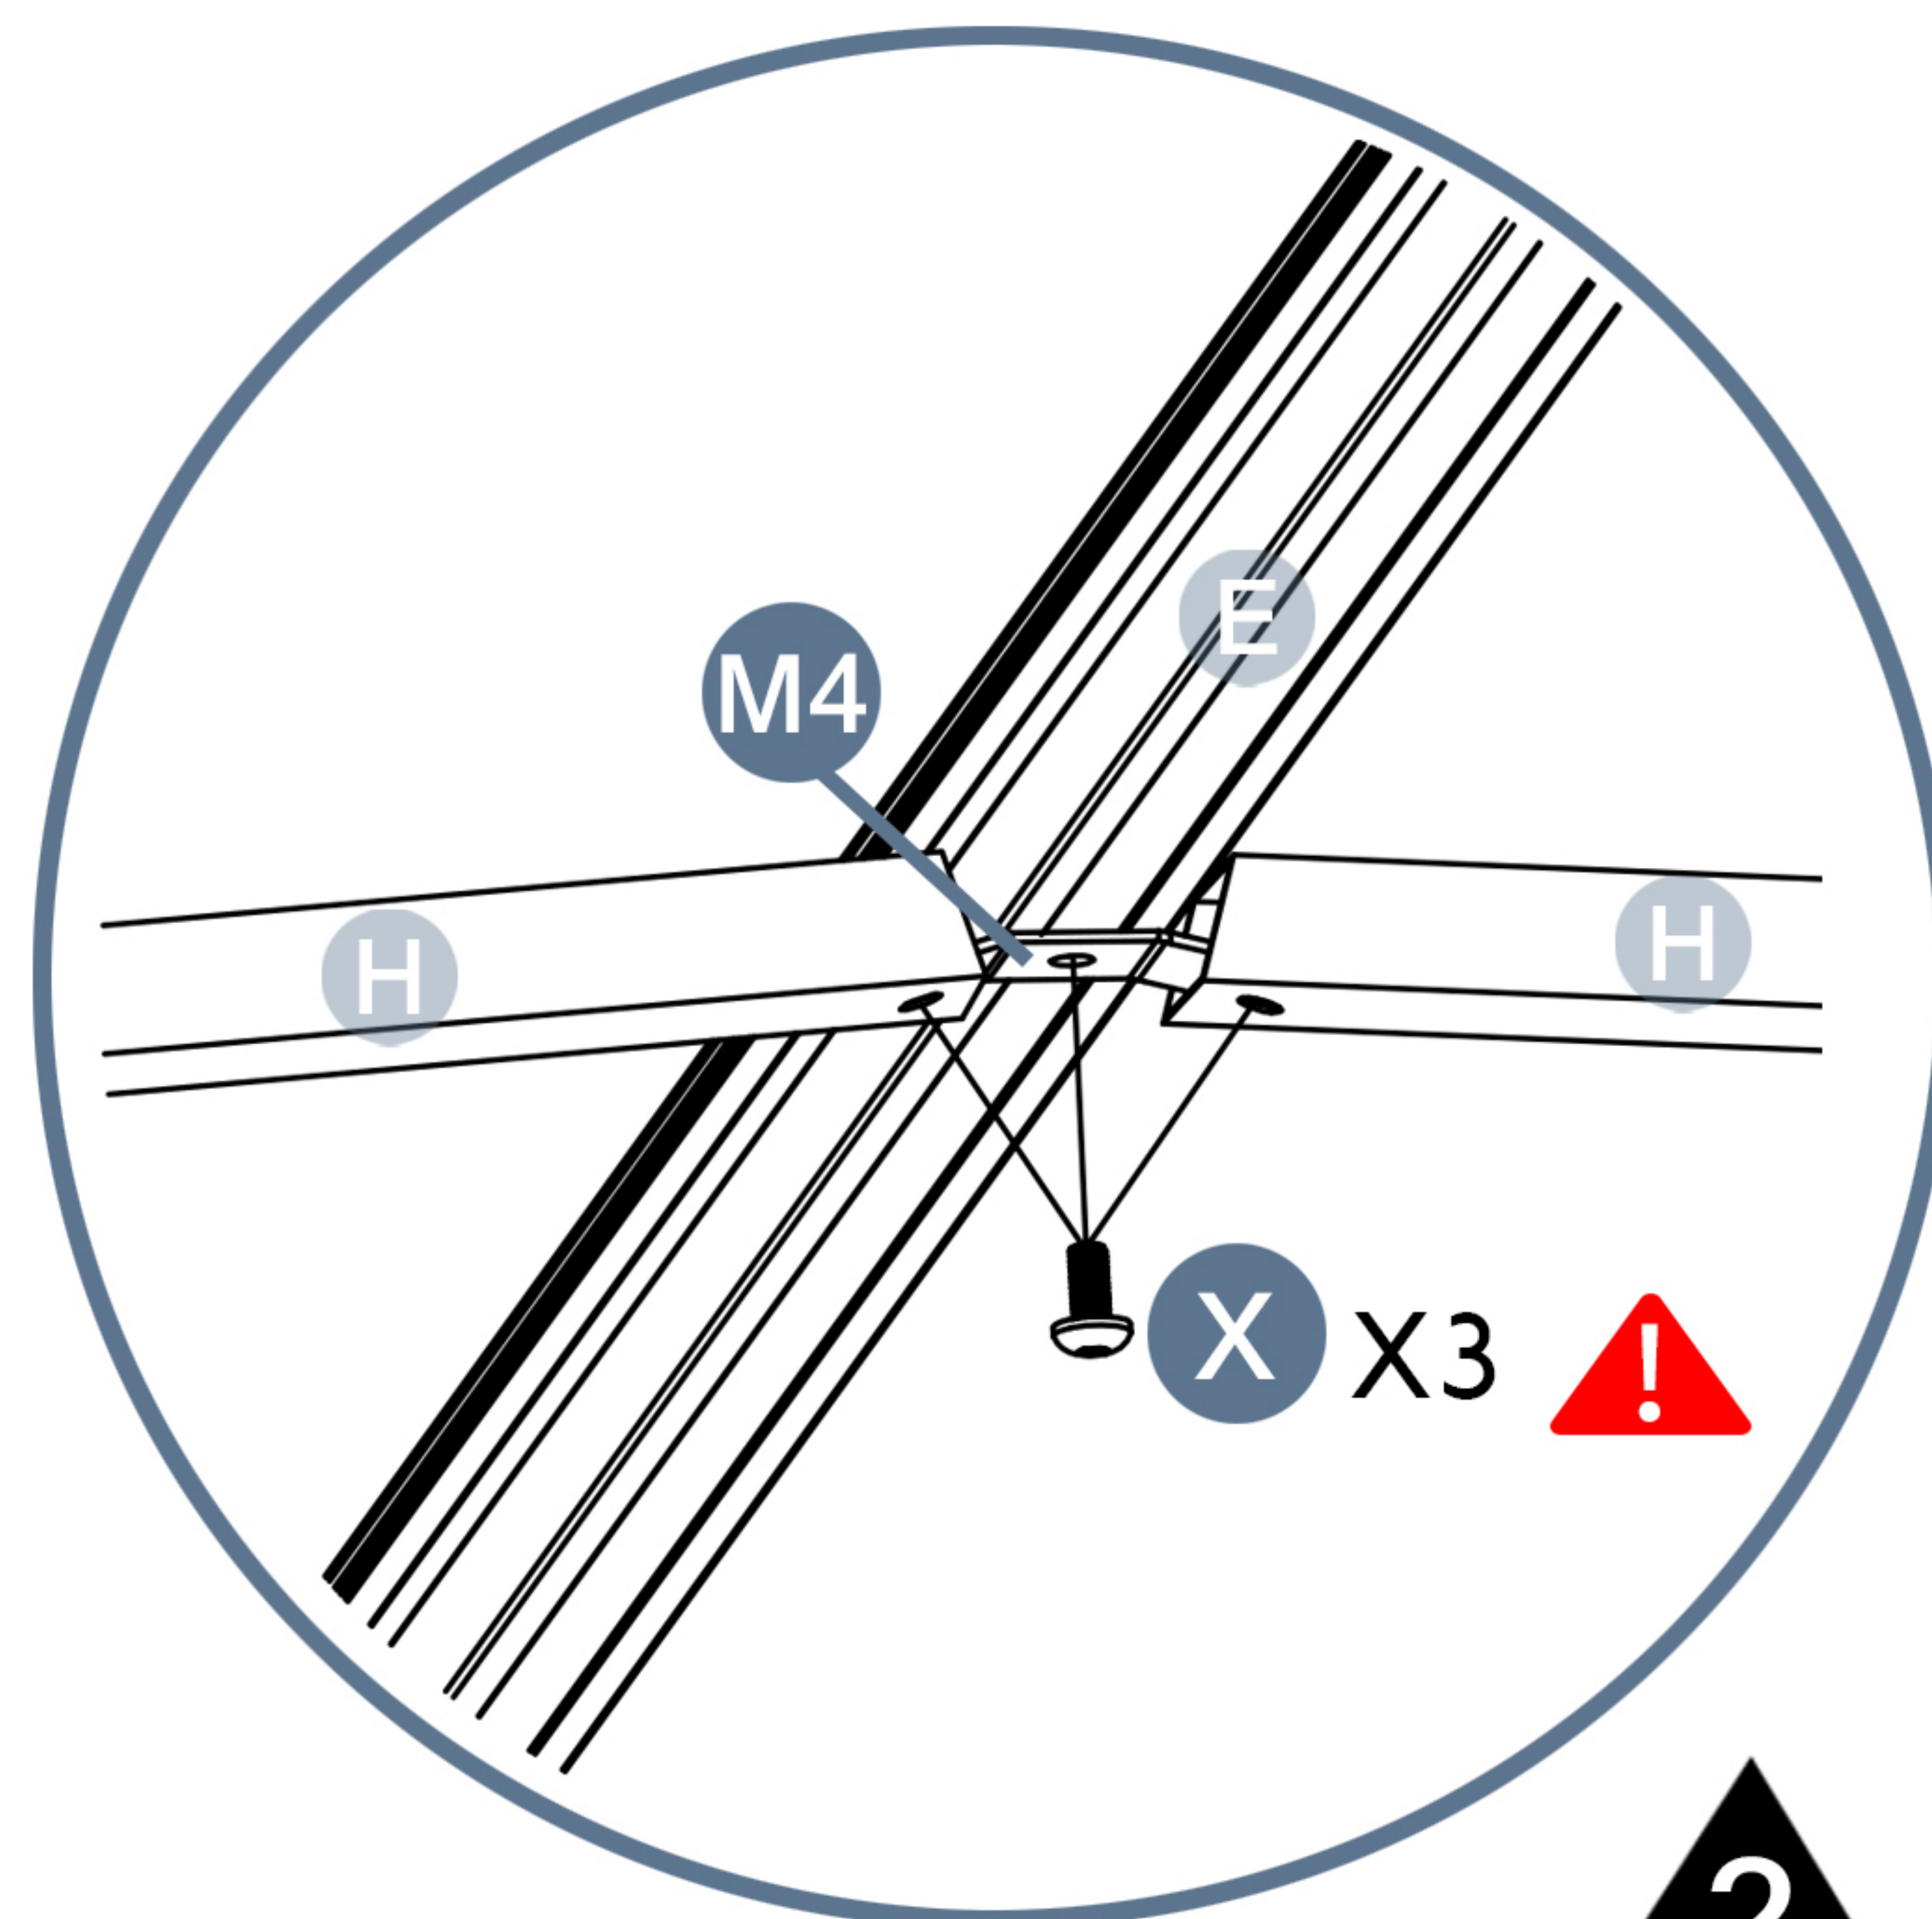


2

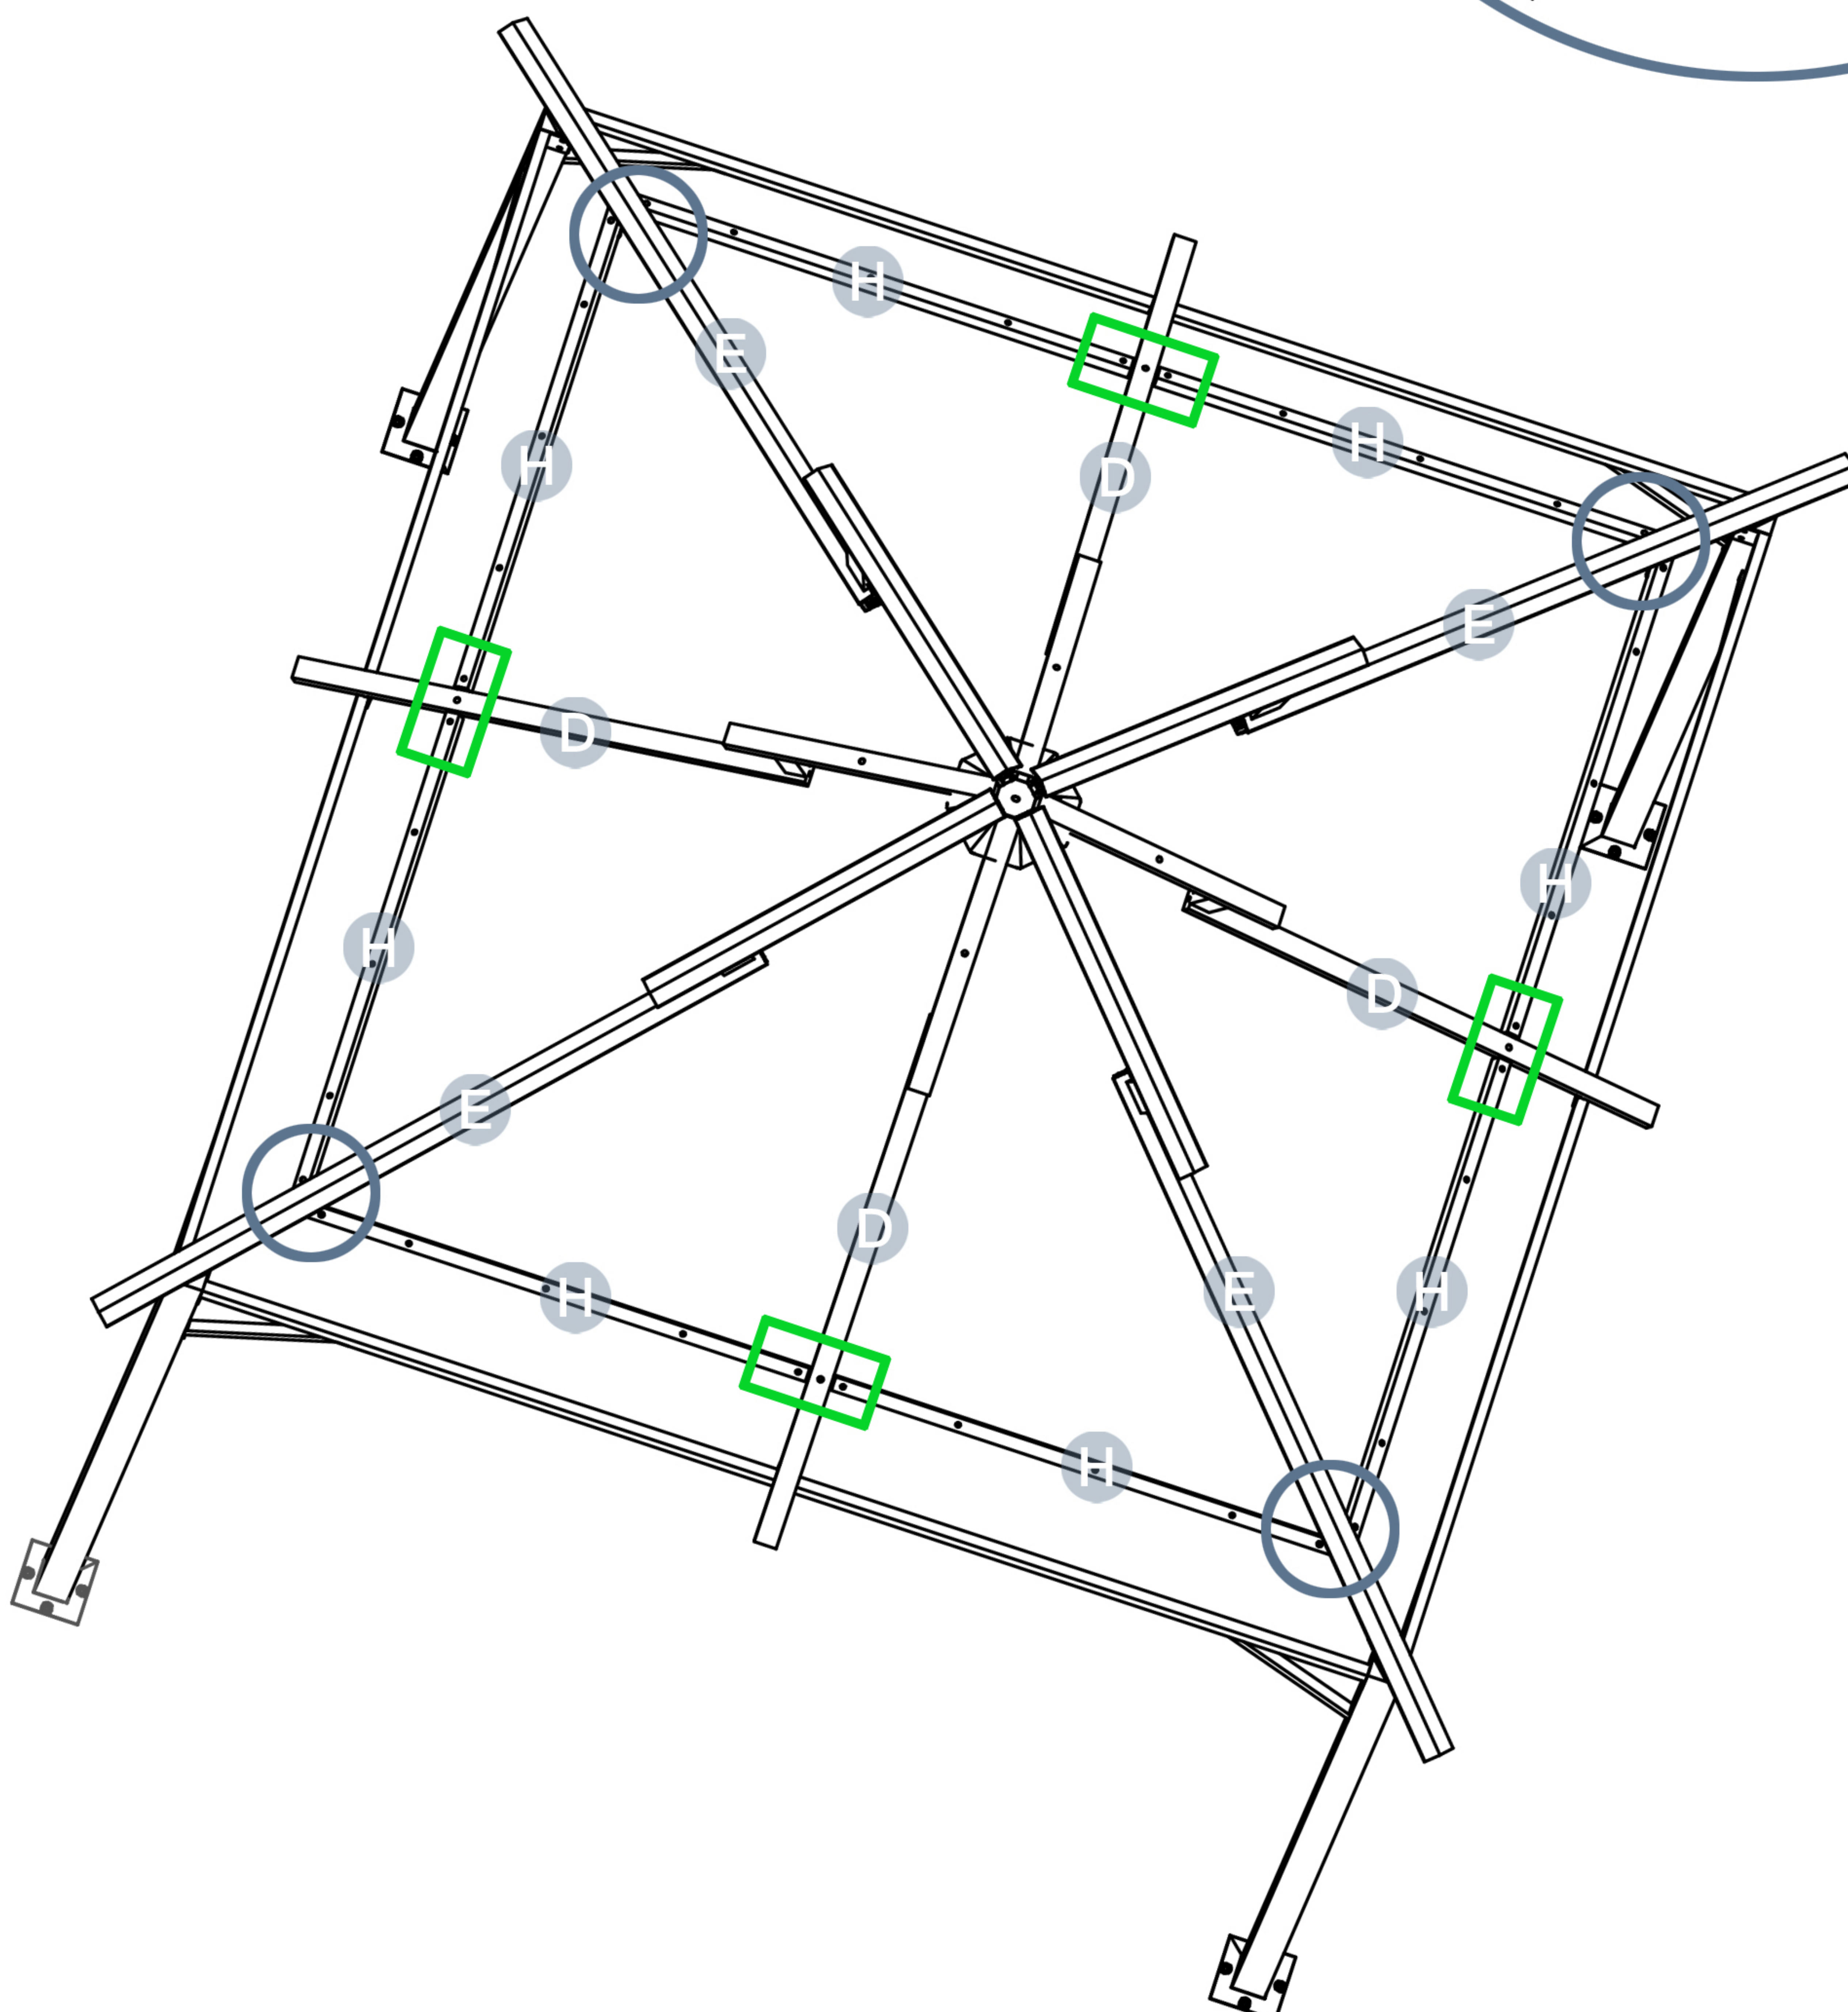




# STEP13

Parts required

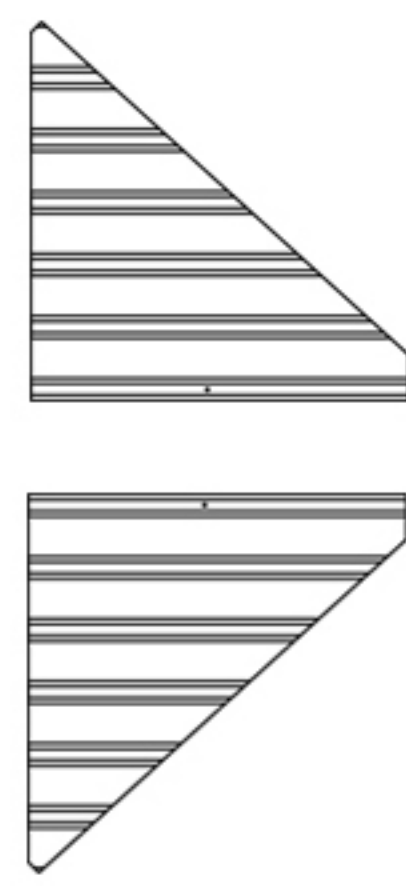

O4 4pcs

V4 4pcs

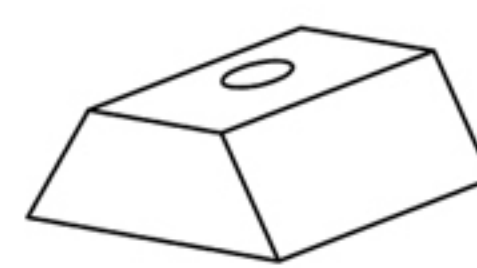


M5 4pcs



X1 4pcs

1 → 2 (Side view) → 3 ( Top view)


Please refer to the image P1-1 for installation.

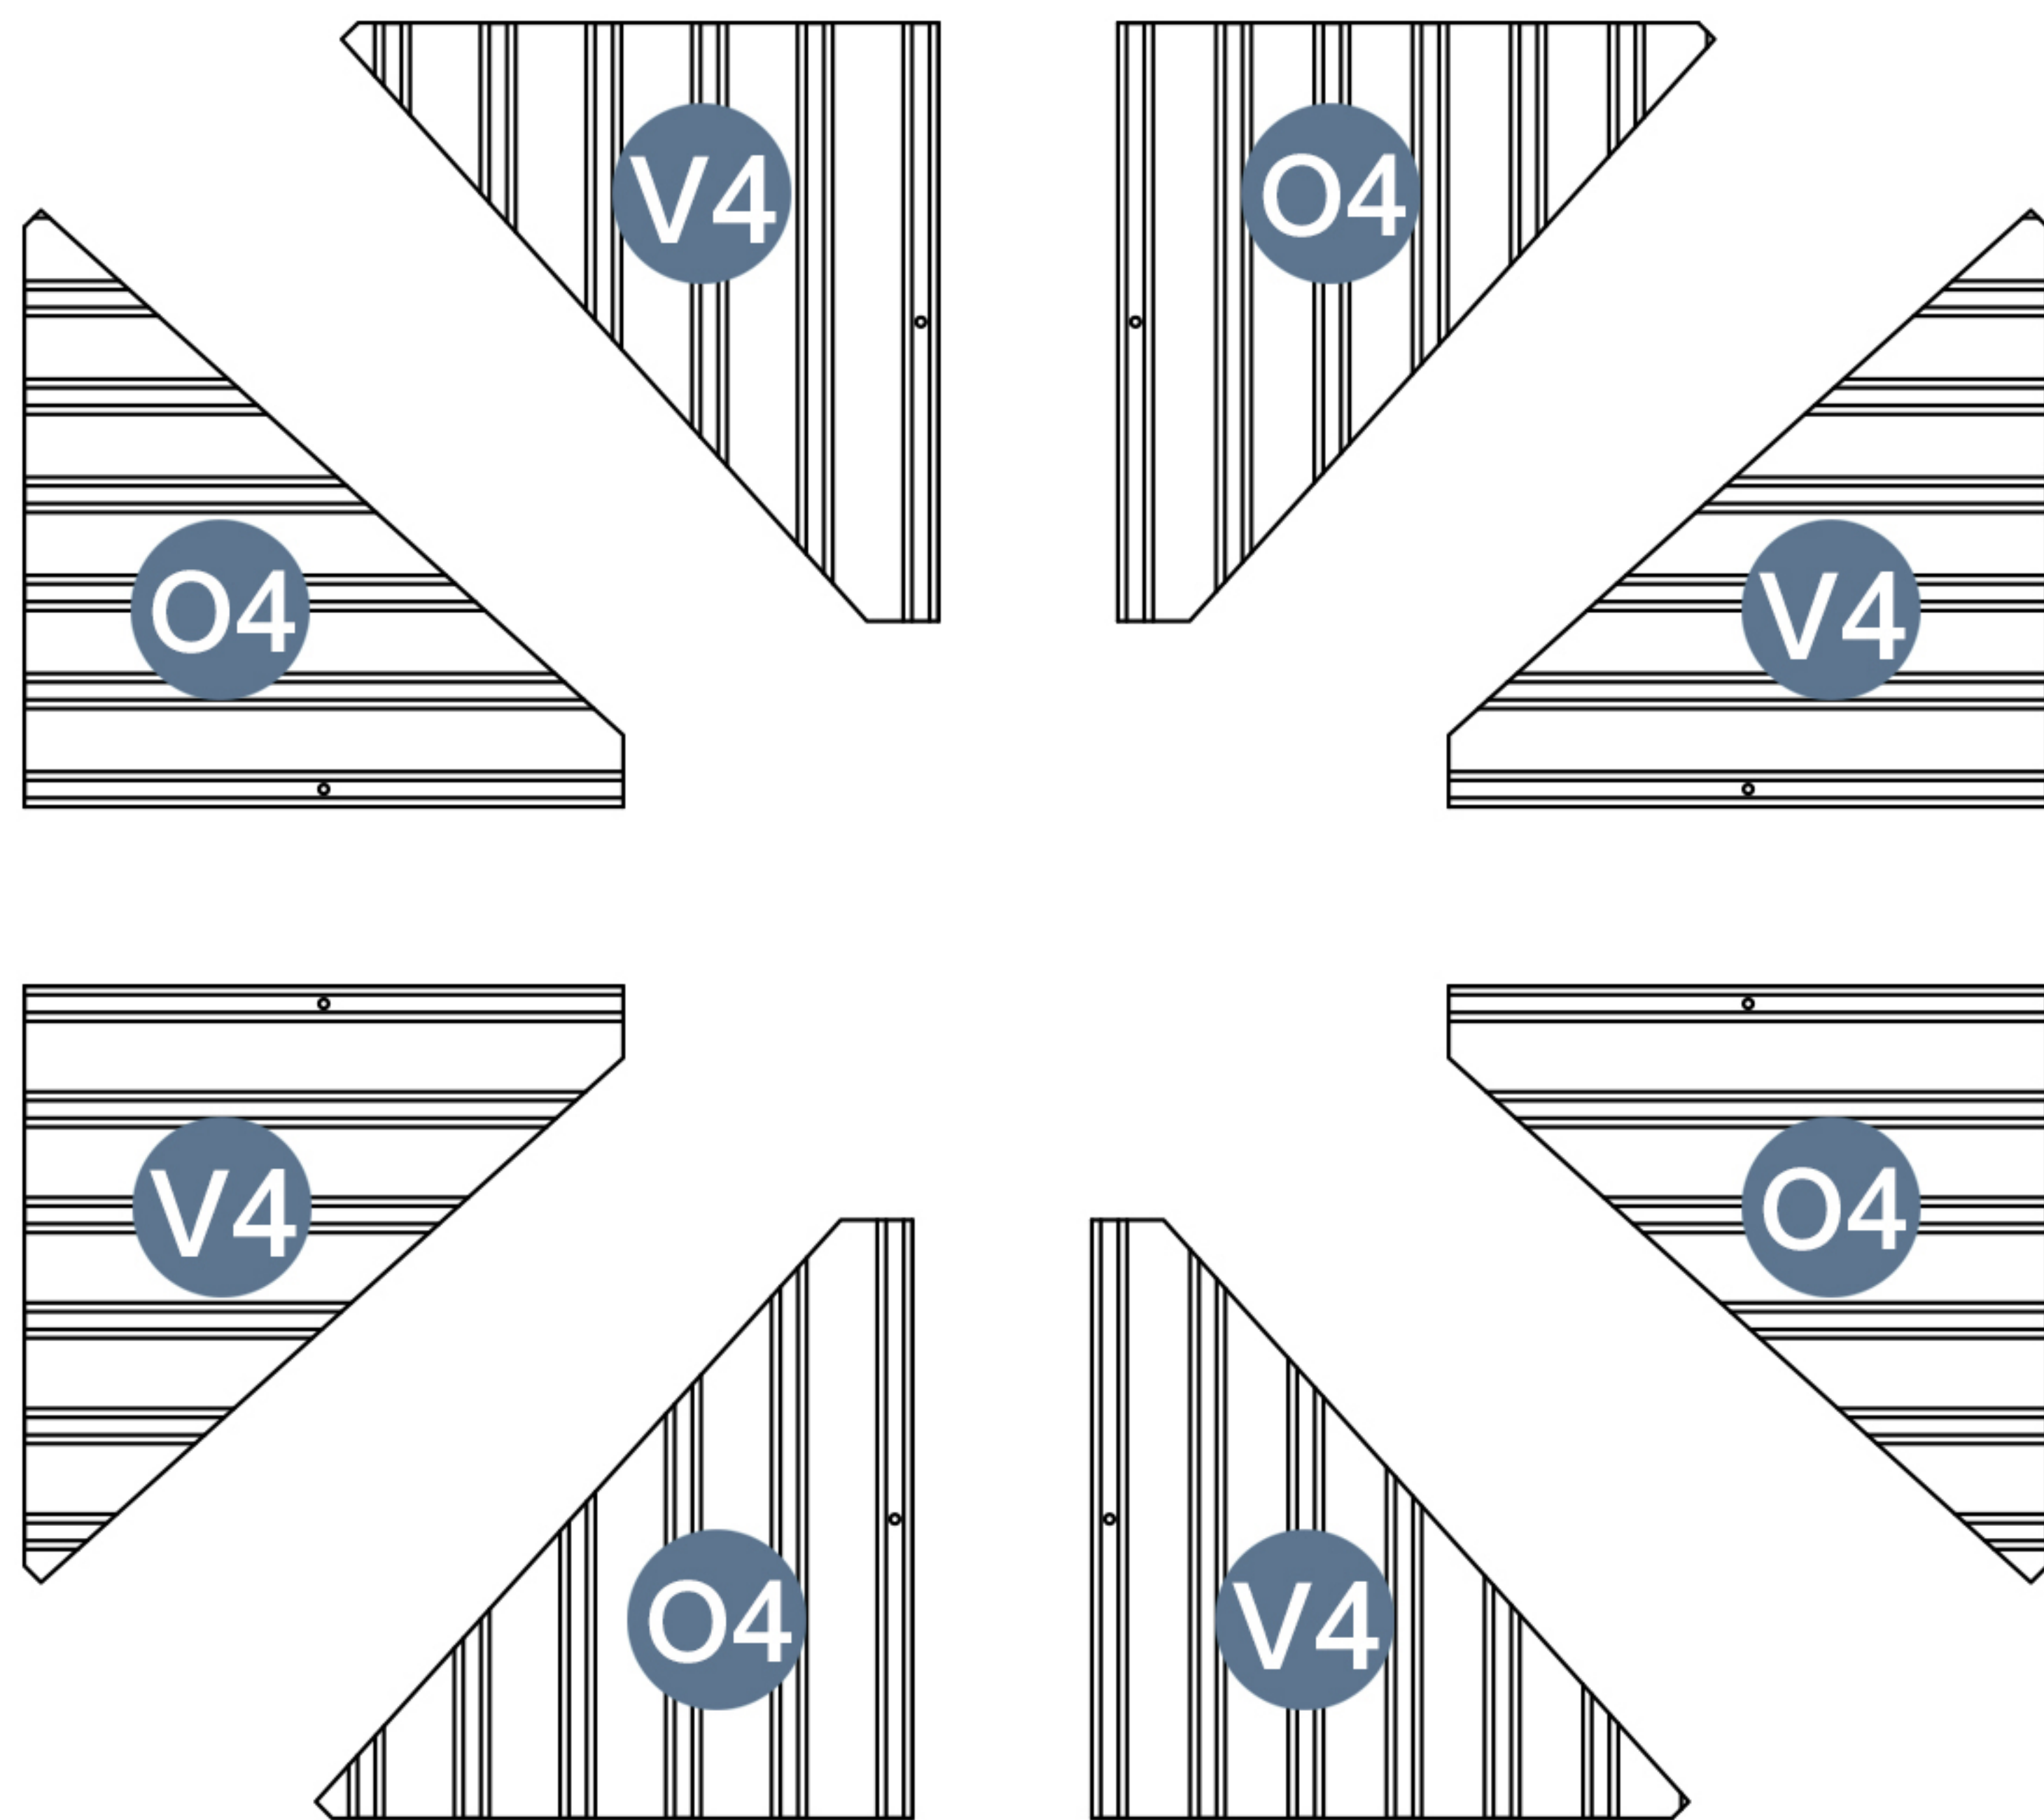


• P1-1

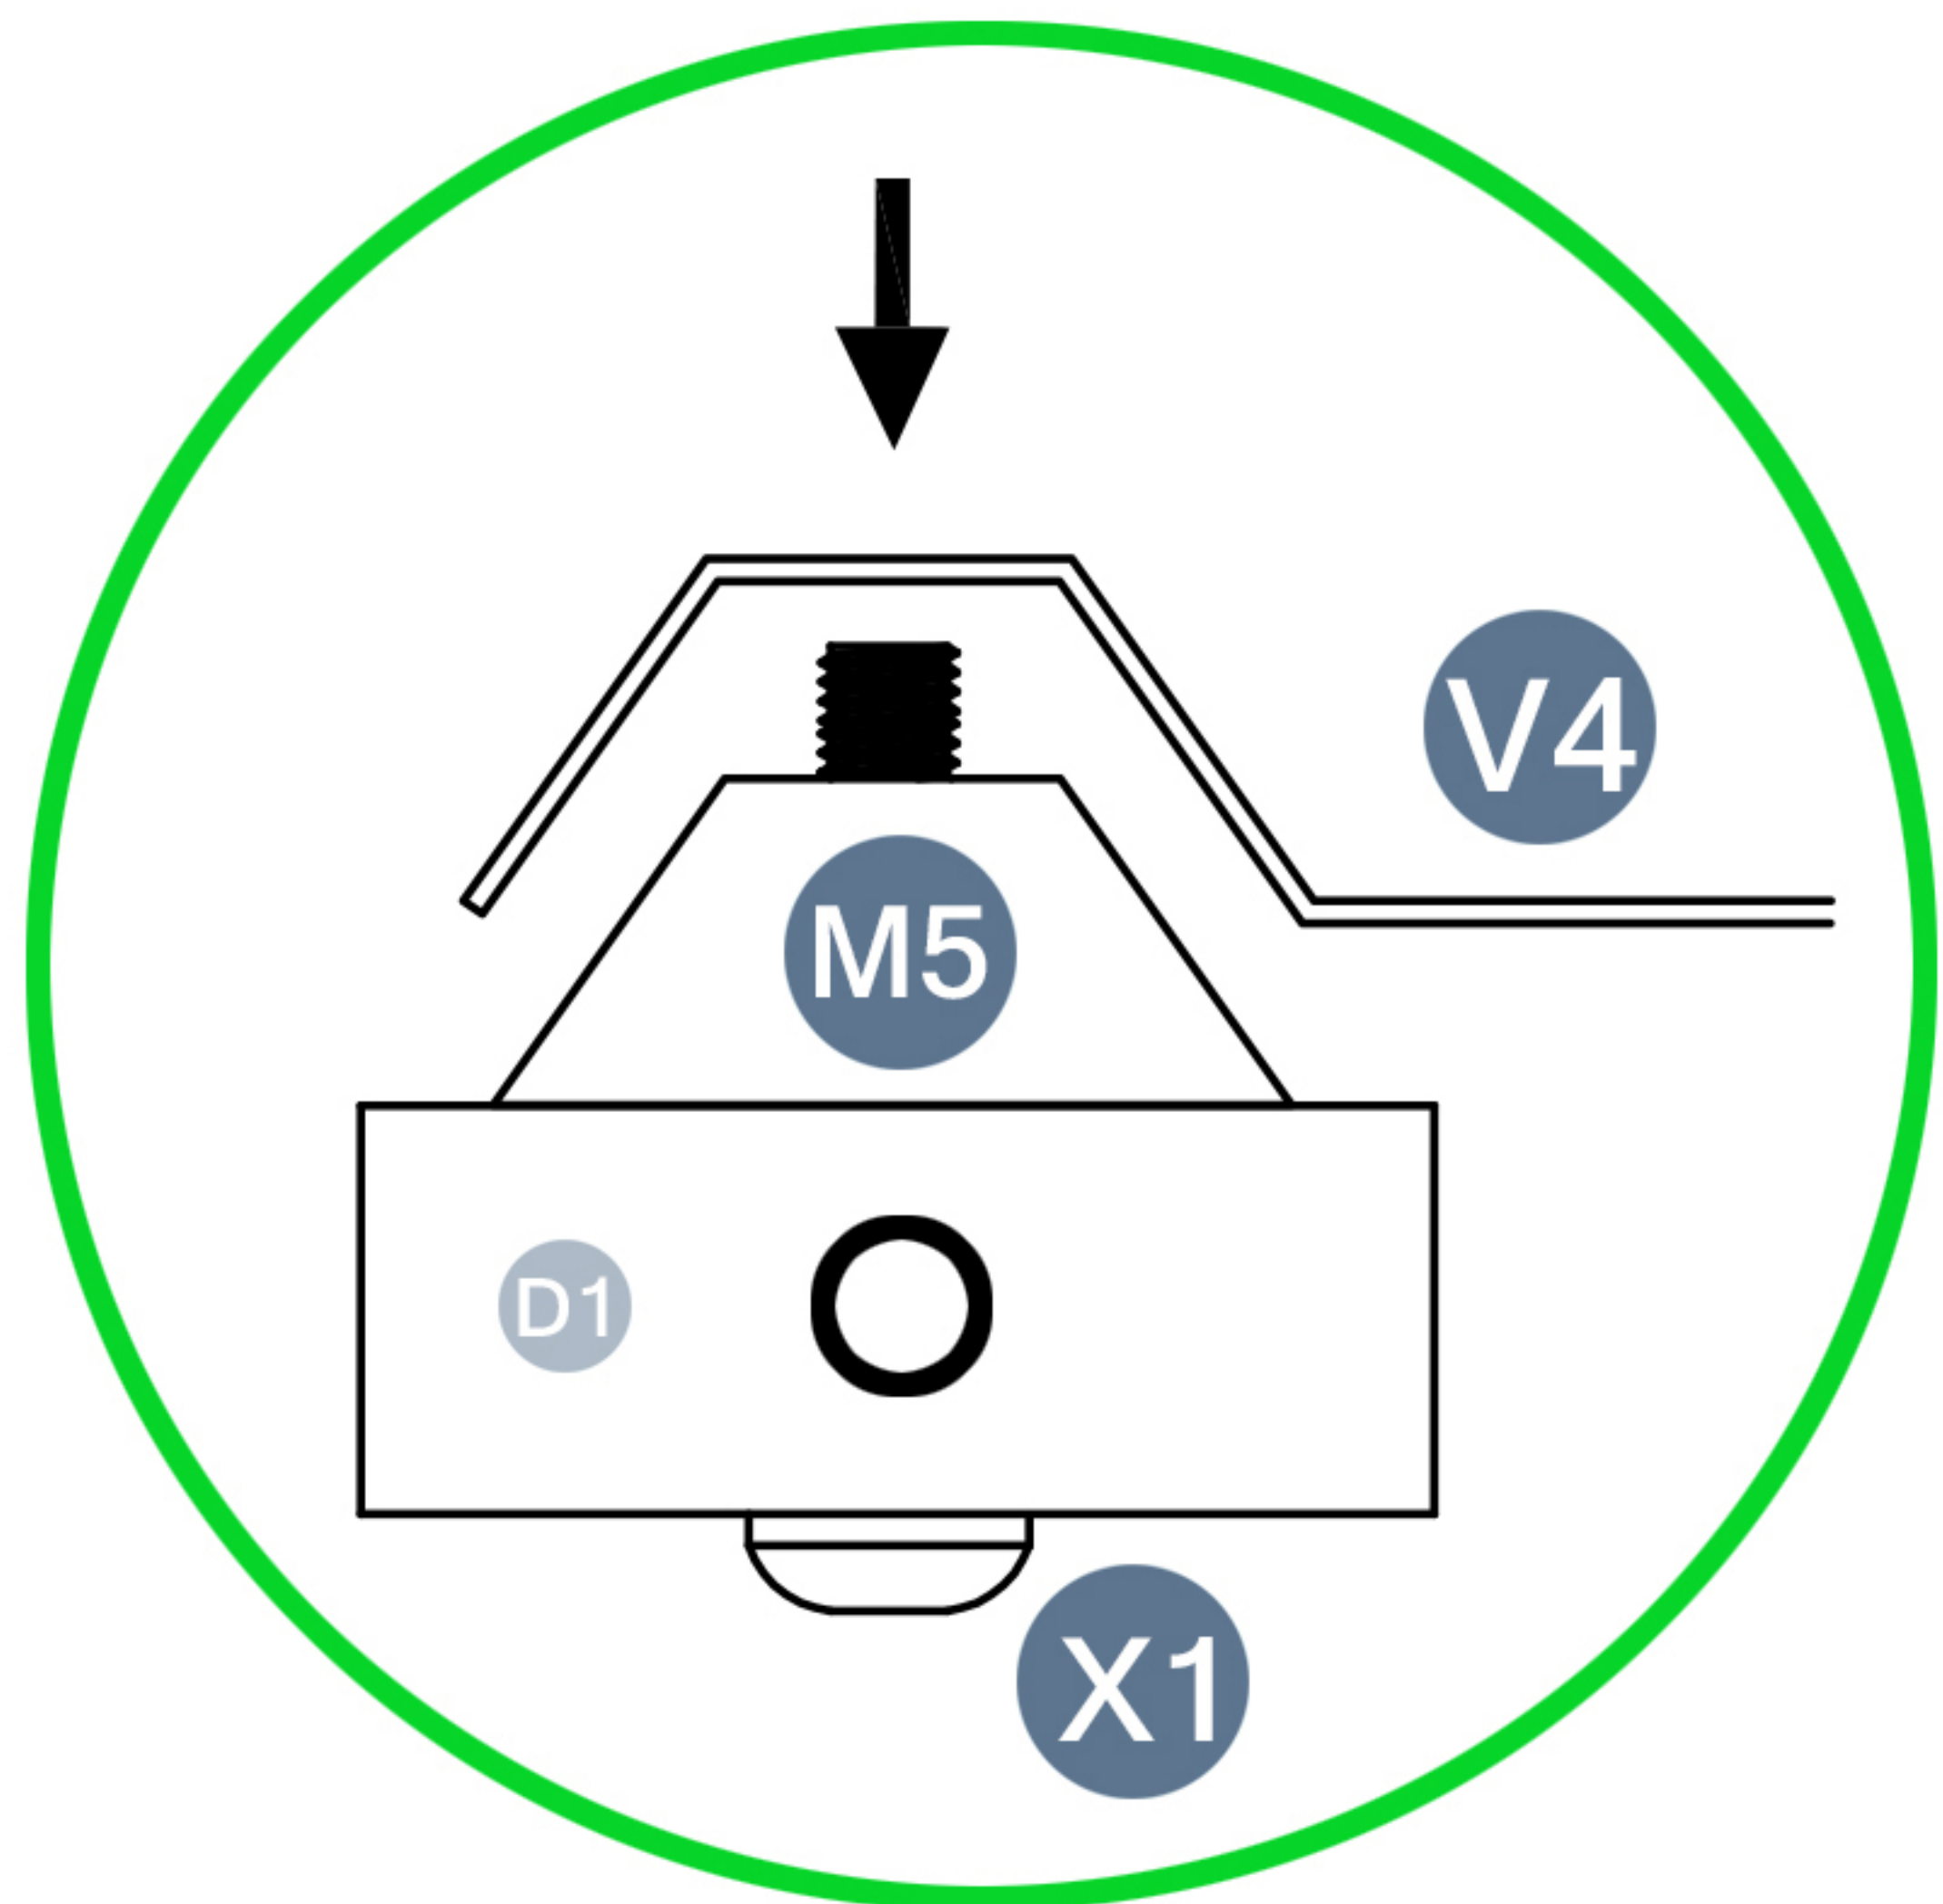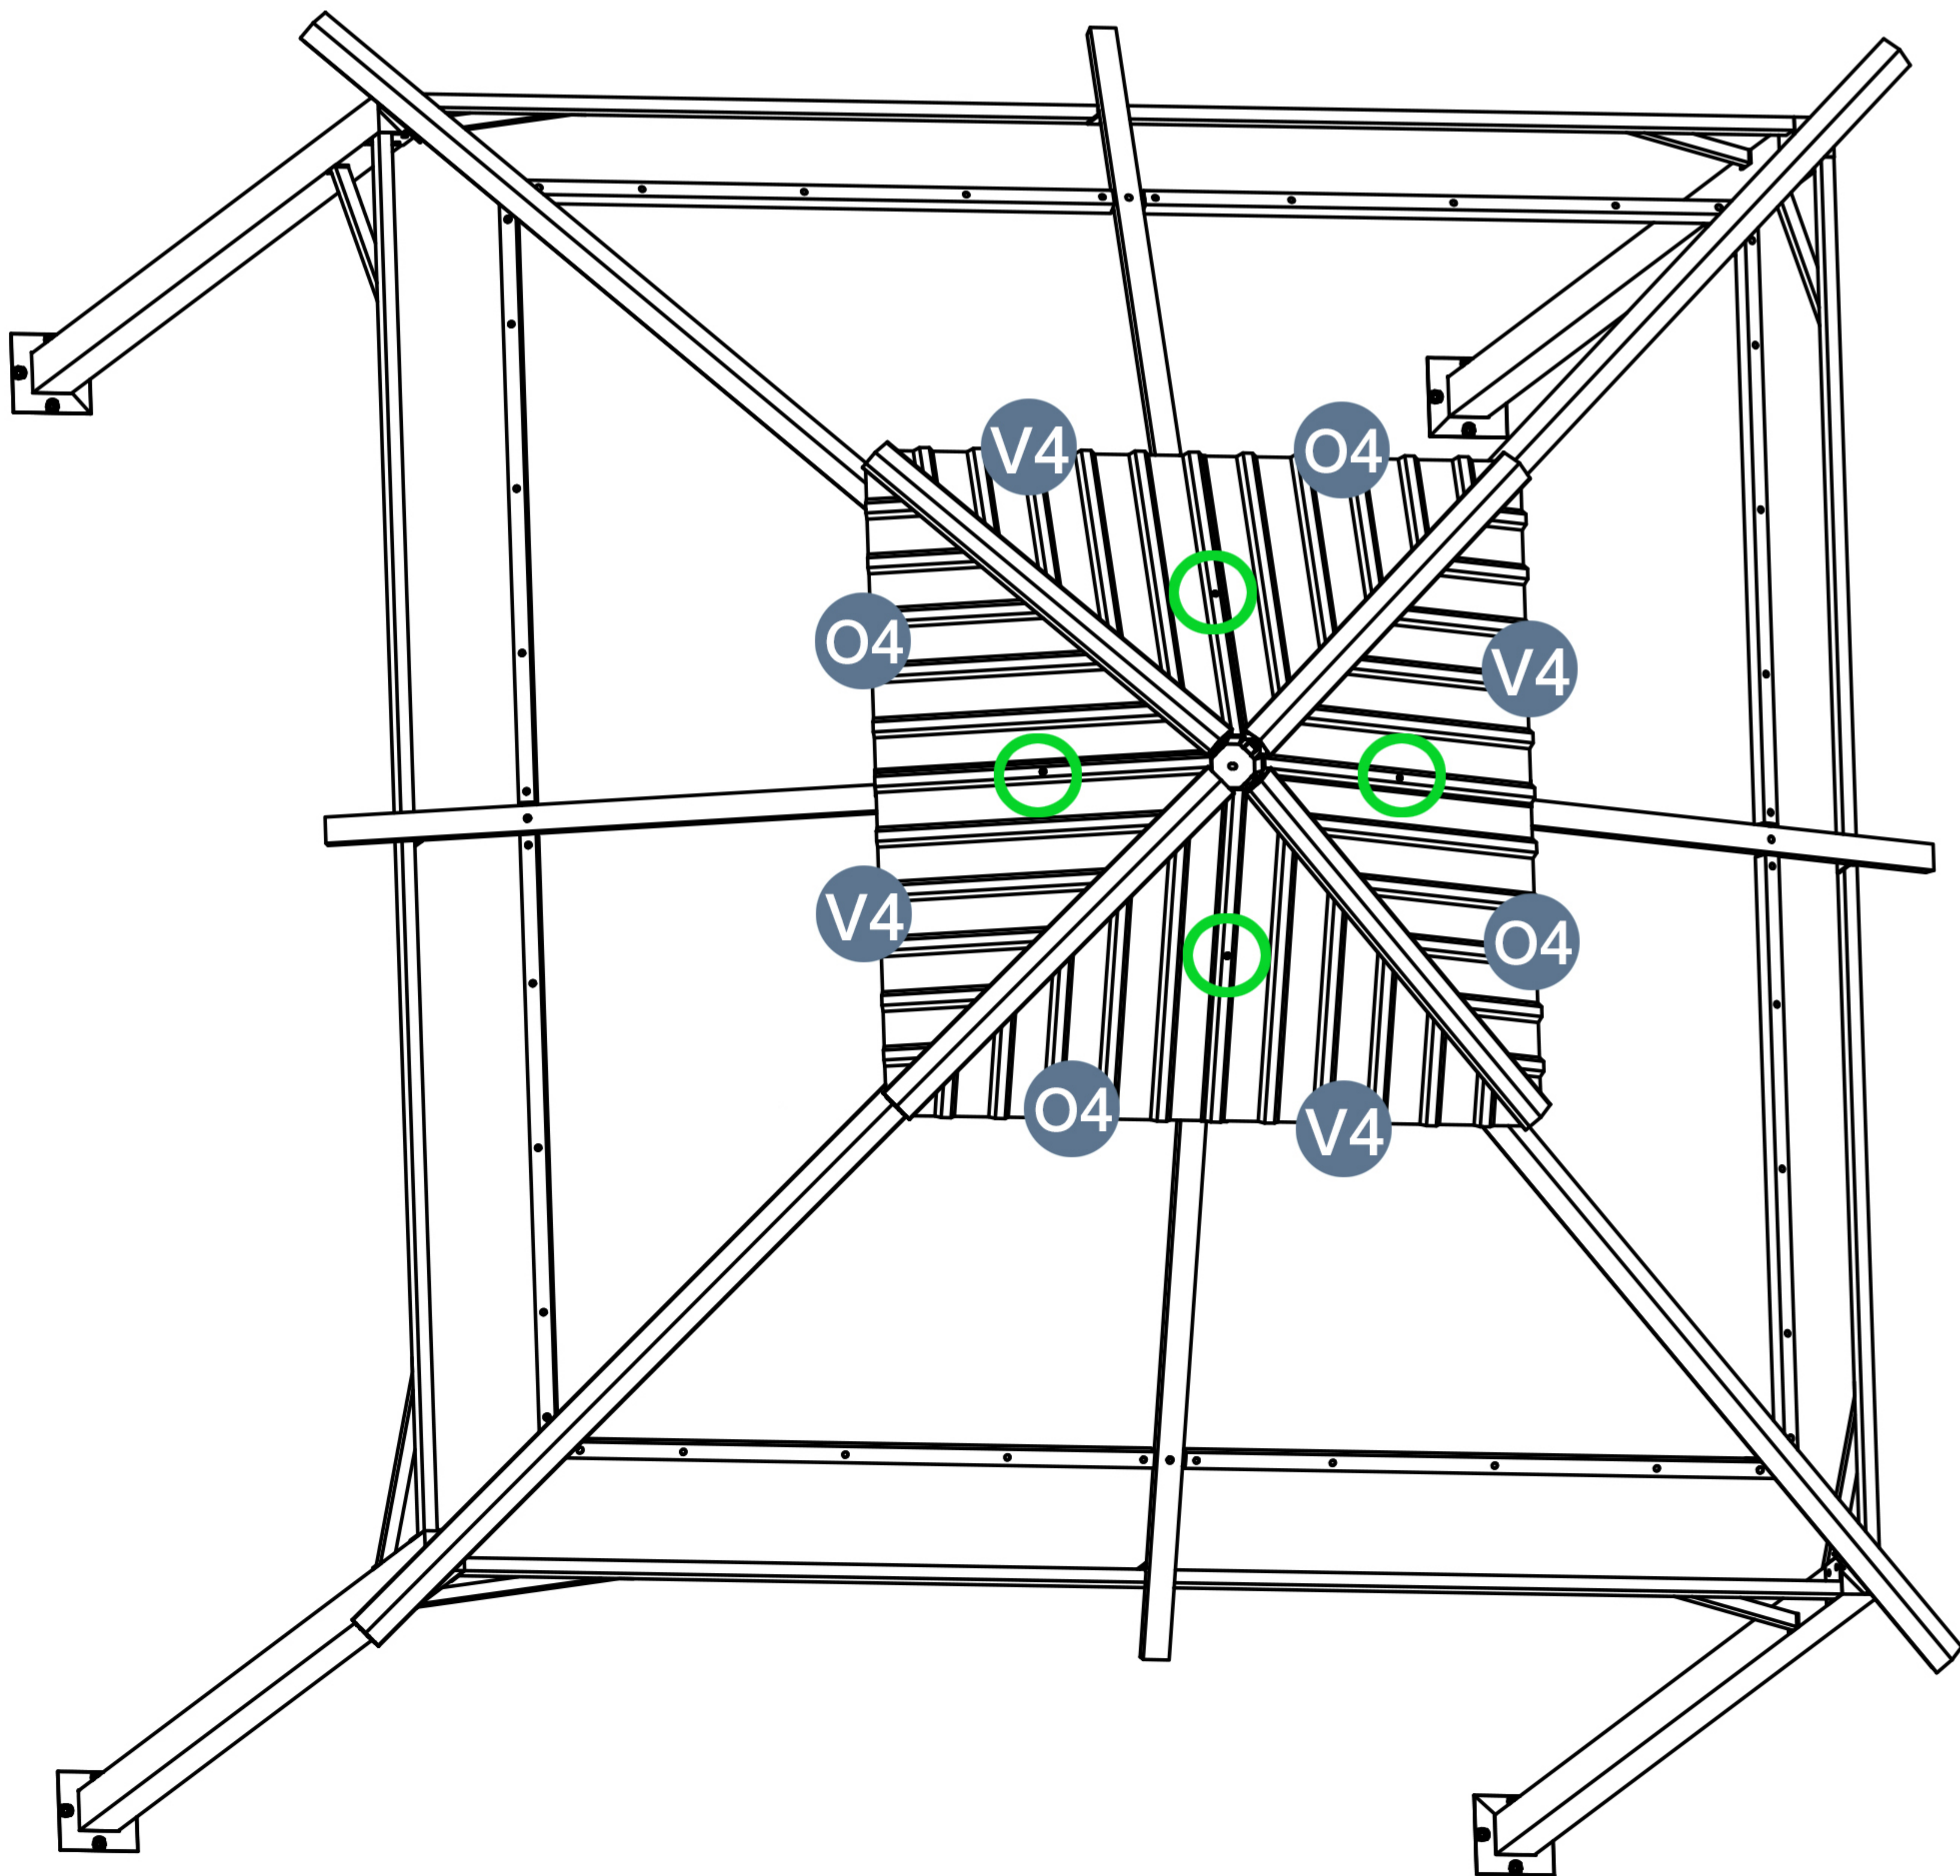

1

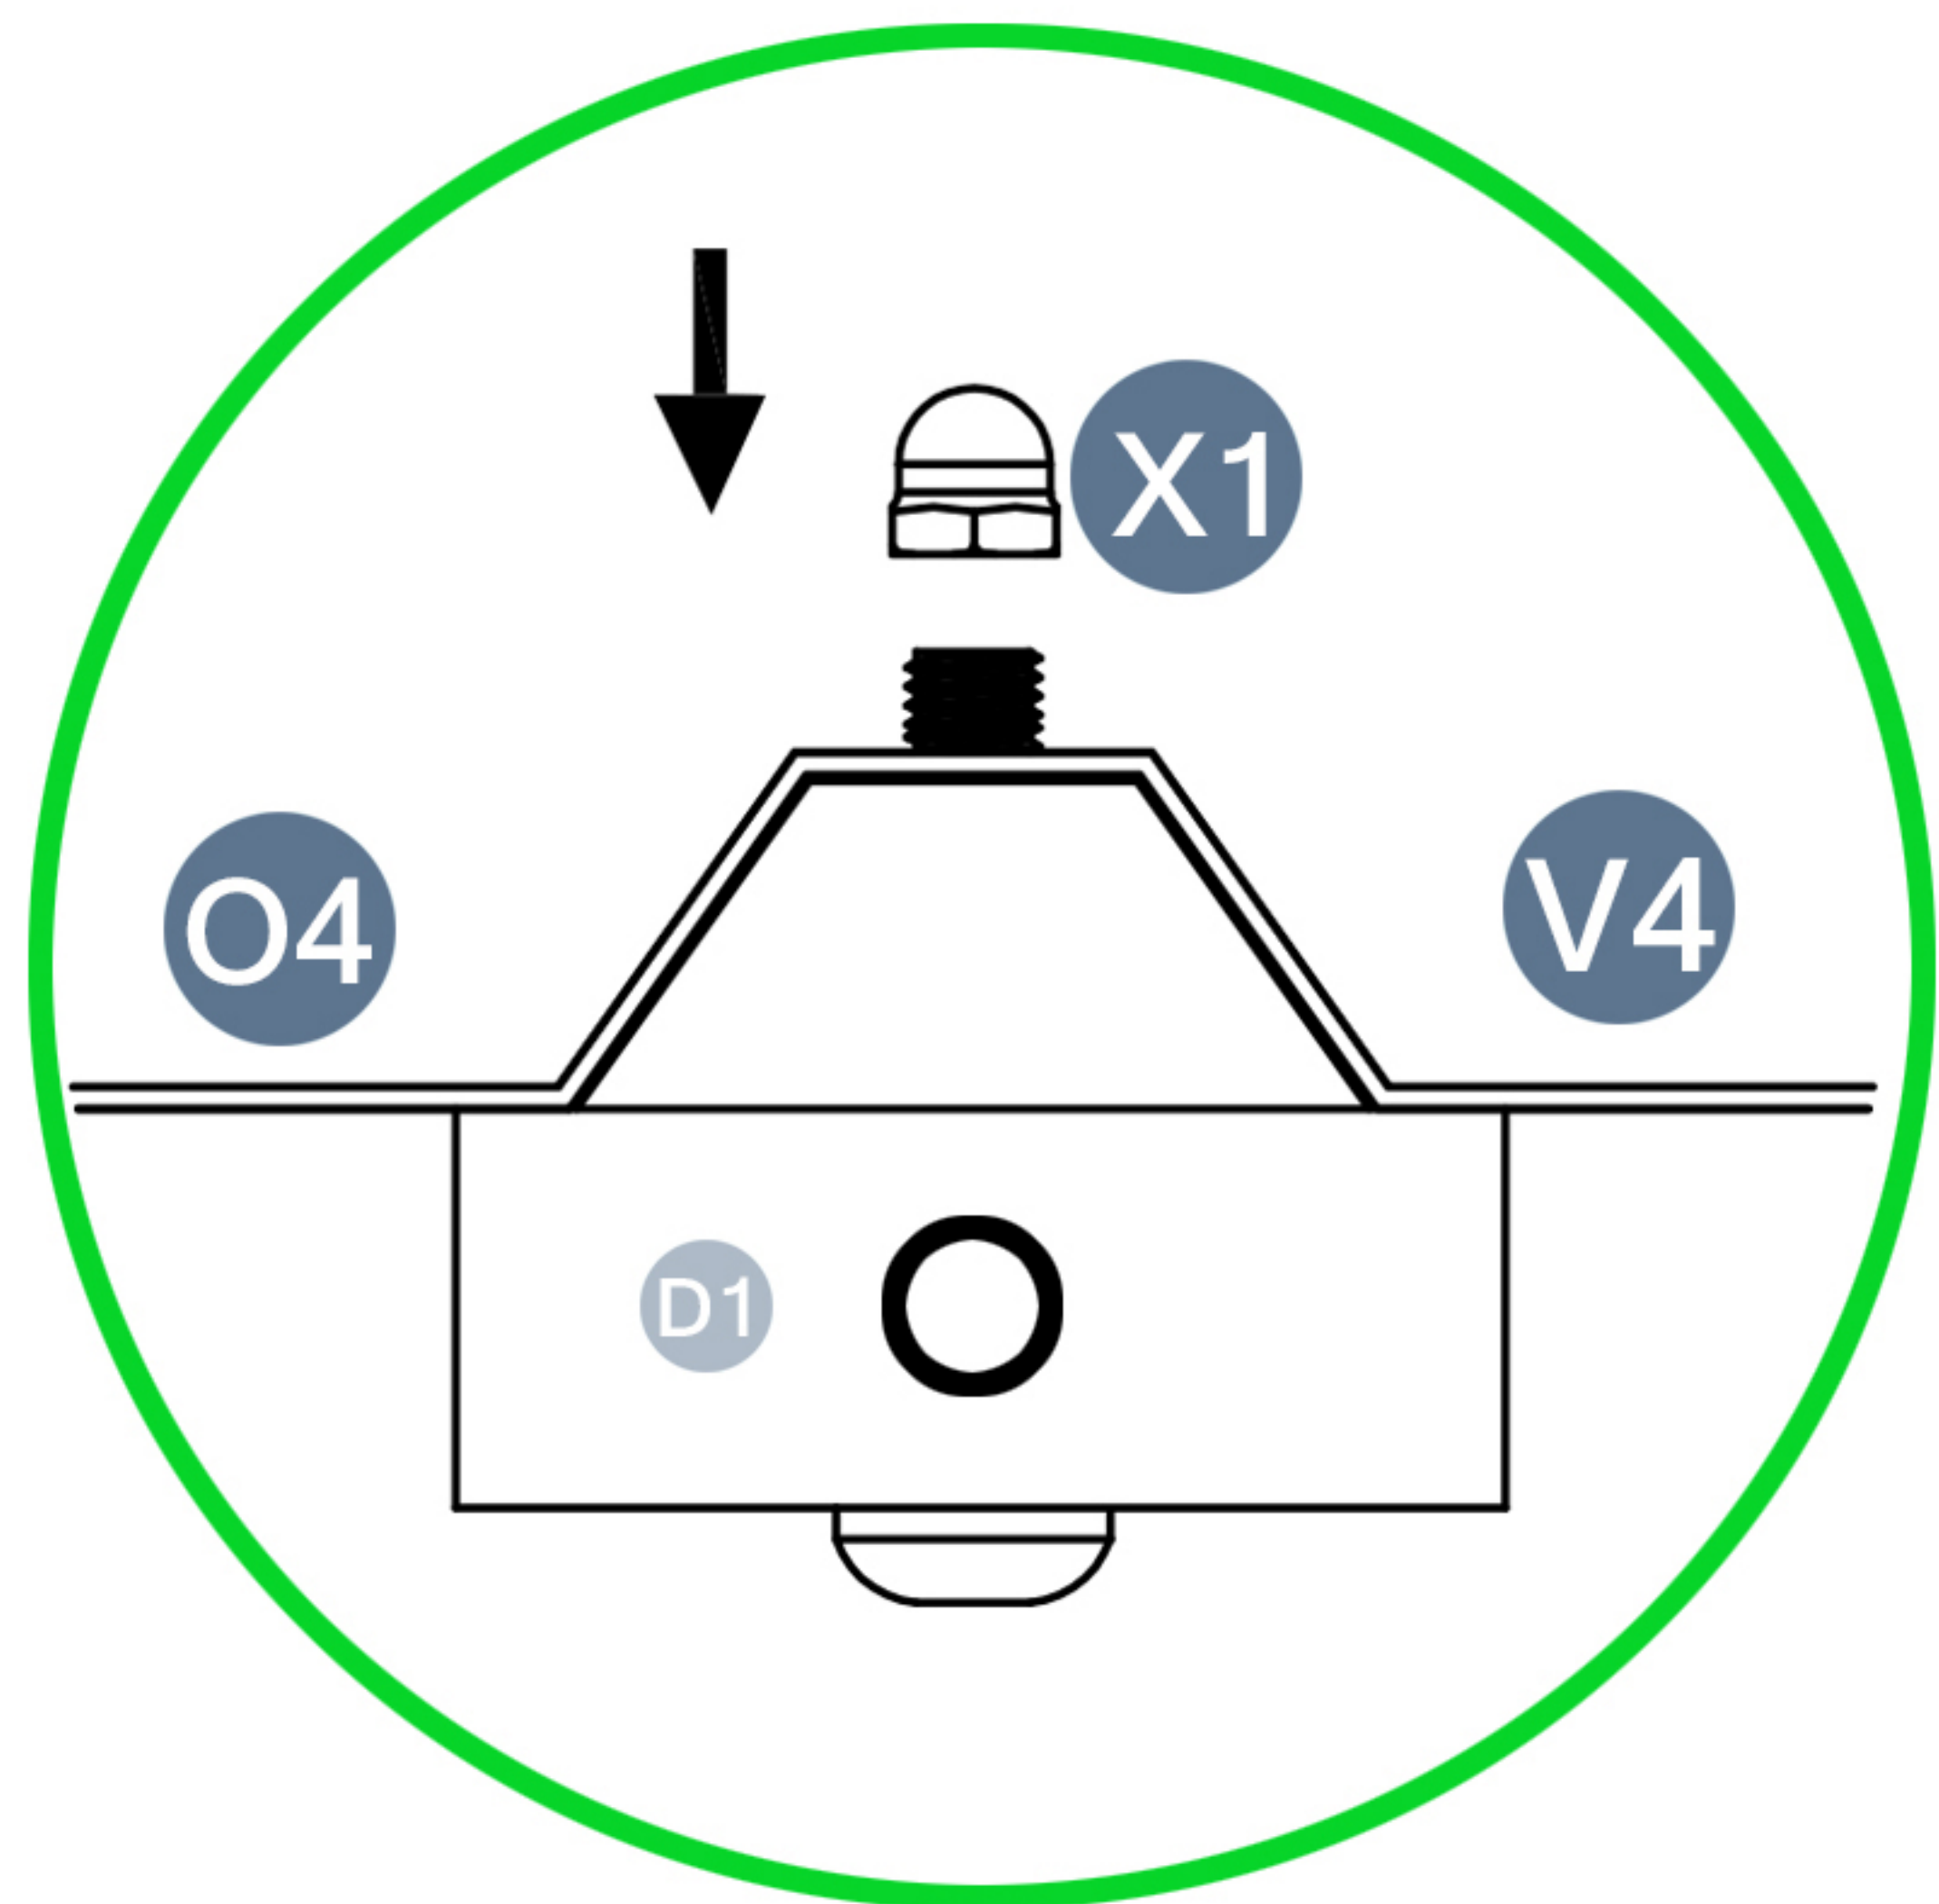

2

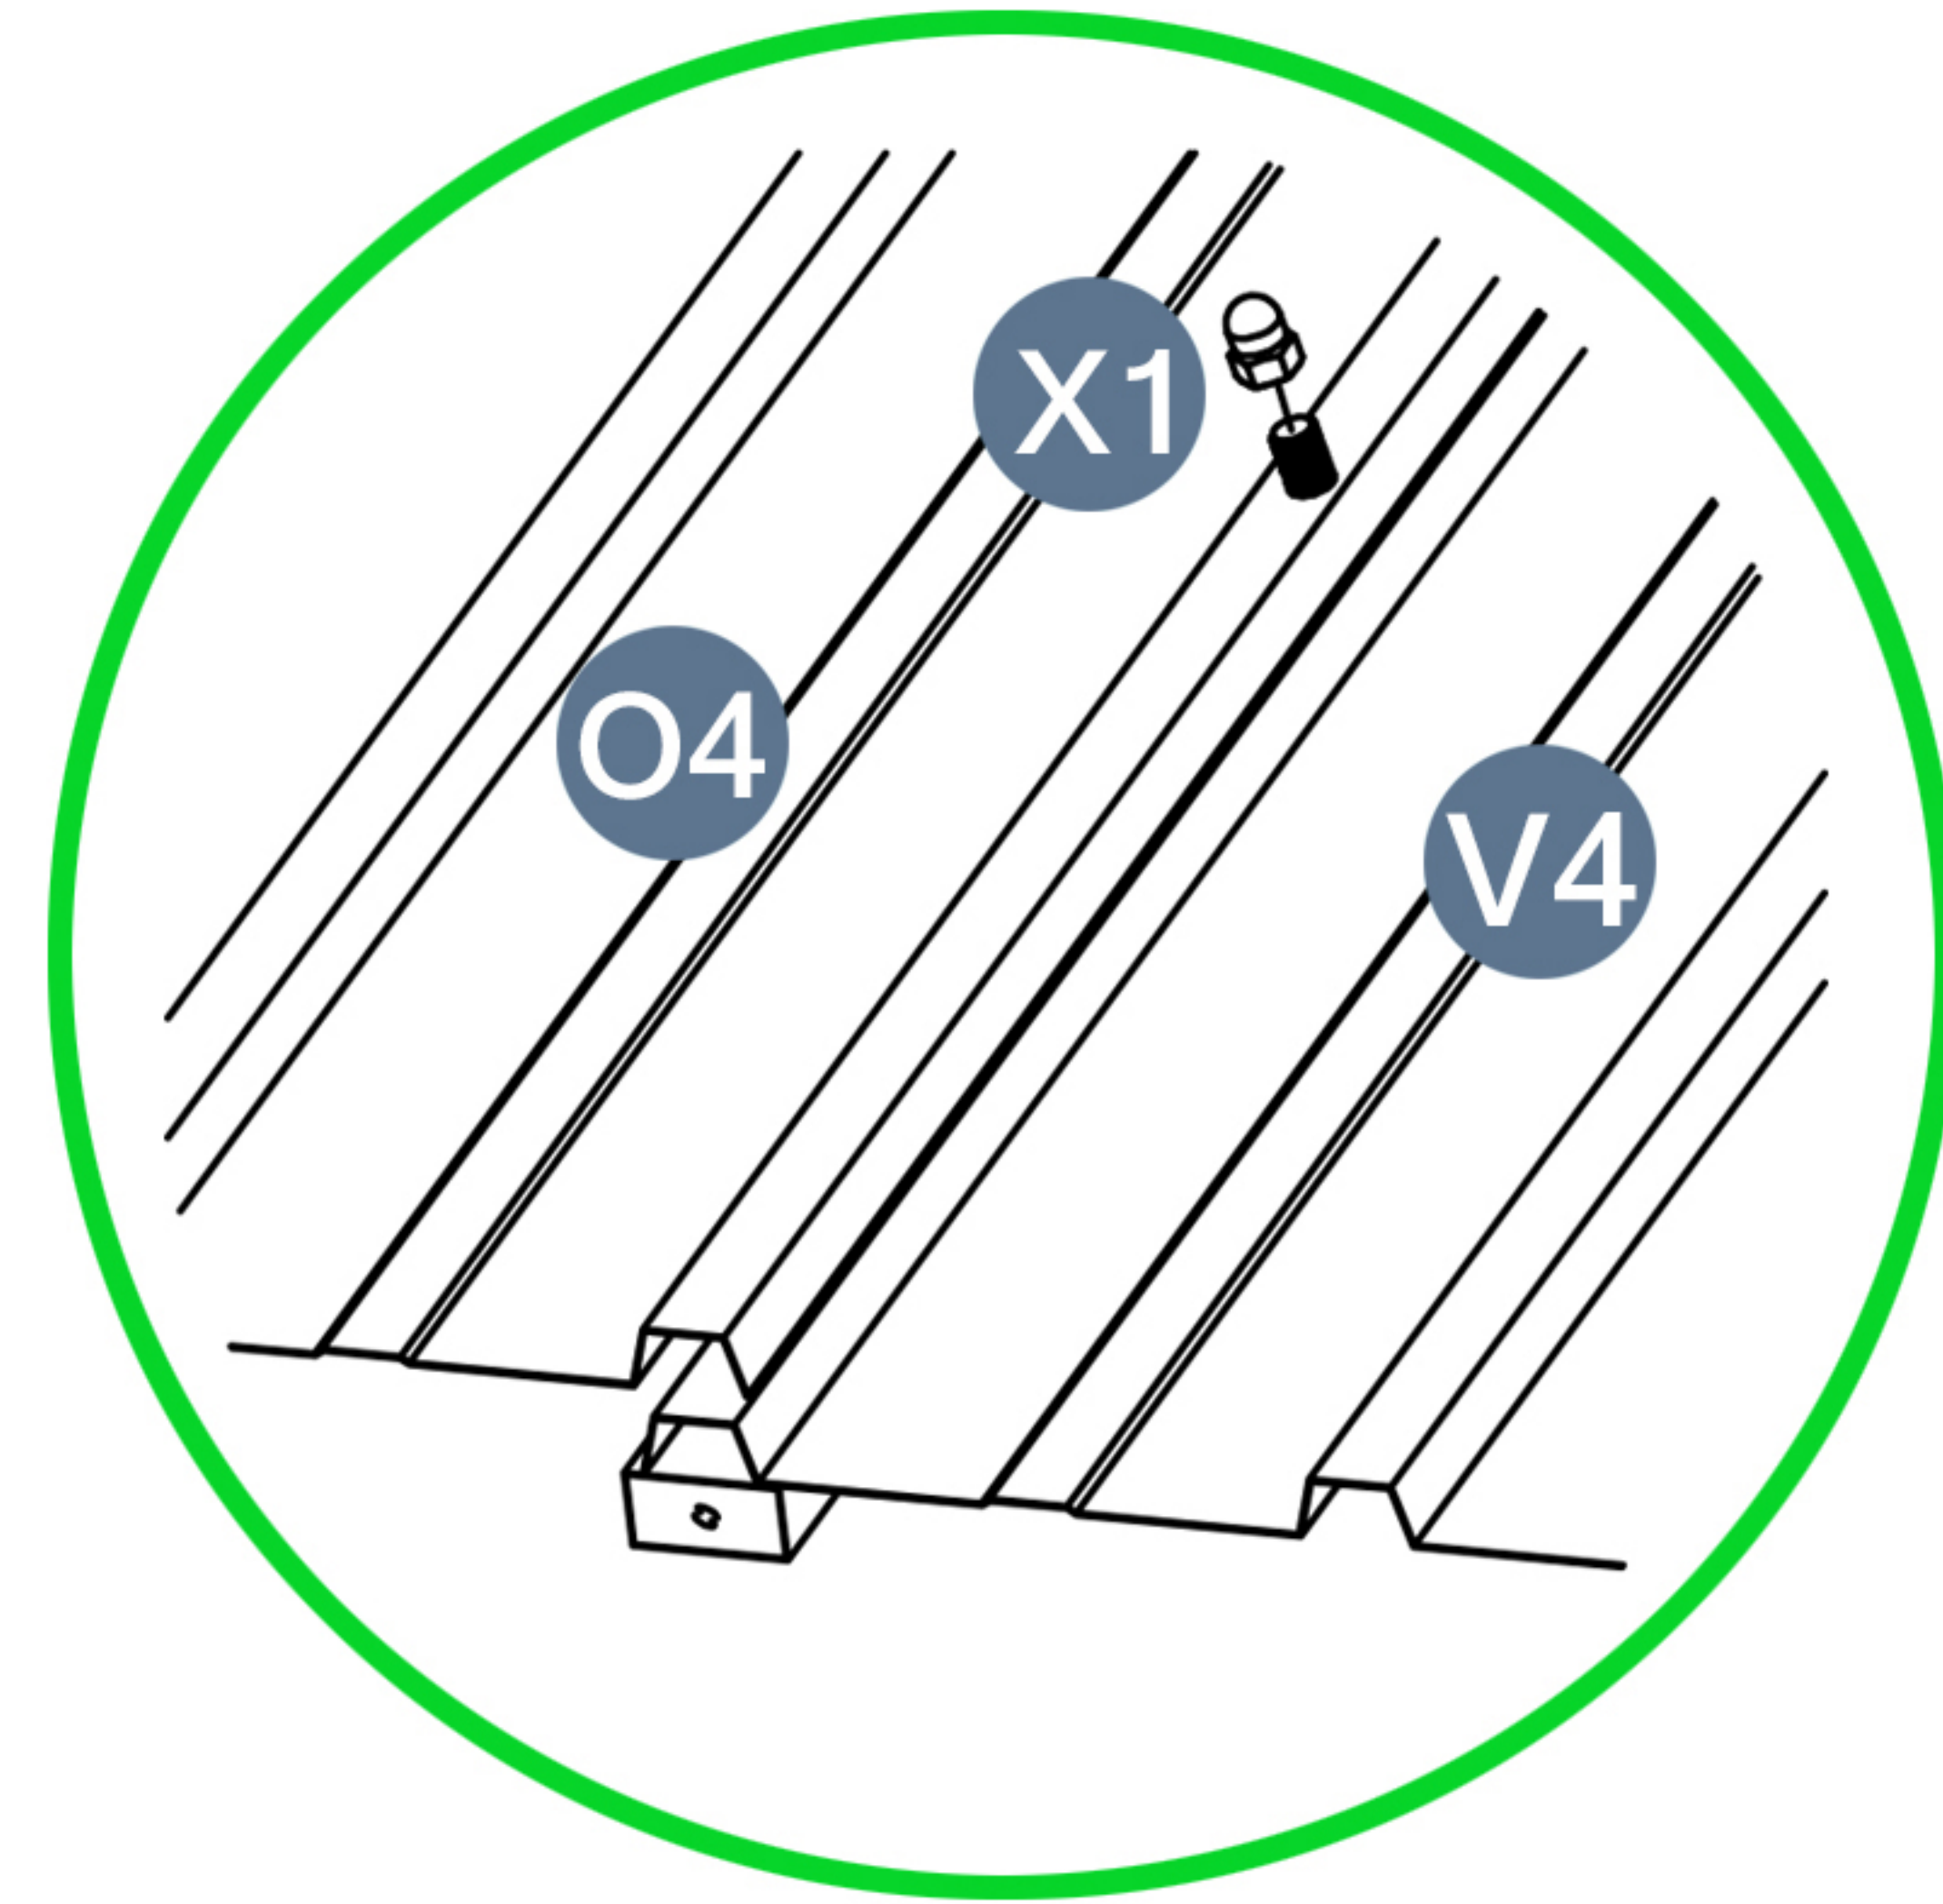


3




# STEP 14

Parts required

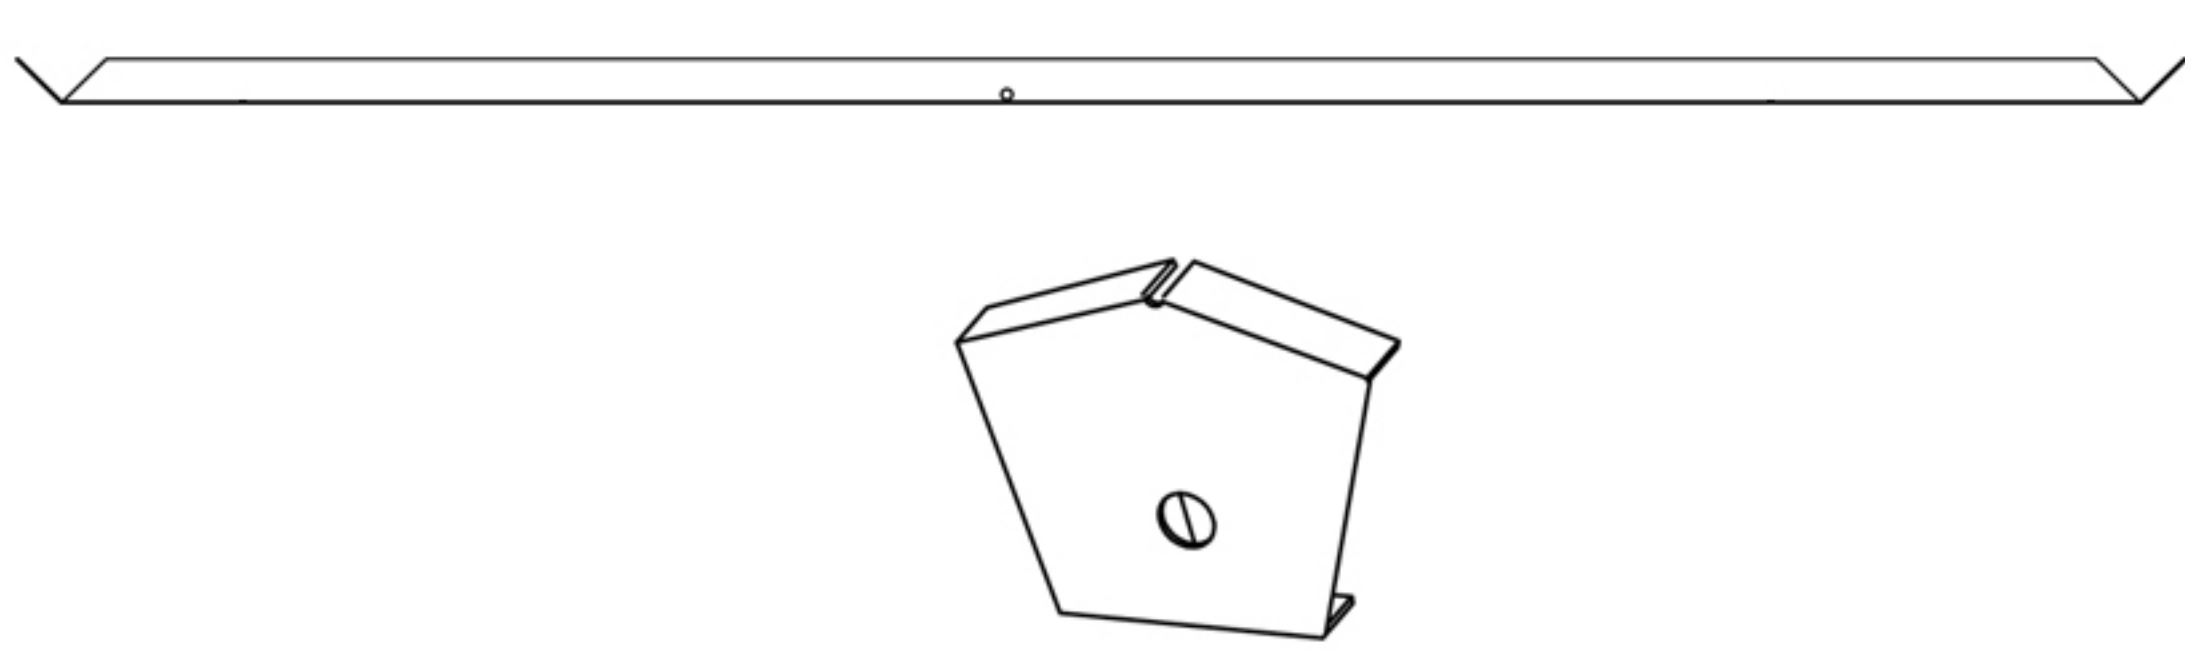


G5 4pcs  
M2 4pcs

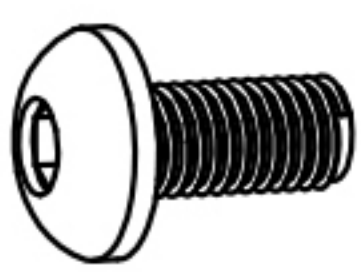


X 8pcs


1 → 2

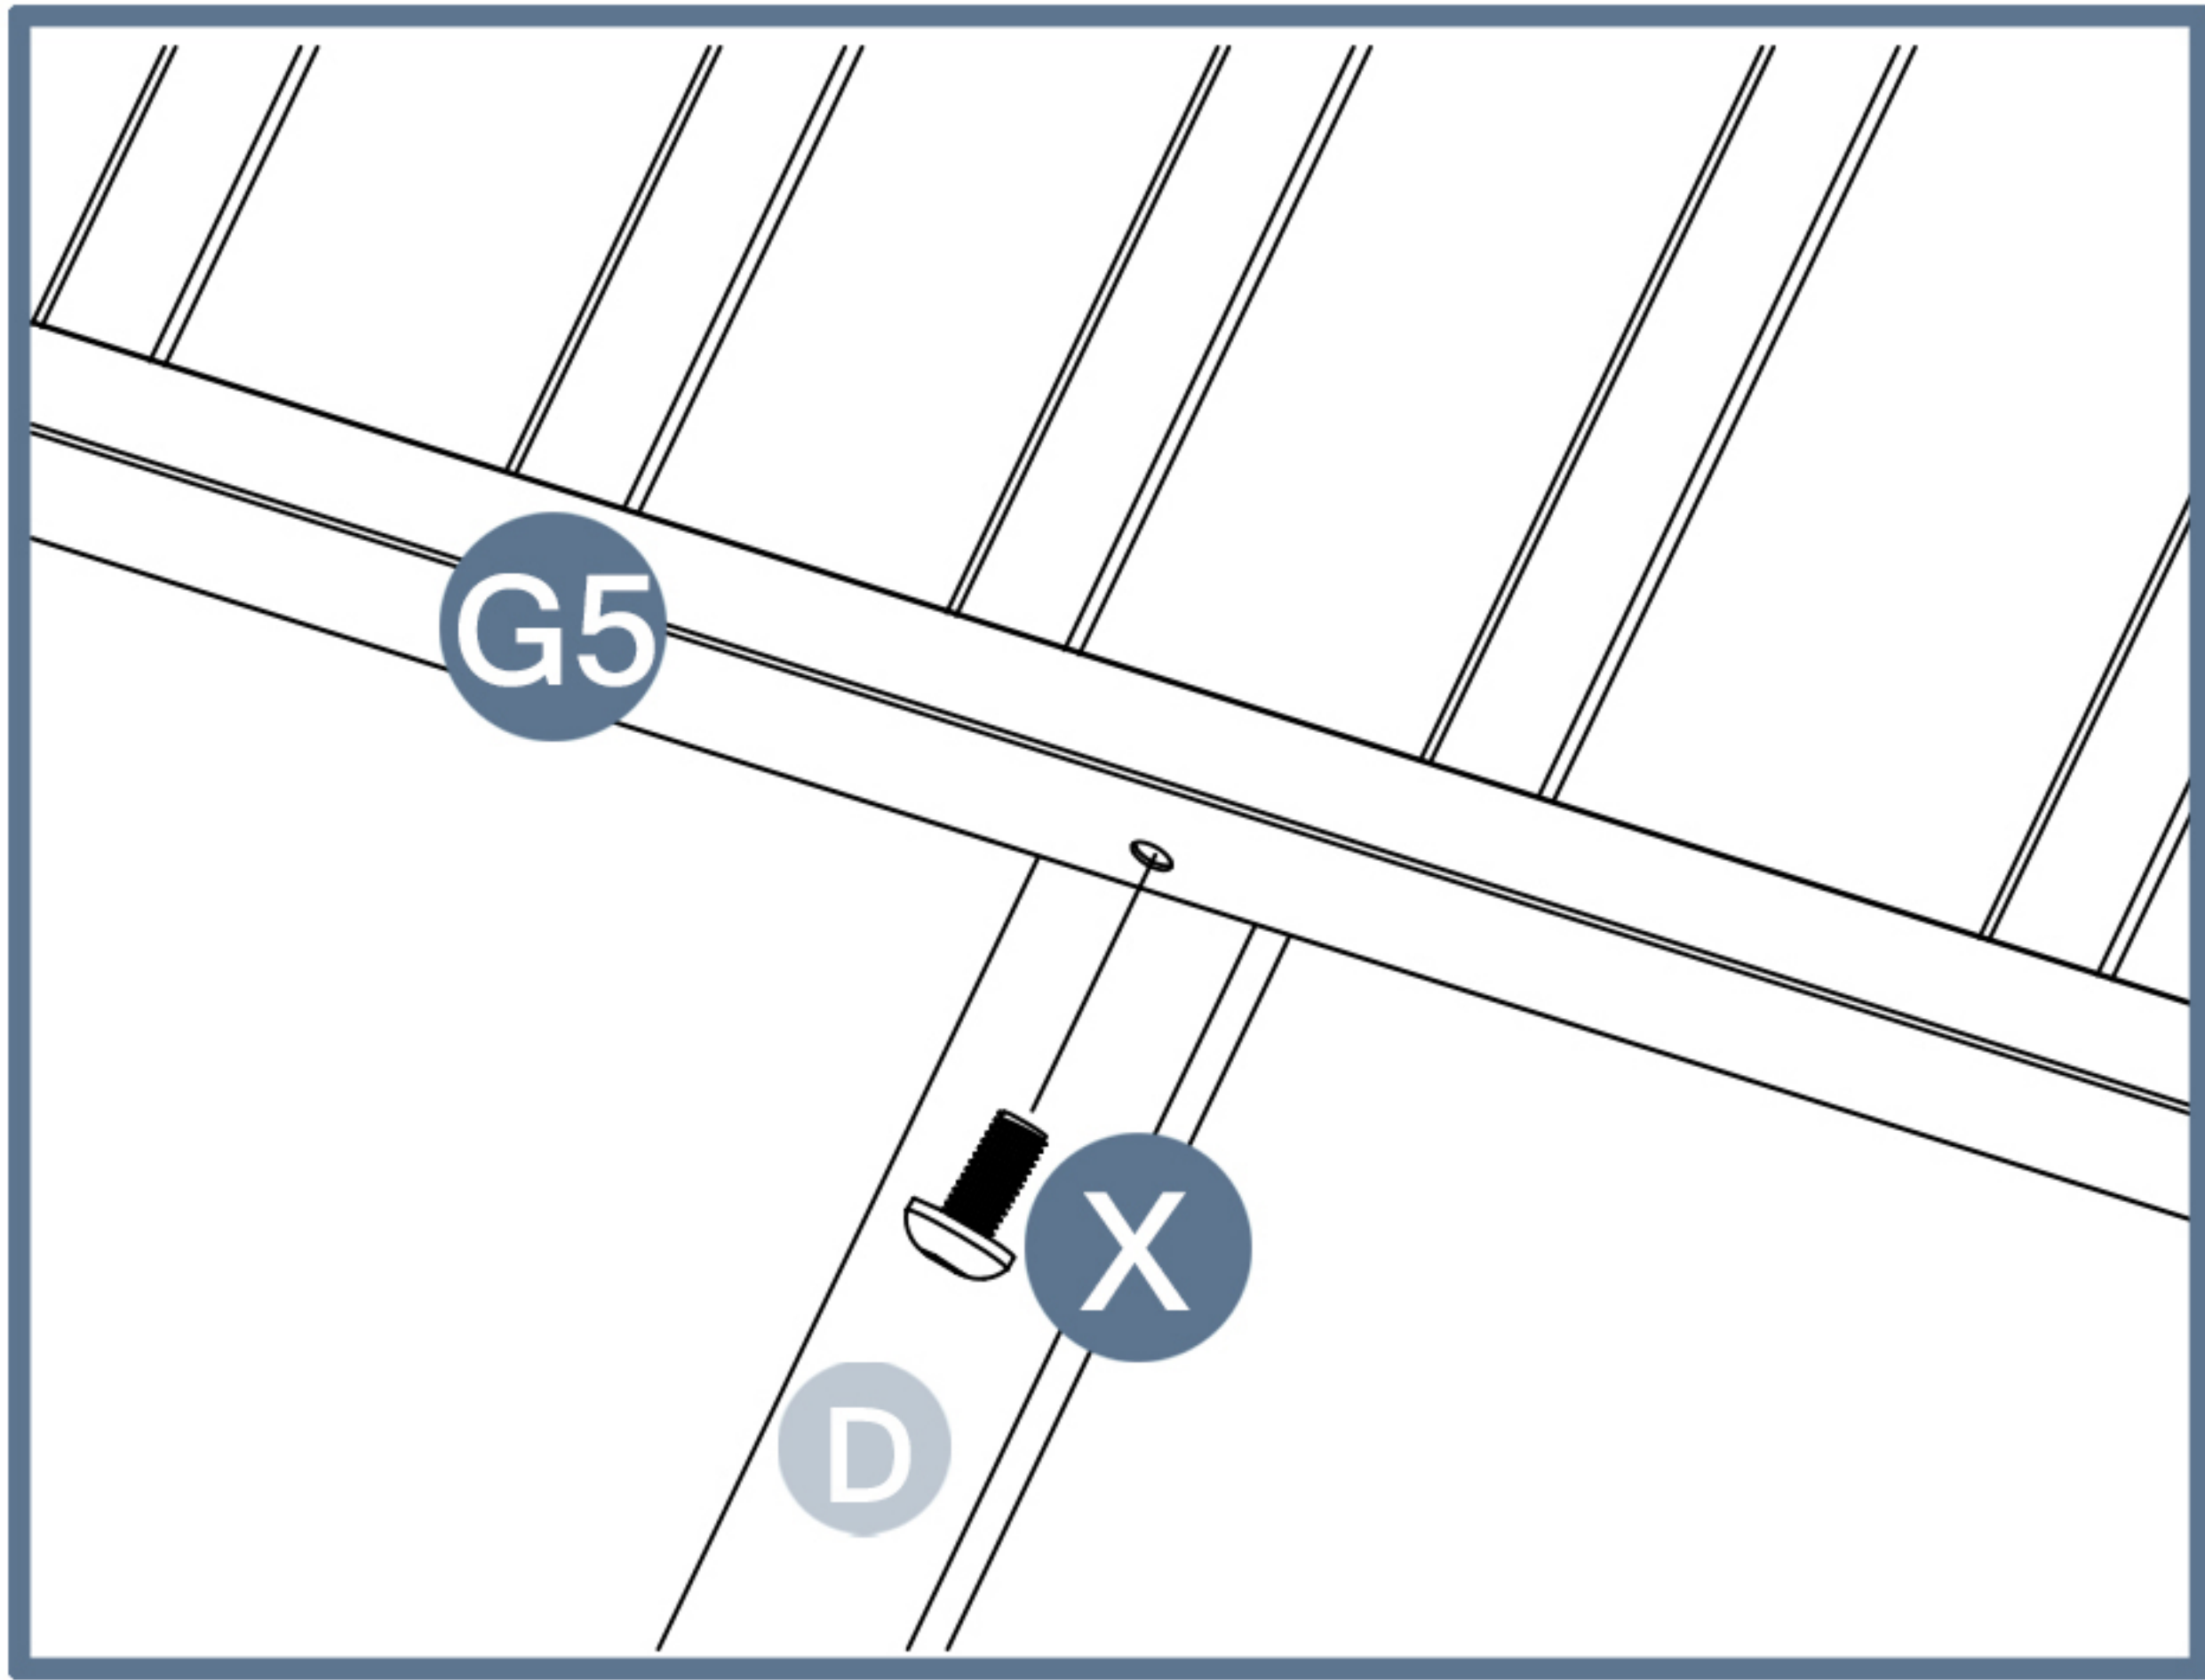

1

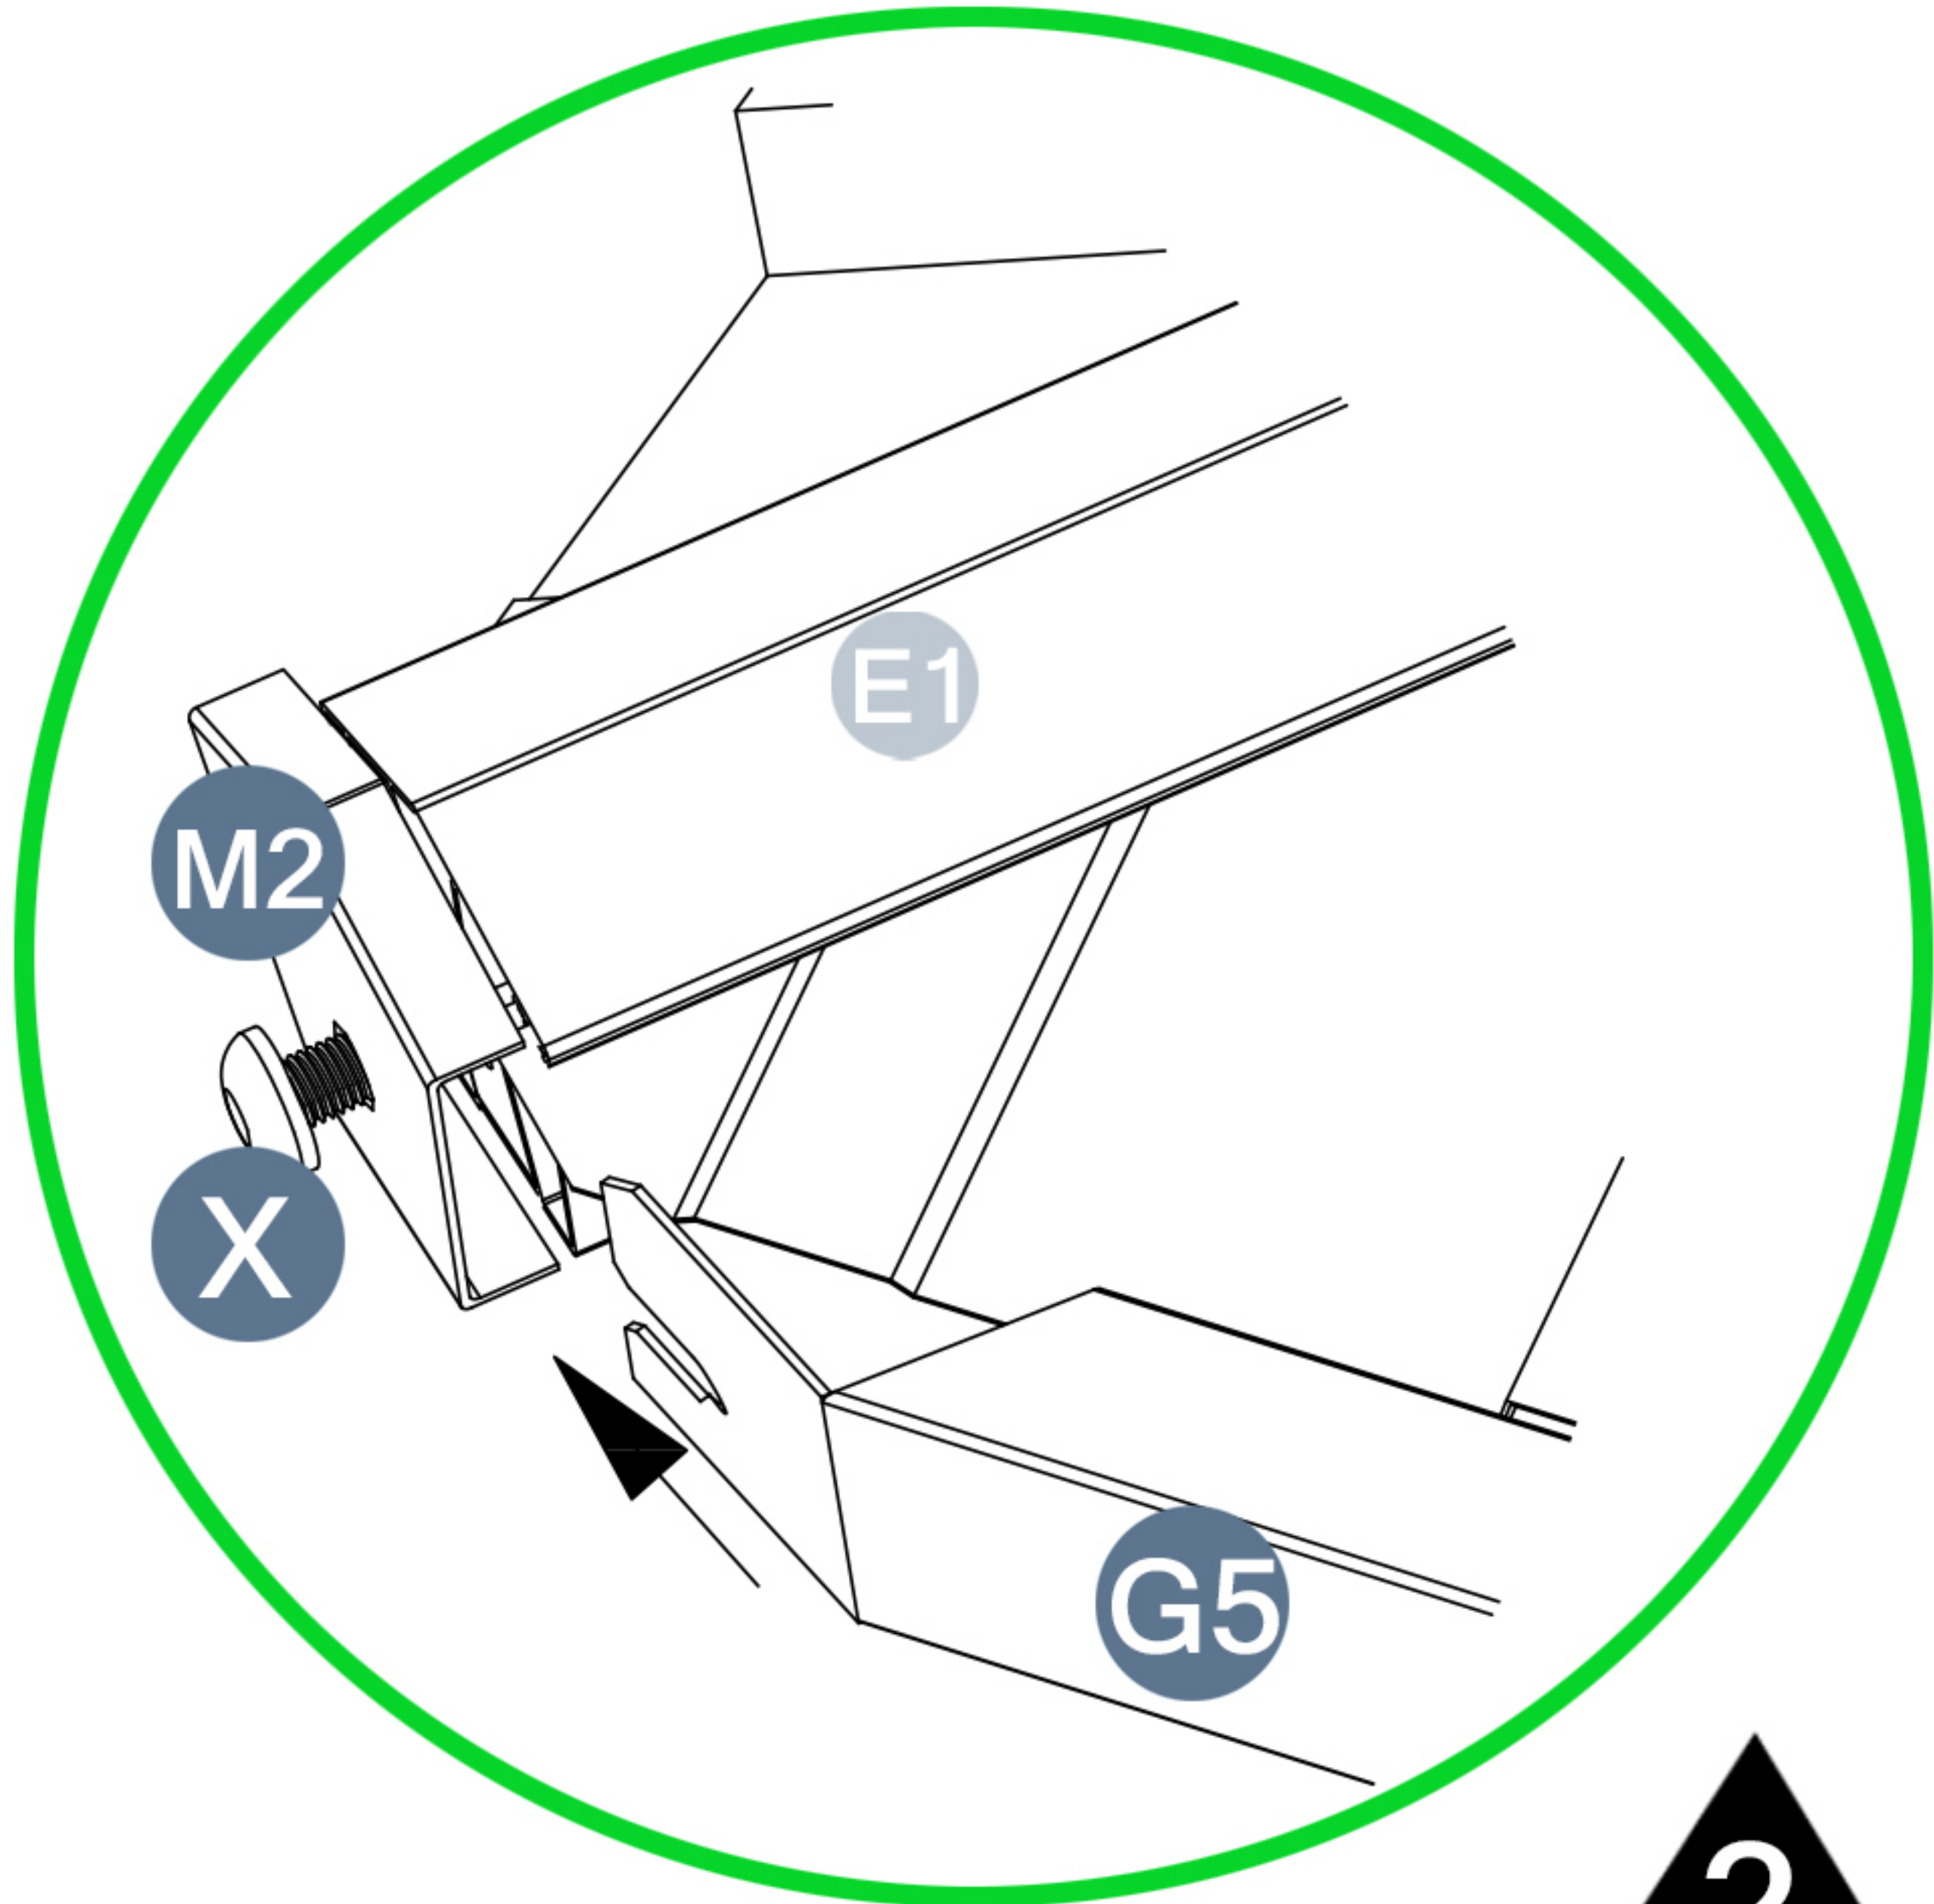


2

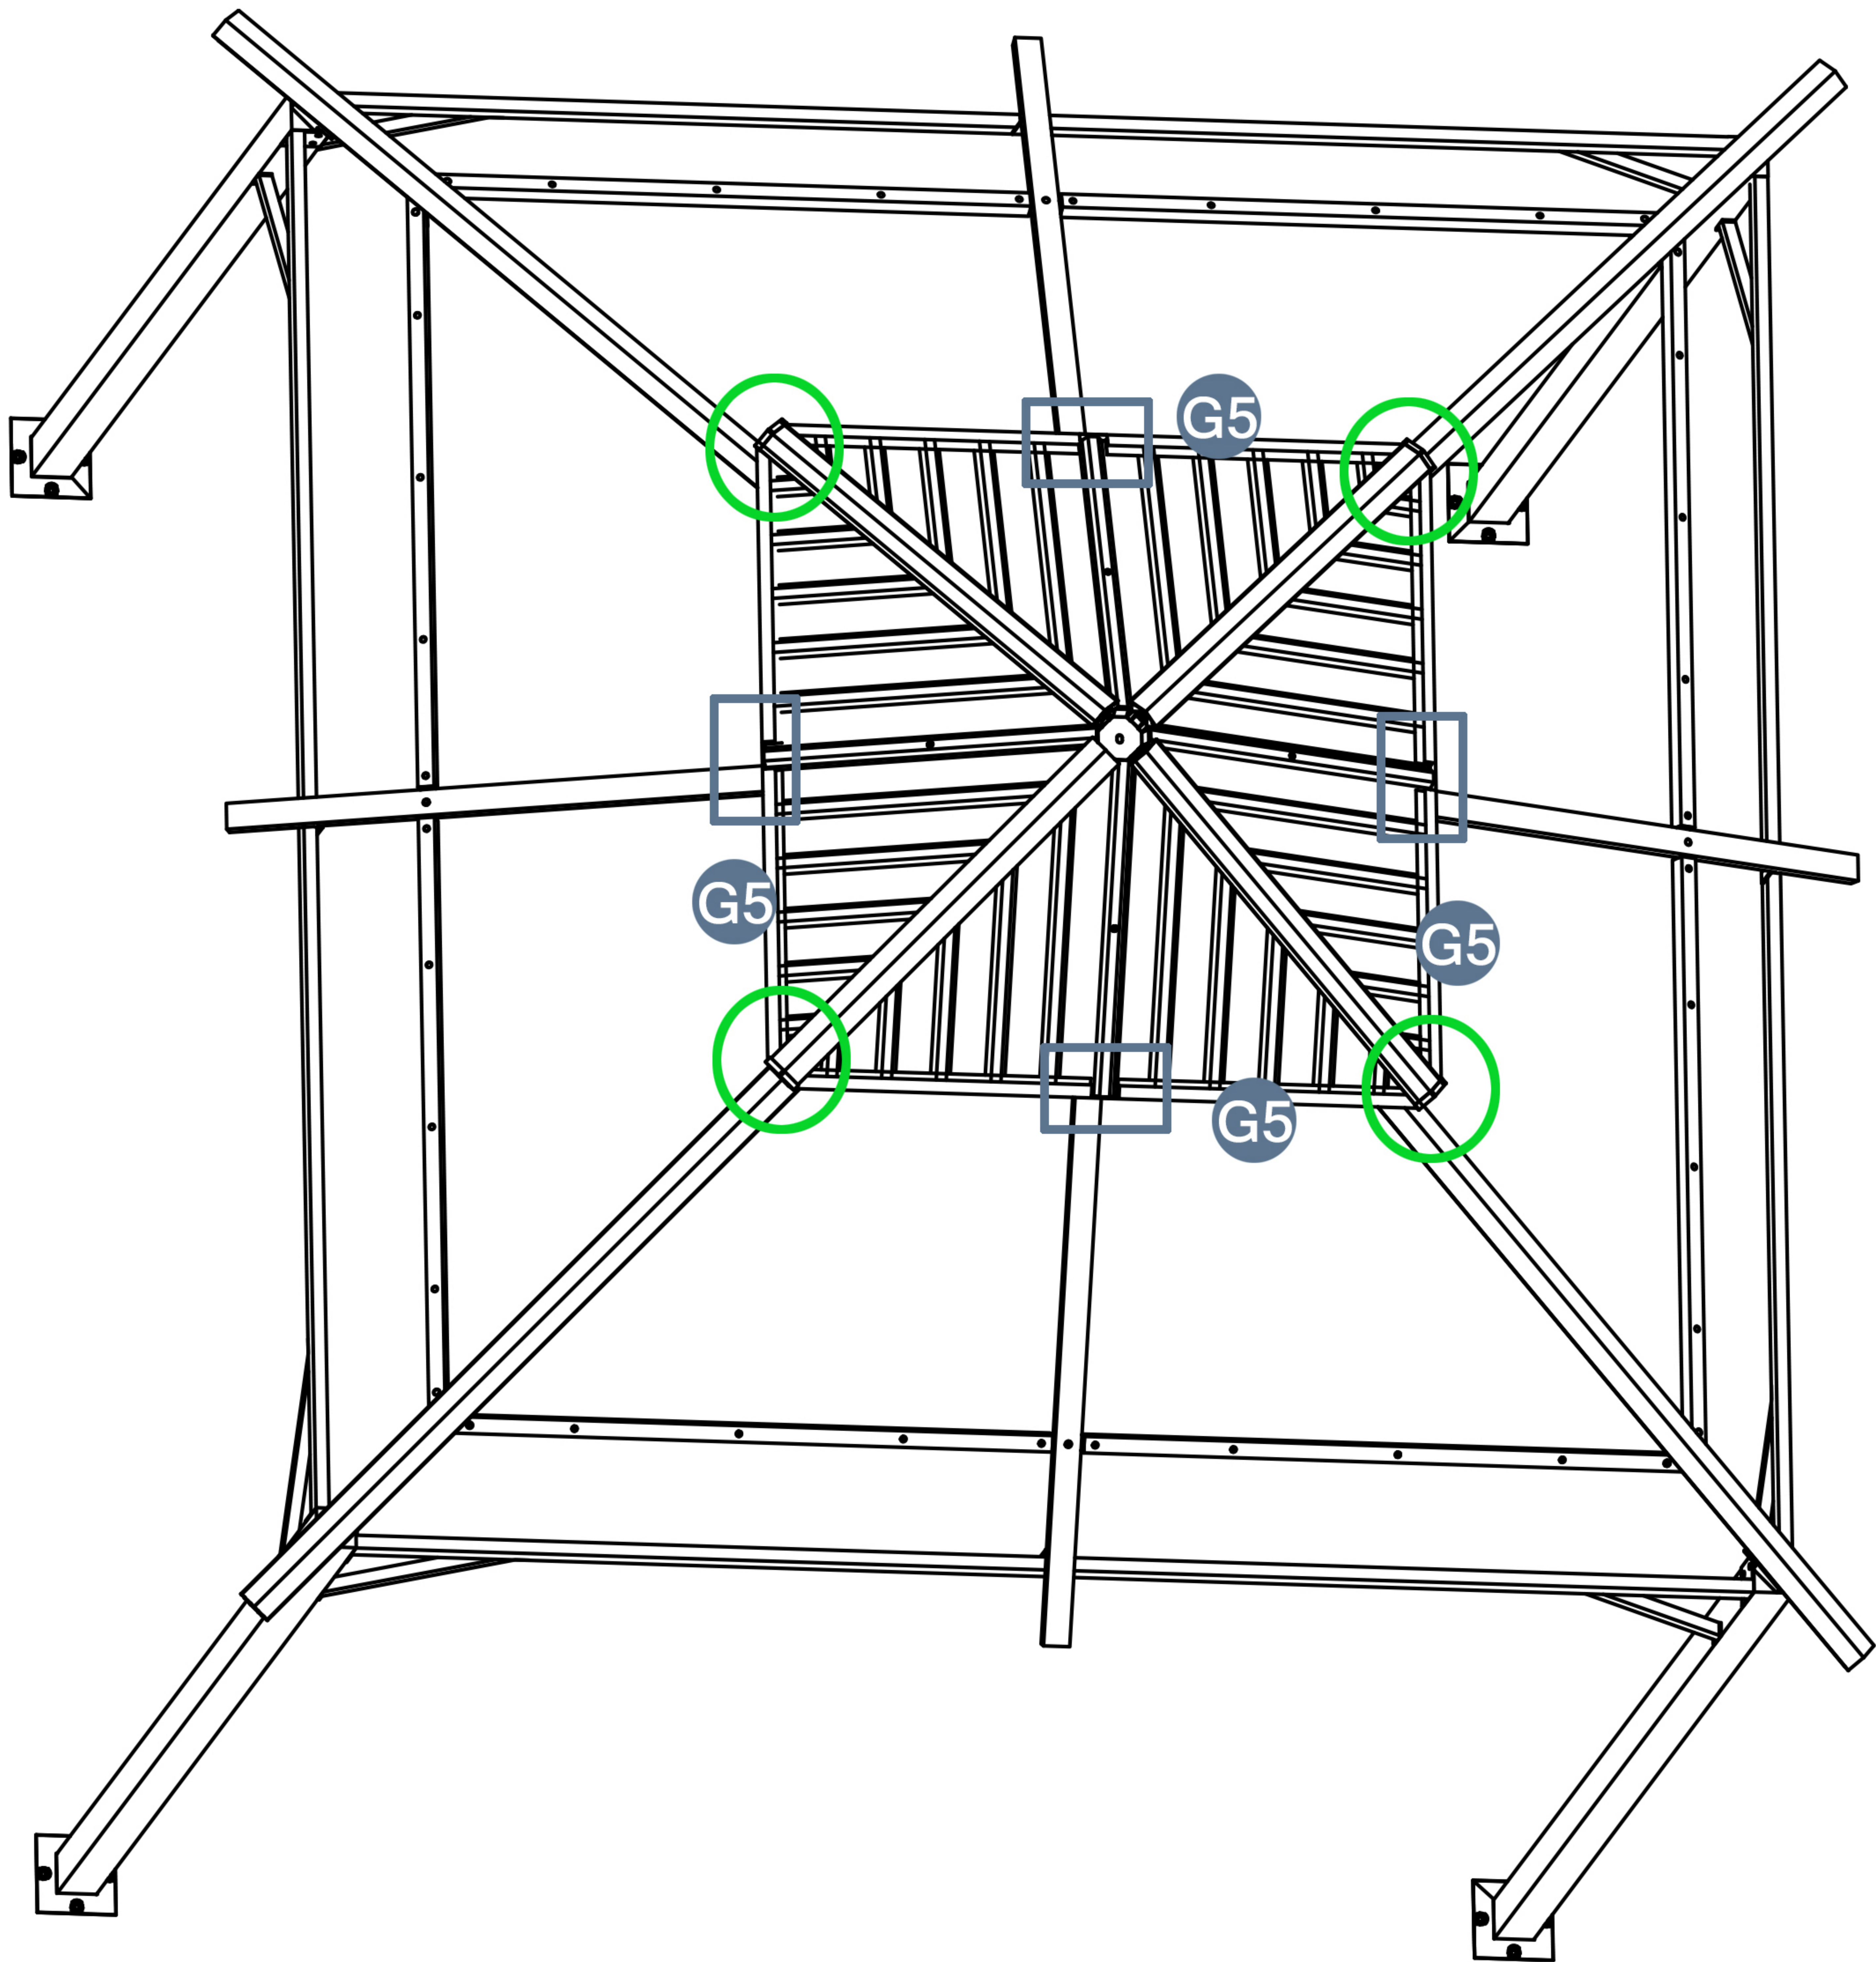




# STEP 15



Parts required

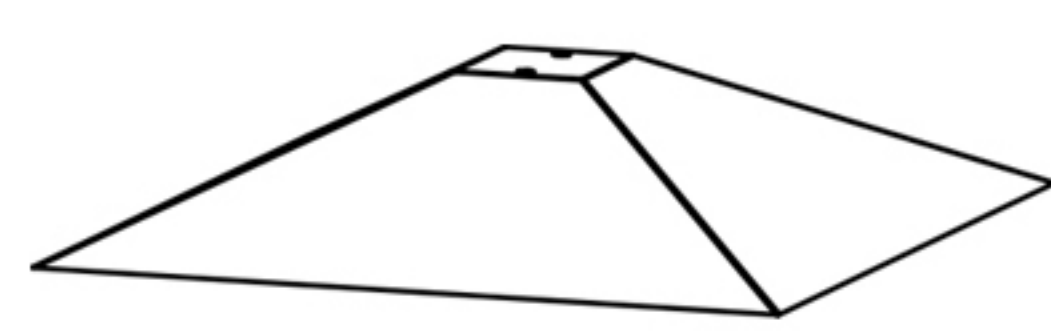

**K** 1pcs

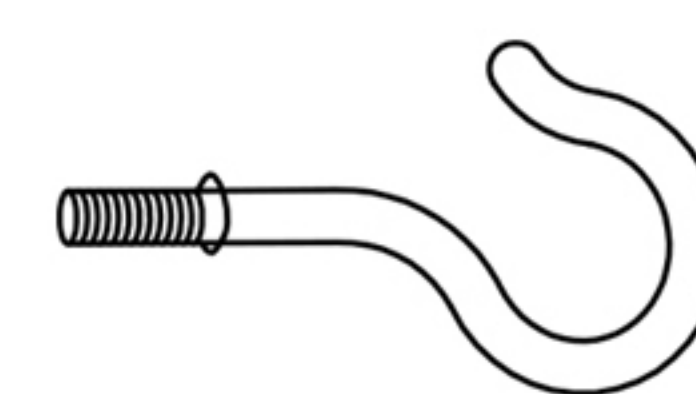


**M7** 1pcs

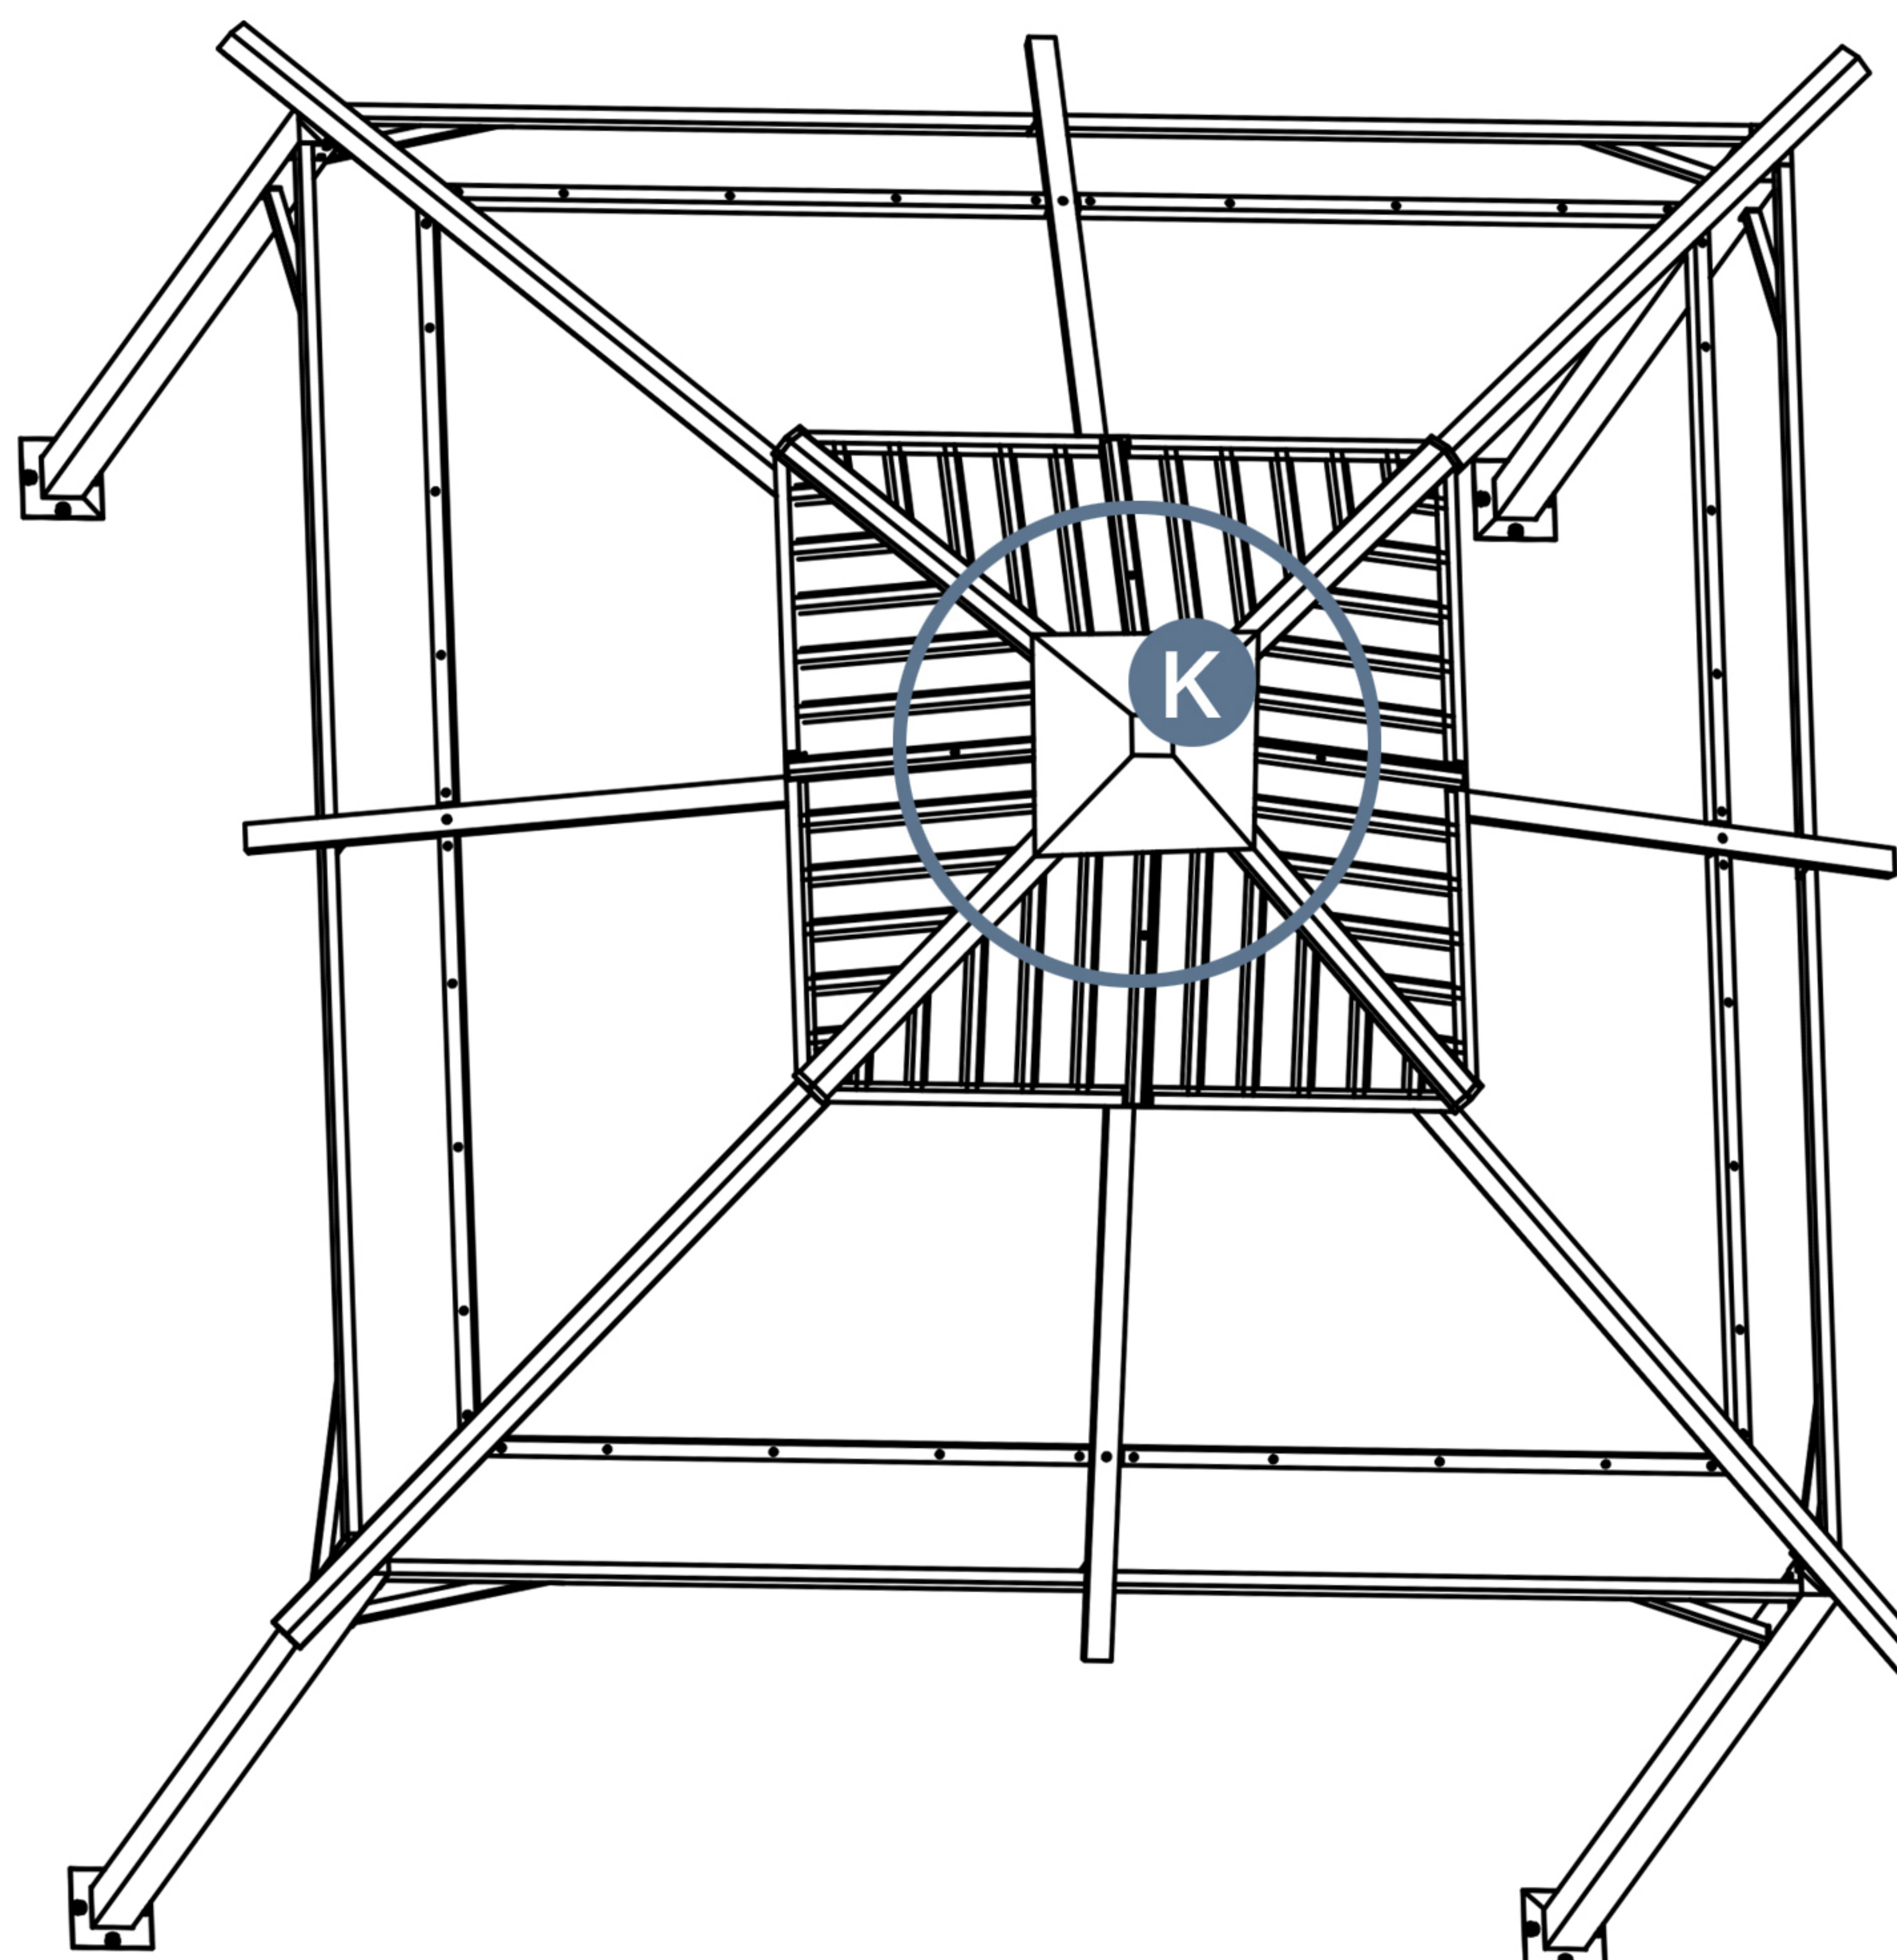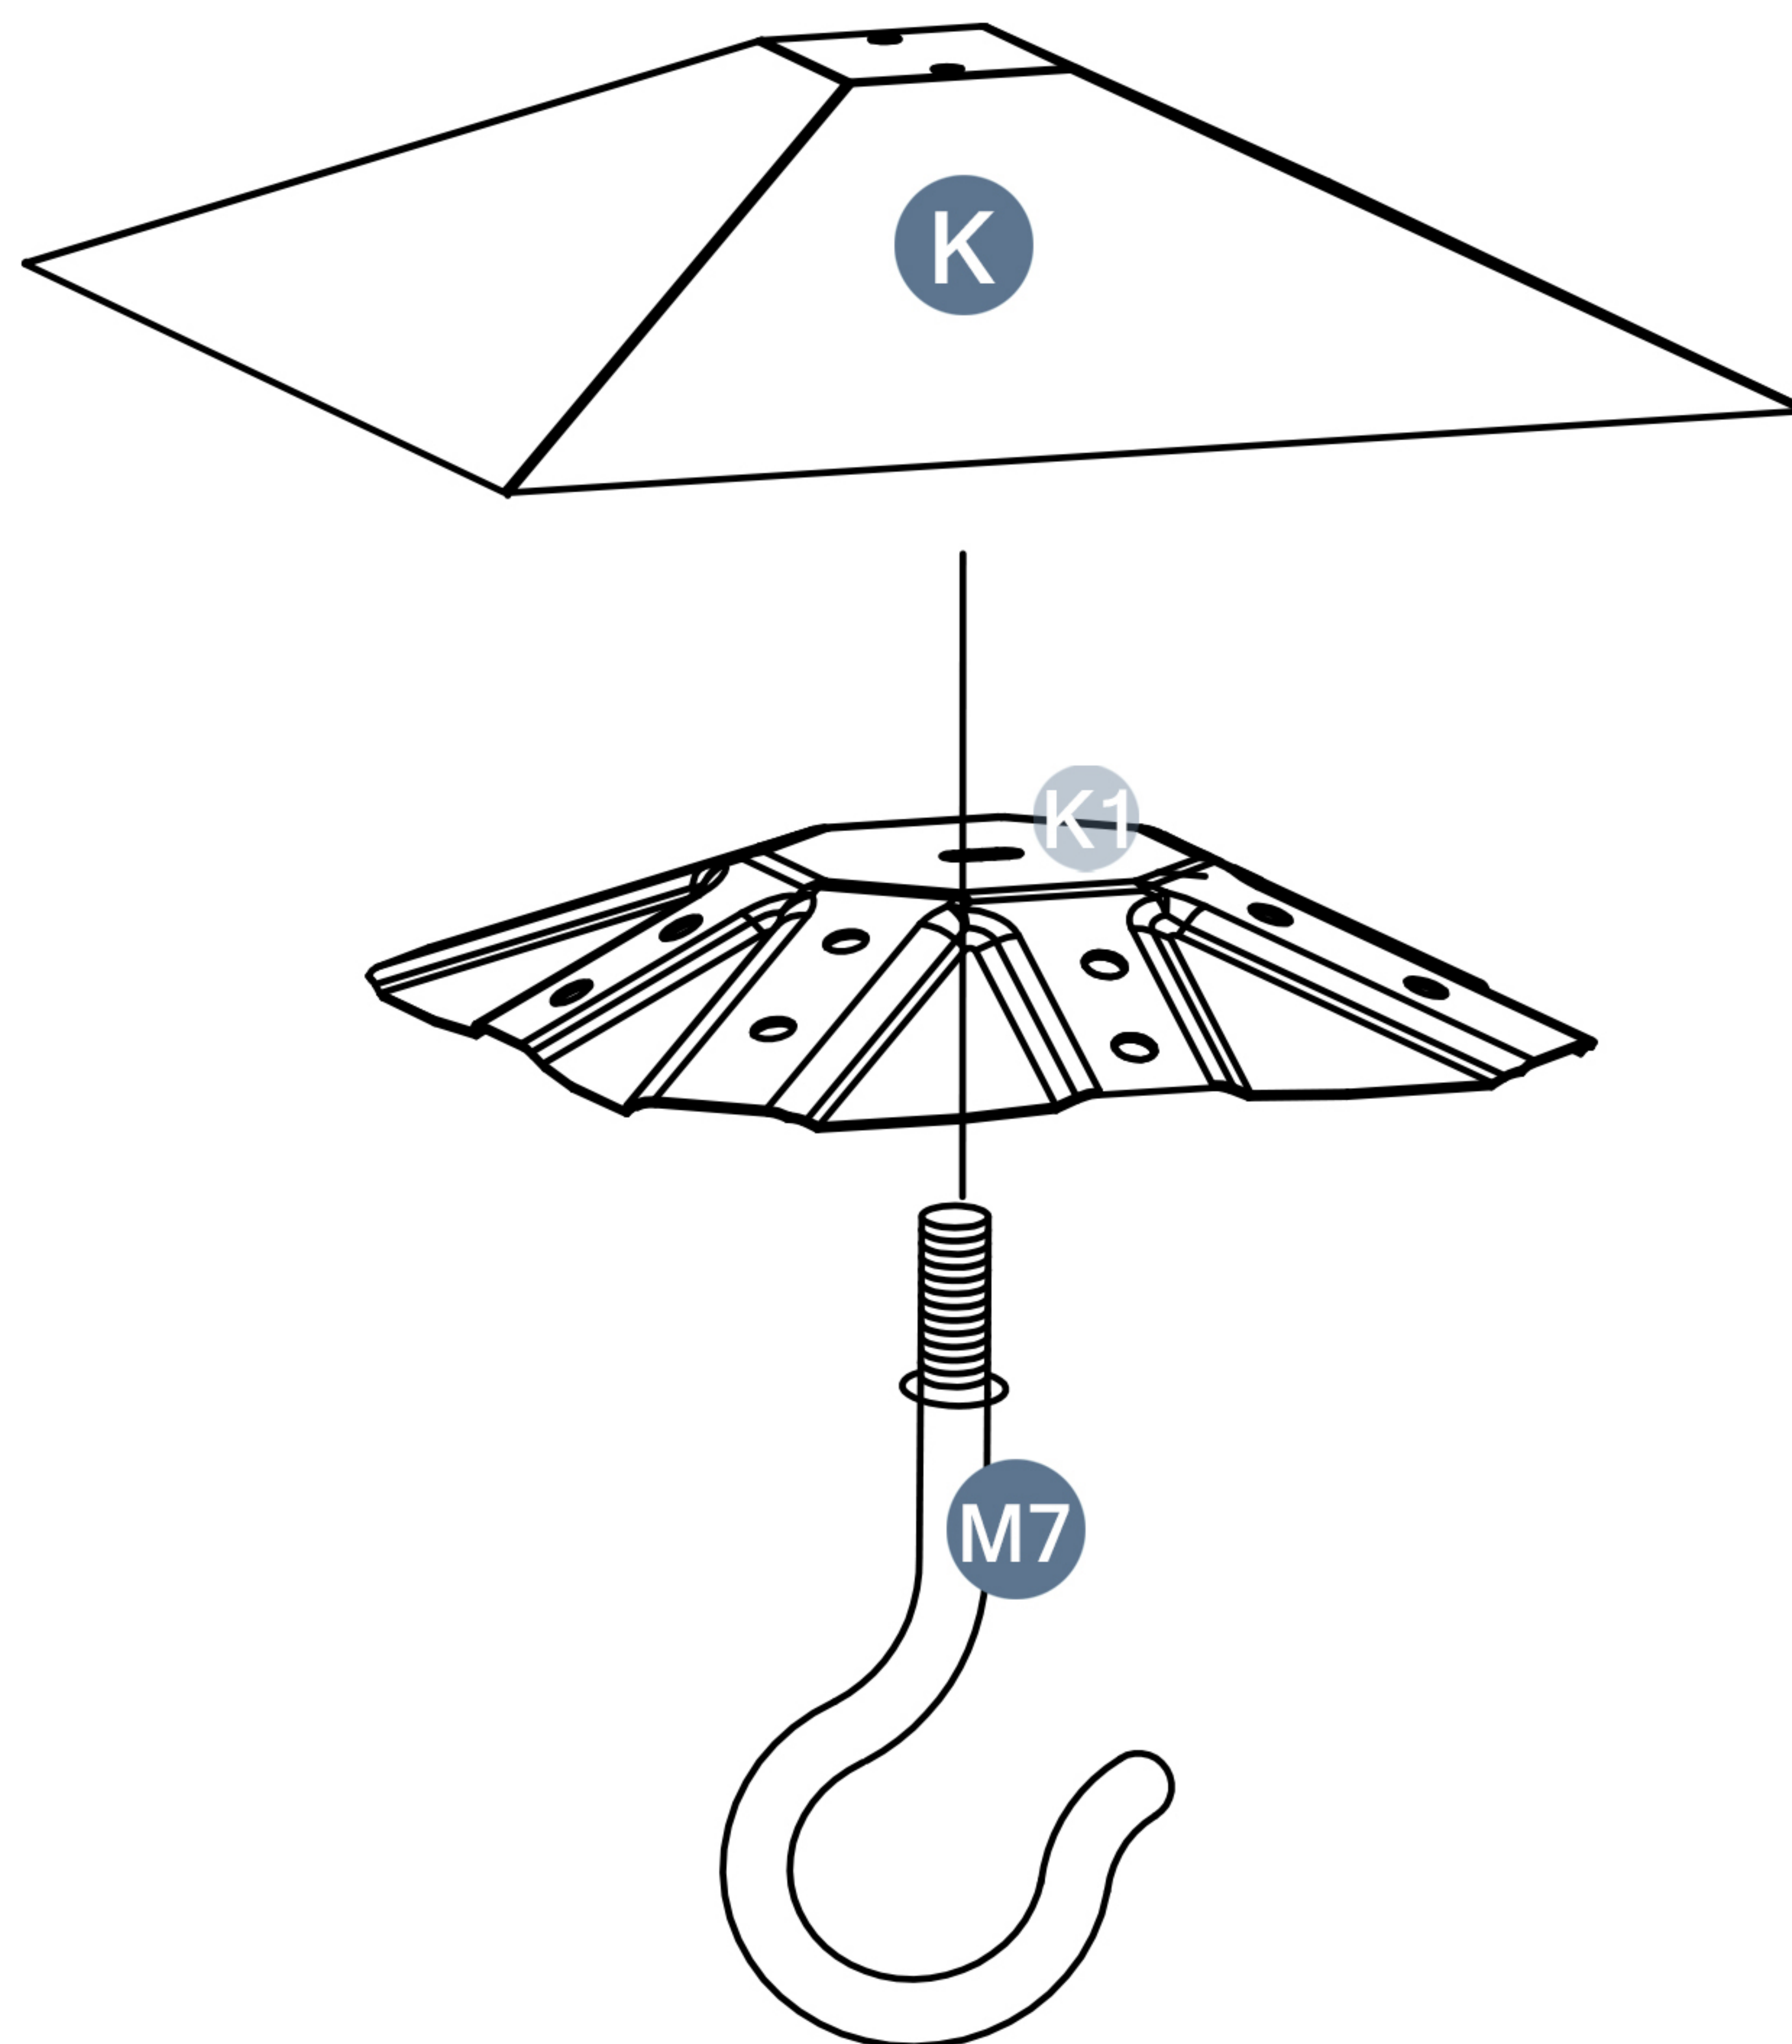




# STEP 16


Parts required

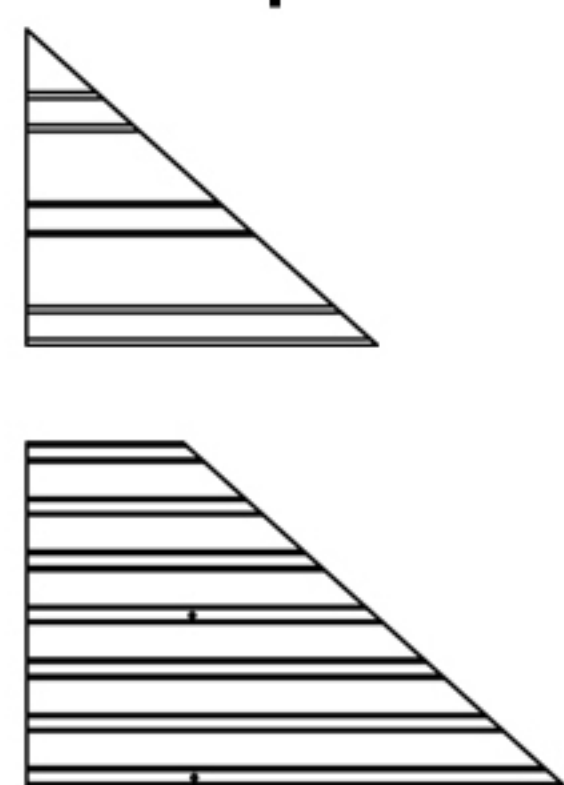

O1 4pcs

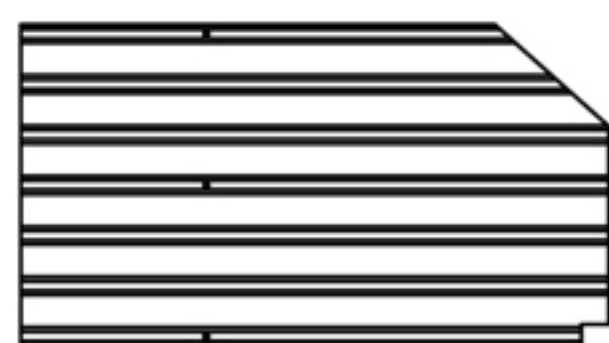


O3 4pcs

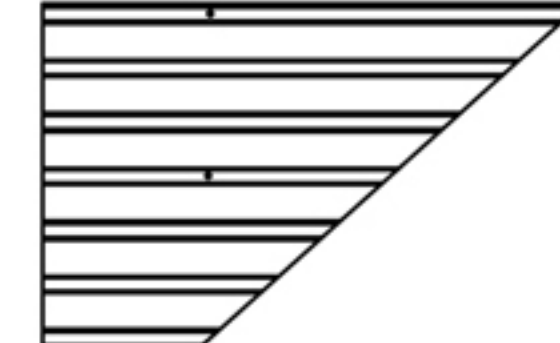


V2 4pcs




X2 24pcs

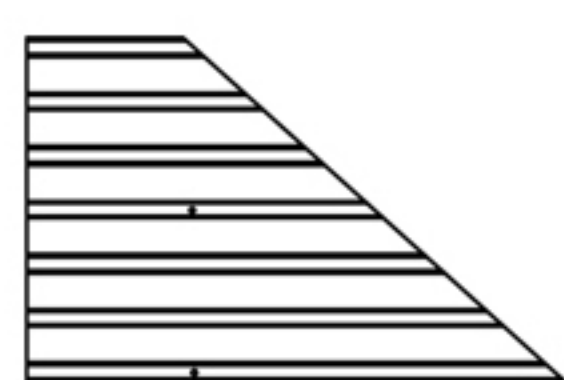


O2 4pcs

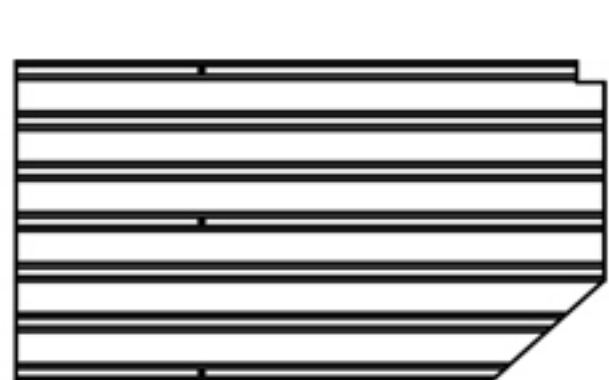

V3 4pcs

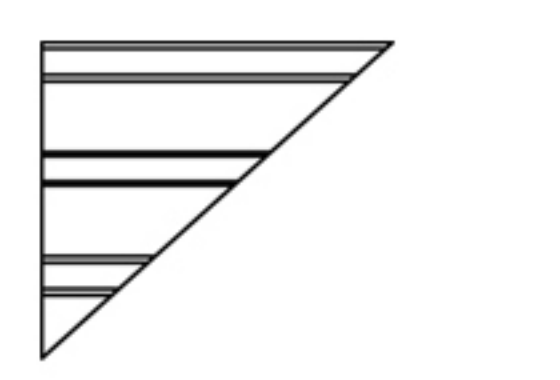

V1 4pcs

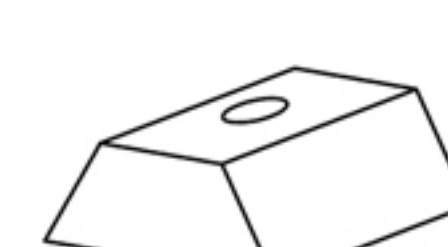


M5 28pcs

1 → 2 → 3







Please refer to the image P1-2 for installation.

Pay attention to the direction of screw installation

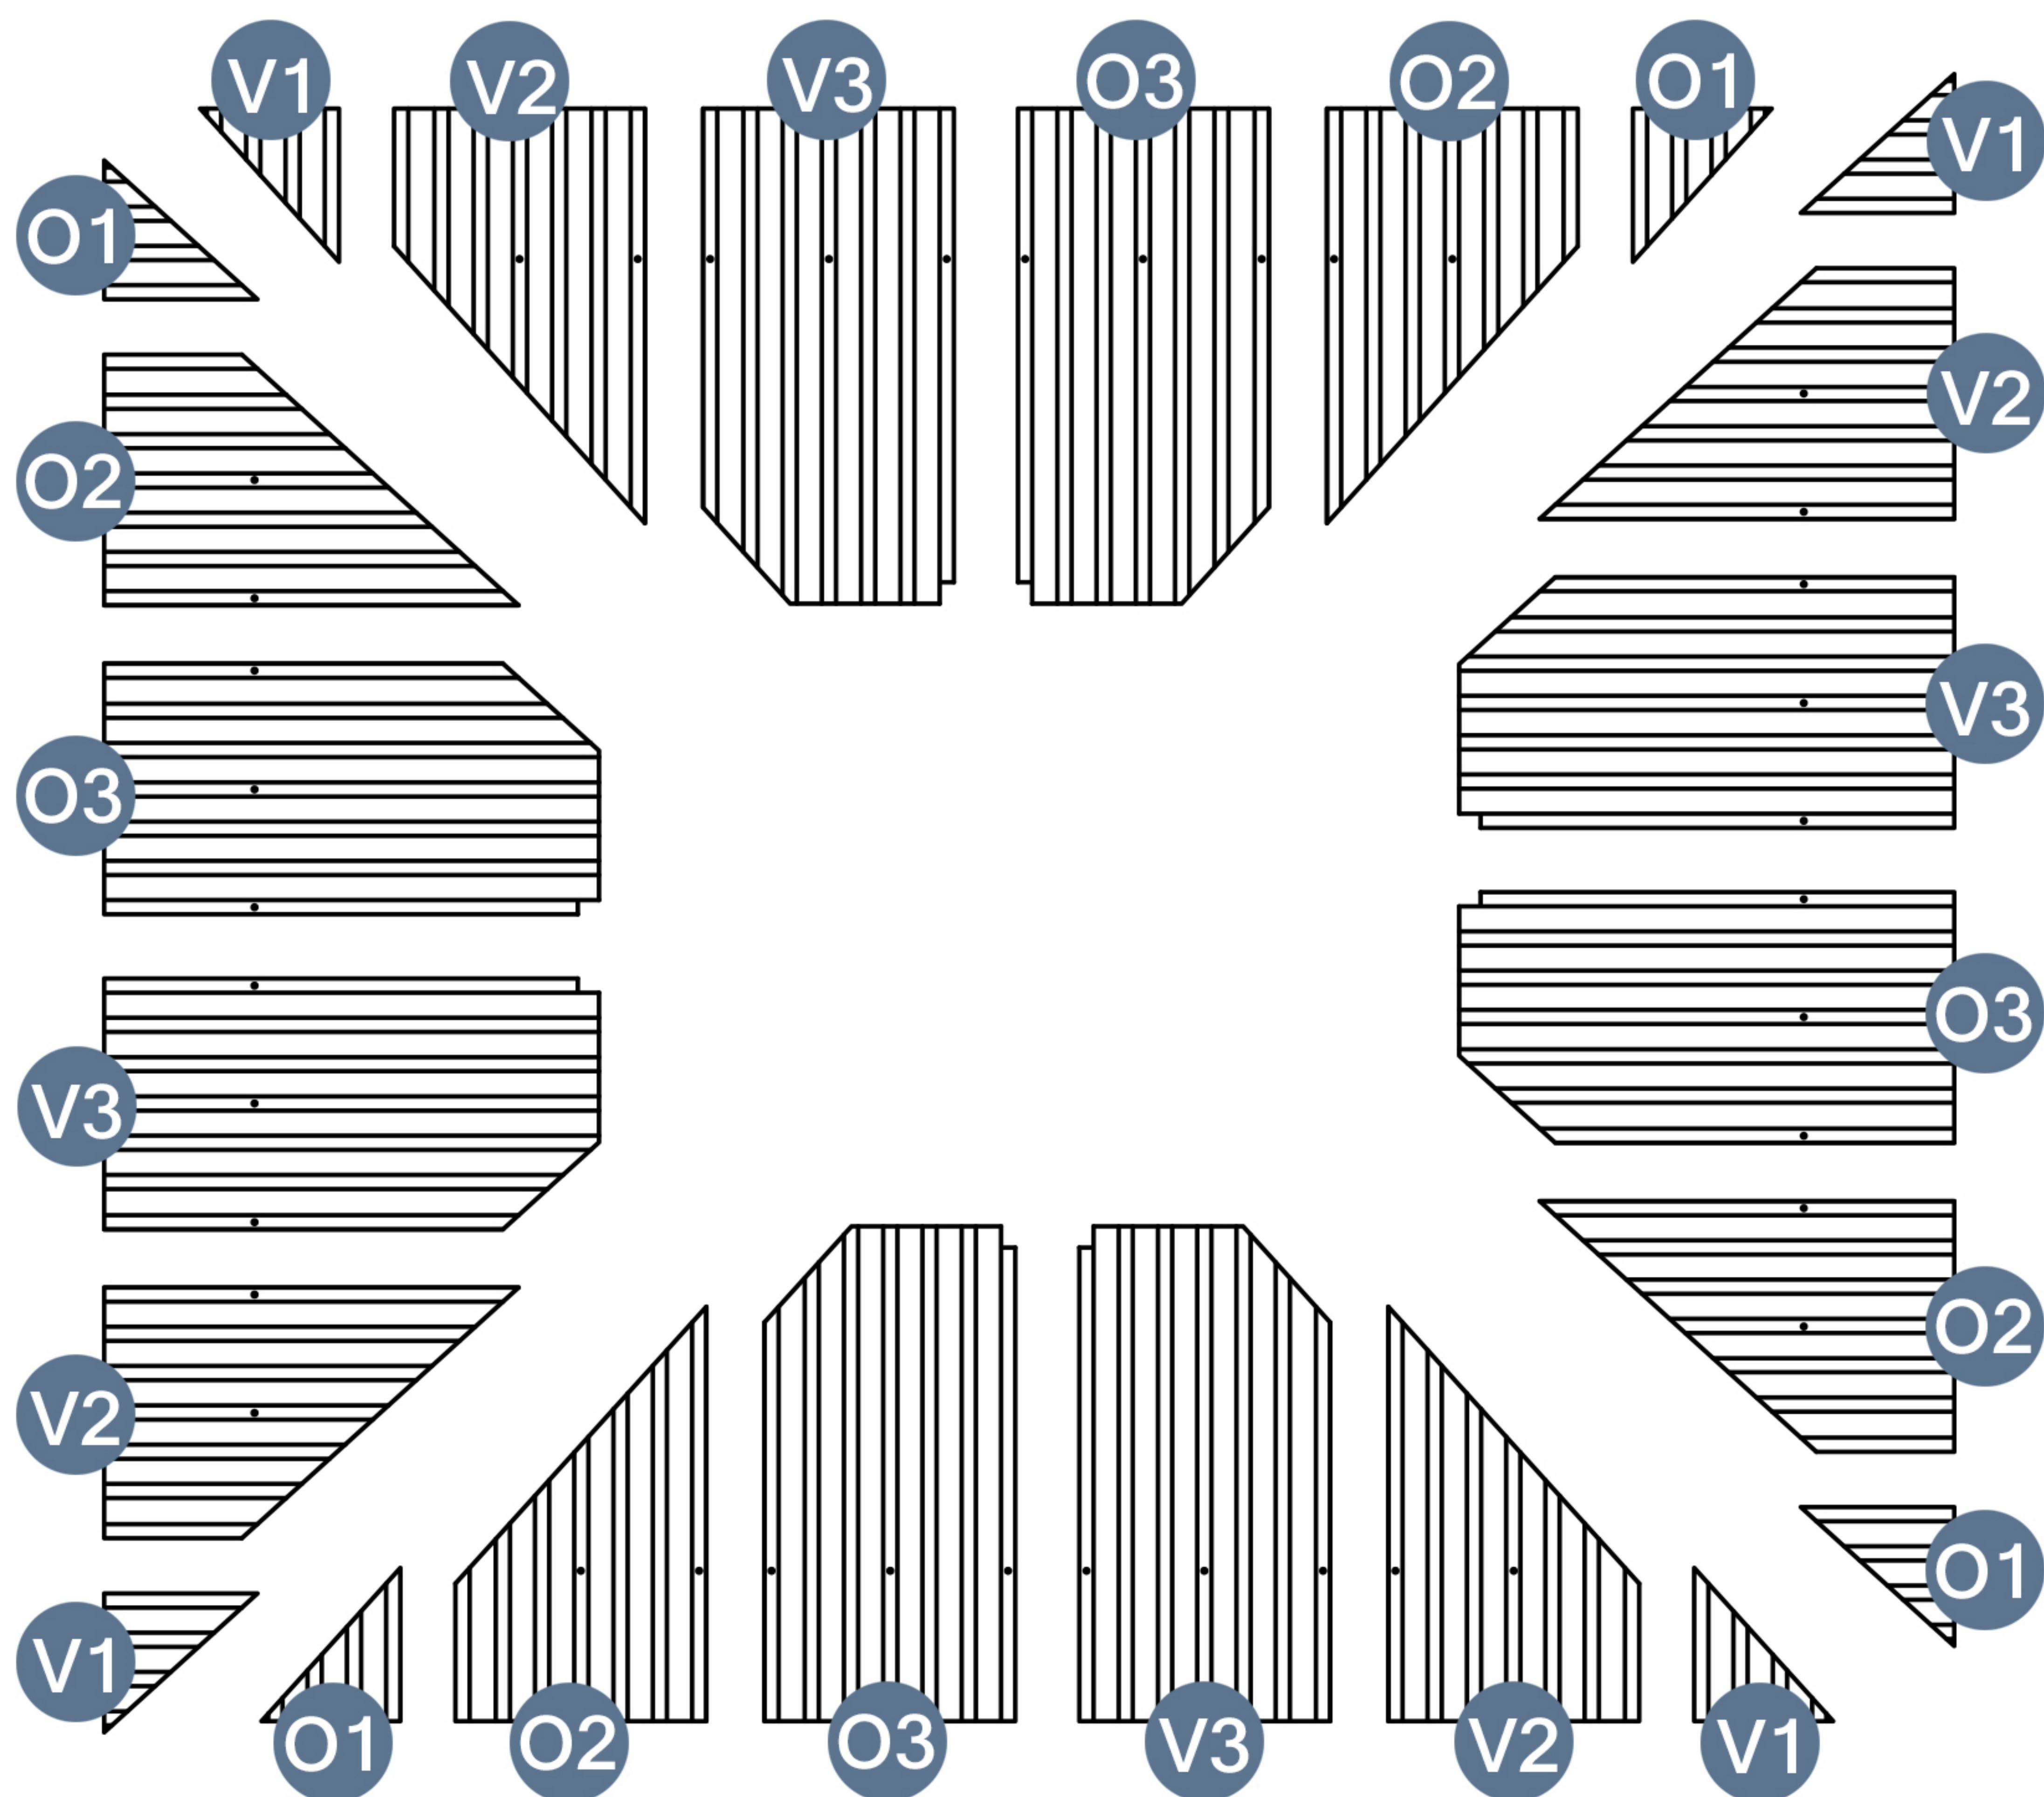


• P1-2

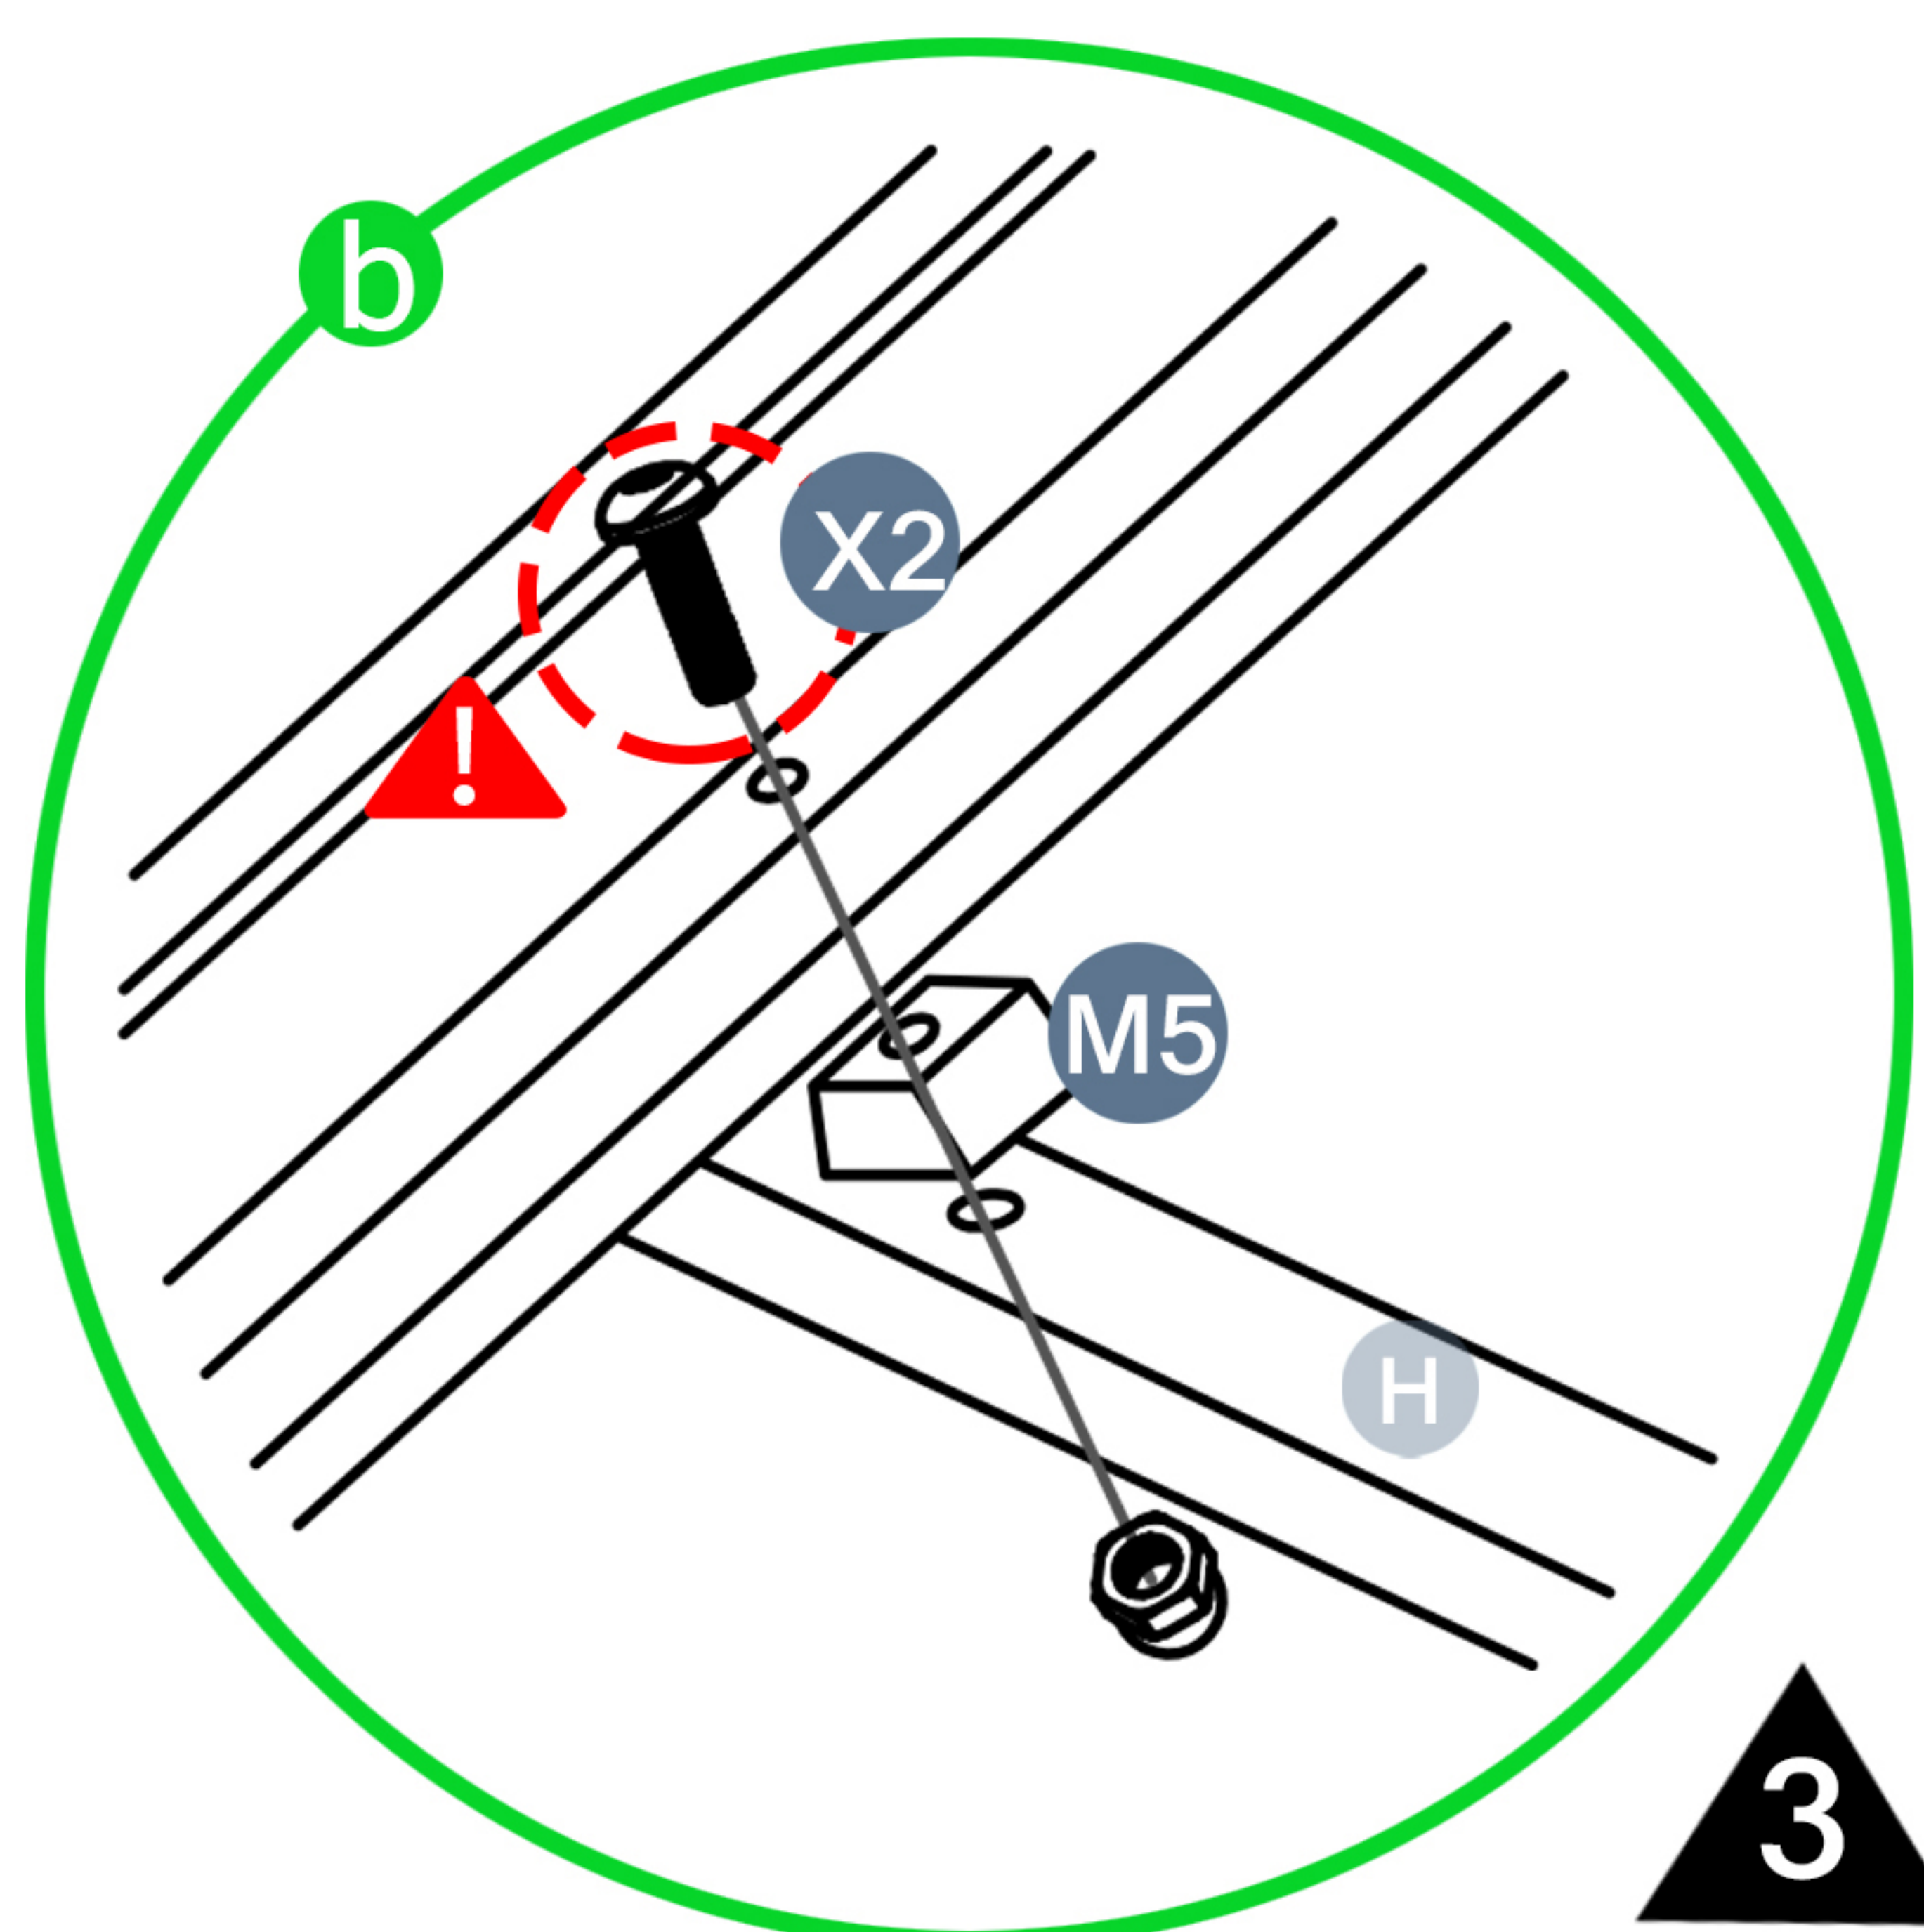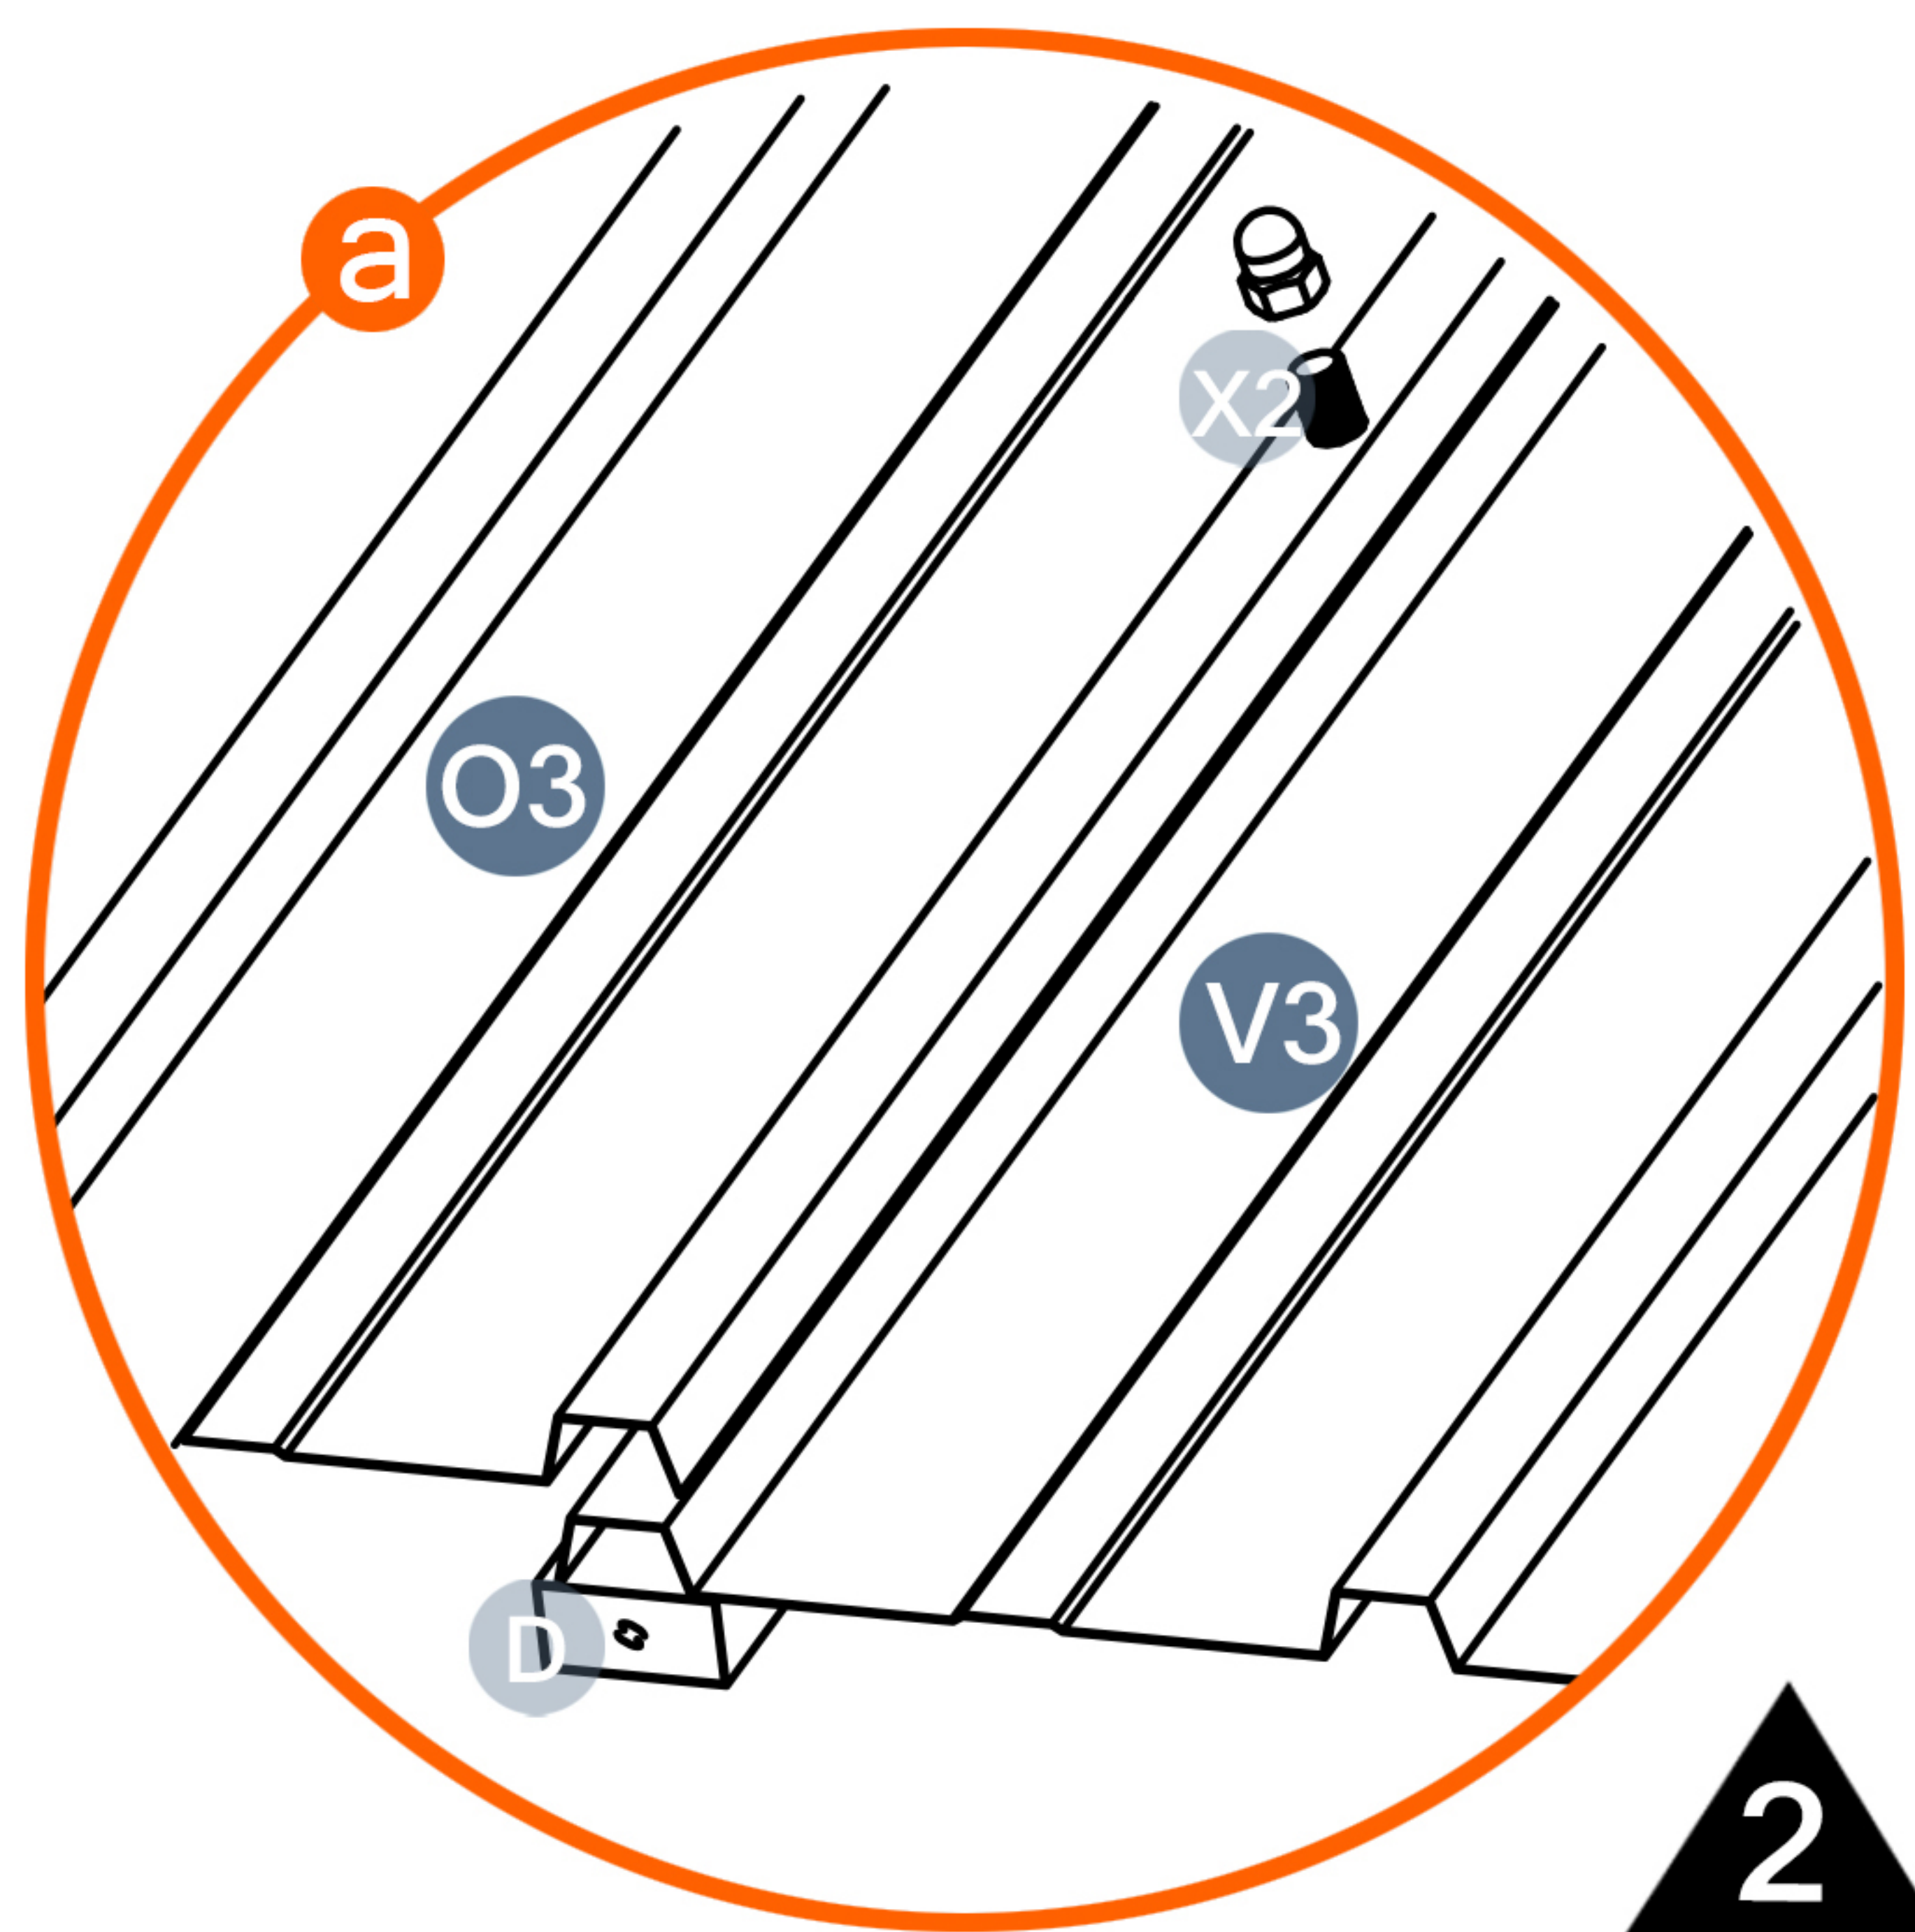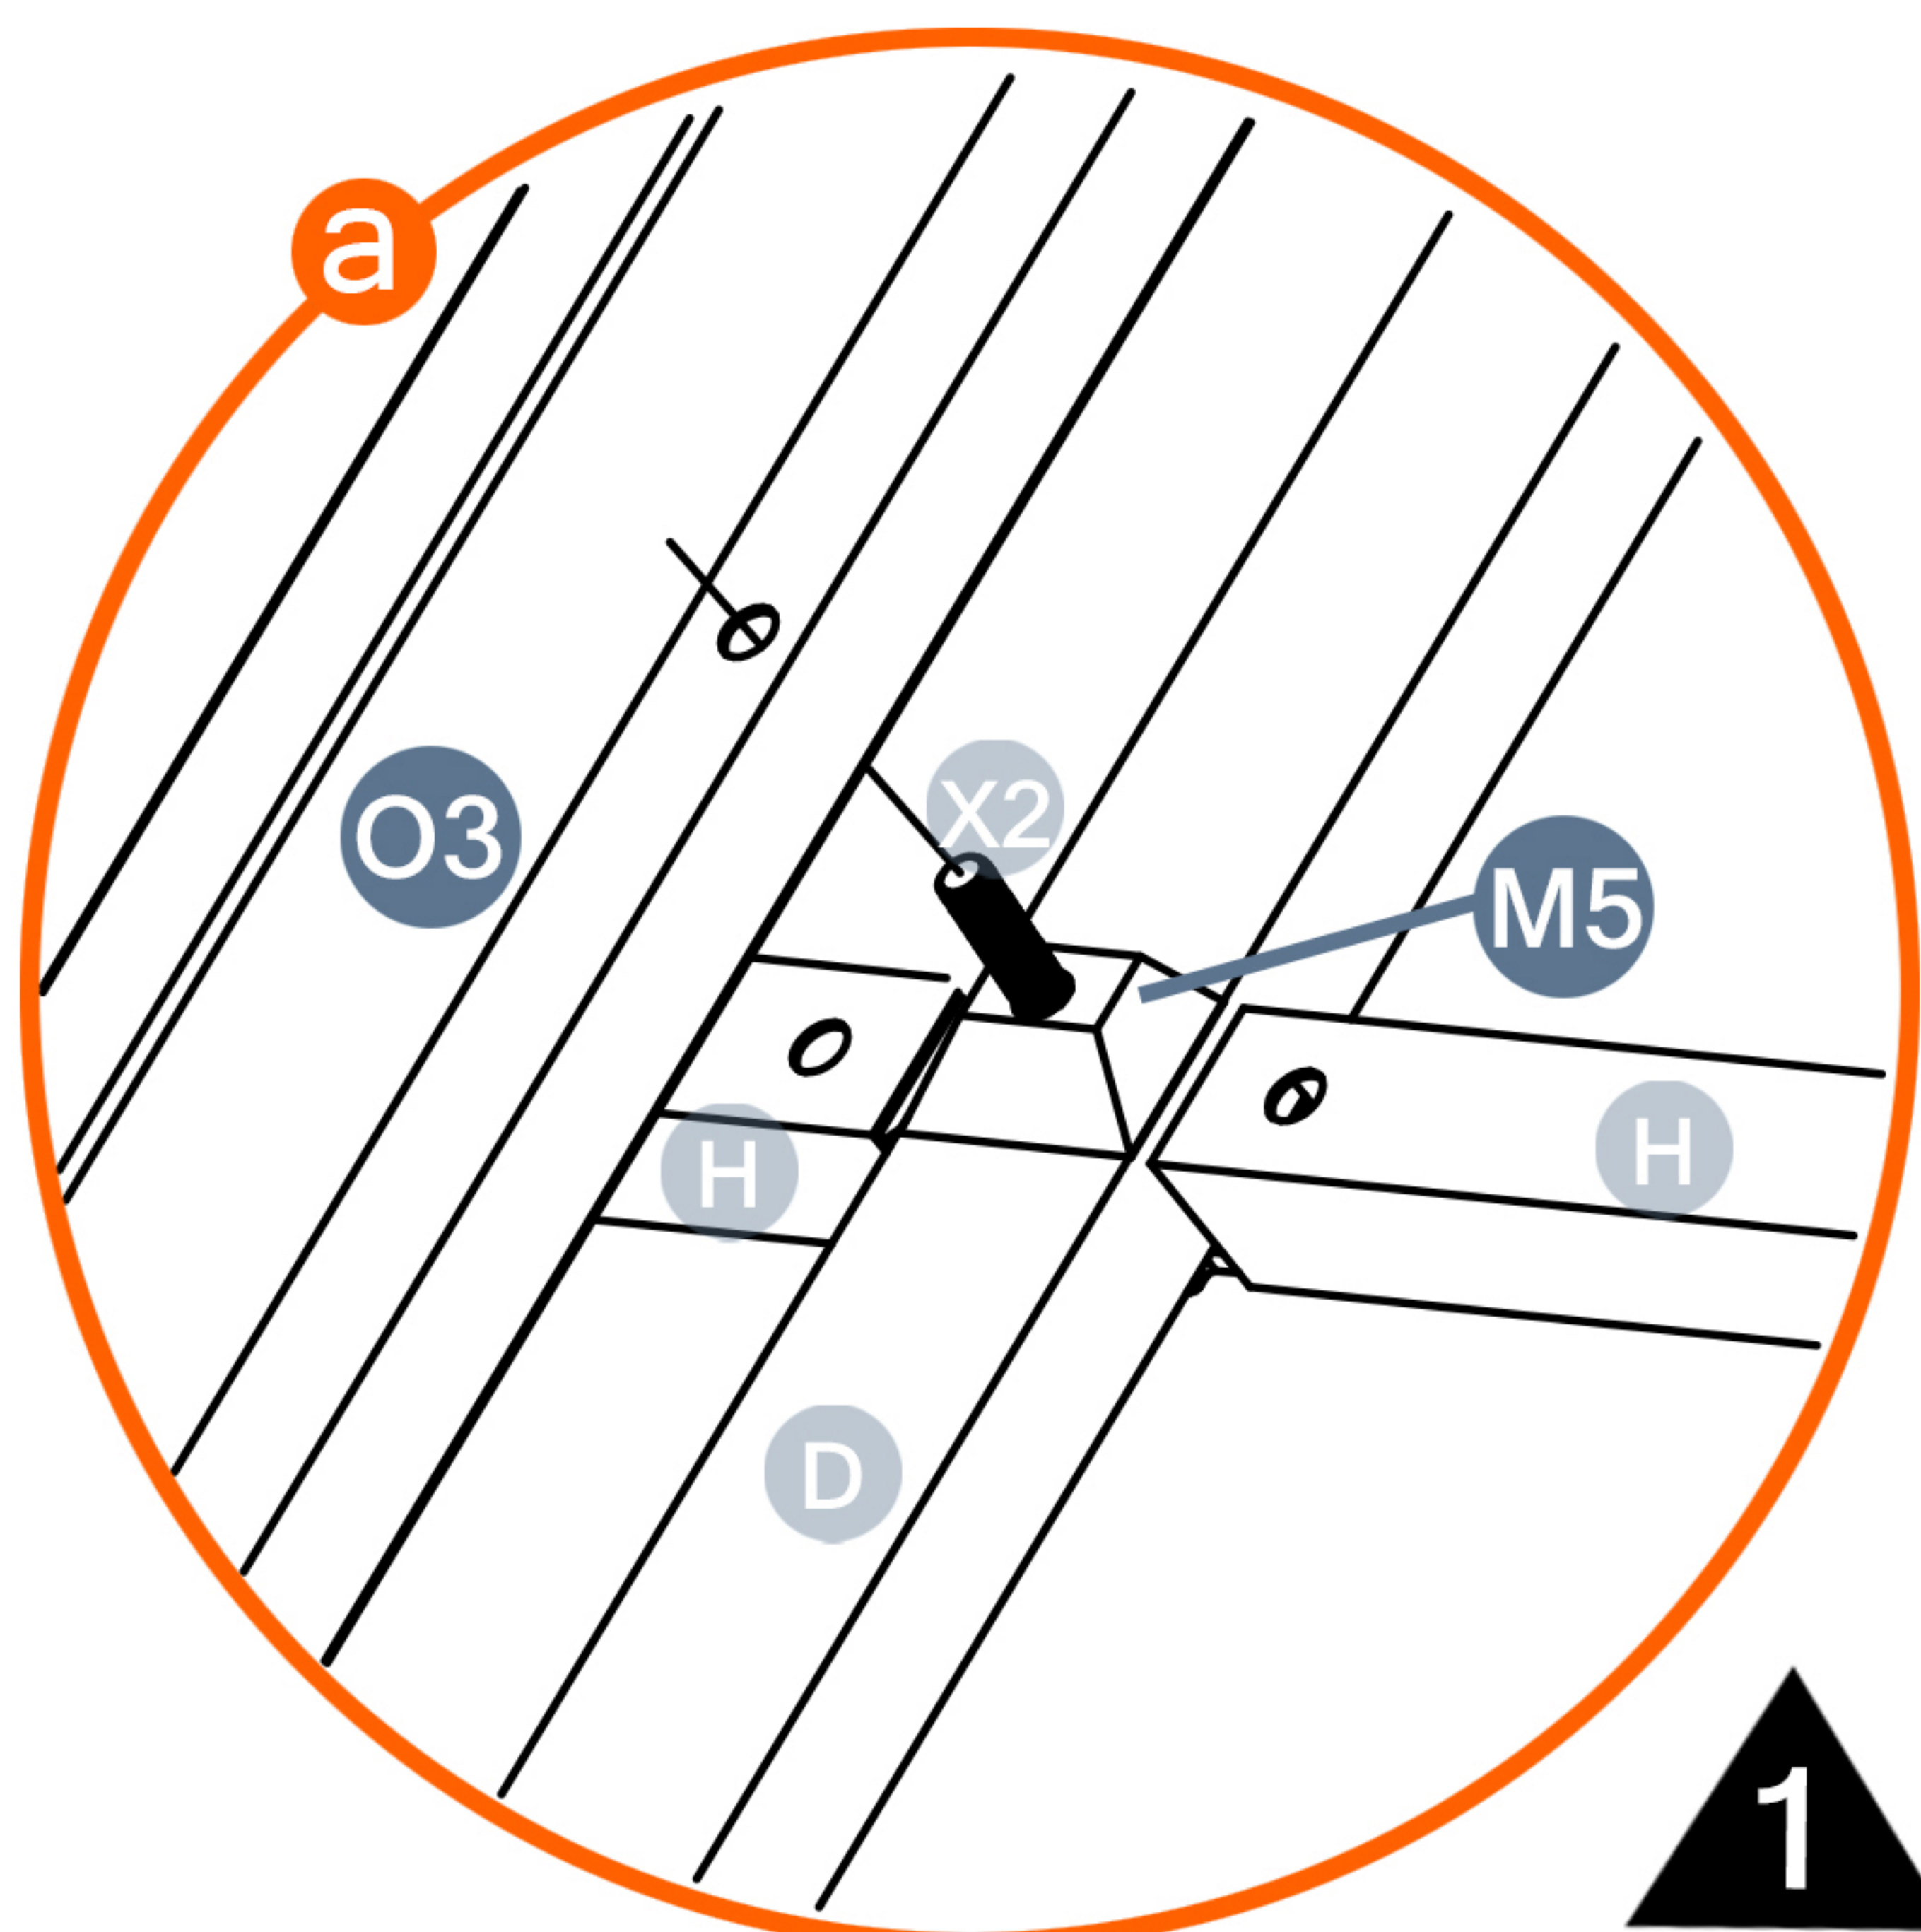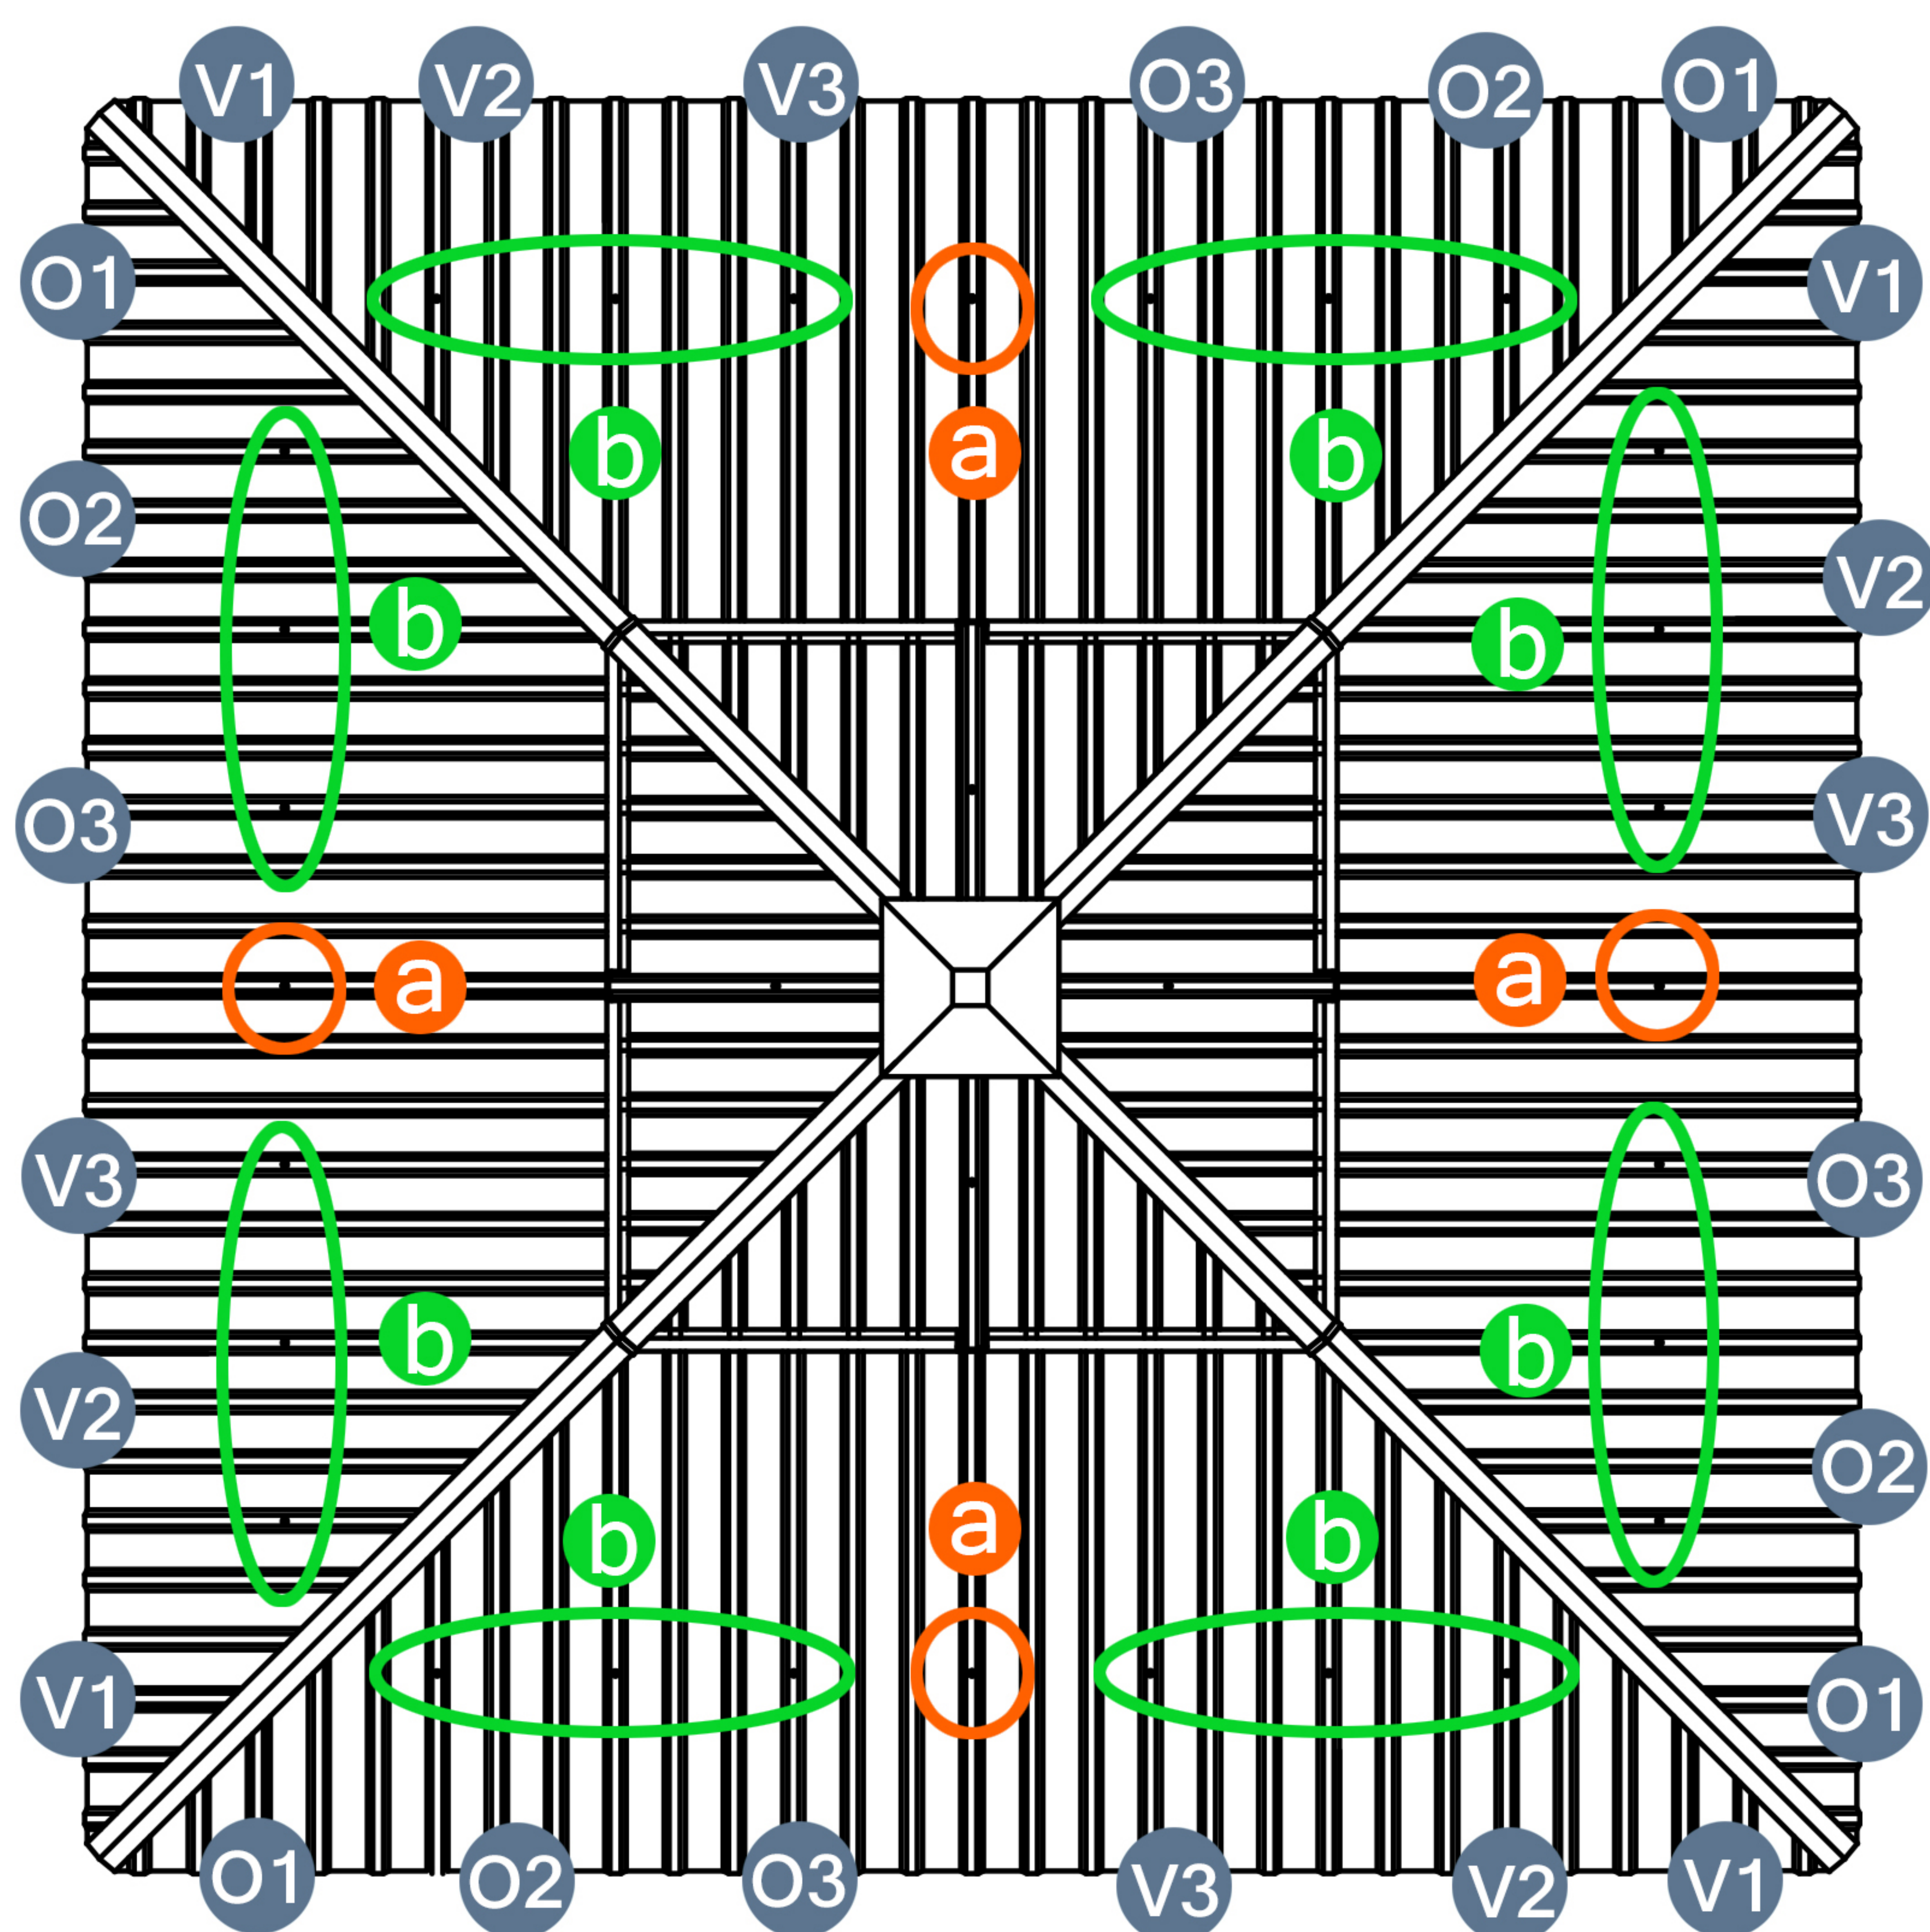





# STEP 17


Parts required

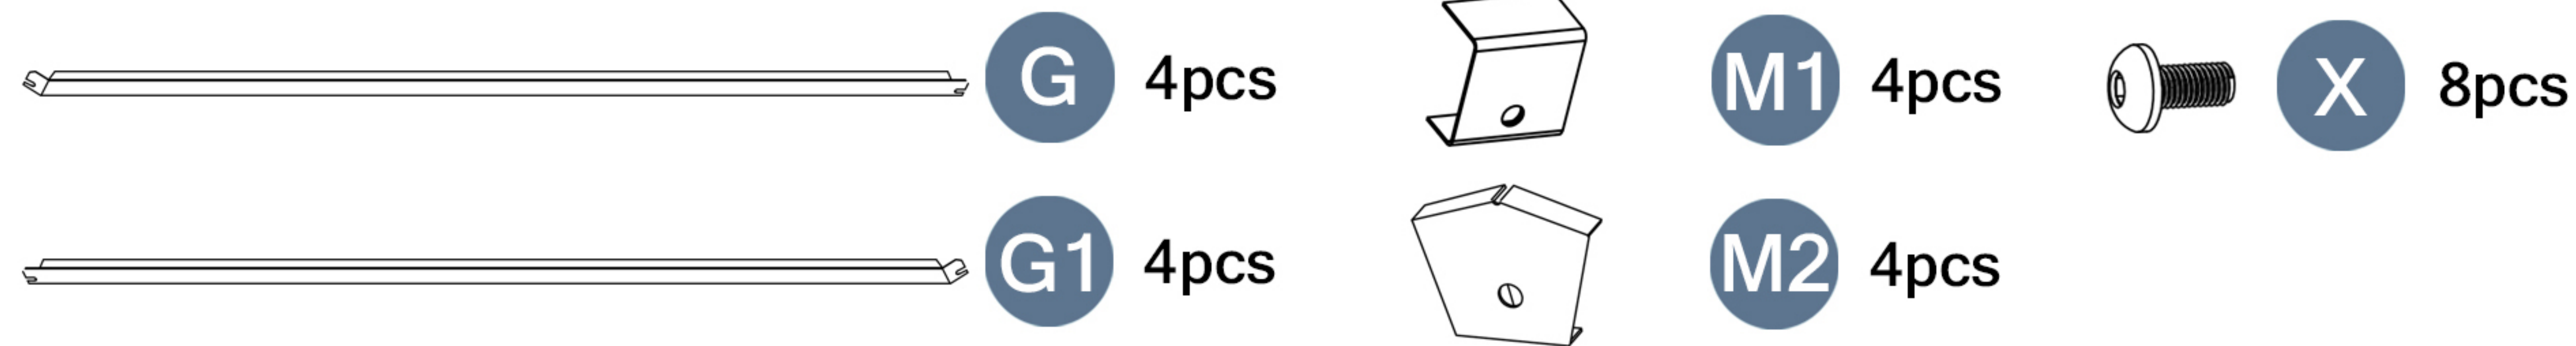


1 → 2 → 3

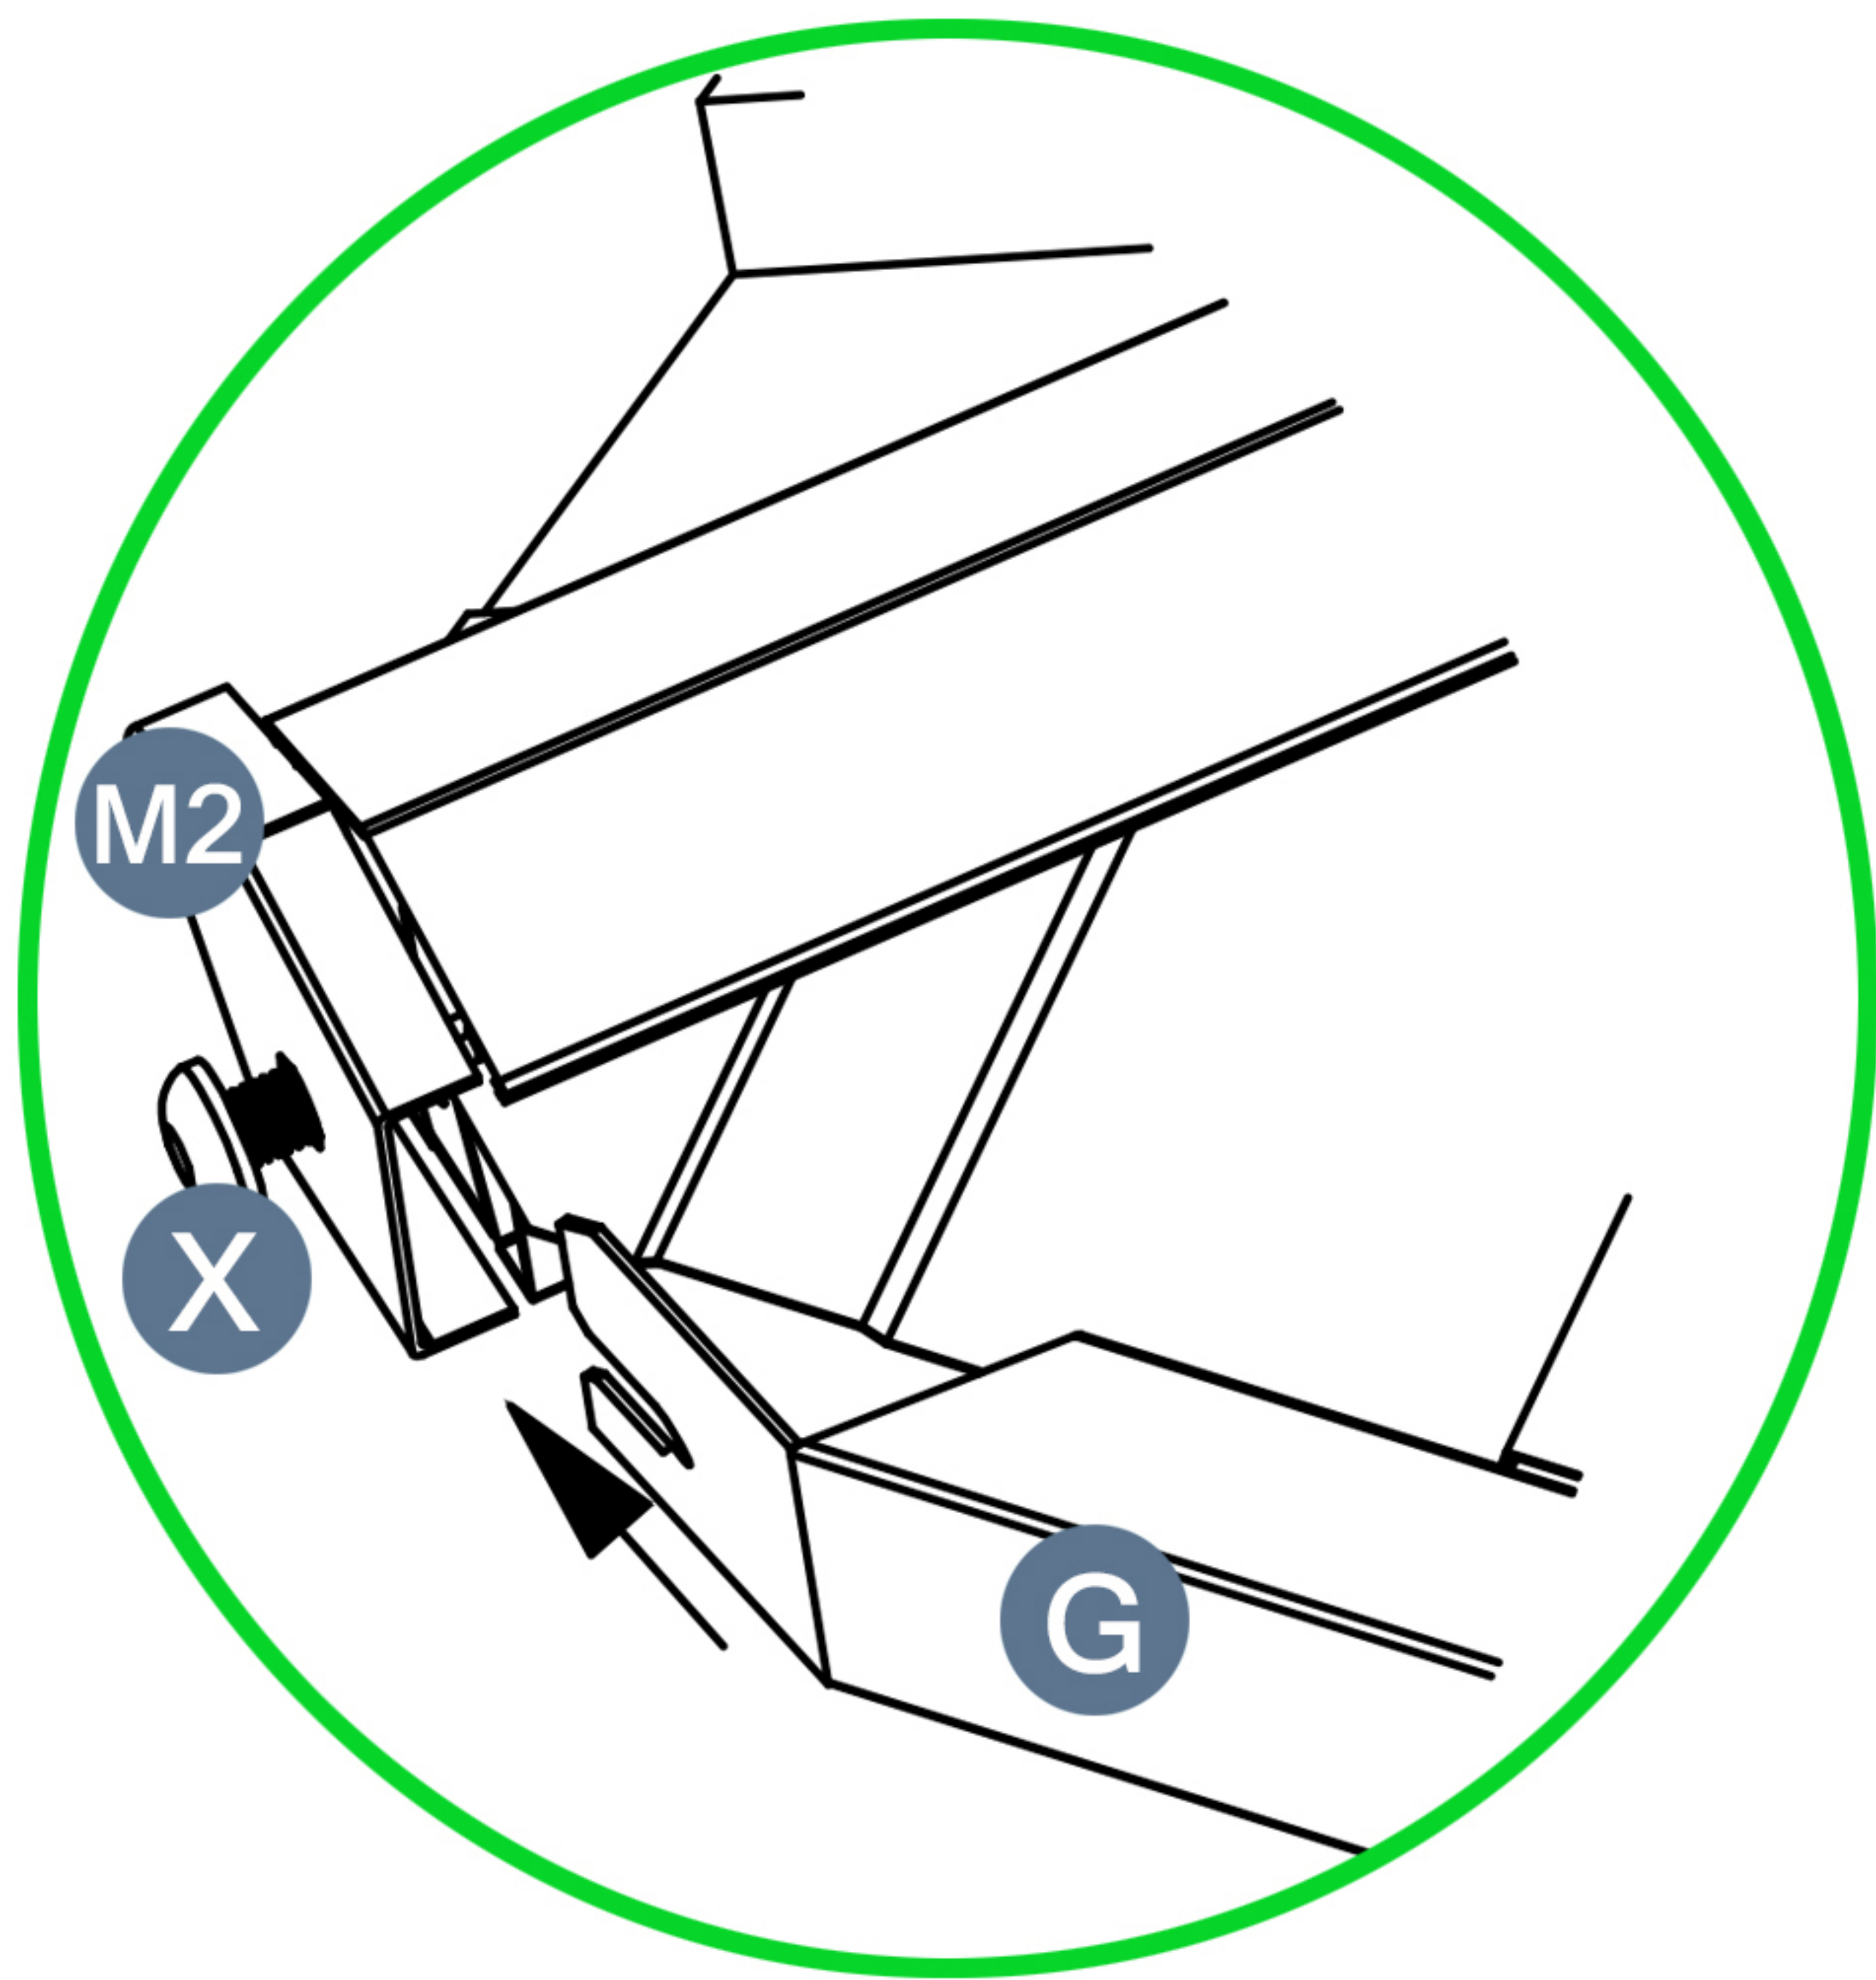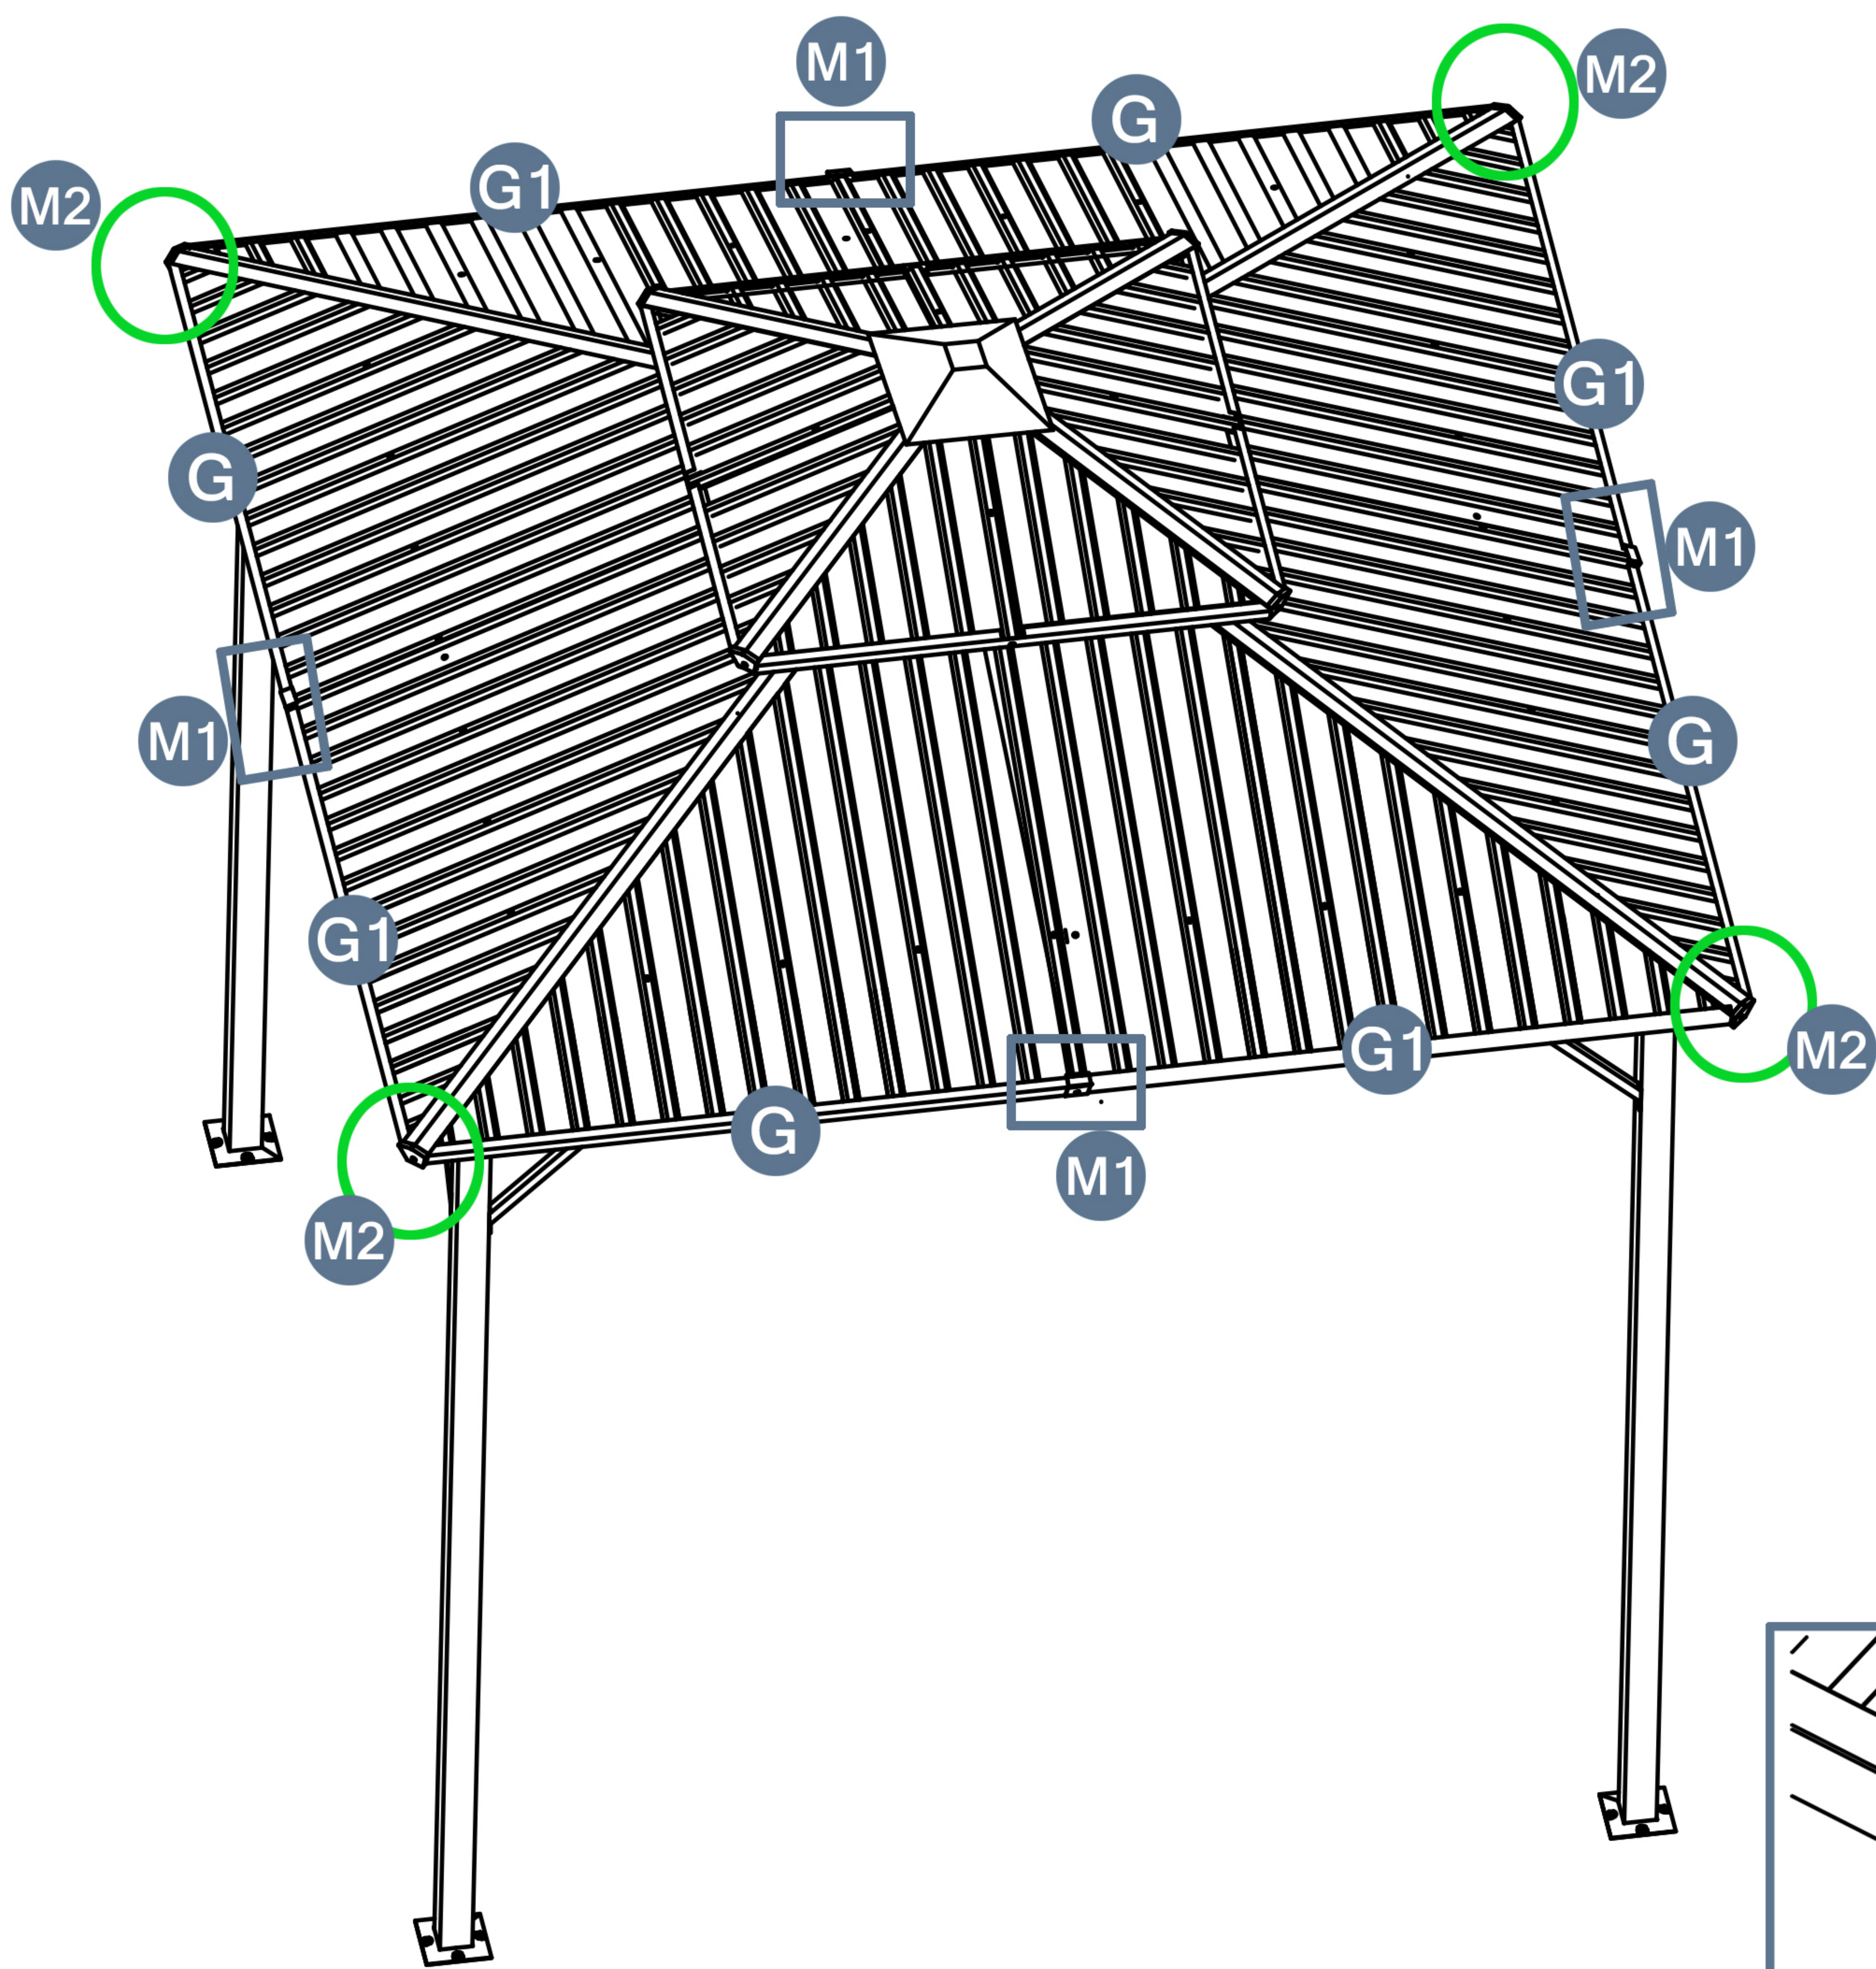

1

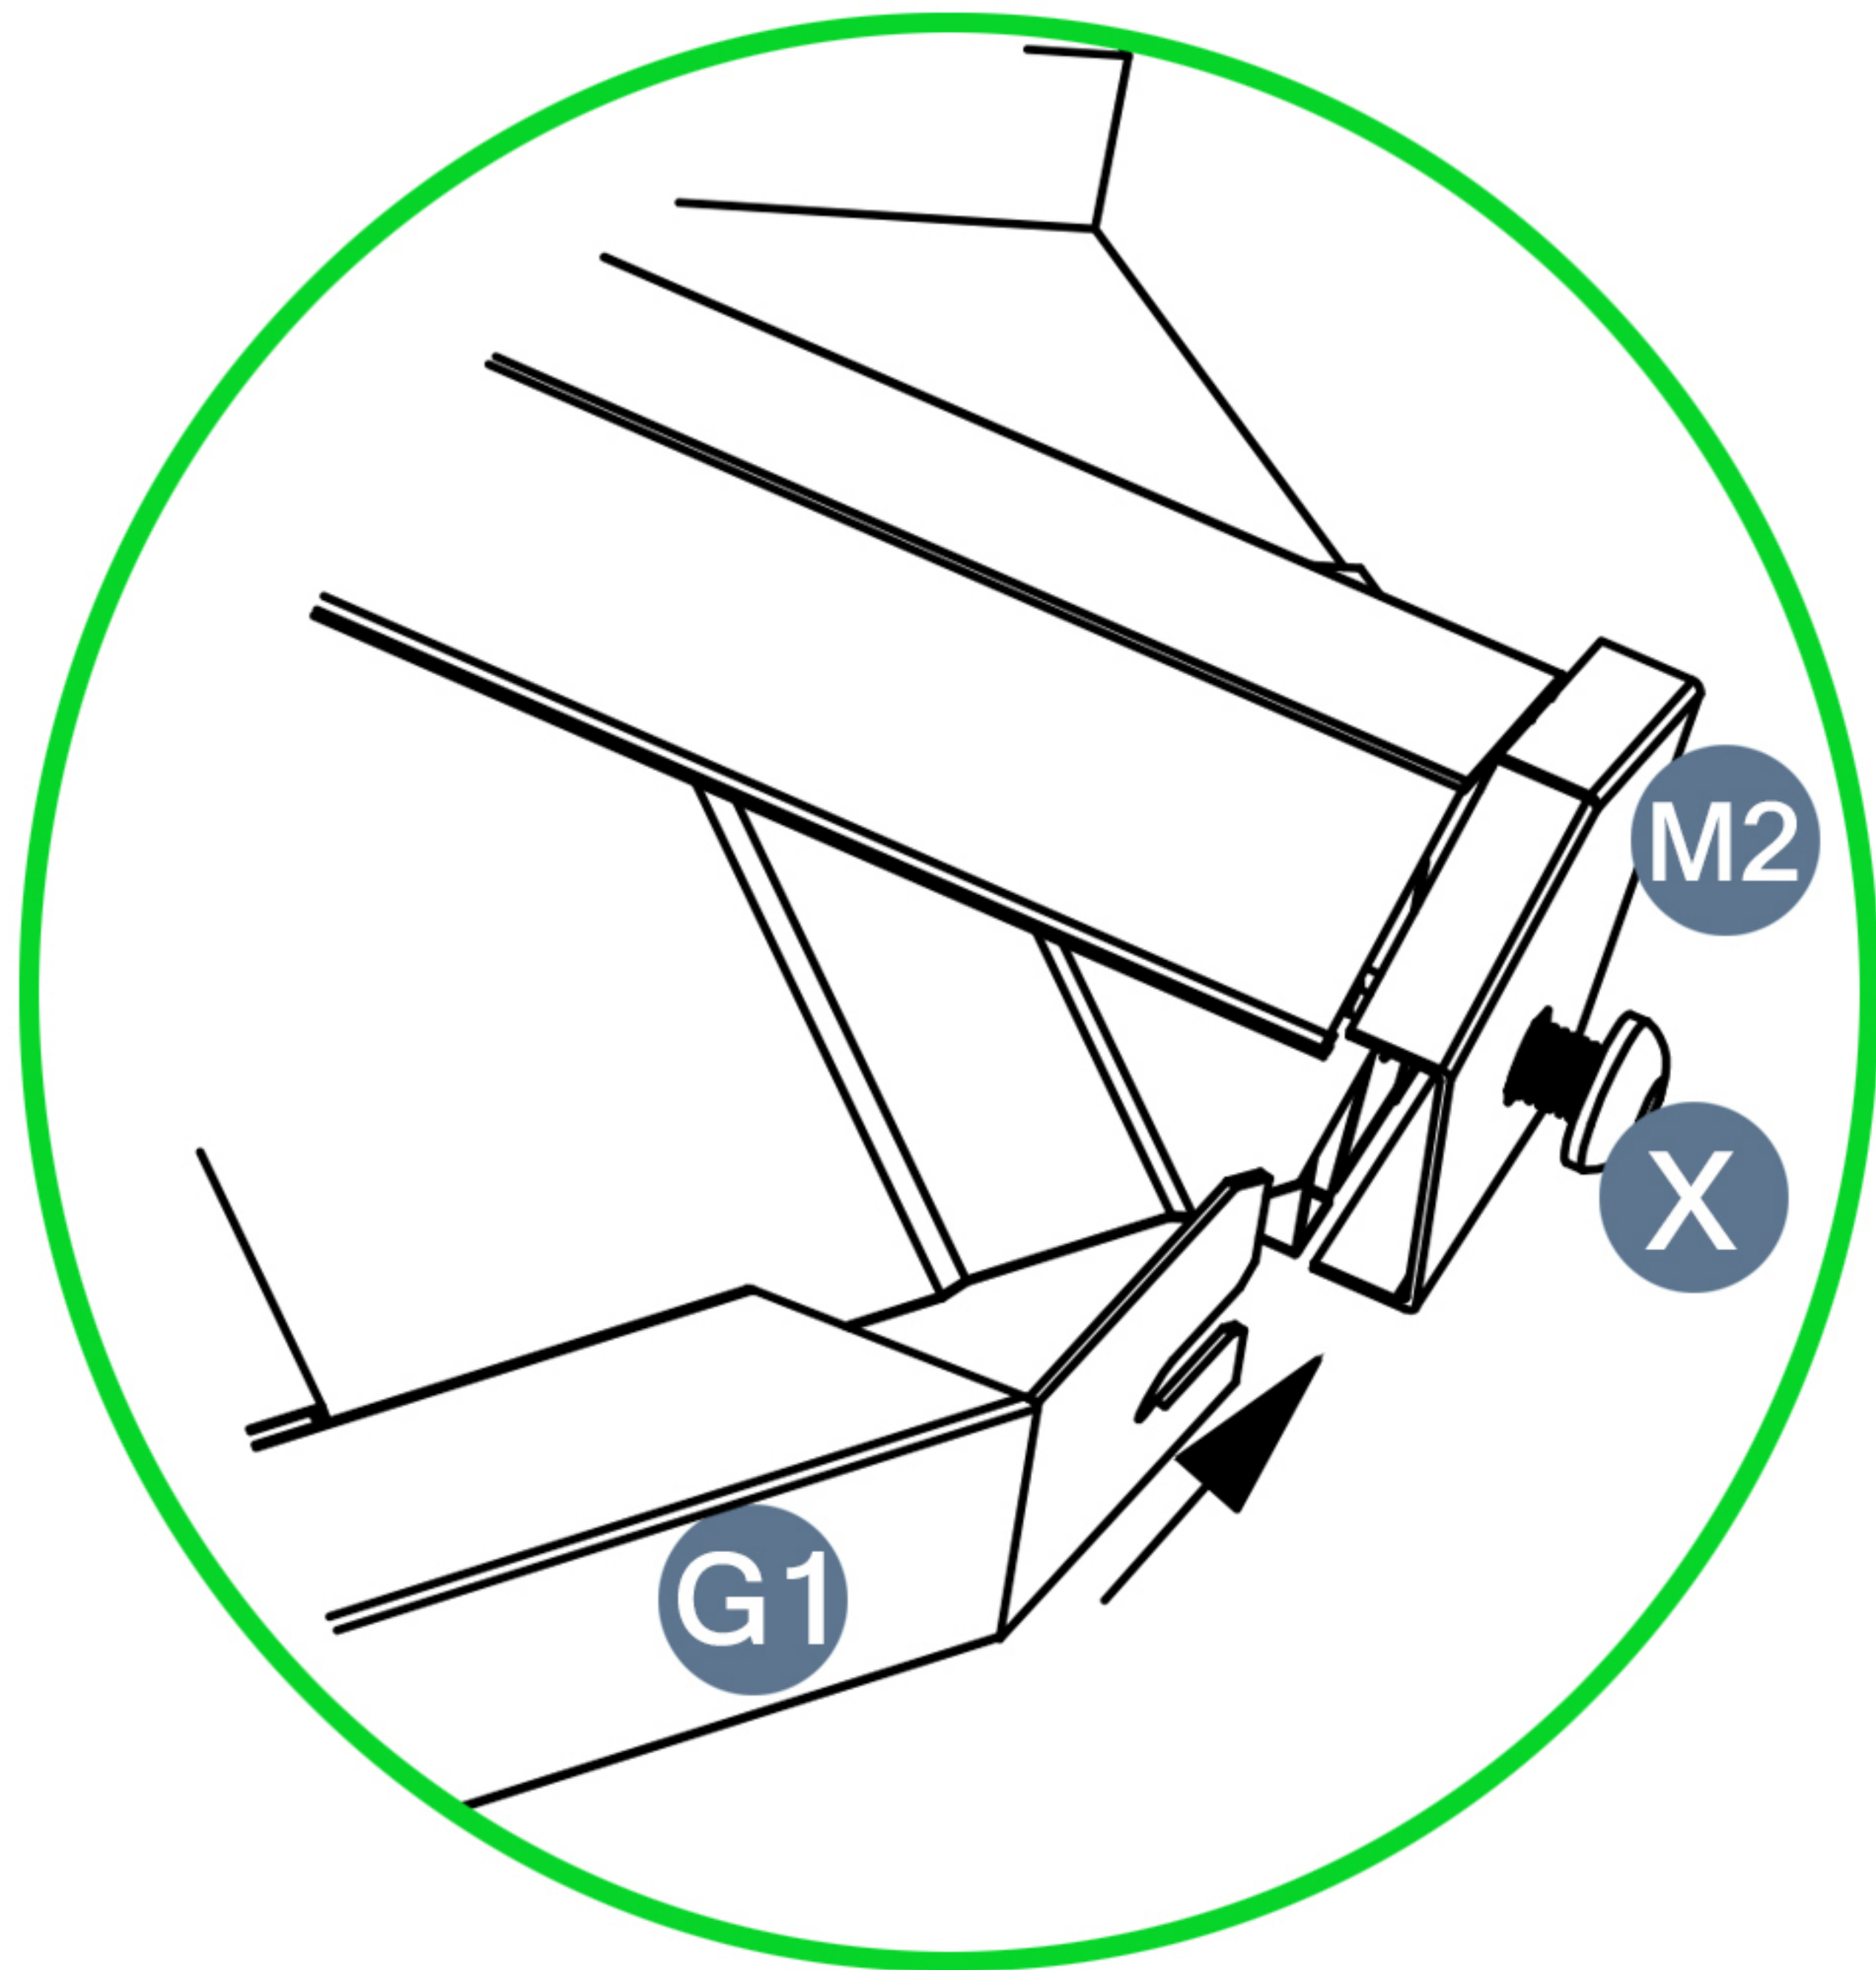

2

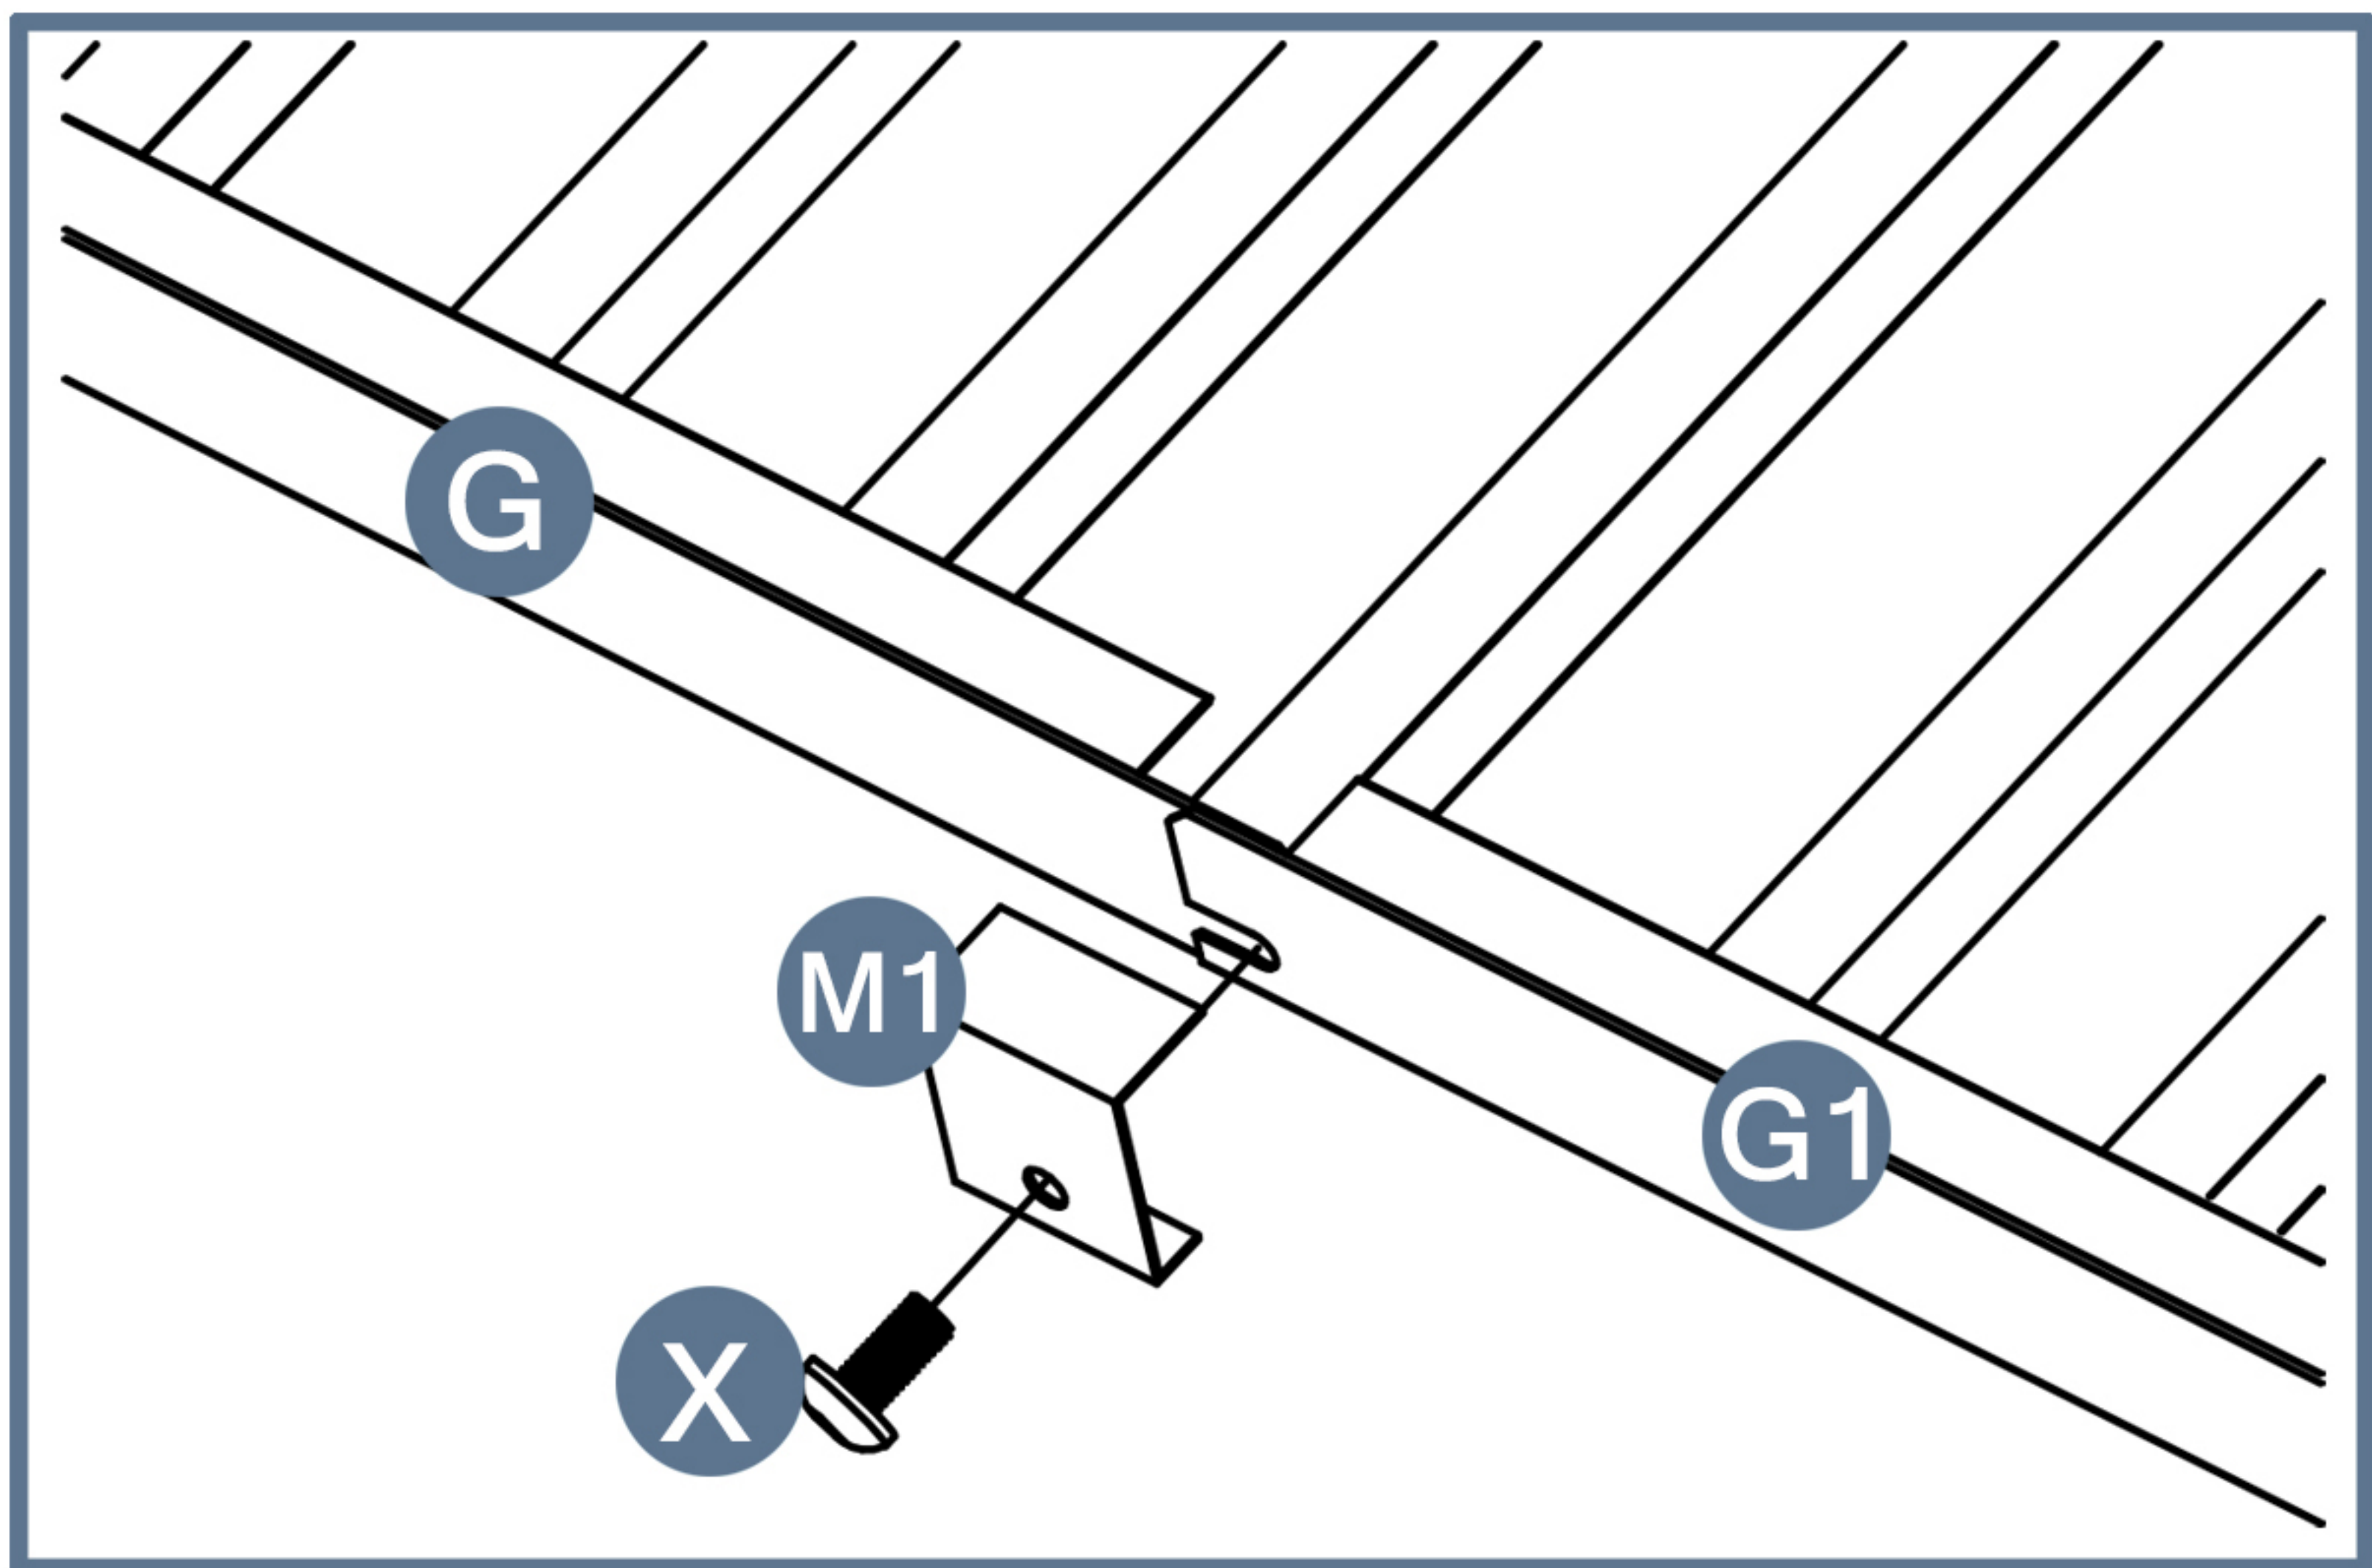


3




# STEP 18


Parts required

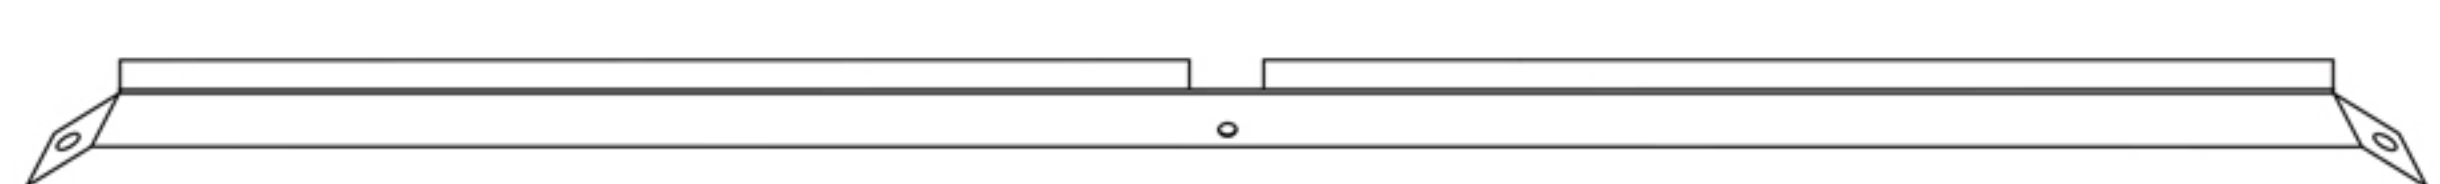

G10 4pcs

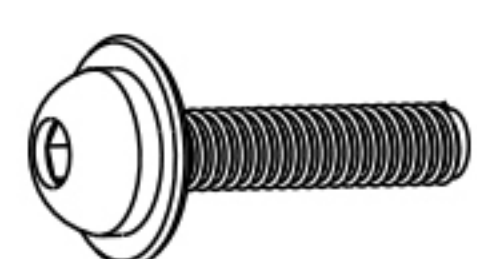

X3 4pcs





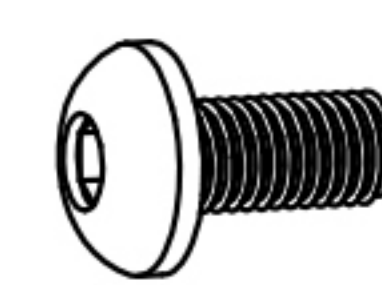


X 4pcs

1 → 2 → 3 → 4

It can be installed from the inside.


To better align the screws for practical situations, do not fully tighten screws initially.

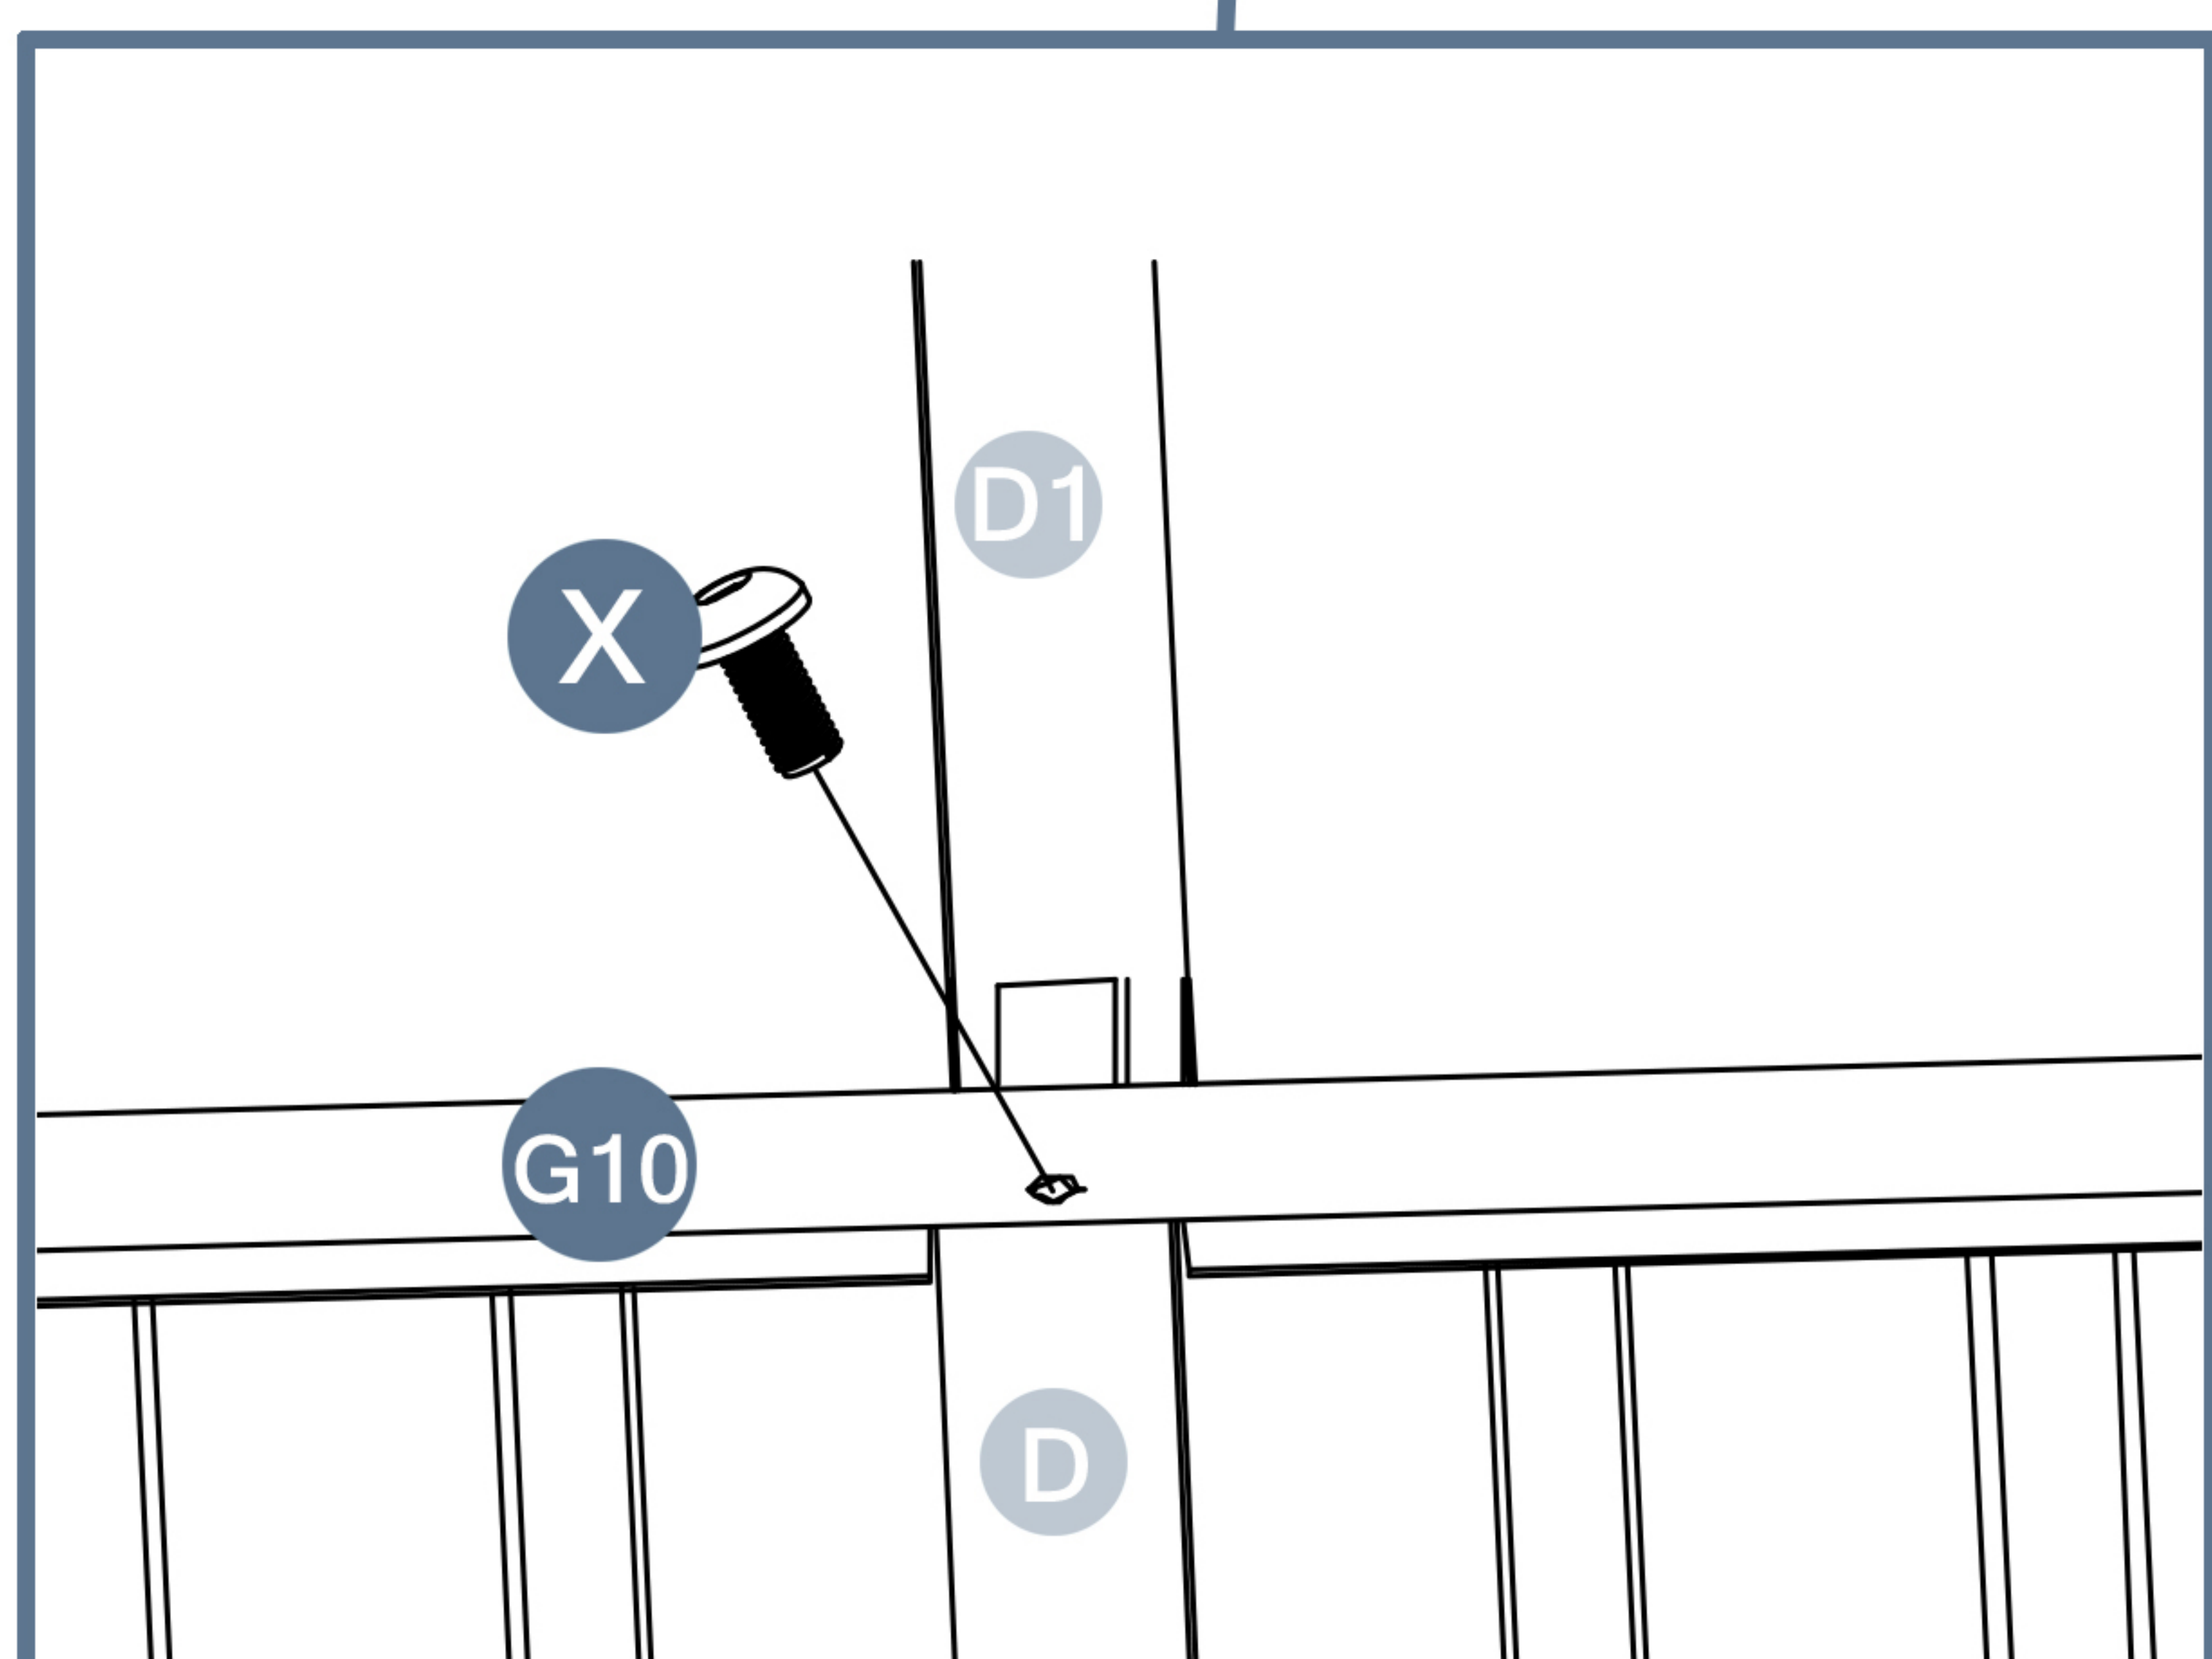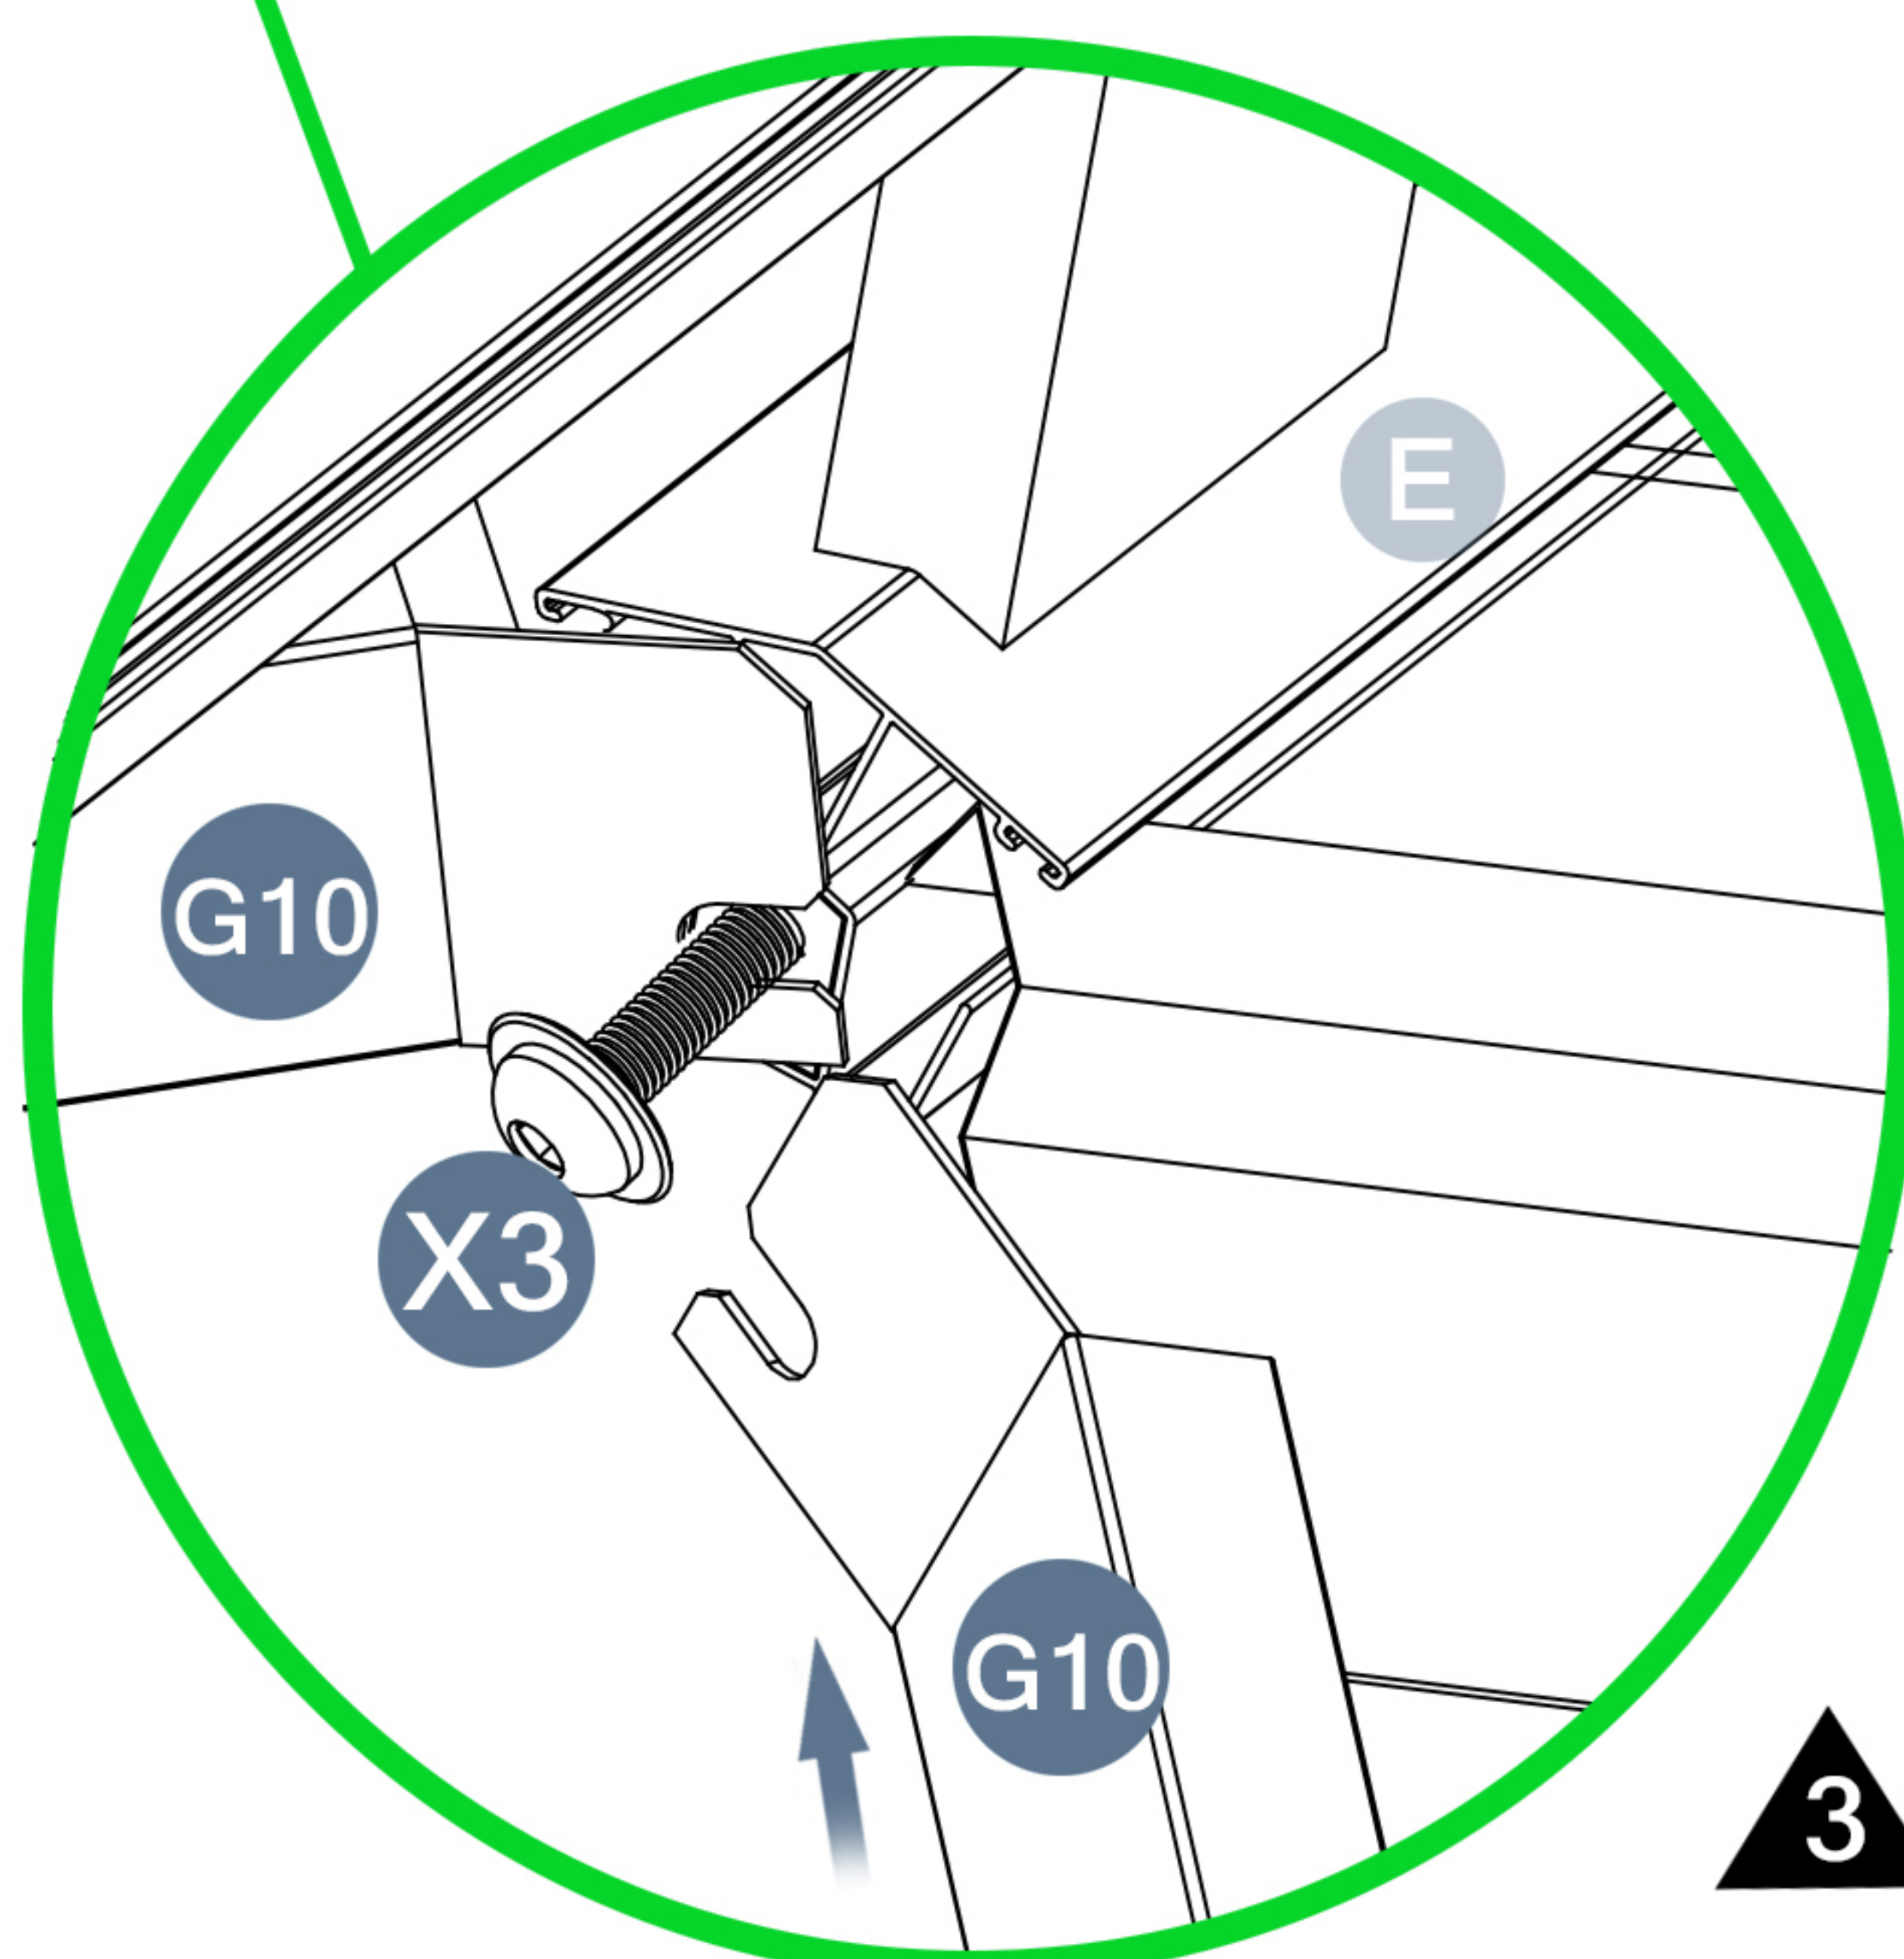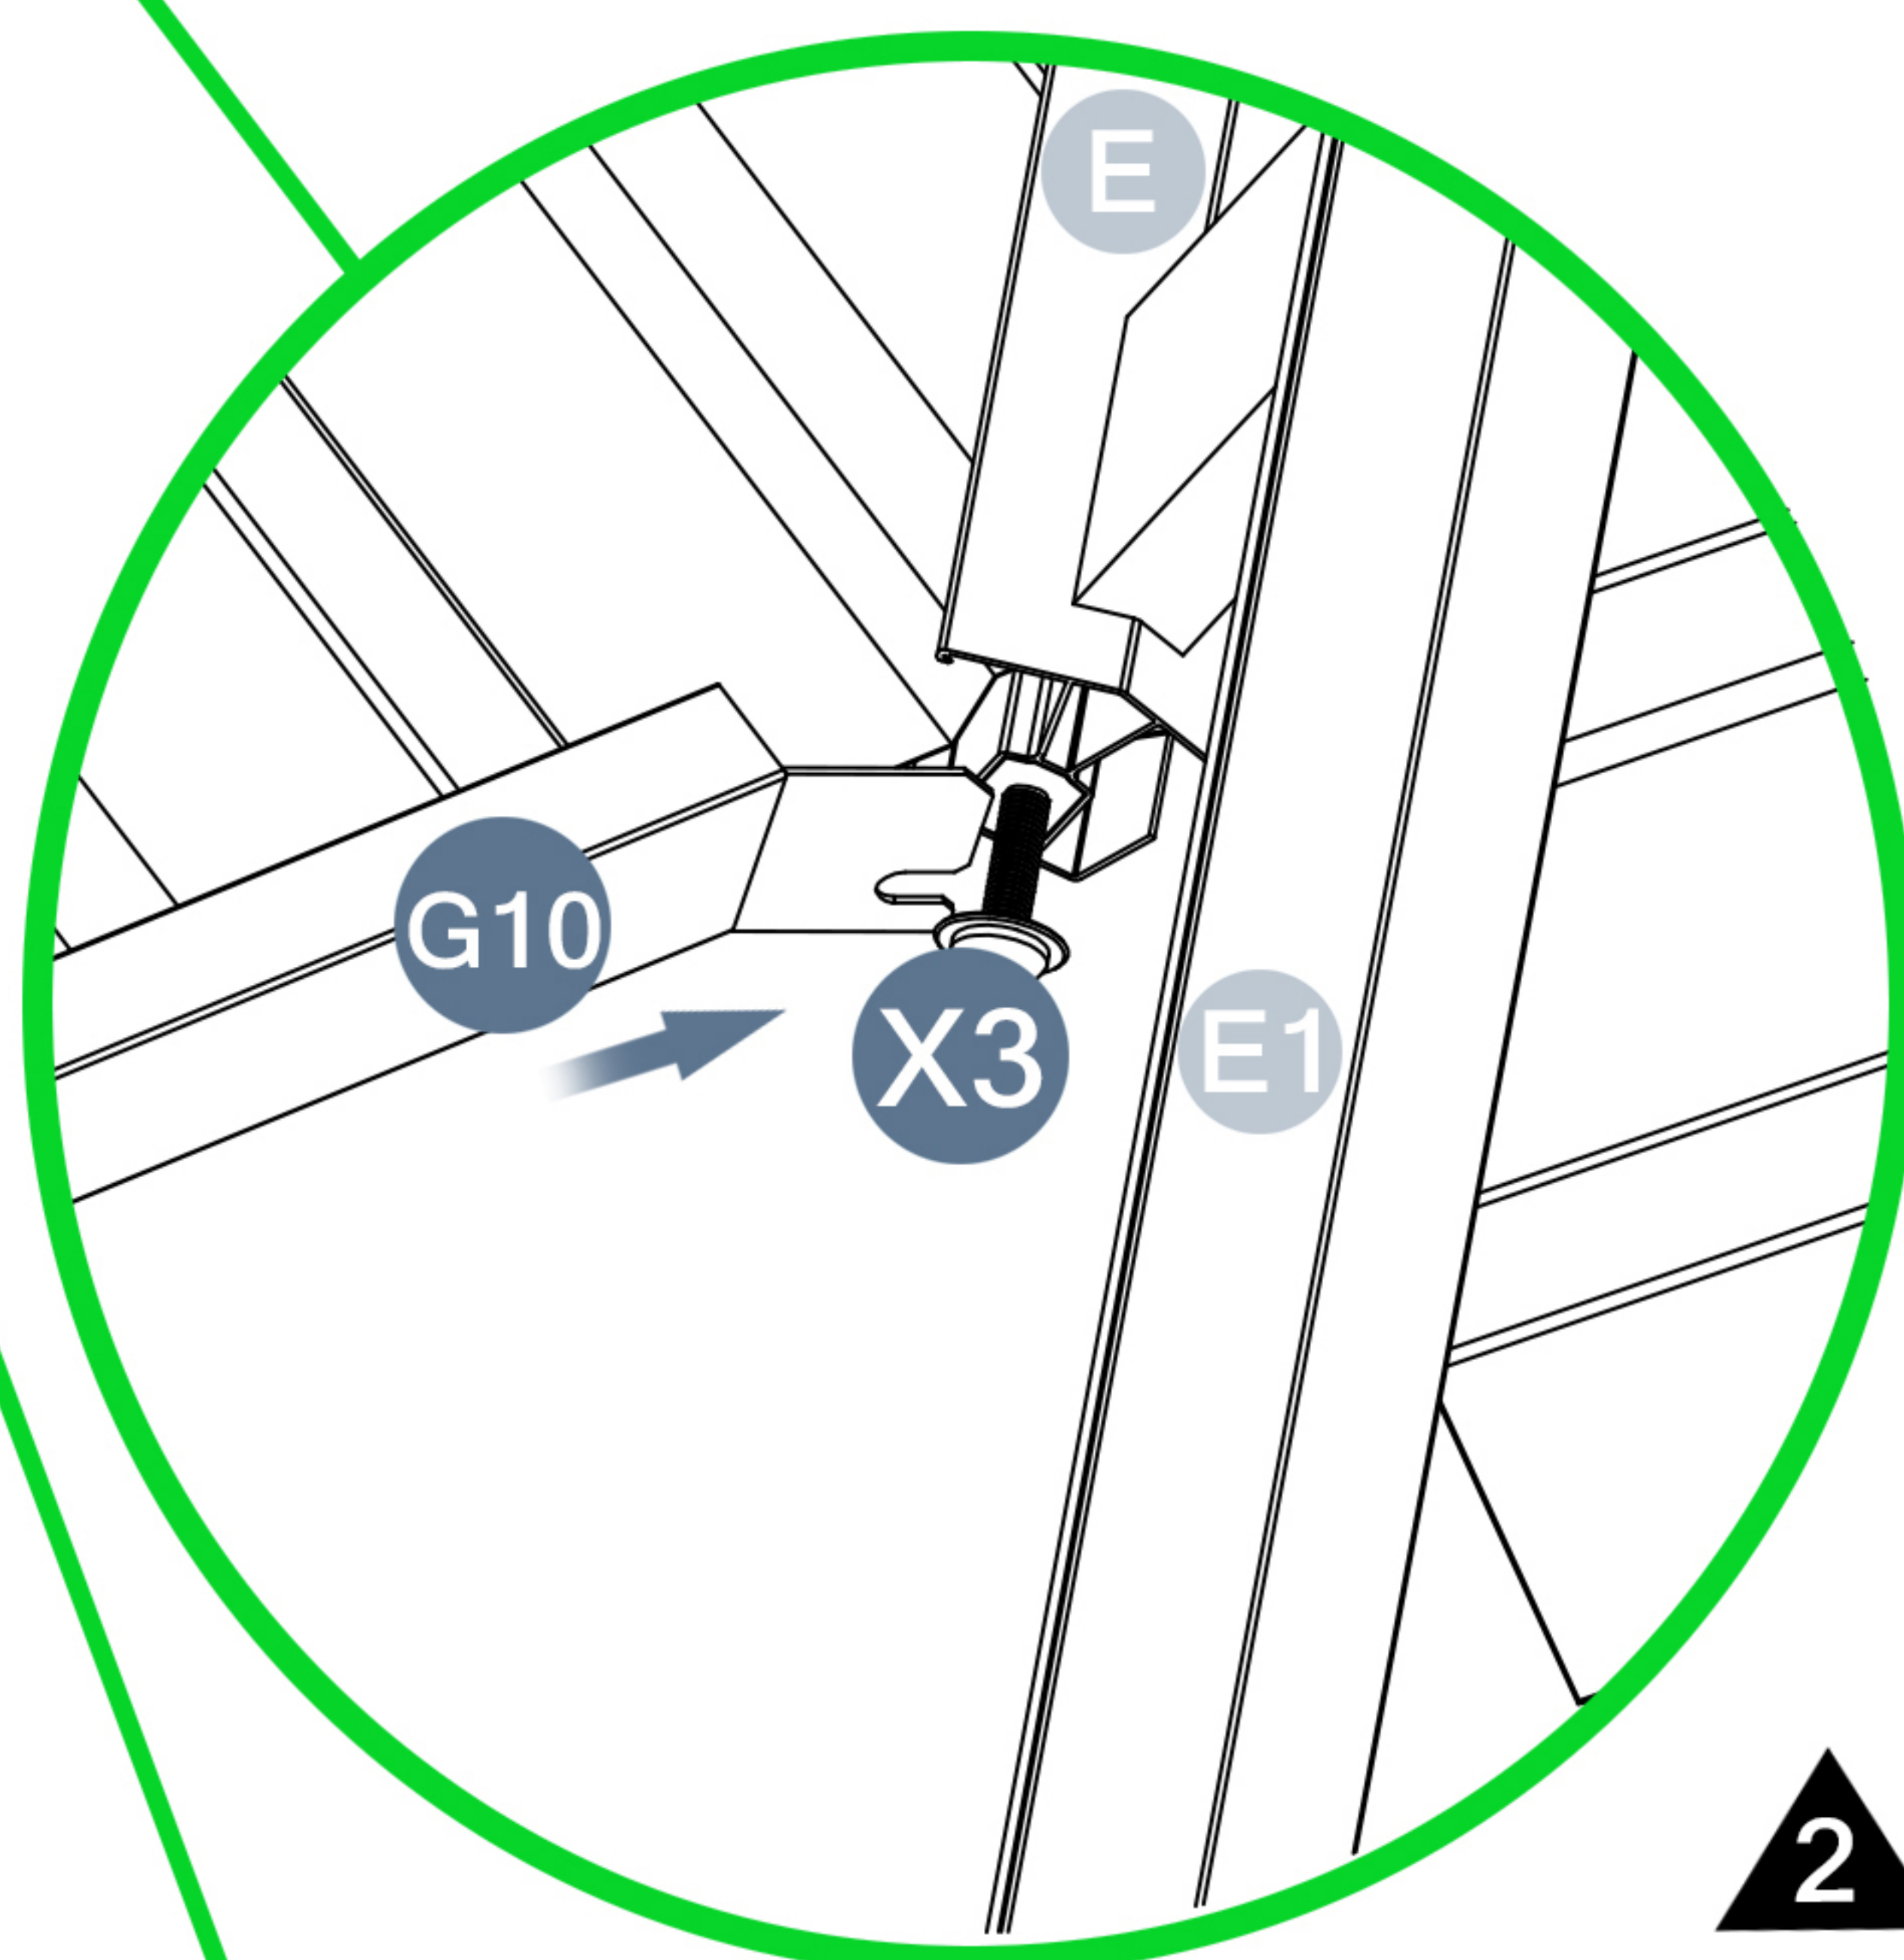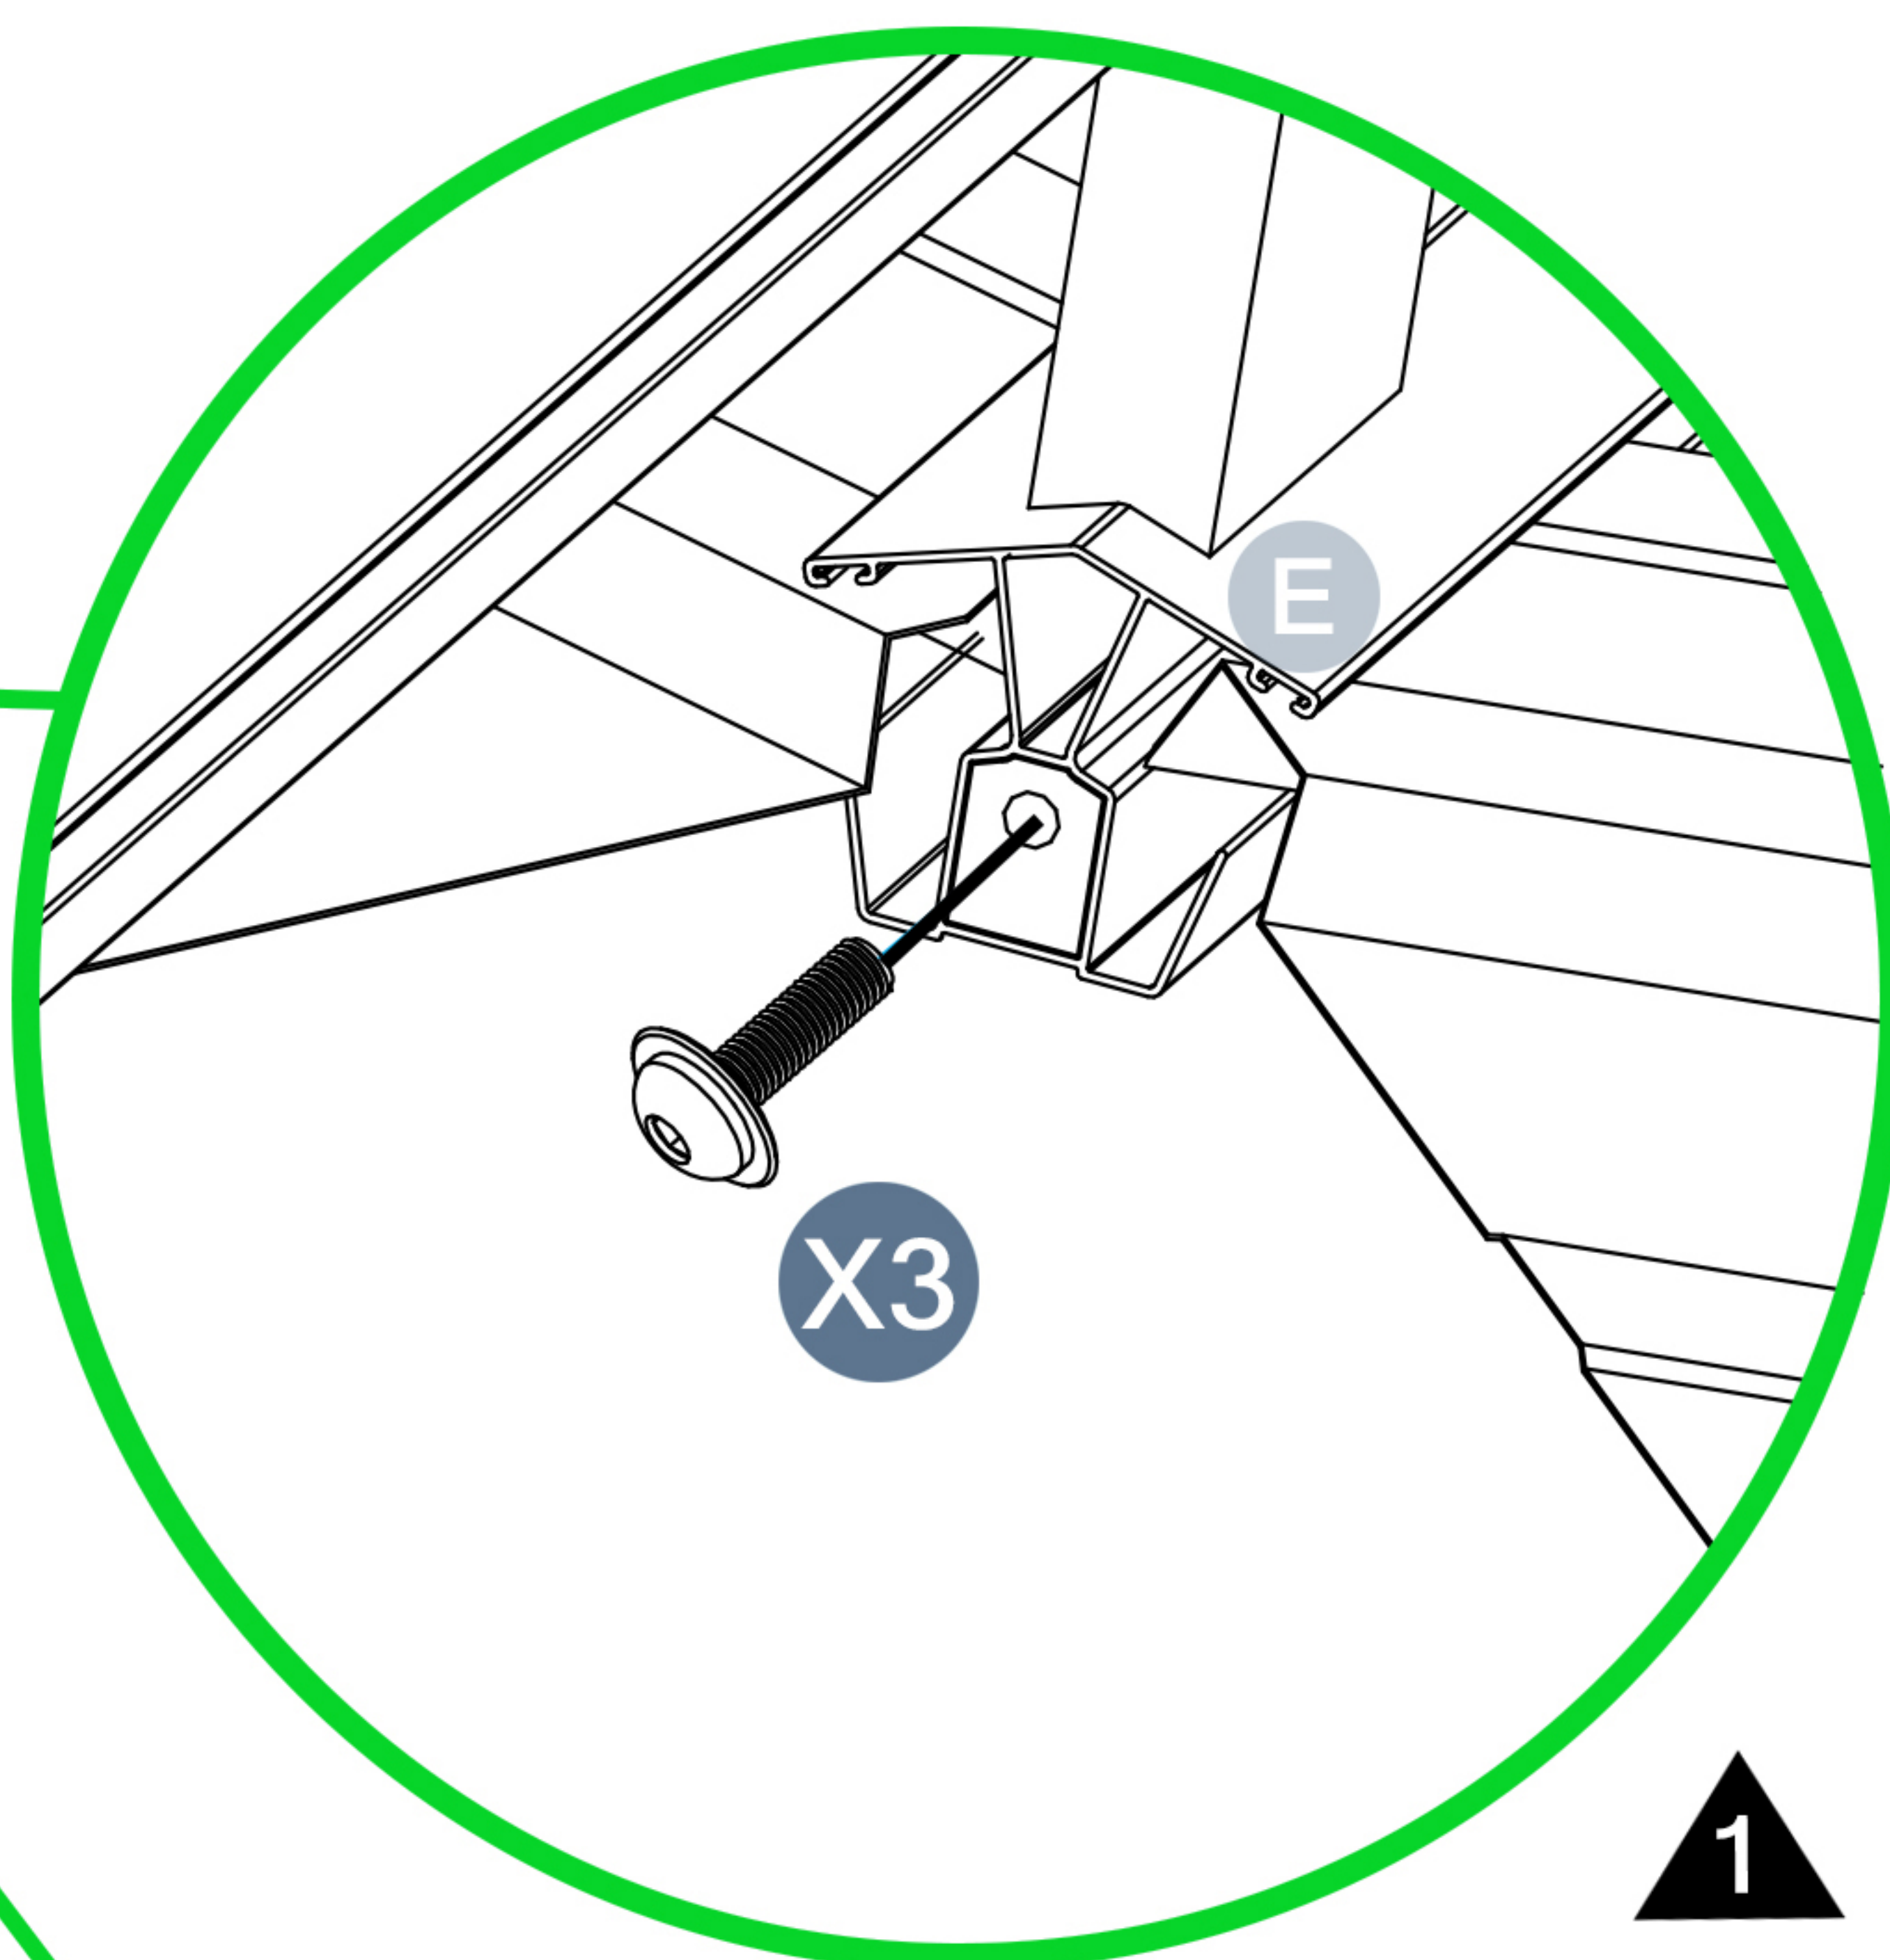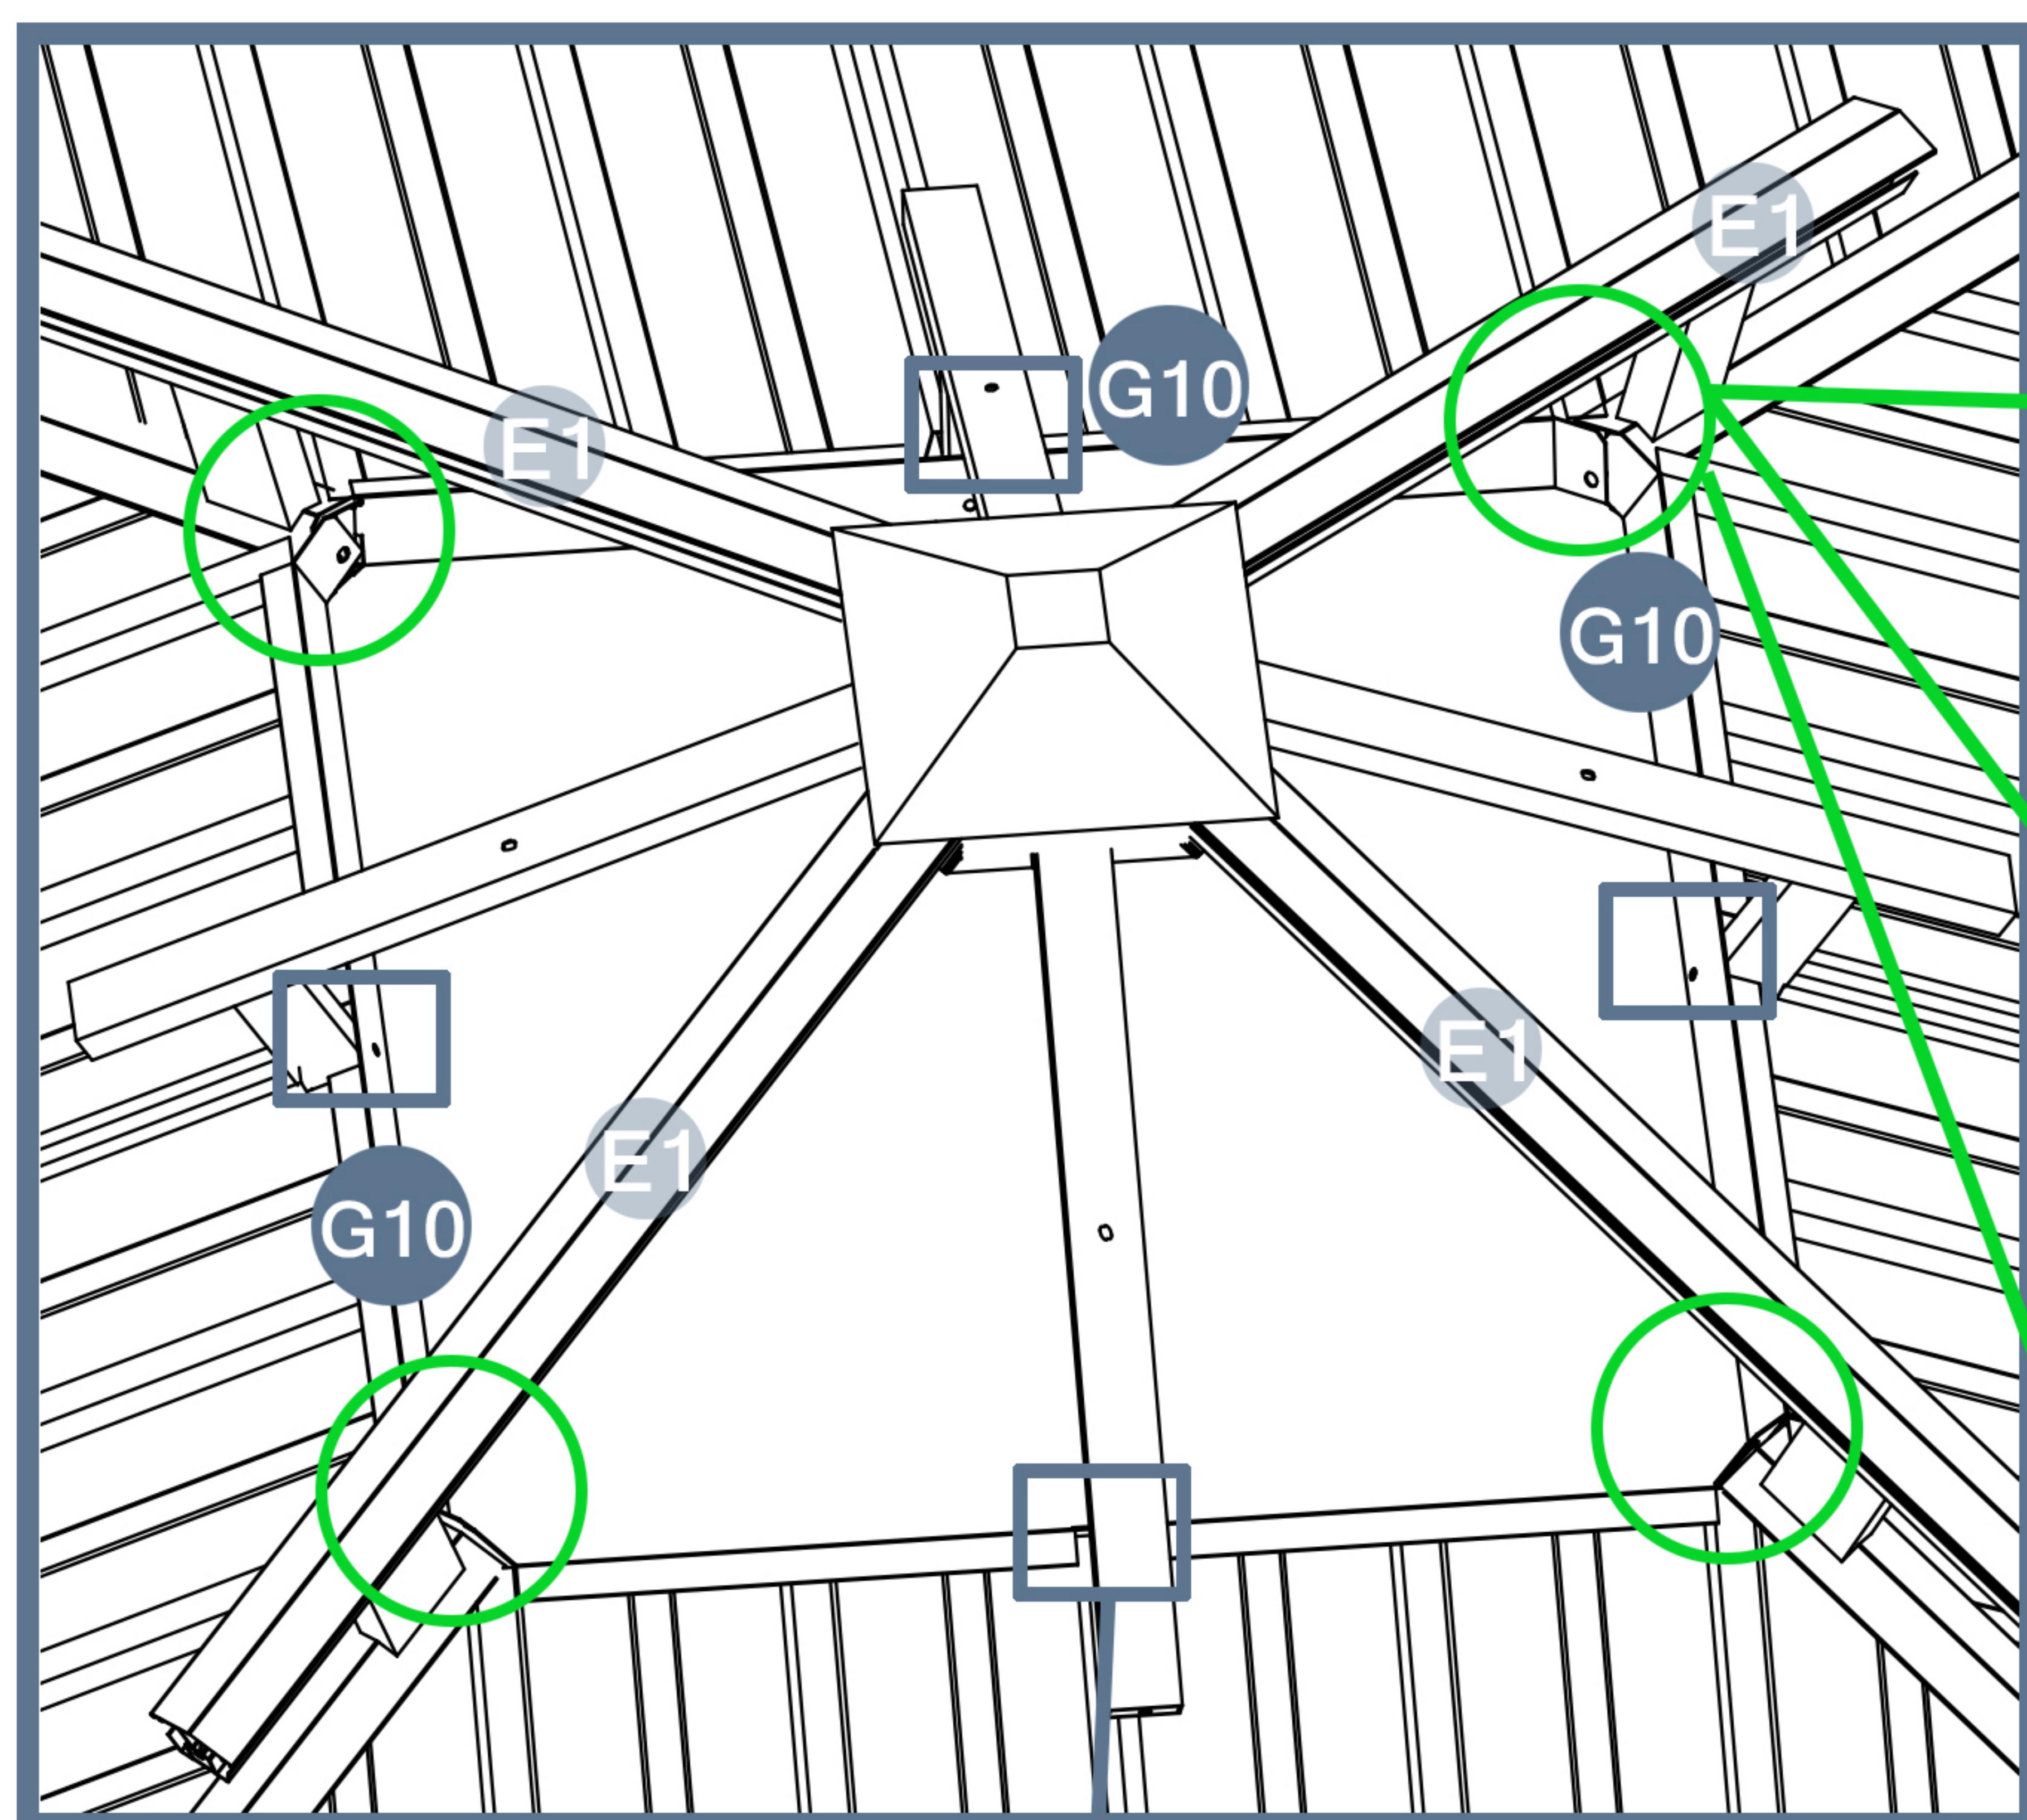





# STEP 19

Parts required

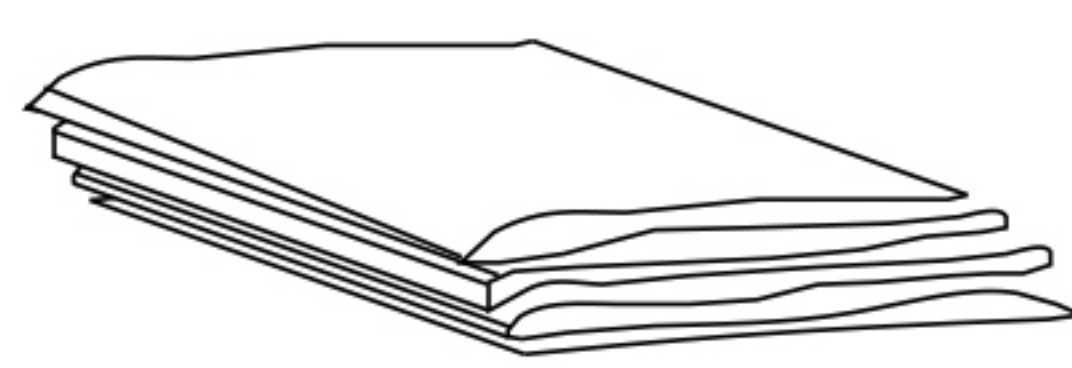


**Z** 1pcs

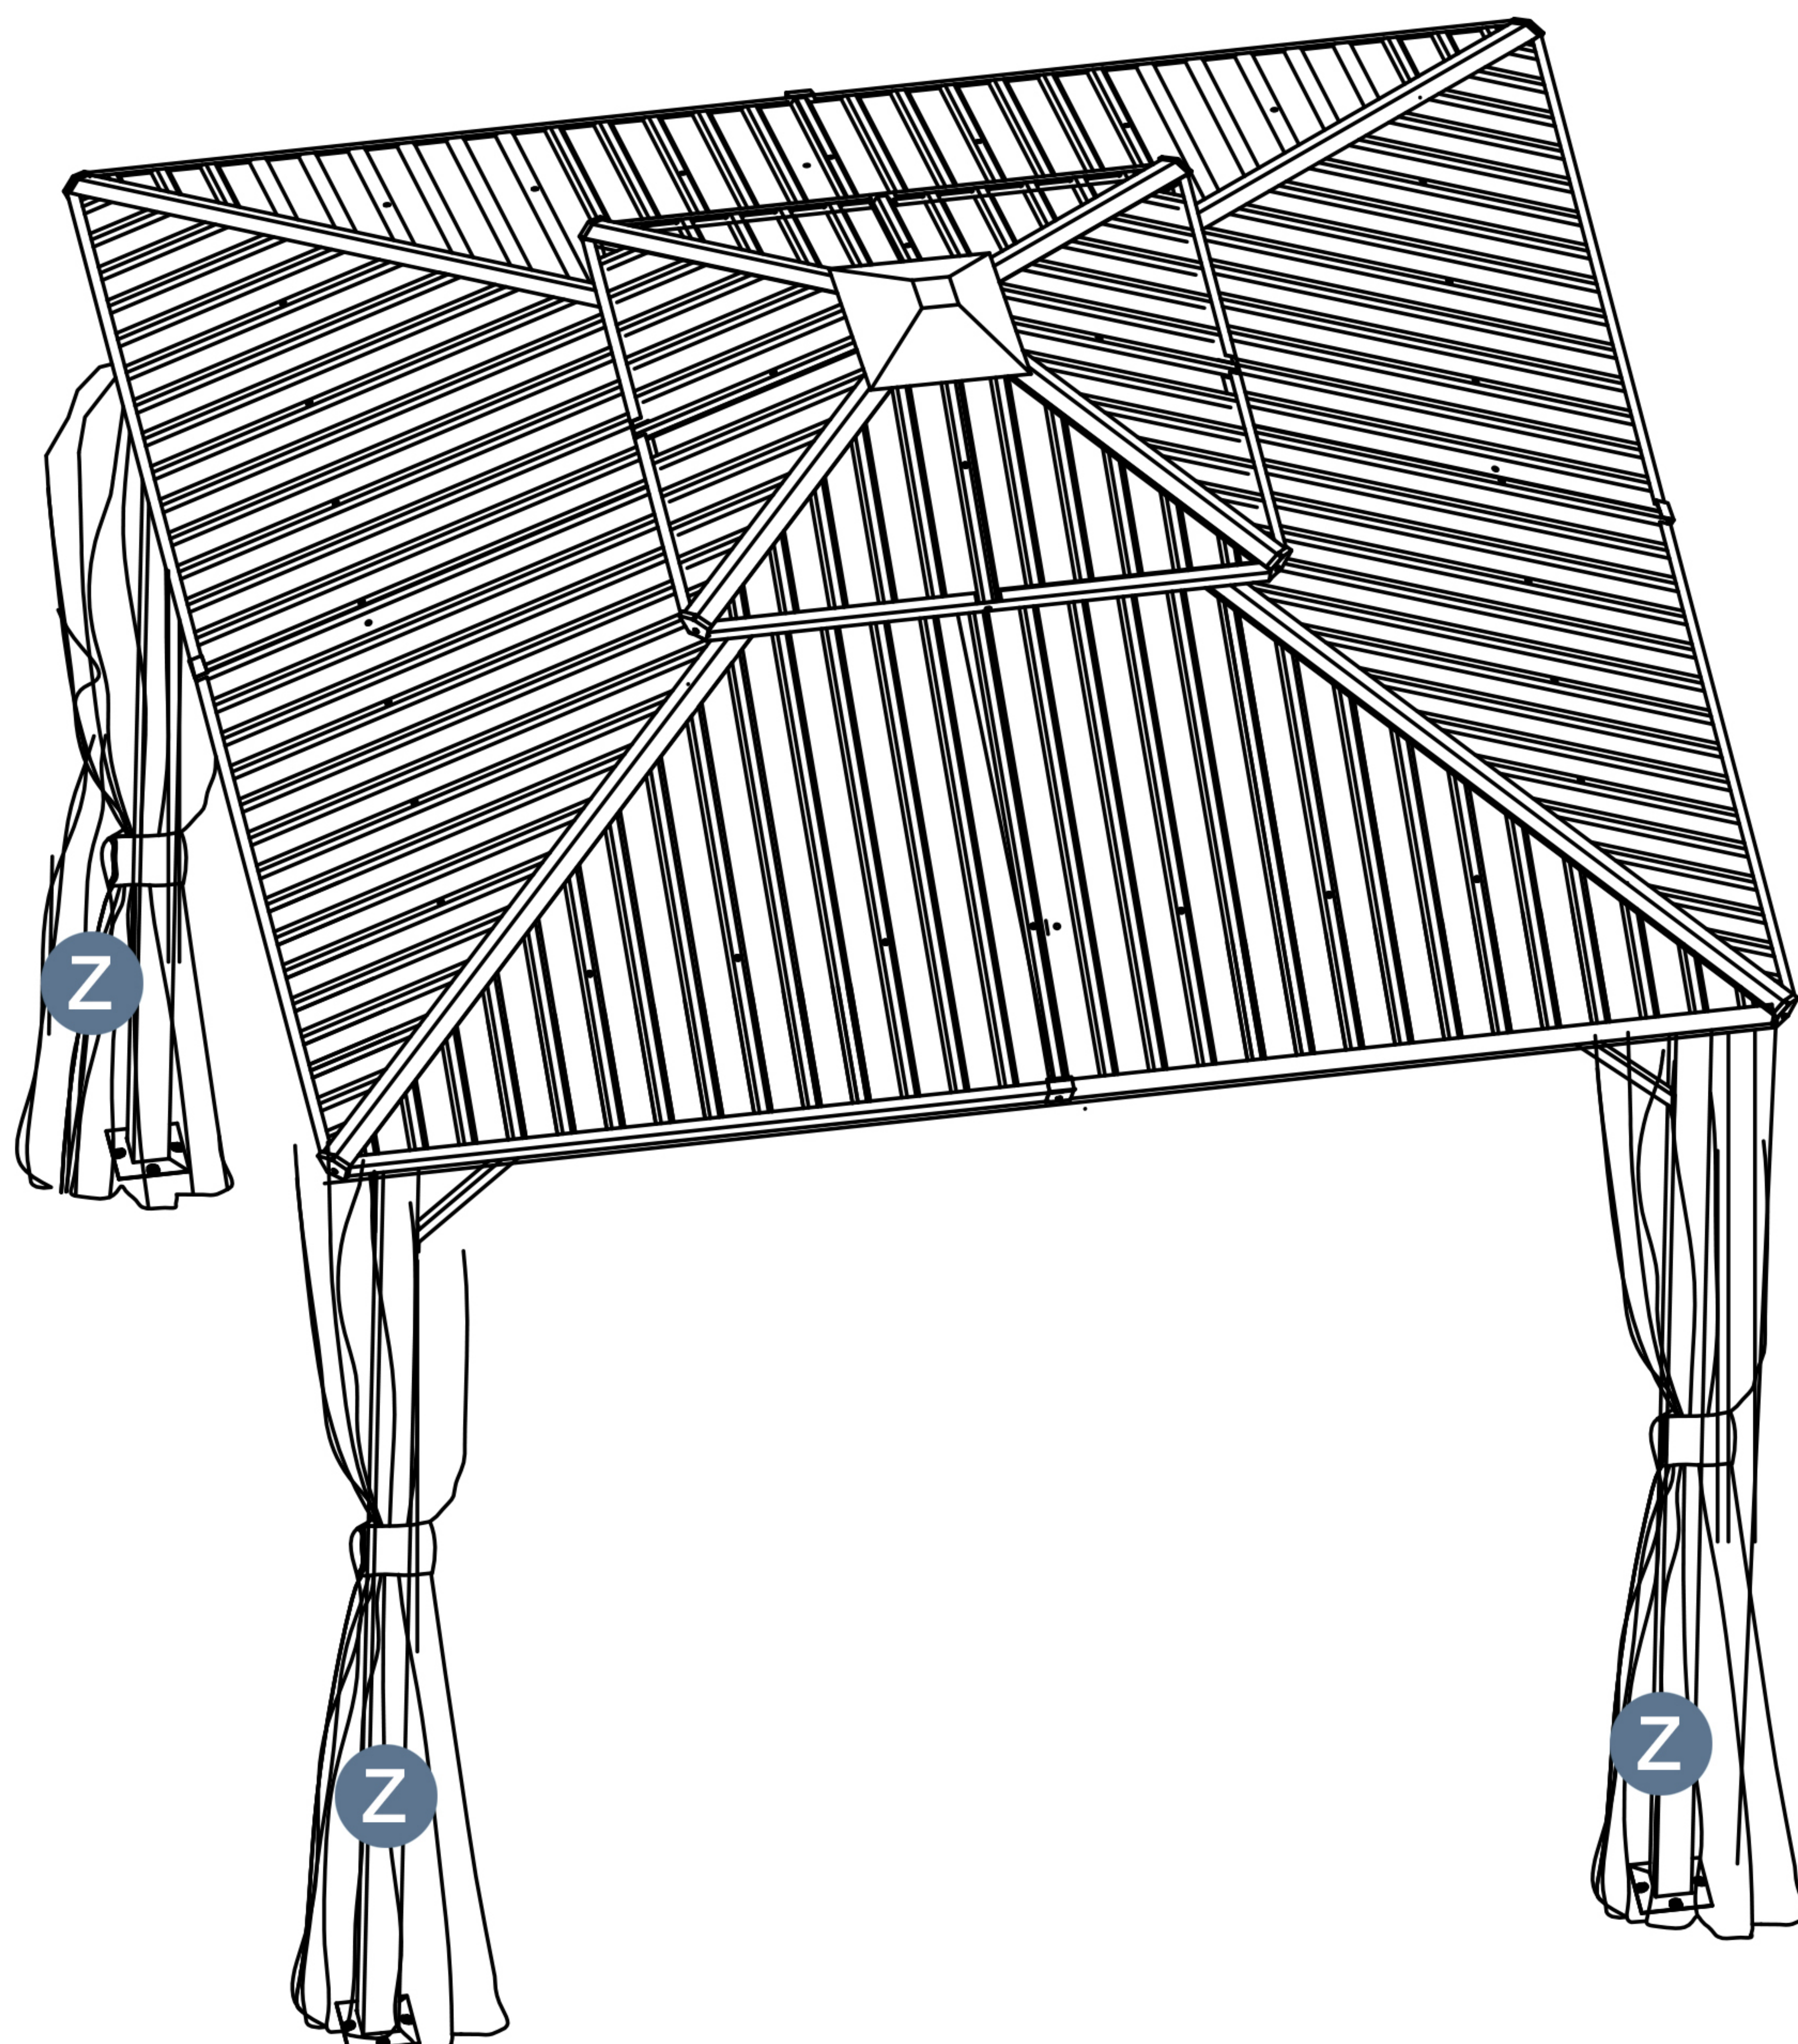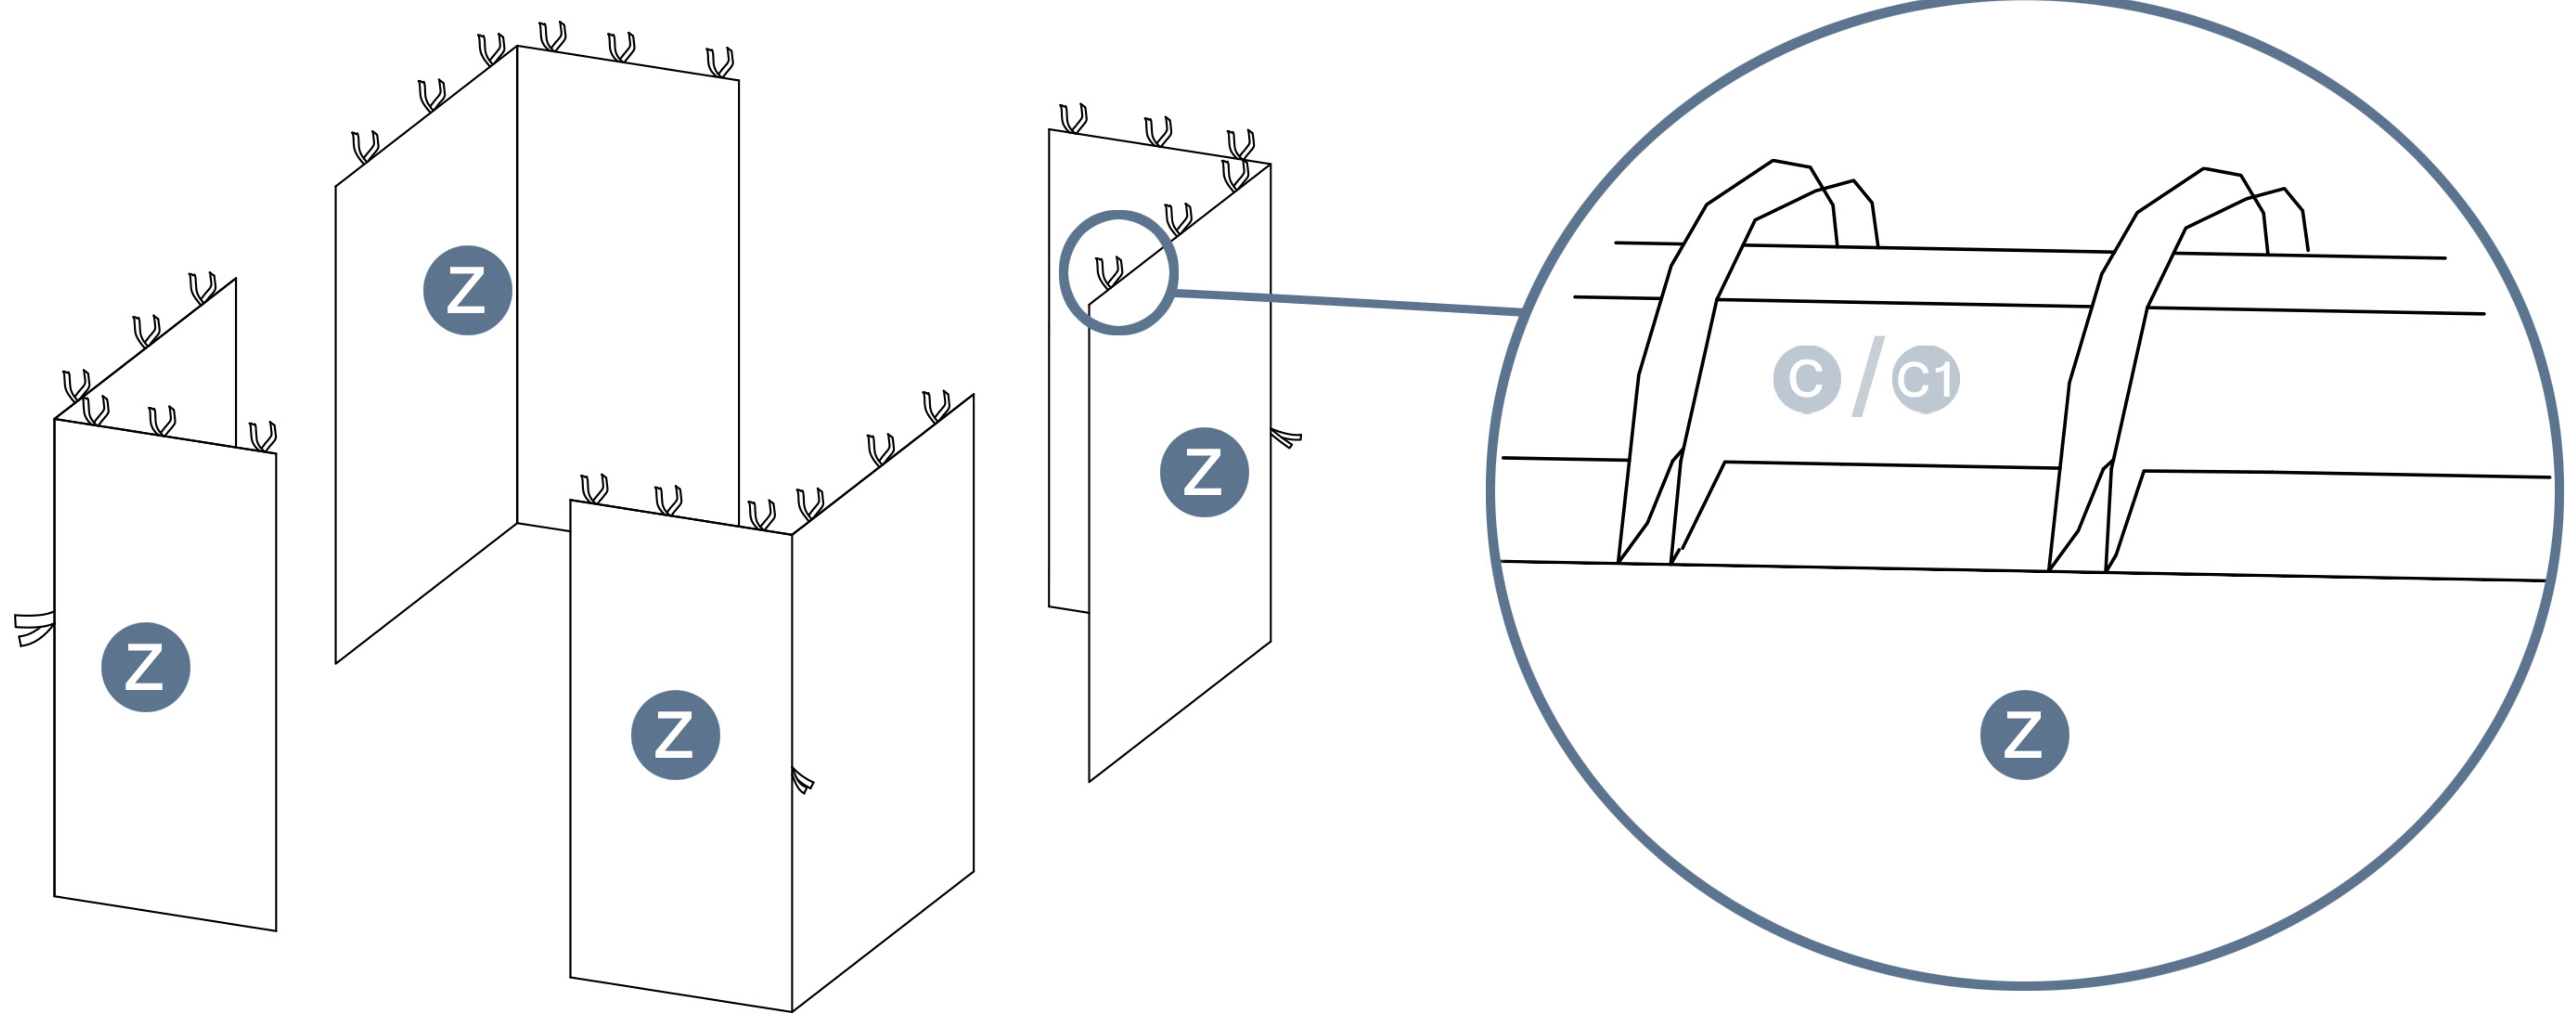




# STEP 20



Parts required

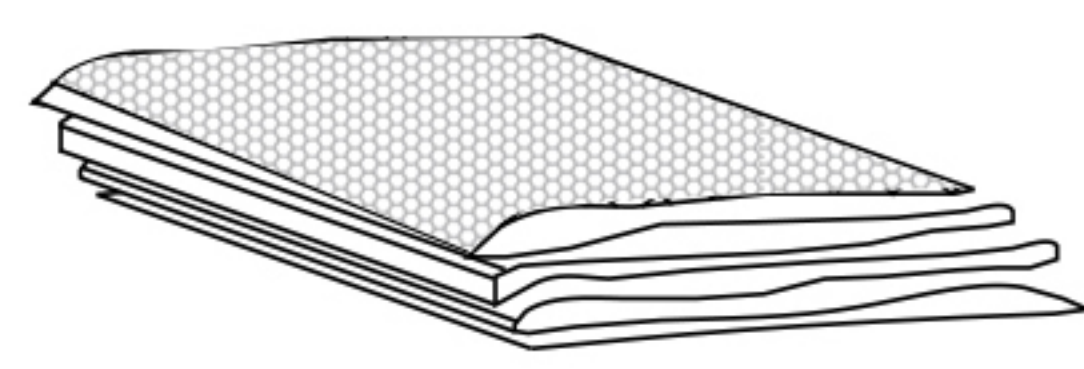

**Z1** 1pcs

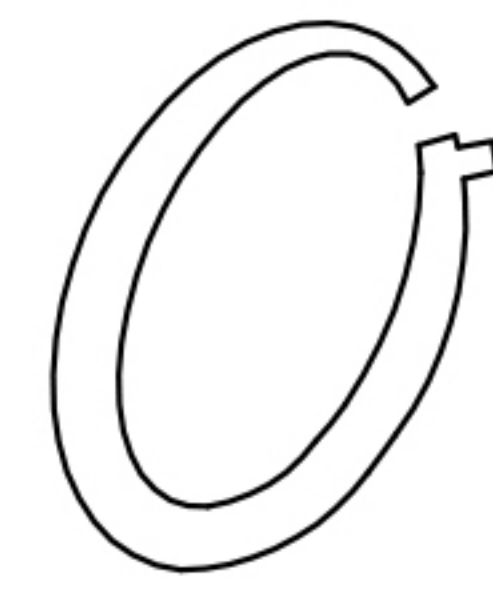


**Q** 24pcs

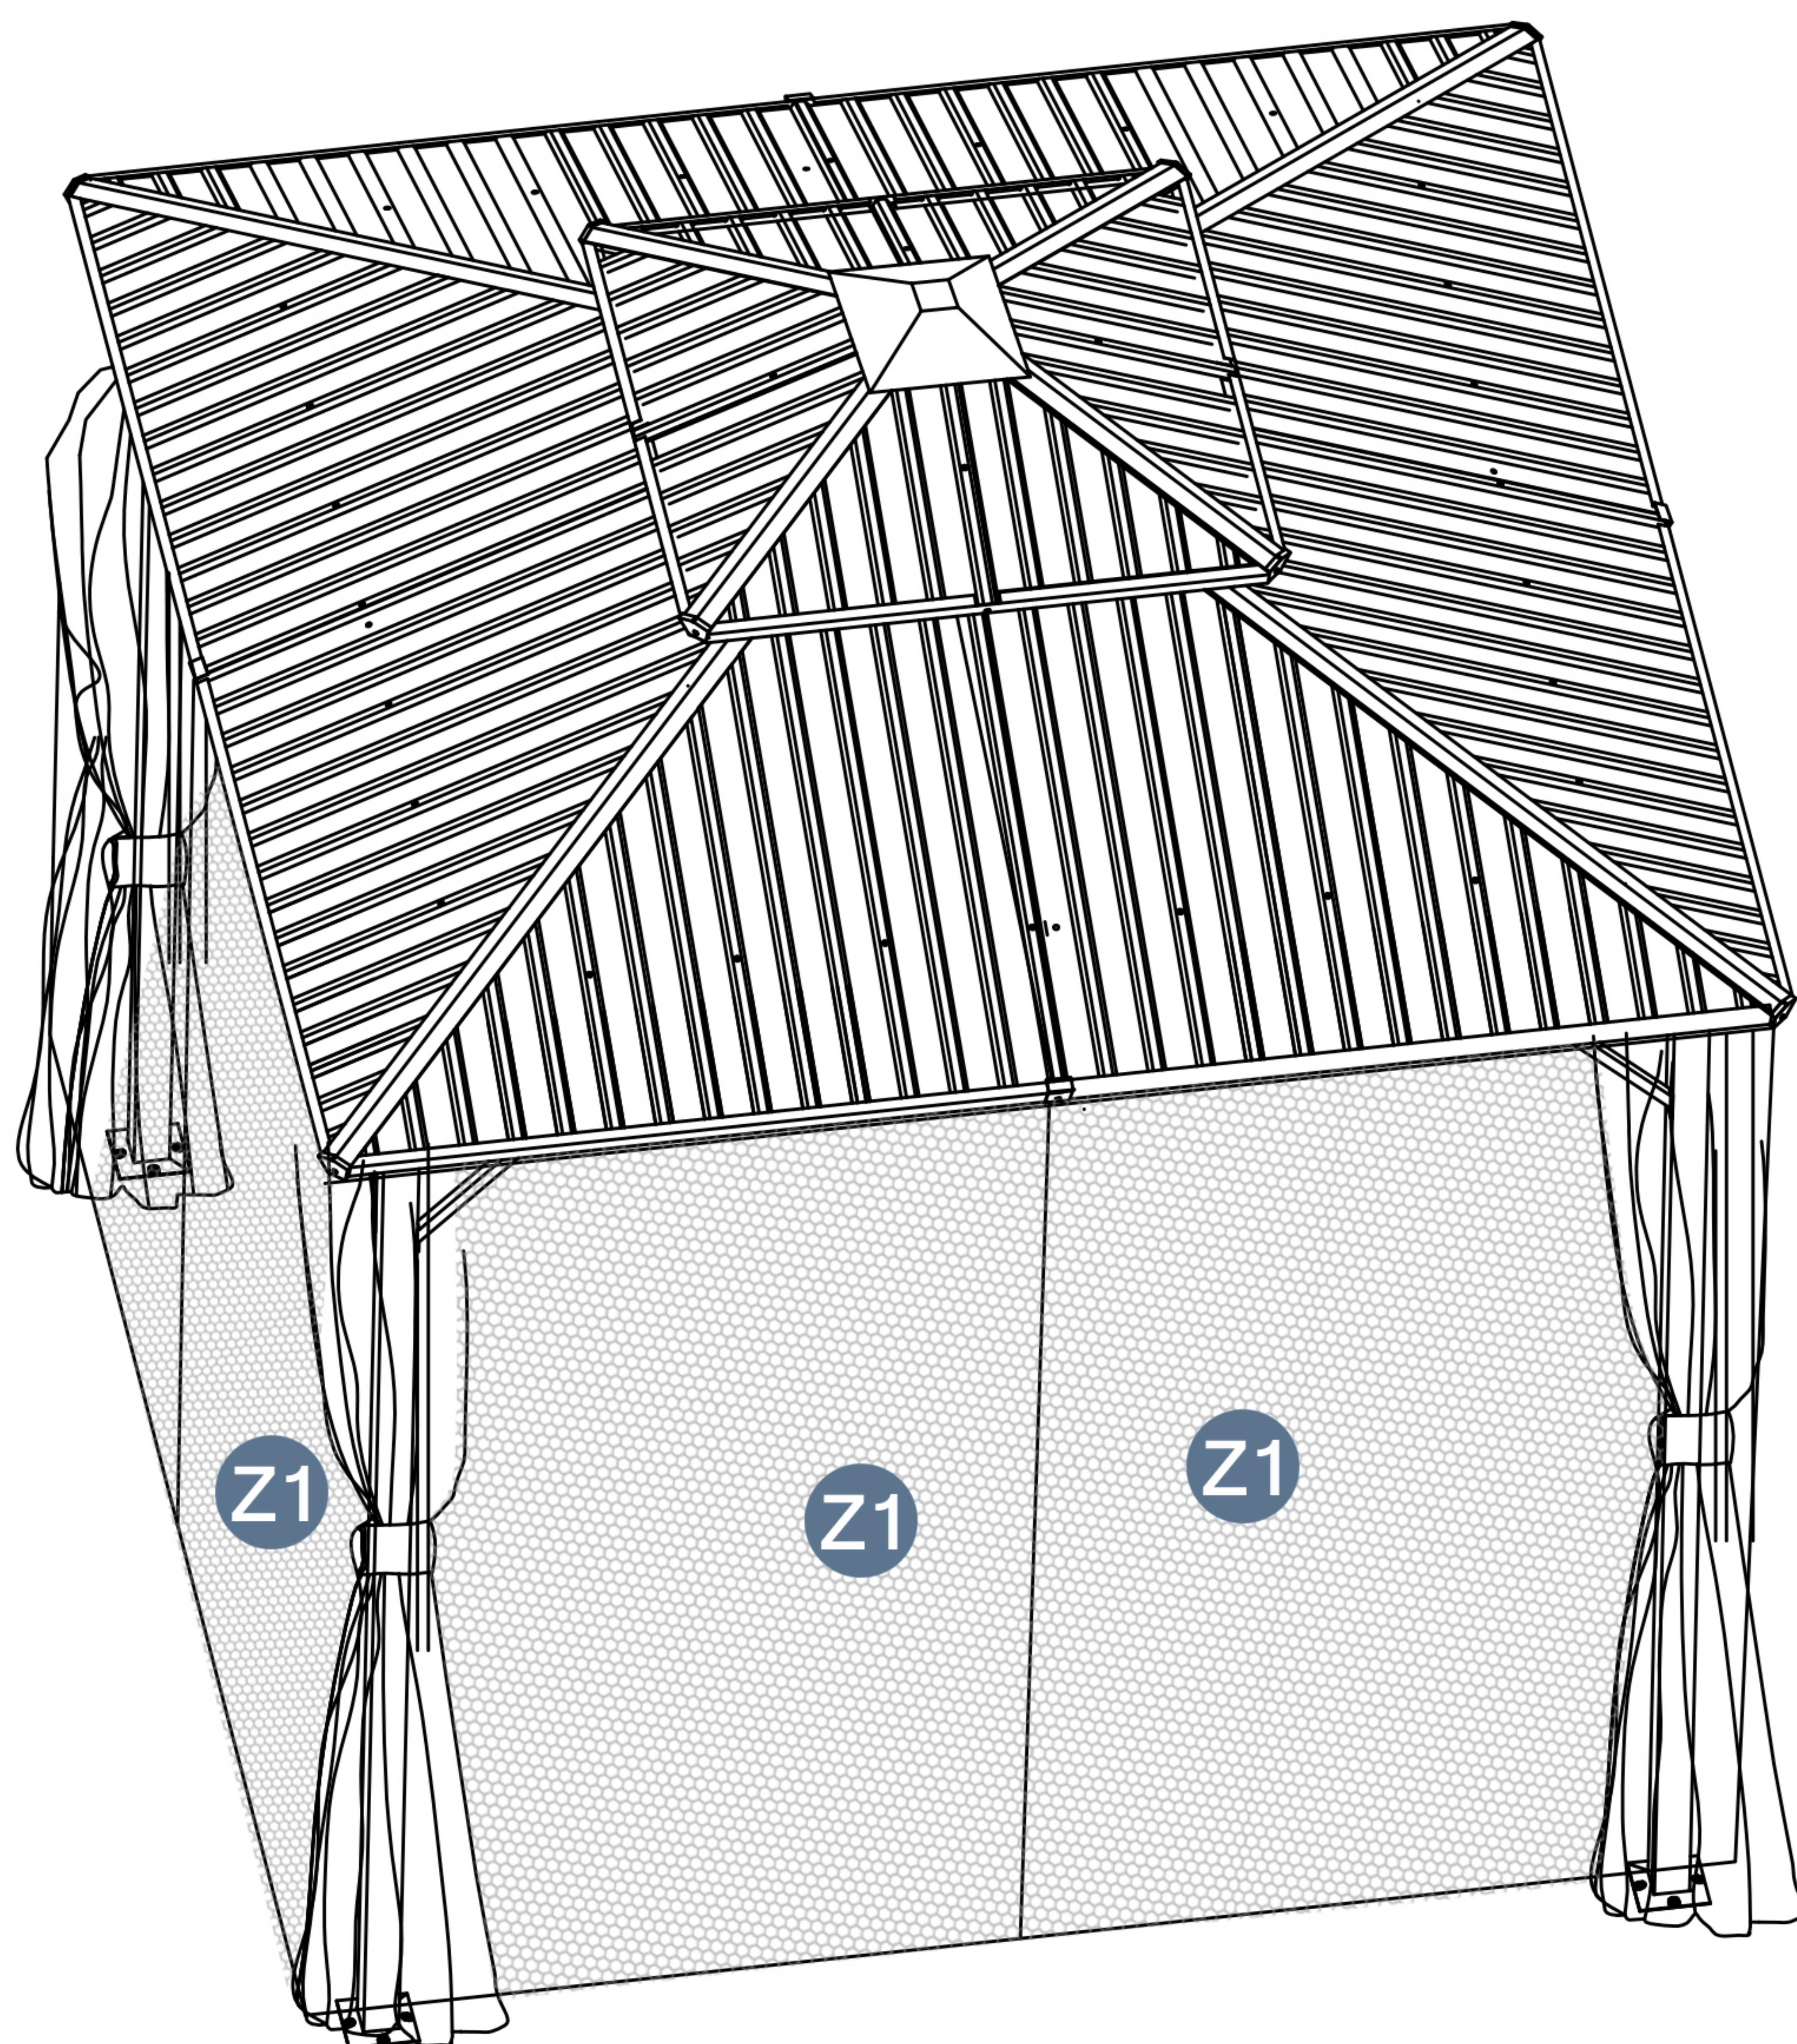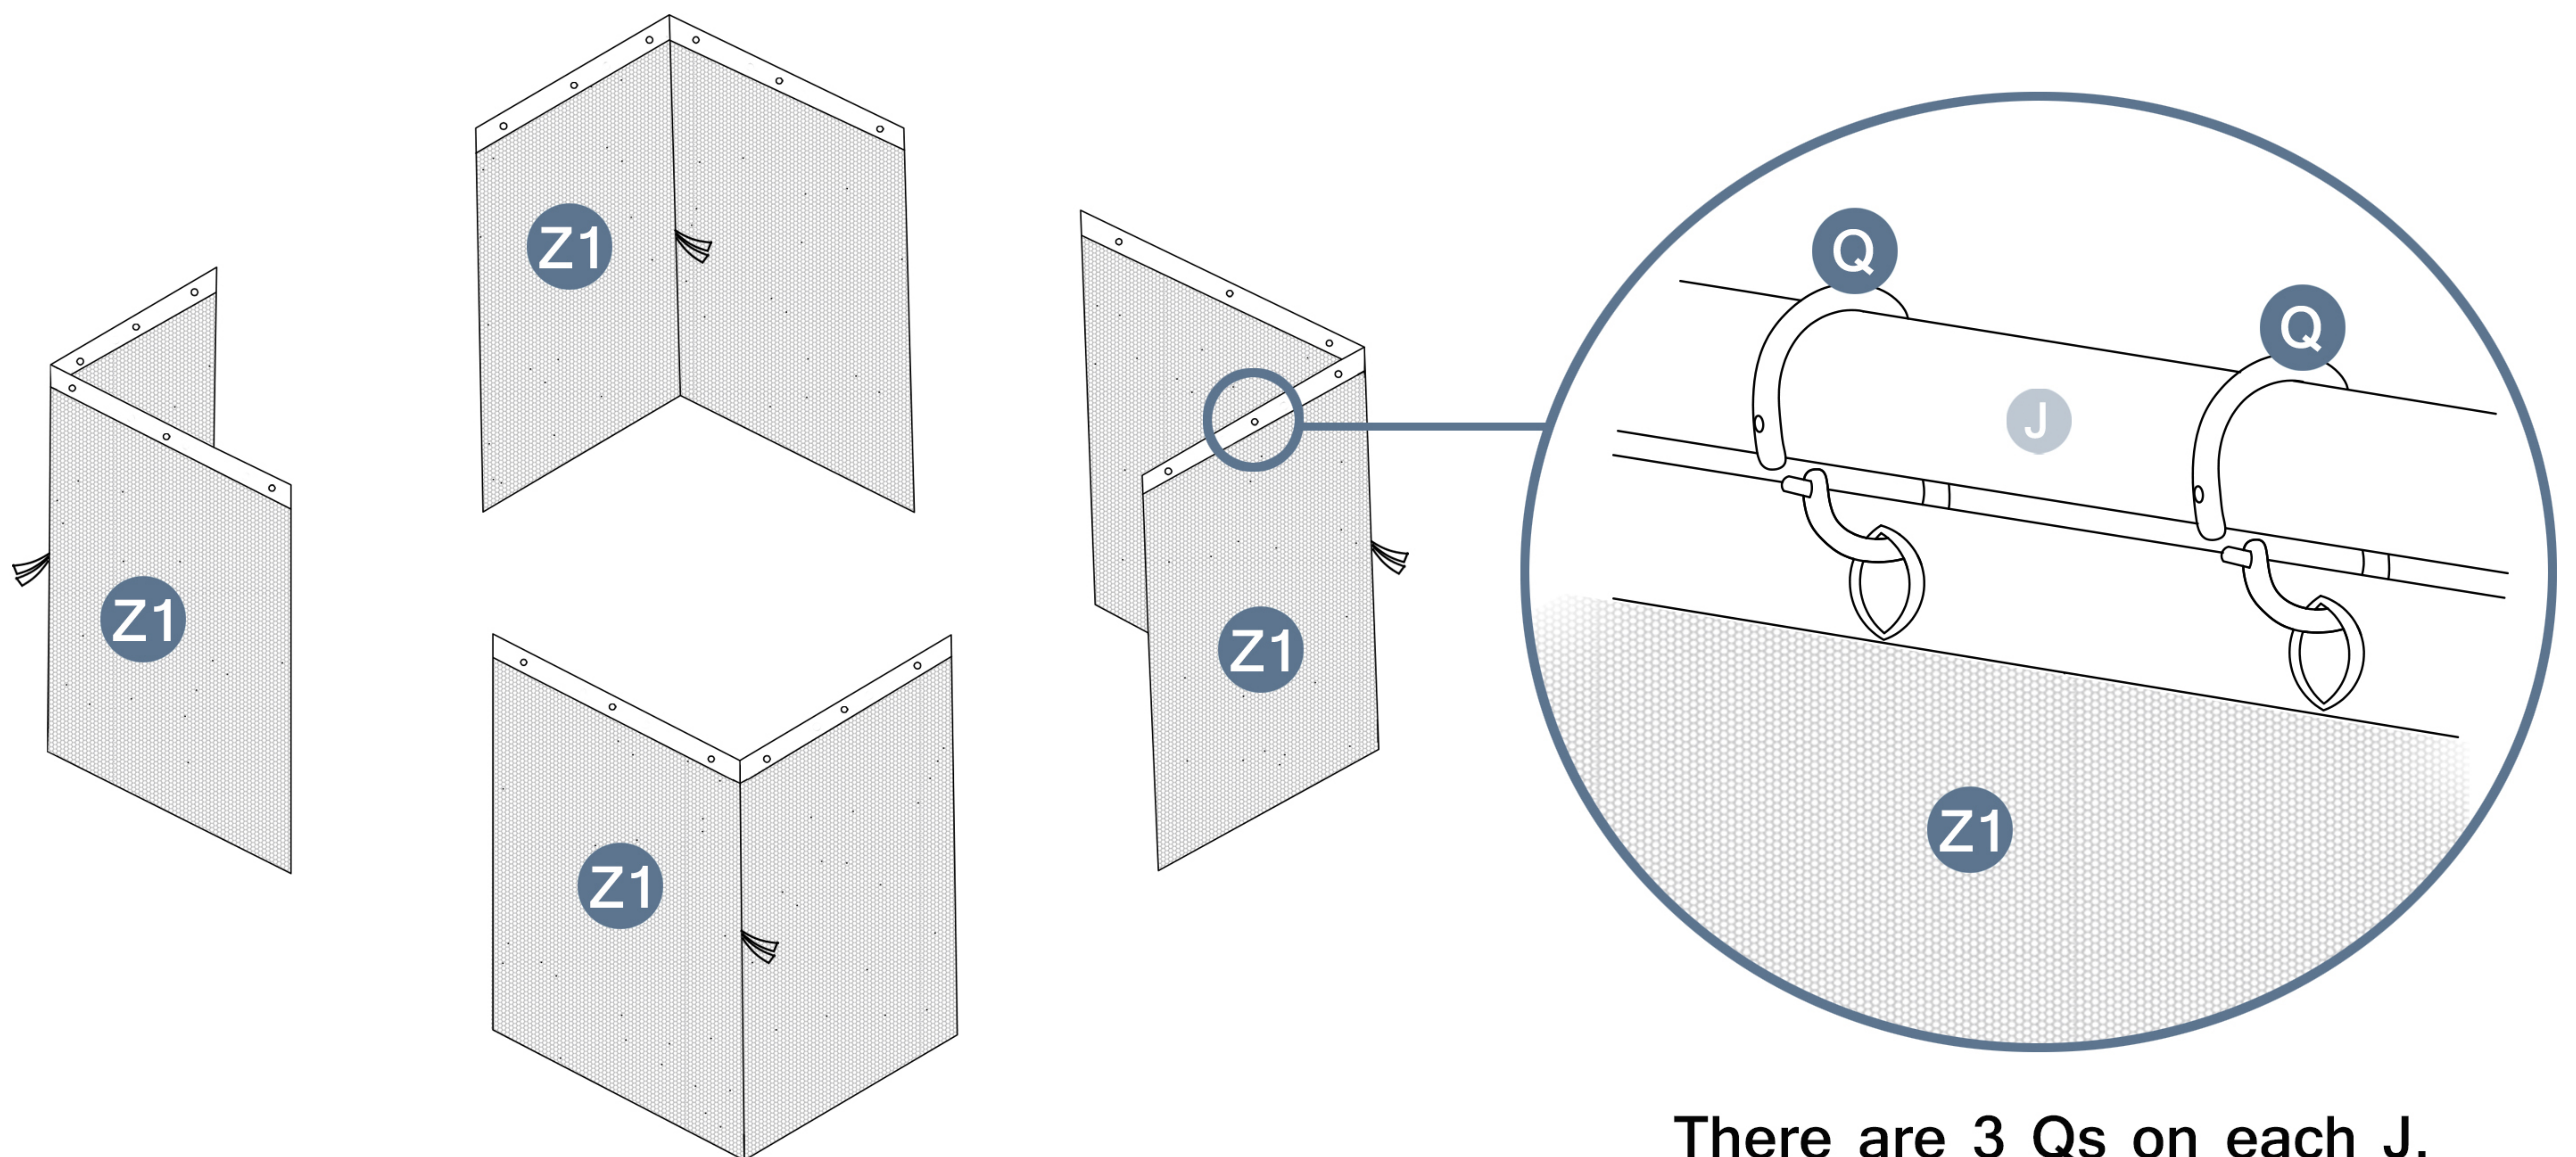




# STEP 21

Parts required

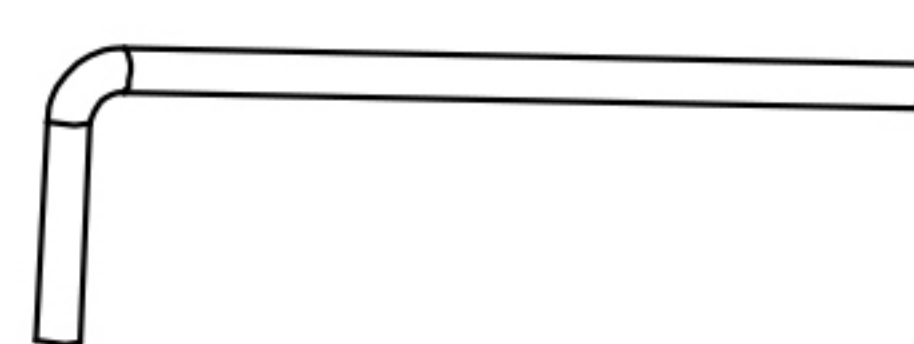

① 8pcs

To improve stability of gazebo, ground nails are very necessary. ground nails use for grassy surfaces. ground nails are included in the package.

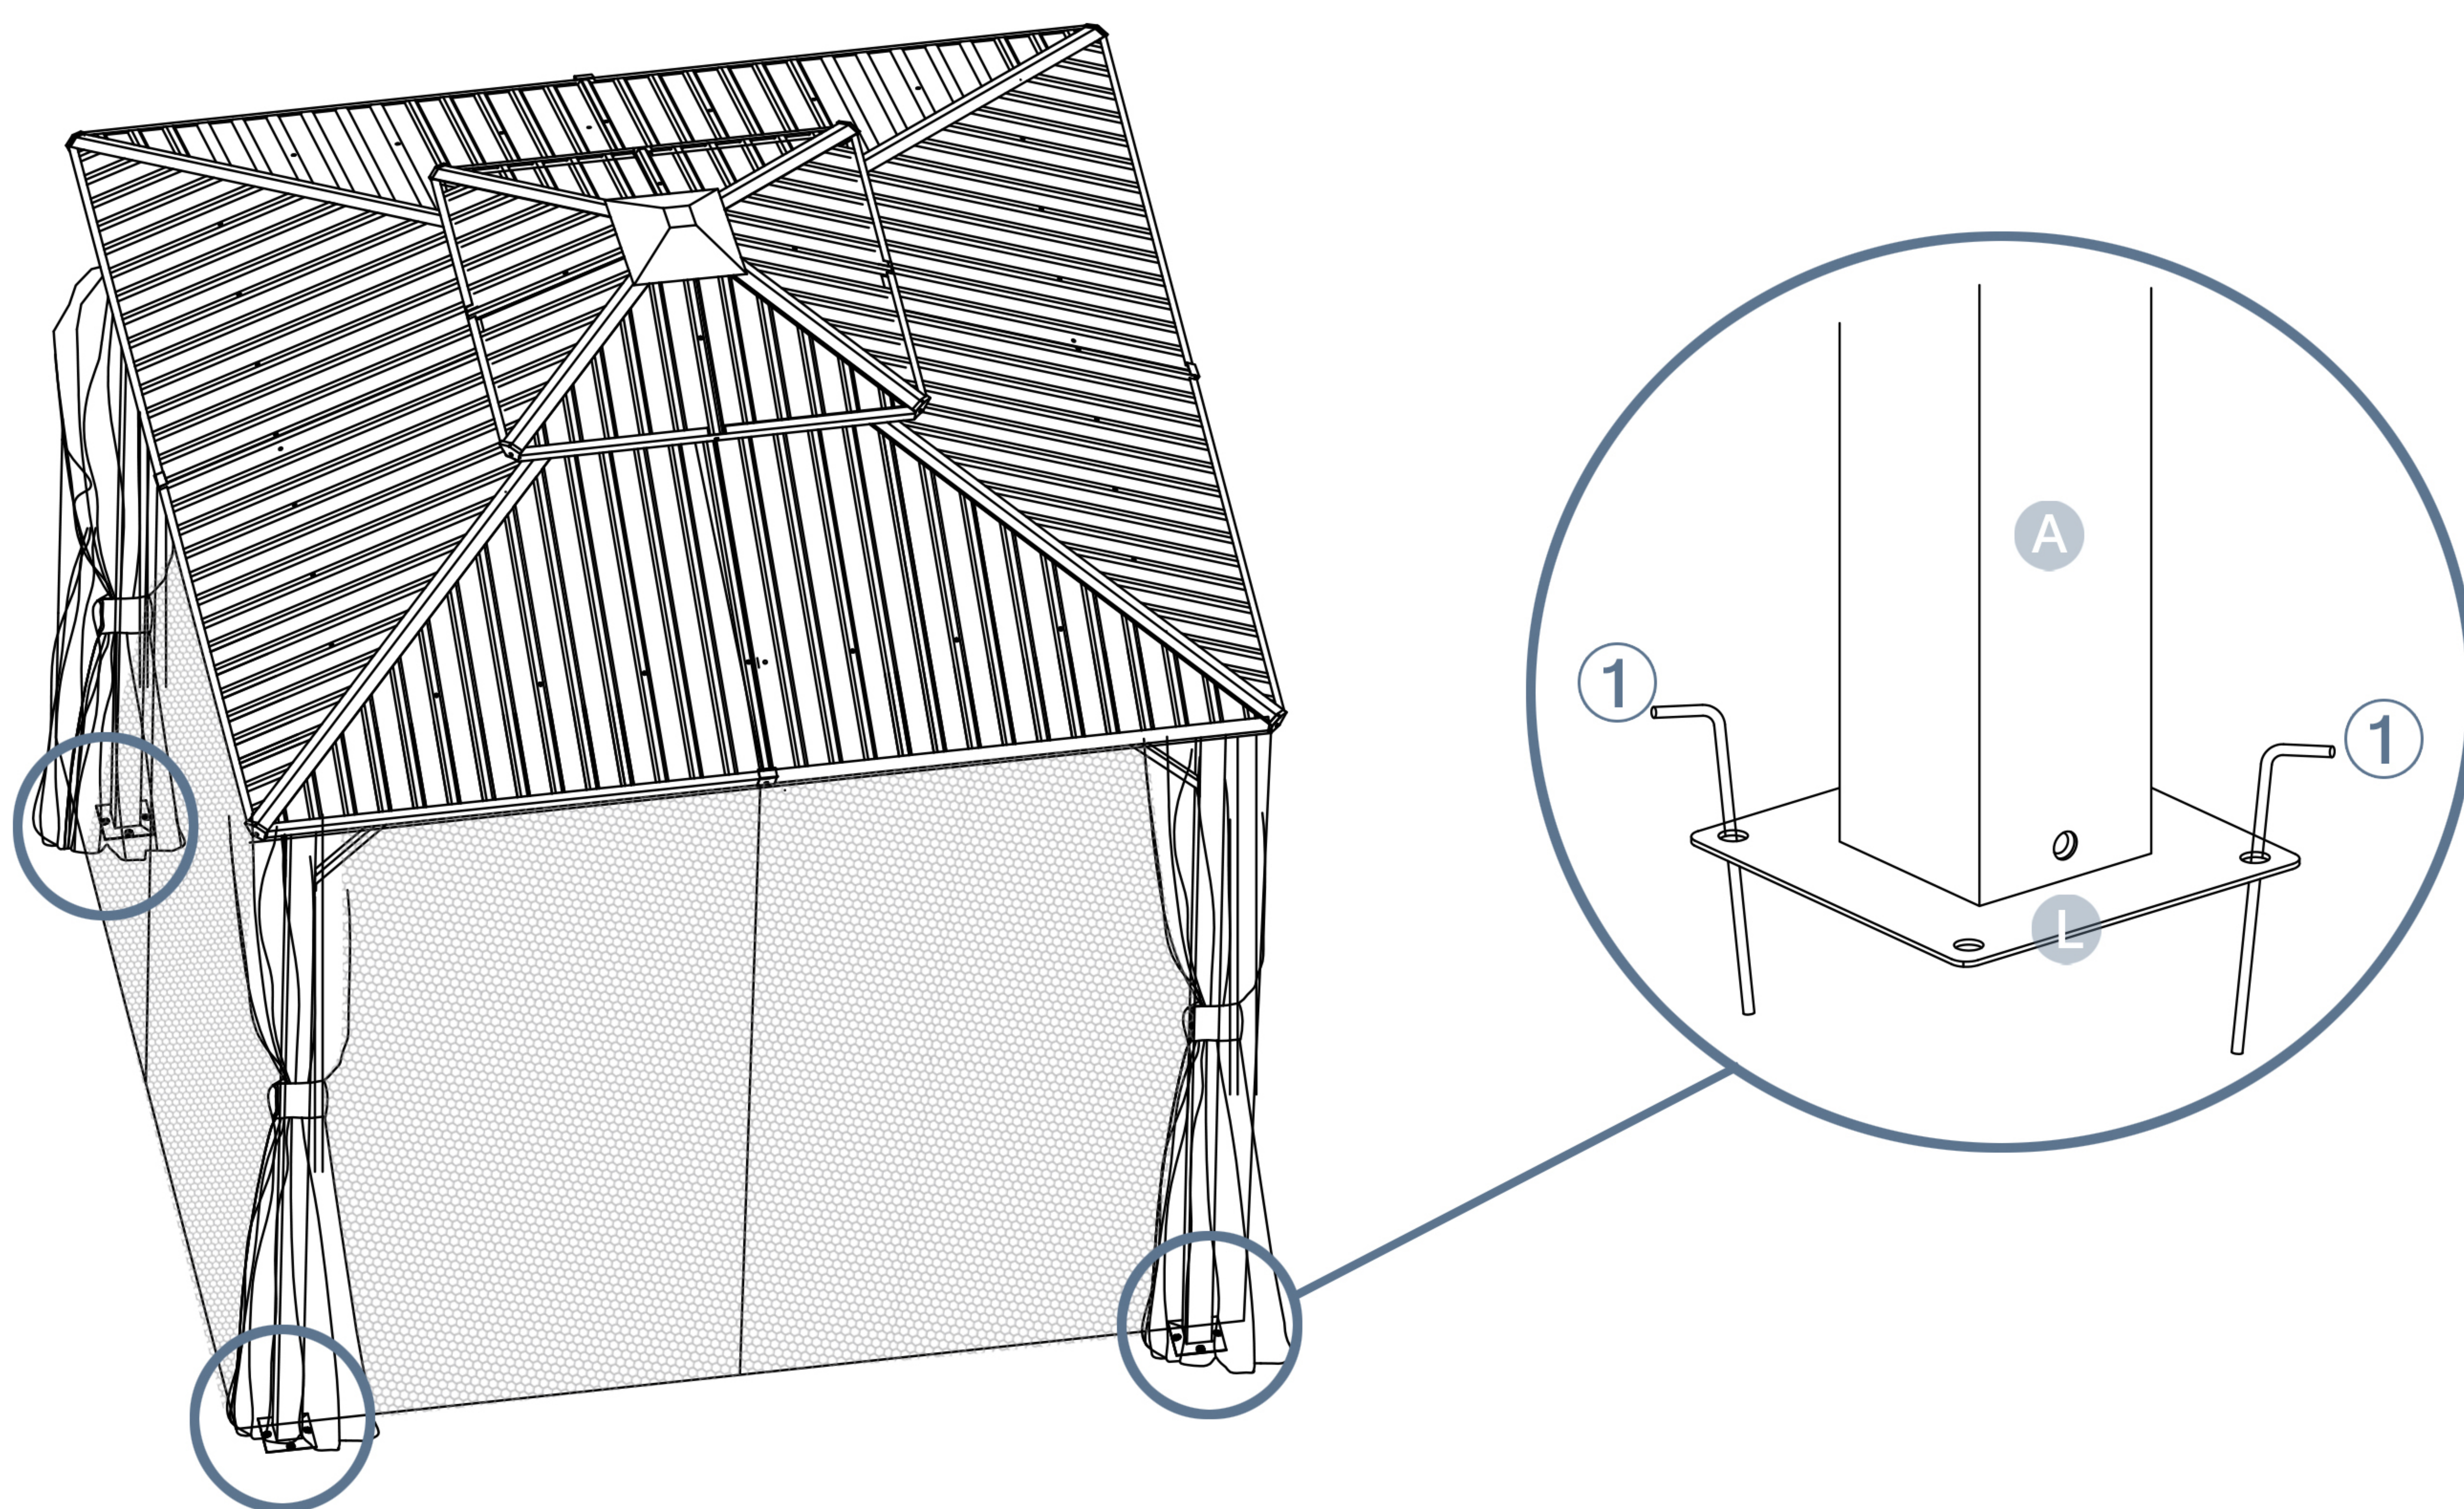

!!! For safety's stake, please check and make sure that all screws are tightened after all installation is complete.

## Installation Completed



**Hope you enjoy this product.**


If you have any concerns about gazebo Installation, please feel free to contact us. We will reply within 24 hours.



**E-mail: [cs.helper01@gmail.com](mailto:cs.helper01@gmail.com)**



8.5X8.5FT

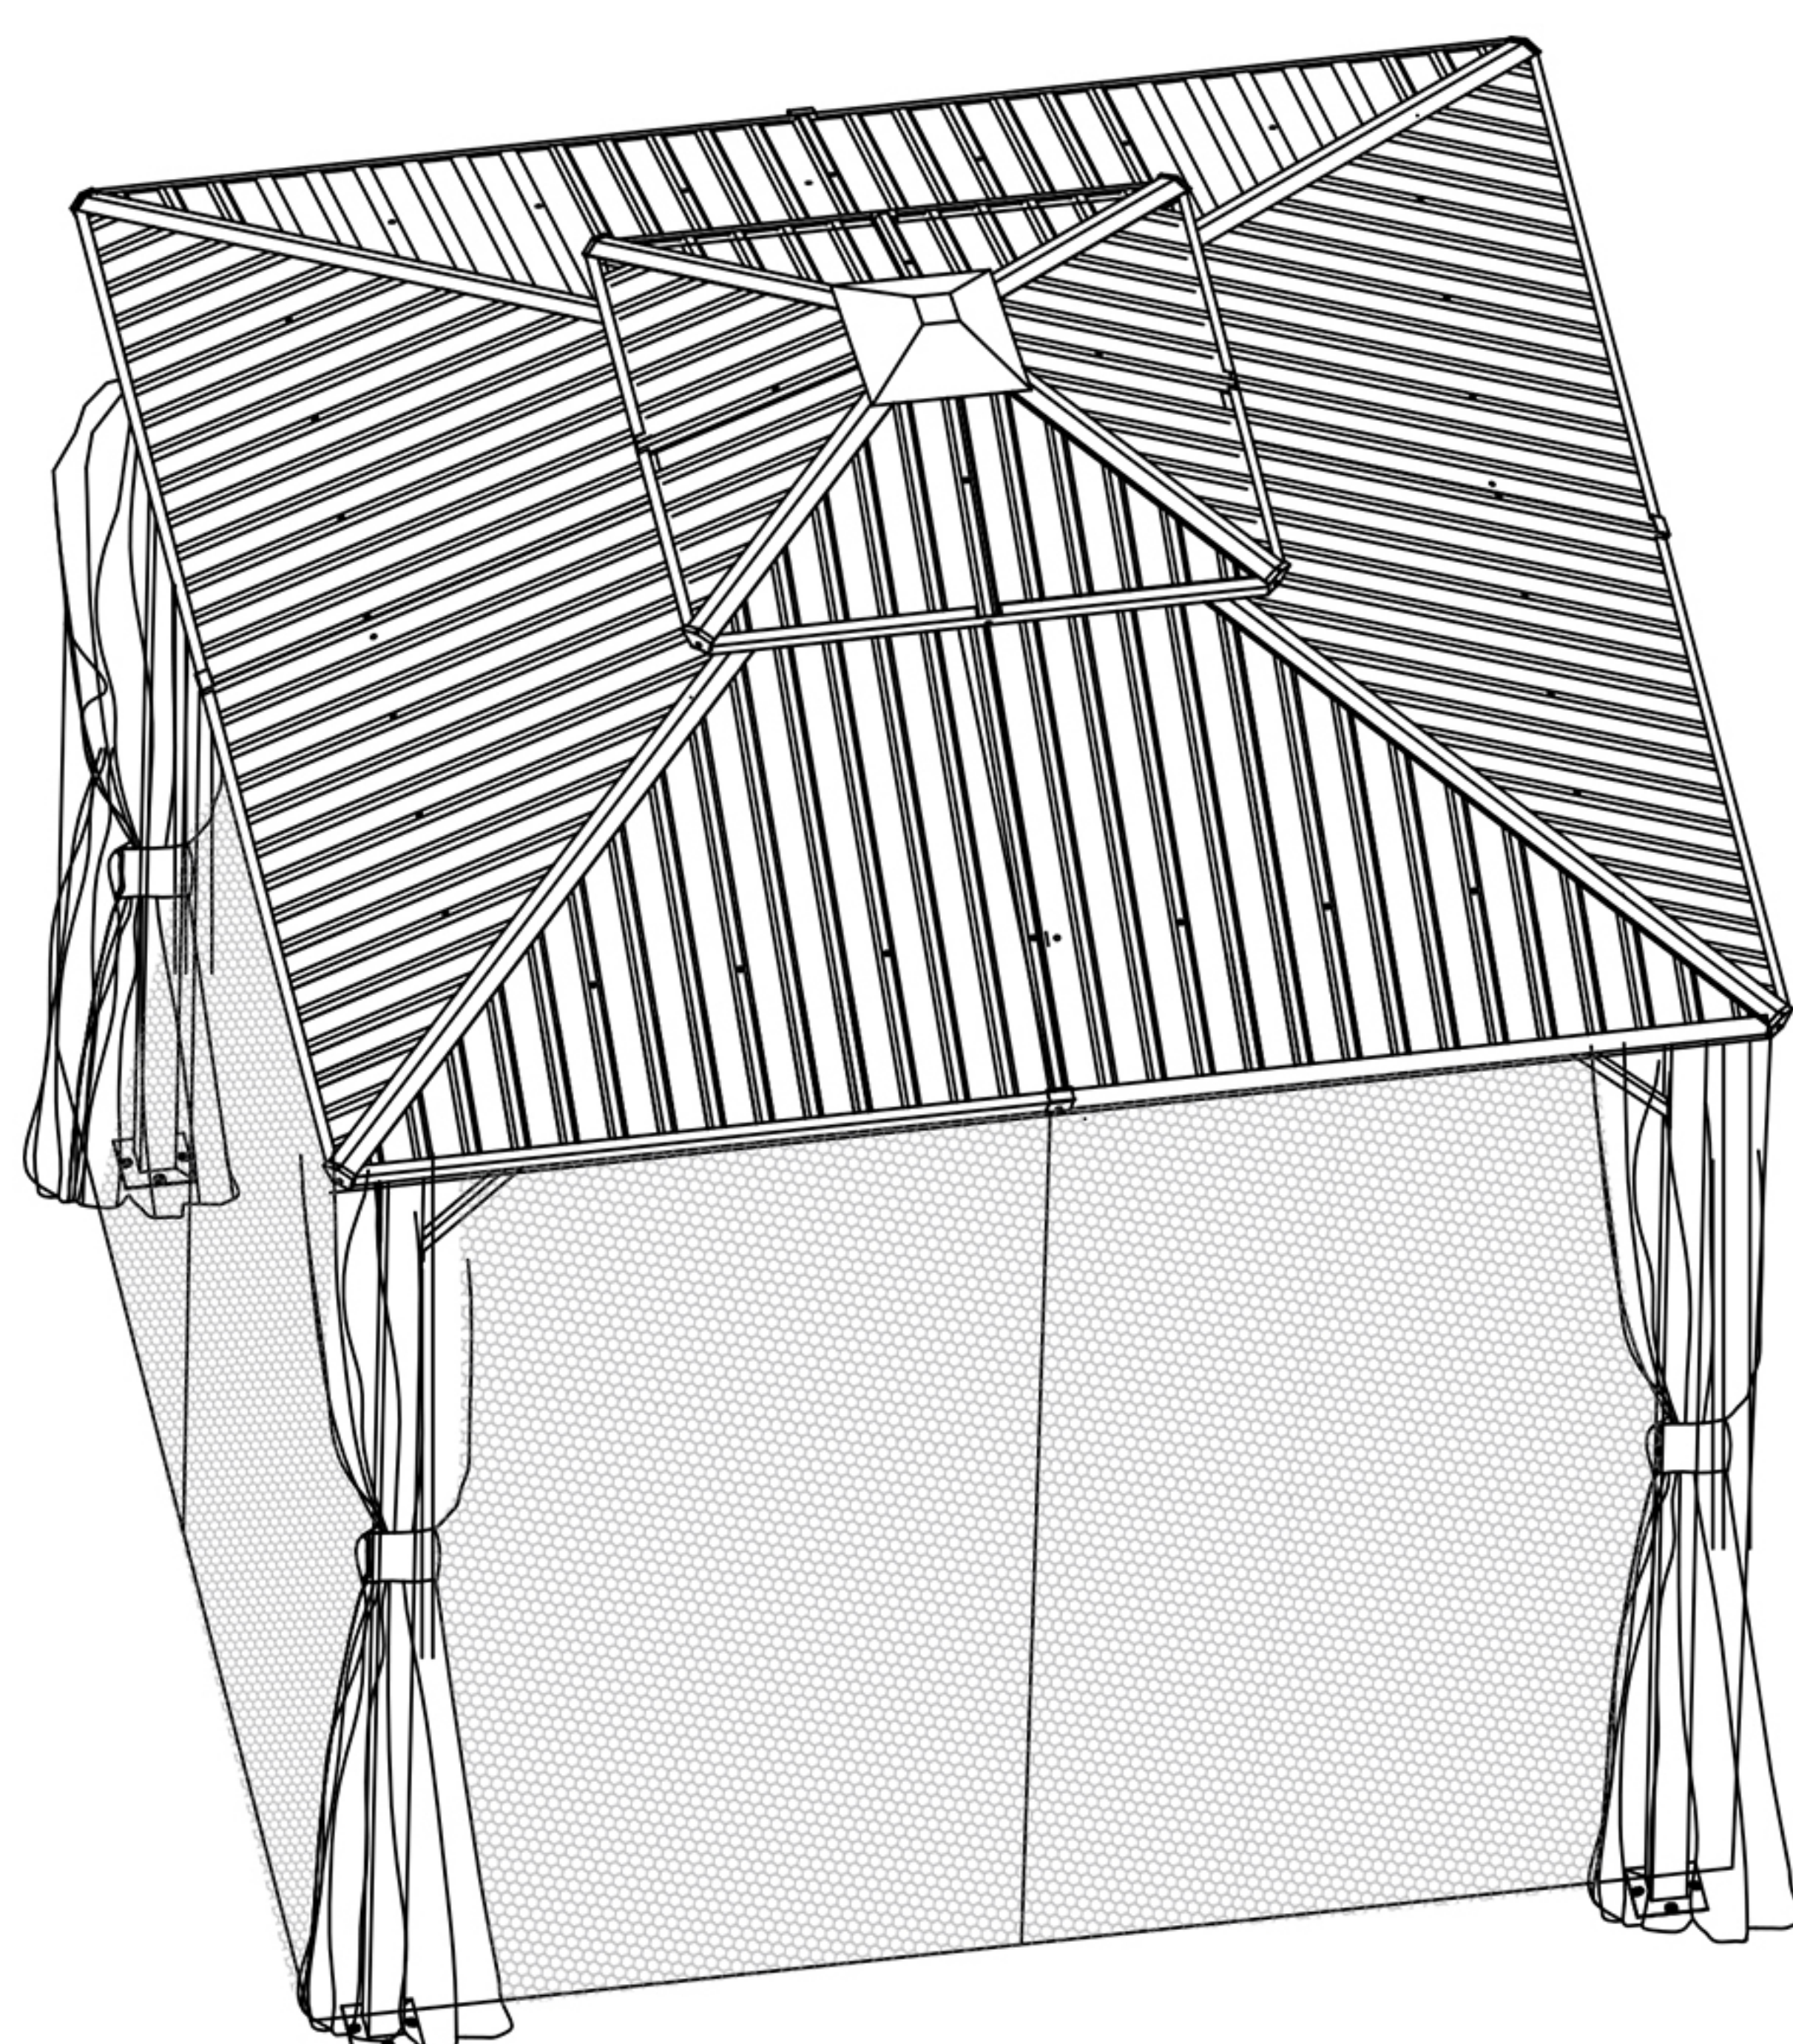

SKU:A-TPSB24-G032-1  
A-TPSB24-G032-2