

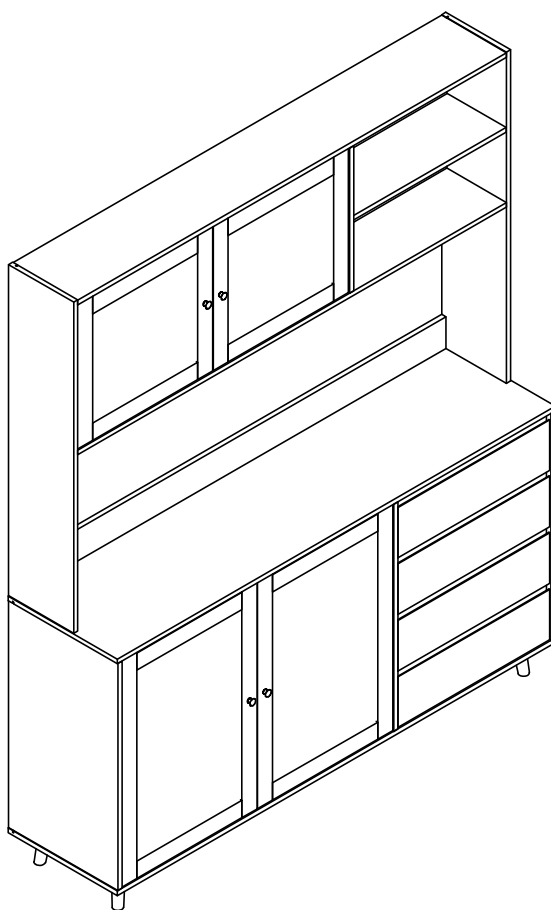
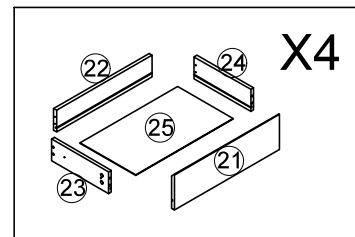
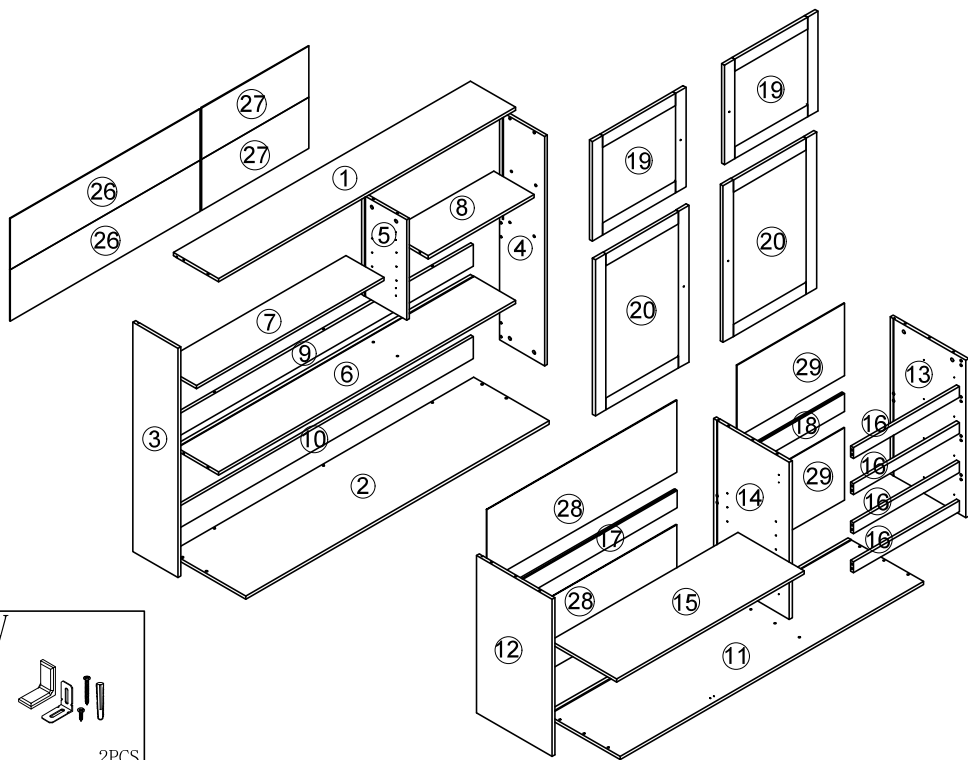
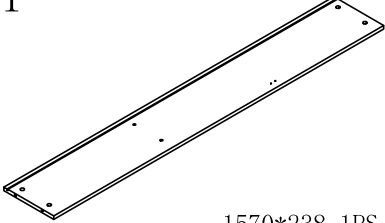
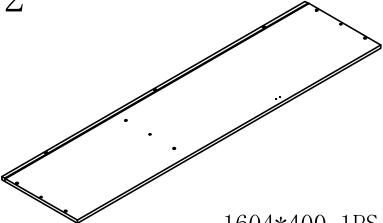
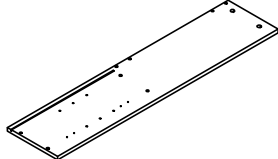
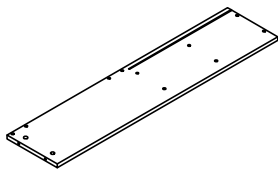

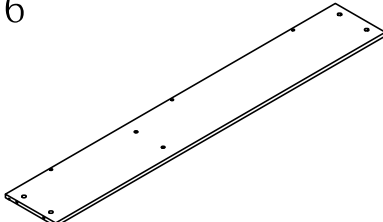
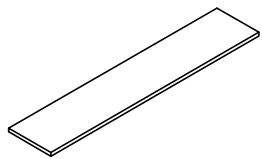

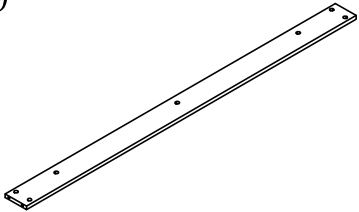
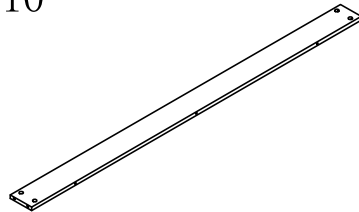
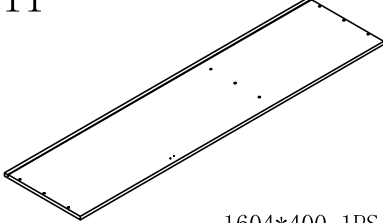
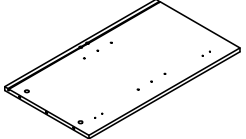
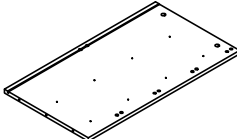
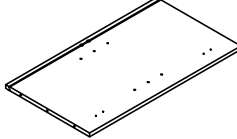












Installation & Assembly

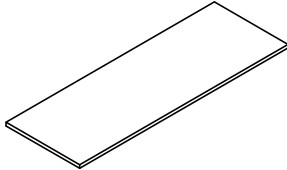



U	V										
3PCS	2PCS										
K	L	M	N	O	P	Q	R	S	T		
4*20	L1 300mm L2 4PCS	993mm	556mm								
4PCS	4PCS	1PCS	1PCS	8PCS	3PCS	4PCS	2PCS	4PCS	2PCS		
A	B	C	D	E	F	G	H	I	J		
		8*40	3.5*14	3.5*35	7*50			3*12			
74PCS	74PCS	3PCS	116PCS	16PCS	14PCS	8PCS	26PCS	26PCS	4PCS		

1  1570*238 1PS	2  1604*400 1PS	3  1050*238 1PS	4  1050*238 1PS
5  460*238 1PS	6  1570*238 1PS	7  991*200 1PS	8  560*215 1PS
9  1570*100 1PS	10  1570*100 1PS	11  1604*400 1PS	12  720*400 1PS
13  720*400 1PS	14  720*400 1PS	15  991*350 1PS	16  560*50 4PS

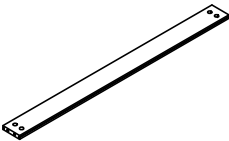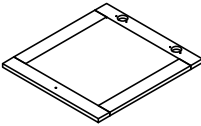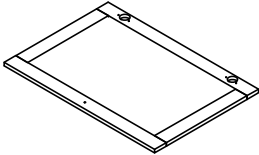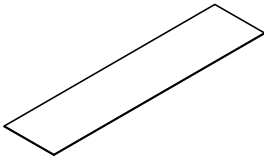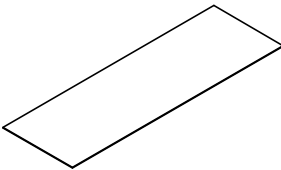
17  995*80 1PS	18  560*80 1PS	19  456*495 2PS	20  716*495 2PS
21  555*160 4PS	22  505*100 4PS	23  300*100 4PS	24  300*100 4PS
25  515*294 4PS	26  1003*234 2PS	27  568*234 2PS	28  1003*330 2PS
29  568*330 2PS			




Hardware installation demonstration

NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

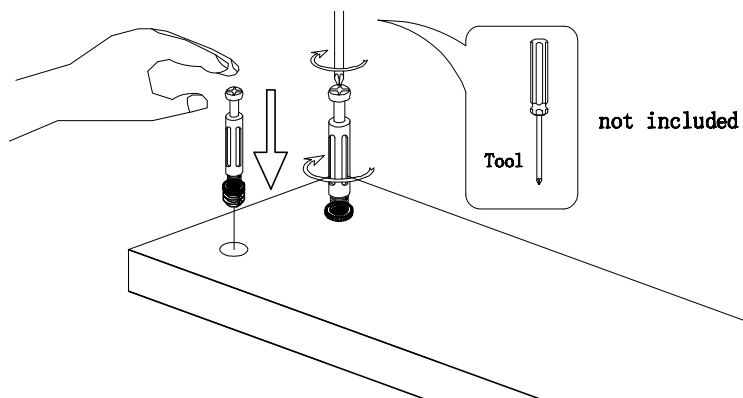


II

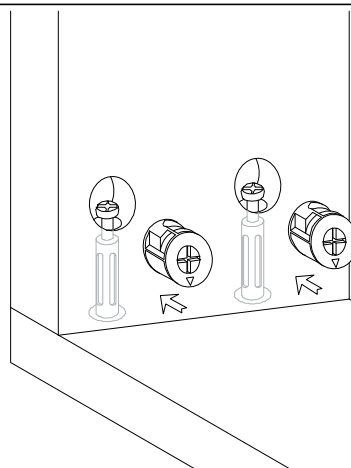


III

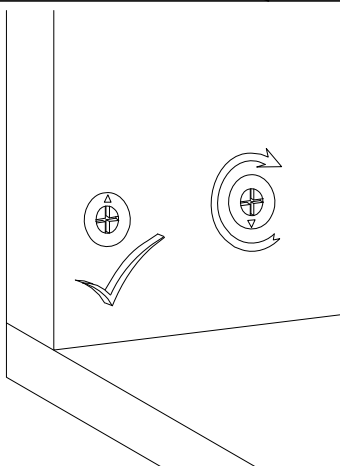

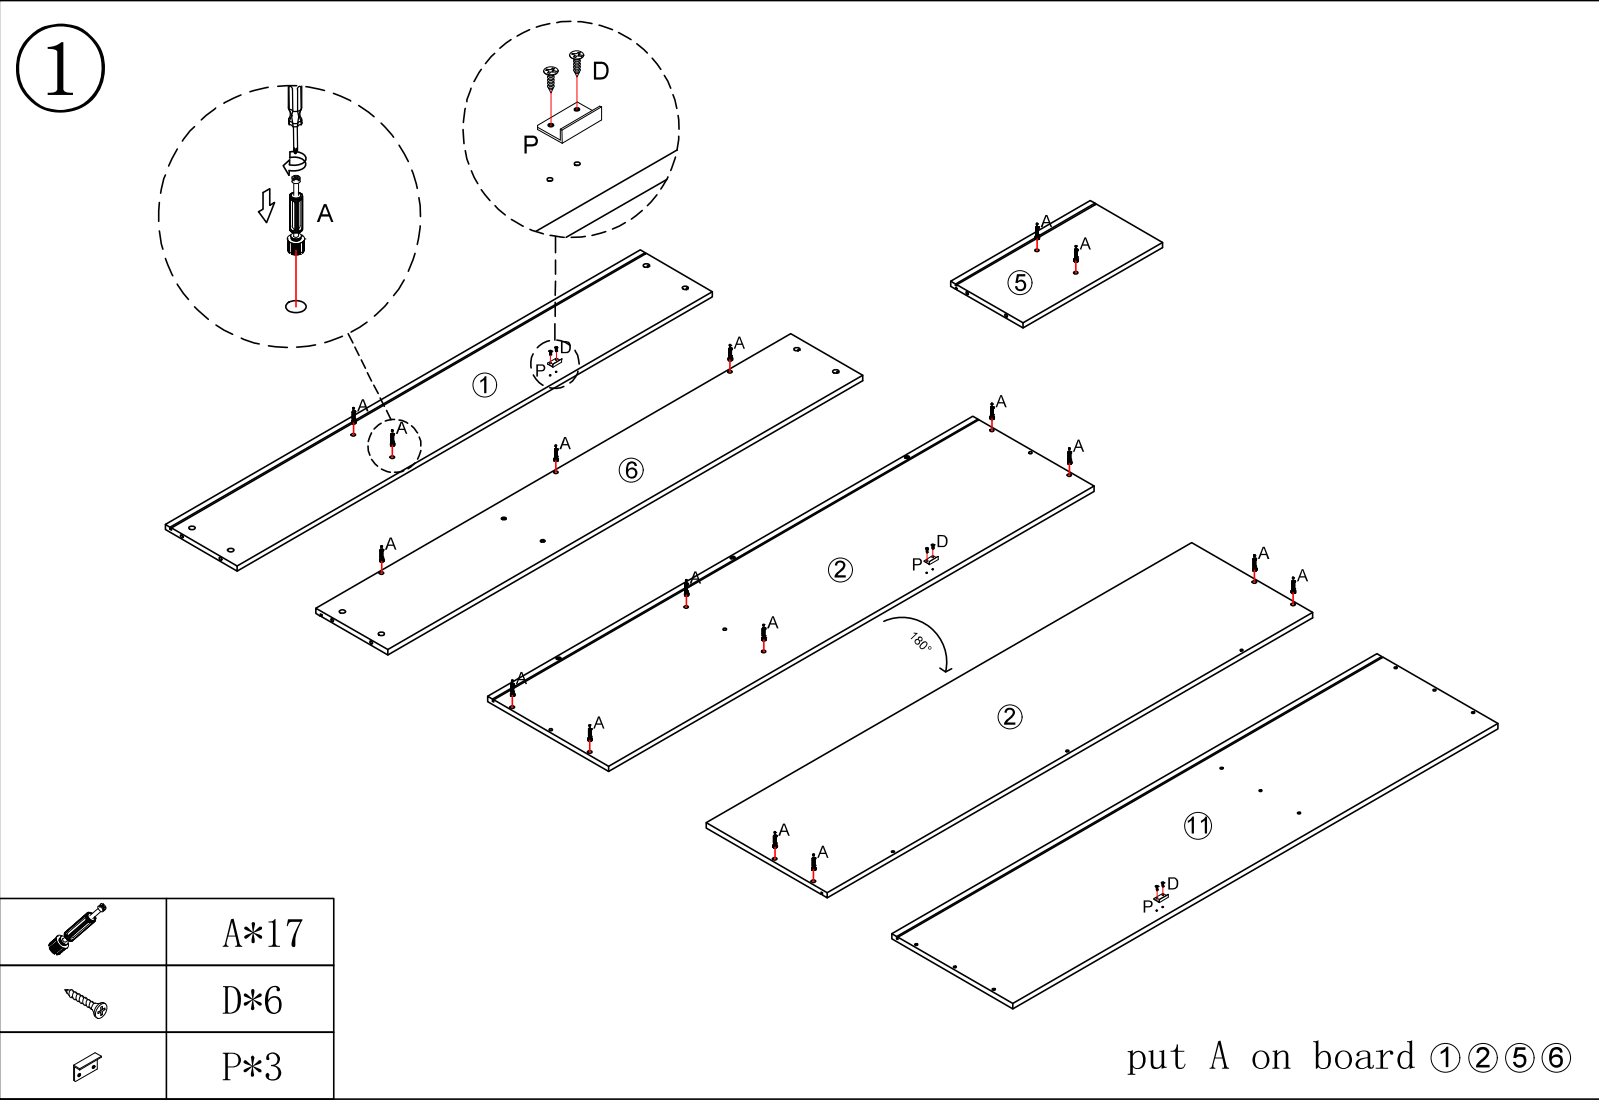

2

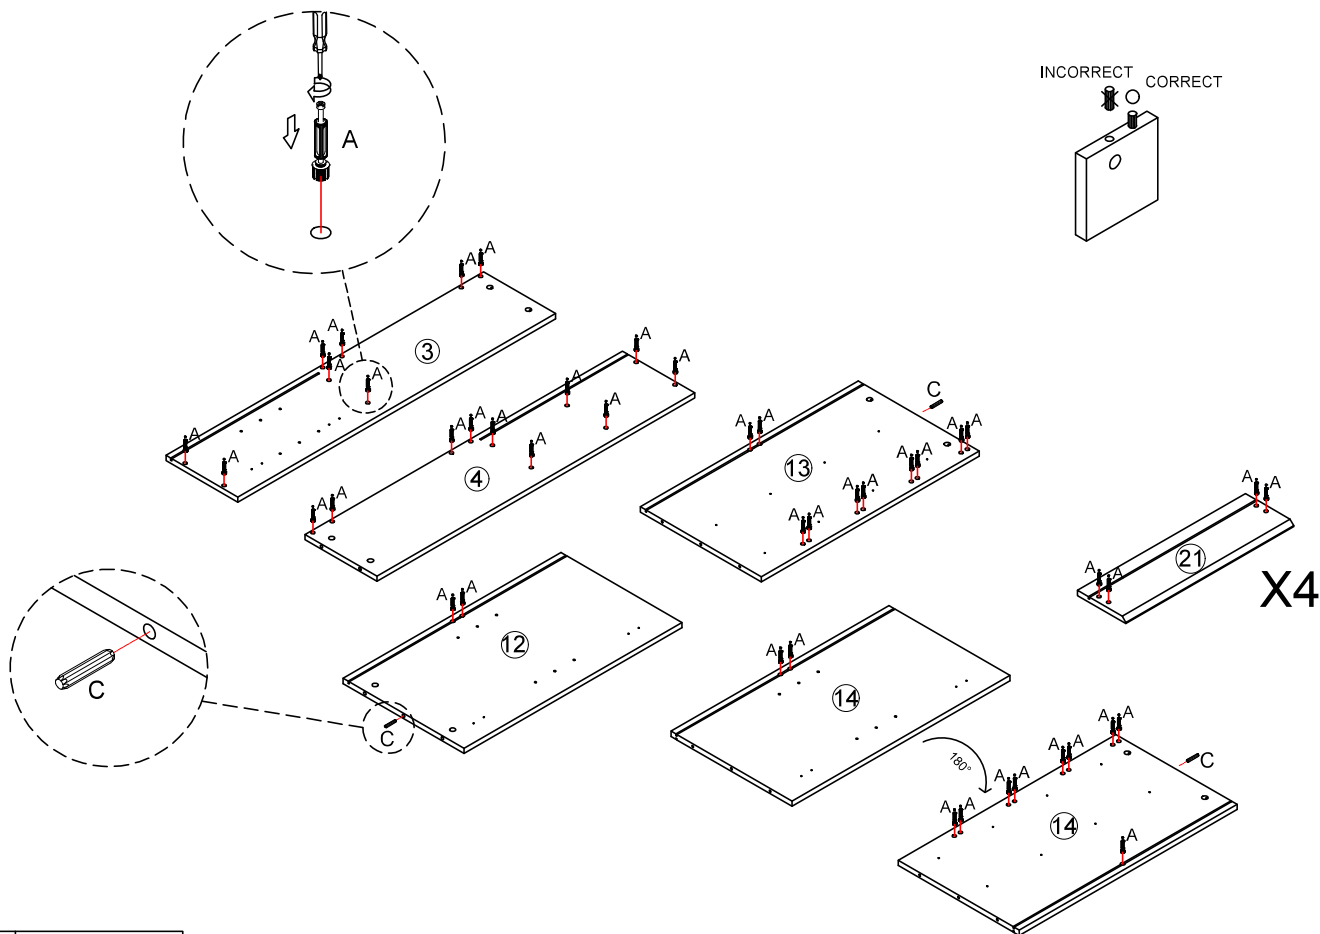





A*57



C*3

put A on board ③ ④ ⑫ ⑬ ⑭ ⑰
put C on board ⑫ ⑬ ⑭

3

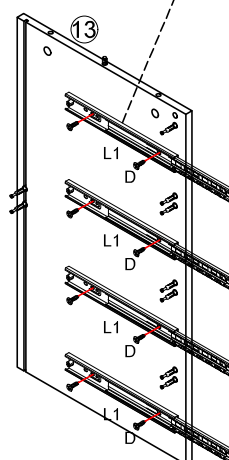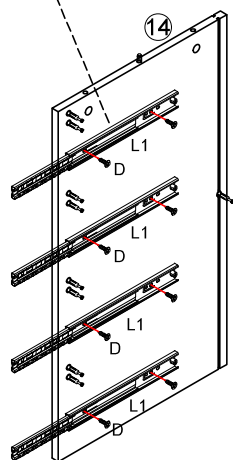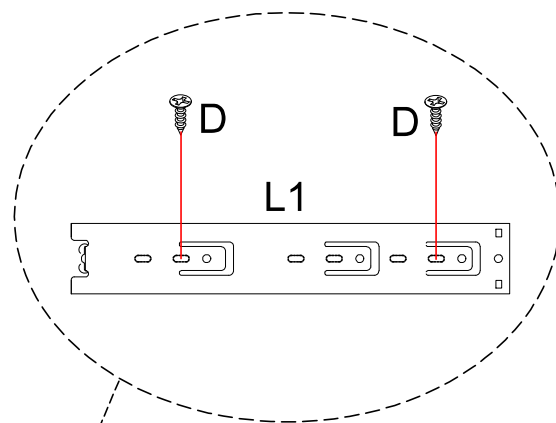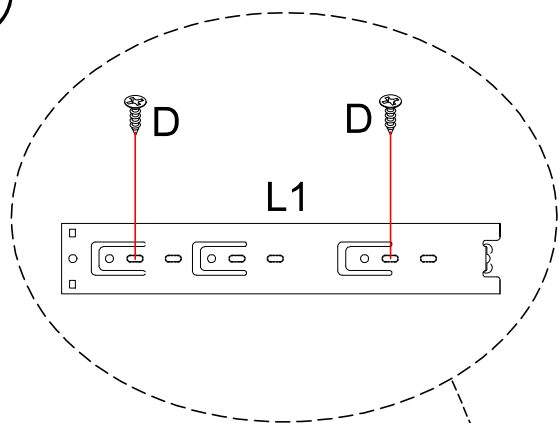





D*16



L1*4

4

Make sure the arrow on the screw align to the hole on the side.

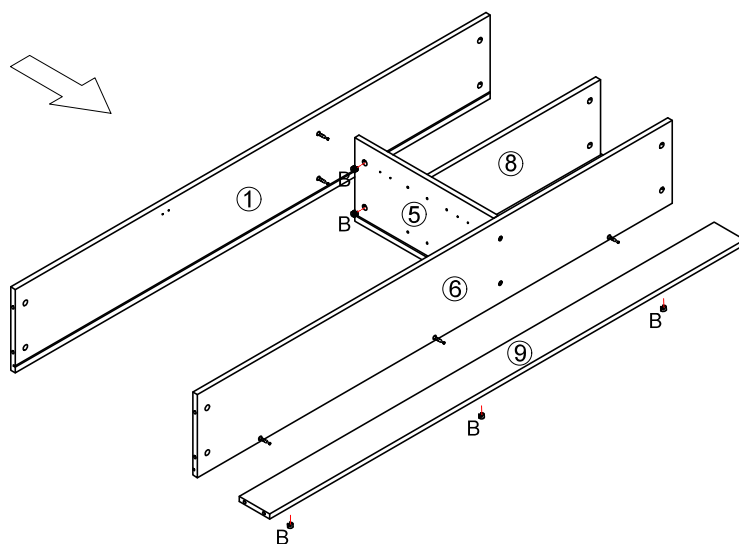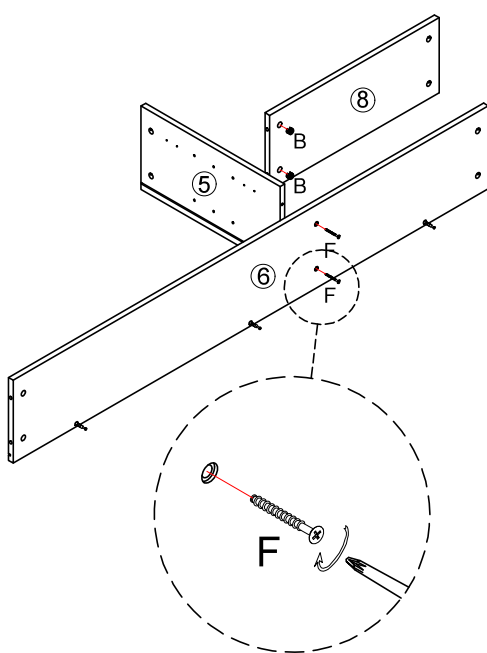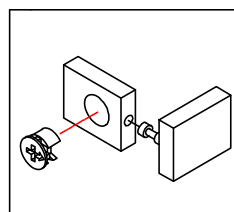

put B on board ⑤ ⑧ ⑨




B*7



F*2


5

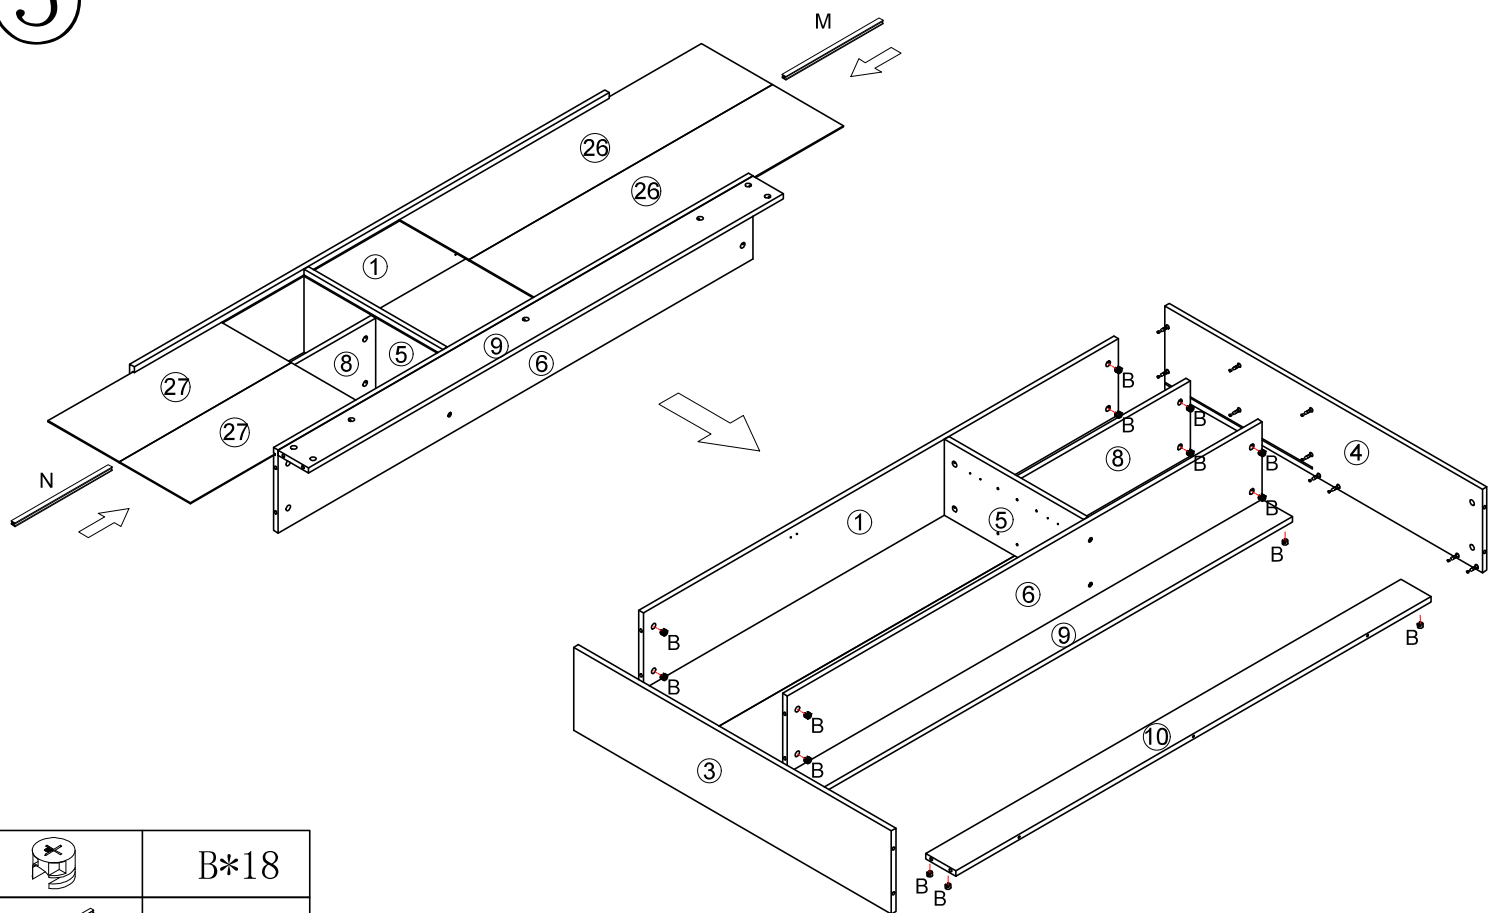

	B*18
	M*1
	N*1

put B on board ①⑥⑧⑨⑩


6

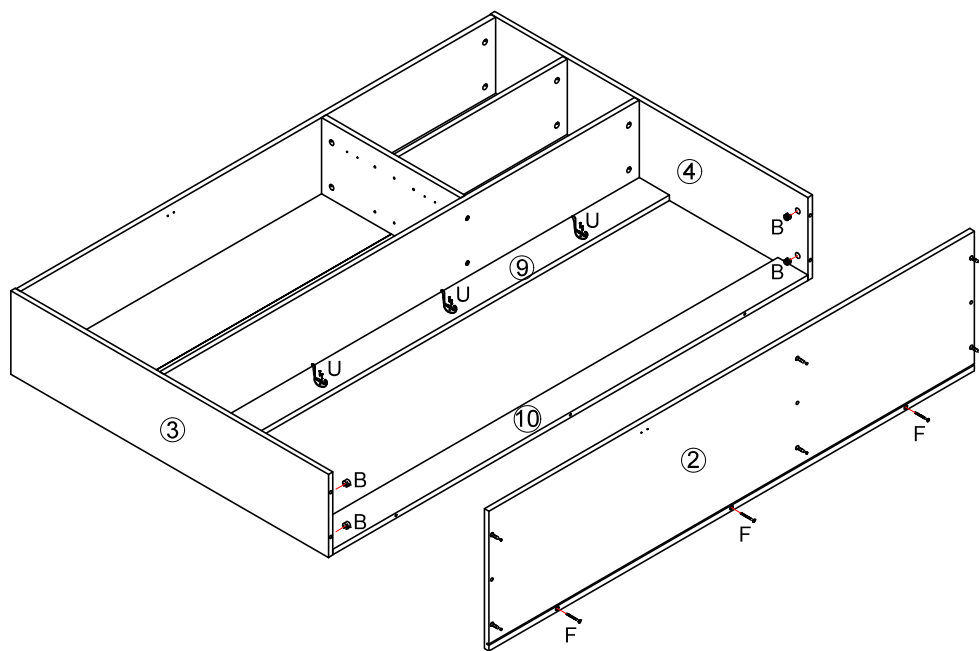

	B*4
	F*3
	U*3

put B on board ③④




7

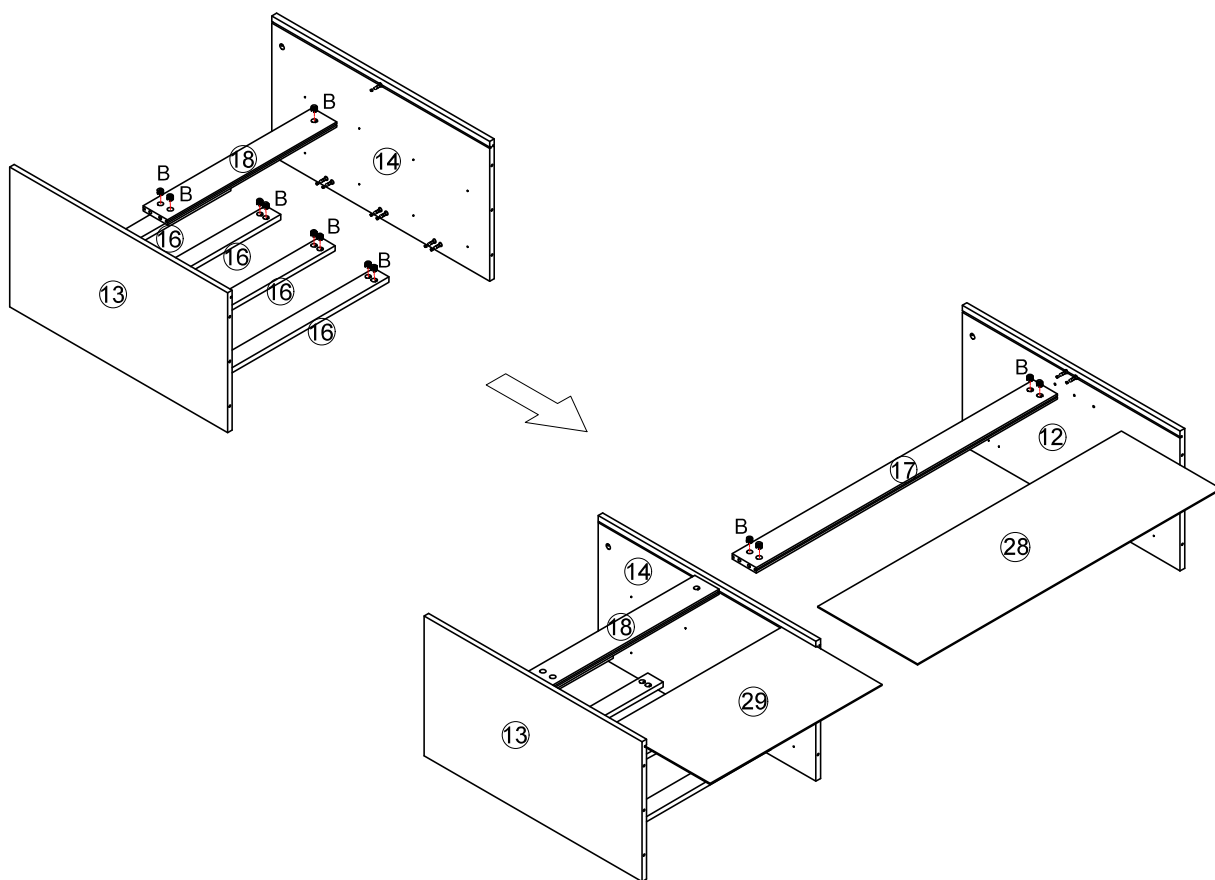

B*23


put B on board 16 17 18

8

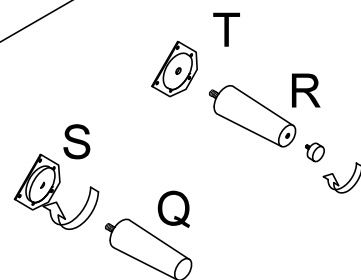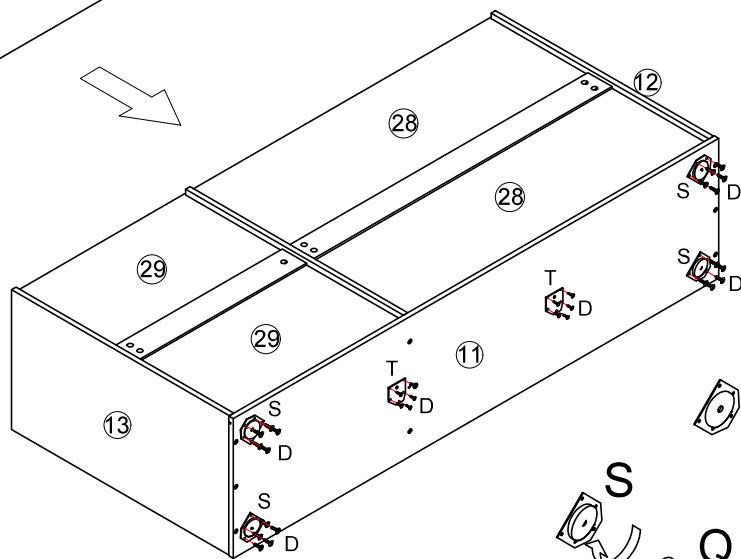
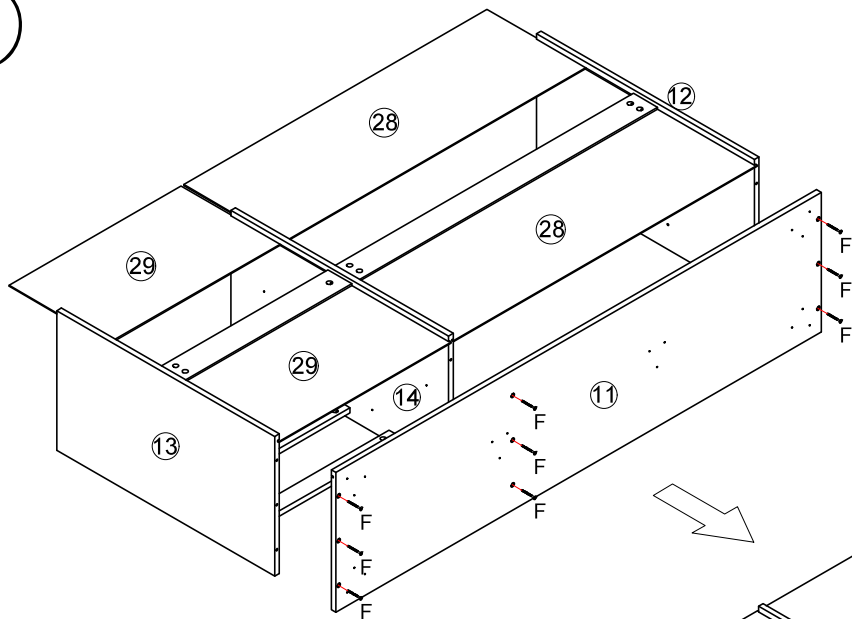


	D*30
	F*9
	Q*4
	R*2
	S*4
	T*2

9

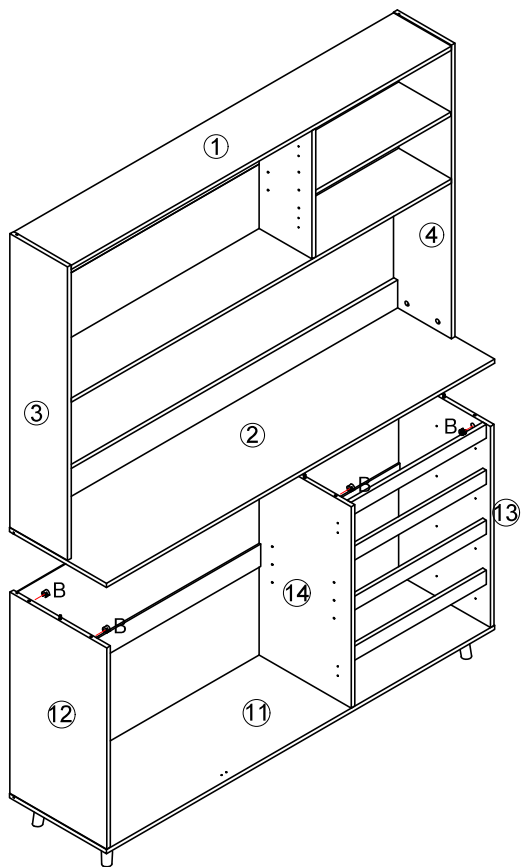

put B on board 12 13 14

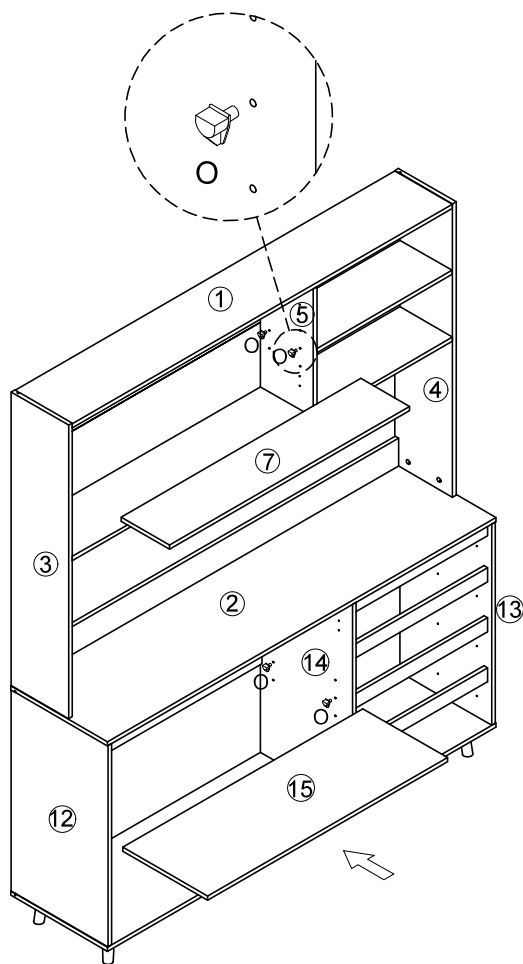


B*6




O*8

10

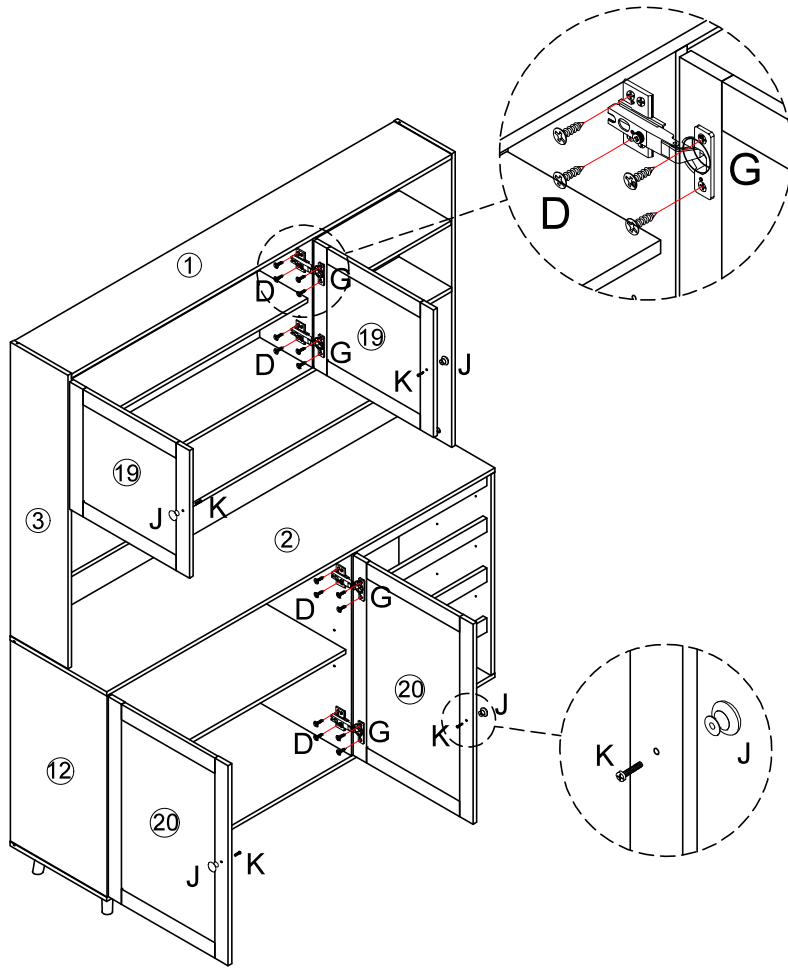

	D*48
	G*8
	J*4
	K*4

11

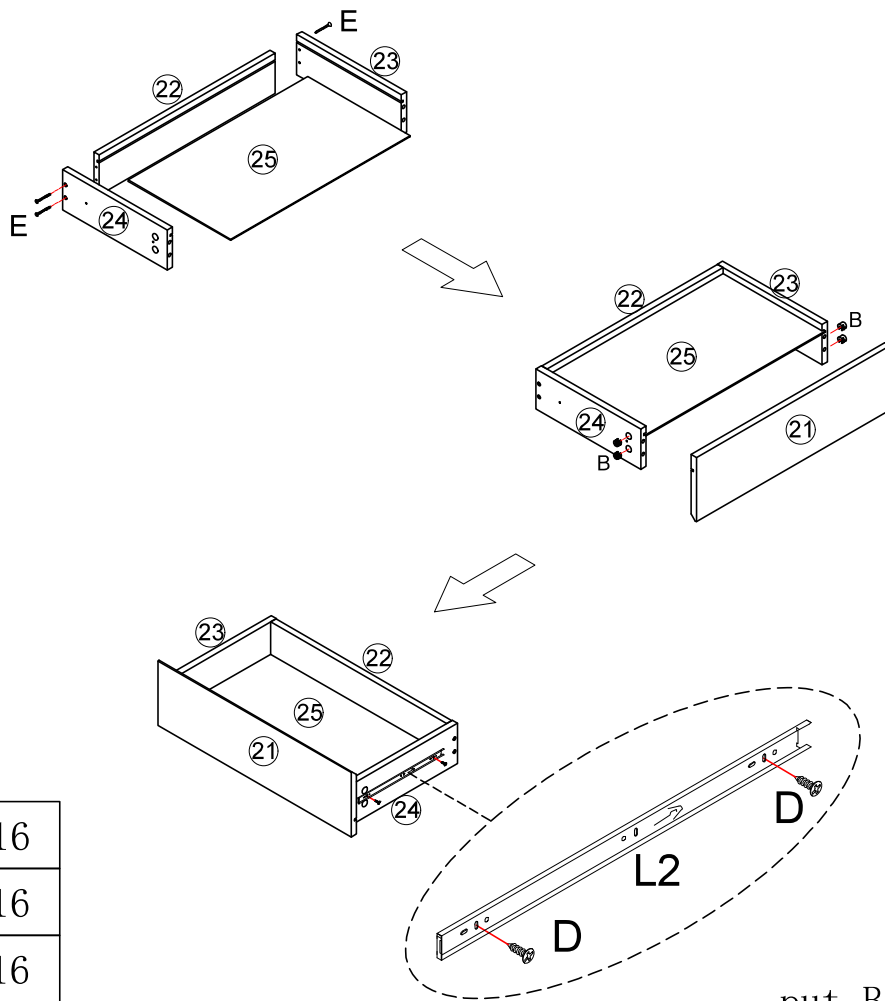

X4



B*16



D*16







E*16



L2*4

put B on board 23 24

12


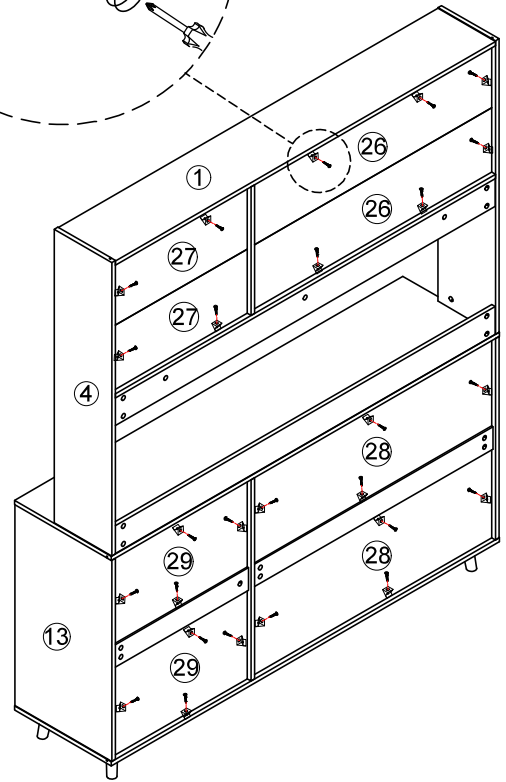

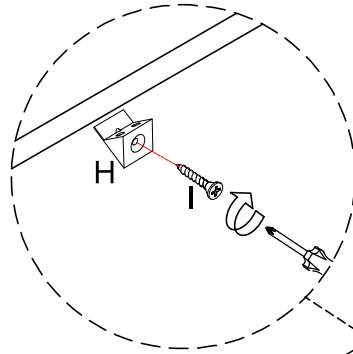
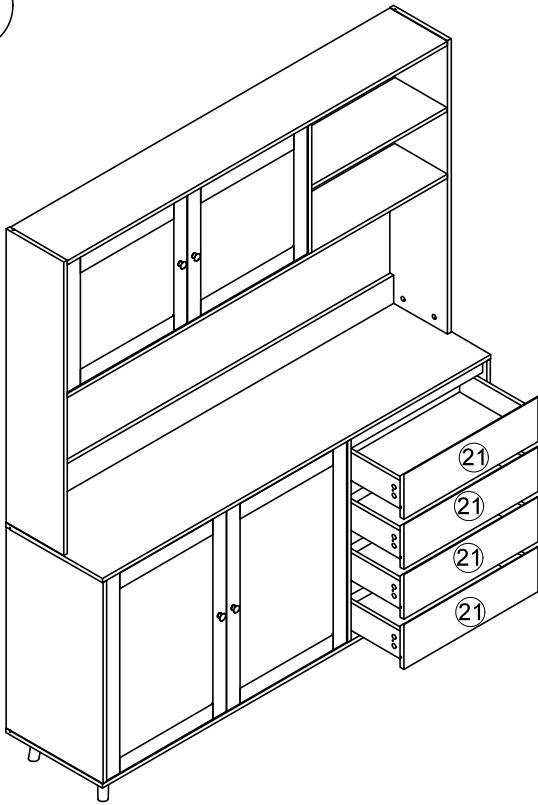


H*26



I*26

13

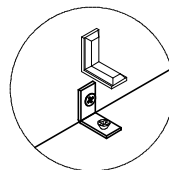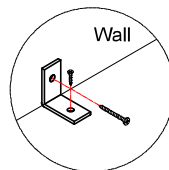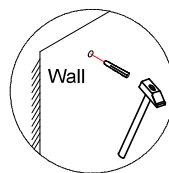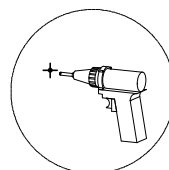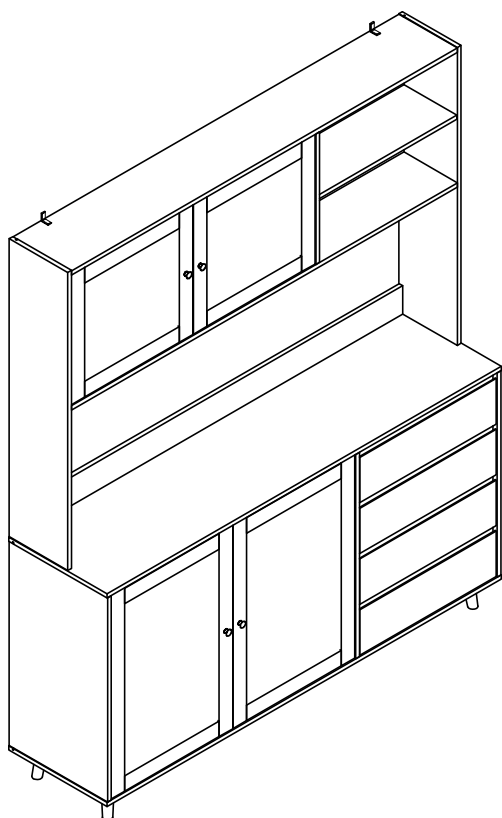

V*2

Please install tip-proof fitting.

WARNING!

Children have died from furniture tipover. Fixed wall device have been included with this product;you must install the fixed wall device according to these instructions in order to minimize the risk of furniture.If you have any questions about this product or the Fixed wall device , please contact us immediately.

Never allow children to climb or hang on furniture,including drawers or cabiner doors.

In addition to installing the restrains,to help prevent tip-over.

1. Never put a TV or other heavy objects on top of this product.
2. Do not stand on the product.

