
Storage Benches

Assembly Instruction

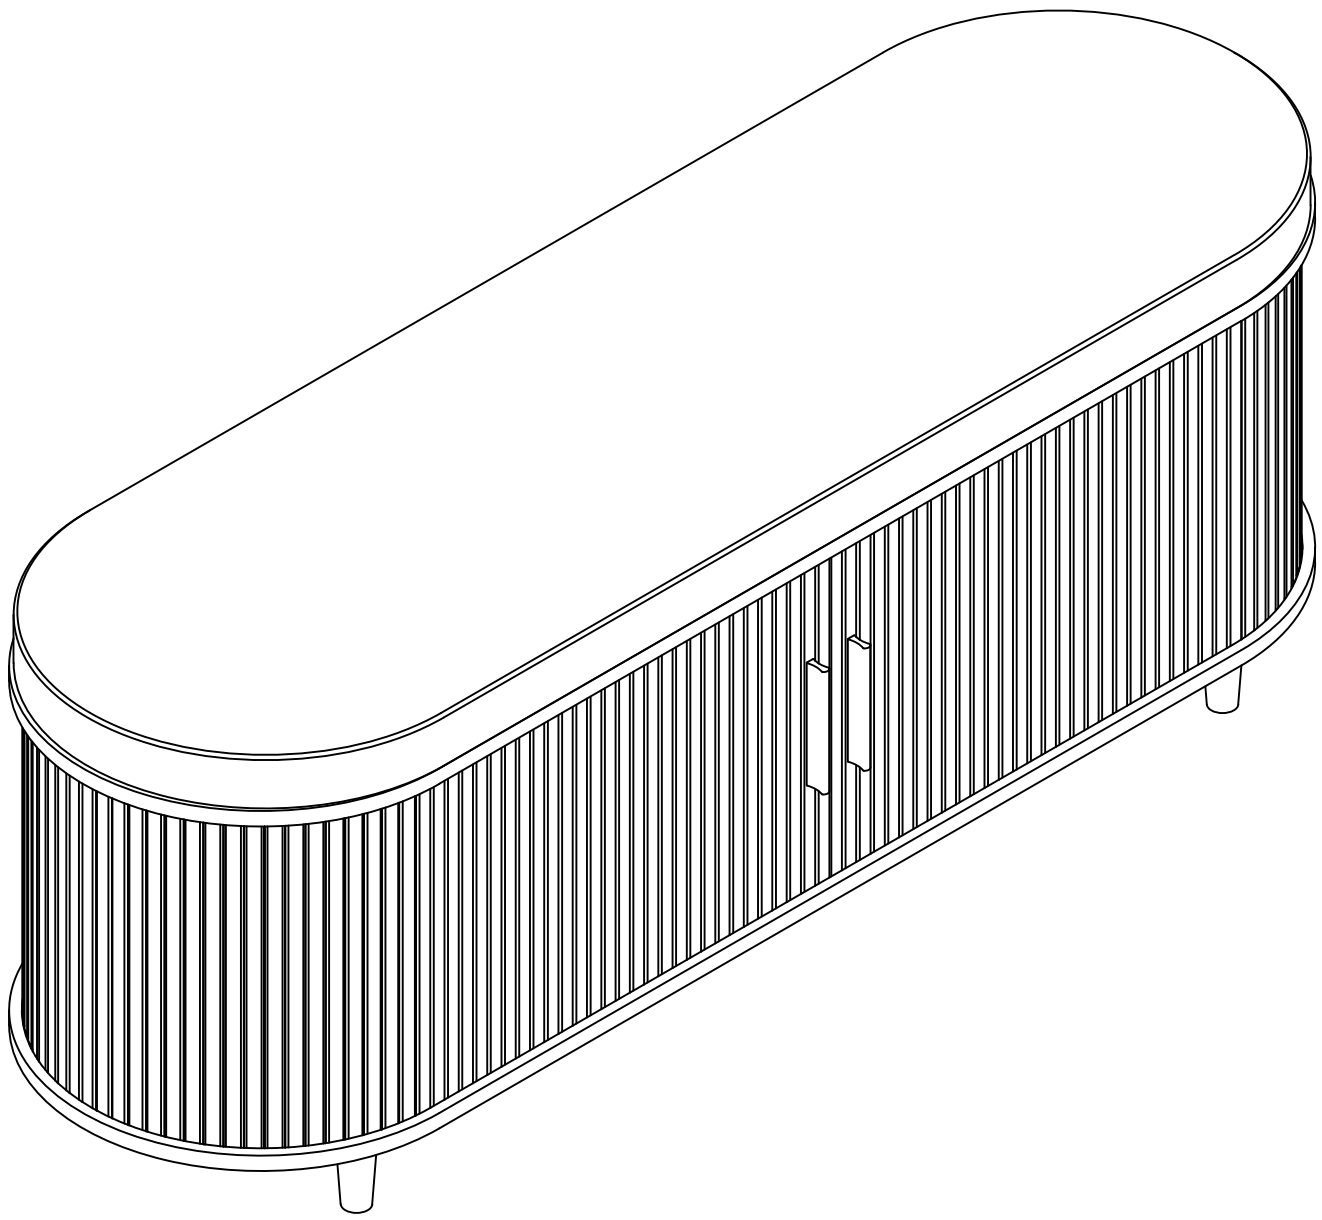

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS

1.There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

2.Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.

3.The main components of the product is relatively heavy. Please pay attention to safety during installation.

4.The product is not stable during installation. Please do not move it randomly before it is completely installed.


5.This product requires two people to install.

6.If you have any questions during installation, please contact the customer service in time.
















*PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECCESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.

*IF YOU NEED FURTHER ASSISTANCE,PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.








Parts List

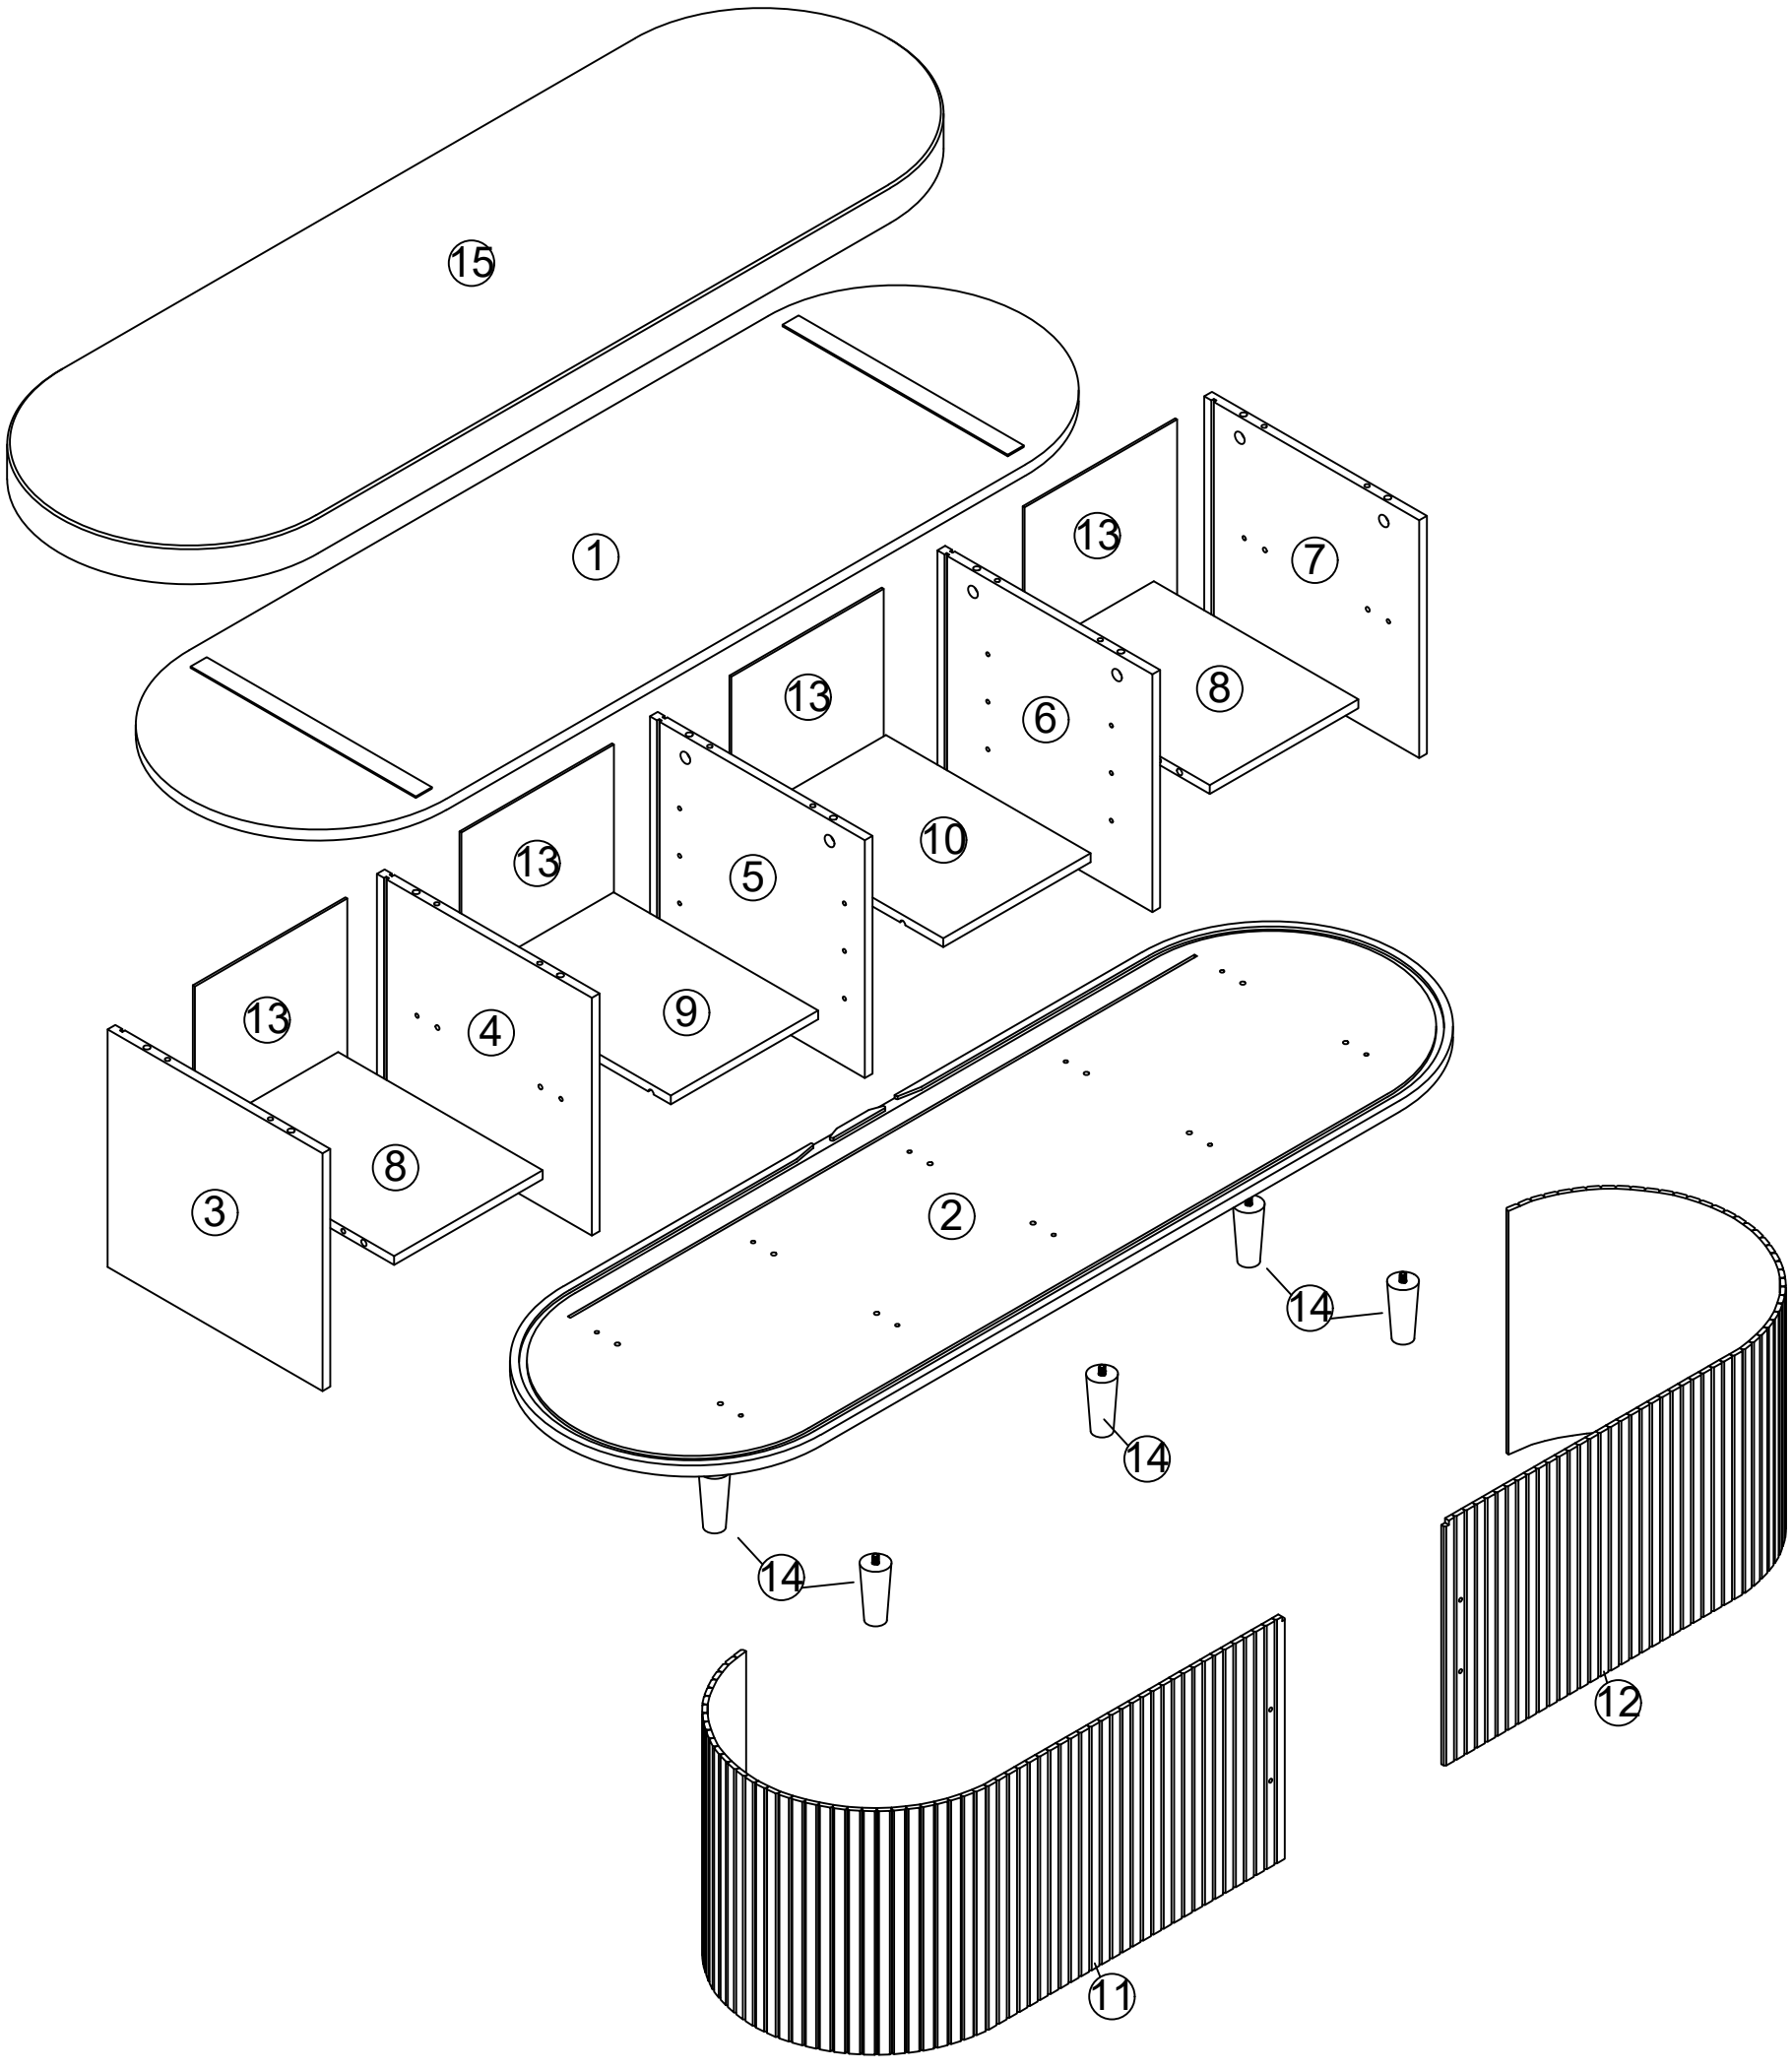


Parts List

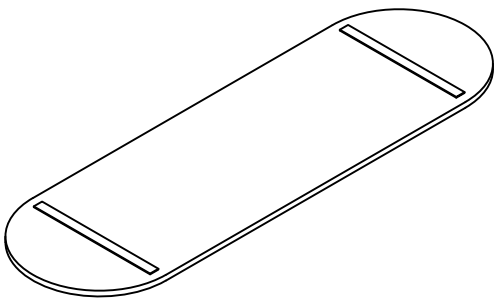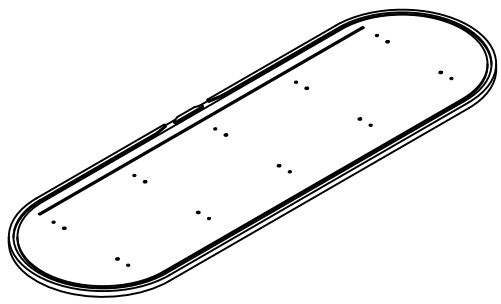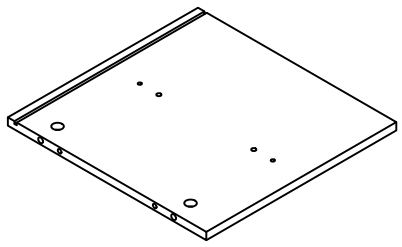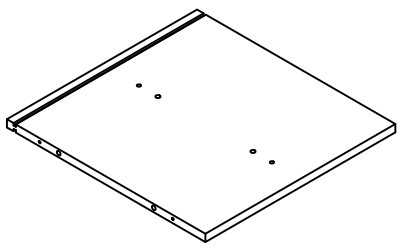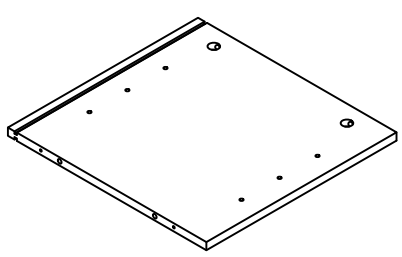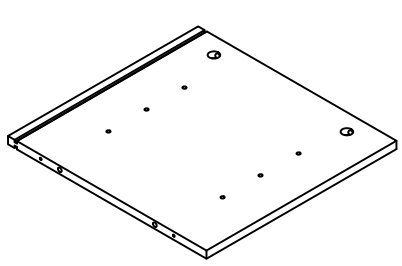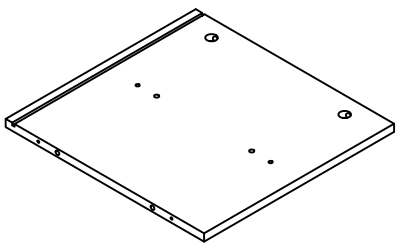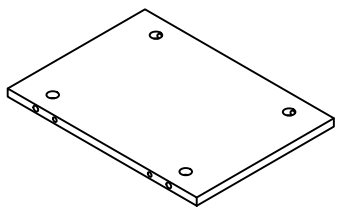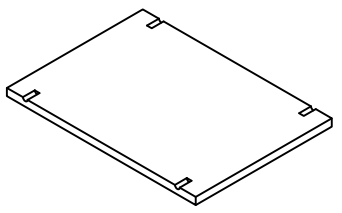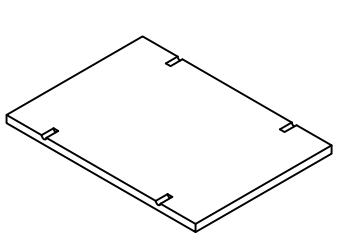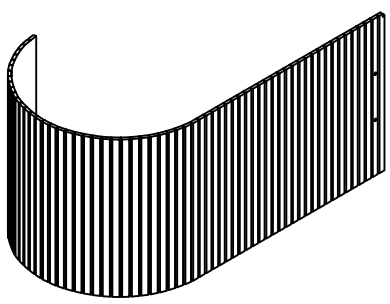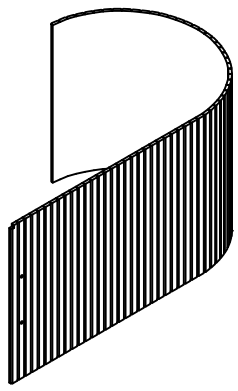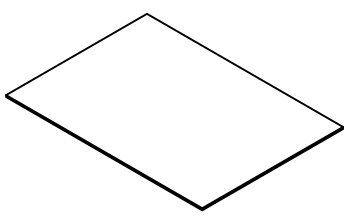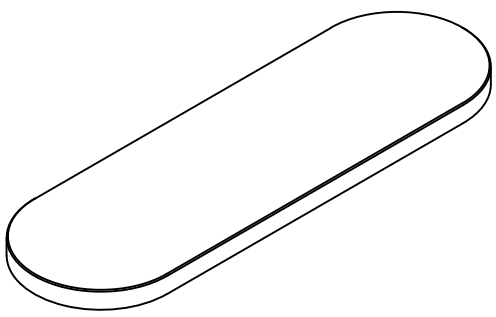①  X1	②  X1	③  X1
④  X1	⑤  X1	⑥  X1
⑦  X1	⑧  X2	⑨  X1
⑩  X1	⑪  X1	⑫  X1
⑬  X4	⑭  X5	⑮  X1


Hardwear List

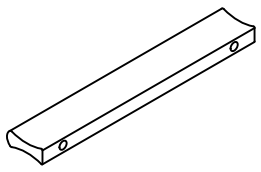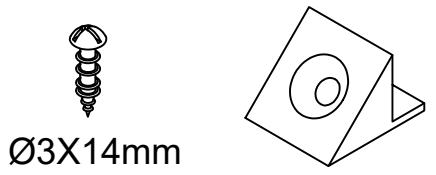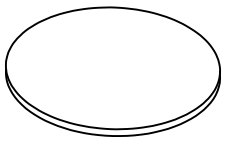
A  Ø15X9.5mm X18	B  Ø6.5X35mm X18	C  Ø6X30mm X28
D  Ø4X35mm X10	E  Ø4X14mm X20	F  Ø4X9mm X4
G  106X16X8mm X2	H  Ø5X25mm X8	I  Ø3X14mm X16set
J 49X49mm X5	K  Ø21 X18	

STEP1




B X8

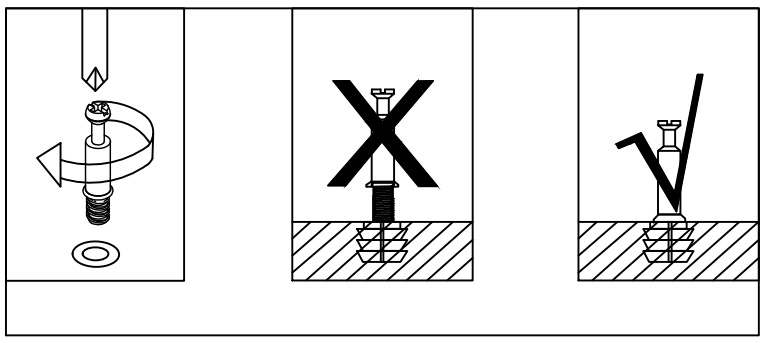


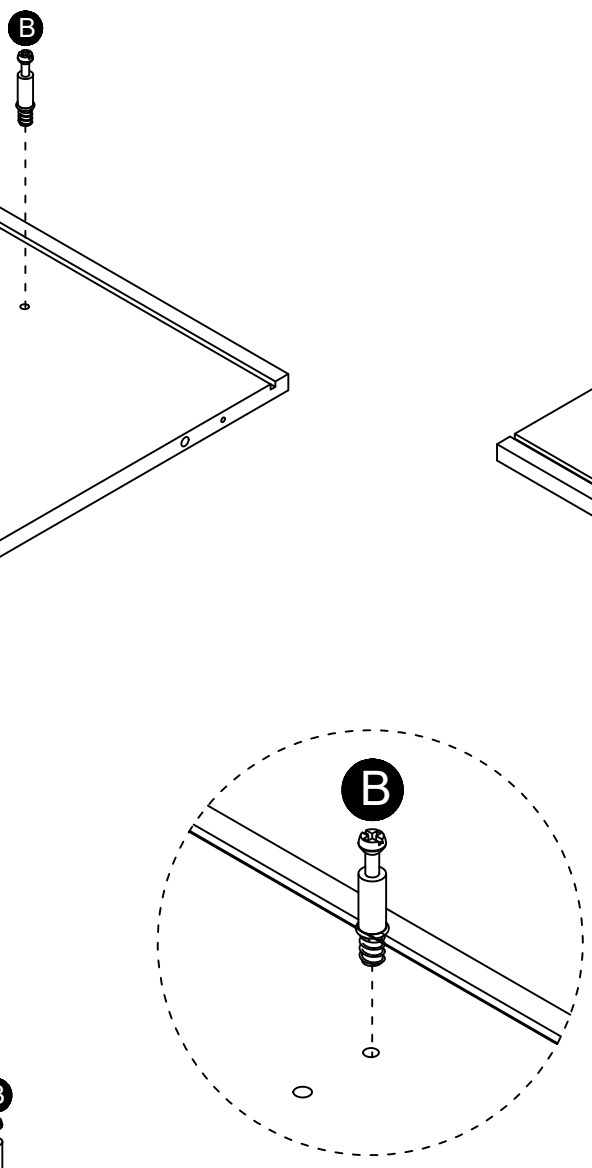



STEP2

	A X8
	C X8

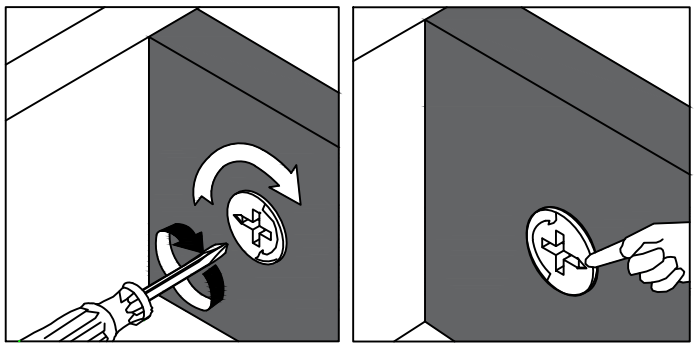


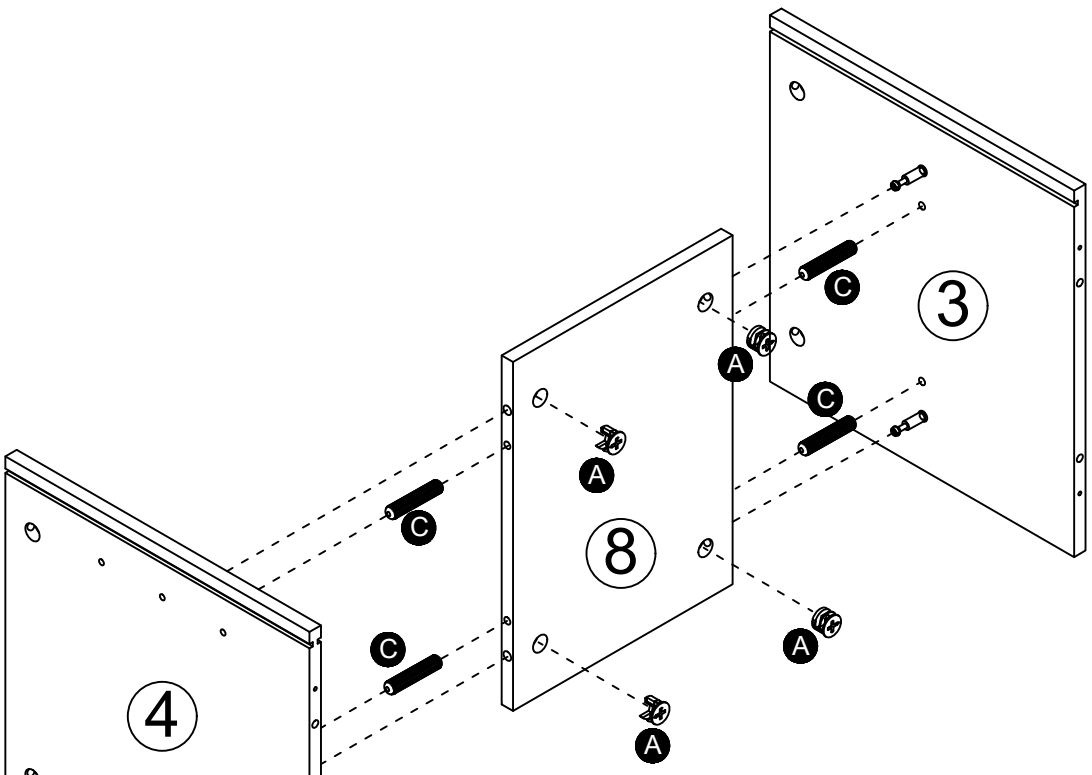

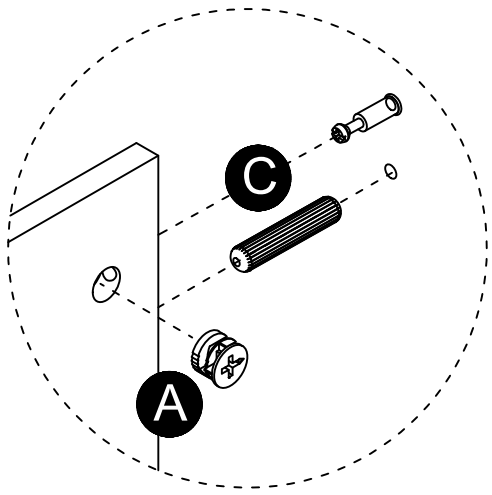


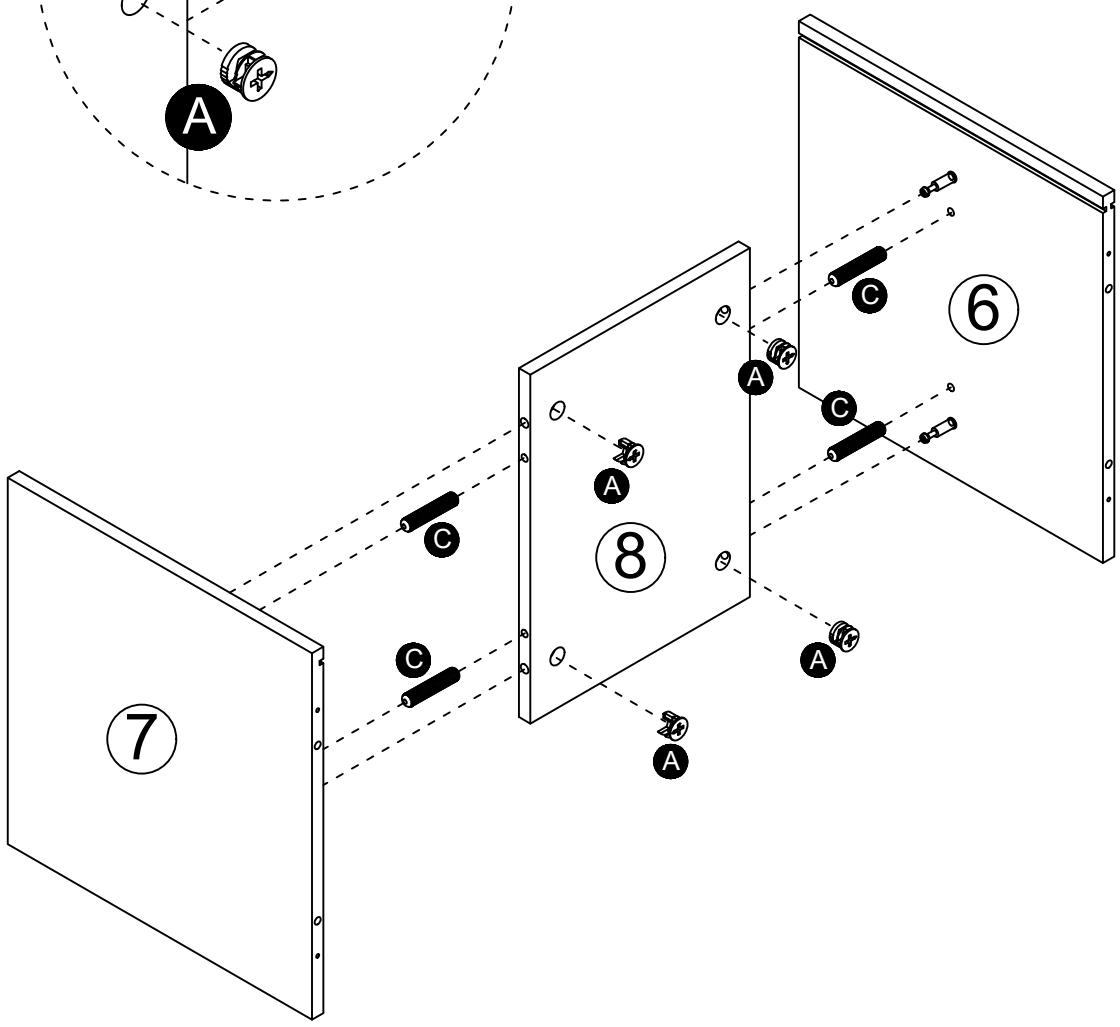



STEP3



B X10

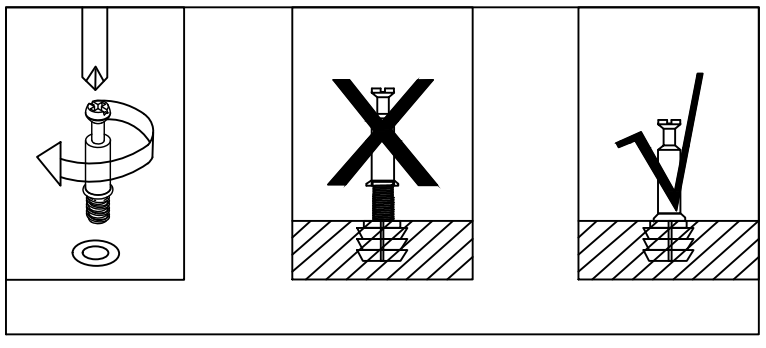

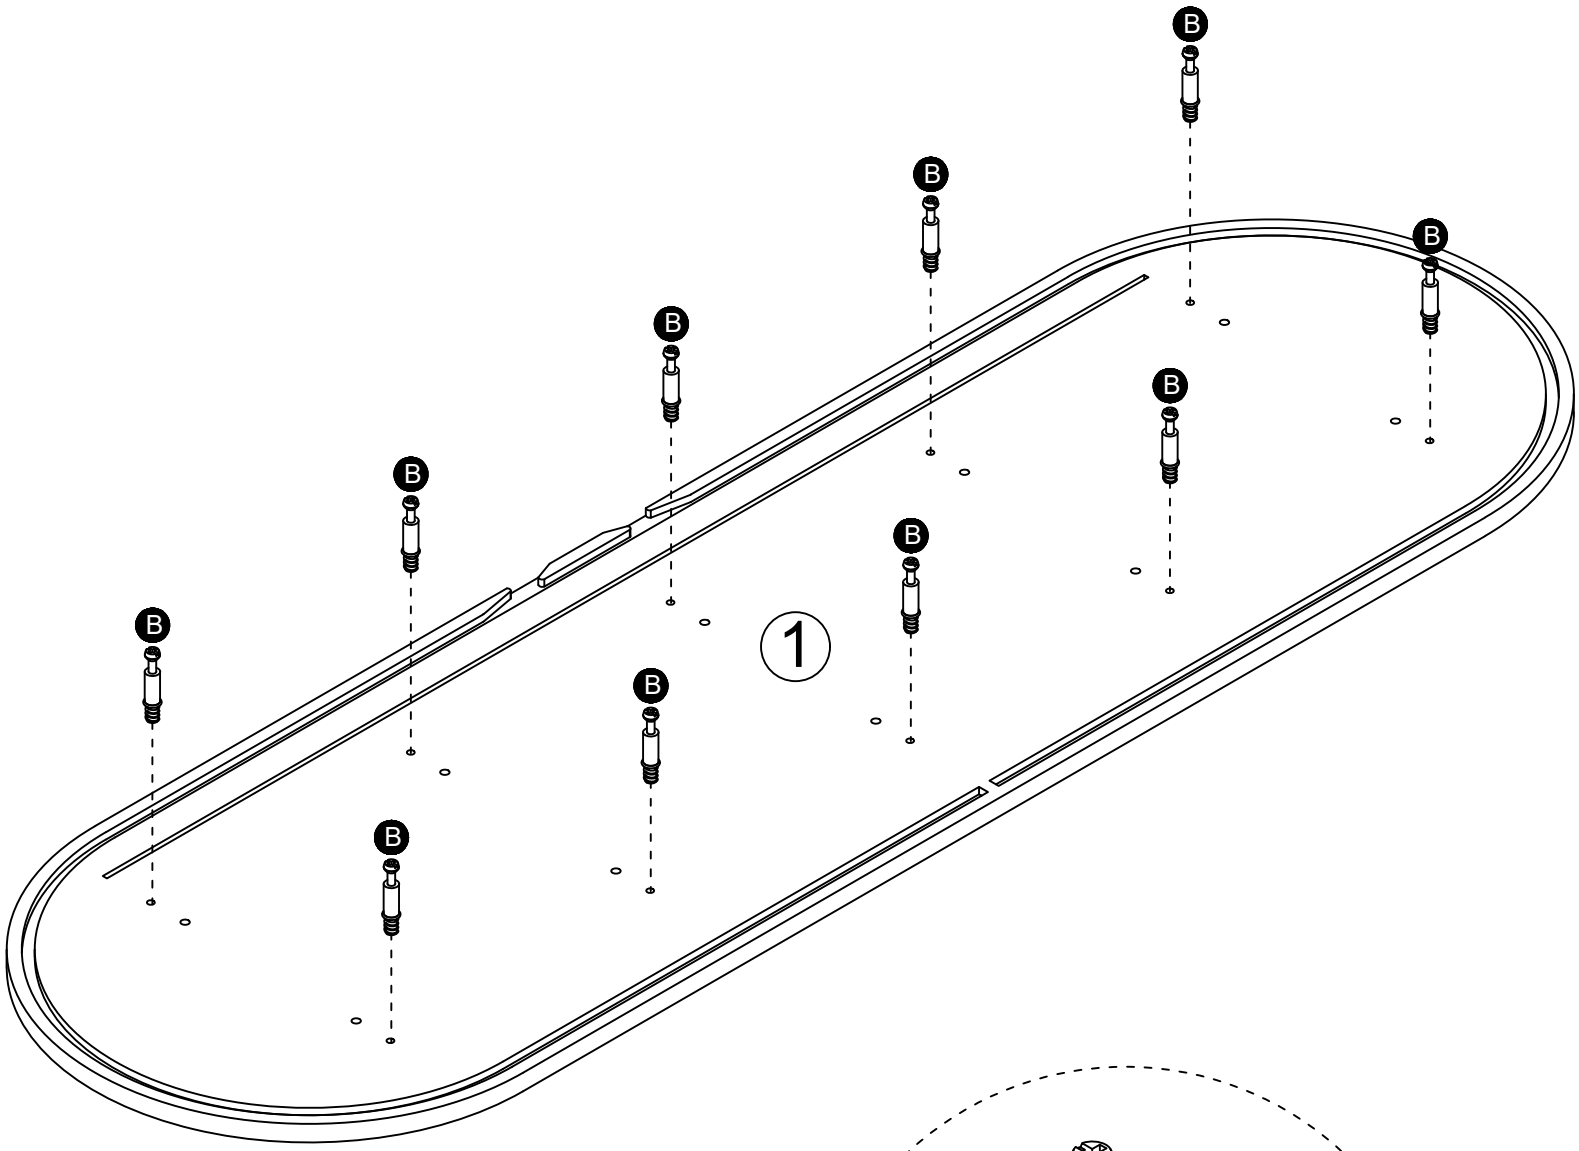

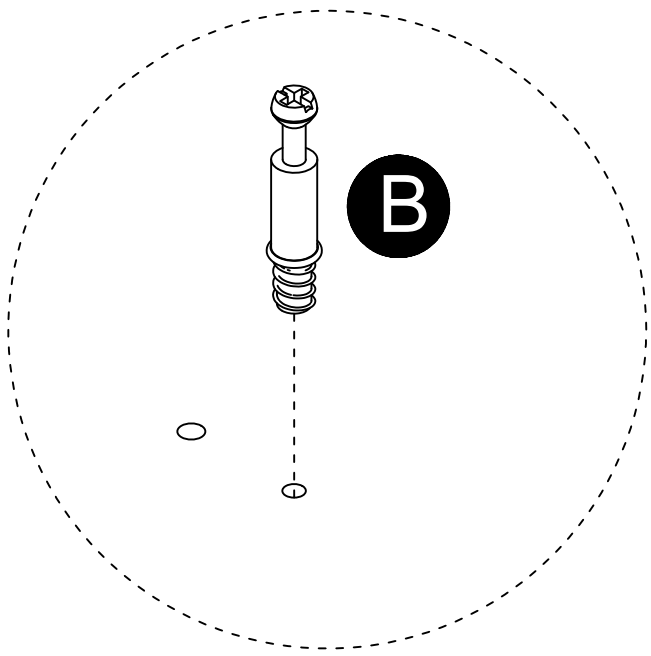


STEP4




Ⓐ X10




Ⓒ X10

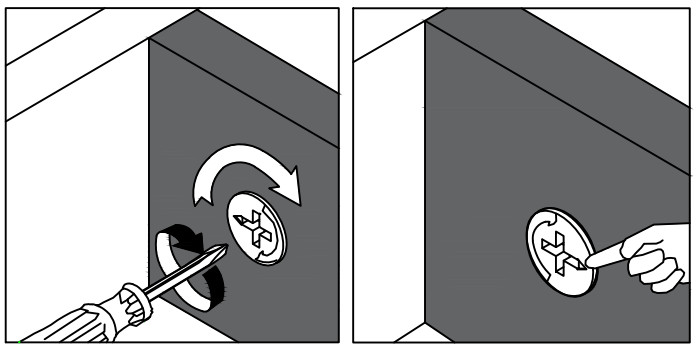

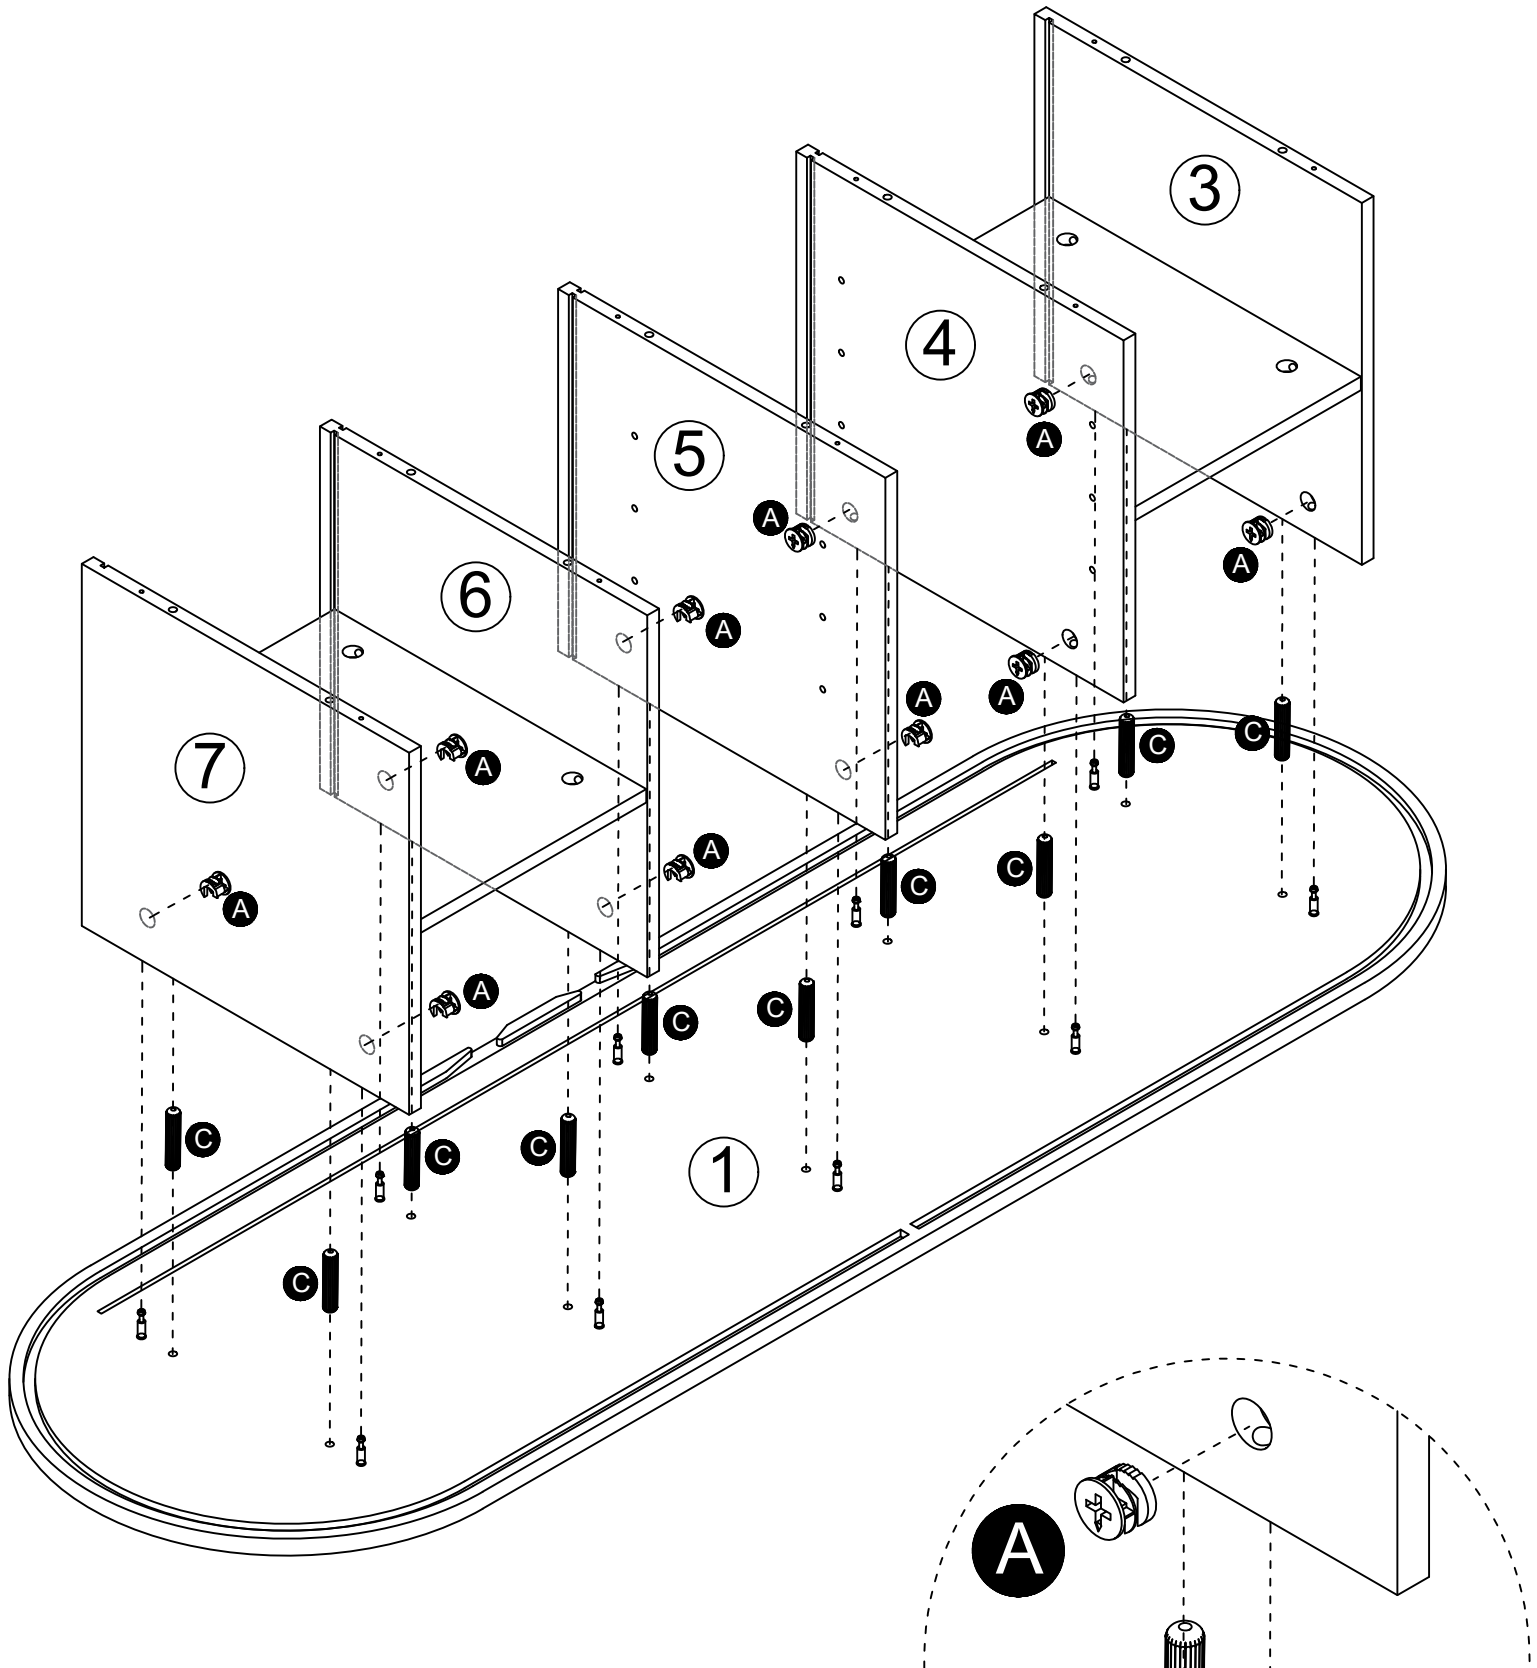


STEP5

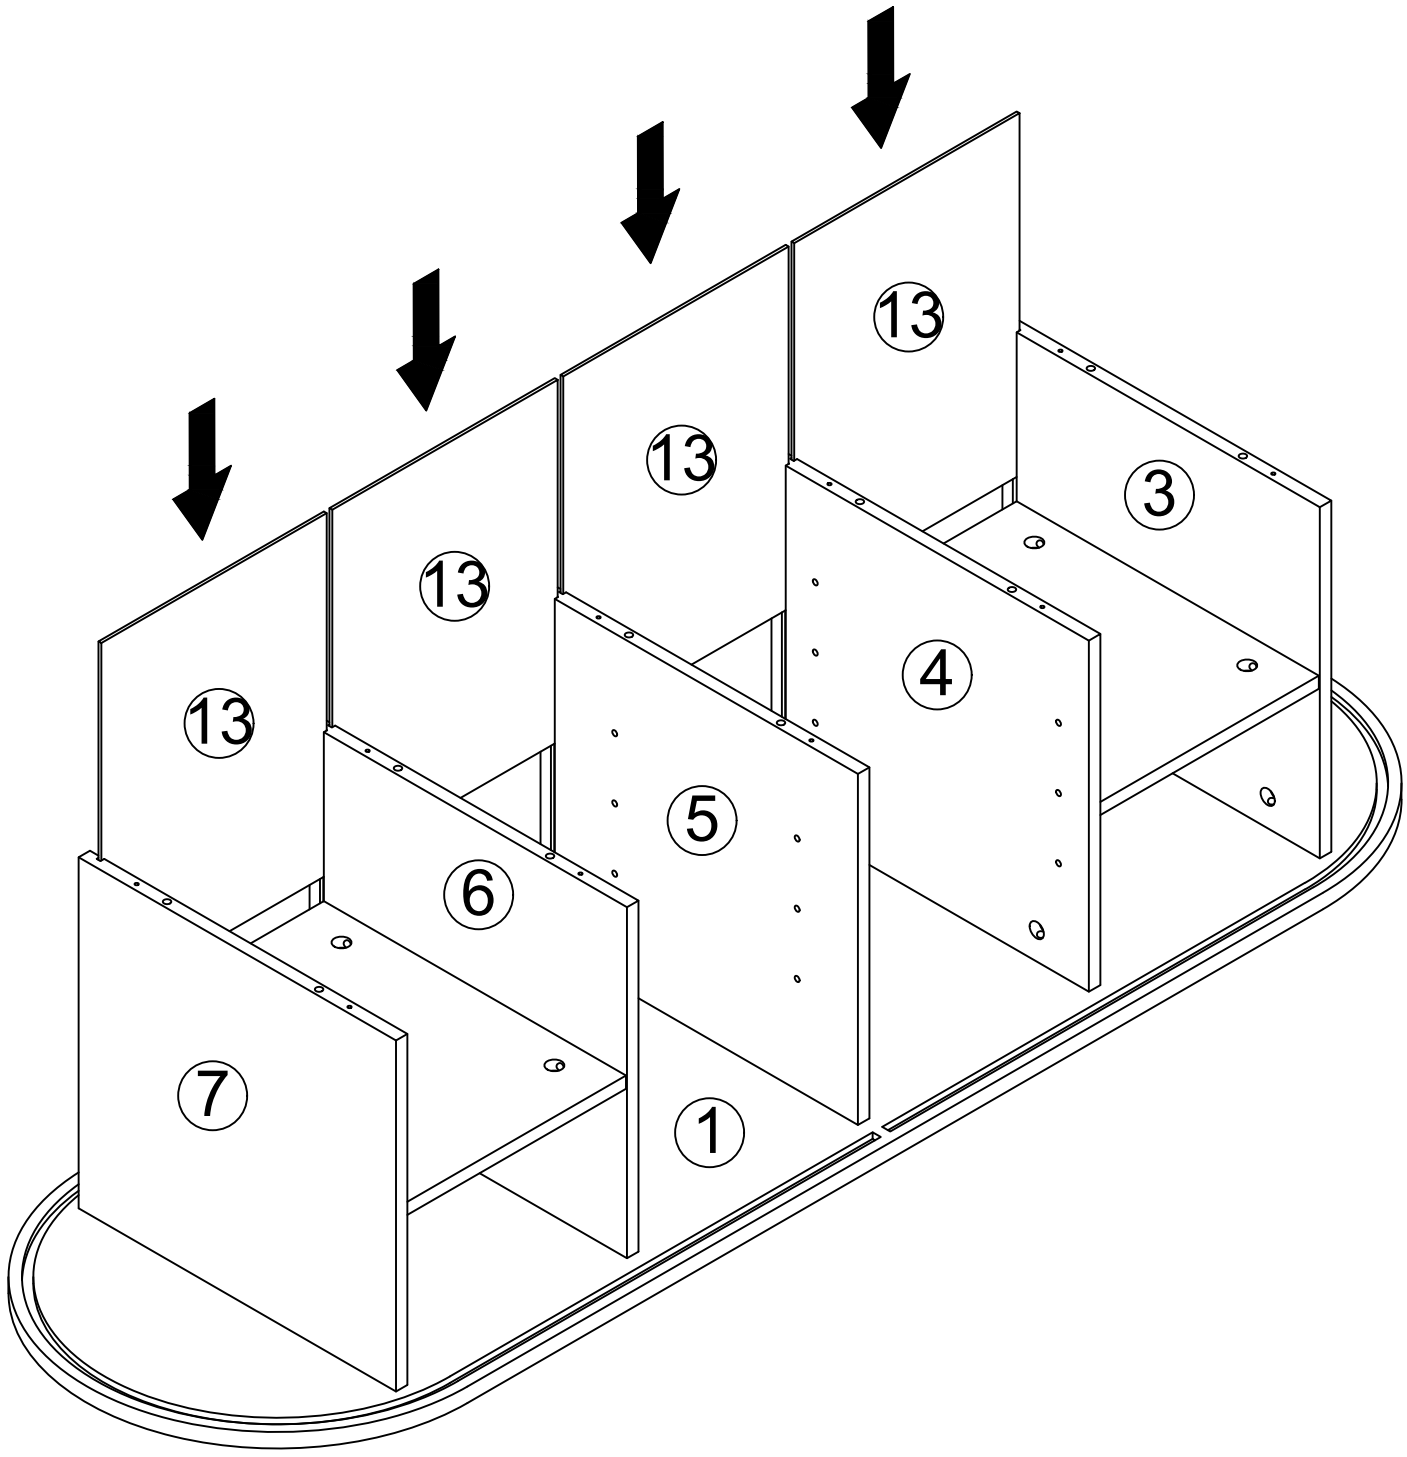


STEP6


C X10

D X10

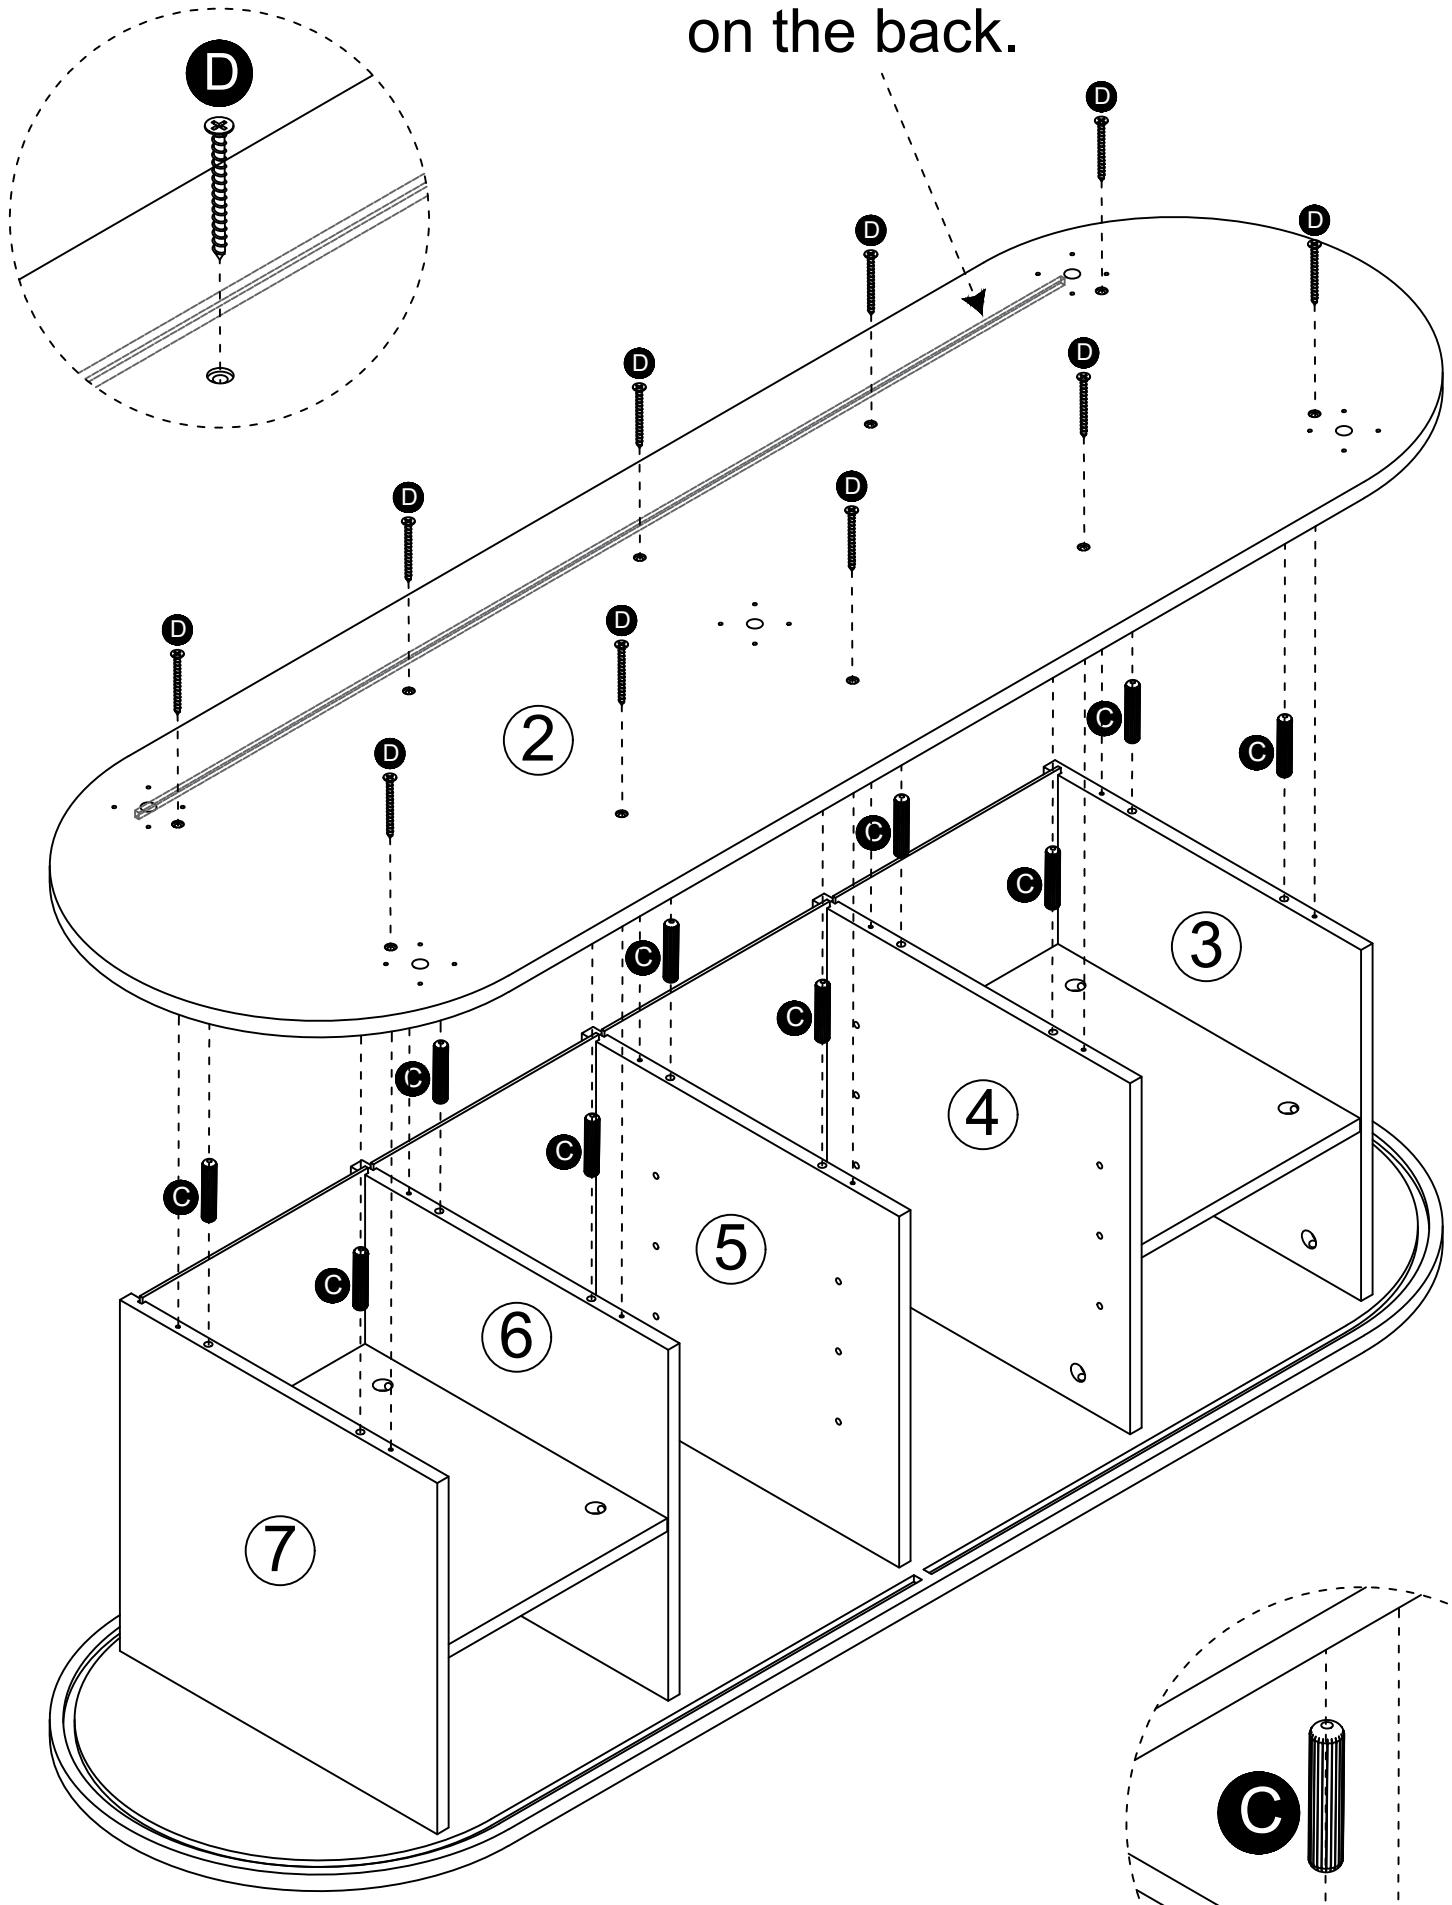


STEP7

	E X20
	J X5

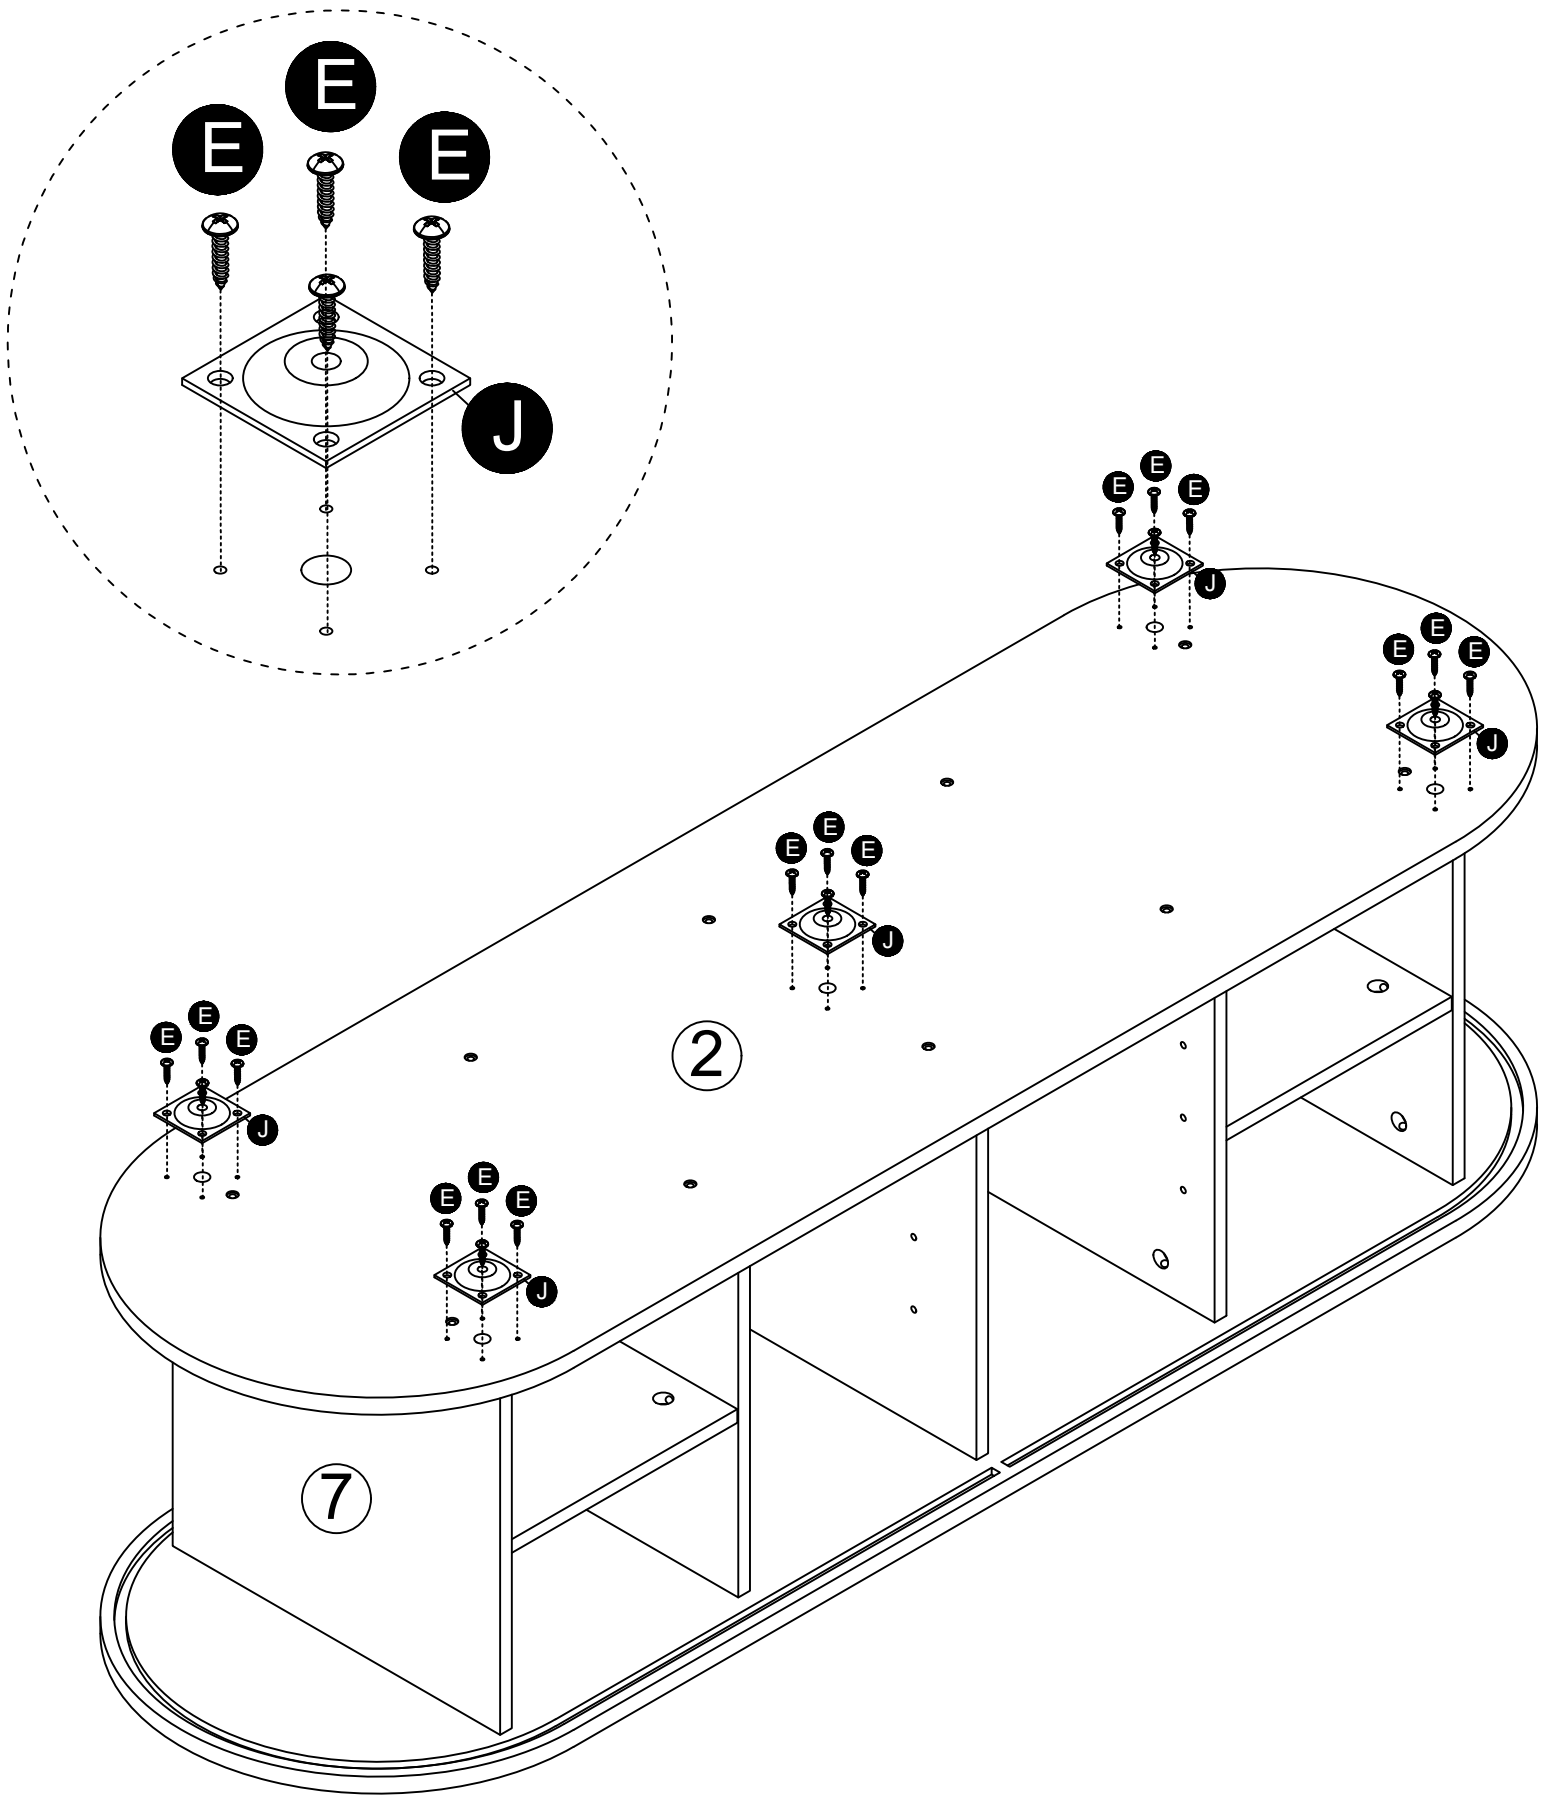



STEP8

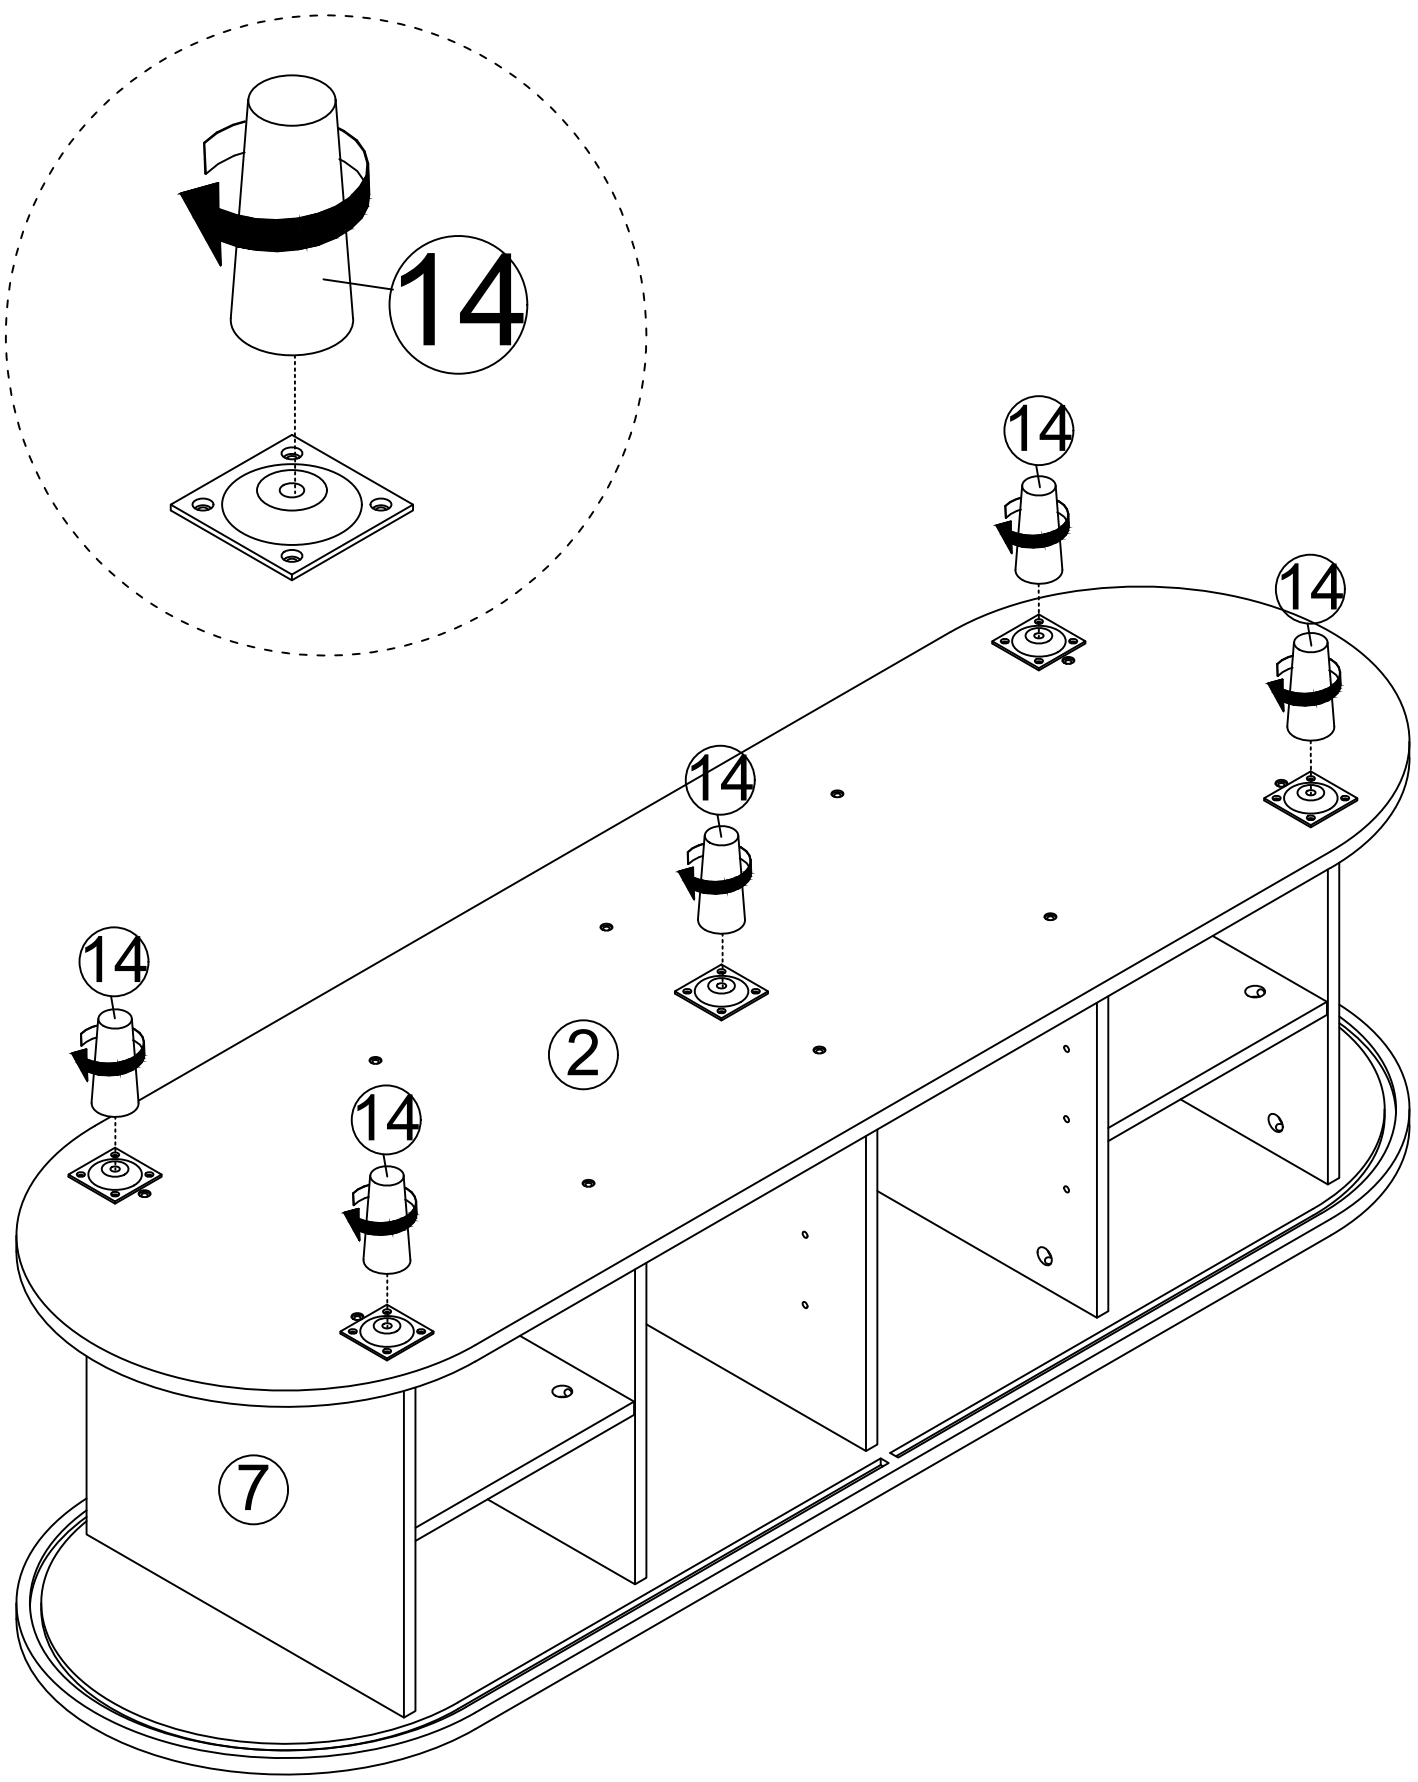


STEP9

H X8

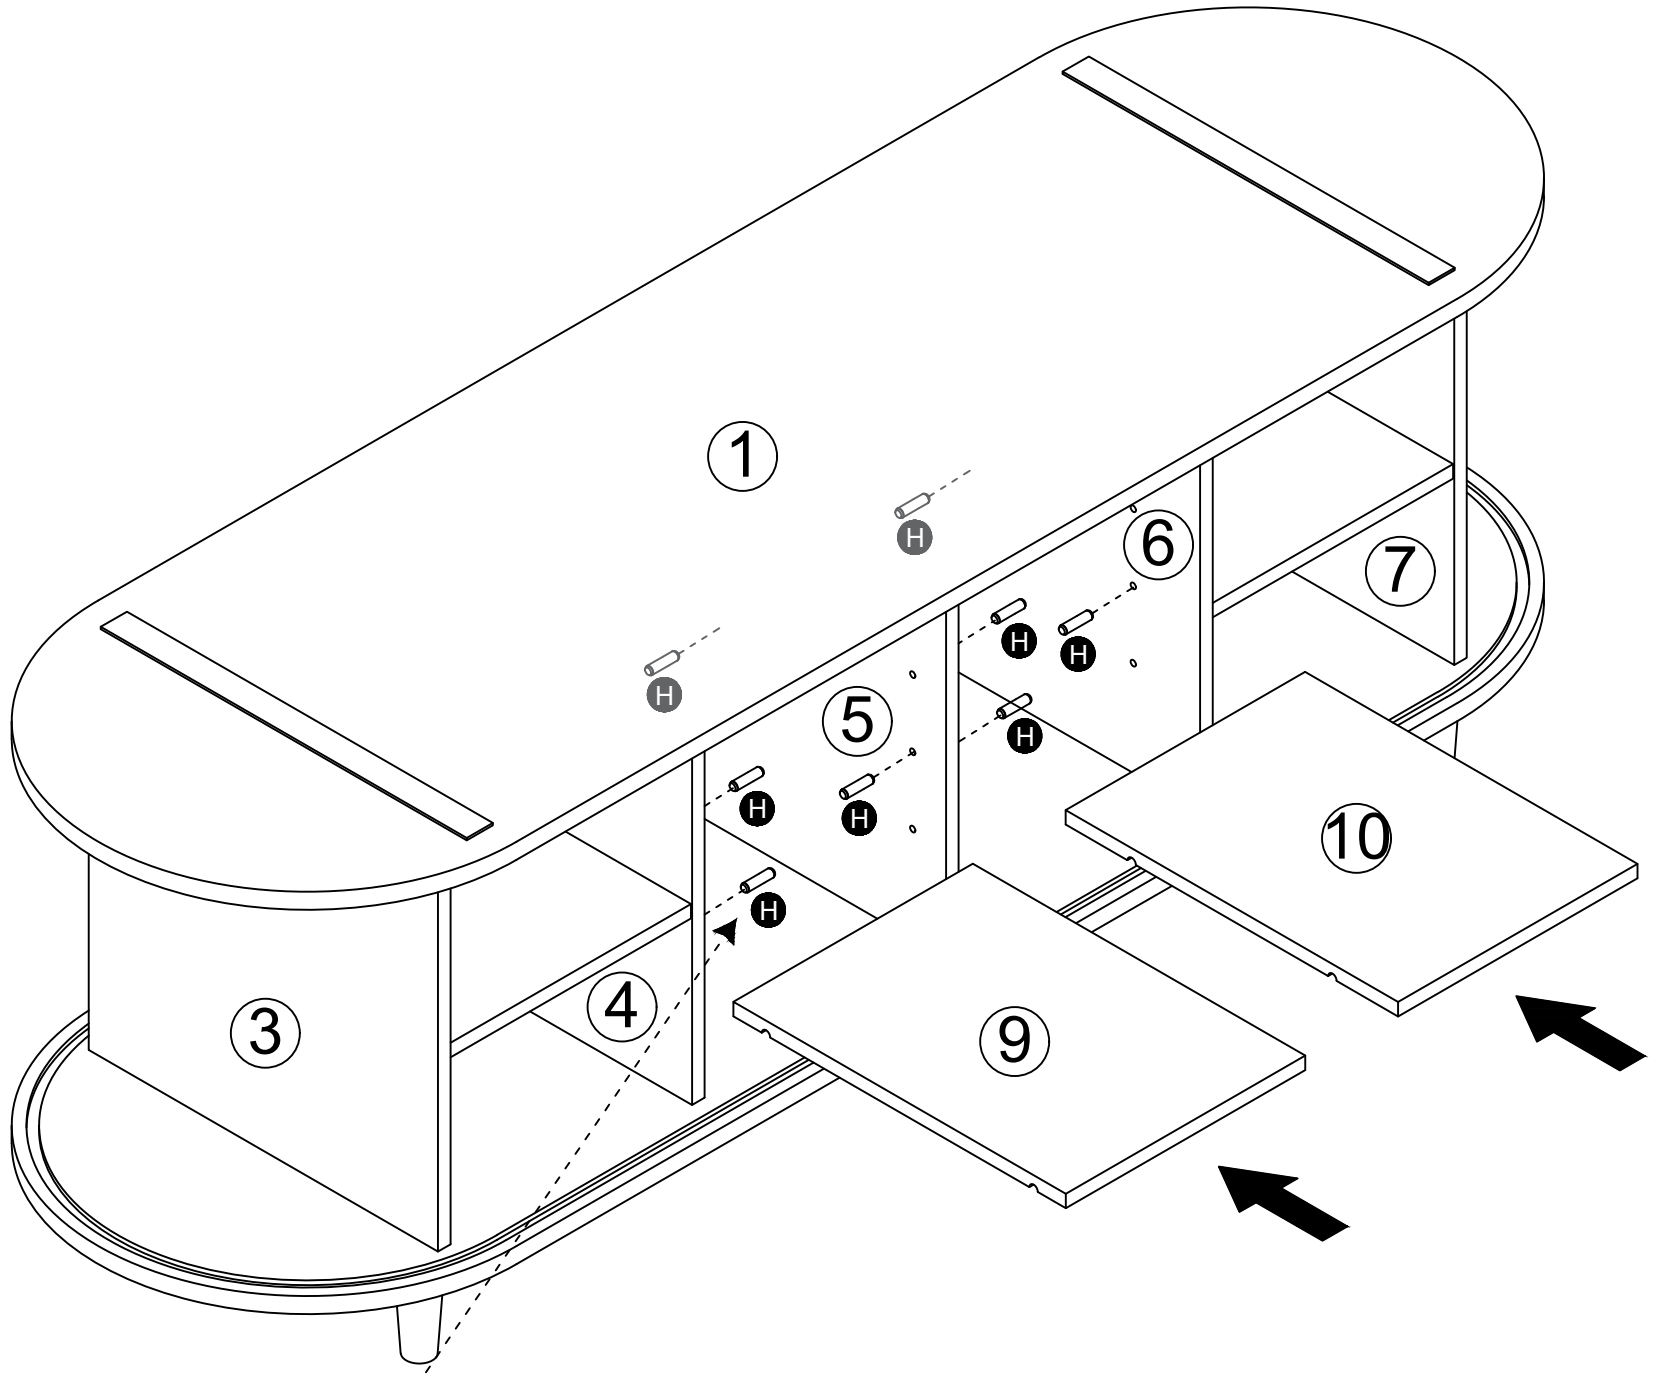

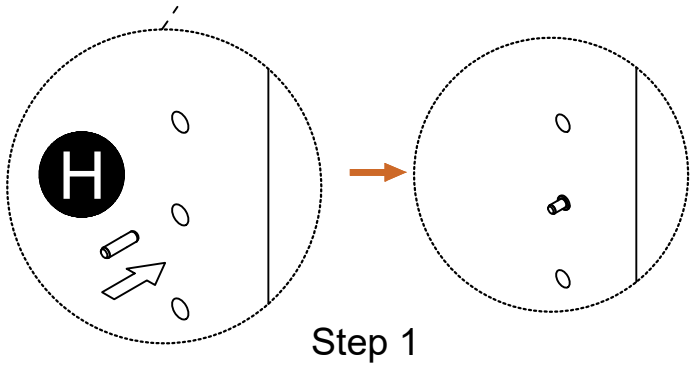



Step 1
Select the desired height
and put it in

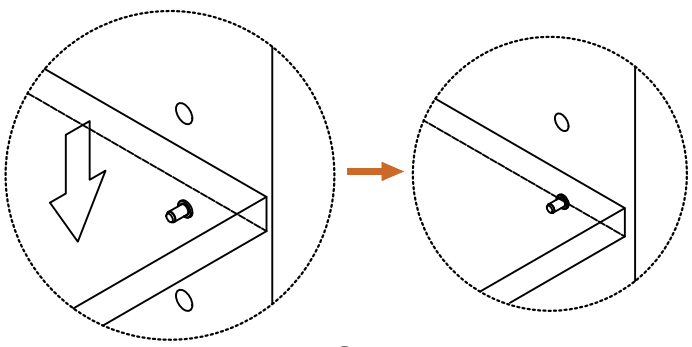


Step 2
Aim the board gaps down


STEP10




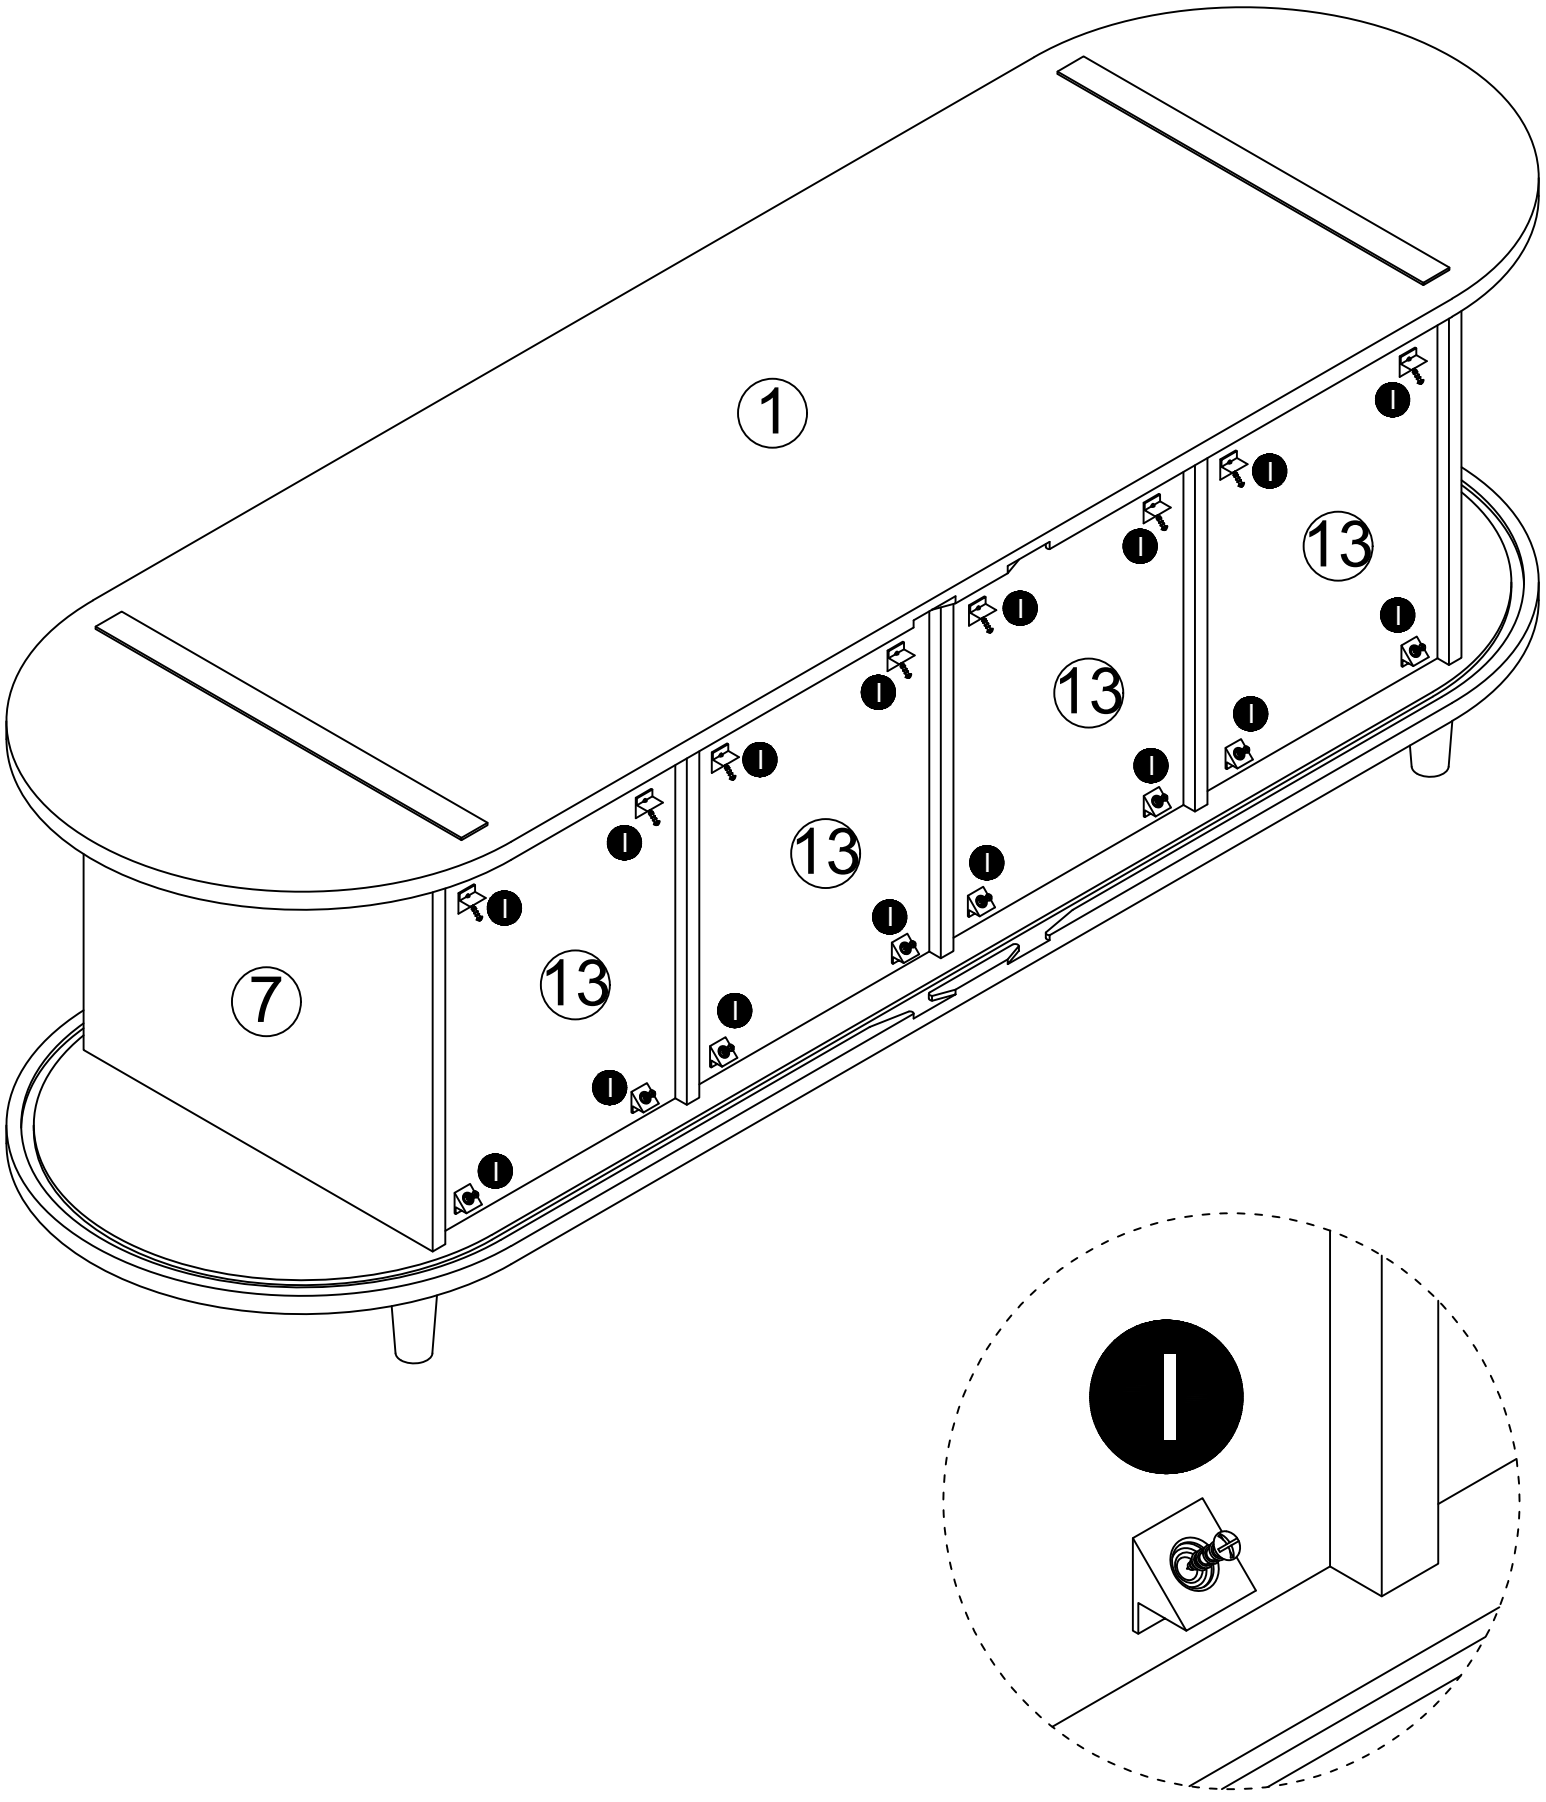


STEP11


	F X4
	G X2

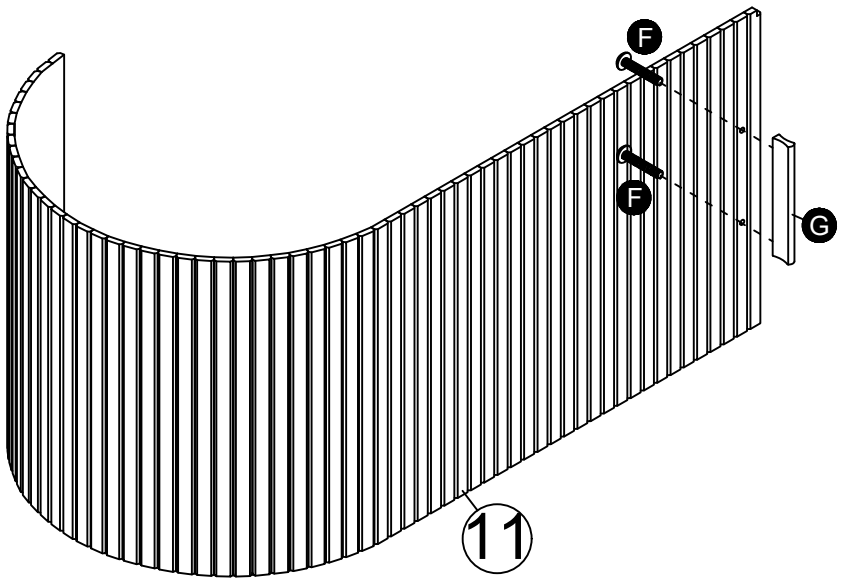

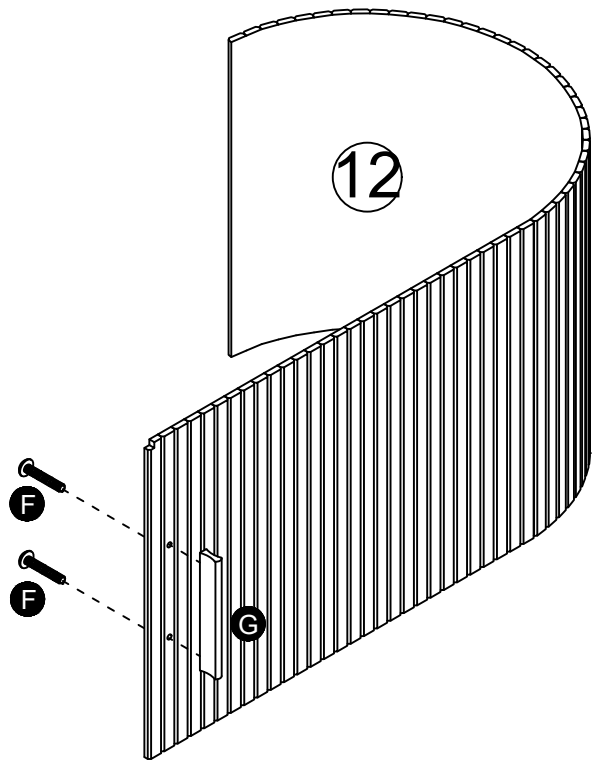


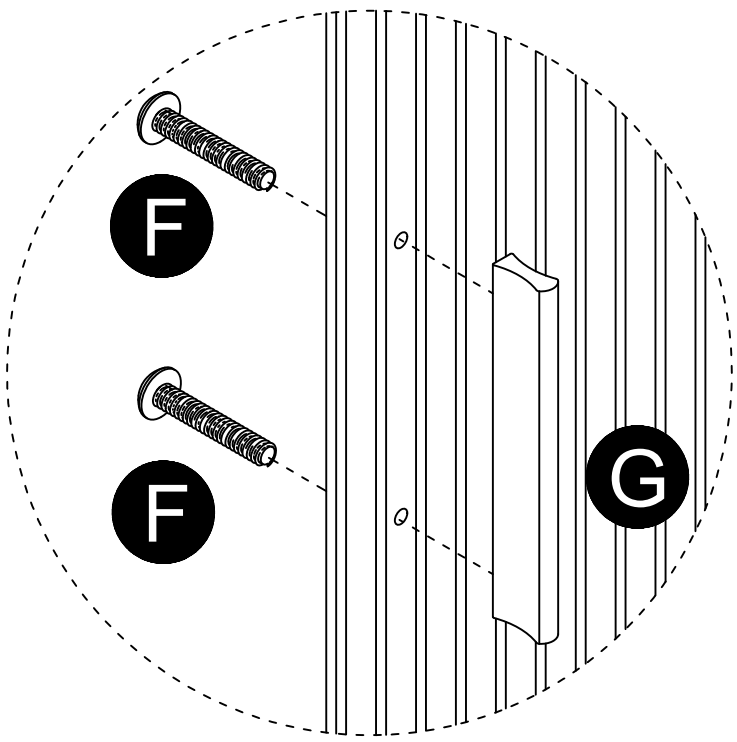


STEP12

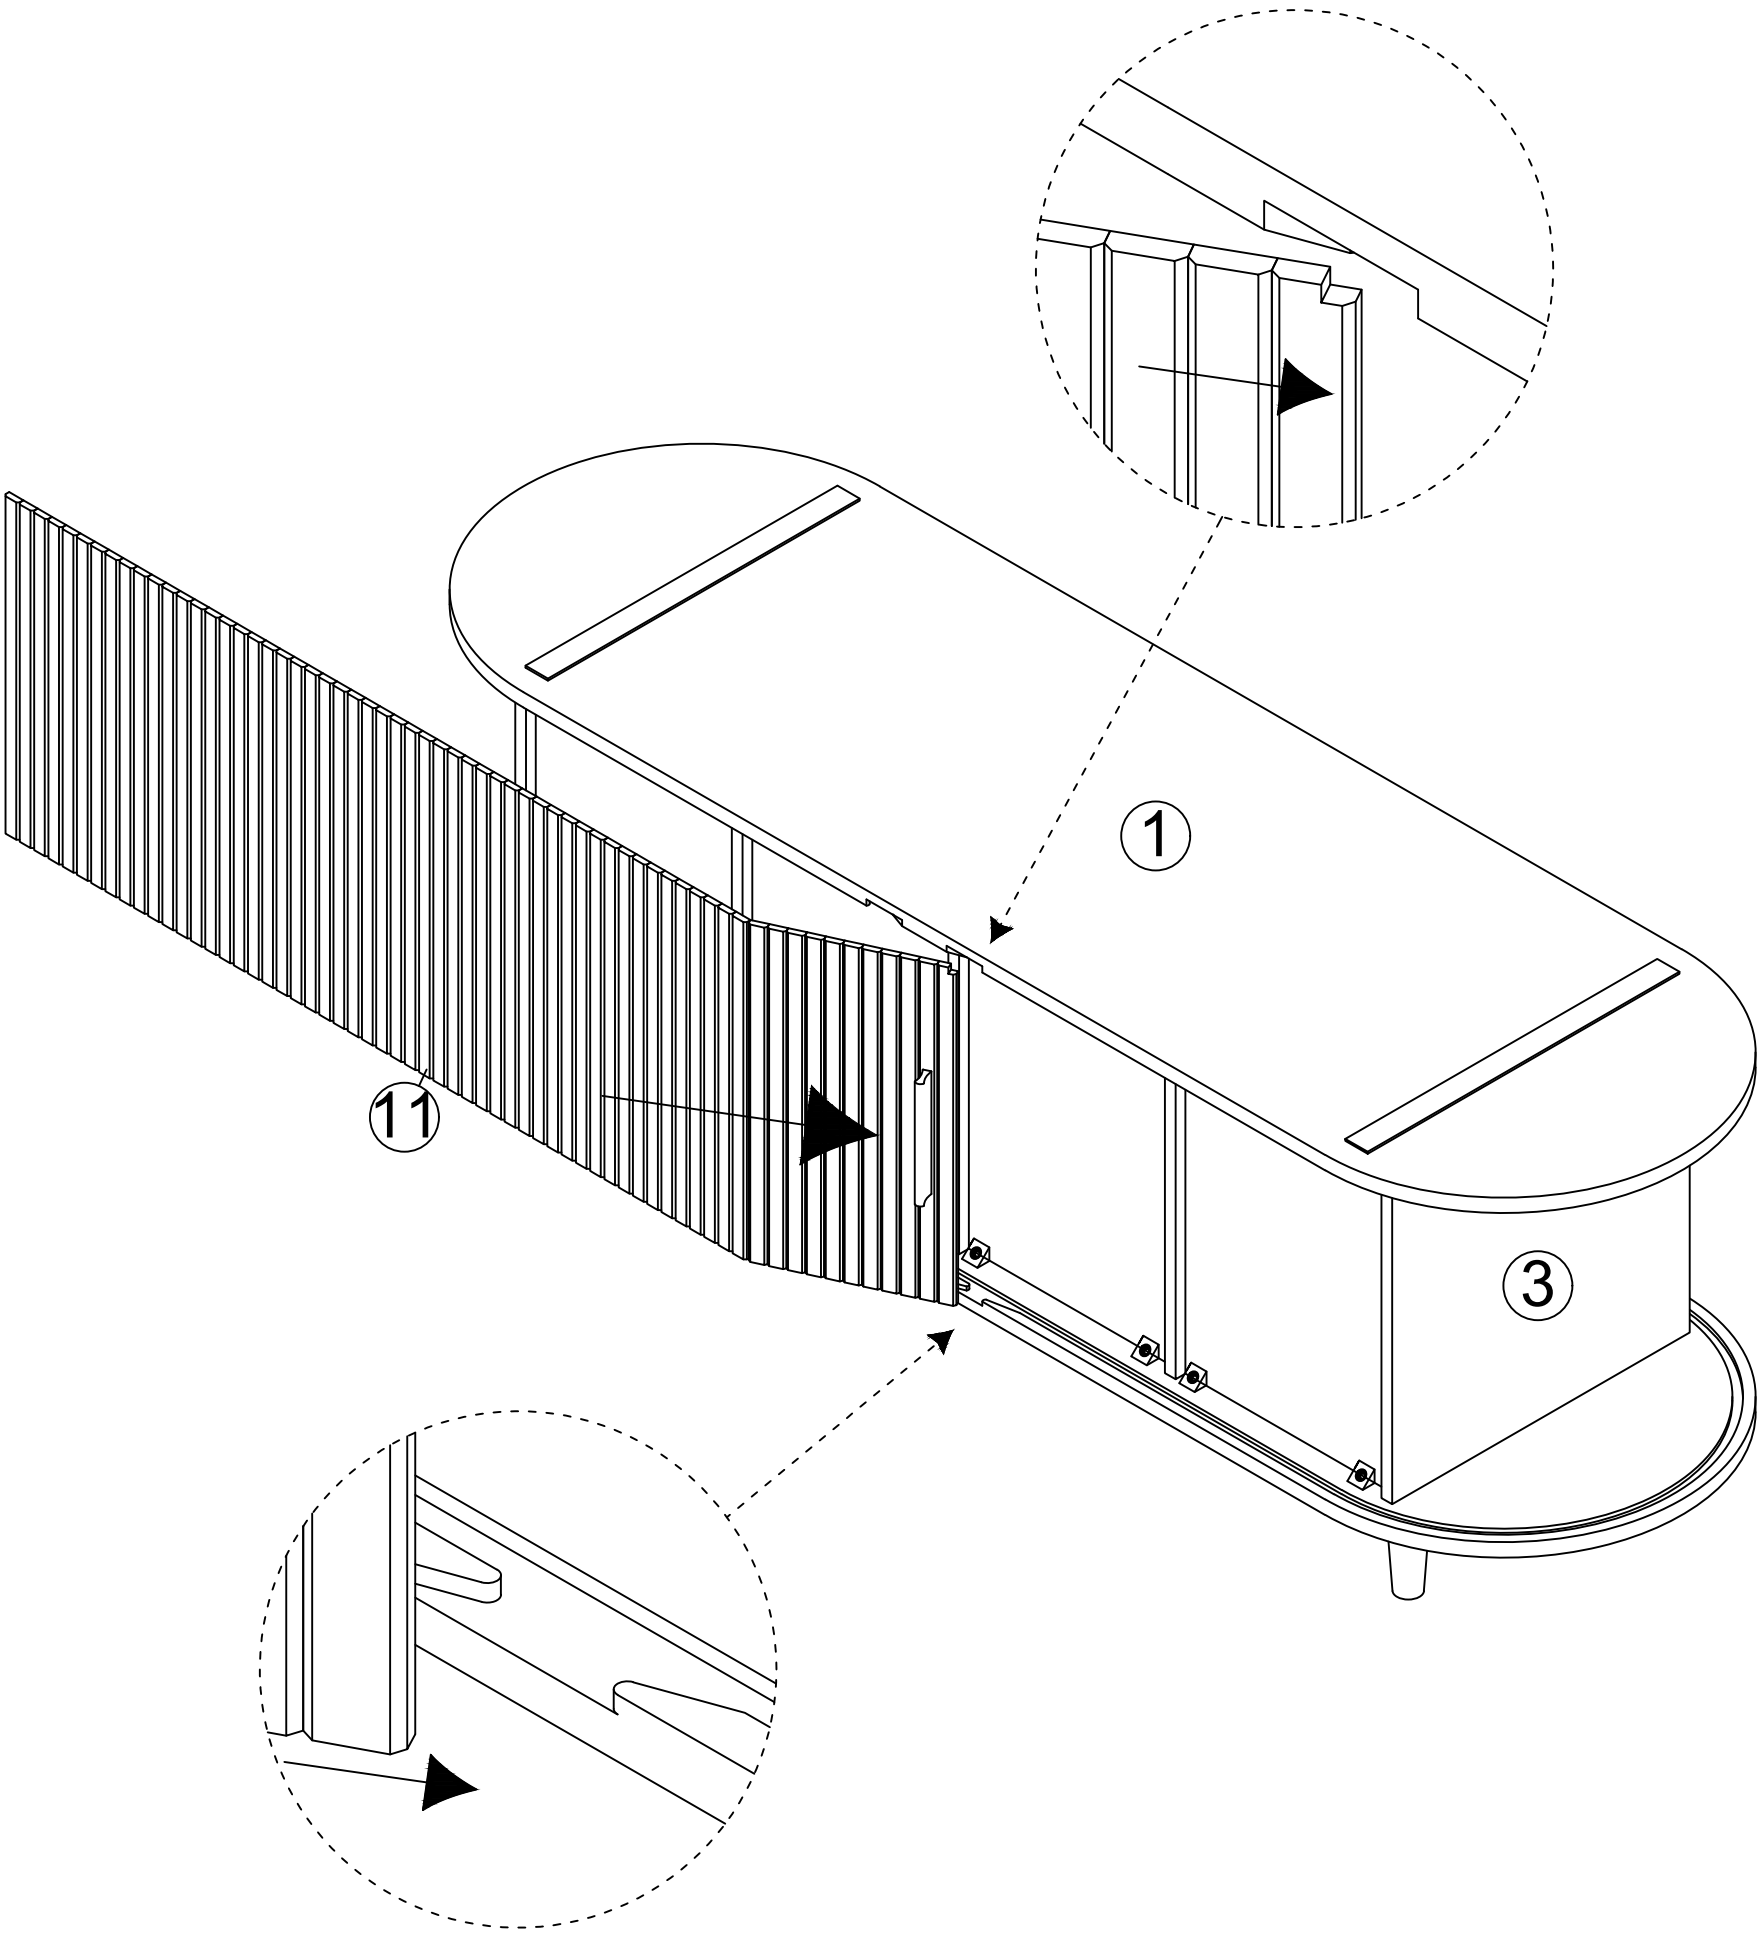


STEP13

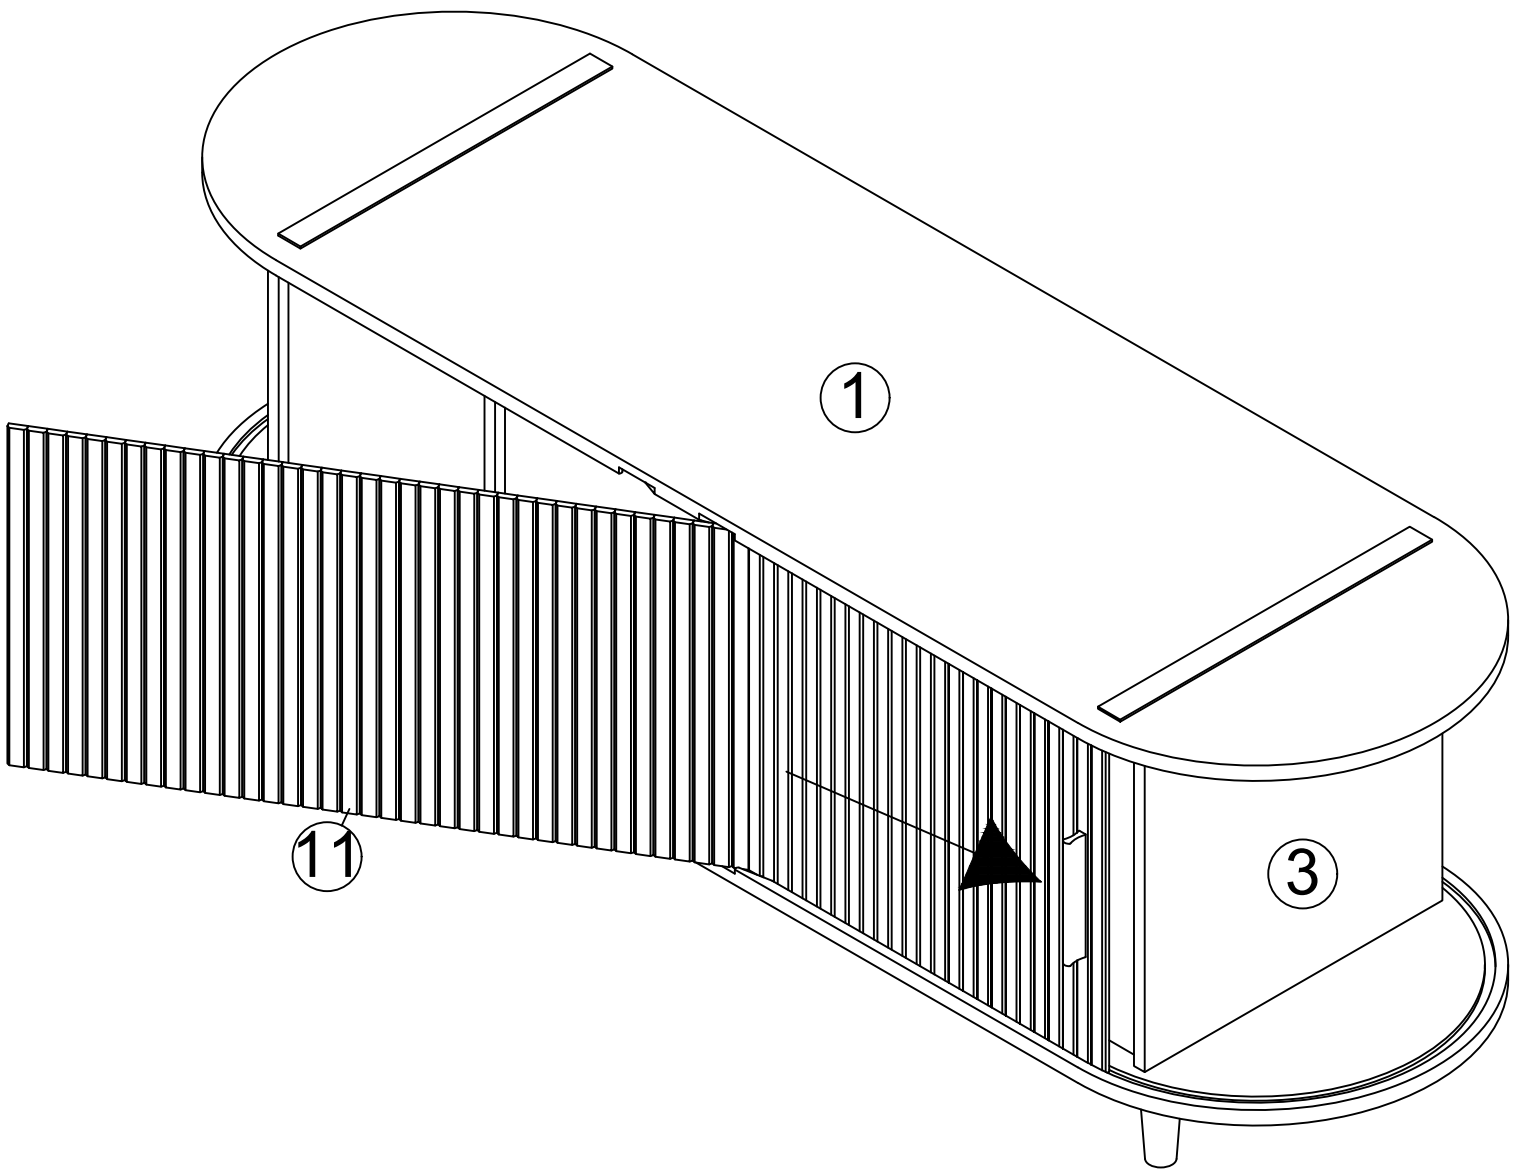


STEP14

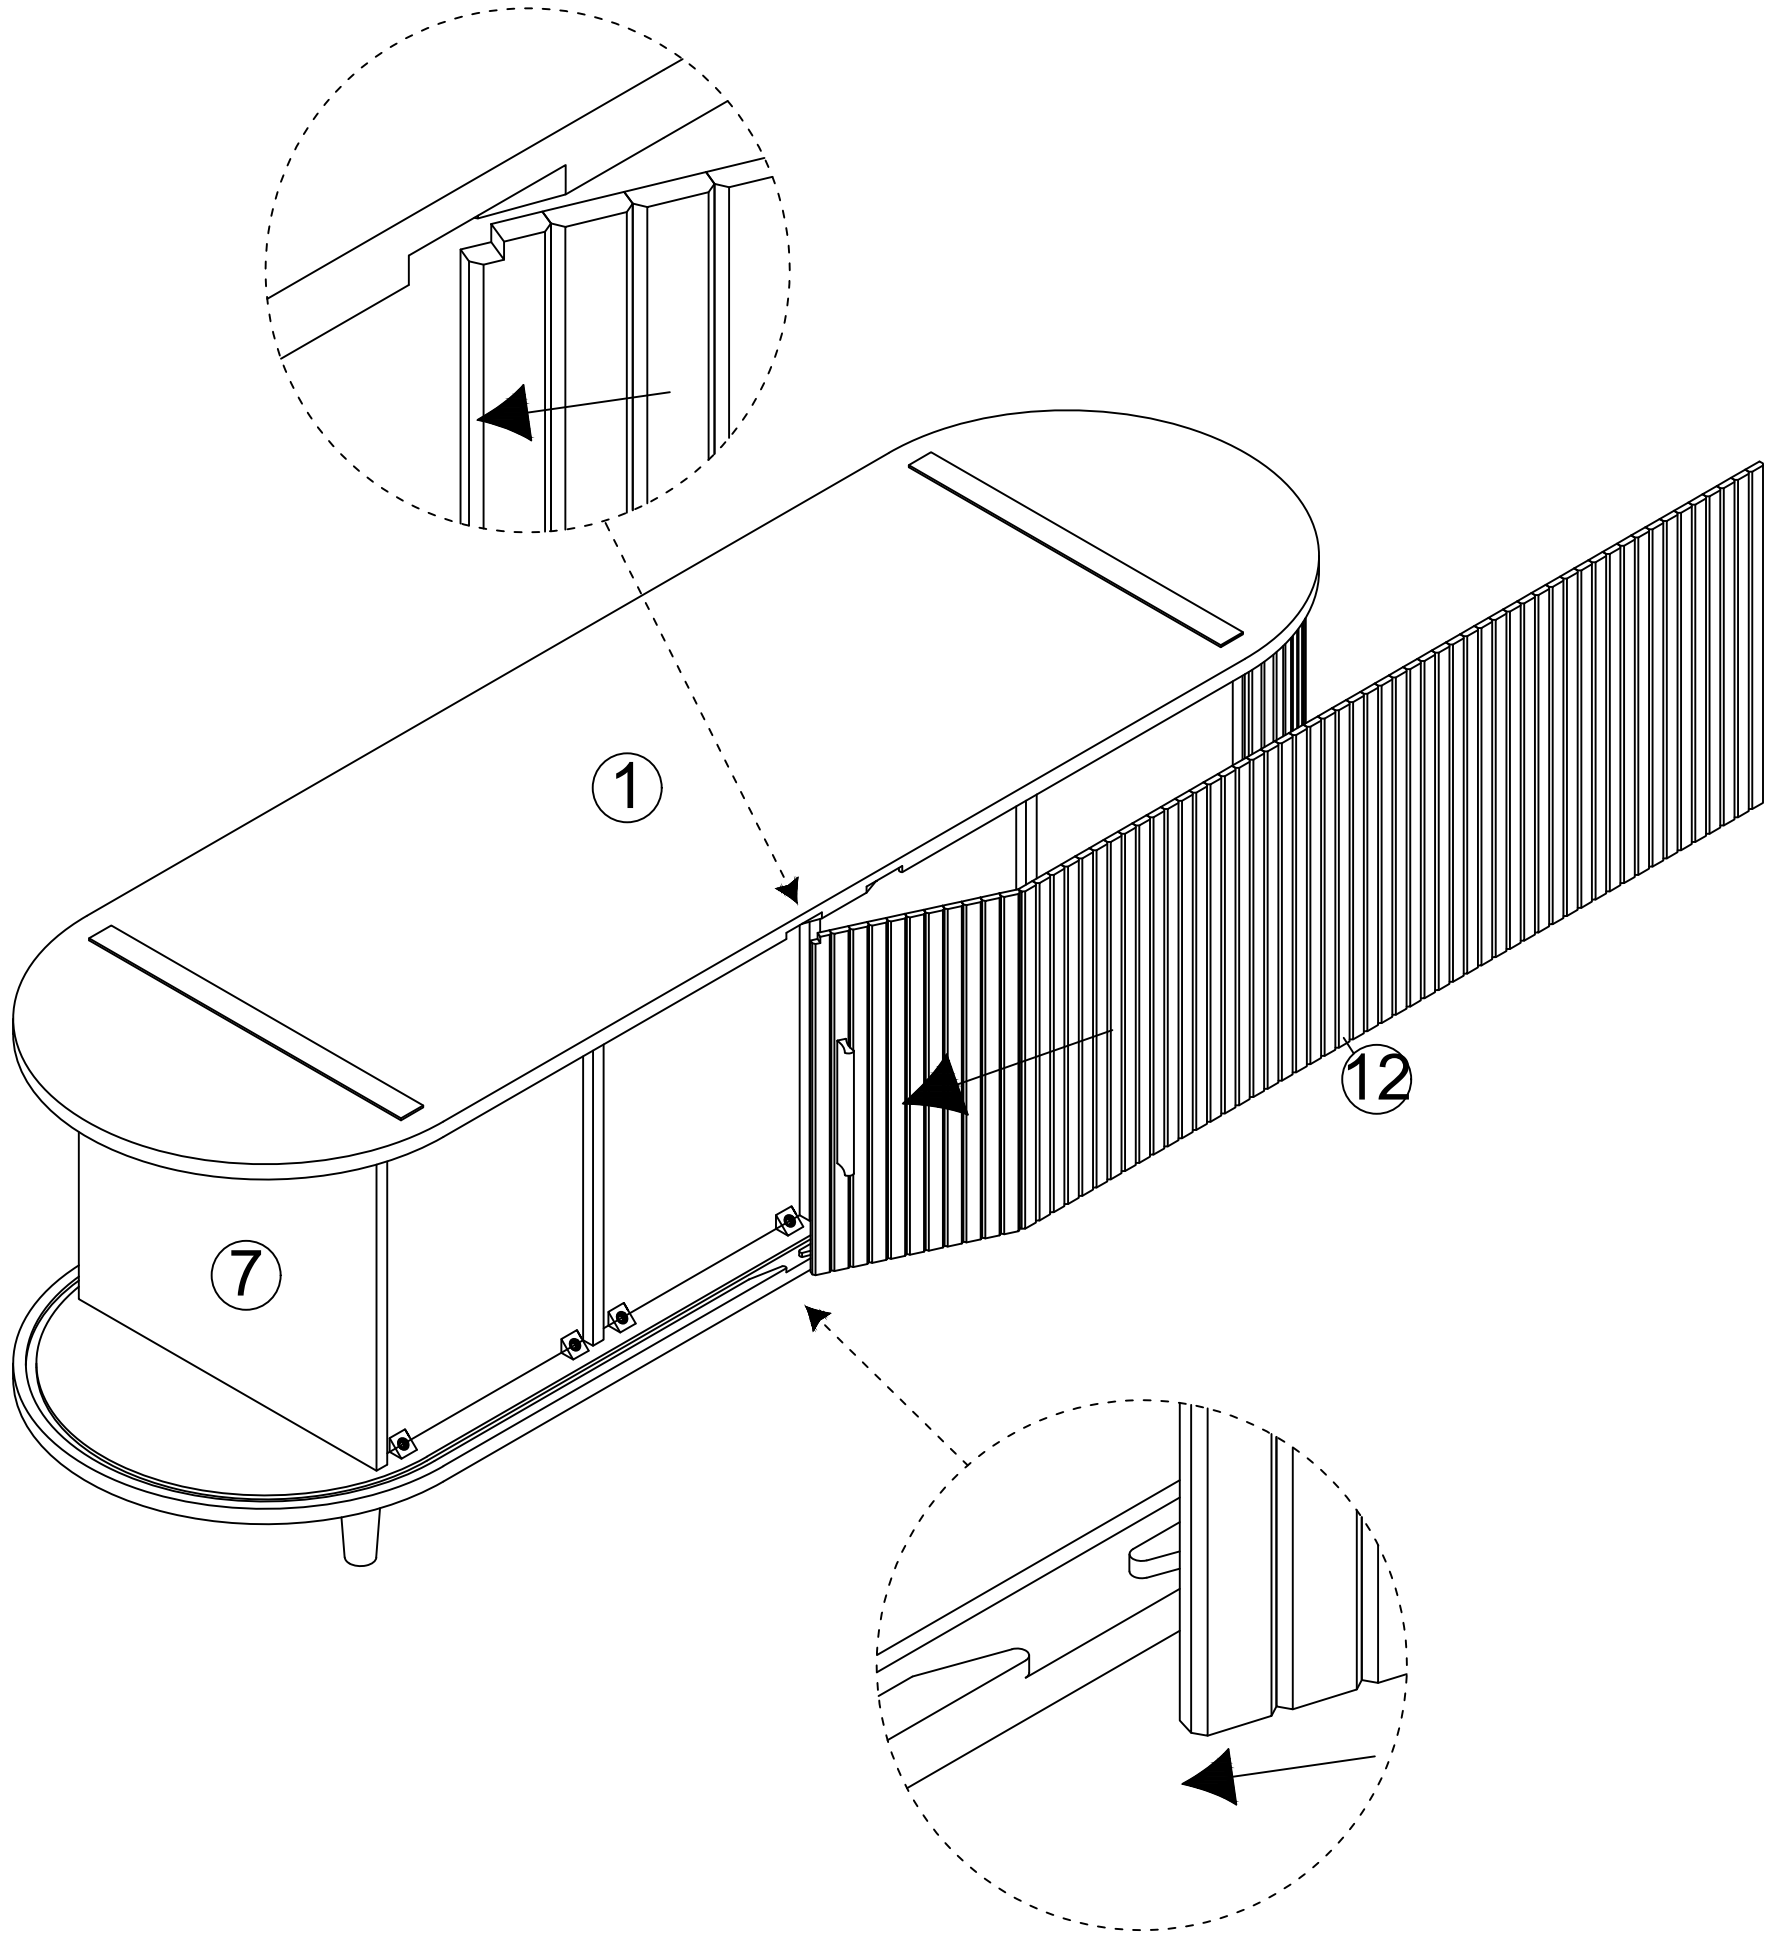


STEP15

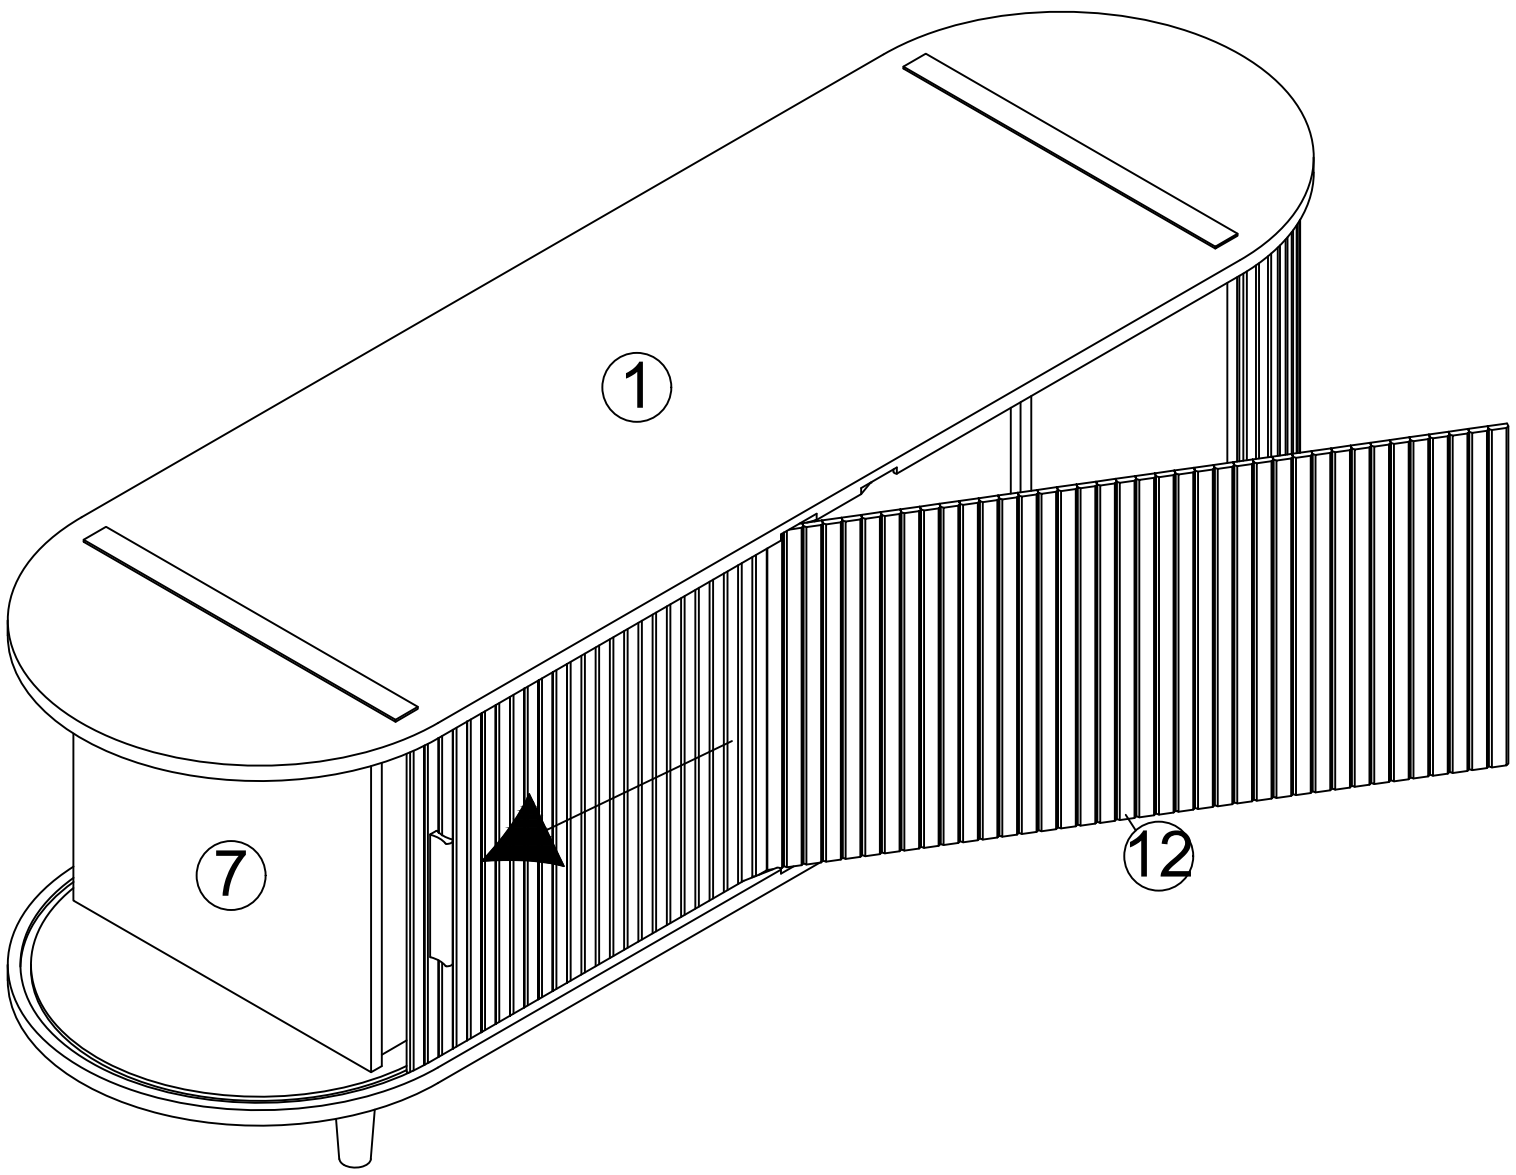

STEP16

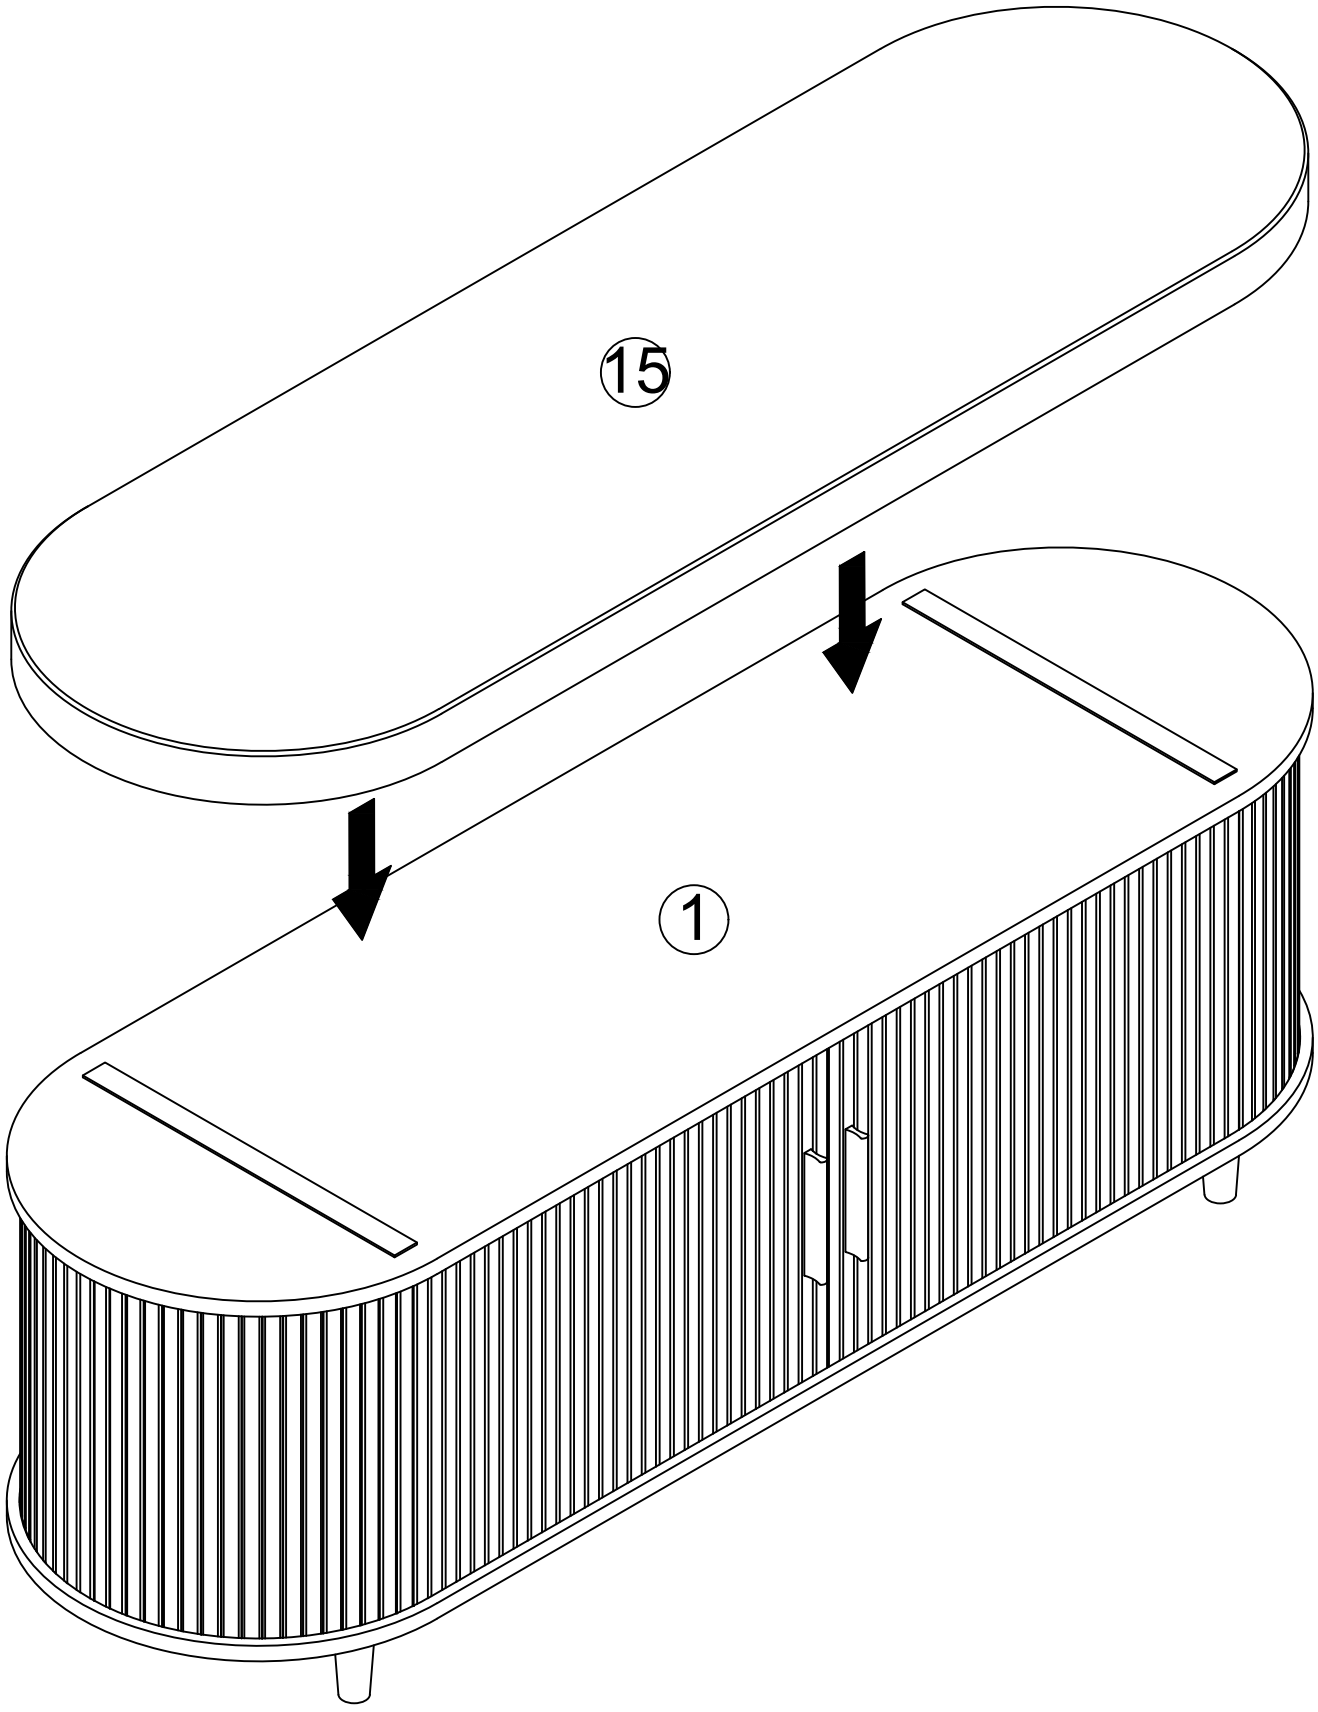

STEP17



K X18

