
LONA
Love Nature

INSTRUCTION MANUAL

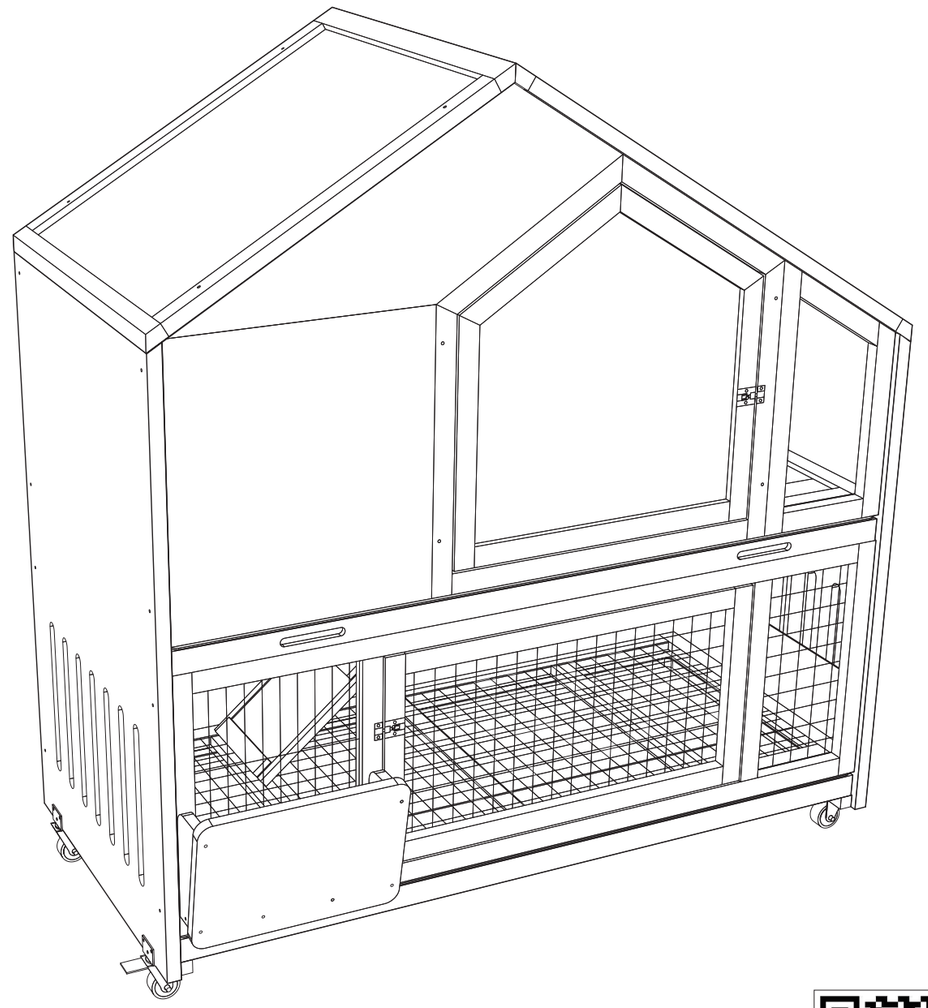

RABBIT HUTCH STYLE A

Scan the QR code to view the video tutorial

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

⚠ NOTICE

Please retain these instructions for future reference.

1. Firmly secure all bolts, screws and knobs before use.
2. Reconfirm that all bolts, screws and knobs are secure every 90 days.
3. Fasten screws loosely during initial assembly.
   Do not fully tighten screws until the item is completely assembled.
4. Do not use or store this item in the proximity of open flame or flammable chemicals.
5. Be aware that some parts are heavy and have sharp edges.
6. Be aware that moving parts can injure, crush and cut.
7. If any parts are missing, broken, damaged or worn, stop using this product until repairs are made.
8. Do not use this item in a way inconsistent with the manufacturer' s instructions as this could void the product warranty.

TOOLS REQUIRED



SCREWDRIVER



DRILL




2 PERSON ASSEMBLY




APPROXIMATELY 50MIN ASSEMBLY


PARTS LIST

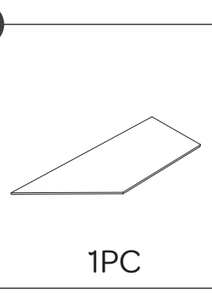


1 — 1PC

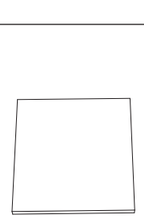


2 — 1PC

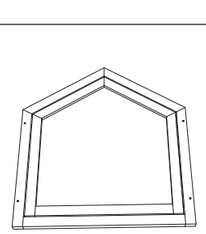


3 — 1PC




4 — 1PC




5 — 1PC




6 — 1PC




7 — 1PC




8 — 1PC

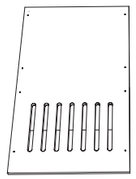


9 — 1PC

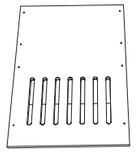


10 — 1PC




11 — 1PC




12 — 1PC

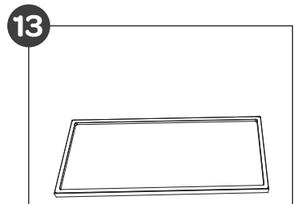


13 — 1PC

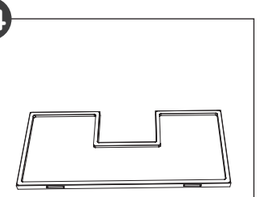


14 — 1PC

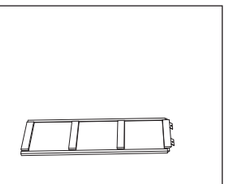


15 — 1PC

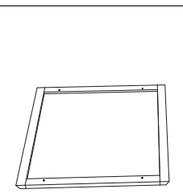


16 — 1PC

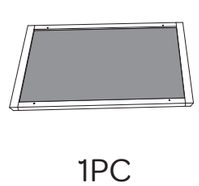


17 — 1PC

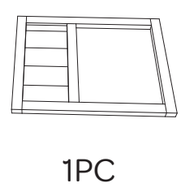


18 — 1PC

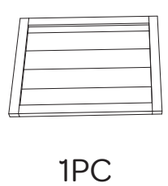

19 — 1PC

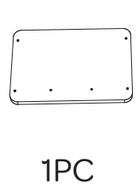


20 — 1PC

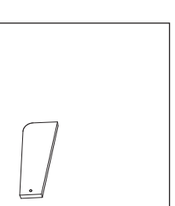


21 — 1PC



22 — 1PC

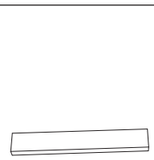


23 — 1PC

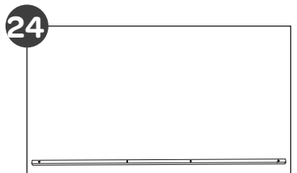


24 — 1PC




25 — 1PC



F — 2PCS

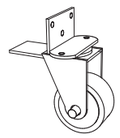


G — 2PCS



H — 2PCS


HARDWARE LIST

A — M3.5*50




11PCS

B — M3.5*40




36PCS

C — M3.5*30



12PCS

D — M3.0*16



30PCS

E — M6.0*20




30PCS

ASSEMBLY

STEP 1


- 7 ×1
- 8 ×1
- A ×4
- E ×6

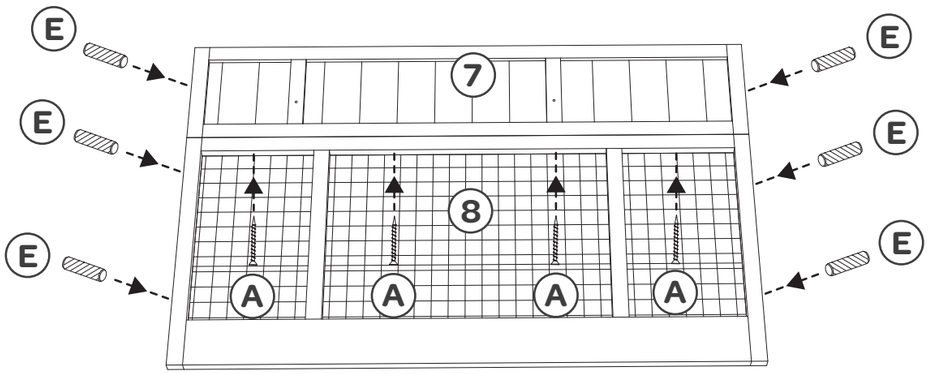

1. Insert 6 pcs of E wood cores into the side of the part 7 and 8 to facilitate subsequent positioning and fixation.
2. Attach the part 7 and 8 with 4 pcs of A screws.
   (Note: when fixing the part 7 and 8, the screw holes need to be aligned.)

STEP 2


- 6 ×1
- 9 ×1
- B ×4
- E ×3

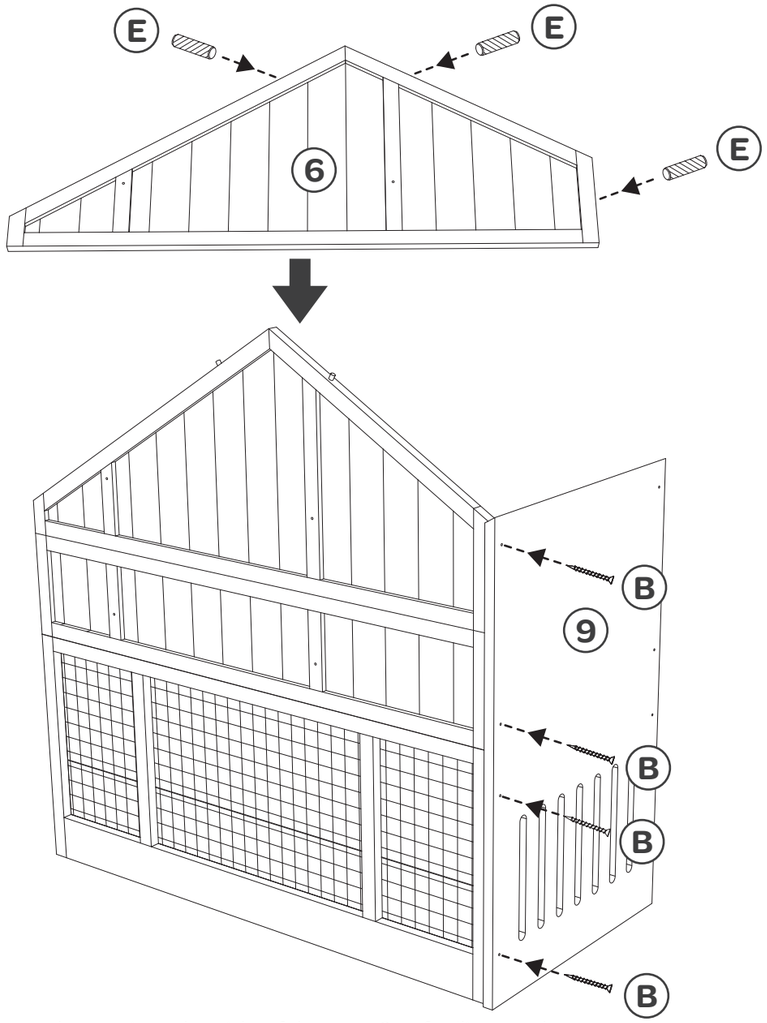

1. Insert 3 pcs of E wood cores into the side of the part 6 to facilitate subsequent positioning and fixation.
2. Overlay part 6 onto part 7.
3. Attach the part 9 to the part 6&7&8 with 4 pcs of B screws.

STEP 3


- 10 ×1
- B ×4

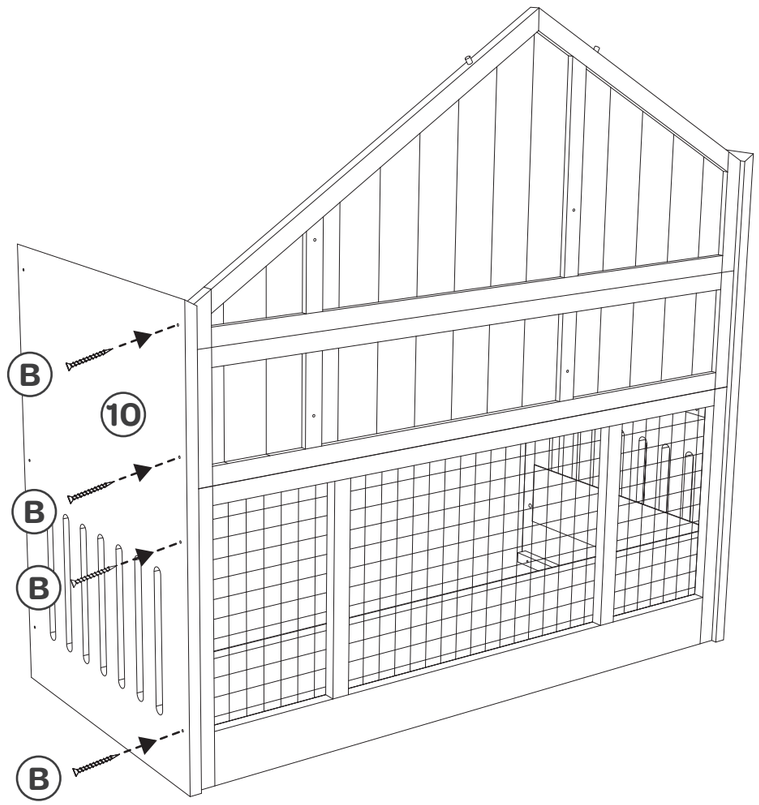

Attach the part 10 to the part 6&7&8 with 4 pcs of B screws.

STEP 4


- 5 ×1
- E ×4

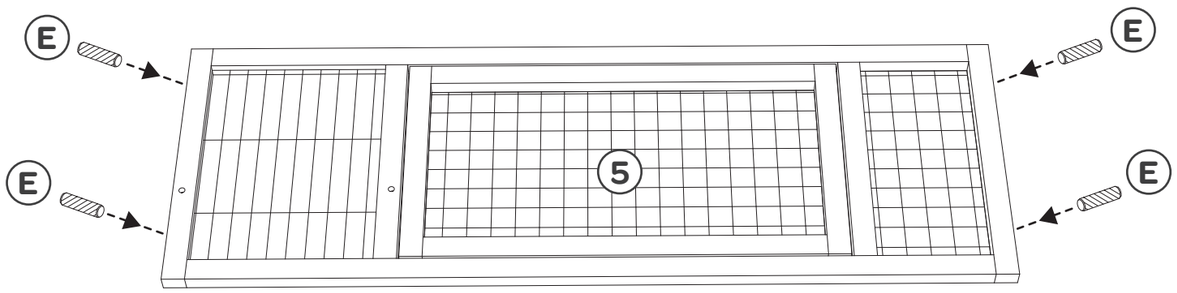

Insert 4 pcs of E wood cores into the side of part 5.

STEP 5


- 20 ×1
- 21 ×1
- 22 ×1
- C ×8
- E ×4

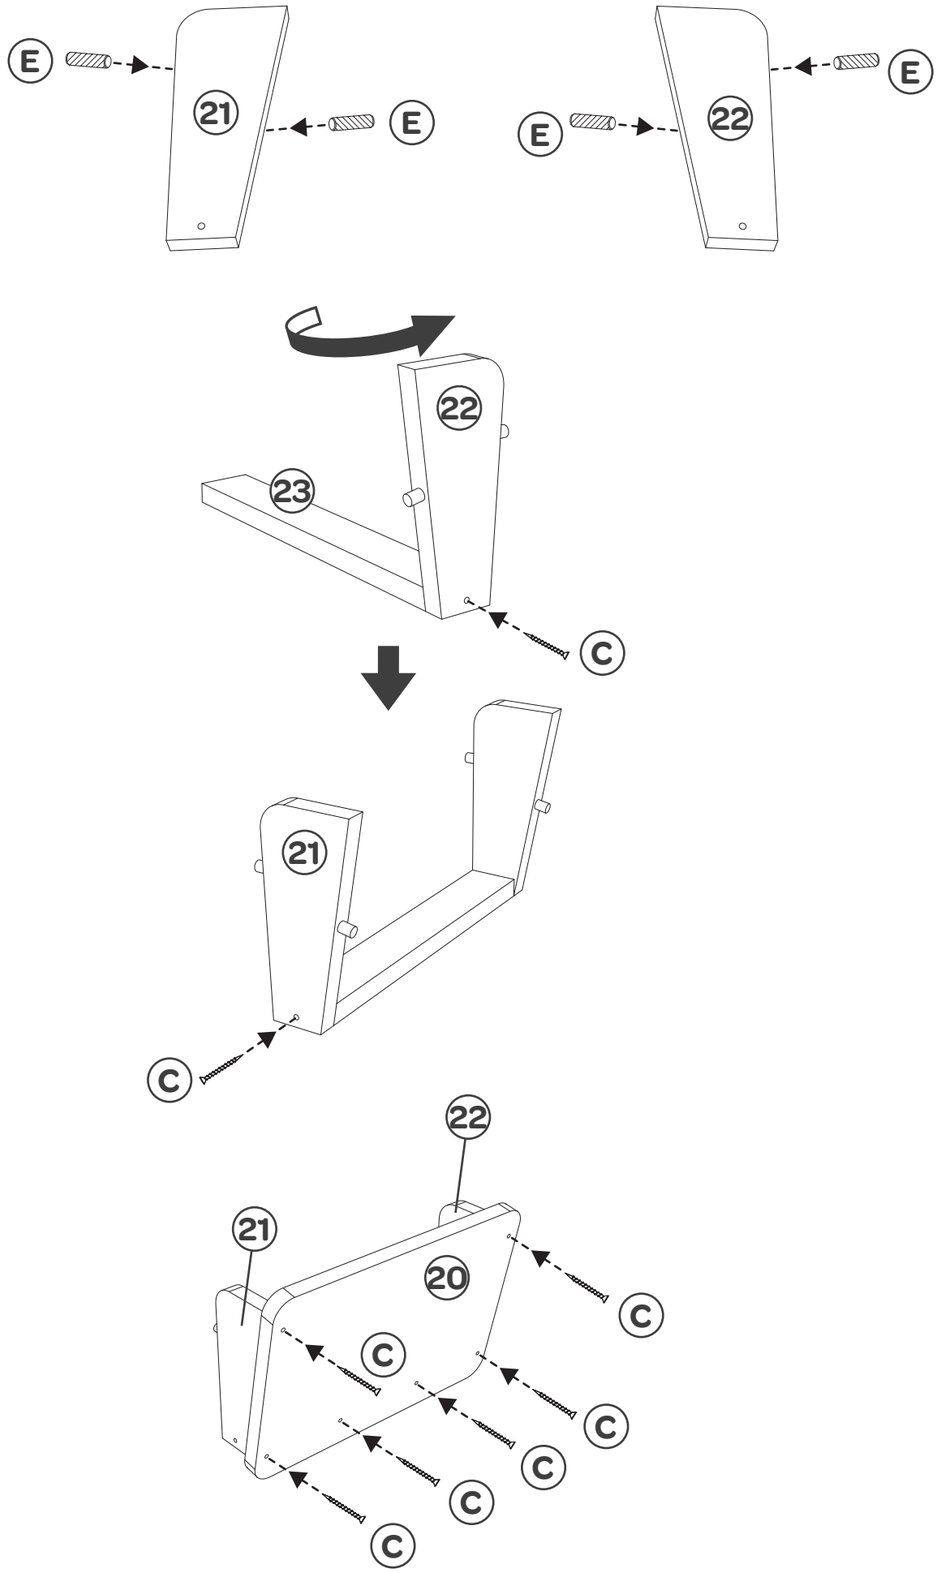


1. Insert 4 pcs of E wood cores into the side of component 21 and 22.
2. Fix component 20, 21, 22 and 23 with 8 pcs of C screws.

STEP 6

- 5 ×1
- B ×4

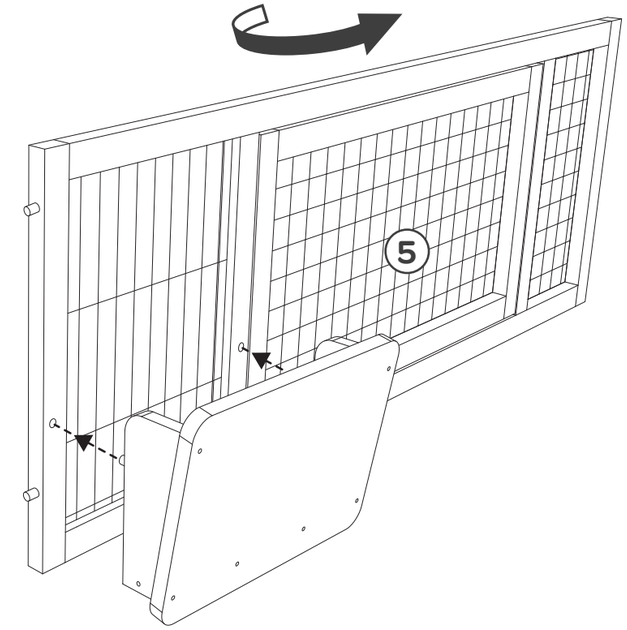

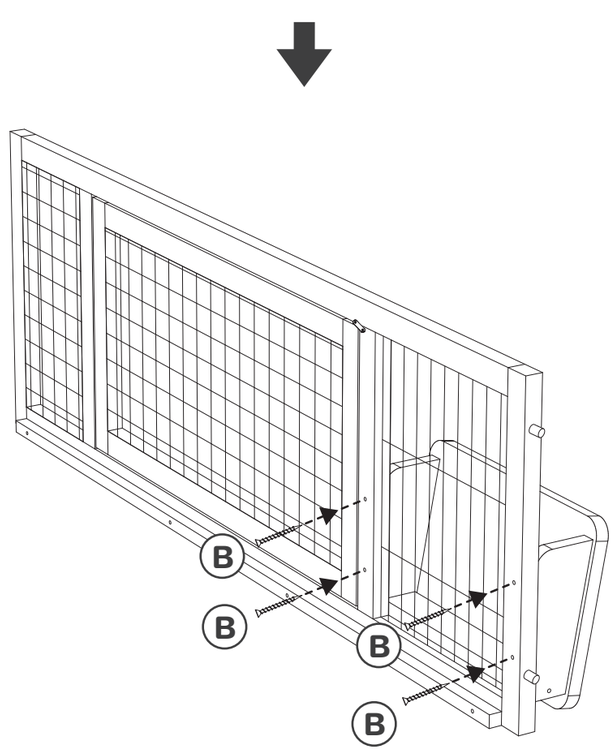


Attach the component to part 5 with 4 pcs of B screws.

STEP 7

5 ×1

B ×4

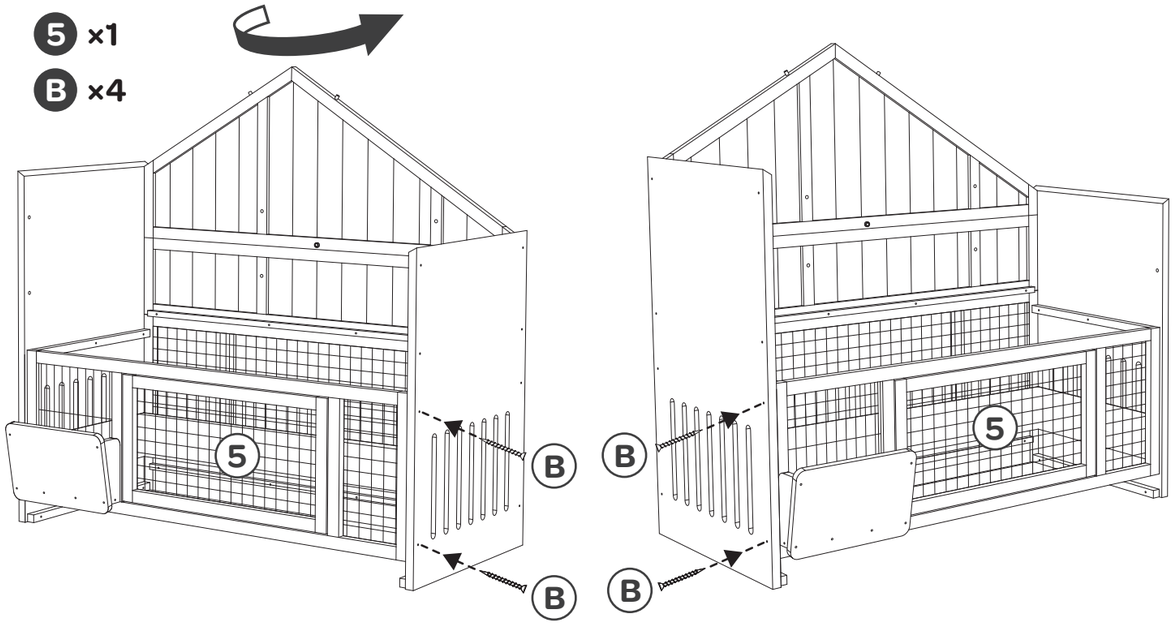


Attach the part 9 and 10 to the front panel 5 with 4 pcs of B screws.
(Note: Do not fully tighten the screws at this time. Tighten them in step 10.)

STEP 8

11 ×1

Note: the net side faces upward

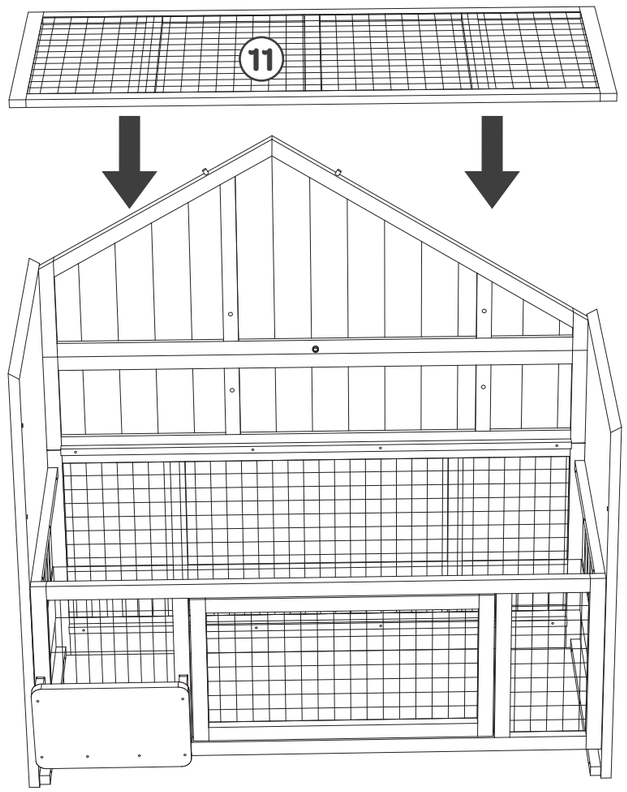

Place the part 11 at the bottom layer of the main body.

STEP 9

1 ×1

2 ×1

3 ×1


4 ×1


24 ×1

A ×7


C ×4

E ×5

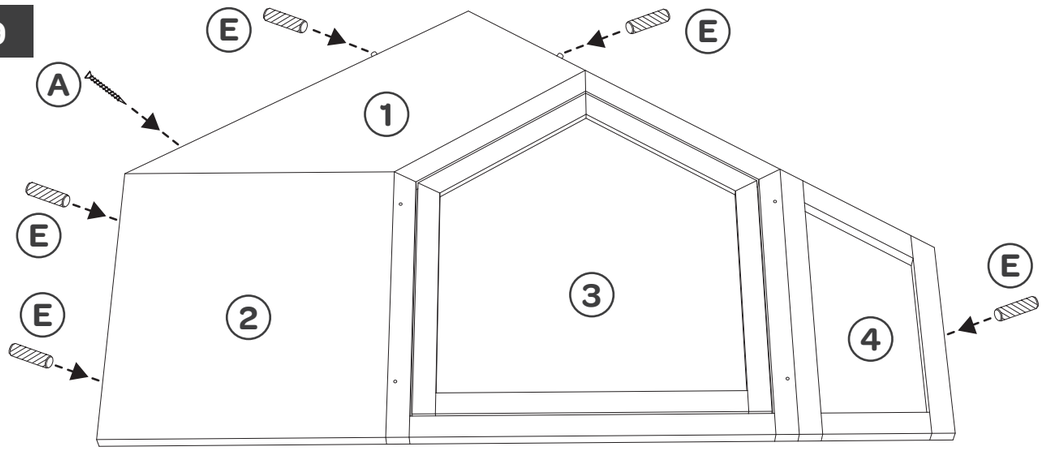

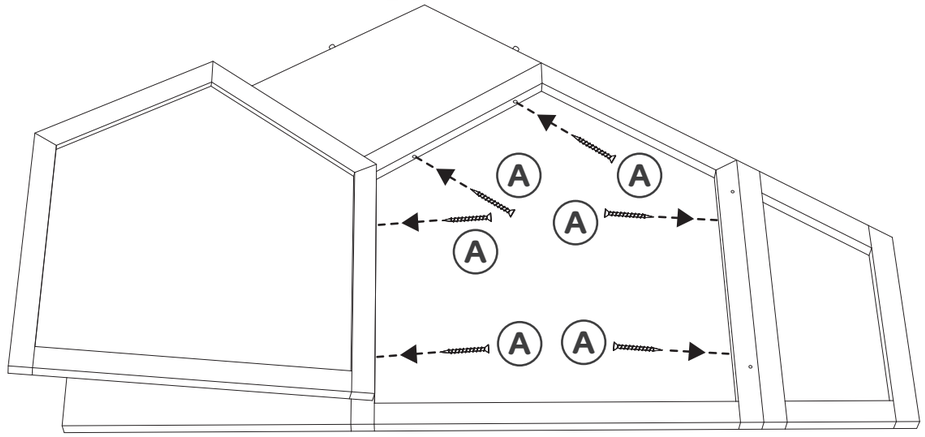


Note: bottom alignment, left and right center.

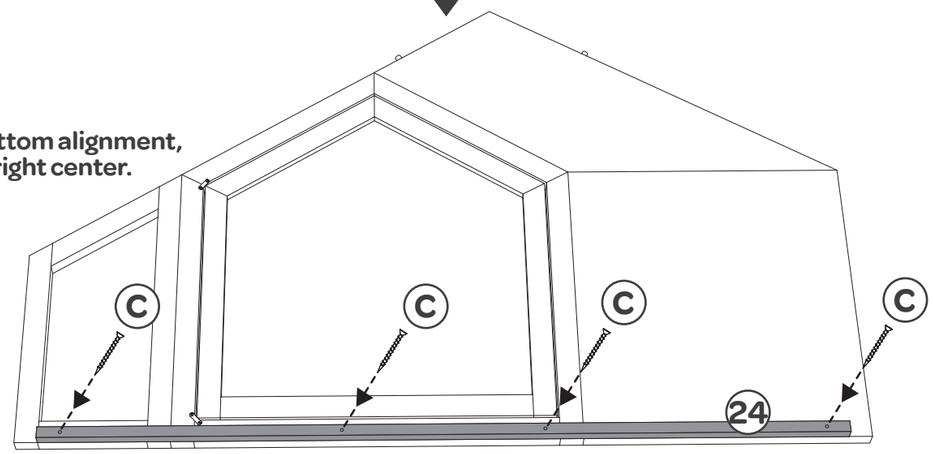

1. Insert 5 pcs of E wood cores into the side of part 1,2 and 4.
2. Attach the part 1 to the panel with 1 pcs of A screw.
3. Attach the part 3 to the panel with 6 pcs of A screws.
4. Attach the part 24 to the panel with 4 pcs of C screws.

STEP 10

B ×4

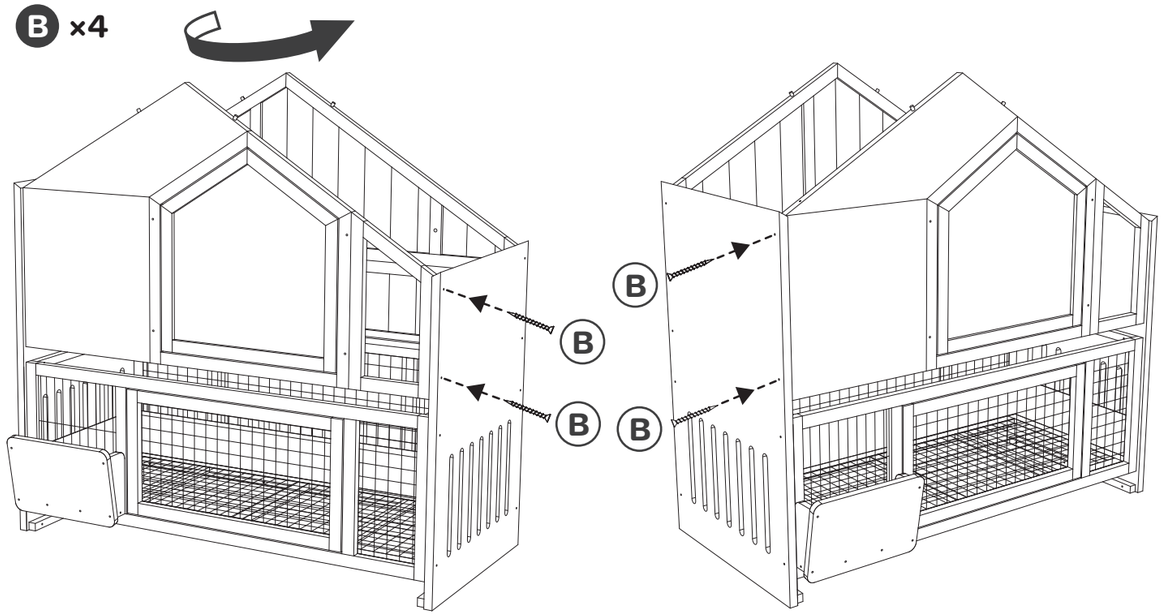


Attach the part 9 and 10 to the entire panel with 4 pcs of B screws.
(Note: Tighten all the screws in step 7 together.)

STEP 11

12 ×1

Note: the net side faces upward

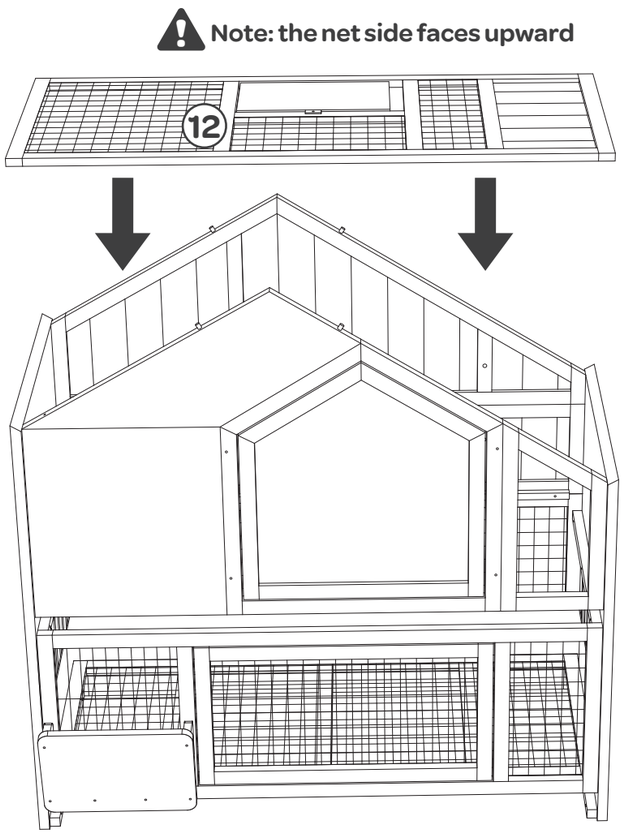


Place the part 12 in the middle layer of the main body.

STEP 12

15 ×1

D ×2

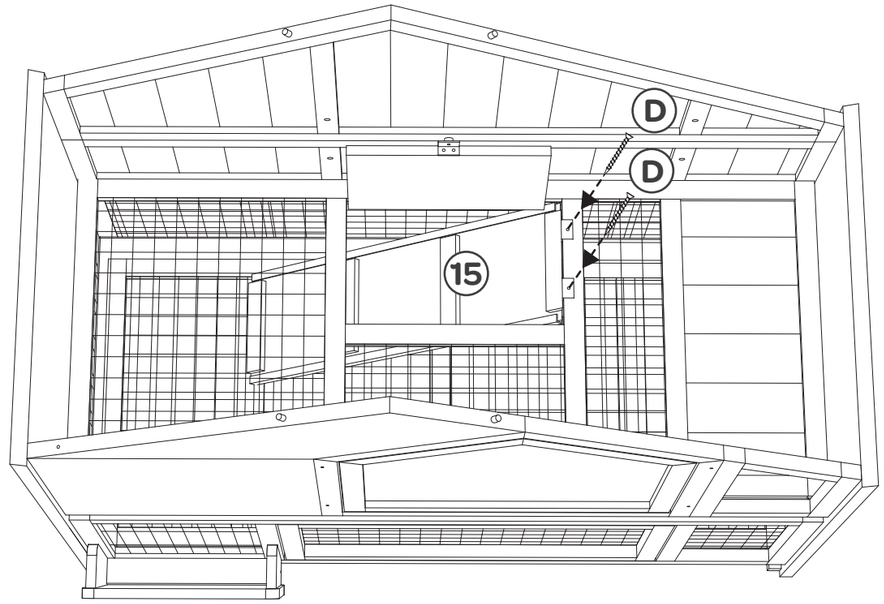


Put the ramp 15 inside and fix with 2 pcs of D screws.

STEP 13

18 ×1

19 ×1


E ×4

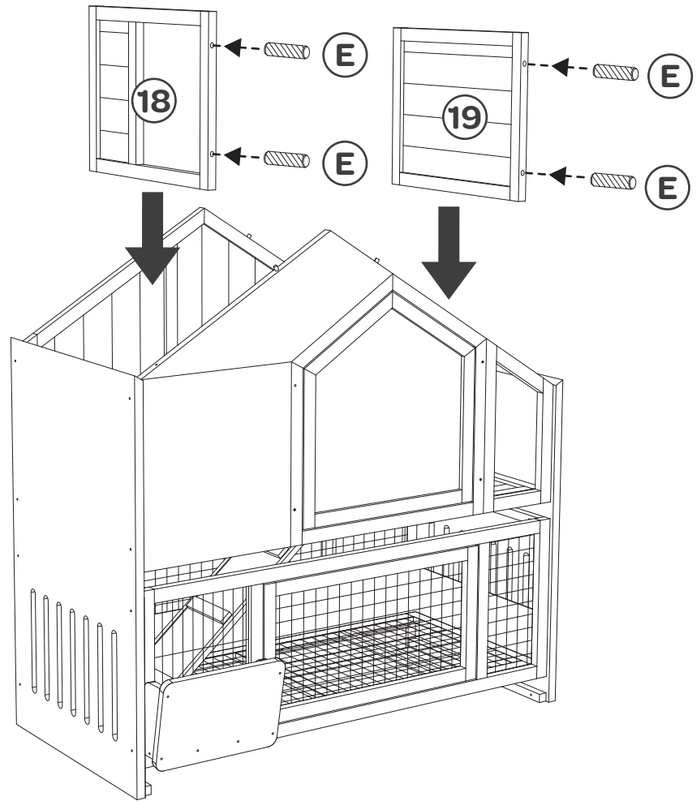

1. Insert 4 pcs of E wood cores into the side of part 18 and 19.
2. Place the part 18 and 19 into the main body.

STEP 14

B ×8

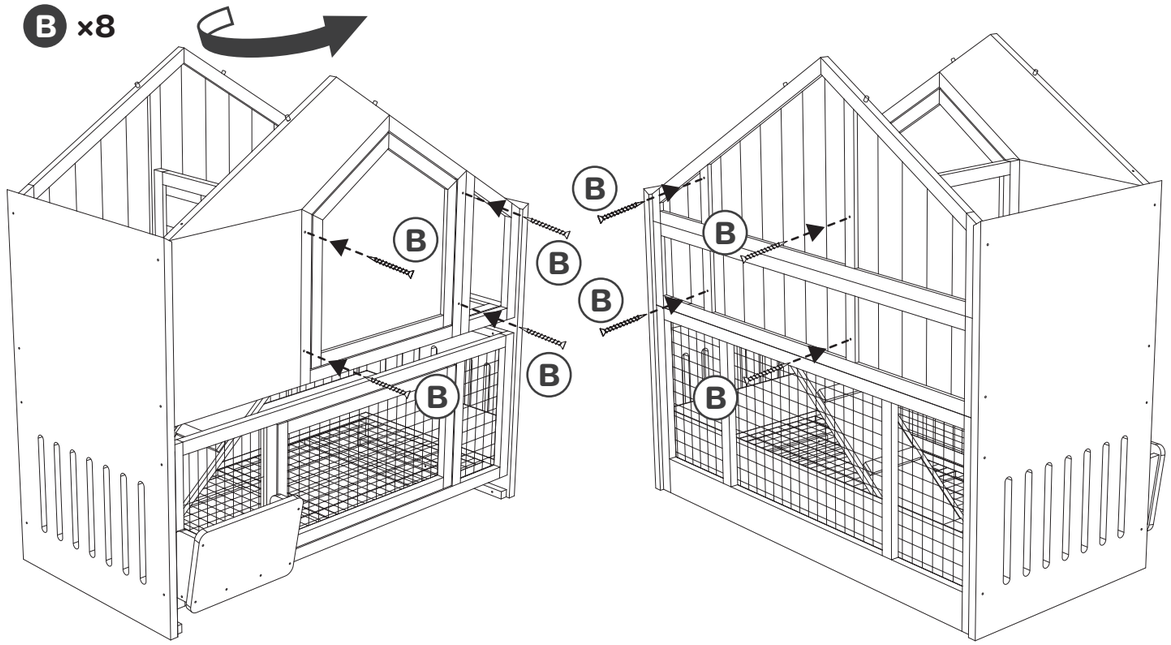


Attach the part 18 and 19 to the both panels with 8 pcs of B screws.

STEP 15

16 ×1

17 ×1

B ×8

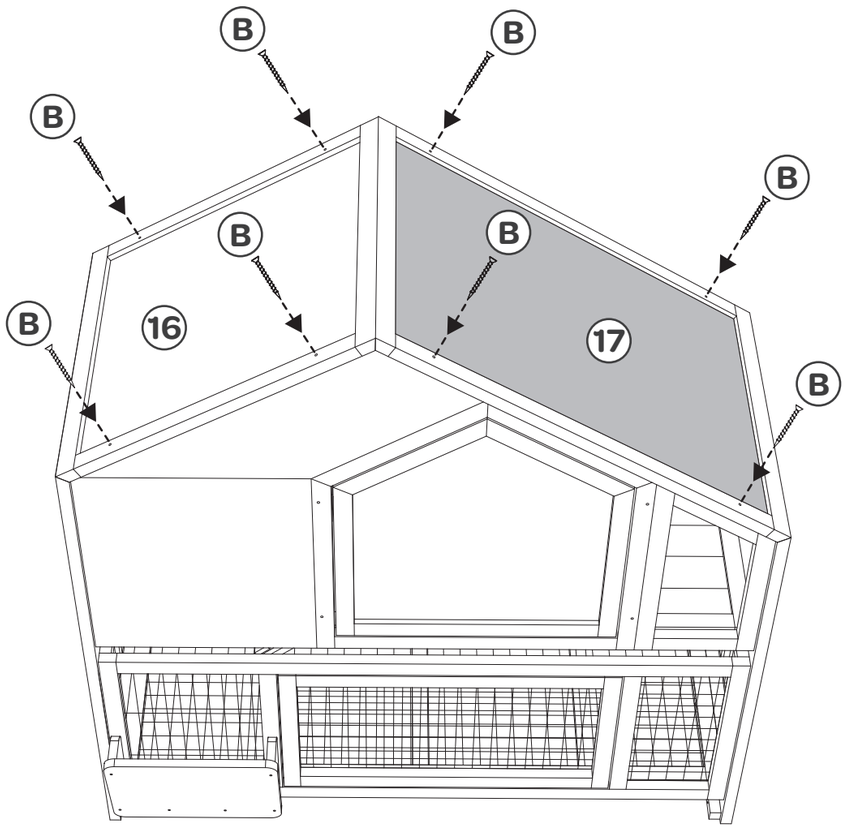


Attach roof part 16 and 17 with 8 pcs of B screws.

STEP 16

13 ×1

14 ×1

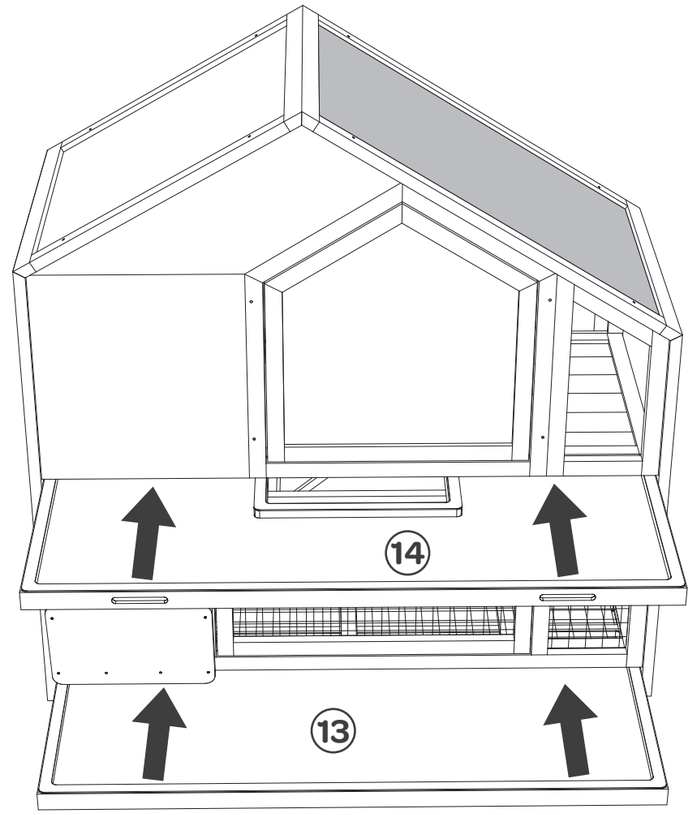



Slide in two trays 13 and 14.

STEP 17

F ×2

D ×8

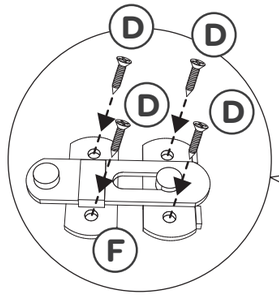

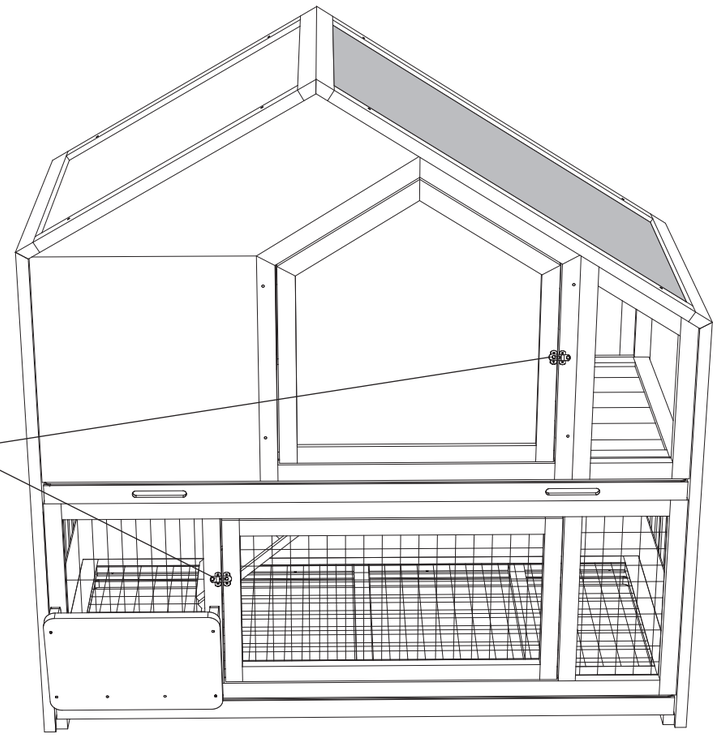


Attach 2 pcs of F door latches on the doors with 8 pcs of D screws.

STEP 18

G ×2

H ×2


D ×20

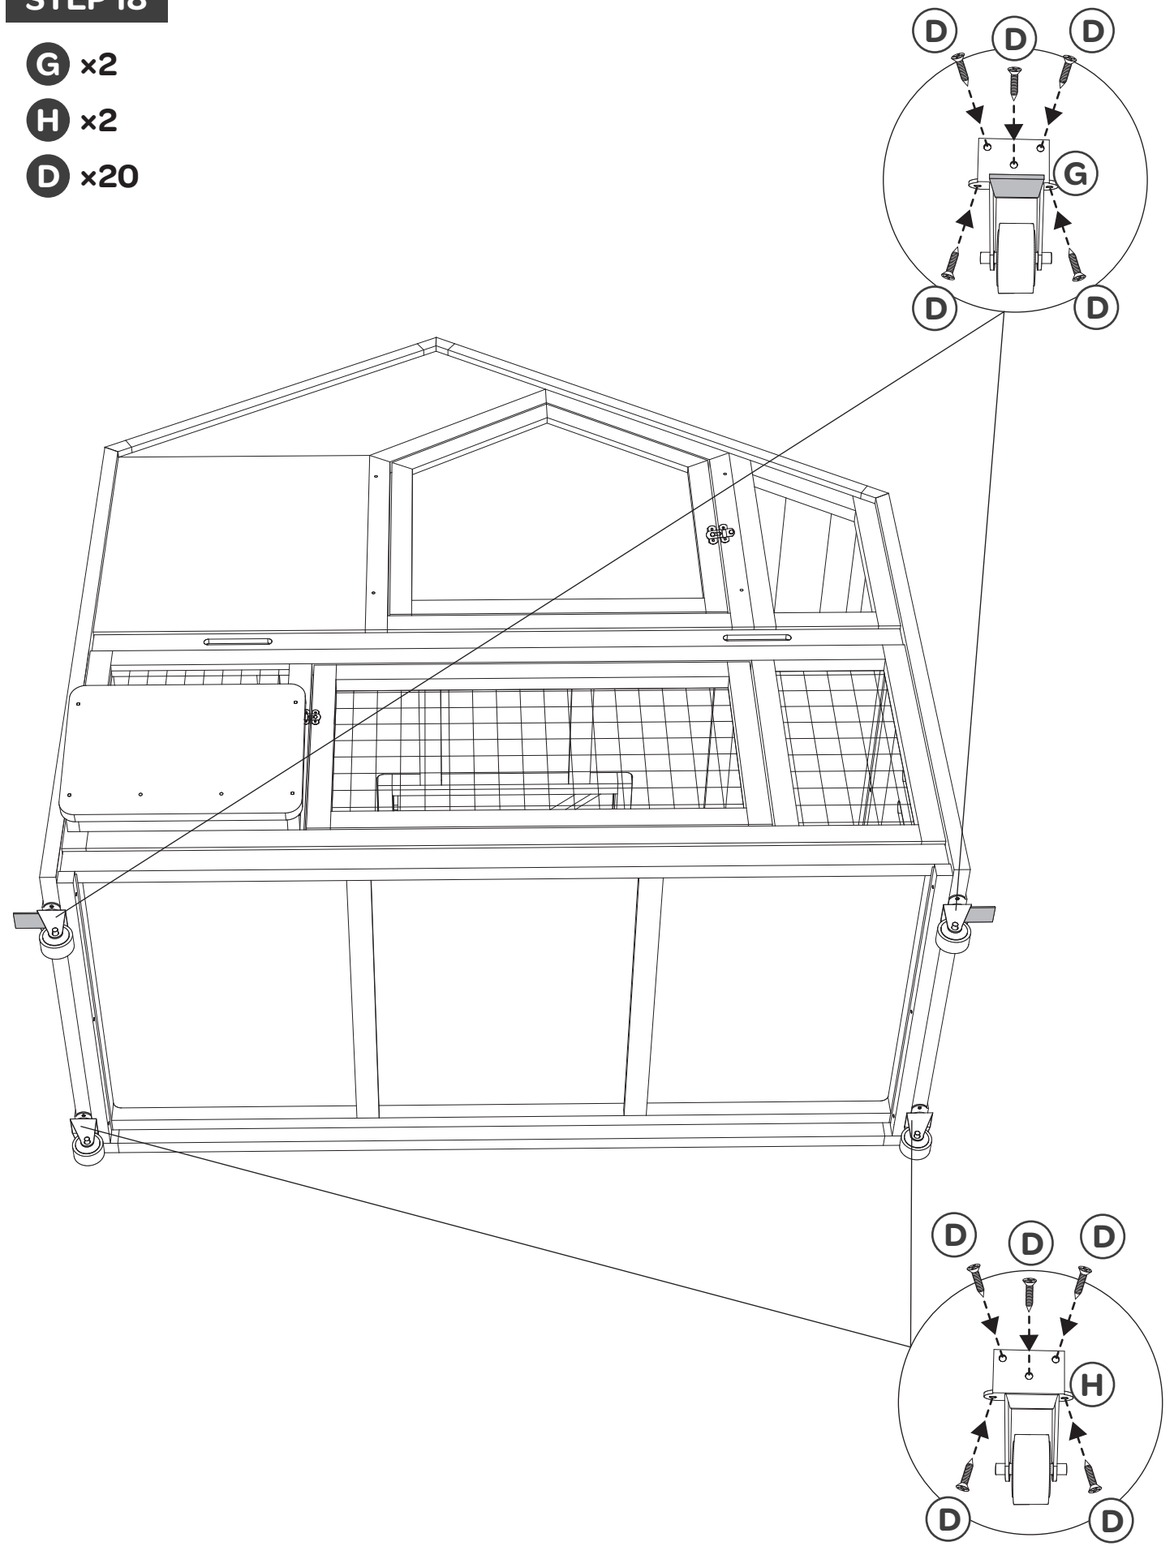

1. Attach 2 pcs of G brake casters on the bottom of the front side with 10 pcs of D screws.
2. Attach 2 pcs of H casters without brake on the bottom of the back side with 10 pcs of D screws.

STEP 19

25 ×1

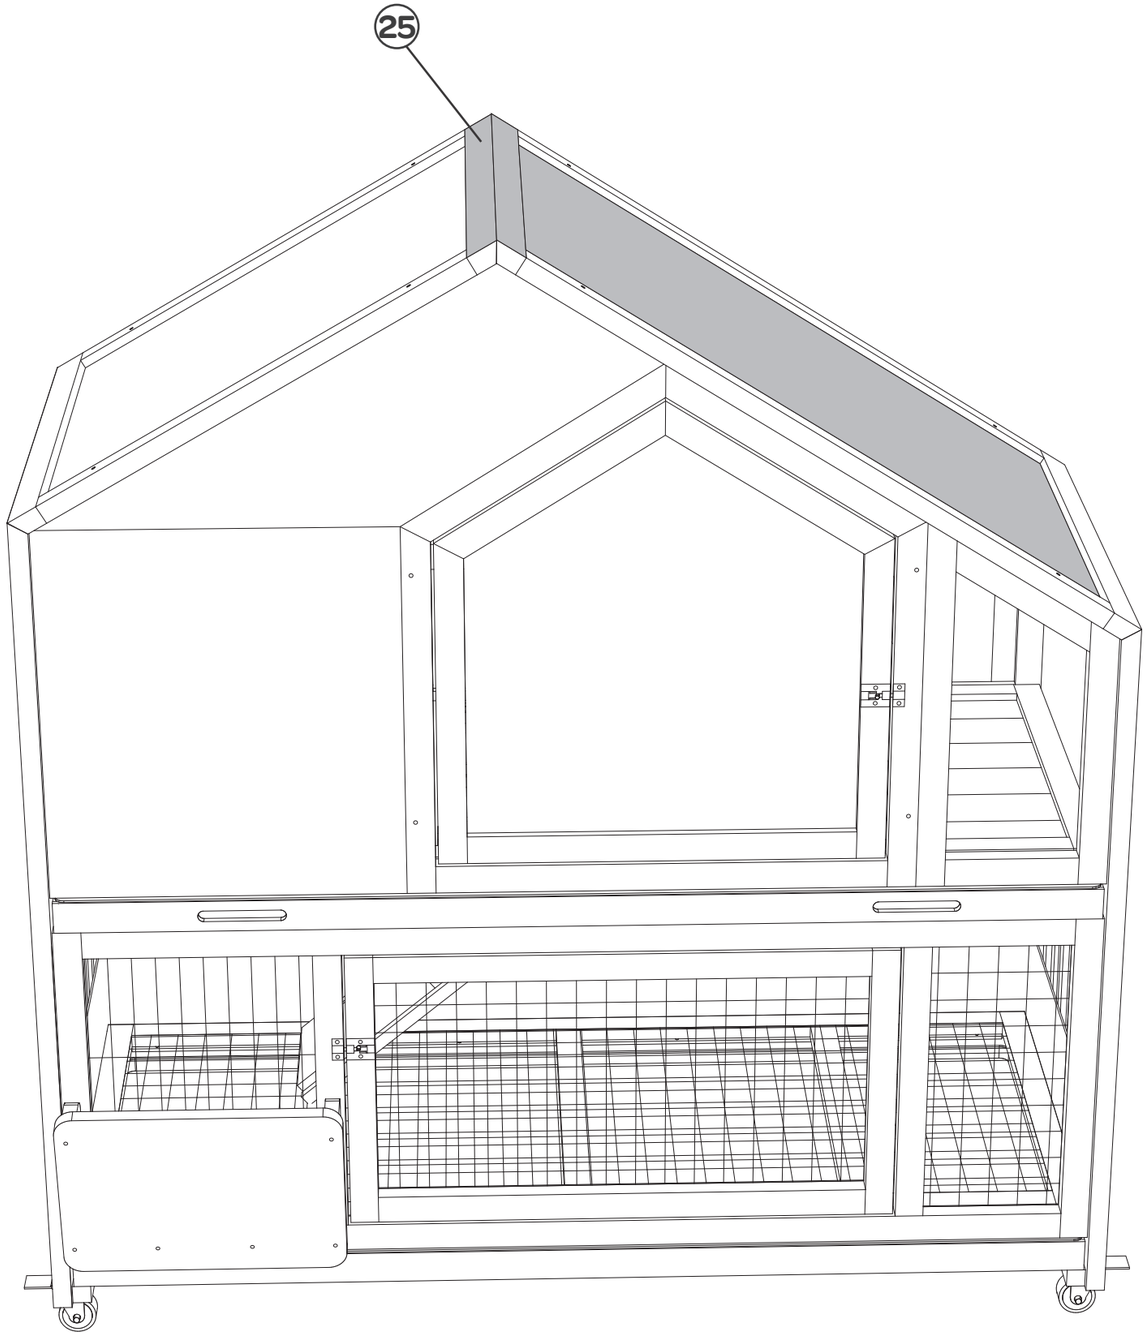

1. Place roof covering Part 25.
2. Congratulations on your completion!