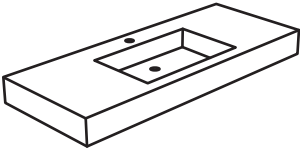






PRODUCT ASSEMBLY INSTRUCTIONS

[Product Model: FS140-1200]

List :


			
Solid Surface Bathroom Sink x1	Support x2	Expansion Bolt x8	

Tools Required :

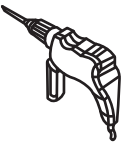						
Hammer	Pencil	Wrench	Electrodrill	Gradienter	Steel tape	

Installation steps : 1


Measure the distance of the mounting holes, and the height you want, mark with the pencil.
(33"-36" is preferred for countertop height).

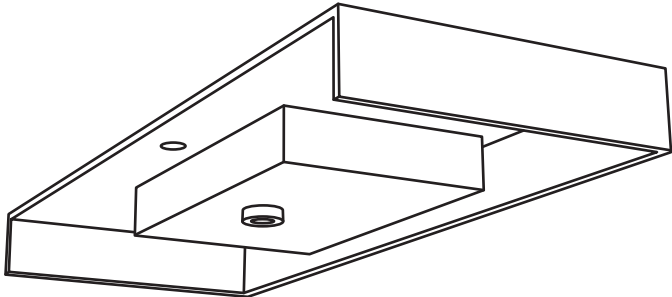

[The back of the product]


Installation steps : 2

Drill the hole at the mark with electric drill.

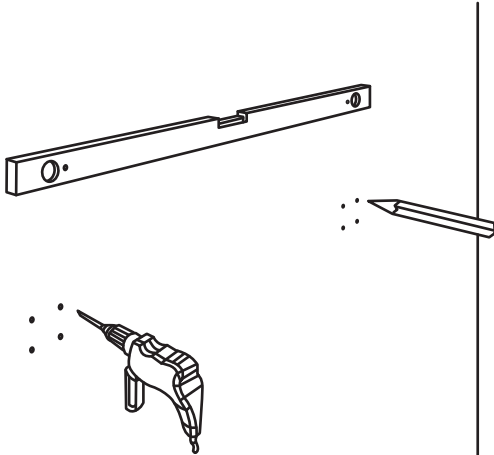

Installation steps : 3

Insert the wall plug and mount screws into the wall. Install the brackets. Put some glue on the surface of brackets.

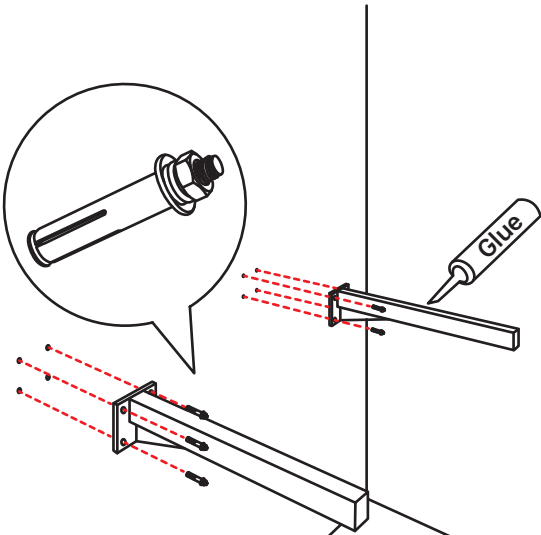

Installation steps : 4

Install the product onto the stand.
⚠ Before installing your bathroom sink, make sure the brackets are secure.

