



by Stevens Industries, Inc.
704 West Main St.
Teutopolis, IL 62467
P: 800.350.3270
P: 217-857-7100
F: 217-857-7101
www.totmate.com

TM2264R

Double Door Tall Teacher Storage

2-PERSON ASSEMBLY RECOMMENDED



CAUTION – CHOKING HAZARD
Adult assembly required due to presence of small parts and sharp edges.



HARDWARE BAG# 0563-3306

NOTE:

Refer to exploded drawing for orientation of holes to parts.

ATTENTION

Please unpack and assemble in an area away from children's activities. Remove all tools and excess materials from work area after assembly of unit is complete. Dispose of pallet and packaging materials in an environmentally friendly manner. If any parts are missing or damaged, please call Stevens for immediate parts replacement (1-800-350-3270). When ordering parts, give the Model Number and Color of the unit.

IMPORTANT!


Be sure to keep all parts supported during assembly to avoid damage. Do not over-tighten bolts or it will damage the pre-drilled holes. Snug fit is adequate. Assembly must be securely attached to building structure with anchoring devices of appropriate type, size and quantity in accordance with applicable codes and accepted installation practices.

PARTS for TM2264R


ITEM	QTY	DESCRIPTION
1	1	End R
2	2	Top-Bot
3	1	End L
4	1	Back
5	2	Shelf Adjustable
6	1	Door L
7	1	Door R
8	2	Stringer
9	1	Shelf Fixed
10	1	Lock Deadbolt NI w/Bezel SIAM
11	1	Lock Core NI SIAM #001
12	1	Lock Catch - Strike Plate Lock
13	4	Screw Tapp PhFI Zinc #7 X .875
14	2	Screw Tapp PhTr Zinc #8 X .62
15	4	Bumper Press-In 8 x 2.5mm Head
16	1	Catch Plate Door, Black
17	2	Screw Tapp PhFI Zinc #8 X .68
18	6	Hinge Blum F/O 120 S/C Dowel
19	6	Hinge Mtg Plate Blum 0mm
20	2	Pull 128mm Advtg Bntwr MtNi
21	4	Screw Mach PhTr Zinc 8-32x1.00
22	8	Clip Shlf Clr Twin Pin 3/4-1"
23	12	Screw Conn HxDc Ni 7mmx 50mm
24	2	Screw Tapp PhWh Zinc #8 X 1.25

- STEP 1:** Lay **Fixed Shelf (9)** on the floor with the side having the most holes facing up and attach **Lock Strike Plate (12)** with 2 **Screws (14)** and secure with a screwdriver.
- STEP 2:** Lay **Left End (3)** on floor with the side having the most holes facing up, attach **Hinge Mtg Plate (19)**. (Toekick holes will be at the bottom of unit)
- STEP 3:** Insert **Top & Bottom (2)**, and **Fixed Shelf (9)** into holes on end as shown (Tab must be down).
- STEP 4:** Slide back into grooves on top and bottom.
- STEP 5:** Insert **Rails (8)** into end.
- STEP 6:** Position **Right End (1)** on top so that the dowels match holes on end panel.
- STEP 7:** Secure end panel with **Screw (23)** and **Hex Wrench**. Carefully flip unit over and repeat Step 6.
- STEP 8:** Stand unit upright when complete.
- STEP 9:** Secure **Back (4)** with **Screws (24)** and tighten with a screwdriver.
- STEP 10:** Lay **Doors (6 & 7)** on floor with the side having the most holes facing up.
- STEP 11:** Attach the **Hinge (18)** to the **Doors (6 & 7)** by positioning hinge over holes on door & use rubber mallet to knock in.
- STEP 12:** Attach Doors to cabinet by sliding **Hinge (18)** over **Mtg Plate (19)**. Once in position, tighten screws on mounting plates.
- STEP 13:** Attach **Door Pull (20)** by inserting **Screws (21)** through the back side of **Doors**, into the threaded **Door Pull**, and tighten with screwdriver.

- STEP 14:** Insert **Lock (10)** into **Door (7)** under the pull as shown and secure with four **Screws (17)**. Tighten with screwdriver.
- STEP 15:** Insert **Press In Bumper (15)** into the top and bottom corner of both doors.
- STEP 16:** Attach **Door Catch Plate (16)** to **Left Door (6)** with two **Screws (17)**, and tighten with screwdriver.
- STEP 17:** Insert eight **Shelf Clips (22)** into desired locations, and snap **Adjustable Shelves (5)** into place.

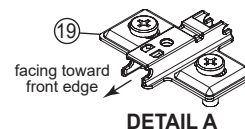

DETAIL A

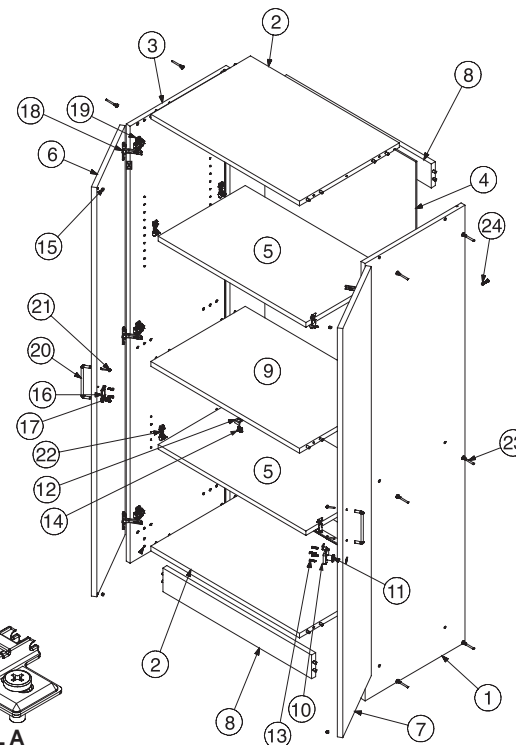

HARDWARE / TOOLS INCLUDED

(Phillips screwdriver required but not included)

