


ASSEMBLY INSTRUCTIONS


1
17
8
18
6
7
10
4
3
5
9
2
15
13
14
16
11
15
13
14
16
12


1 x2

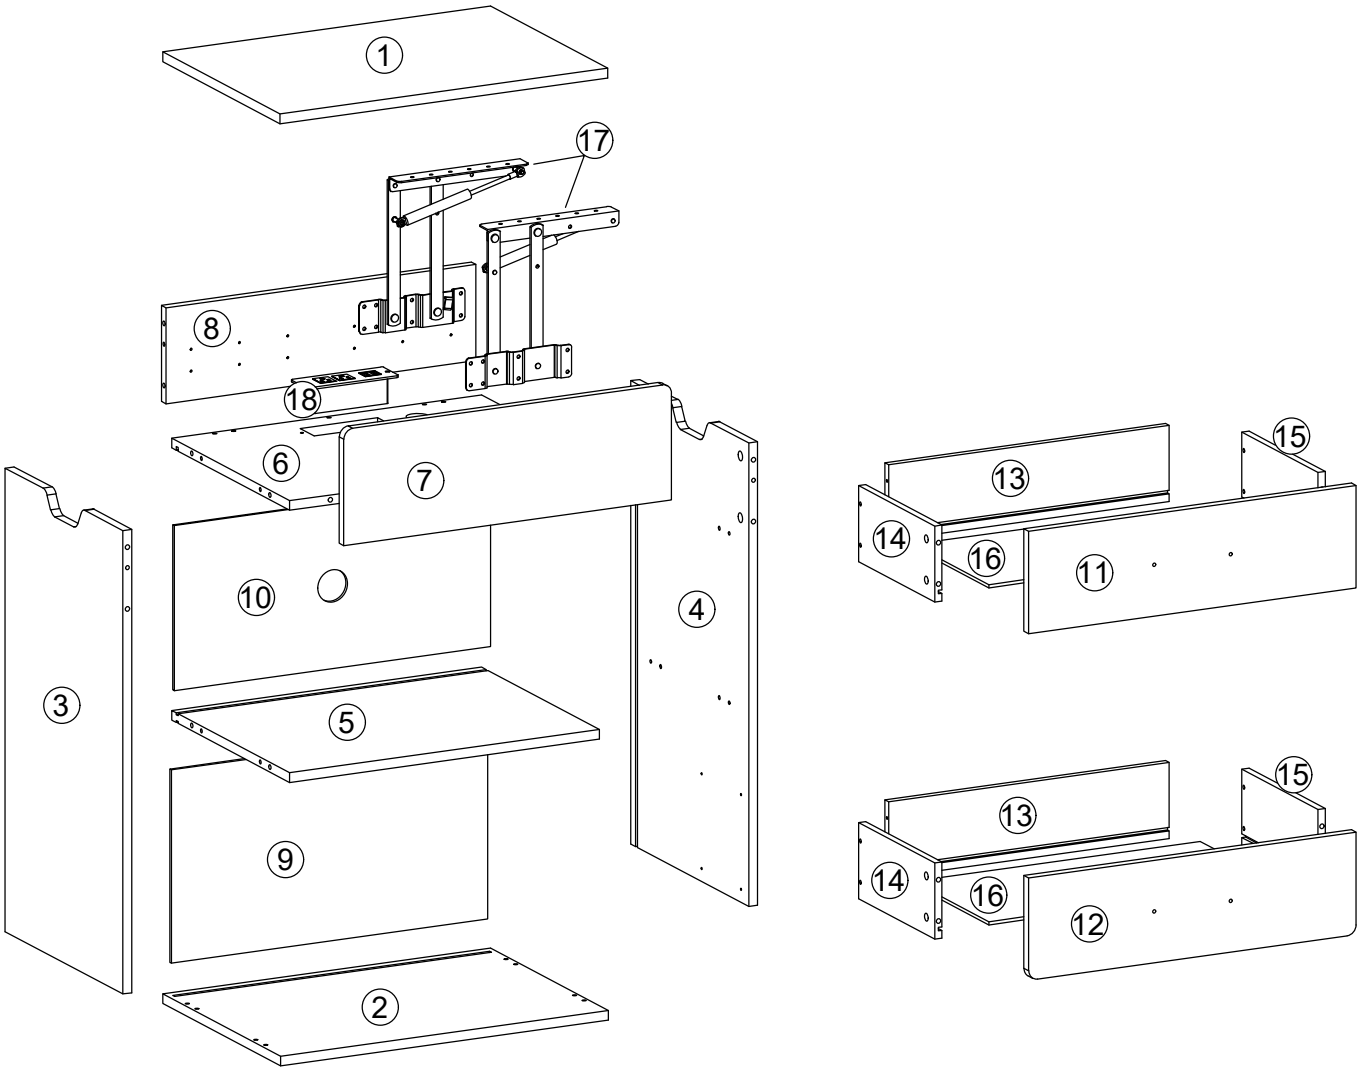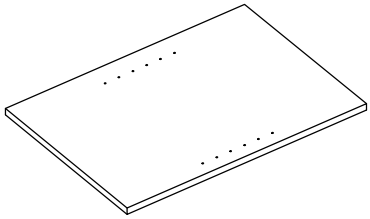


2 x1

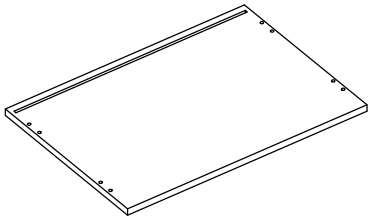


3 x1

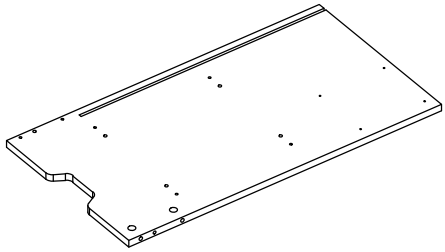


4 x1

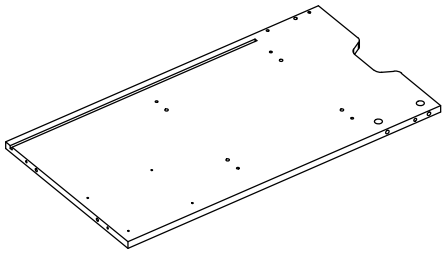


5 x1

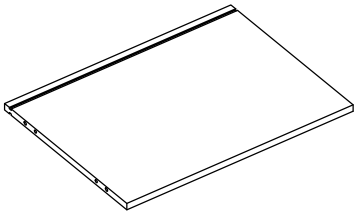


6 x1

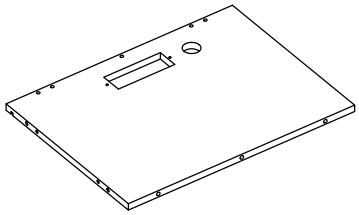


7 x1

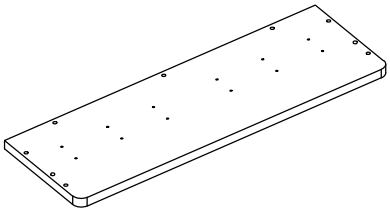


8 x1

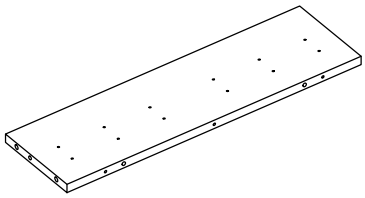


9 x1

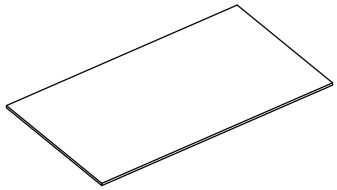


10 x1

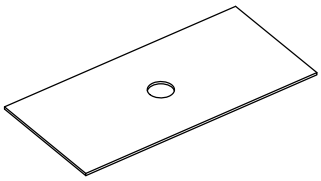


11 x1

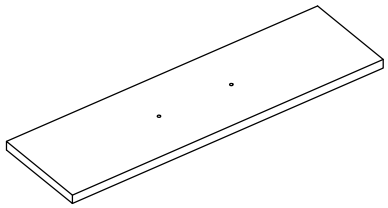


12 x1

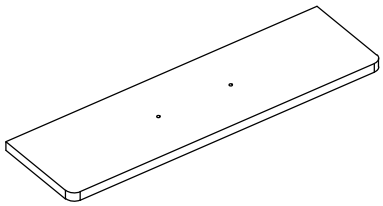


13 x1

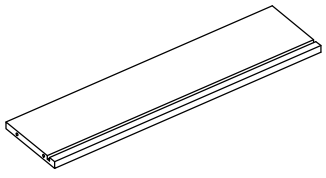


14 x1

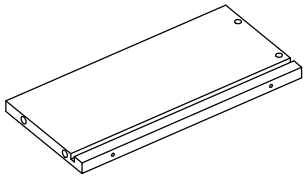


15 x1

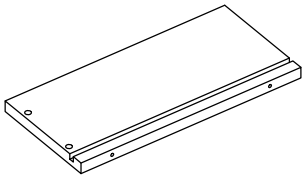


16 x1














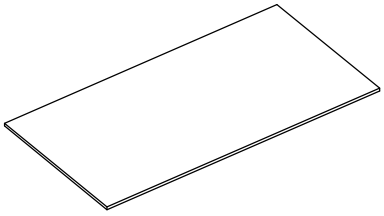


17 x1

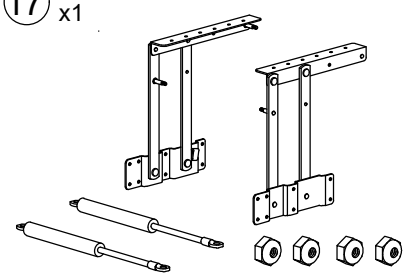



18 x1

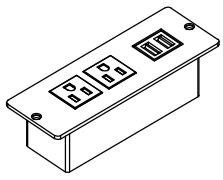


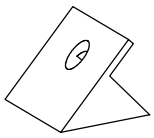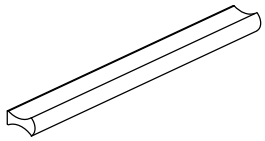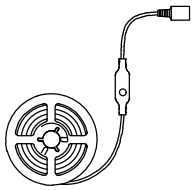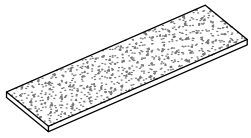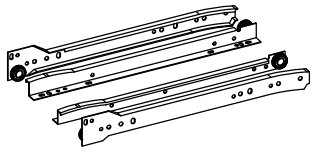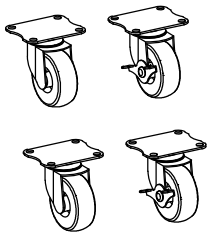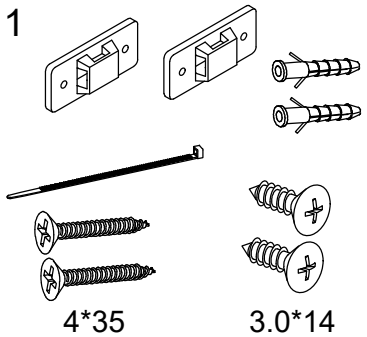
A x 15+1  Ø5x40	B x 18+1  Ø6x35	C x 27+2   Ø12 Ø6x35
D x 2  M4x10	E x 8+1   3.0x14	F x 2   M4x18
G x 1   6.4mm 3.5x12	H x 1 	I x 7+3 
J x 2  250mm	K x 16+1  3.0x12	L x 24+2  3.0x14
M x 1 	N x 16+1  3.5x12	O x 1  4*35 3.0*14
TOOL    3mm 10mm		

STEP 1

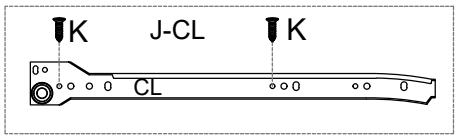

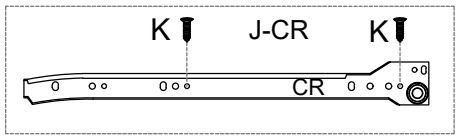


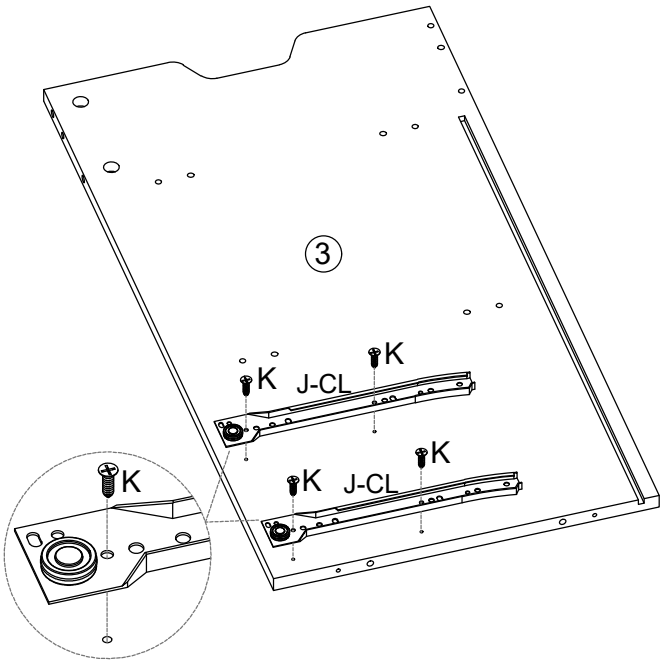


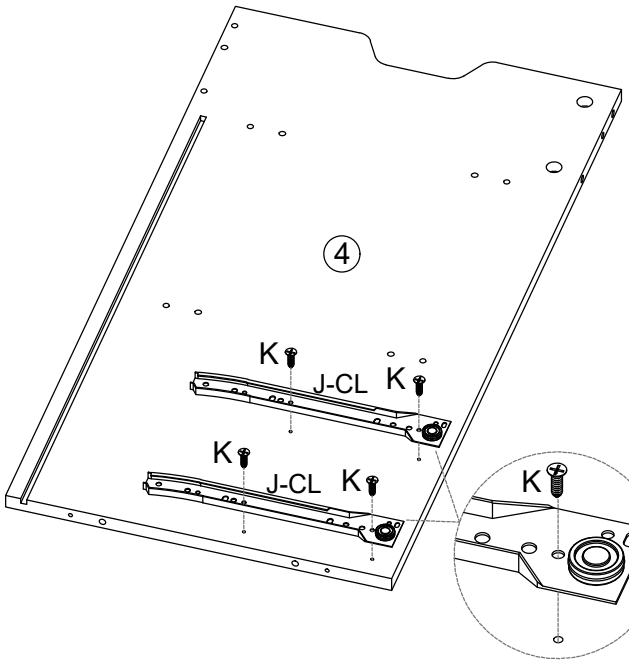



	J x2	K x8


STEP 2

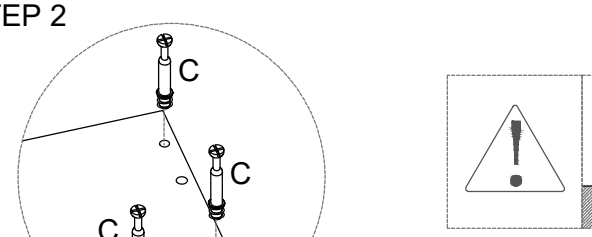

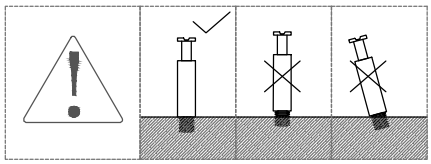

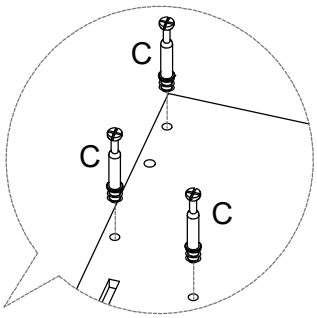


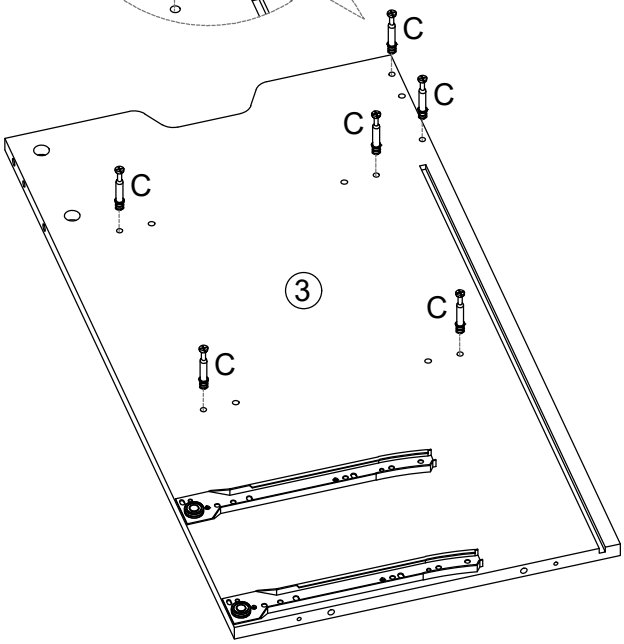


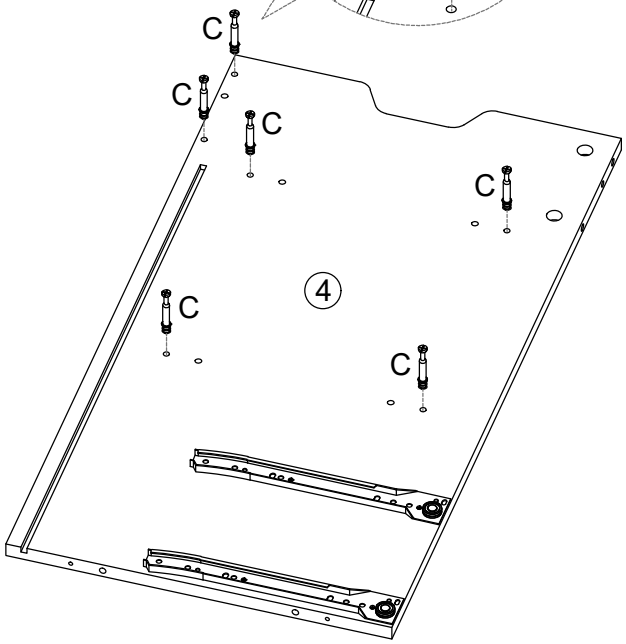


	C x12

STEP 3

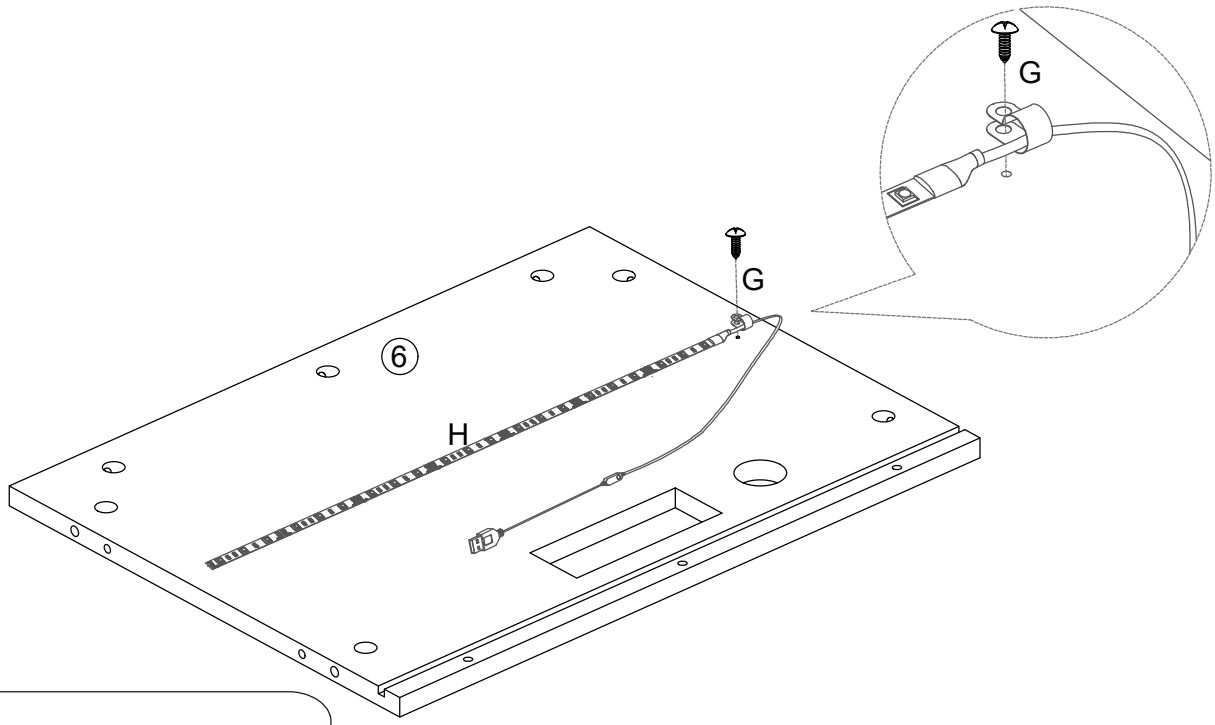


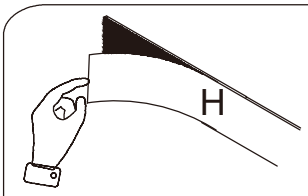


Tear off the tape and apply it
to the bottom plate,
then press it firmly with your hand




STEP 4

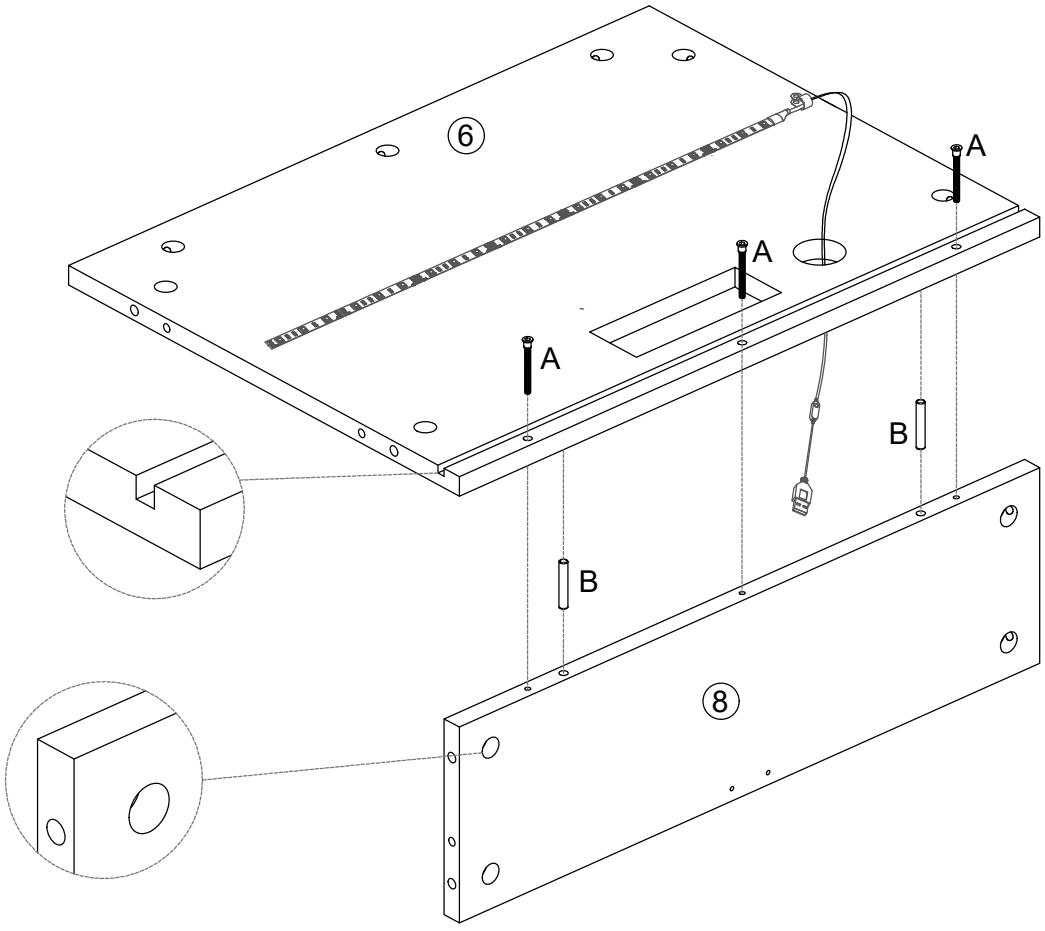




STEP 5

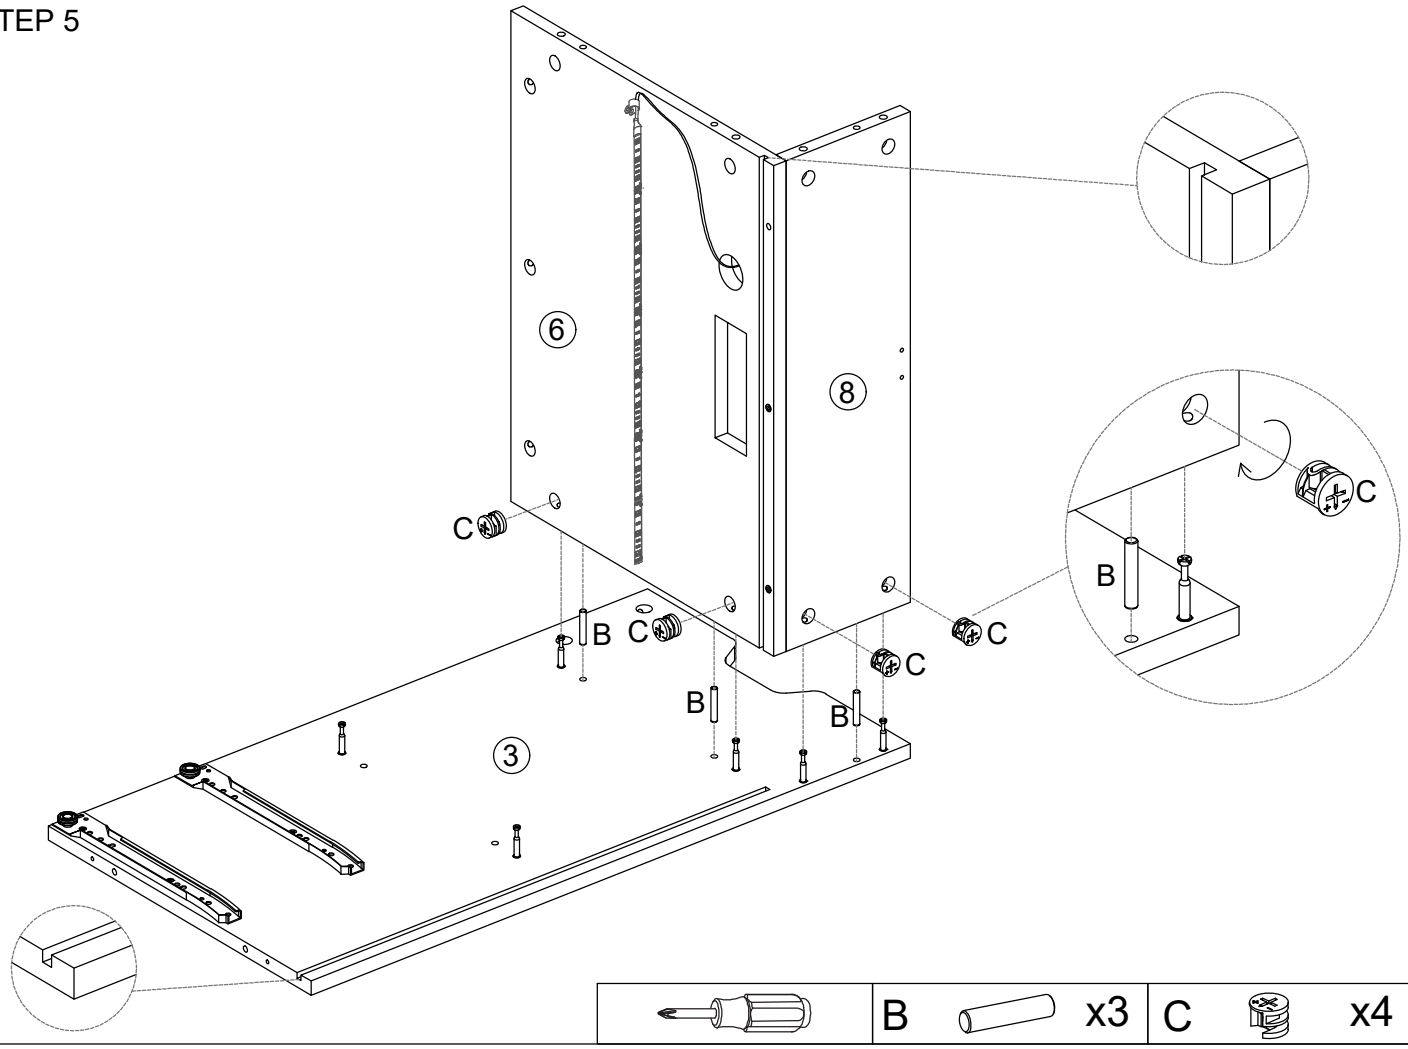


	B	x3	C		x4

STEP 6

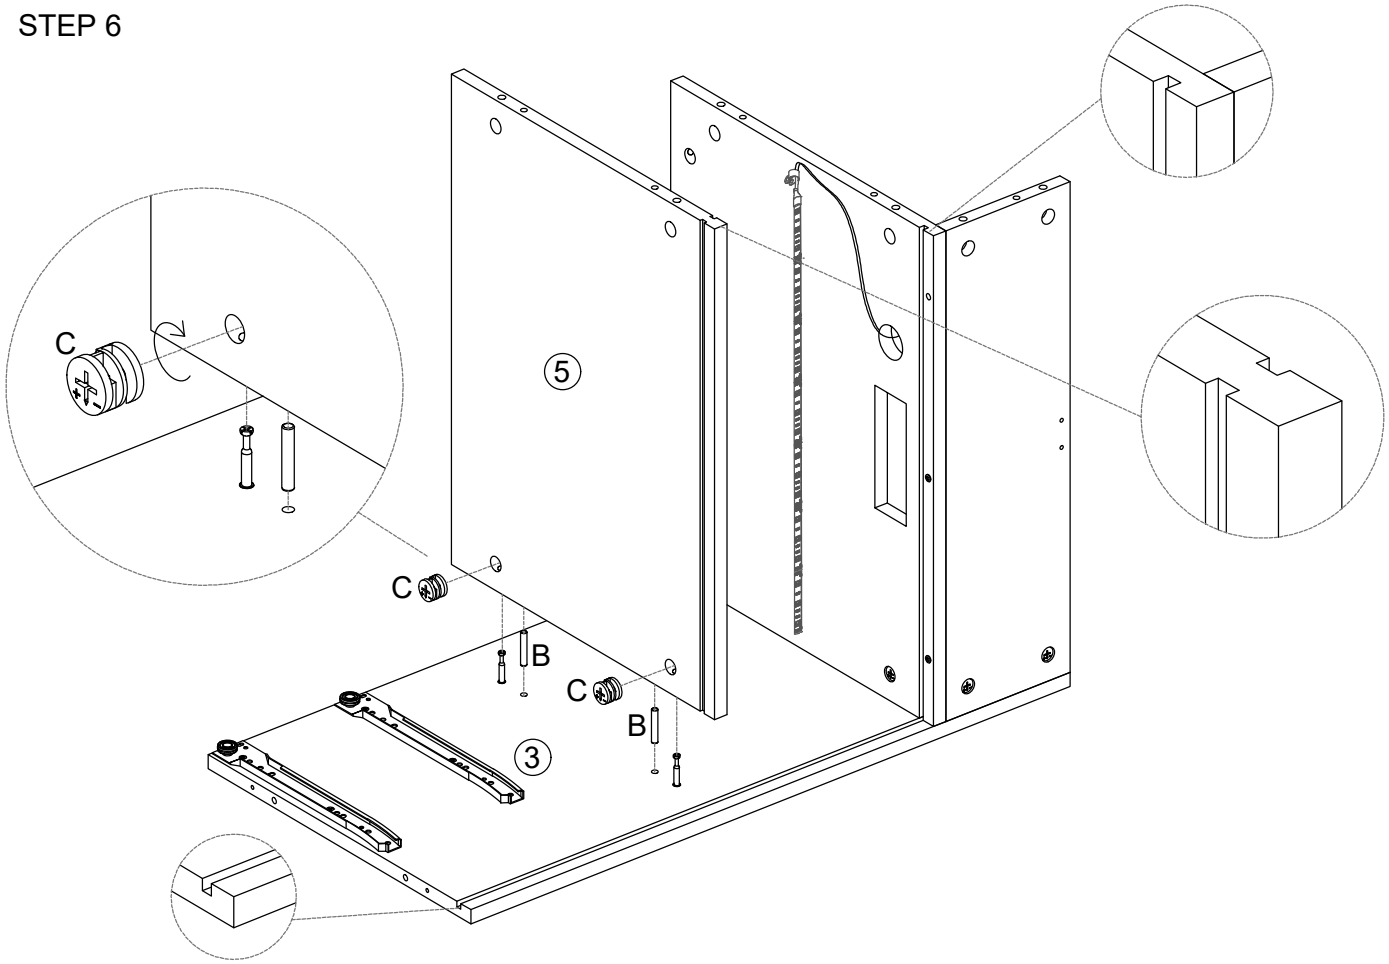


	B	x2	C		x2

STEP 7

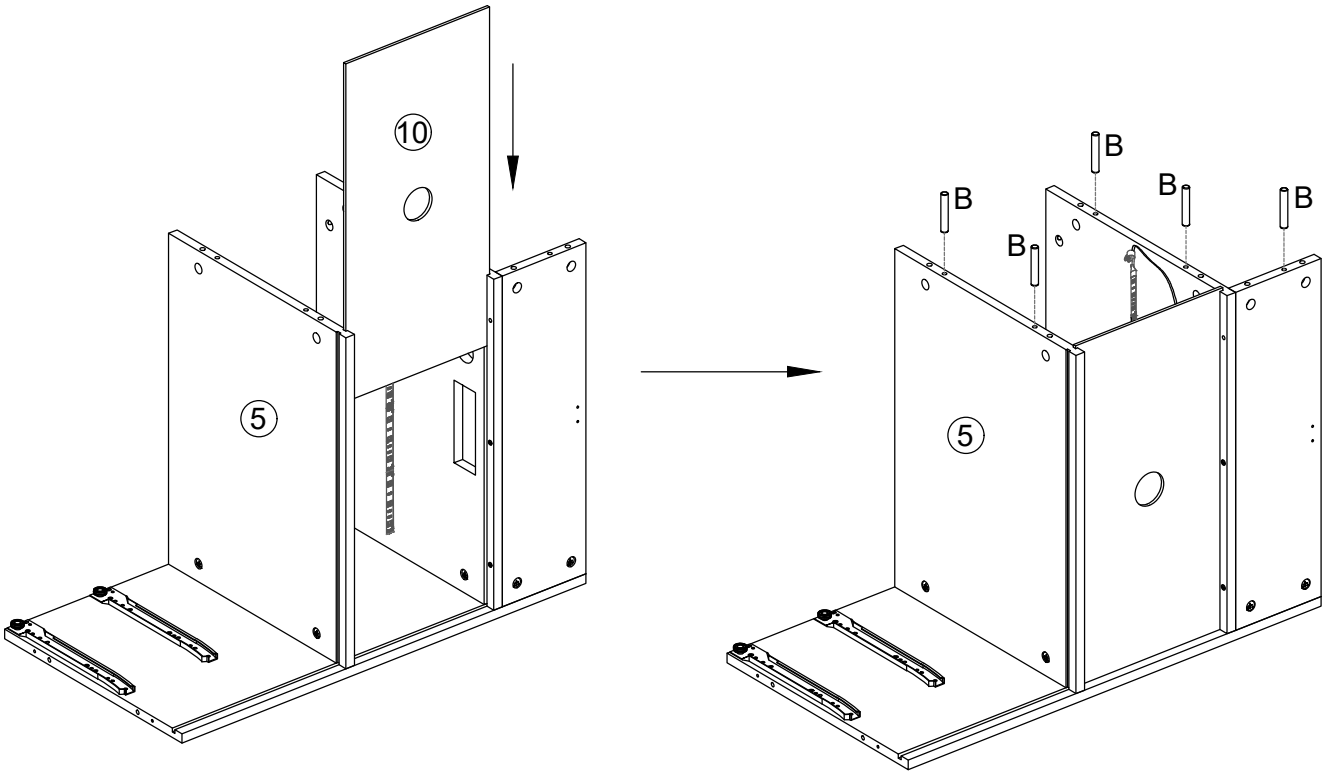


B  x5

STEP 8

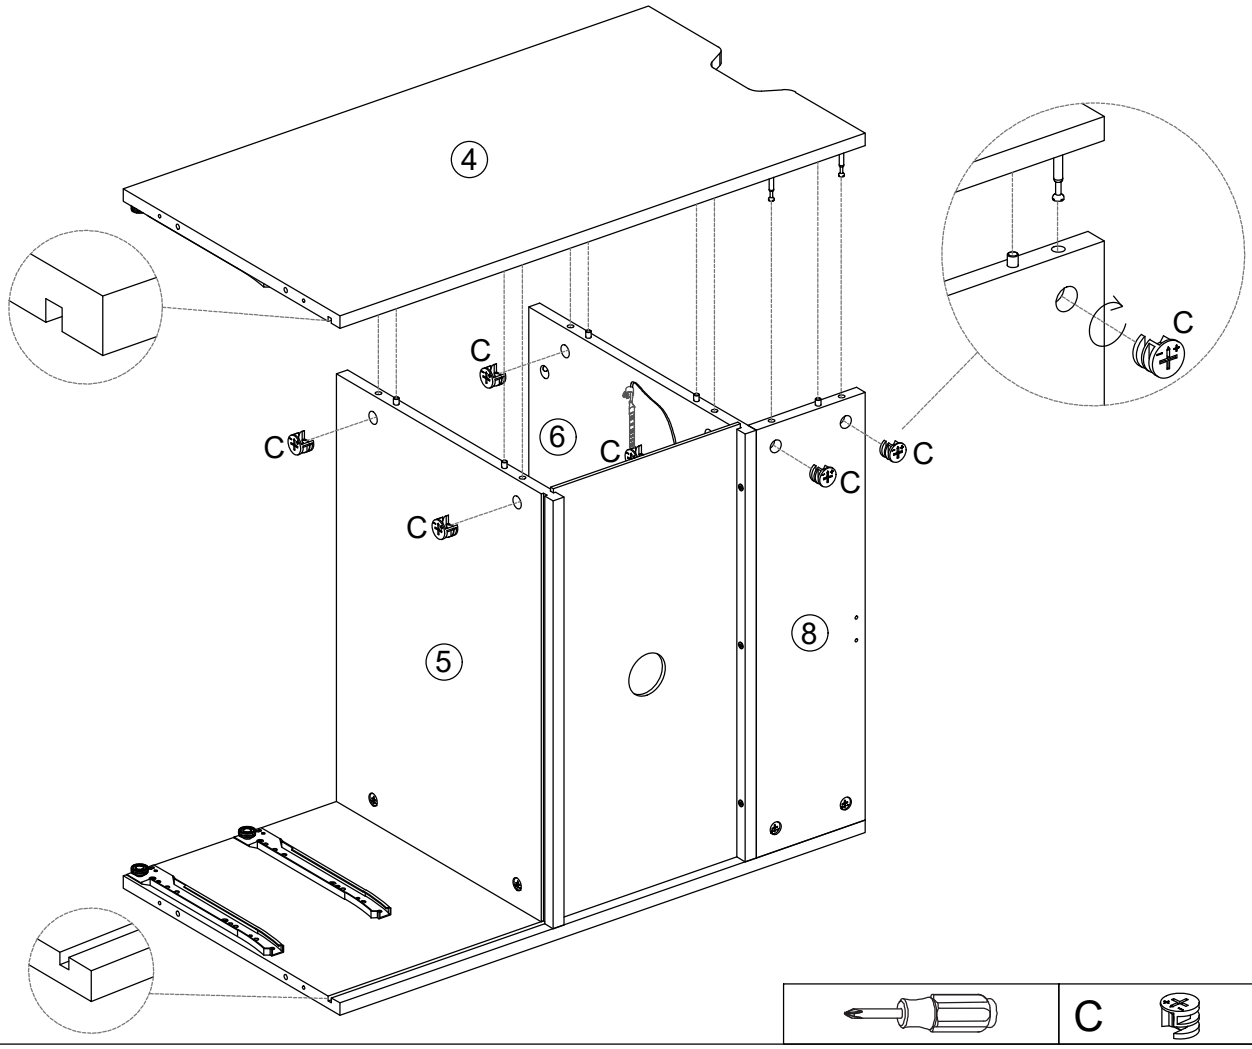


 C x6

STEP 9

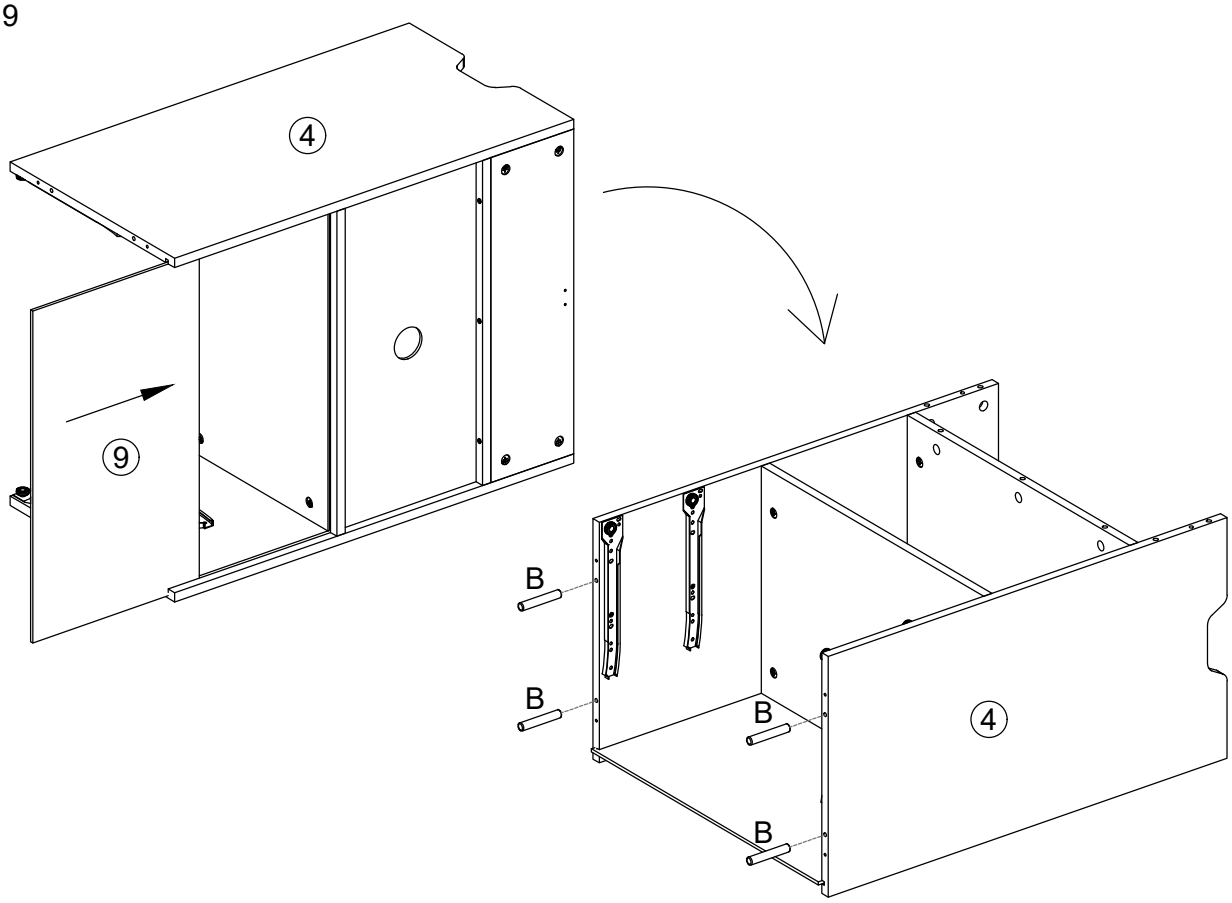


B x4

STEP 10

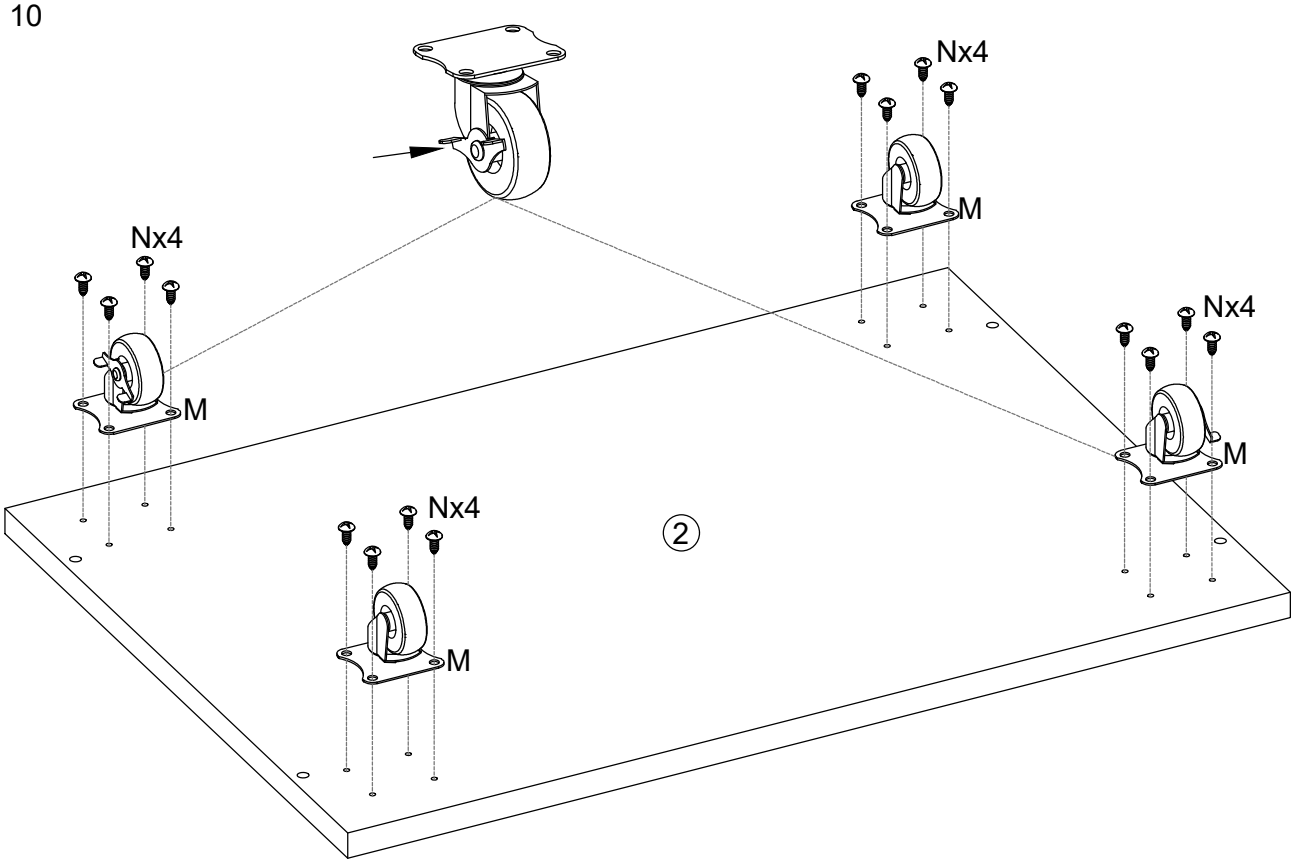


M x1 N x16

STEP 11

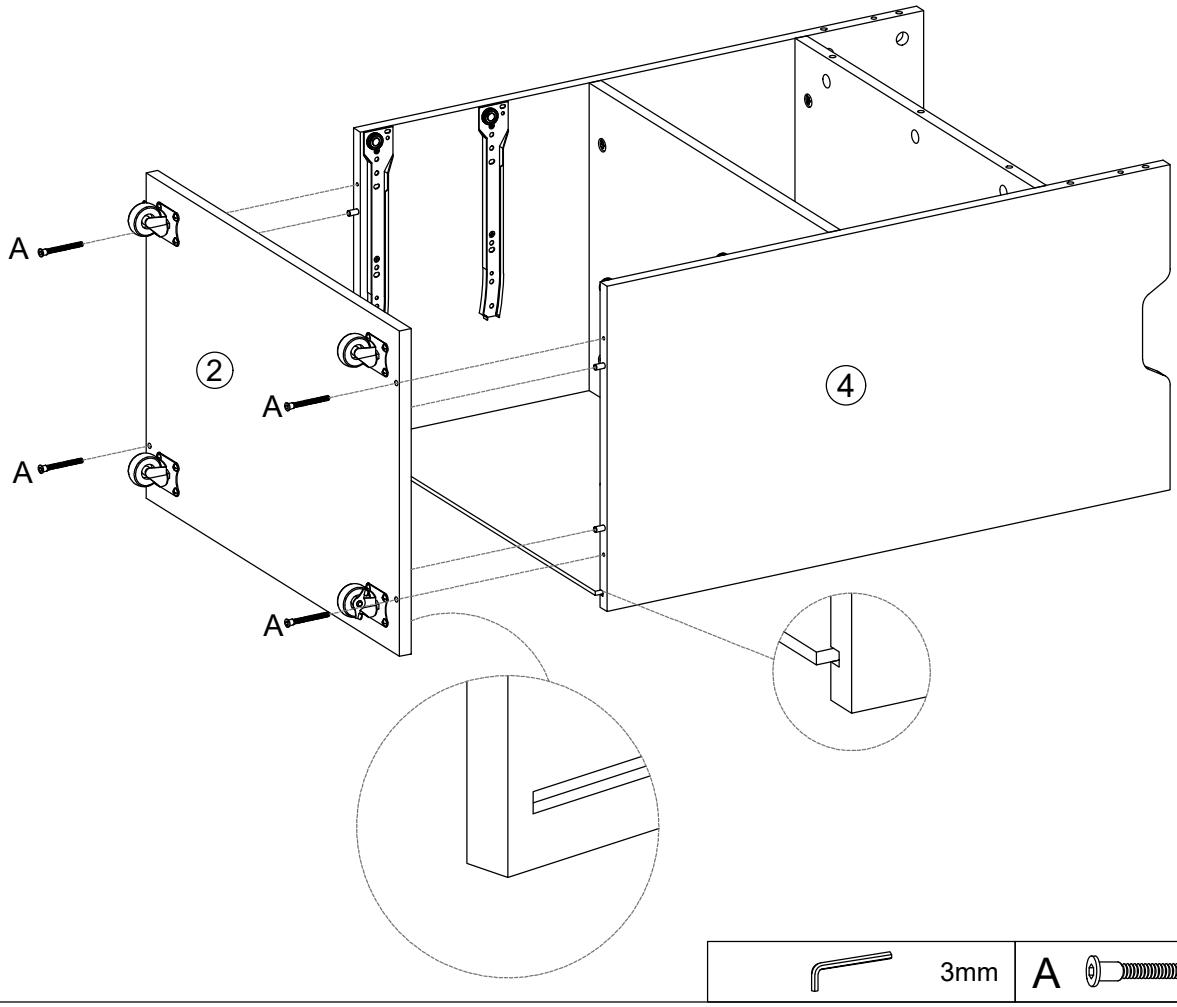


3mm	A x4


STEP 12

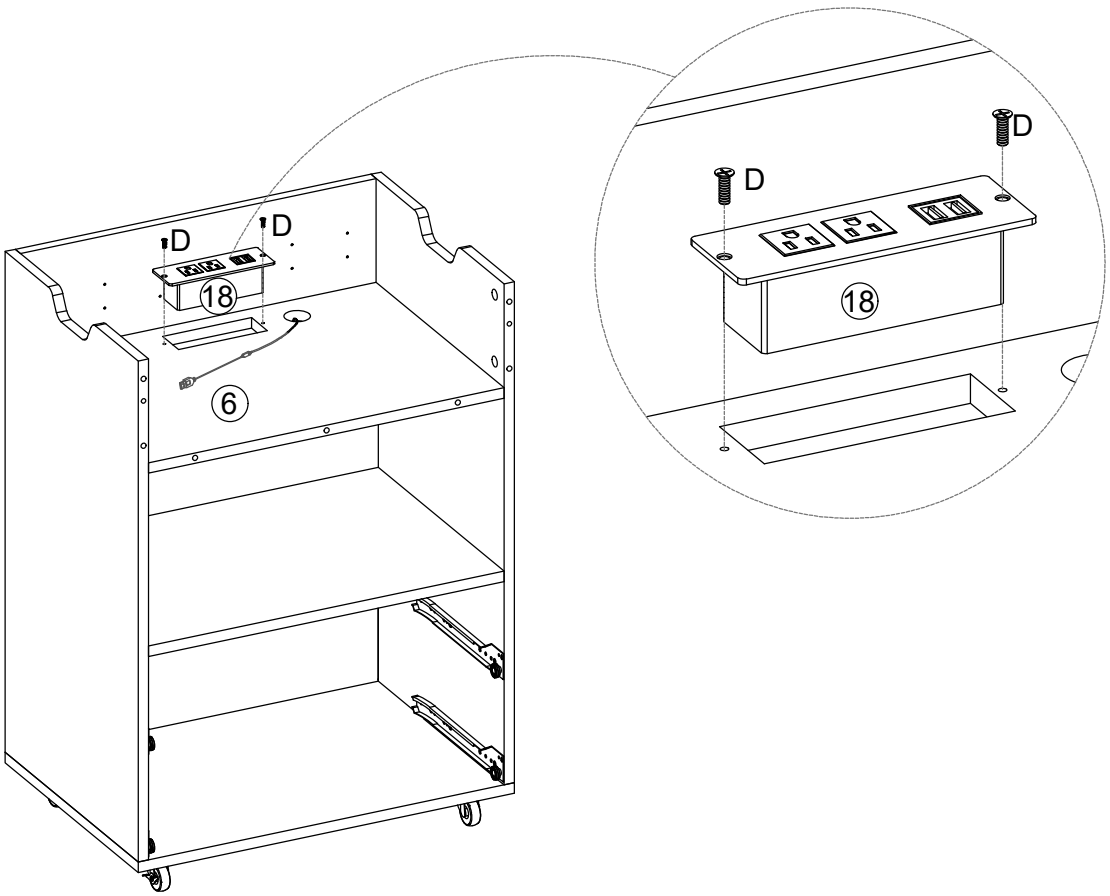

	D x2


STEP 13

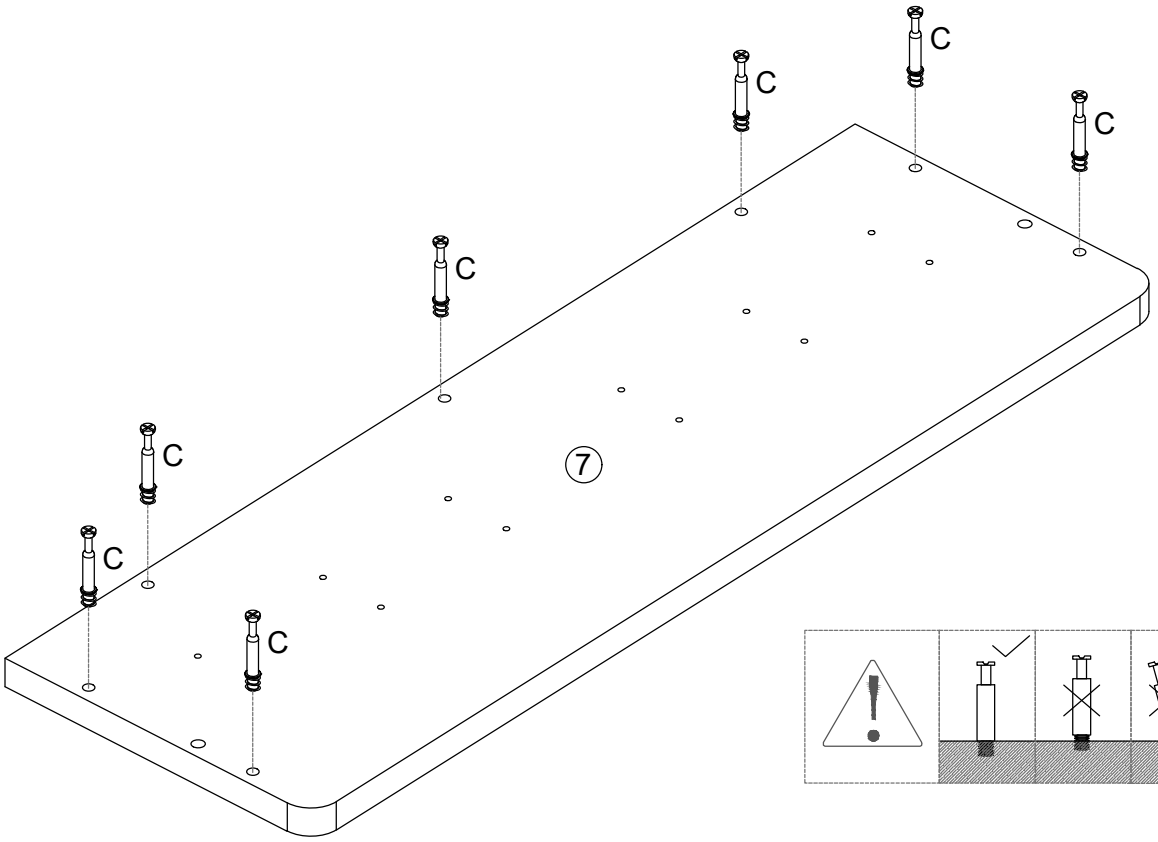




C  x7

STEP 14

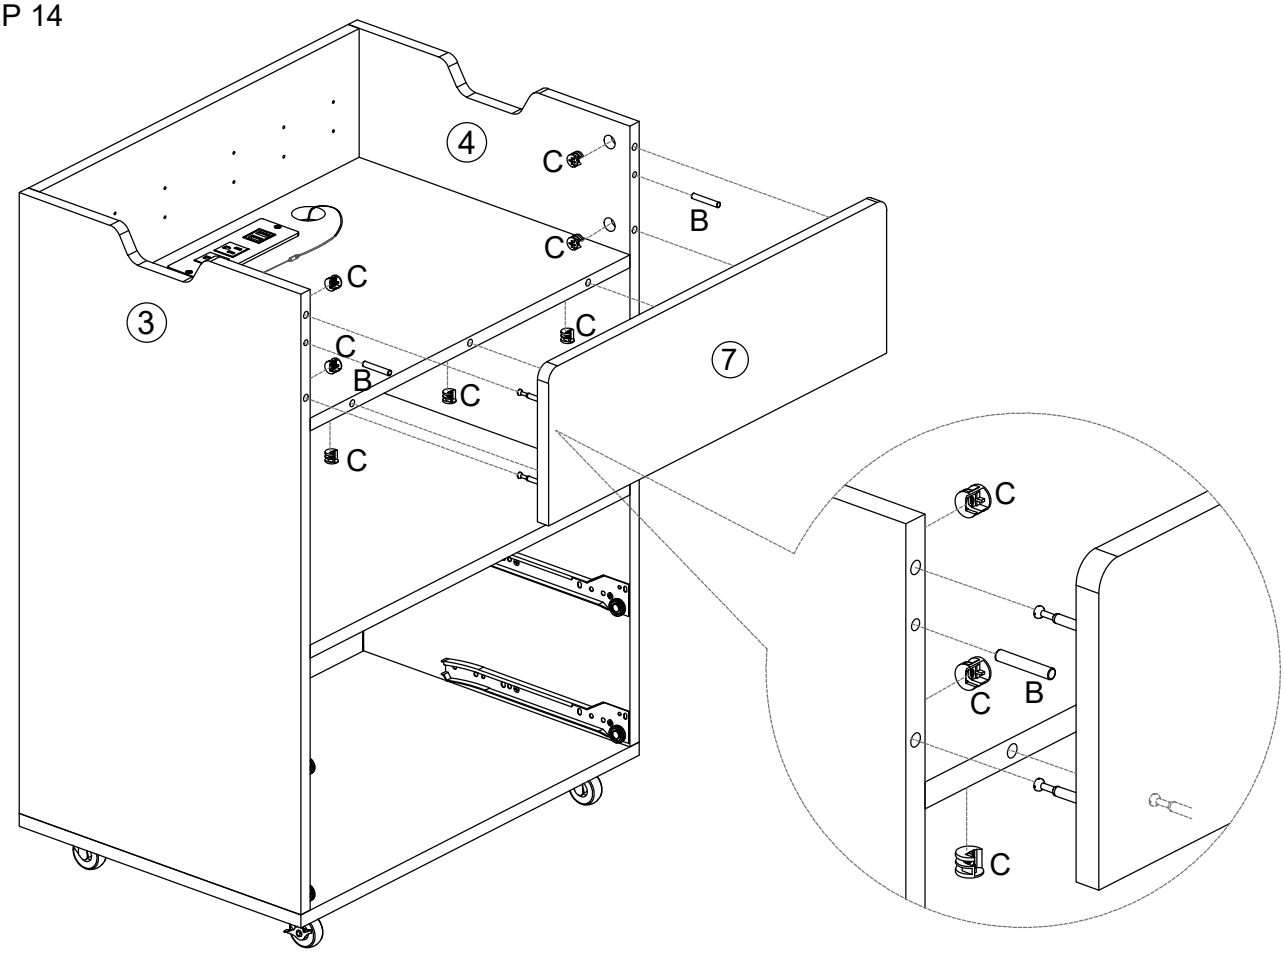




B  x2


C  x7

STEP 15

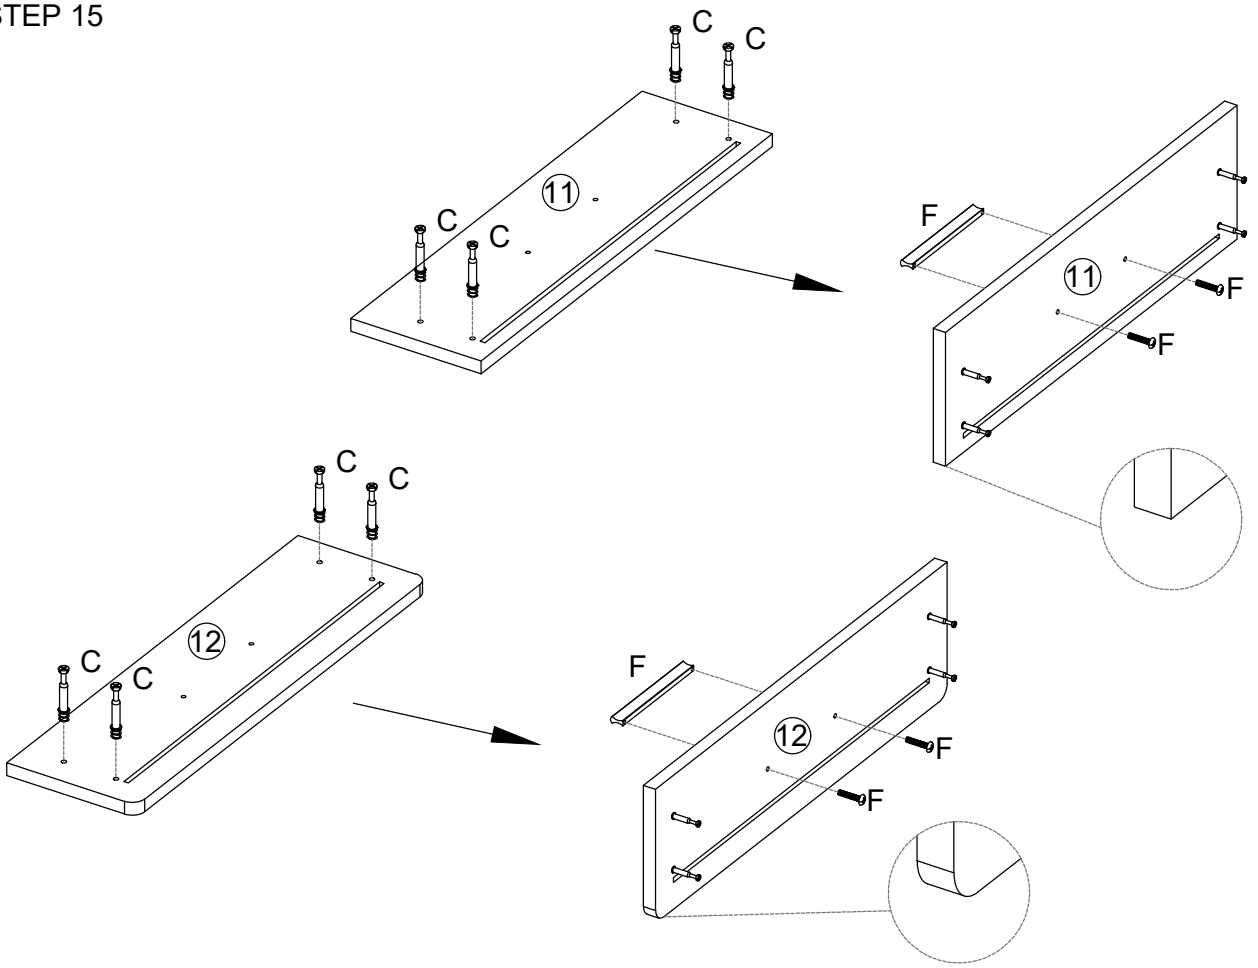

	C x8	F x2


STEP 16

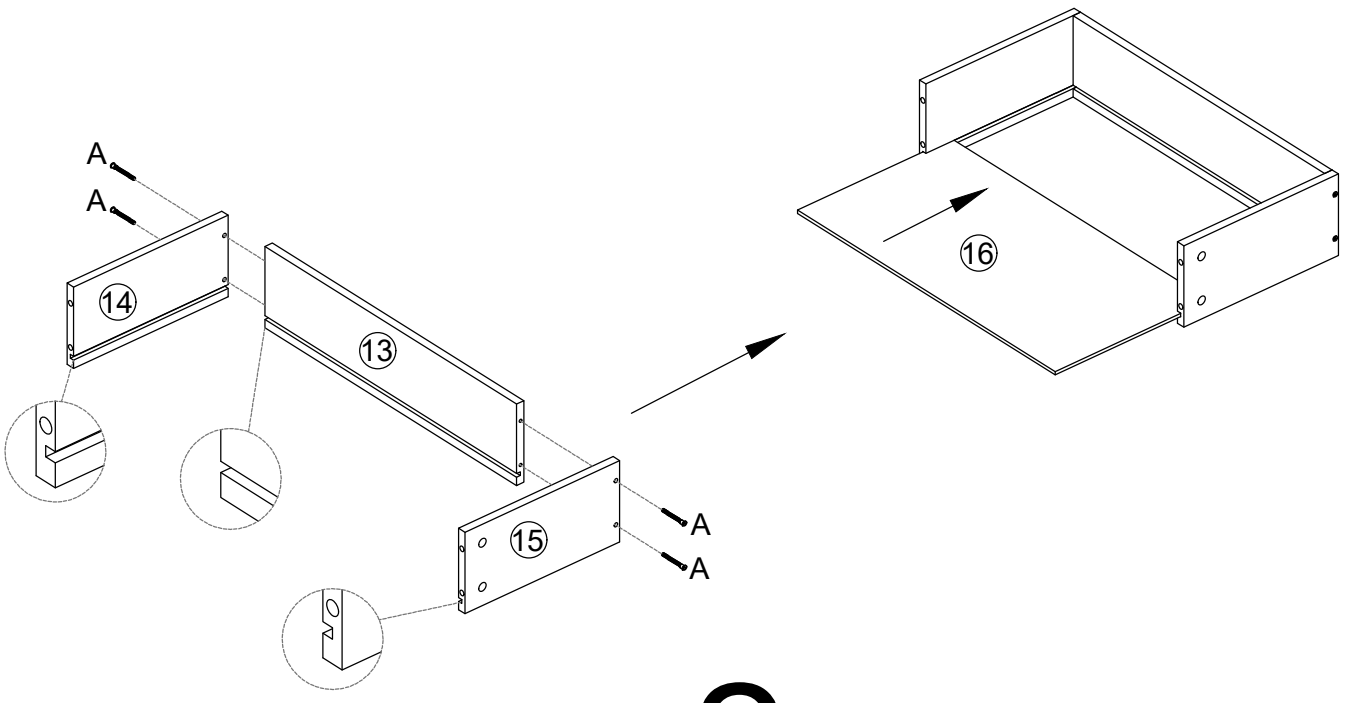

x2


3mm	A x8

STEP 17

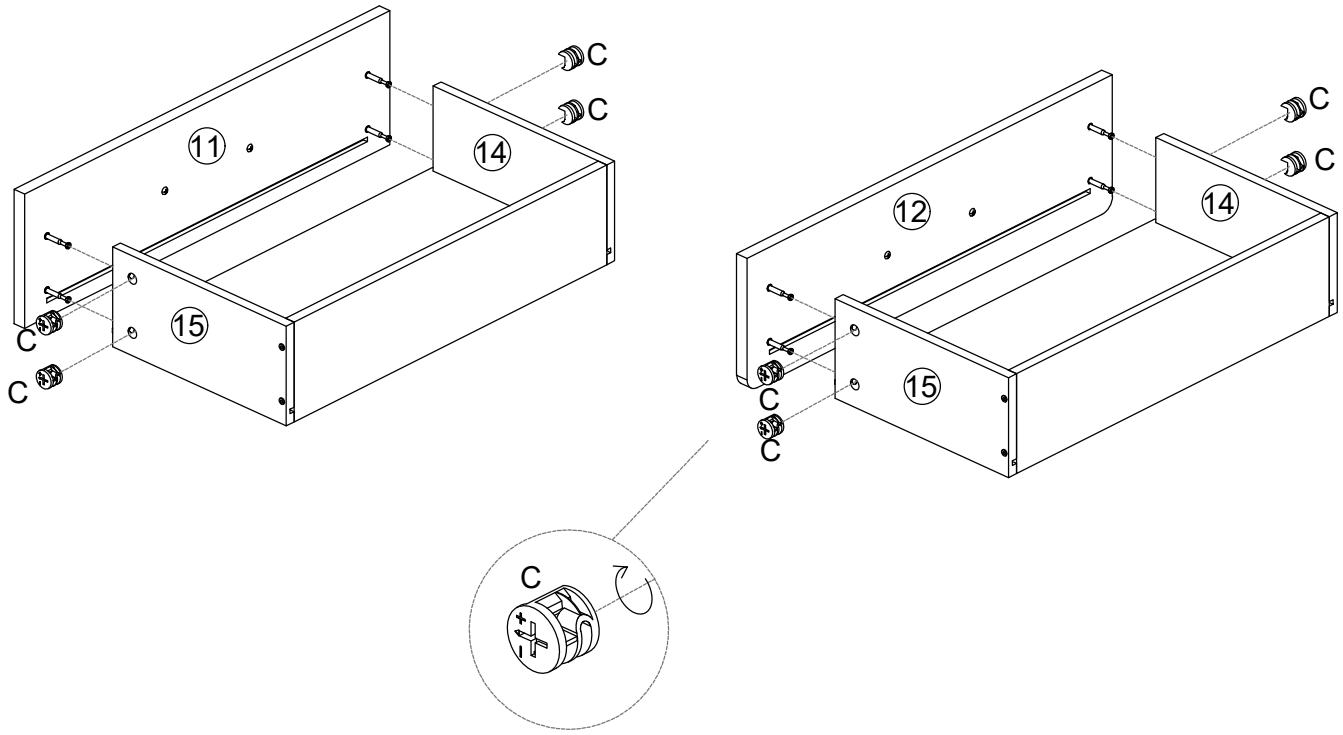


	C	x8

STEP 18

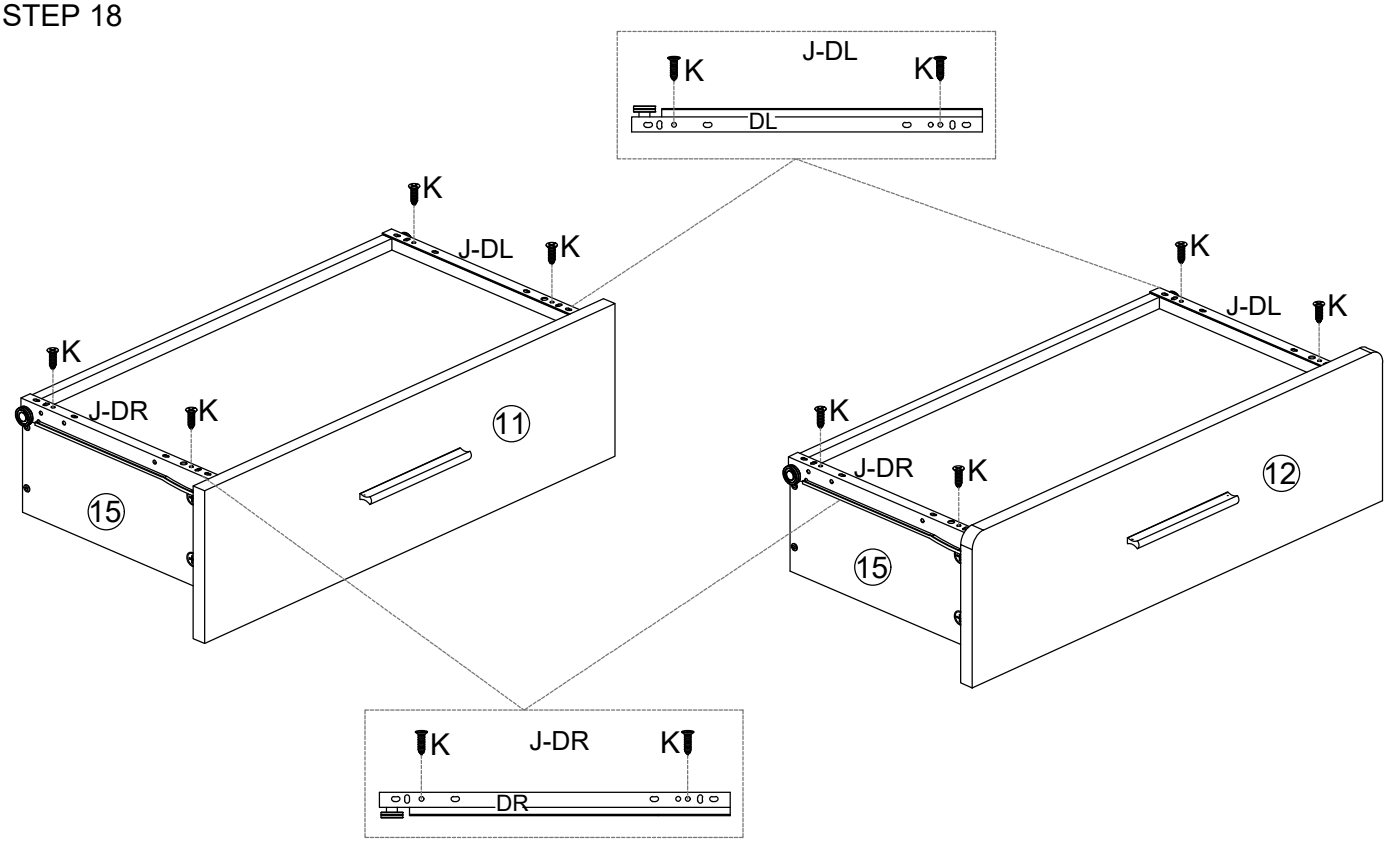

	J	x2	K	x8


STEP 19

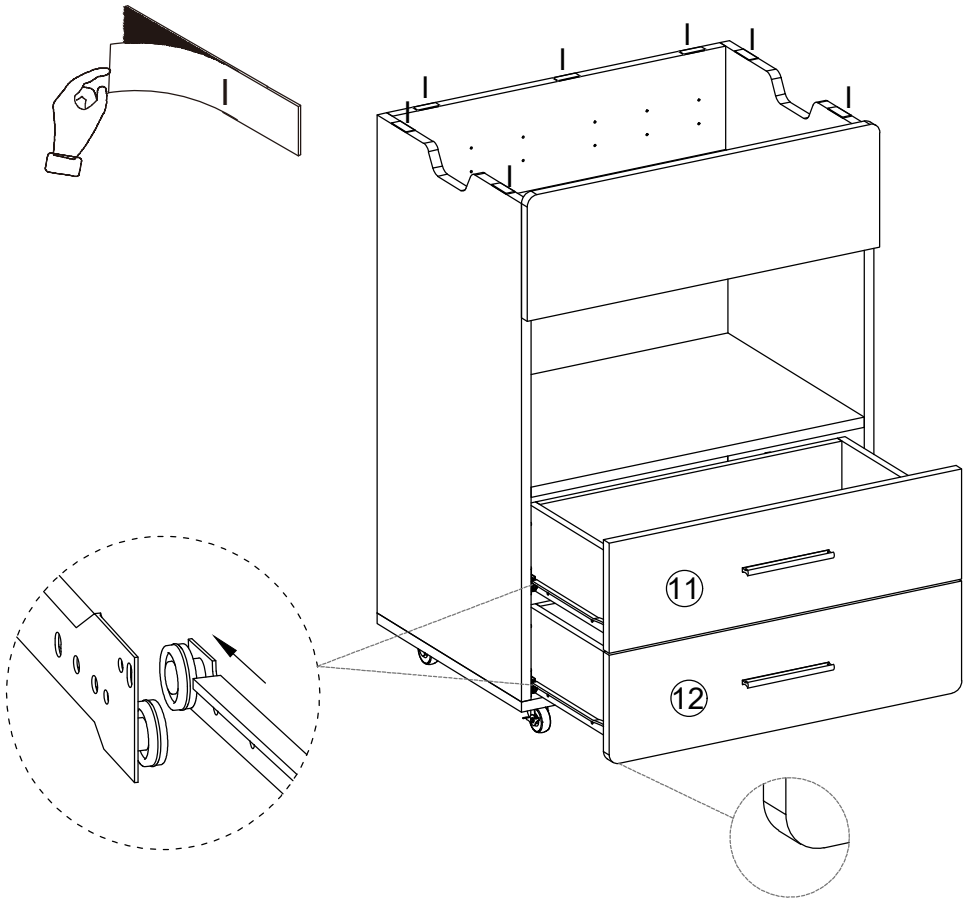

I x7


STEP 20


Hardware (17) Enlarged view

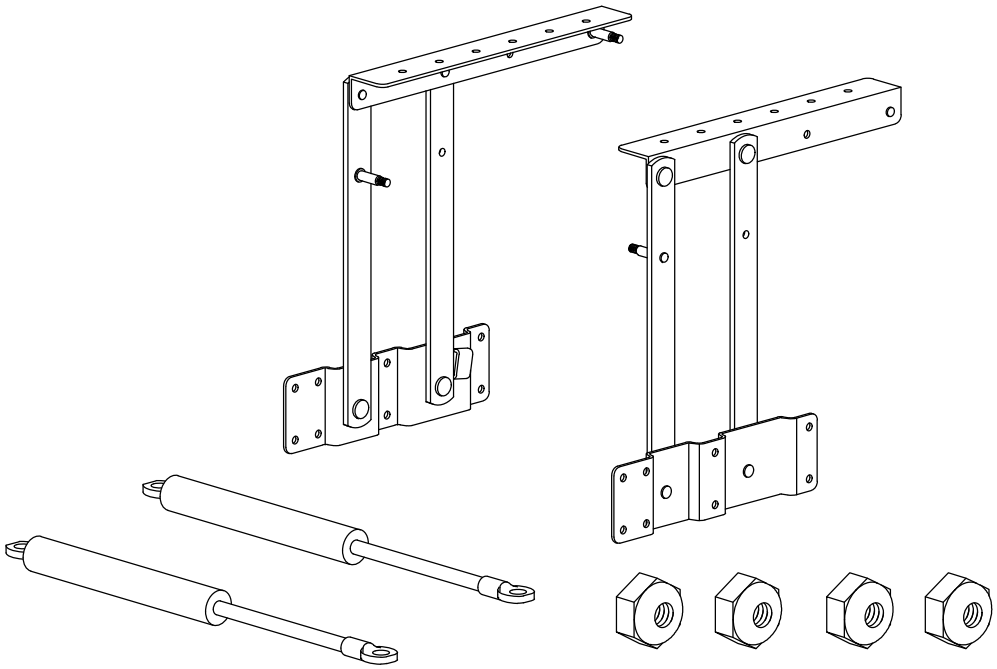


STEP 21


Direction 1

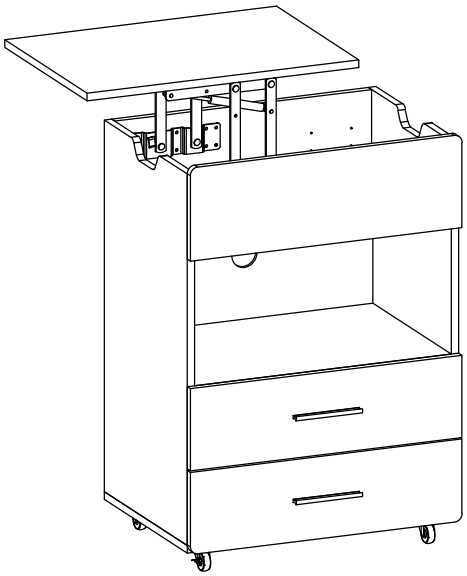

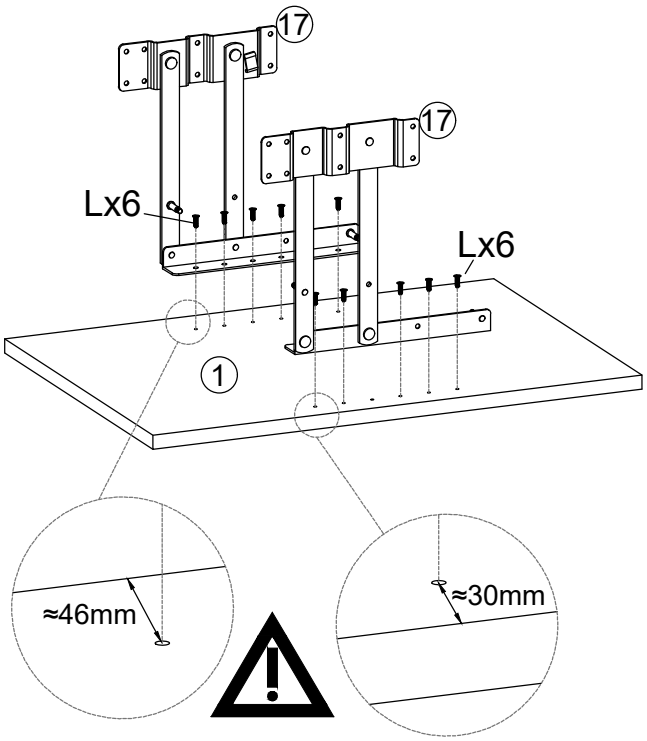

Direction 2

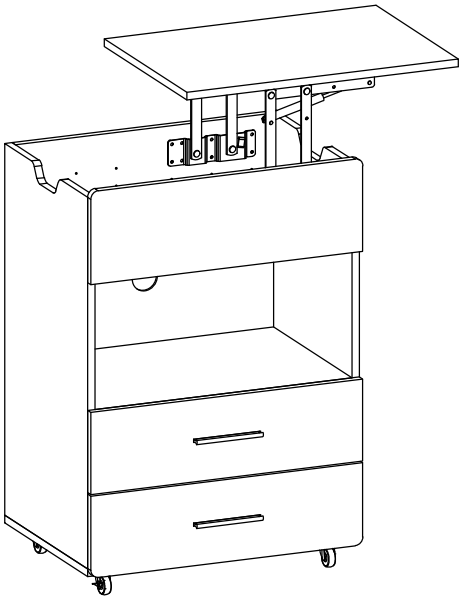


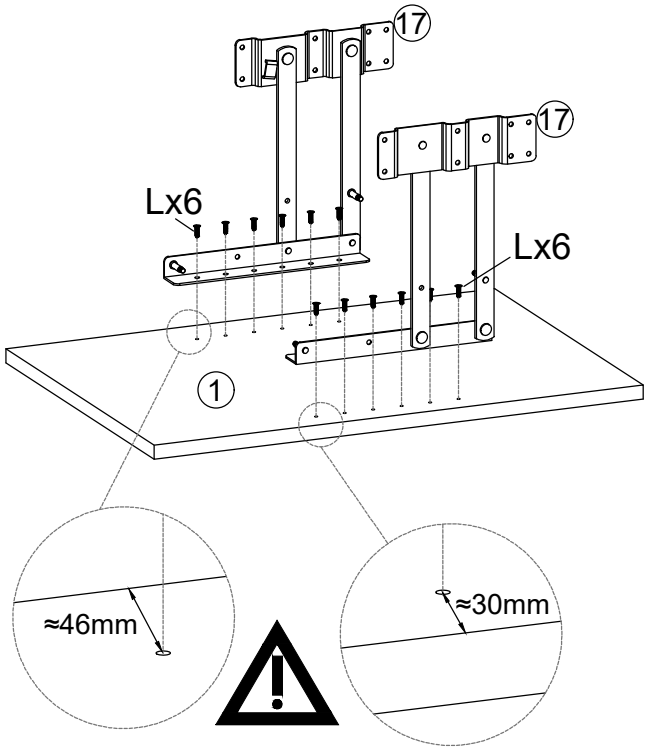



Choose the desired direction for installing this step


L x12

STEP 22

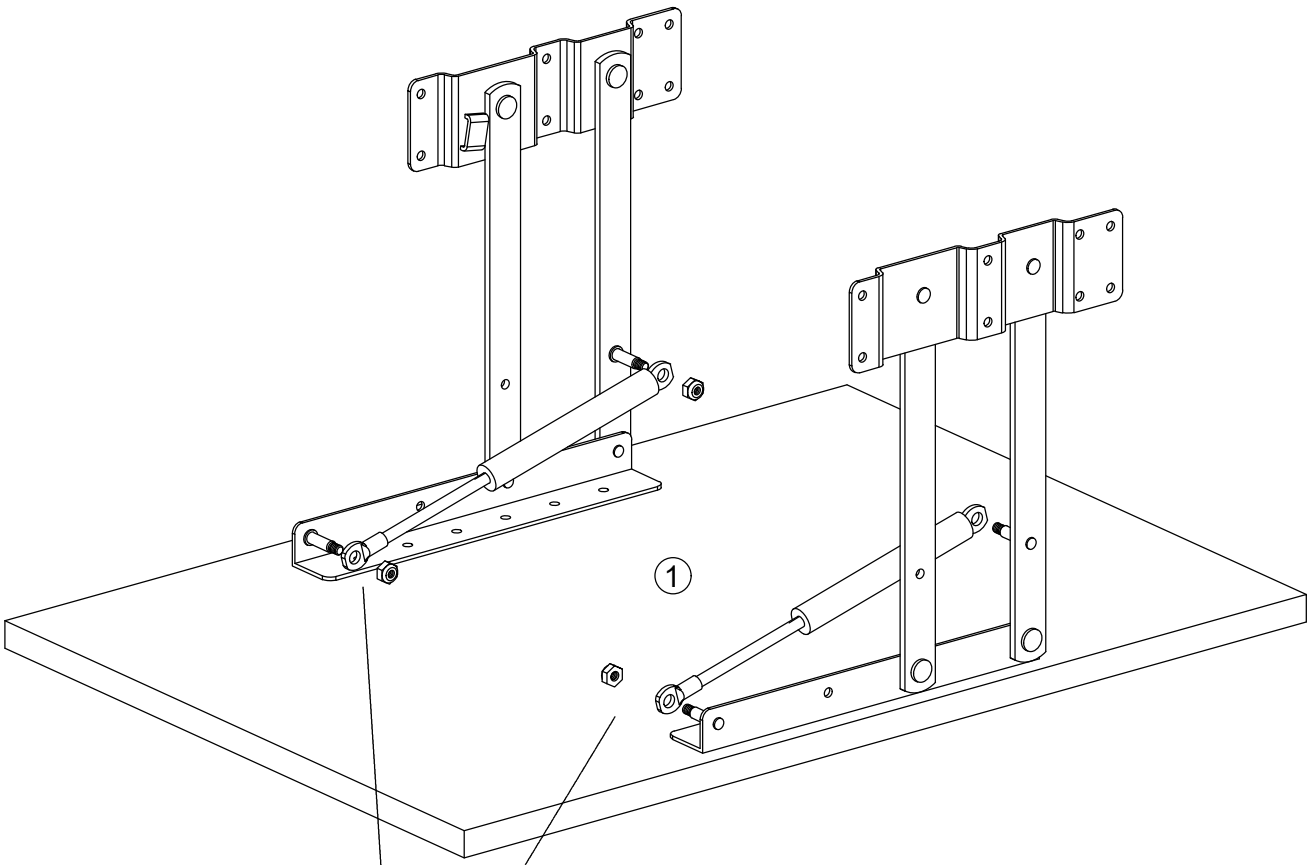


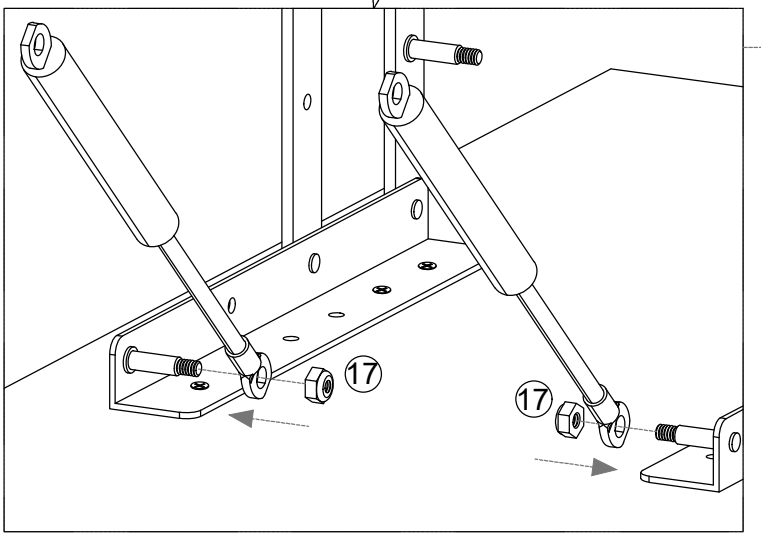

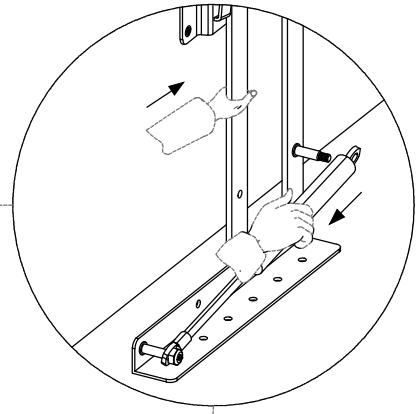

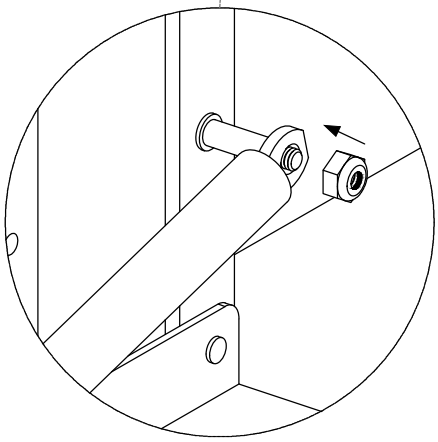







STEP 23

This step requires two people

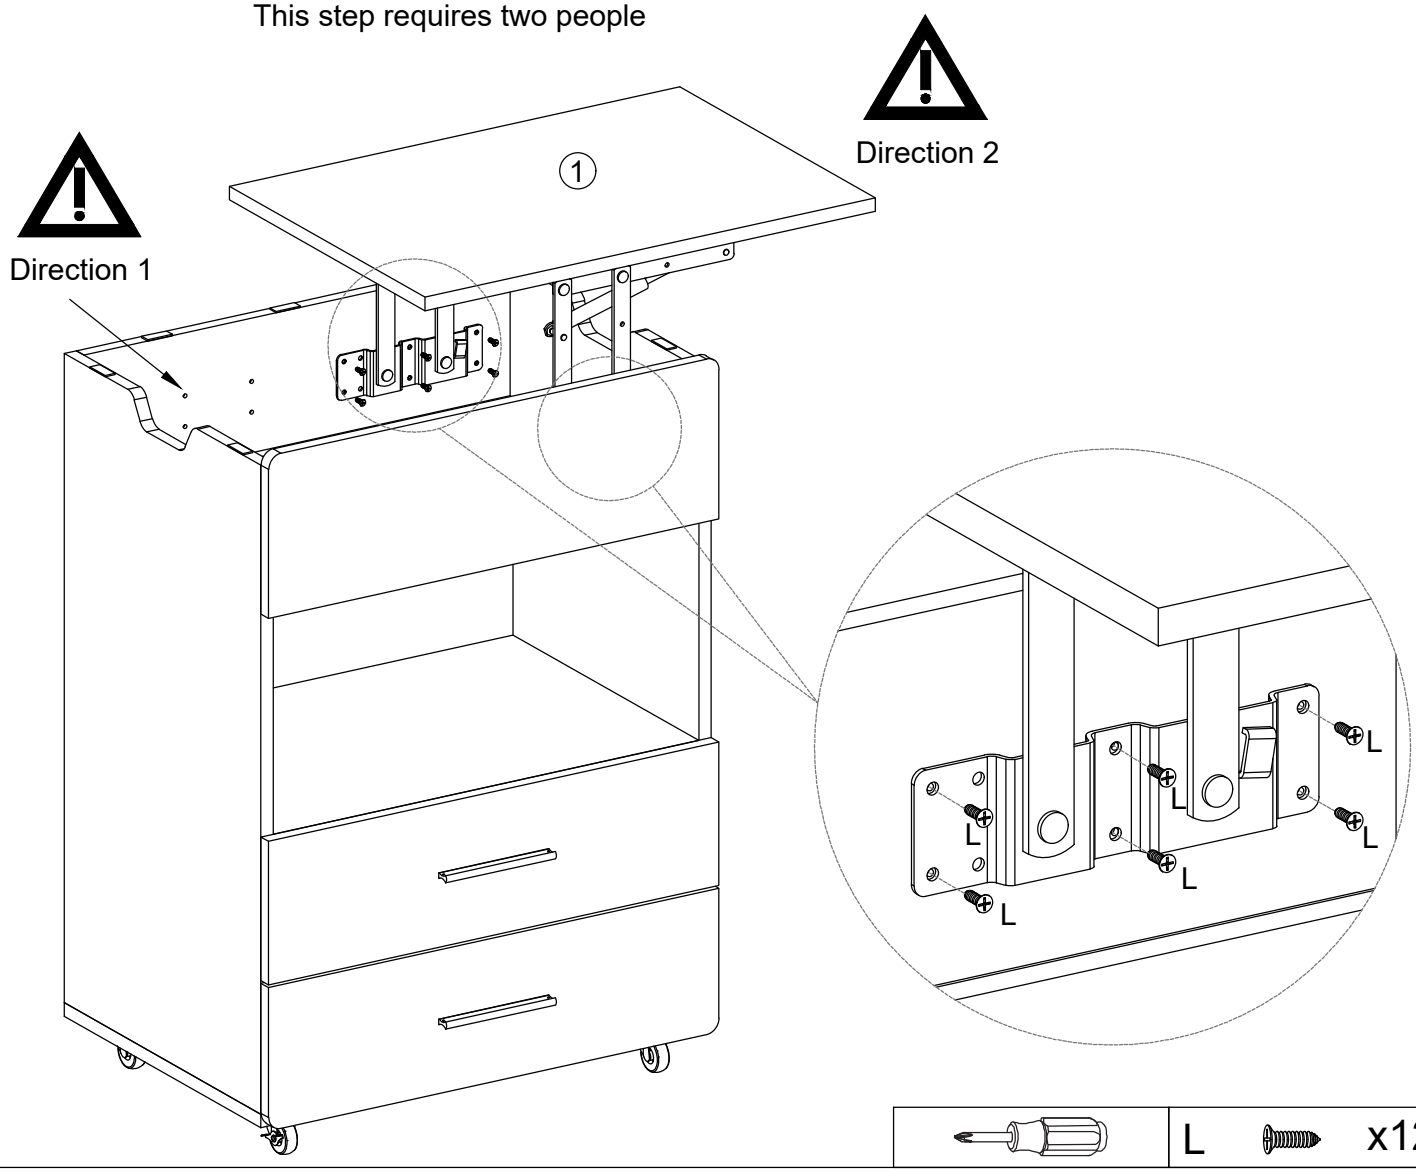



STEP 24

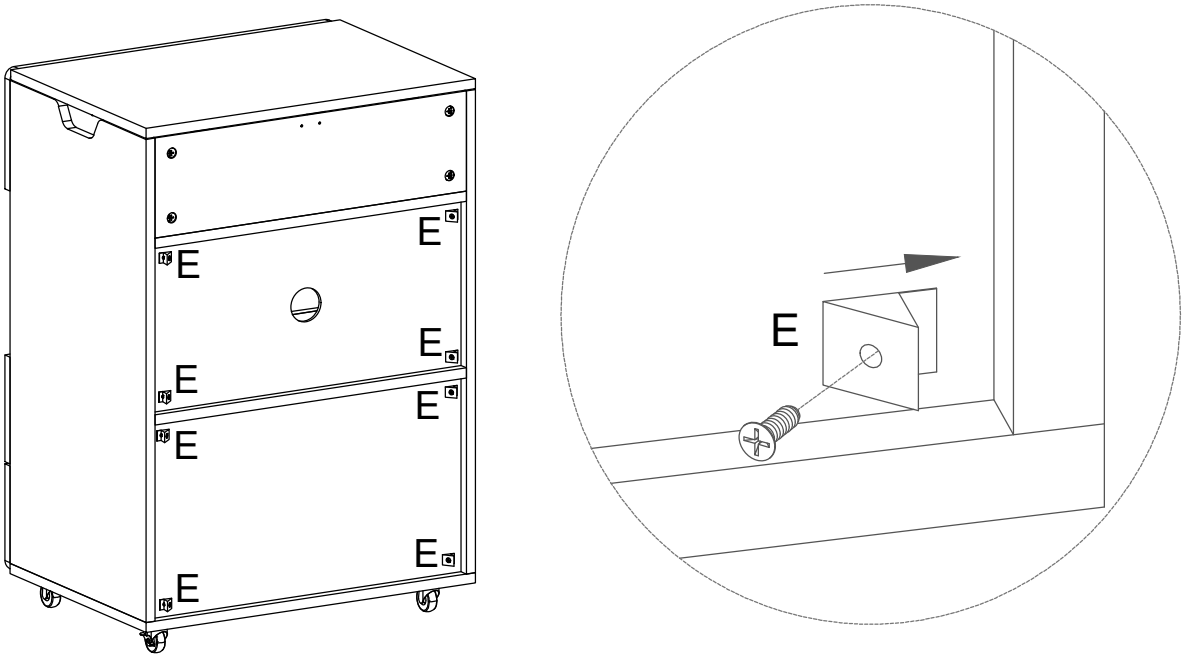






STEP 25

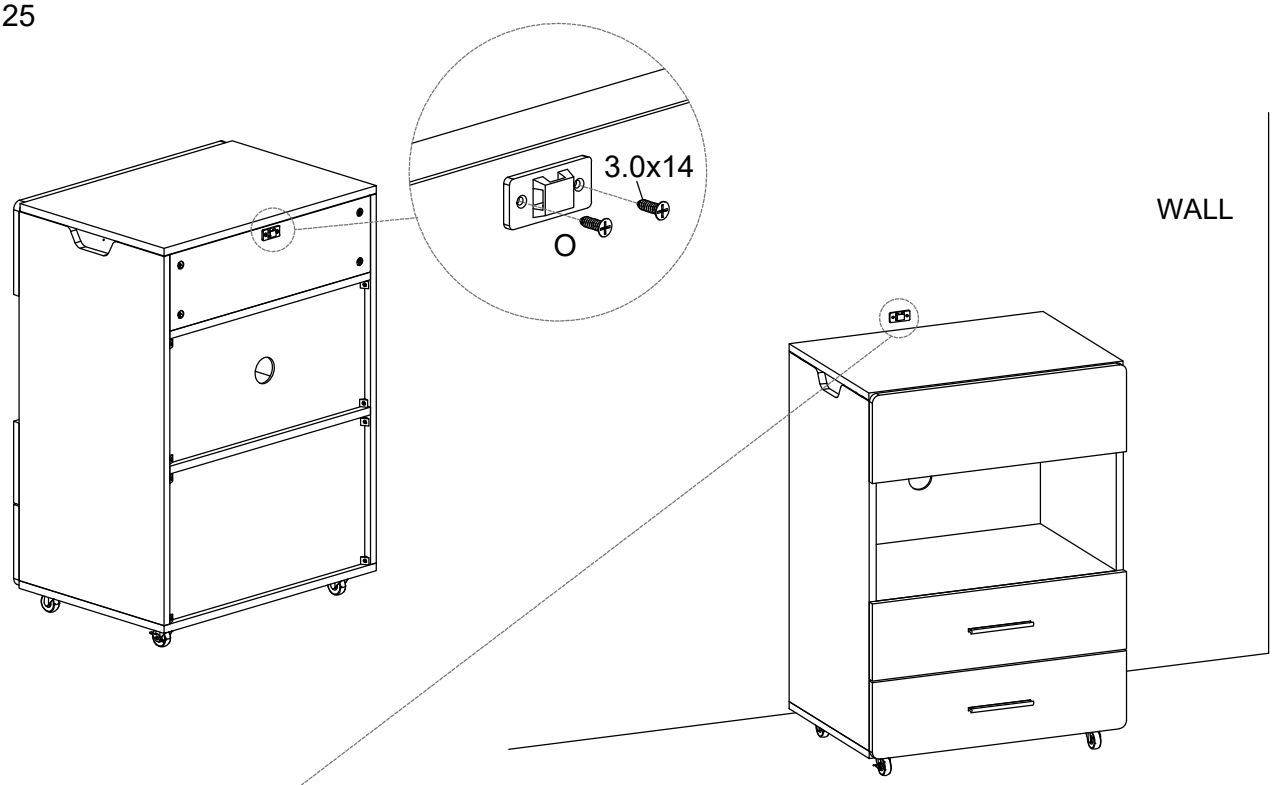


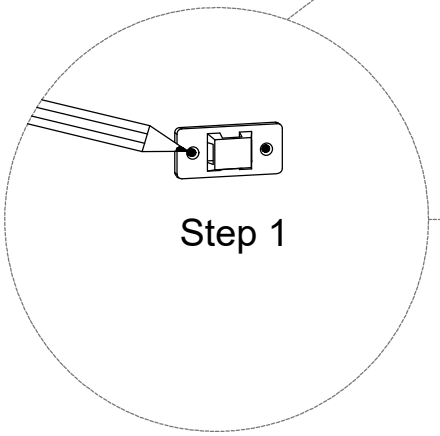

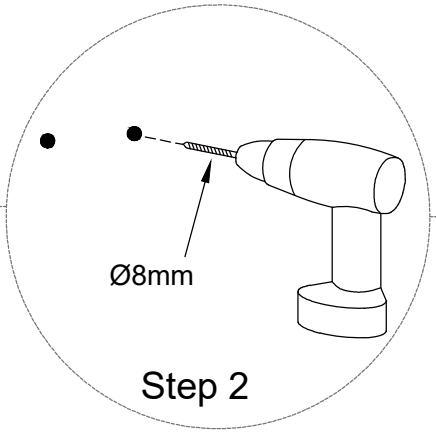


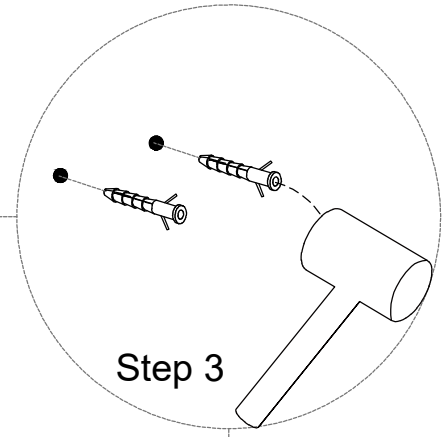

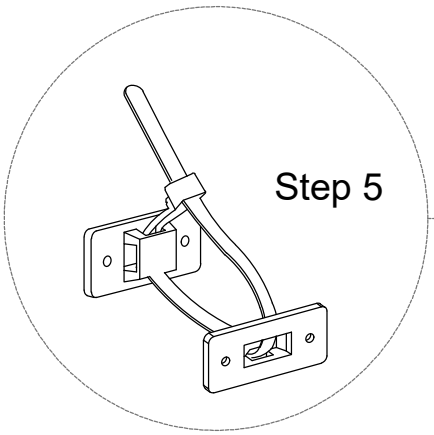

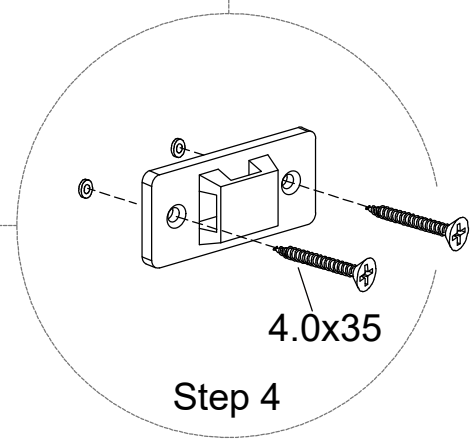

Attention: For safety and stability, we suggest you have to secure the anti-tip accessories to the wall to prevent tipping, injury, and property damage.

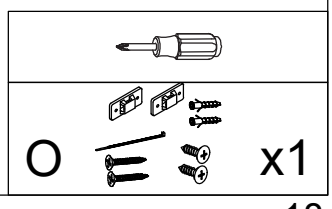

Installation Completed