

Assembly Instructions




Caution : You must read this before you proceed


Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

QUEEN BED

N769P389555W - N769P389556W

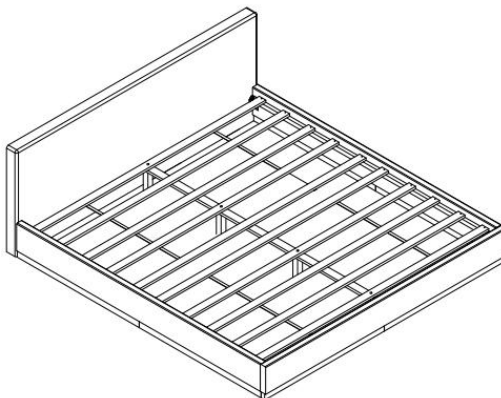

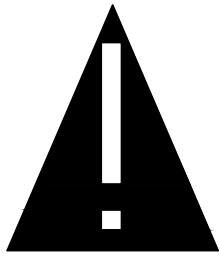

WARNING

STRANGULATION HAZARD.

NEVER PLACE BED NEAR WINDOWS WHERE CORDS
FROM BLINDS


OR DRAPES MAY STRANGLE A CHILD.

NEVER SUSPEND STRINGS OVER BED.

NEVER PLACE ITEMS WITH A STRING, CORD, OR
RIBBON,

SUCH AS HOOD STRINGS OR PACIFIER CORDS,
AROUND A CHILD'S NECK. THESE ITEMS MAY CATCH
ON BED PARTS.

ALWAYS FOLLOW ASSEMBLY INSTRUCTIONS.

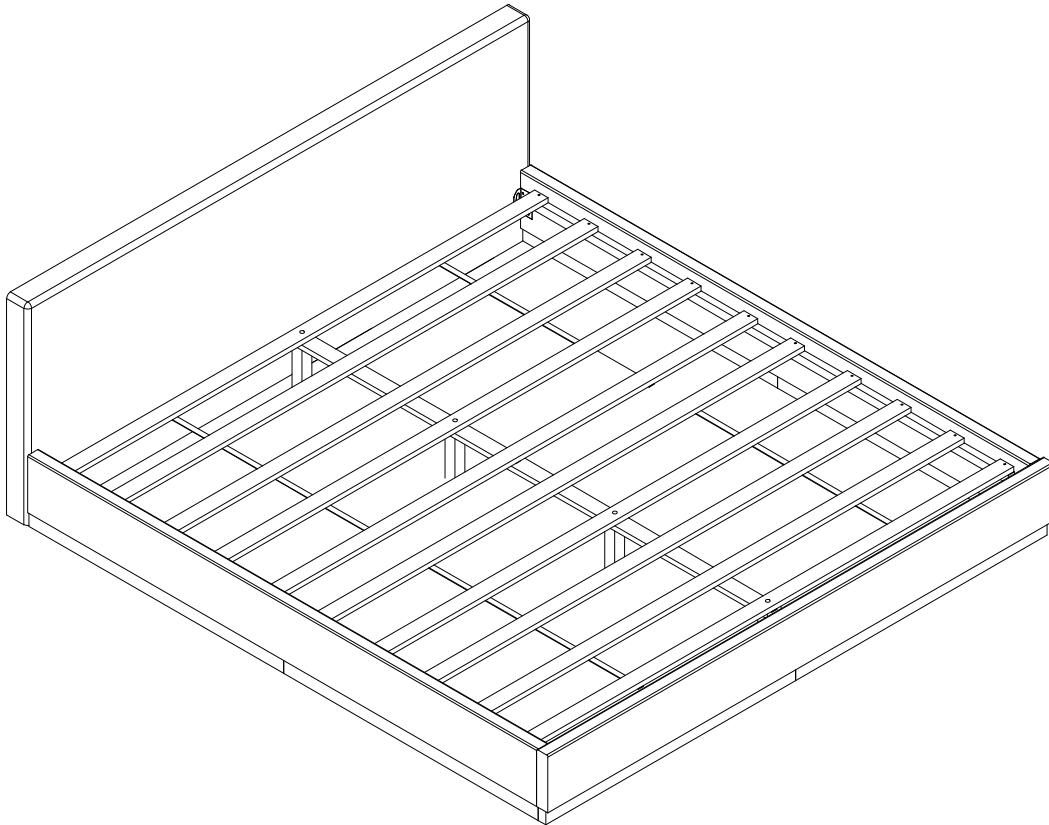





NOTE : THIS BED IS NOT A TOY.

KEEP YOUR CHILD/CHILDREN AT BAY DURING THE
ASSEMBLY PROCESS.




THE BED IS HEAVY.

TO PREVENT INJURY TO YOURSELF OR DAMAGE TO THE
PRODUCT A MINIMUM OF TWO ADULTS ARE REQUIRED
WHENEVER MOVING OR LIFTING IT.

PART LIST : N769P389555W

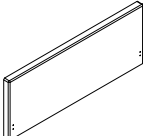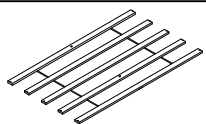LABEL	PICTURE	DESCRIPTION	QTY
A		HEADBOARD	1
E		LEG FRAME ON SIDE RAIL	4
F		LEG FRAME ON SIDE RAIL	2
G		SLATS	2
I		CENTER LEGS	4
	Hardware 	HARDWARE	1

PART LIST : N769P389556W

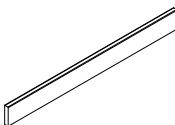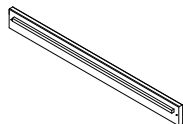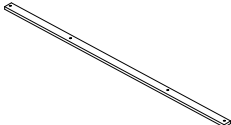
B		FOOTBOARD	1
D		Side Rails	2
H		CENTER RAIL	1

Hardware (PACKED IN A BOX N769P389555W)

Label	Picture	DESCRIPTION	QTY
①		BOLT (5/16 X 60MM)	4+1
②		BOLT (5/16 X 30MM)	8+1
③		BOLT (1/4 X 40MM)	18+1
④		BOLT (1/4 X 15MM)	4+1
⑤		SCREW (M4X 30MM)	20+1
⑥		SCREW (M4X 15MM)	16+1
⑦		FLAT WASHER (5/16)	12+1
⑧		LOCK WASHER(5/16)	12+1
⑨		FLAT WASHER (1/4)	18+1
⑩		LOCK WASHER (1/4)	18+1
⑪		RIGHT LINK	2
⑫		LEFT LINK	2
⑬		ALLEN WRENCH	1
⑭		ALLEN WRENCH	1



Assembly Steps

Overview

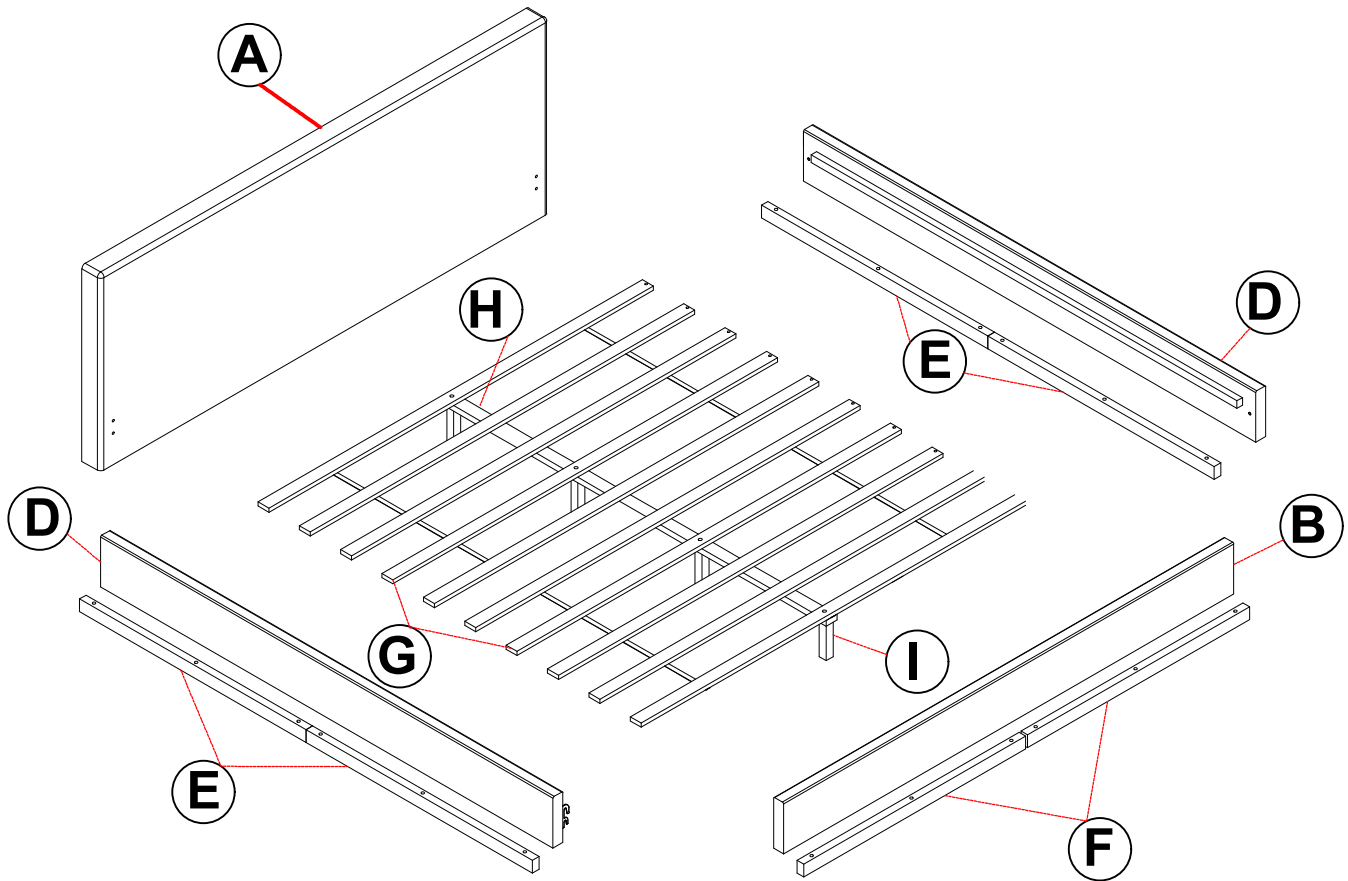



THIS BED HAS MULTIPLE PARTS AND MAY REQUIRE UP TO 30 MINUTES TO ASSEMBLE. TO GIVE YOU AN OVERVIEW OF THE BED PARTS, THE ABOVE PICTURE IS PROVIDED TO HELP YOU PUT THE VARIOUS PARTS INTO PERSPECTIVE. PLEASE READ THROUGH THE INSTRUCTIONS BELOW TO FAMILIARISE YOURSELF WITH THE PARTS AND STEPS BEFORE ASSEMBLY

STEP 1

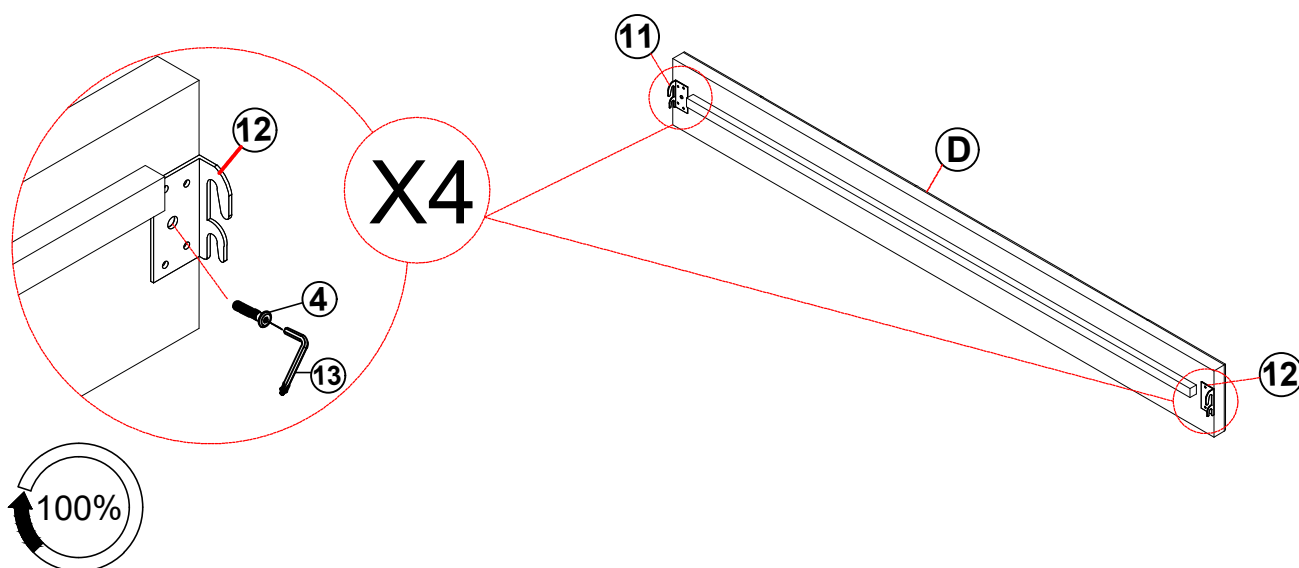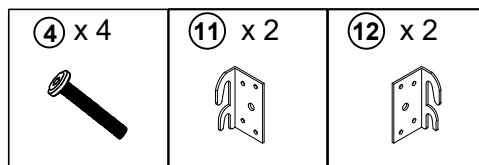

USE BOLTS (4) TO CONNECT PARTS (11) AND (12) TO PART (D). AS ILLUSTRATED.
ASSEMBLY SIMILARLY WITH THE REMAINING PARTS (D)

STEP 2

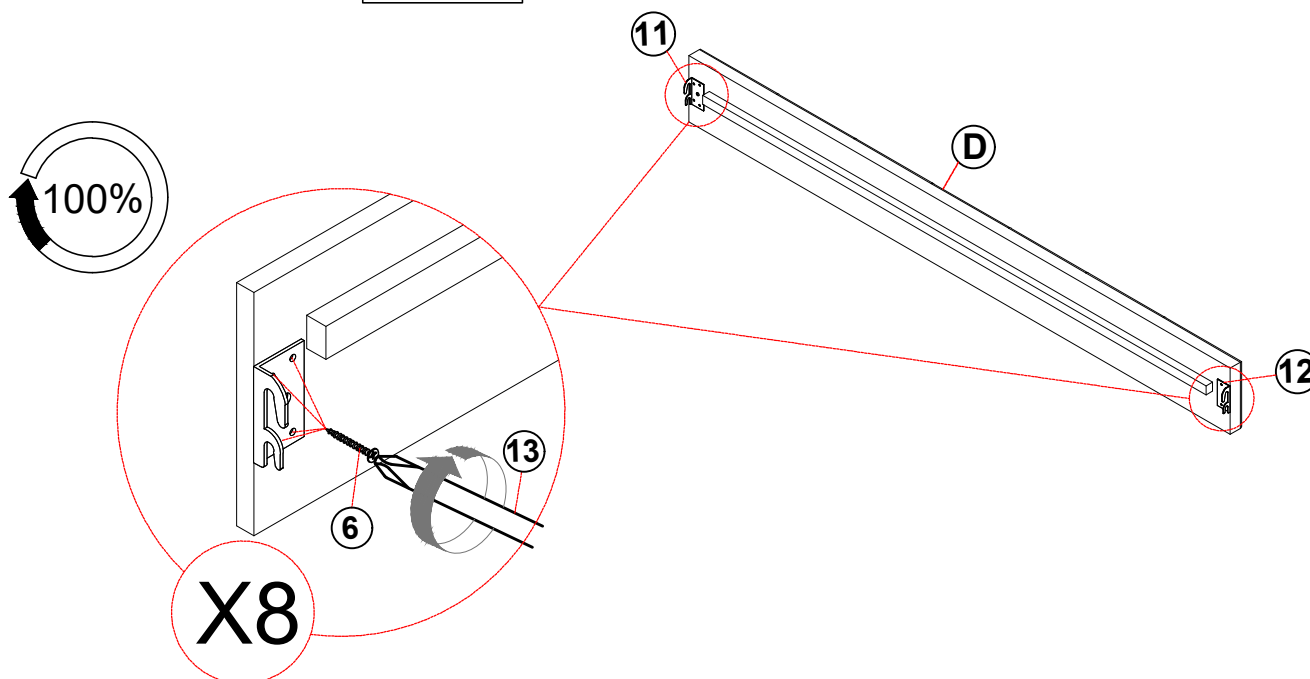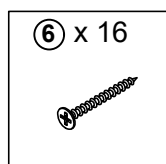

USE SCREWS (6) TO CONNECT PARTS (11) AND (12) TO PART (D). AS ILLUSTRATED.
ASSEMBLY SIMILARLY WITH THE REMAINING PARTS (D)

STEP 3

③ x 12





⑨ x 12



⑩ x 12



X12

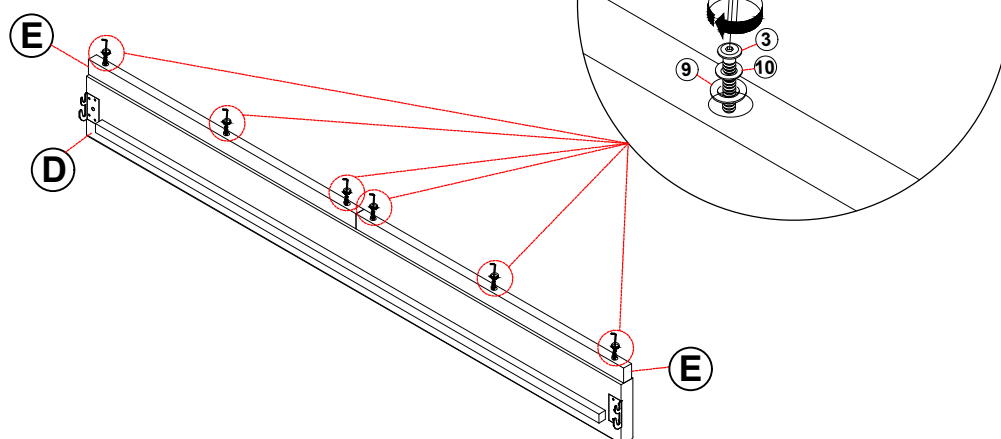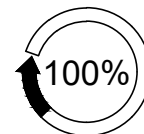

INSTALL THE BOLTS (3) INTO PARTS (E) AND (D) USING A HEX WRENCH AS SHOWN IN THE ILLUSTRATION. ASSEMBLY SIMILARLY WITH THE REMAINING PARTS (D)

STEP 4

③ x 6




⑨ x 6



⑩ x 6





X6

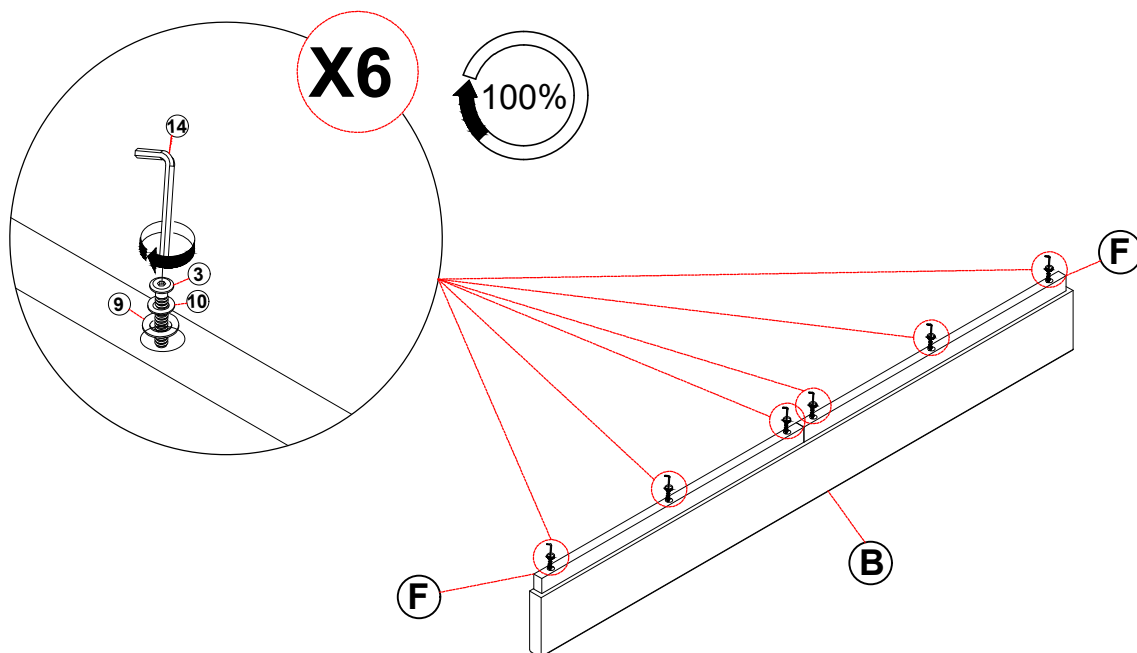



INSTALL THE BOLTS (3) INTO PARTS (F) AND (B) USING A HEX WRENCH AS SHOWN IN THE ILLUSTRATION.

STEP 5

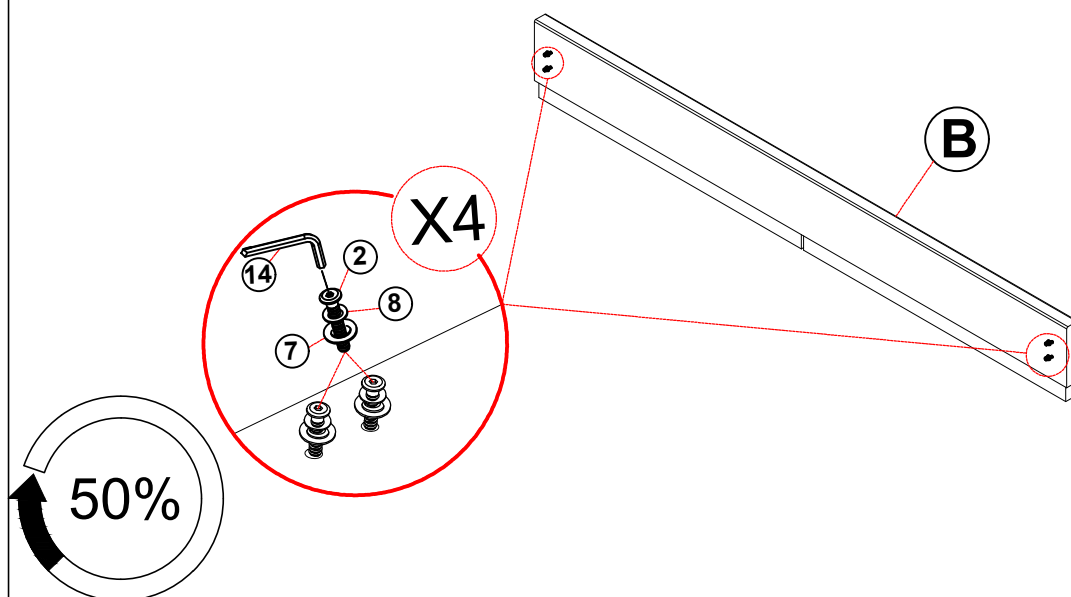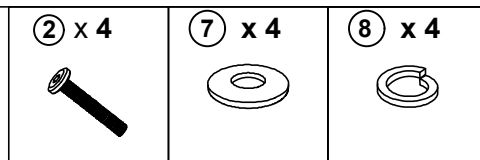


THE BOLTS (2) ARE ASSEMBLED AT 50%. AS ILLUSTRATED

STEP 6

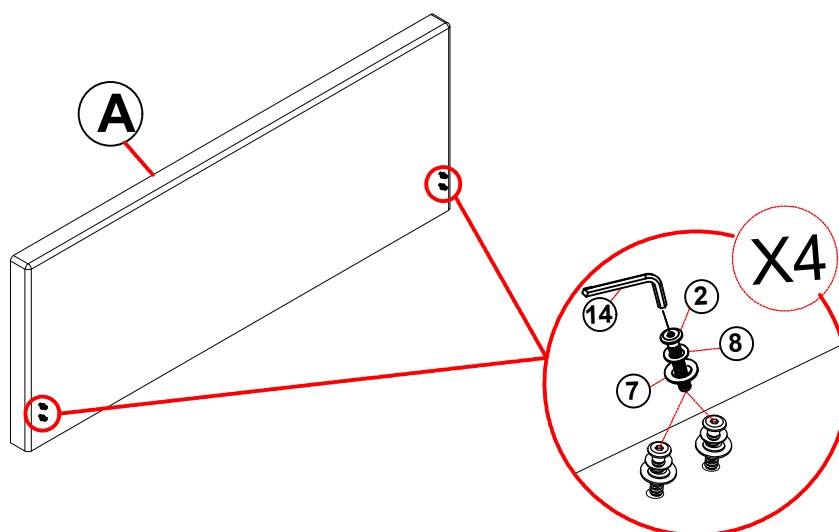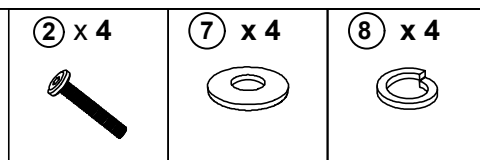



THE BOLTS (2) ARE ASSEMBLED AT 50%. AS ILLUSTRATED

STEP 7

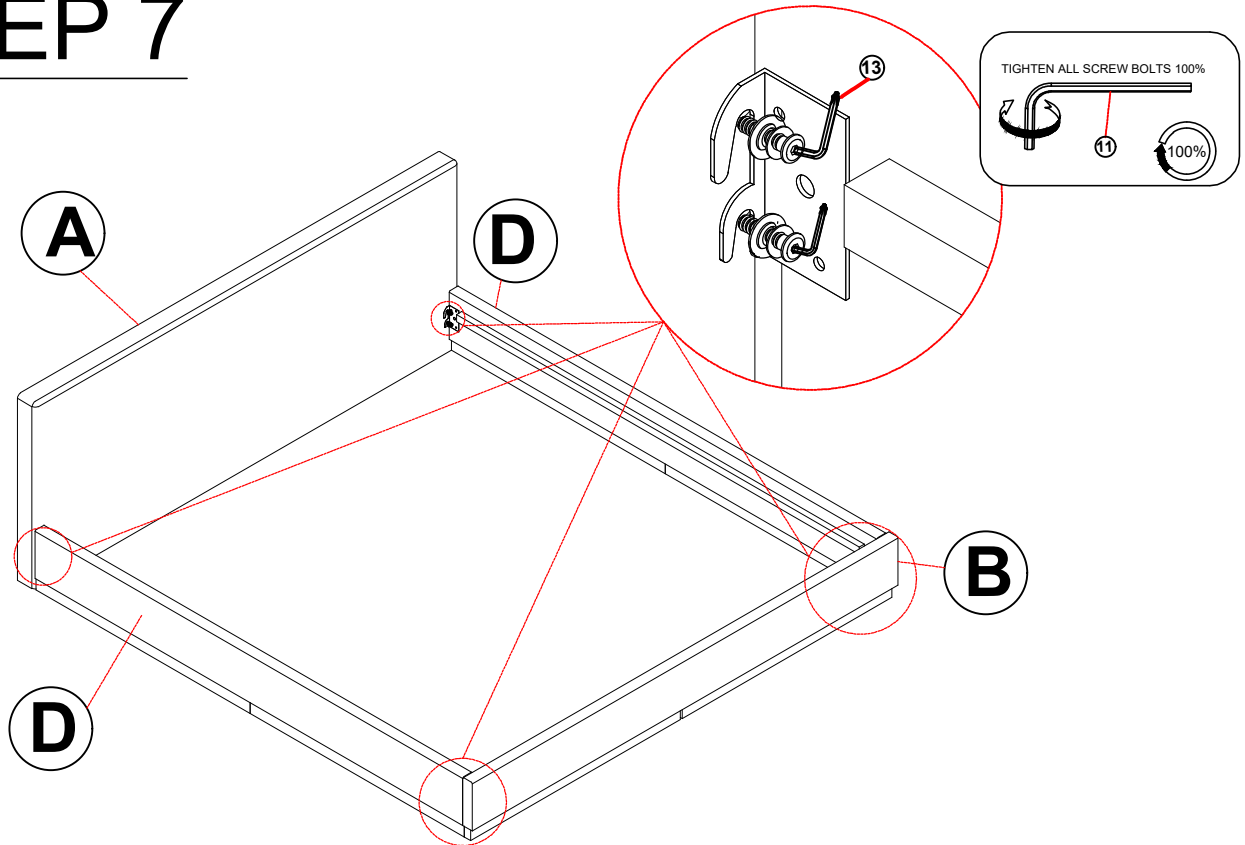



ALIGN THE SIDE PANEL (D) WITH THE HEADBOARD (A) AND FOOTBOARD(B).
TIGHTEN ALL BOLTS AND SCREWS. ALL PARTS MUST BE INSTALLED
PERPENDICULARLY AND ON A FLAT SURFACE.

STEP 8

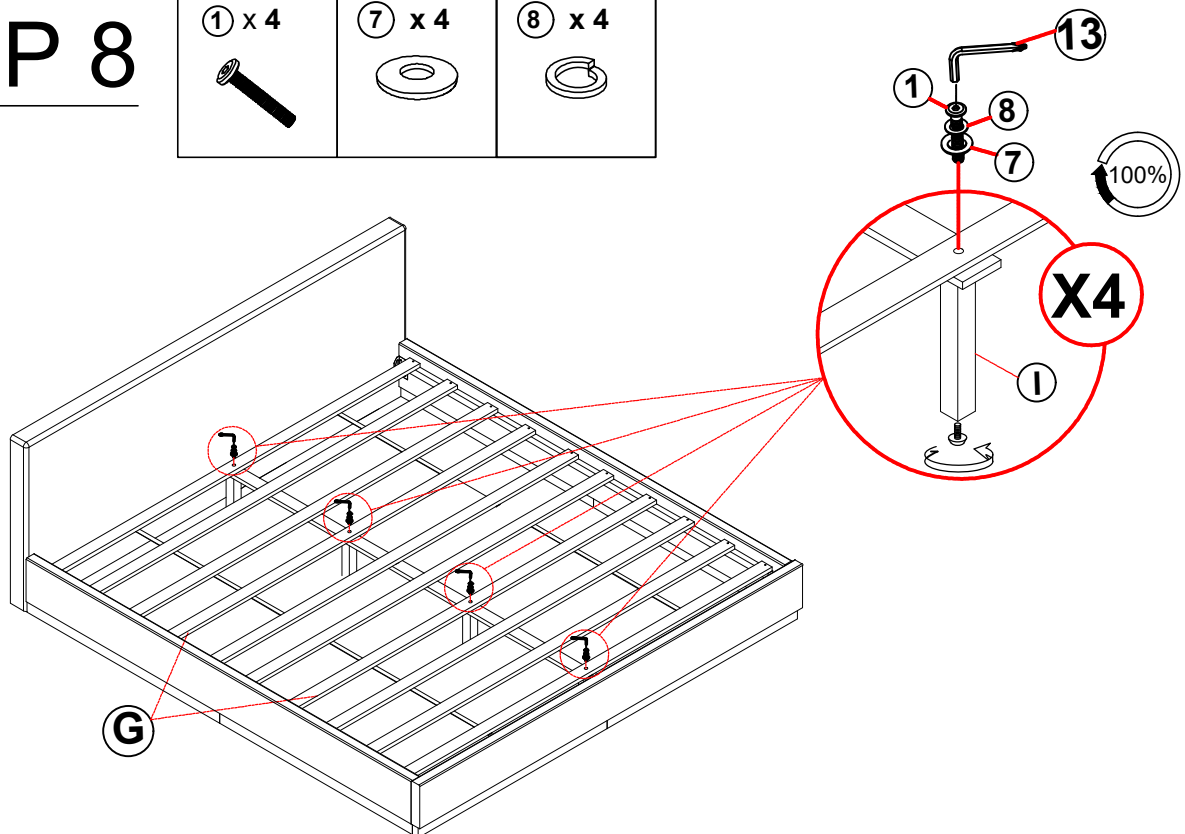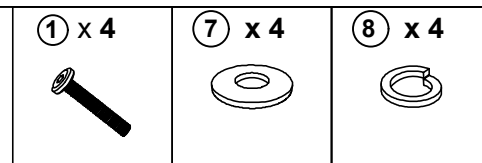


ALIGN THE INSTALLATION POSITION OF THE MIDDLE BAR (H) WITH THE MIDDLE LEG (I)
AND THE BARS (G)
ATTACH THE BARS (H) AND BAR (K) TO THE MIDDLE LEG (I) WITH BOLTS (1) USING AN
M4 HEX WRENCH (13)

STEP 9

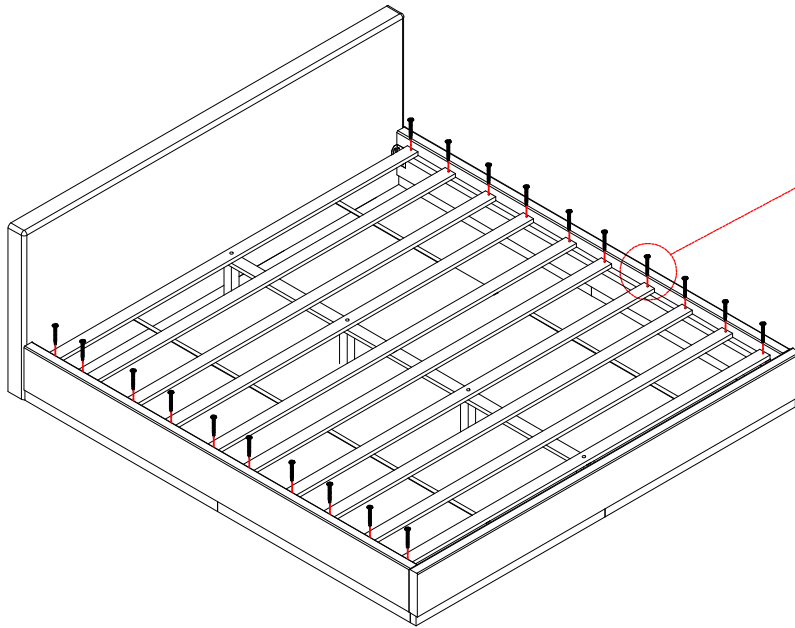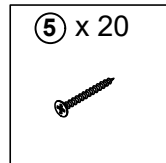

ATTACH ALL SLATS (G) TO THE RAIL ON SIDE PANEL (D) BY USING SCREWS (5) AND SCREWDRIVER (13).

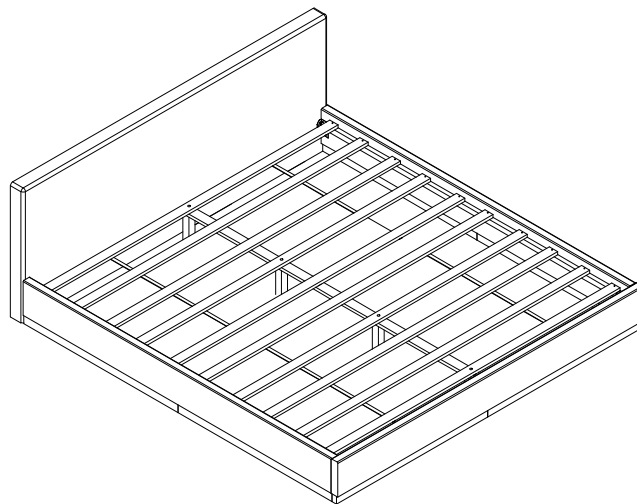

PLACE THE BED ON A LEVEL SURFACE.
INSPECT IT AND MAKE SURE ALL PARTS ARE ADEQUATELY CONNECTED.
DON'T PUSH TOO HARD, SHAKE ON THE BED.
THIS WOULD HELP TO ALIGN ALL THE PARTS AT ALL THE JOINT AREAS.
CAUTION 1: WHEN TIGHTENING THESE SCREWS, TIGHTEN SEQUENTIALLY.
DO NOT TIGHTEN ANY SCREW FULLY AND THEN TOWARDS THE NEXT ONE.
THIS WOULD CAUSE THE FRAME TO WARP.
IF THERE IS STILL WOBBLING, LOOSEN THE SCREWS AND EXECUTE THIS SAME PROCESS. DO NOT
TIGHTEN ANY SCREW FULLY AND THEN TOWARDS THE NEXT ONE.
WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.
ENSURE ALL SCREWS ARE FULLY LOCKED INTO POSITION.
THE BED IS READY TO BE USED.
CAUTION 2: THIS BED CAN ONLY BE USED ON A FLAT, LEVEL SURFACE.