


Polybird




ADIRONDACK P-1


TOOLS

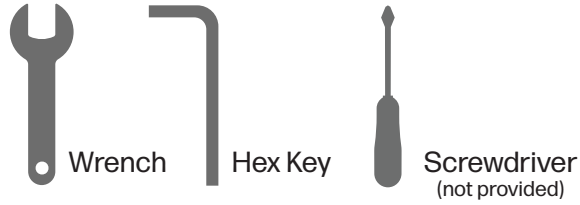

PARTS

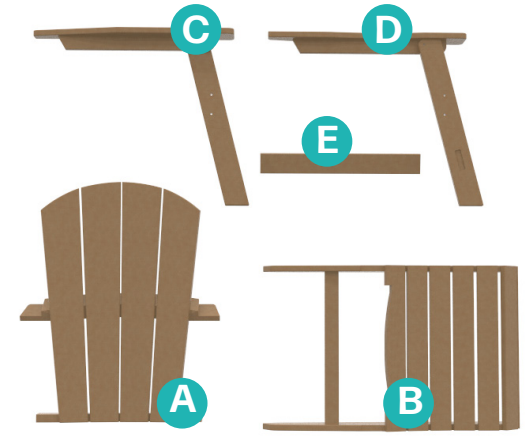


HARDWARE

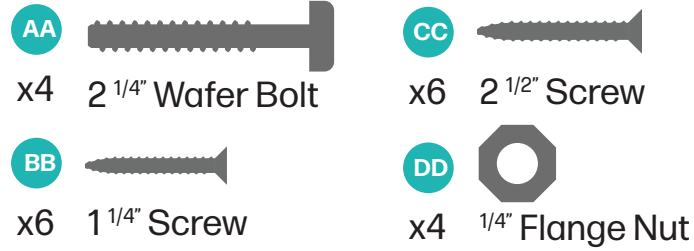


Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

1

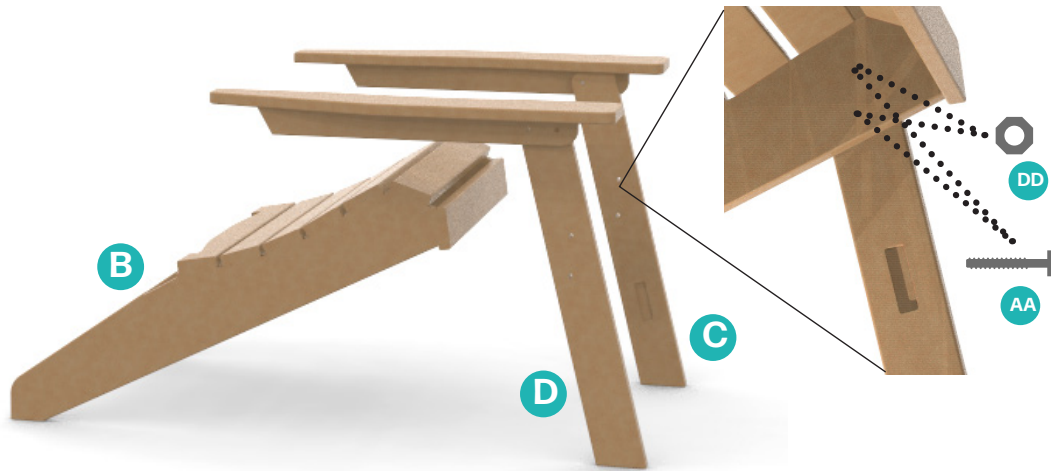


Attach seat (B) to legs C and D using four 2 1/4" wafer bolts (AA) and four 1/4" flange nuts (DD), as shown. Hand tighten only.

2

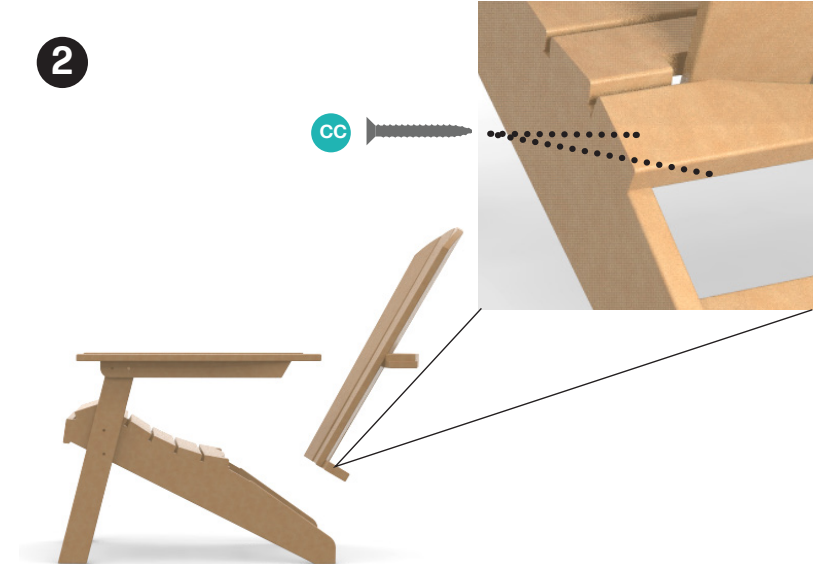


Attach seat back (A) to assembly from step 1 by inserting four 2 1/2" screws (CC) through back brace.

3

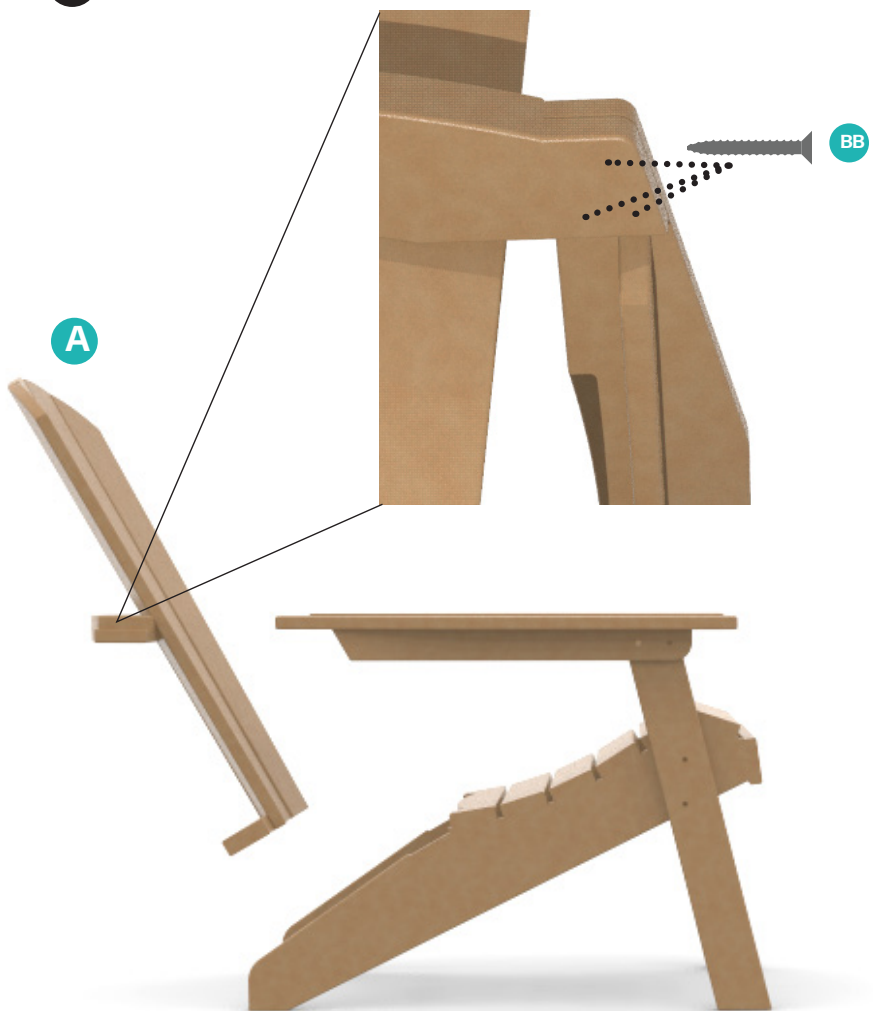

Insert six 1 ¹/₄" screws (BB) at arm rests as shown to finishing attaching seat back (A) to assembly from steps 1 & 2.

4

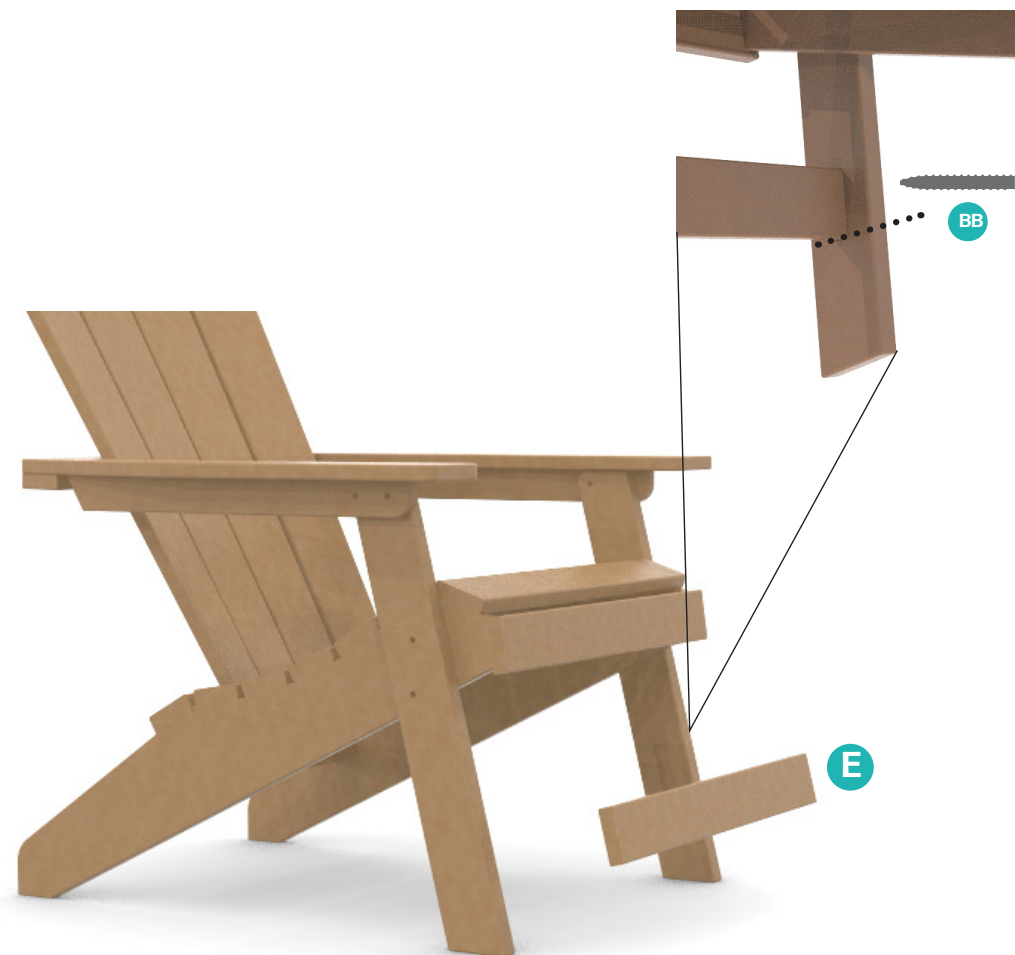

Attach brace (E) to front legs using two 2 ¹/₂" screws (BB), as shown.

5

Tighten all bolts.

We hope you enjoy your new piece of furniture for years to come!