


Assembly Guide

Keep manual for future reference.

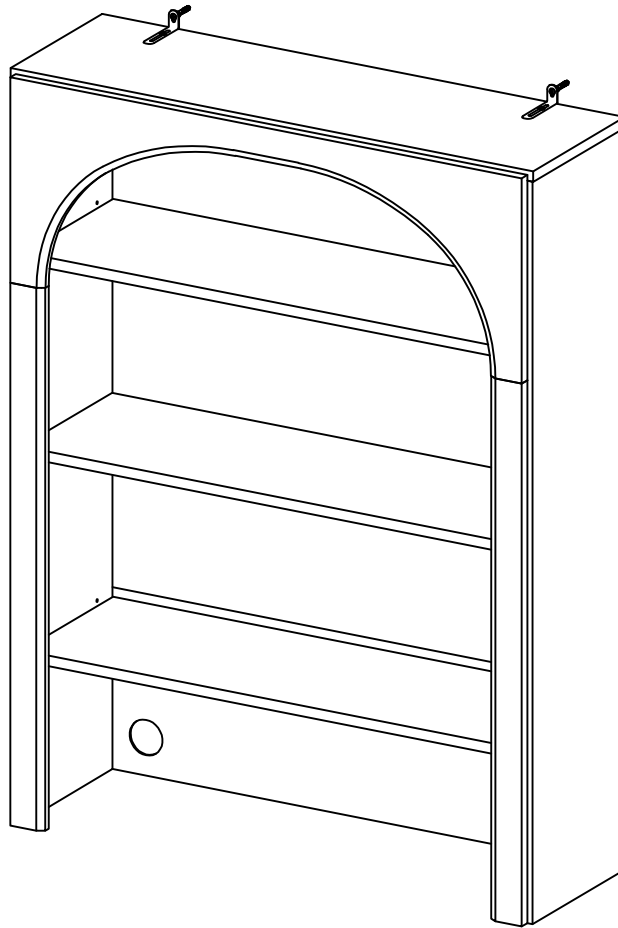

MB-MOKA-A001~A003

Have an assembly question or need a replacement part?
Please contact MorganBrig.Service@gmail.com, we are here to help.

Inform

Assembly Instructions

Before beginning the assembly process, please read and save these instructions for reference. Following these guidelines will ensure a smooth and successful assembly of your product secure the components without excessive tightening.

1.Part Identification:

Carefully separate and identify all the parts included in your package. Confirm that you have all the components listed in the instruction manual. This step will help you avoid any missing or misplaced parts during assembly.

2.Work Surface:

To prevent any scratches or damage to the product, assemble it on a soft mat or a similar protective surface. This will provide a cushioned area for the components and protect the surfaces from unwanted marks.

3.Step-by-Step Assembly:

Follow the assembly instructions provided, proceeding one step at a time. Take care to understand each step properly before proceeding to the next one. This sequential approach ensures that the assembly is done correctly and minimizes the chance of errors.

4.Proper Screw Seating:

all screws are correctly seated. By partially tightening each screw and nut initially, you can ensure that they are aligned properly and fit securely before final tightening.

5.Avoid Over-Tightening:

While each screw and nut should be tightened correctly, it is crucial not to over-tighten them. Over-tightening can cause damage to the product or compromise its structural integrity. Use the appropriate amount of force to secure the components without excessive tightening.

customer help center:


If you encounter any questions or problems during the assembly process, please do not hesitate to contact us.

We strive to provide excellent customer support and will respond to your inquiries within 24 hours. Our team will offer you a suitable solution to address any concerns you may have.



MorganBrig.Service@gmail.com


Get to know your Boards

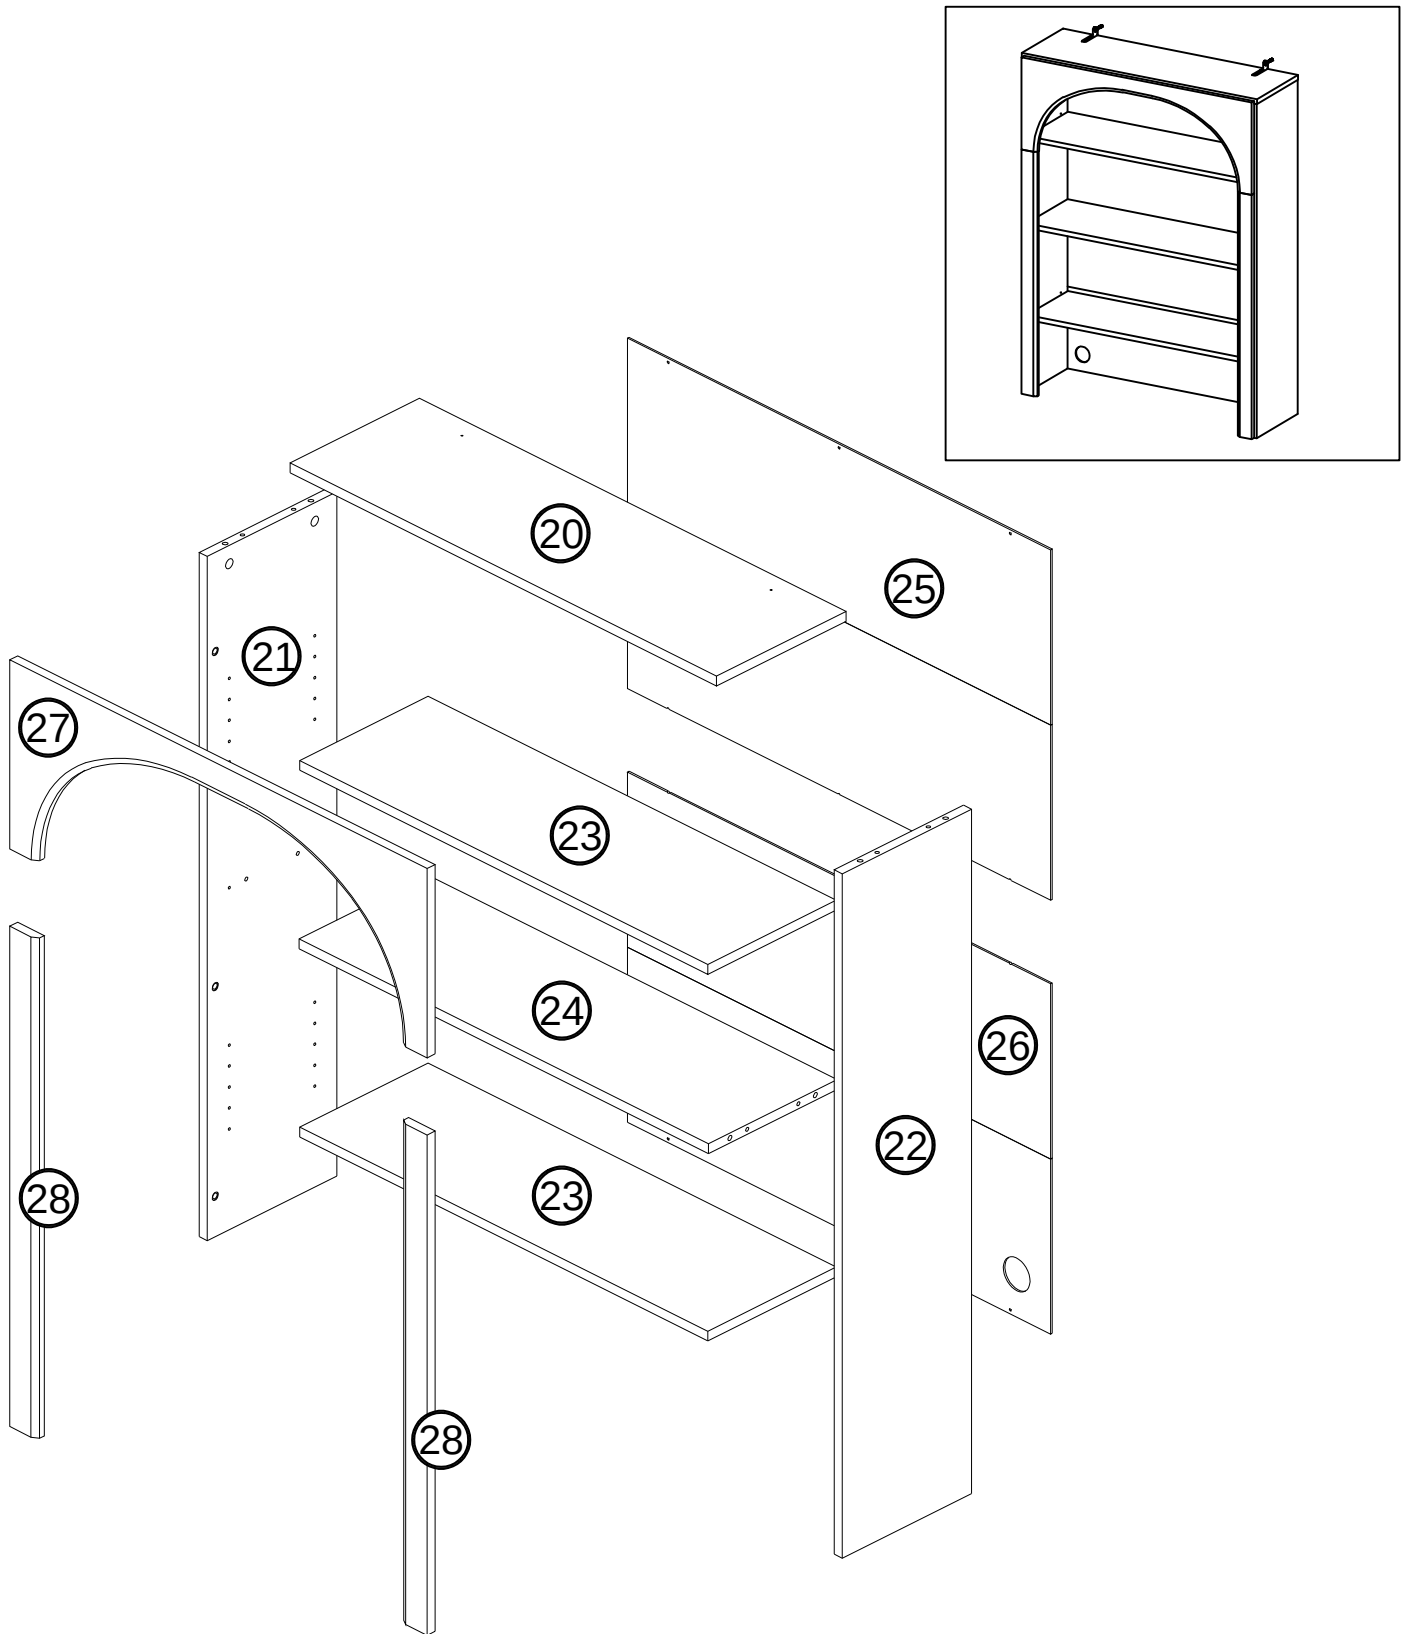

Have an assembly question or need a replacement part?
Please contact MorganBrig.Service@gmail.com, we are here to help.


Parts List

20

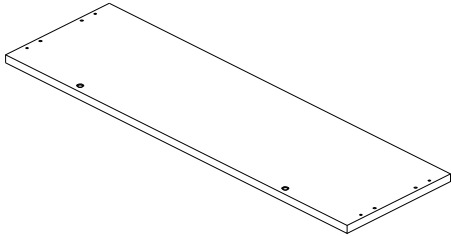


[1]

21

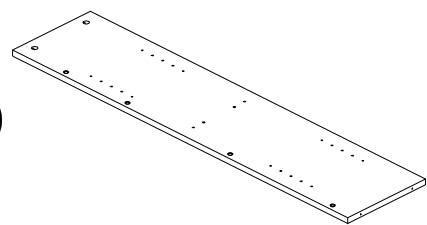


[1]

22

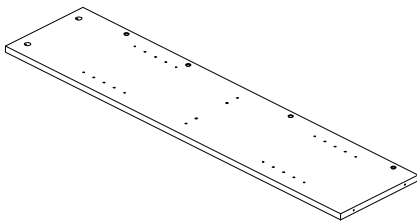


[1]

23

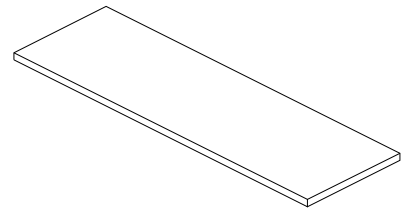


[2]

24

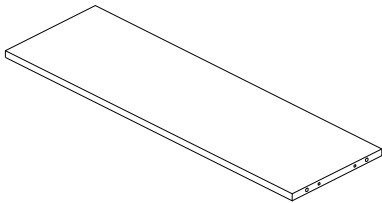


[1]

25

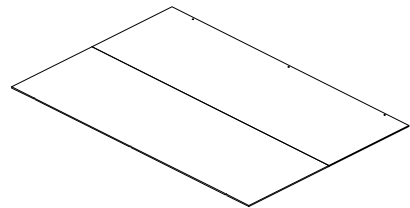


[1]

26

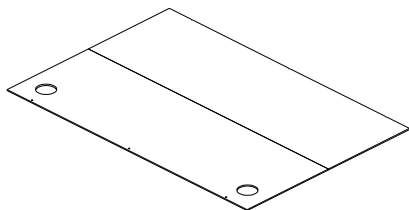


[1]

27

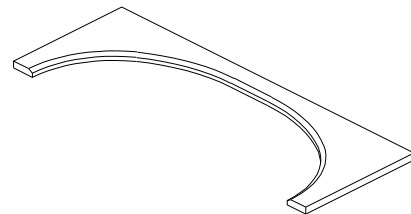

[1]

28

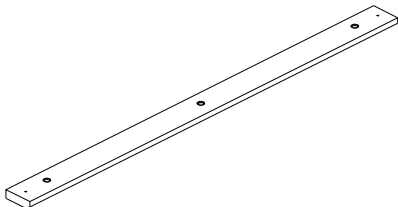


[2]

Have an assembly question or need a replacement part?
Please contact MorganBrig.Service@gmail.com, we are here to help.

Fasteners

Fasteners are shown actual size 1:1


(A)



[8]

KD Bolt
M6x35mm

(B)



[8]

KD Cam
Ø15x9.5mm


(C)



[8]

Wood Dowel
6 x 30mm

(P)



[4]

ST4.8x50mm


(Q)



[9]

ST3.5x12mm

(R)




[20]

M6x12mm

Have an assembly question or need a replacement part?
Please contact MorganBrig.Service@gmail.com, we are here to help.

Get to know your Hardware


(S)

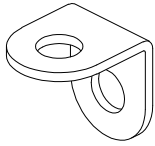

[10]

L Bracket


(K)



[8]

Shelf Pin


(T)



[16]

Nail


(U)

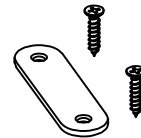

[2]

Wrench

(V)

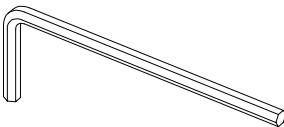


[1]

Wrench


Have an assembly question or need a replacement part?
Please contact MorganBrig.Service@gmail.com, we are here to help.

Get to know your Hardware

TIP OVER RESTRAINT HARDWARE

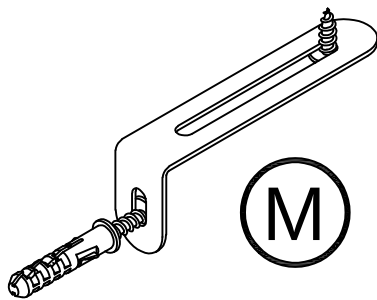


(M1)



[2]

ST4.0x38mm

(M2)



[2]

ST4.0x12mm


(M3)



[2]

Ø5.0x30mm

(M4)

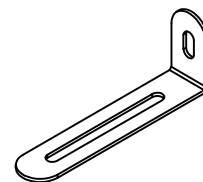


[2]

75*25*25*1mm

Have an assembly question or need a replacement part?
Please contact MorganBrig.Service@gmail.com, we are here to help.



STEP 1

(A)




[4]

KD Bolt
M6x35mm

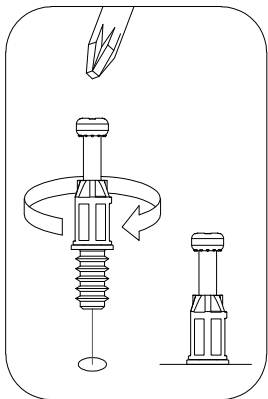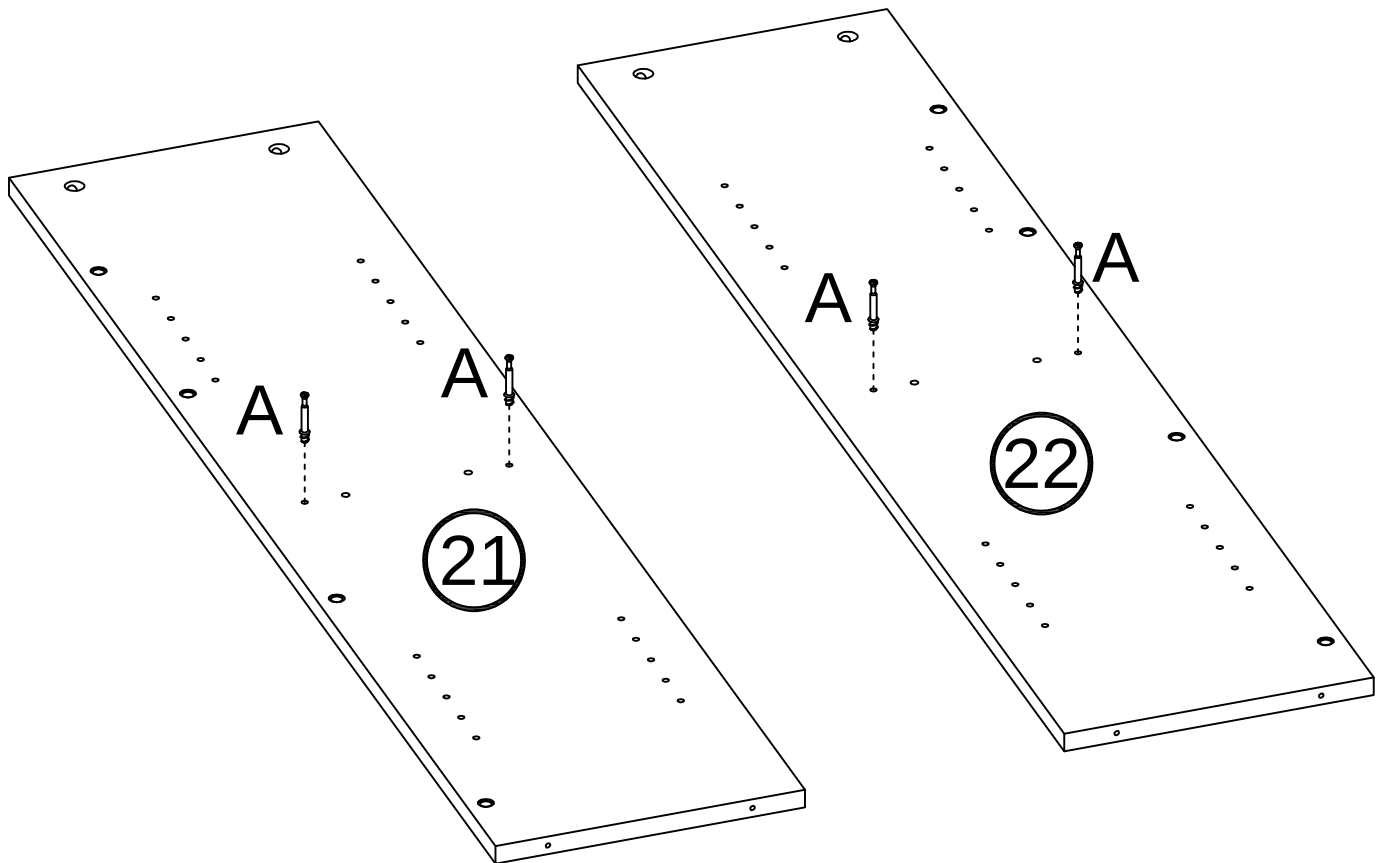

STEP 2


Ⓑ



[4]



KD Cam
Ø15x9.5mm

Ⓒ




[4]

Wood Dowel
6 x 30mm

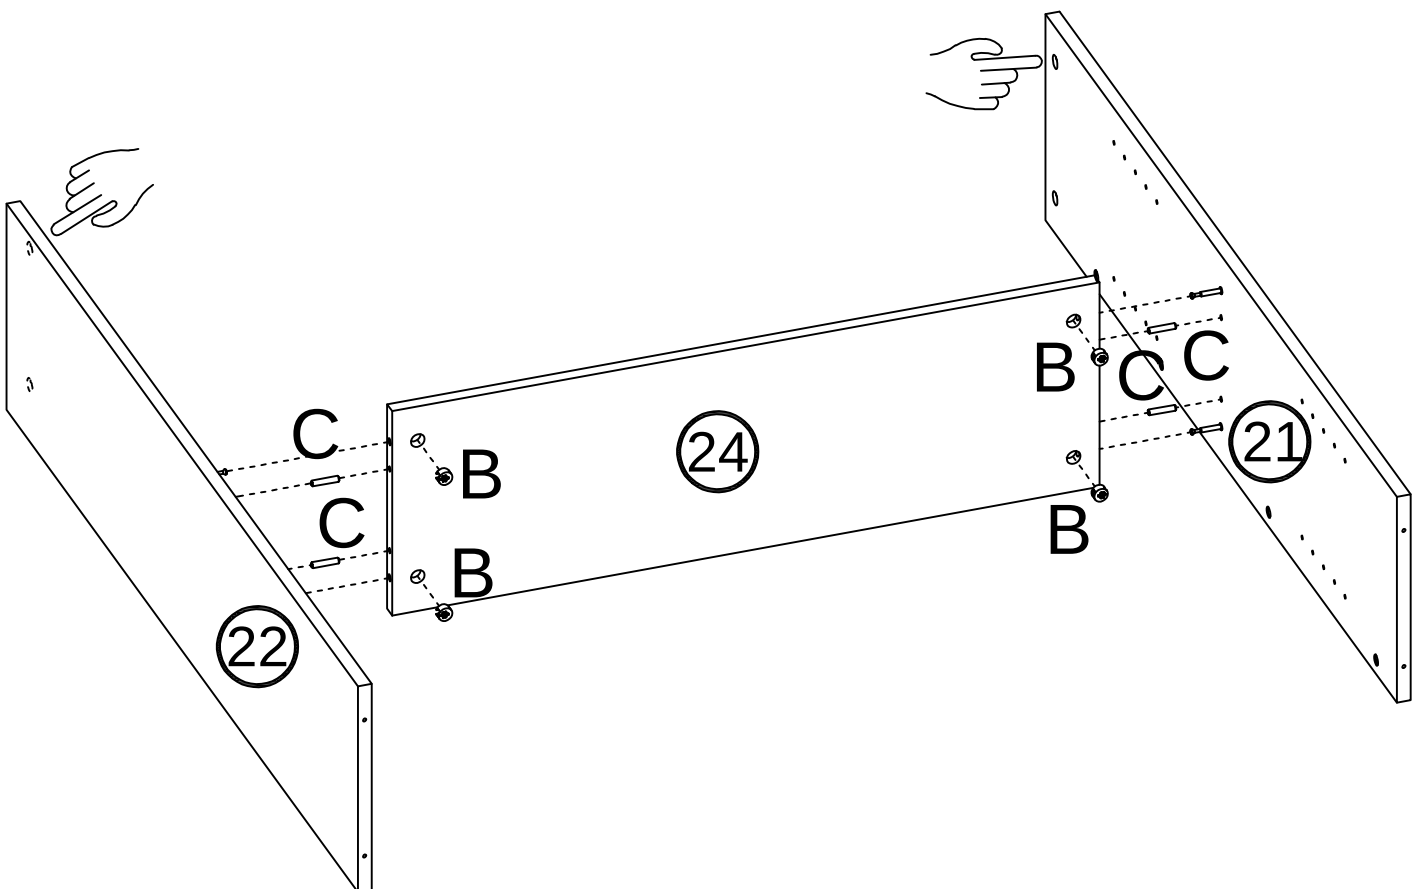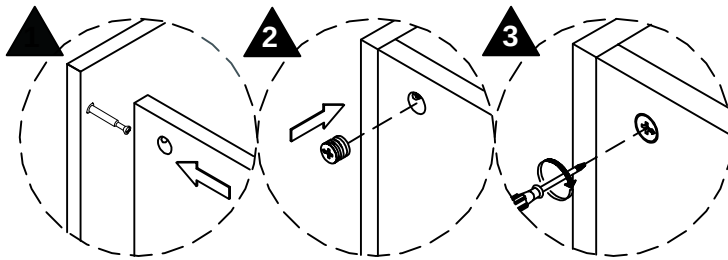

STEP 3

(A)



[4]

KD Bolt
M6x35mm



(M)



[2]




M2

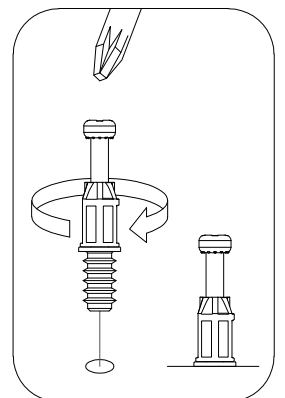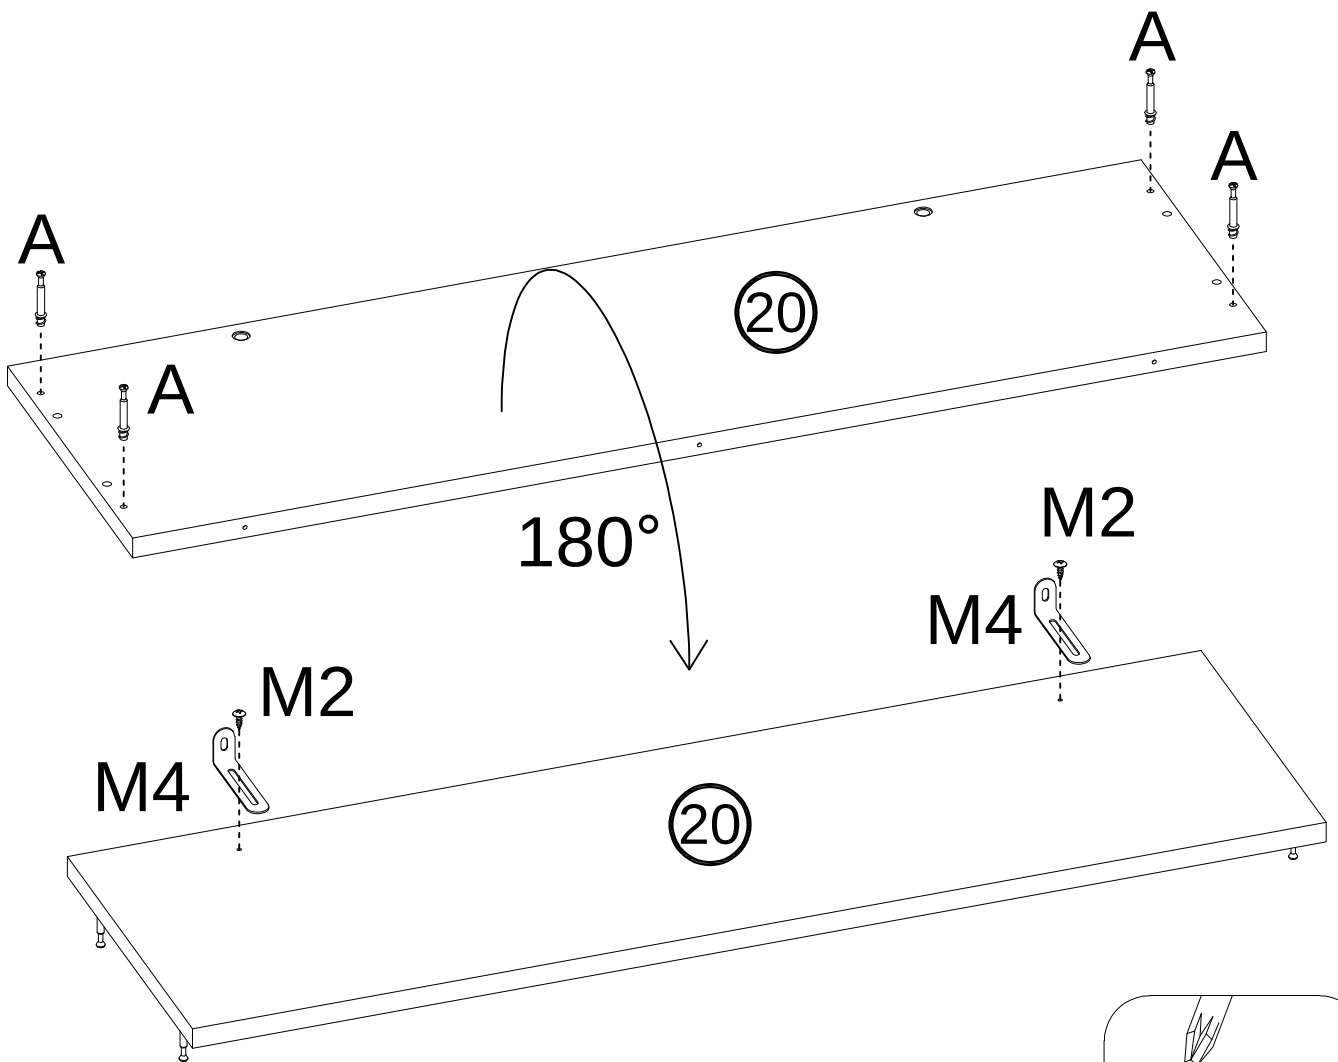

STEP 4


Ⓑ



[4]



KD Cam
Ø15x9.5mm

Ⓒ




[4]

Wood Dowel
6 x 30mm

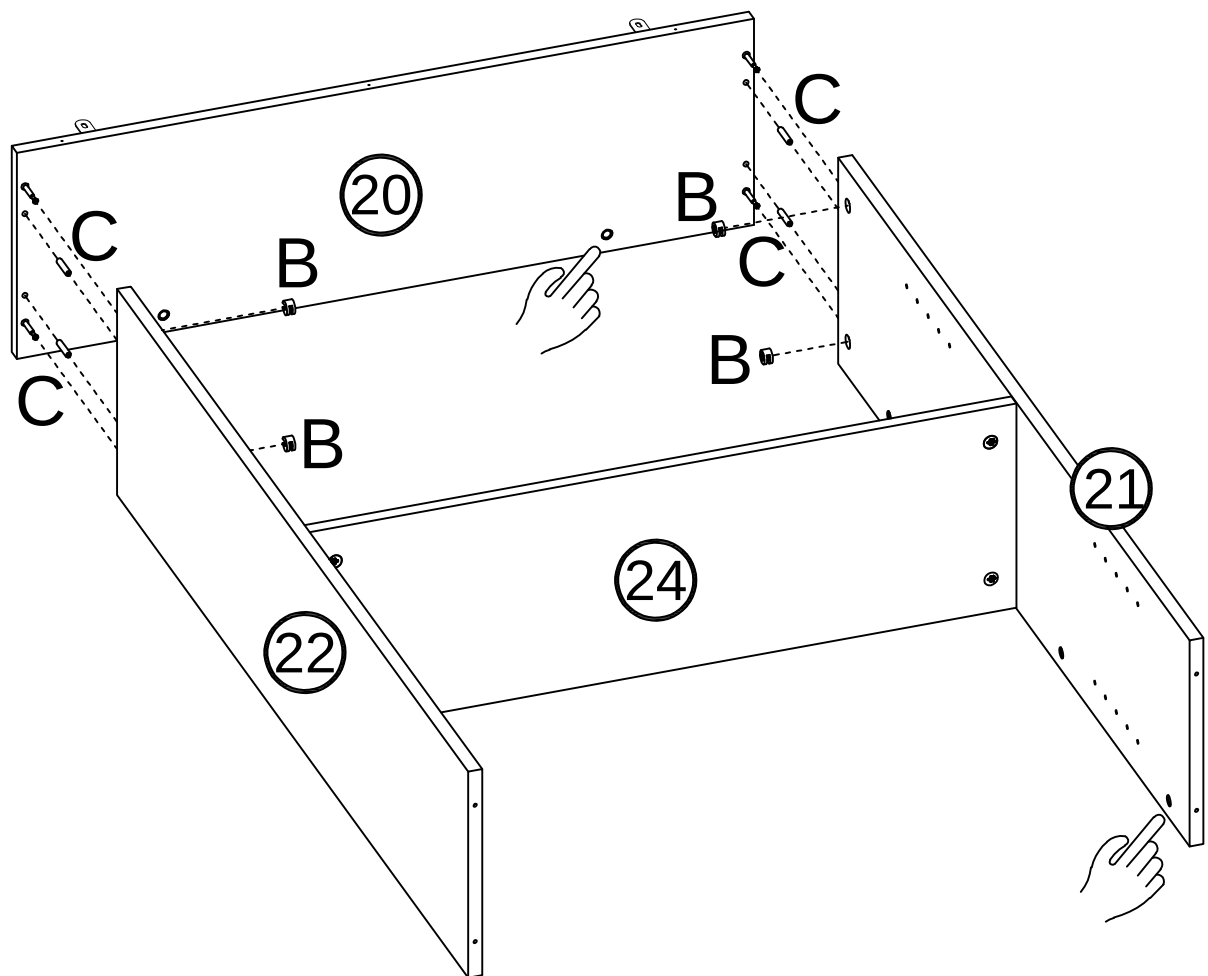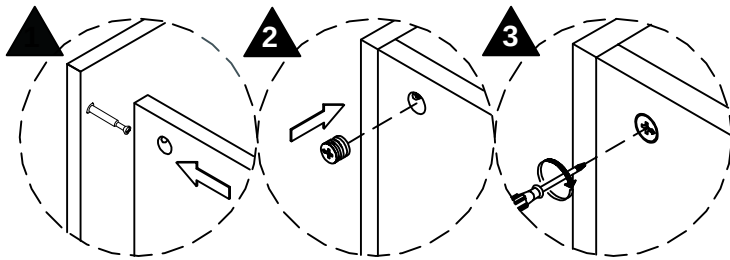



STEP 5

U

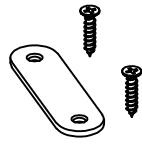

[2]


Wrench

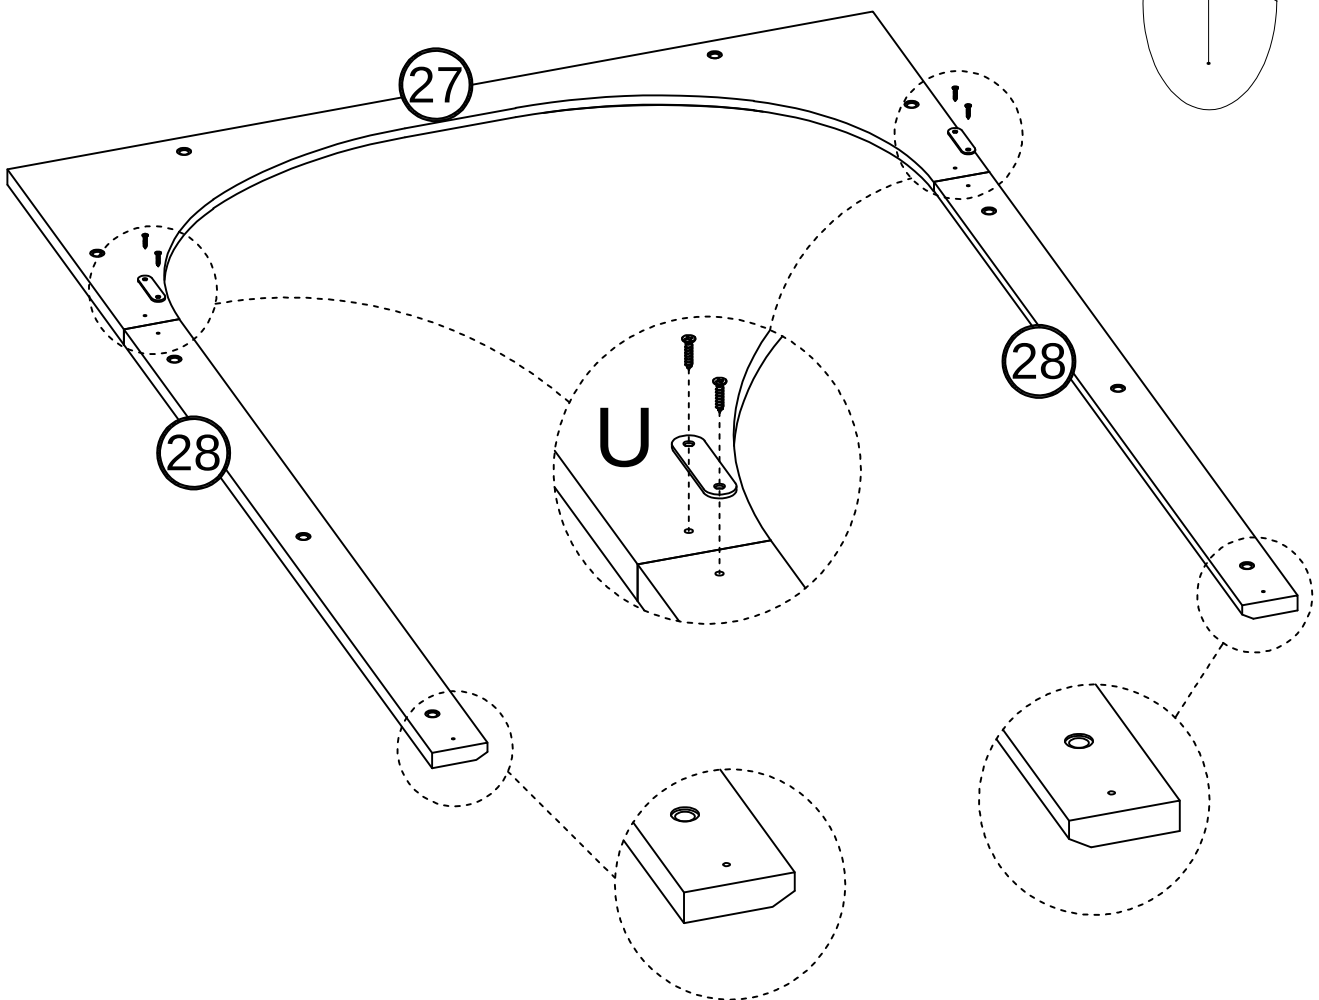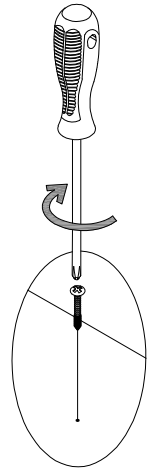

Assemble on a flat
clean and soft surface.

STEP 6


(R)



[20]



M6x12mm

(S)

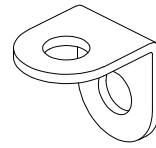

[10]

L Bracket

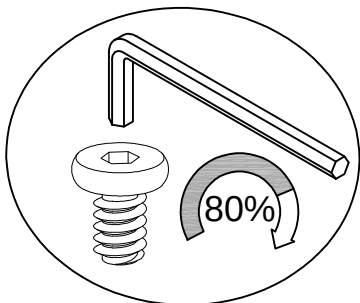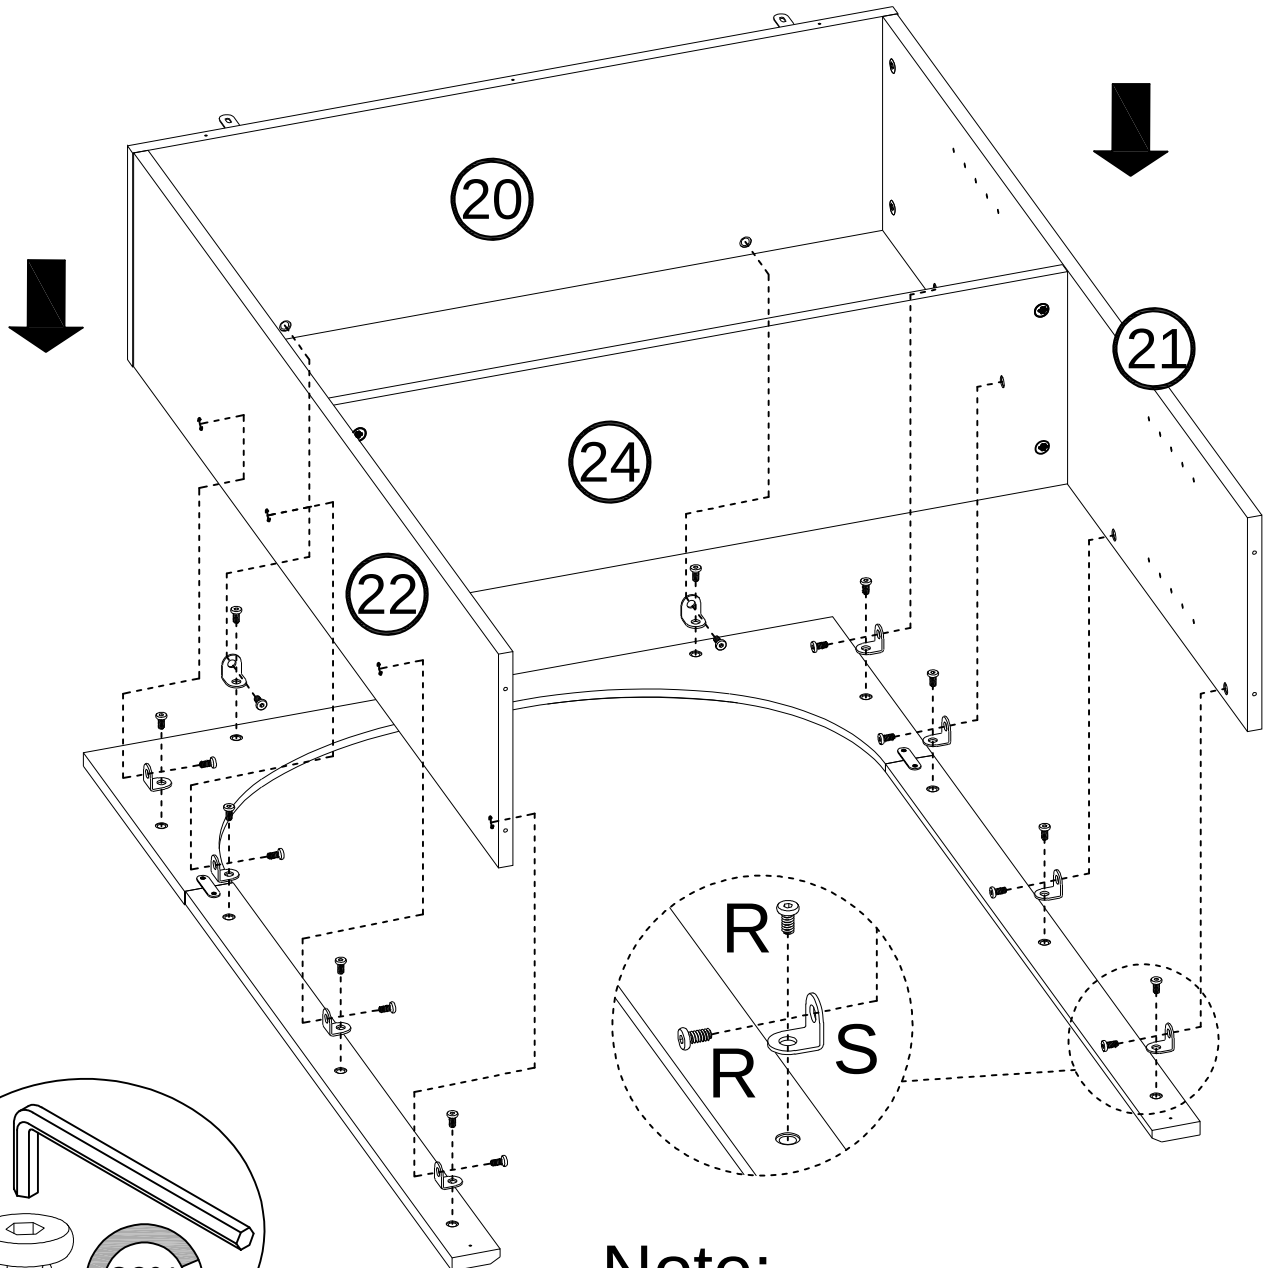

Note:
Do Not over-tighten


STEP 7

Q




[6]

ST3.5x12mm

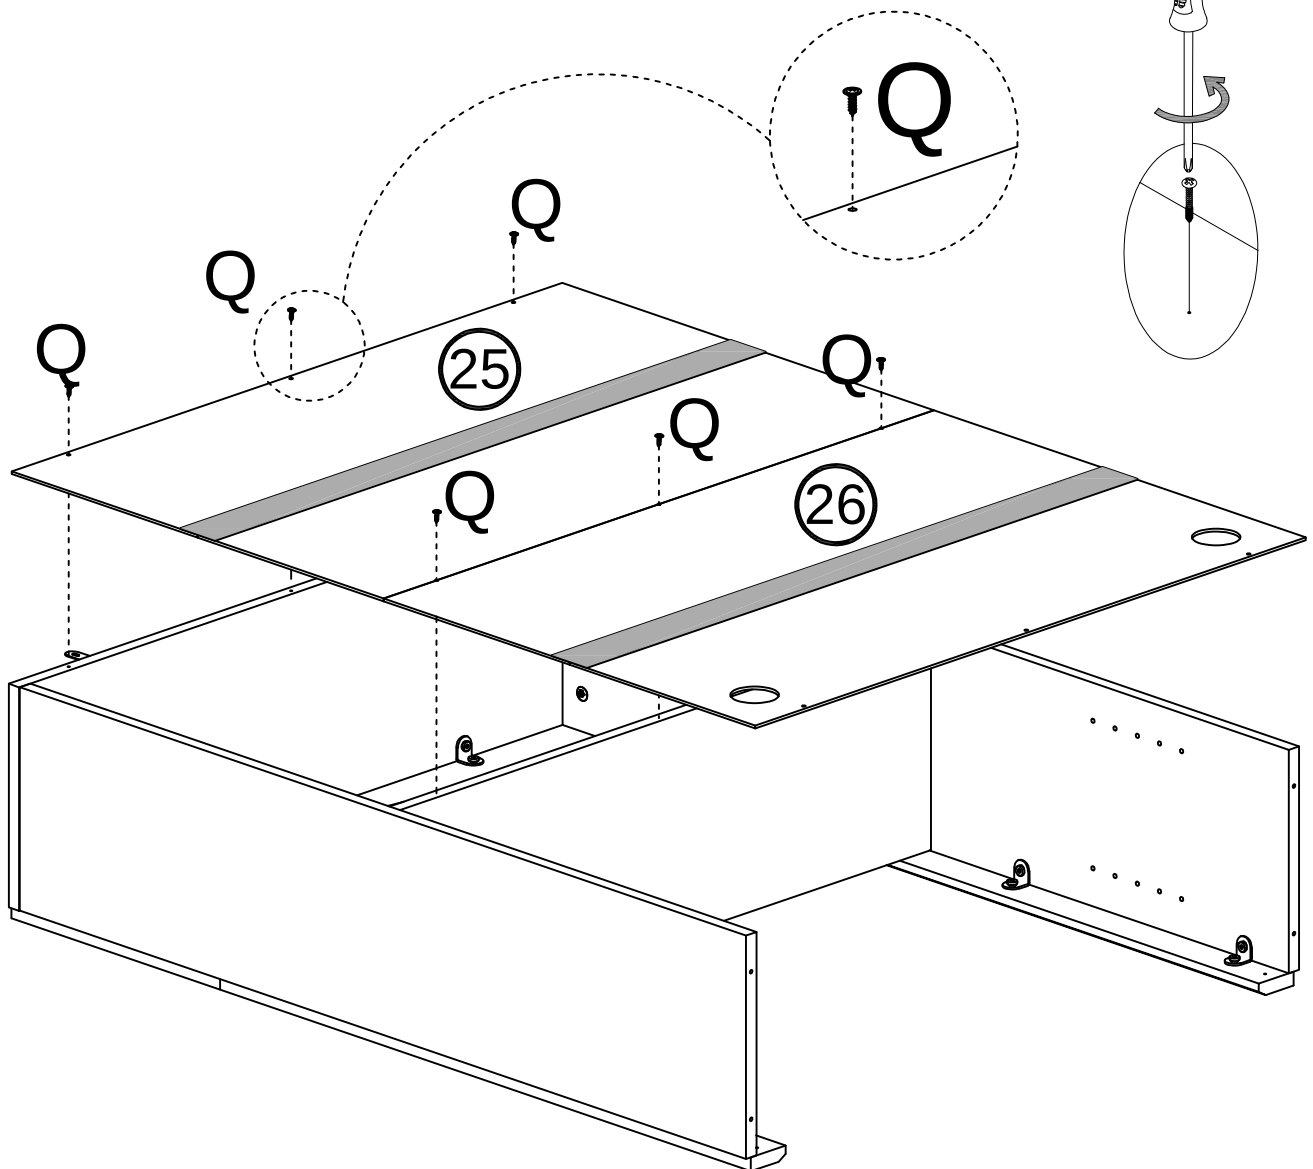



STEP 8

(T)



[16]


Nail

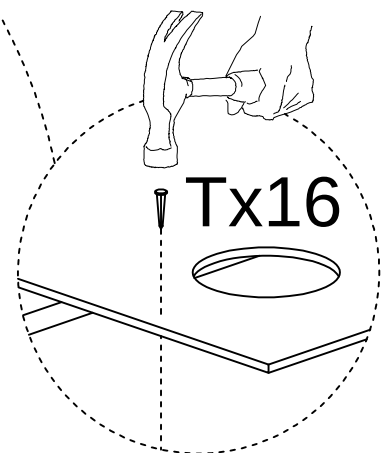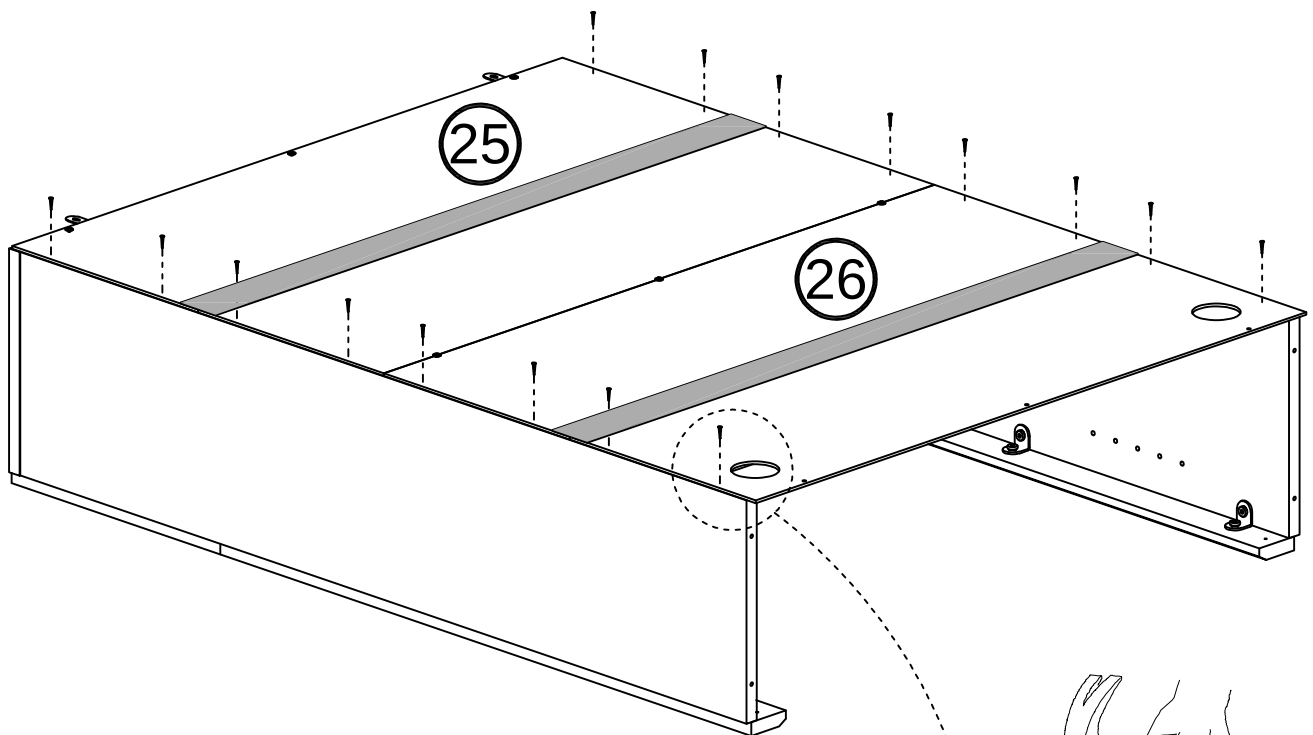

Effects demonstration

Note: If you purchased the lower cabinets (A004~A15) first and have already assembled them, the following steps guide you on how to remove the top panel of the lower cabinets and install them.

For the lower cabinet (A004-012) please see: STEP 9 - STEP 17.
For the lower cabinet (A013-015) please see: STEP 18 - STEP 28.

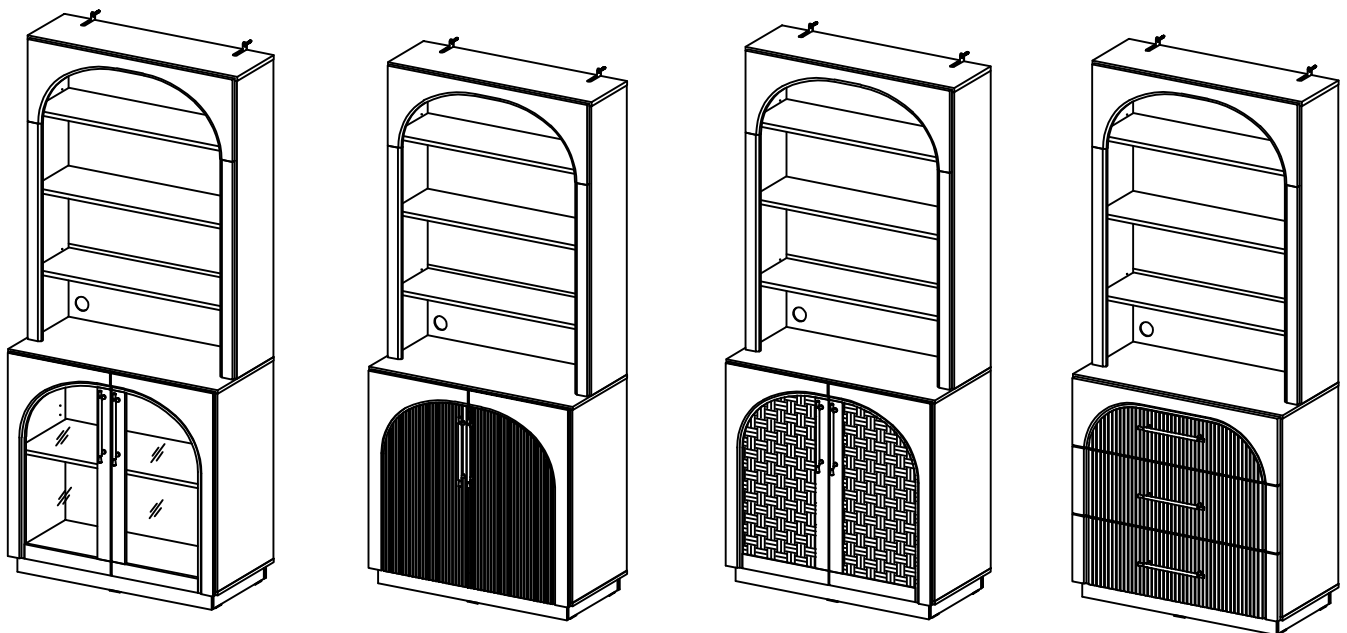


MB-MOKA-A004~A006

MB-MOKA-A010~A012




MB-MOKA-A007~A009

MB-MOKA-A013~A015


STEP 9

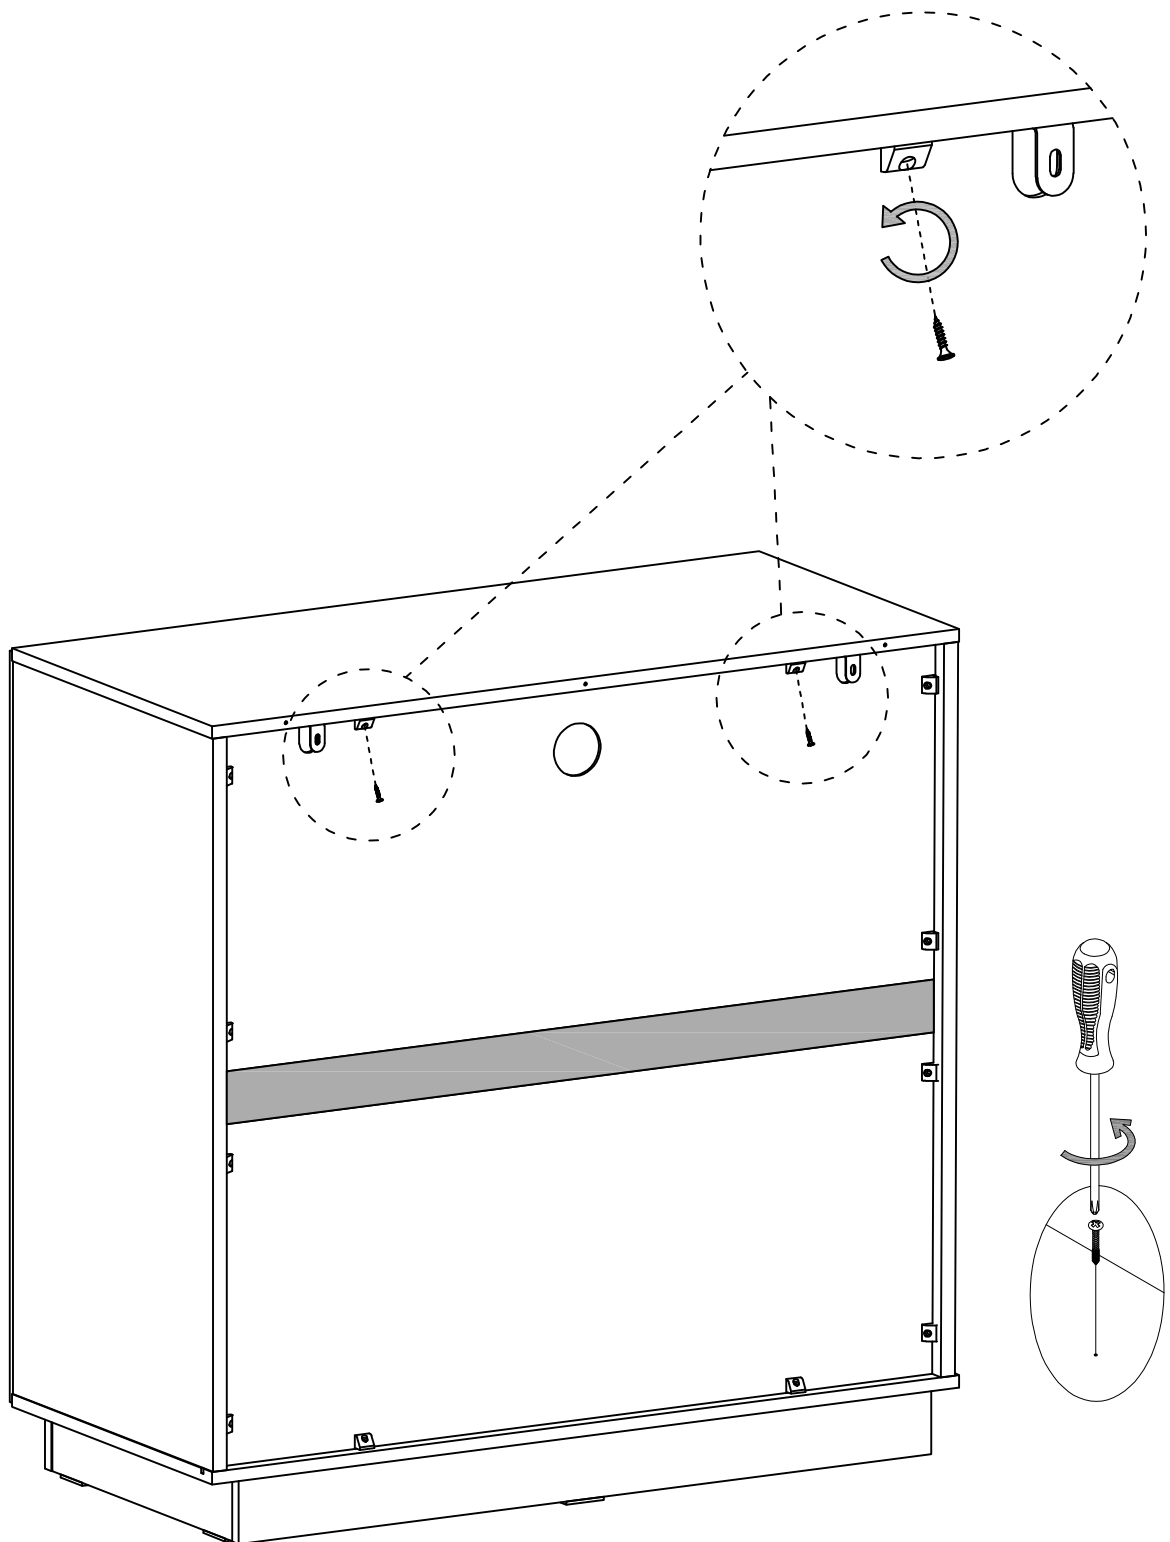

STEP 10

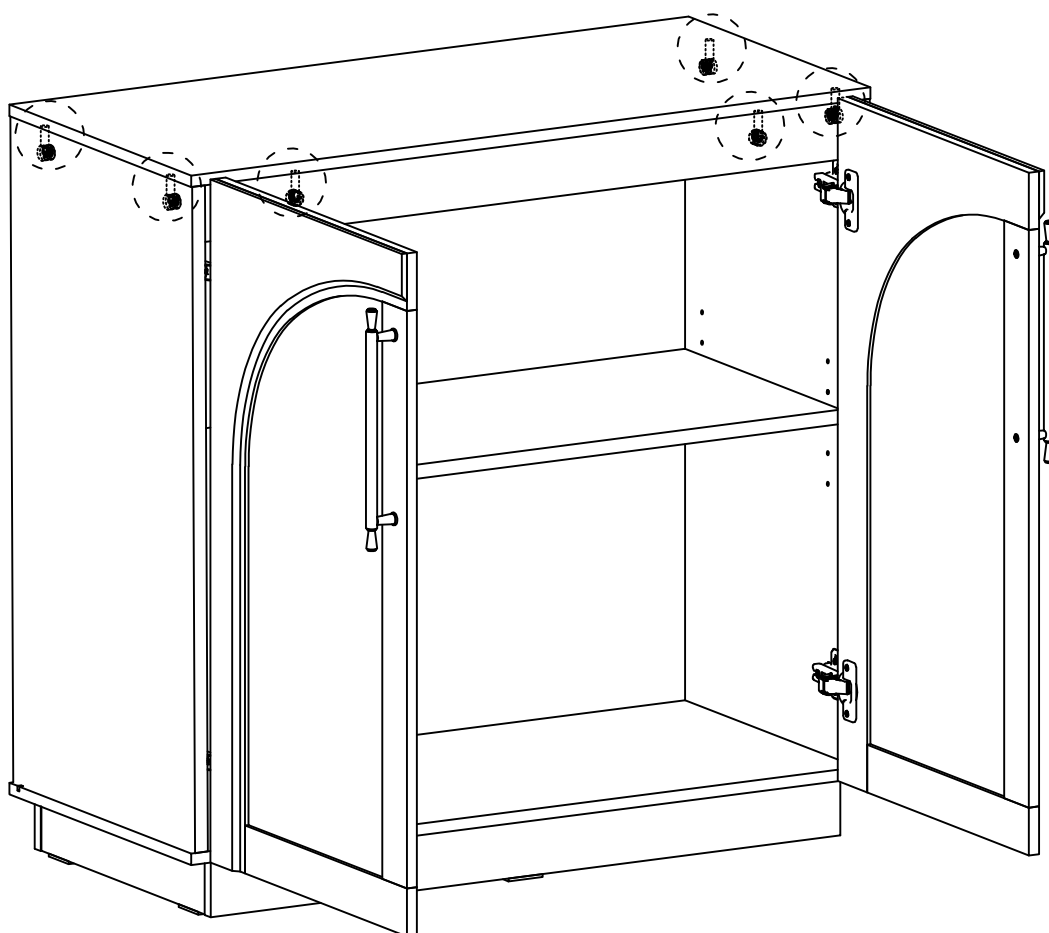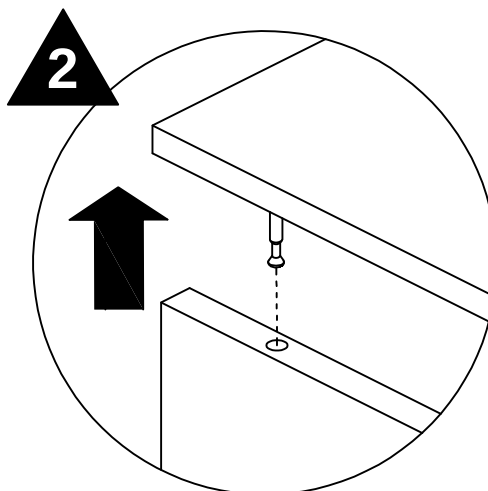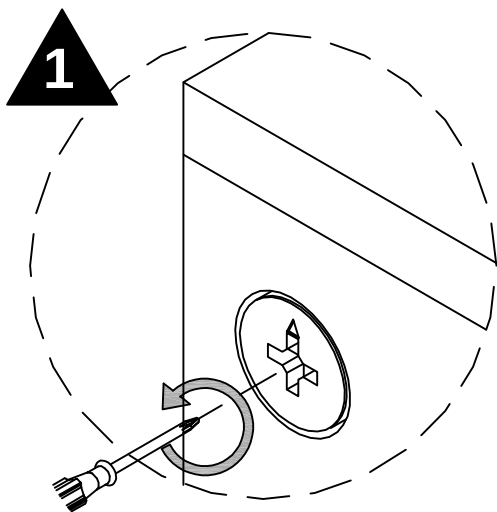


STEP 11

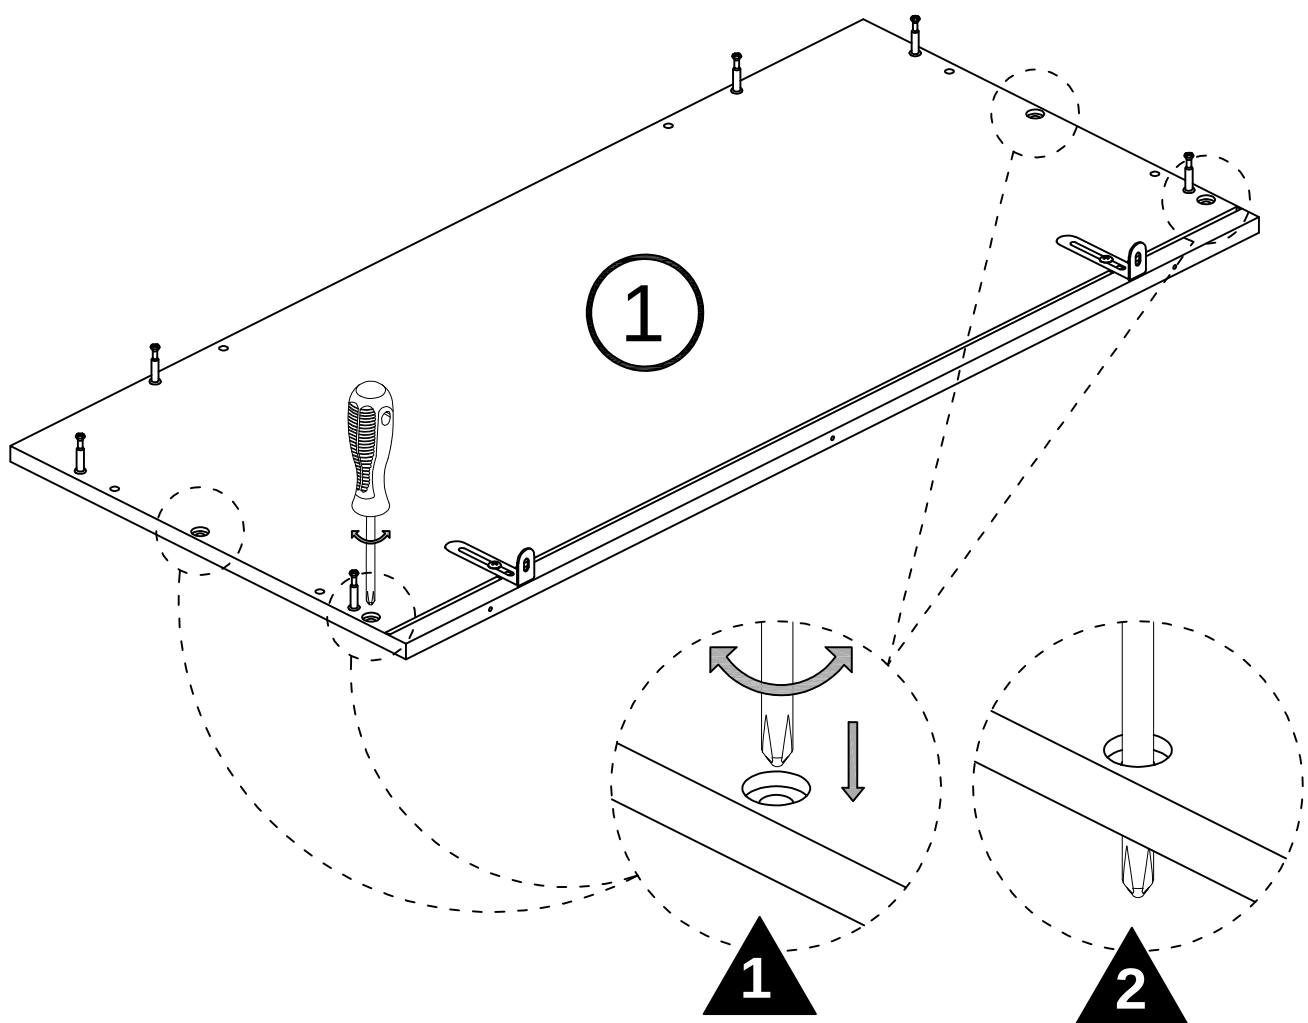

Nota: Work on waste cardboard boxes for panel processing.

STEP 12


(P)



[4]

ST4.8x50mm


[MB-MOKA-A001~A003]

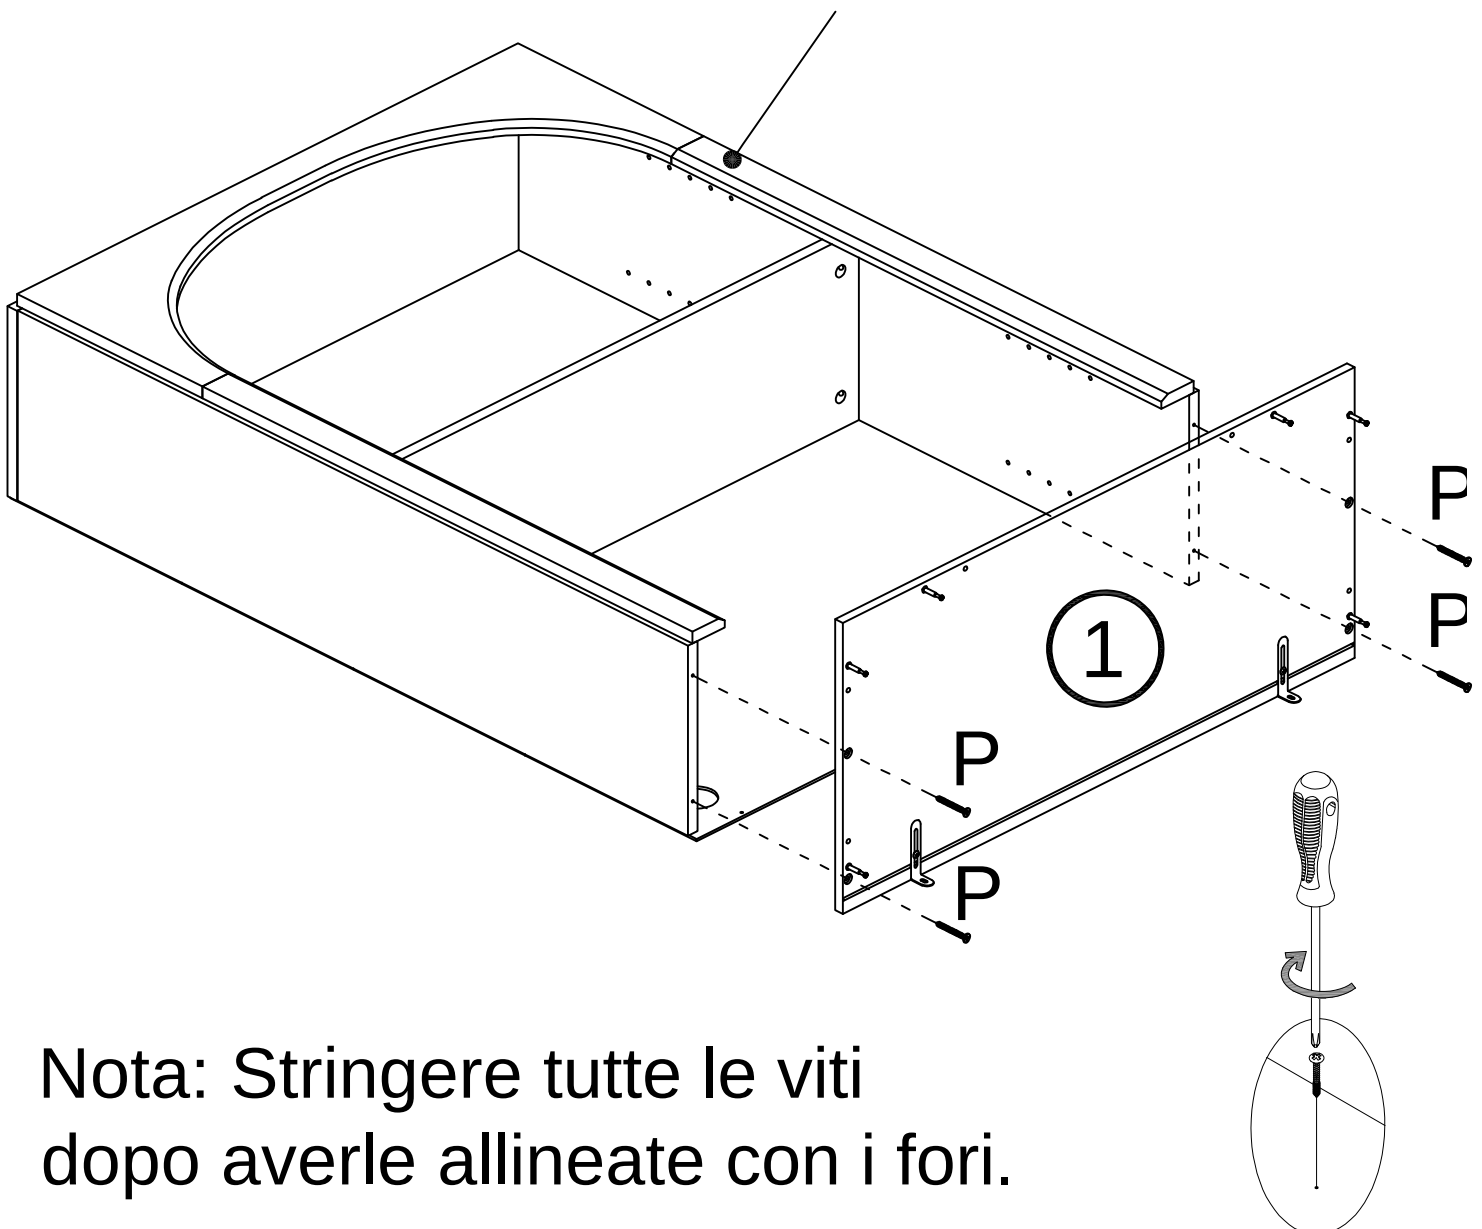

Nota: Stringere tutte le viti dopo averle allineate con i fori.



STEP 13

(B)




KD Cam
Ø15x9.5mm

[6]

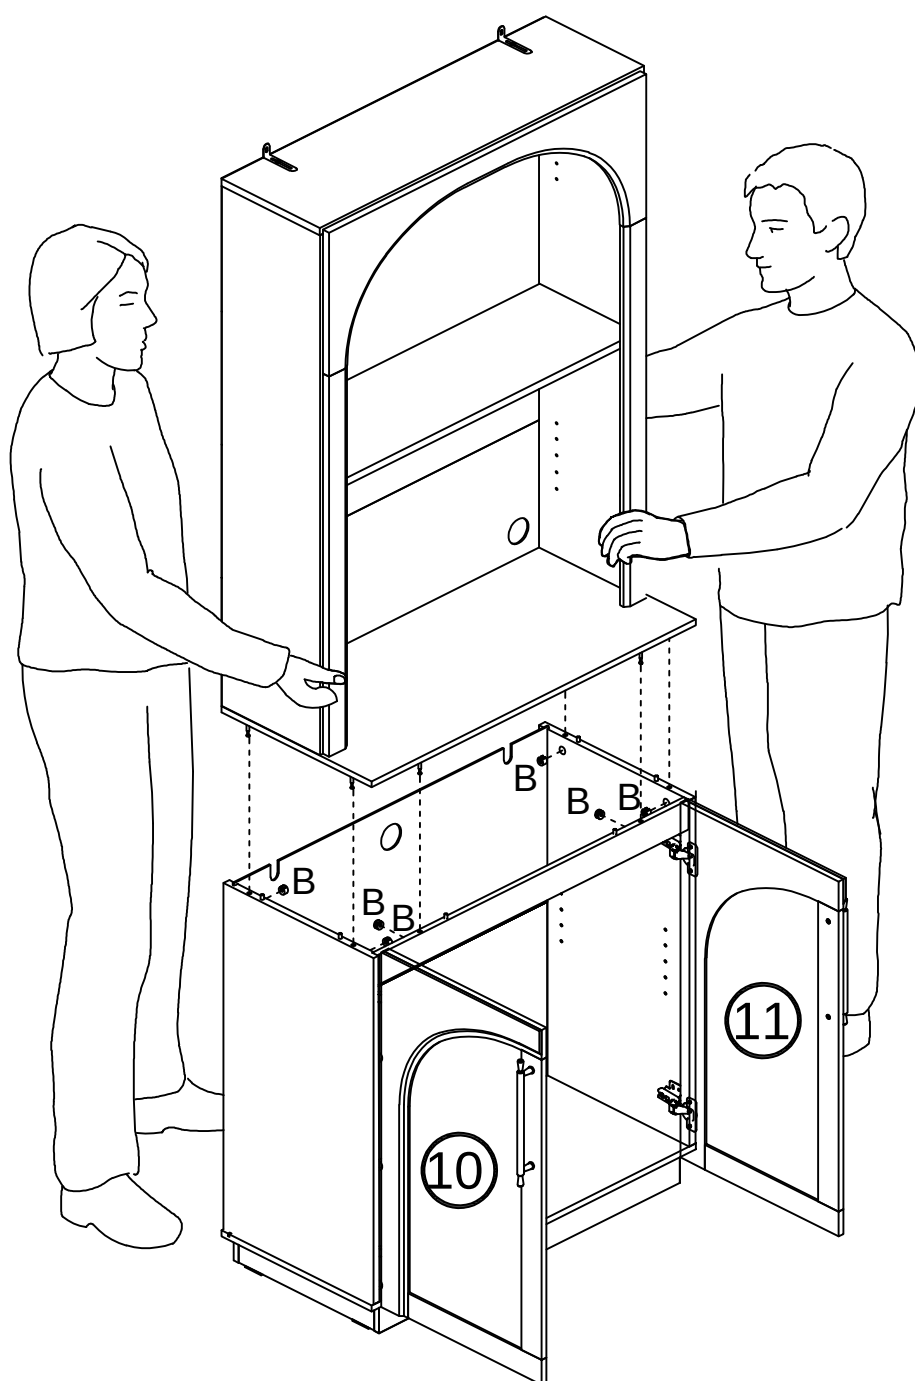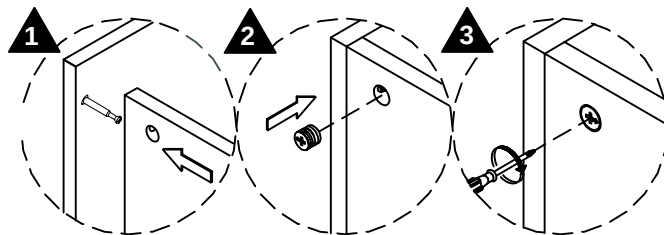

STEP 14


(F)



[2]

ST3.0x16mm


(I)

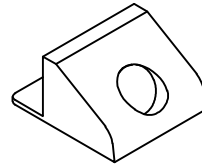

[2]





Back Clip

(Q)




[3]

ST3.5x12mm

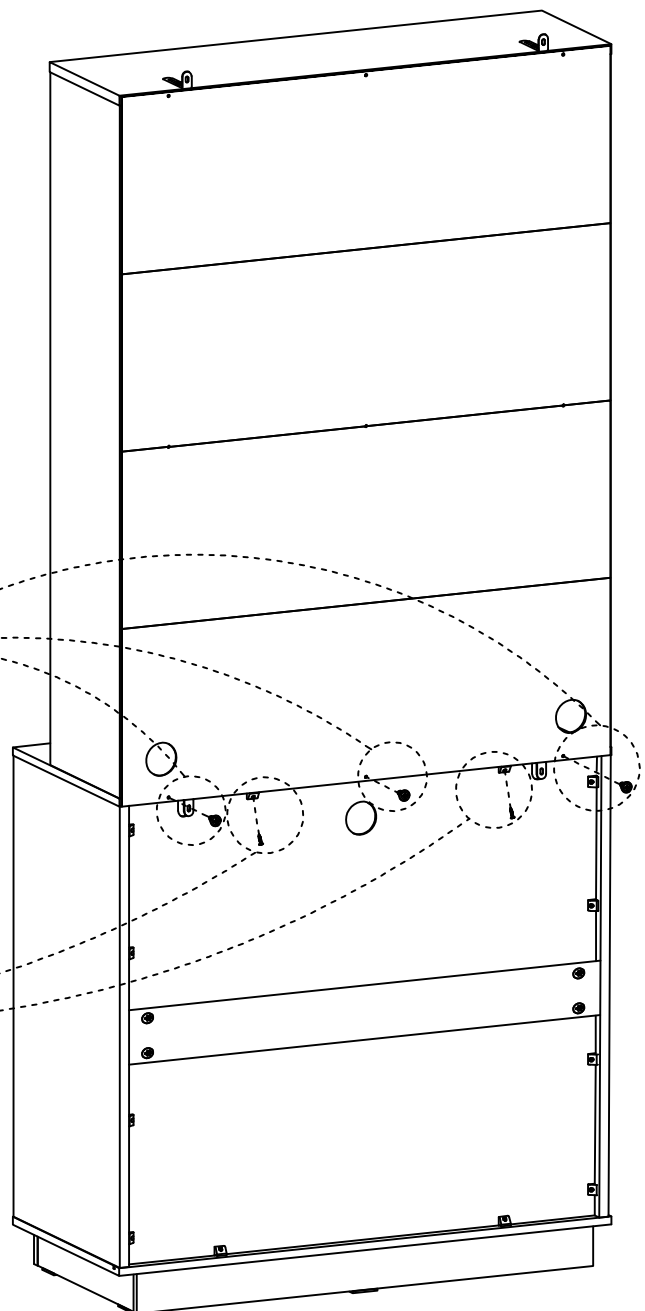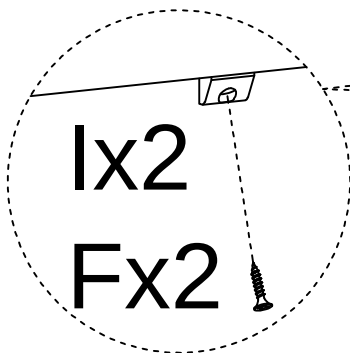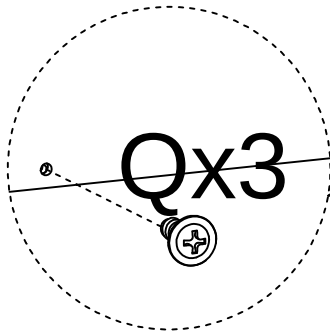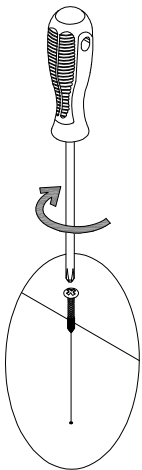



STEP 15

(K)




[12]

Shelf Pin

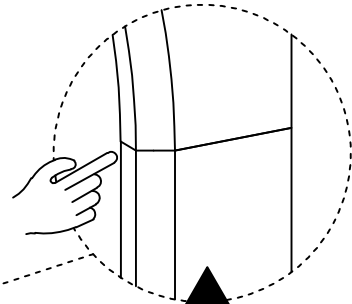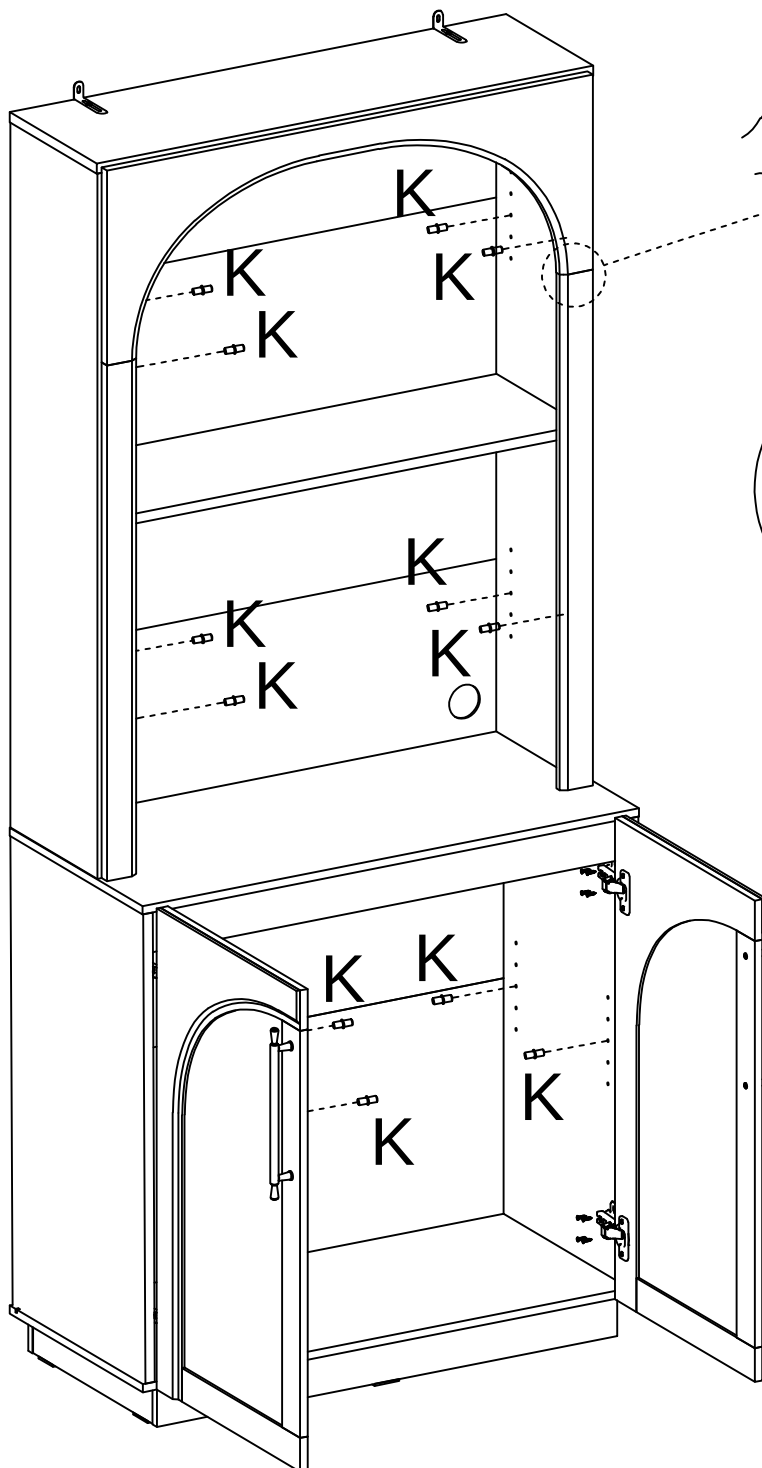


1

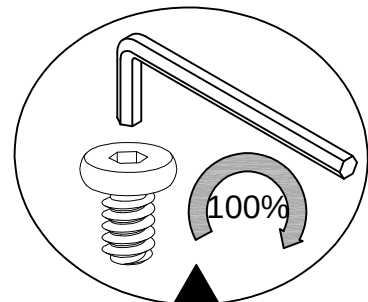

2

Nota: Align first,
then tighten the
screws.


STEP 16

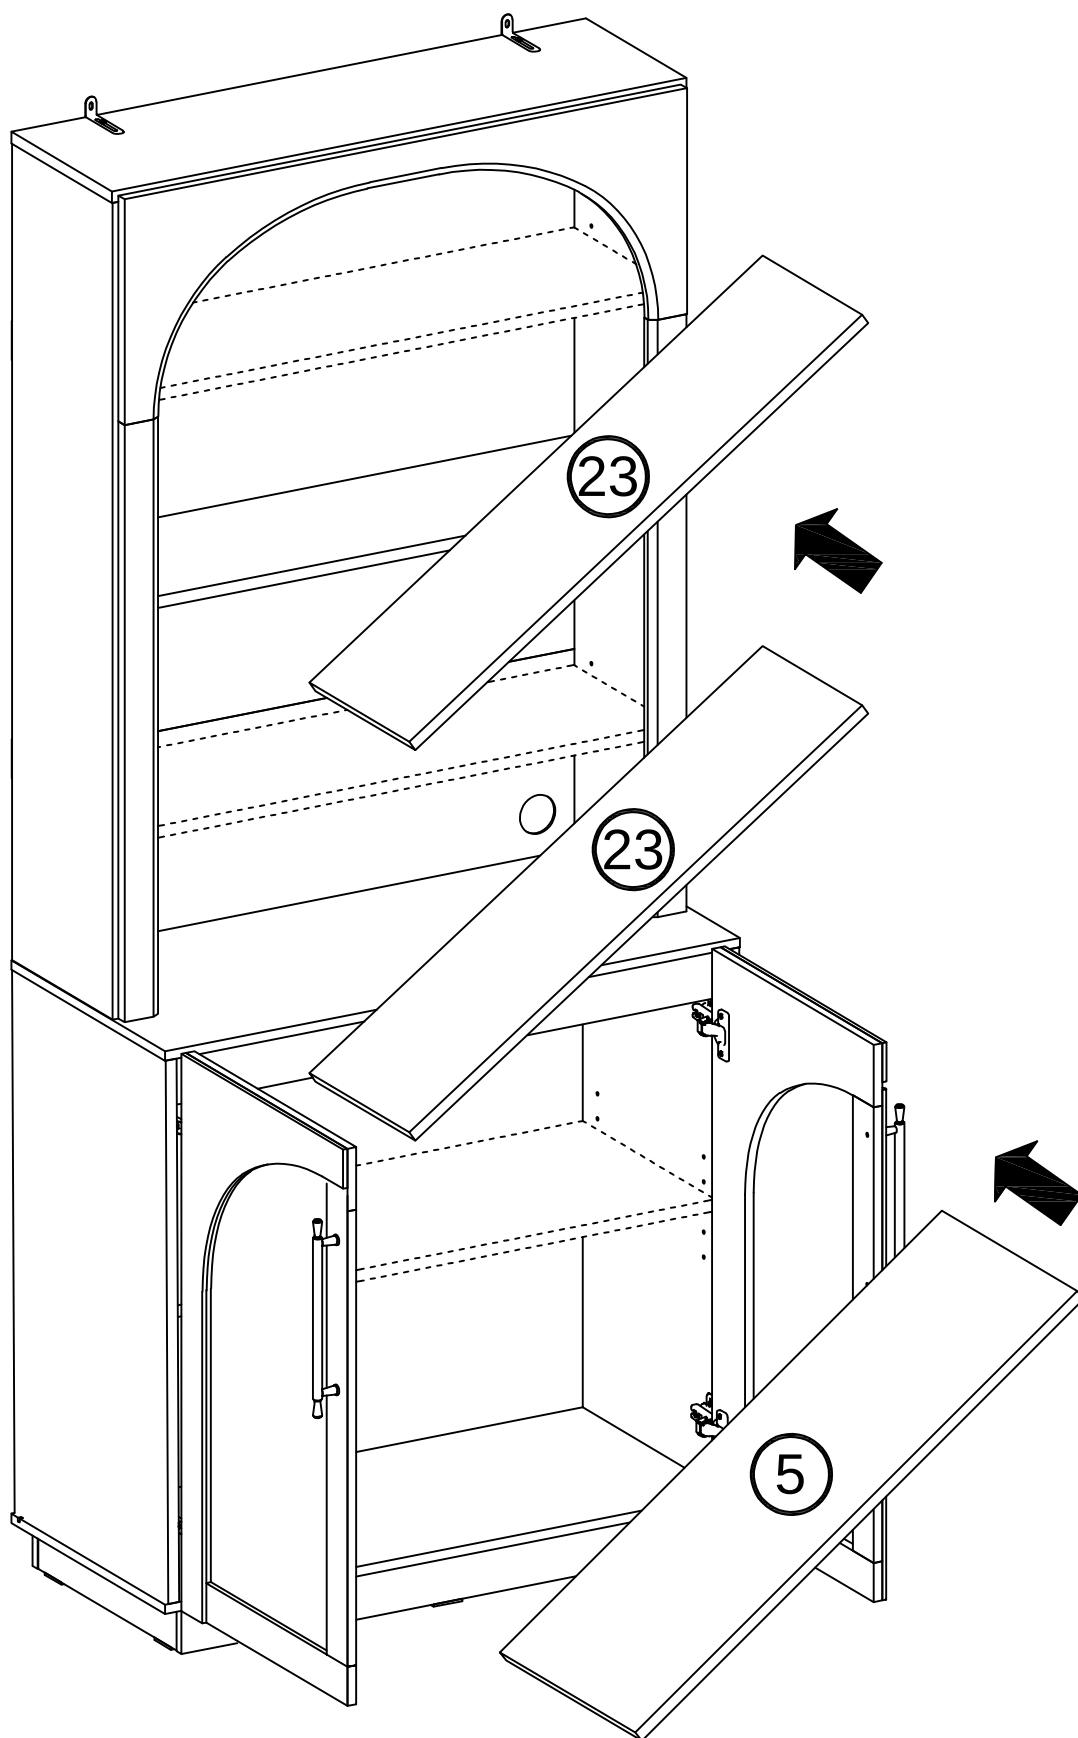


STEP 17

Method 1: For solid or concrete wall.


1. Choose your desired location on the wall.
Have your friend hold the product in place and use a pencil to mark where the anchor will go.

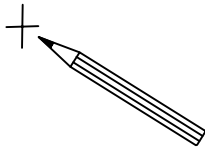


2. Pre-drill holes on the wall with a drill bit that is larger than the diameter of the wall anchors.

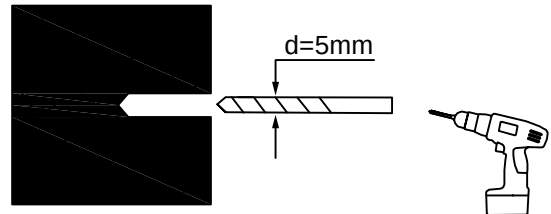

3. Gently insert the wall anchor into the pre-drilled hole.


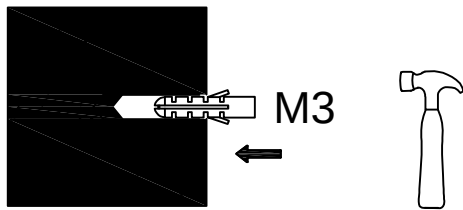


4. Insert the screws into the wall anchor with a screwdriver to complete the installation.

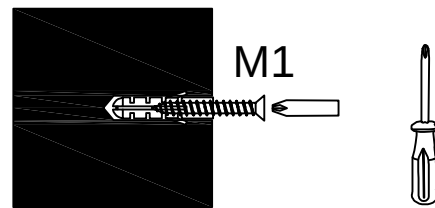


(M)


M3 M1 [4]

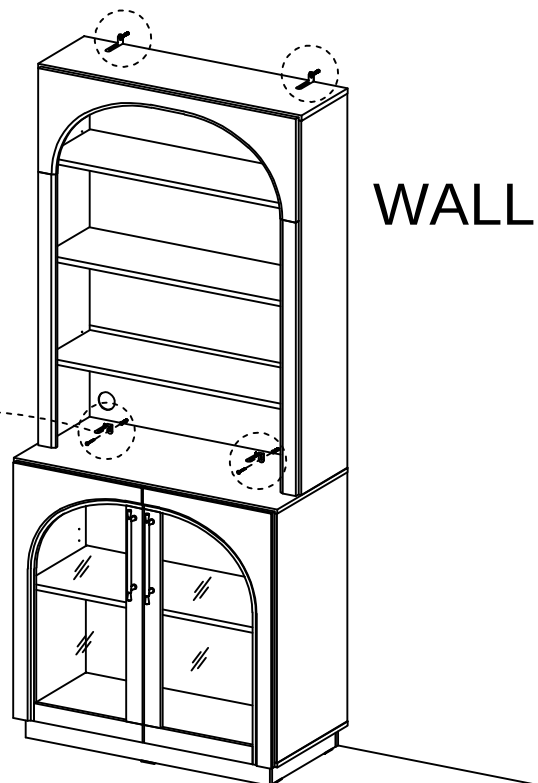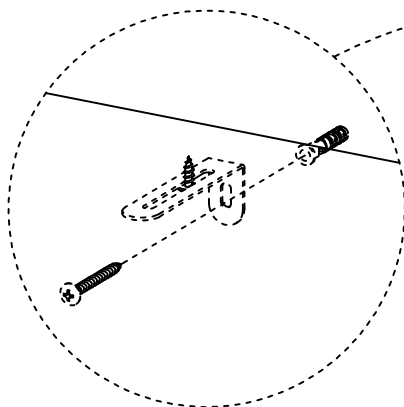


STEP 18

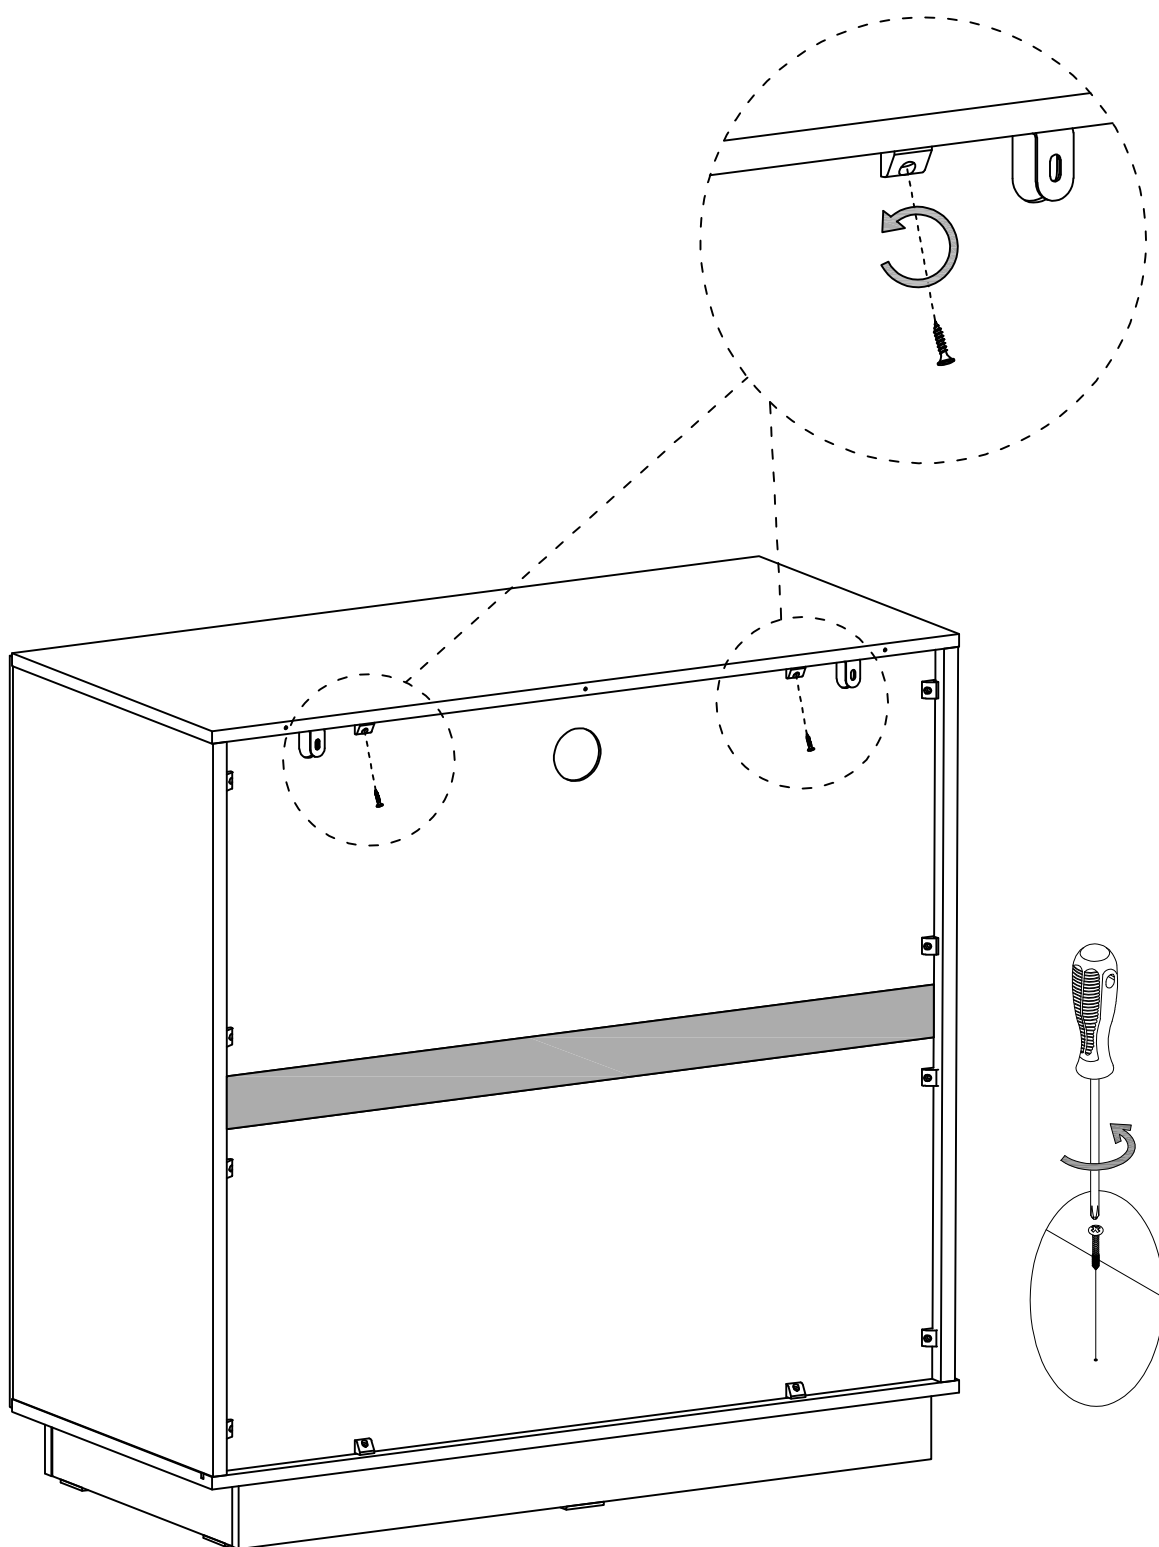




STEP 19

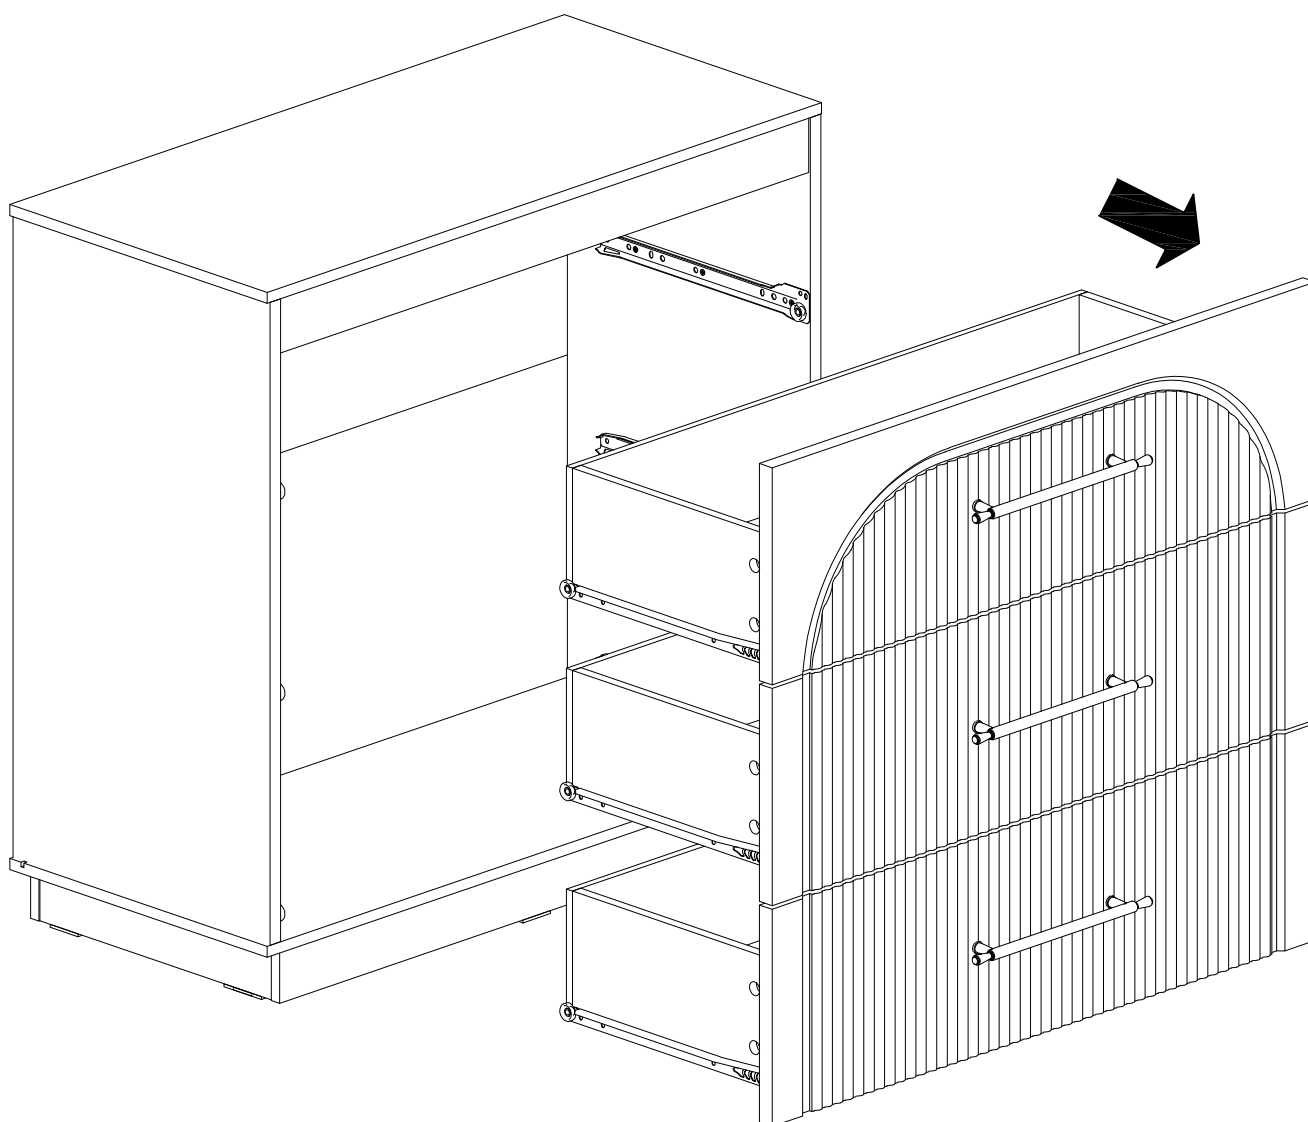


Please note that the drawers should be removed in the direction of the arrow.

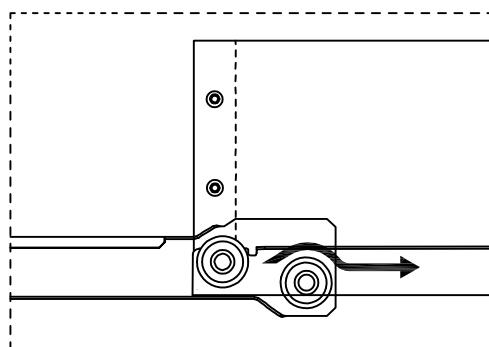

STEP 20

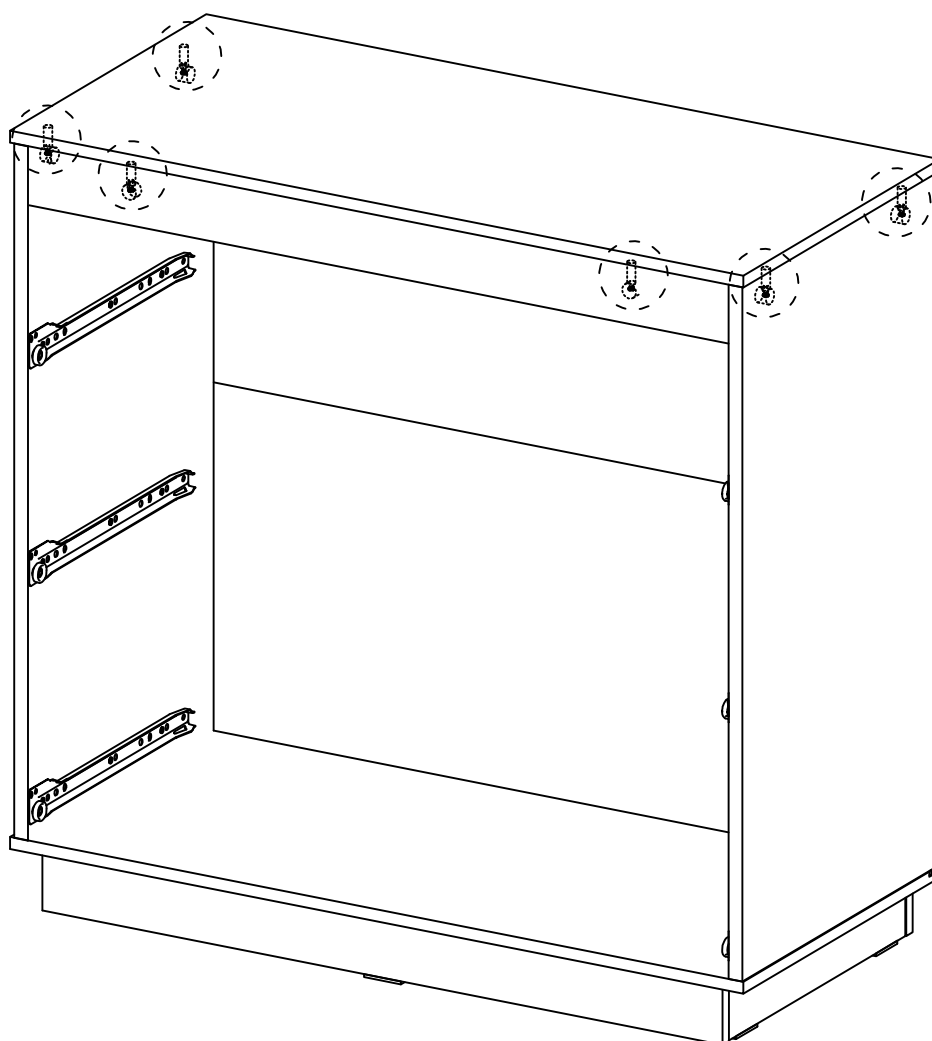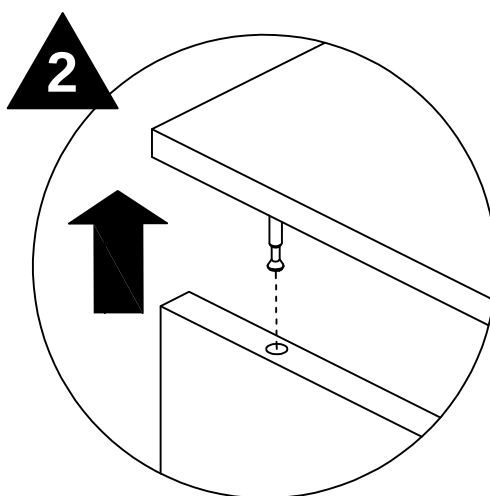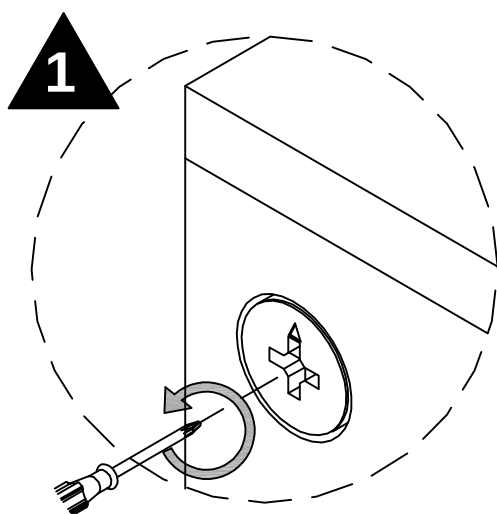


STEP 21

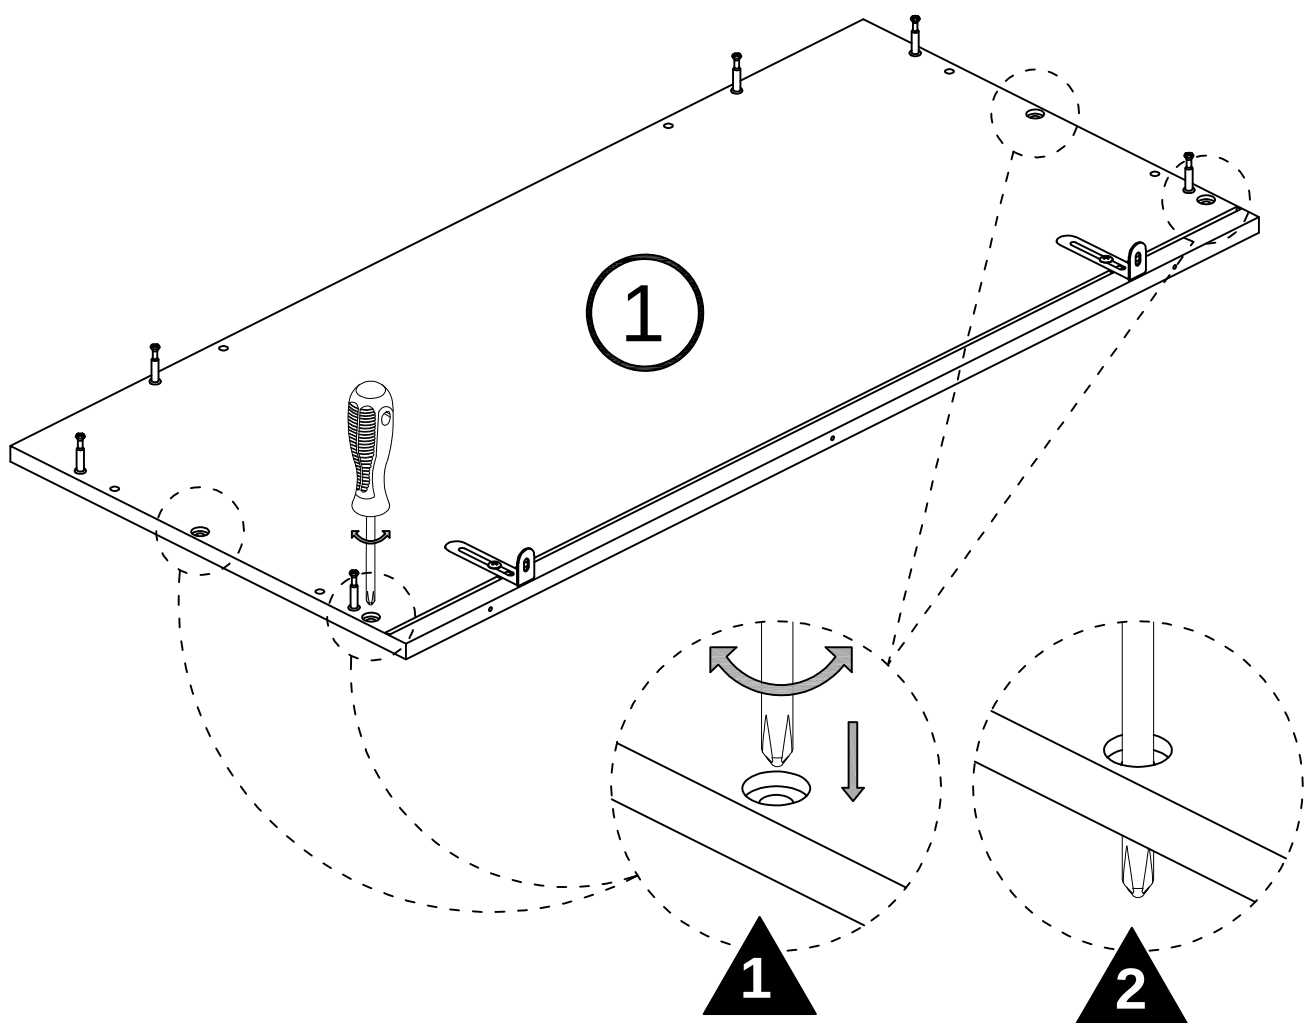

Nota: Work on waste cardboard boxes for panel processing.

STEP 22


(P)



[4]

ST4.8x50mm


[MB-MOKA-A001~A003]

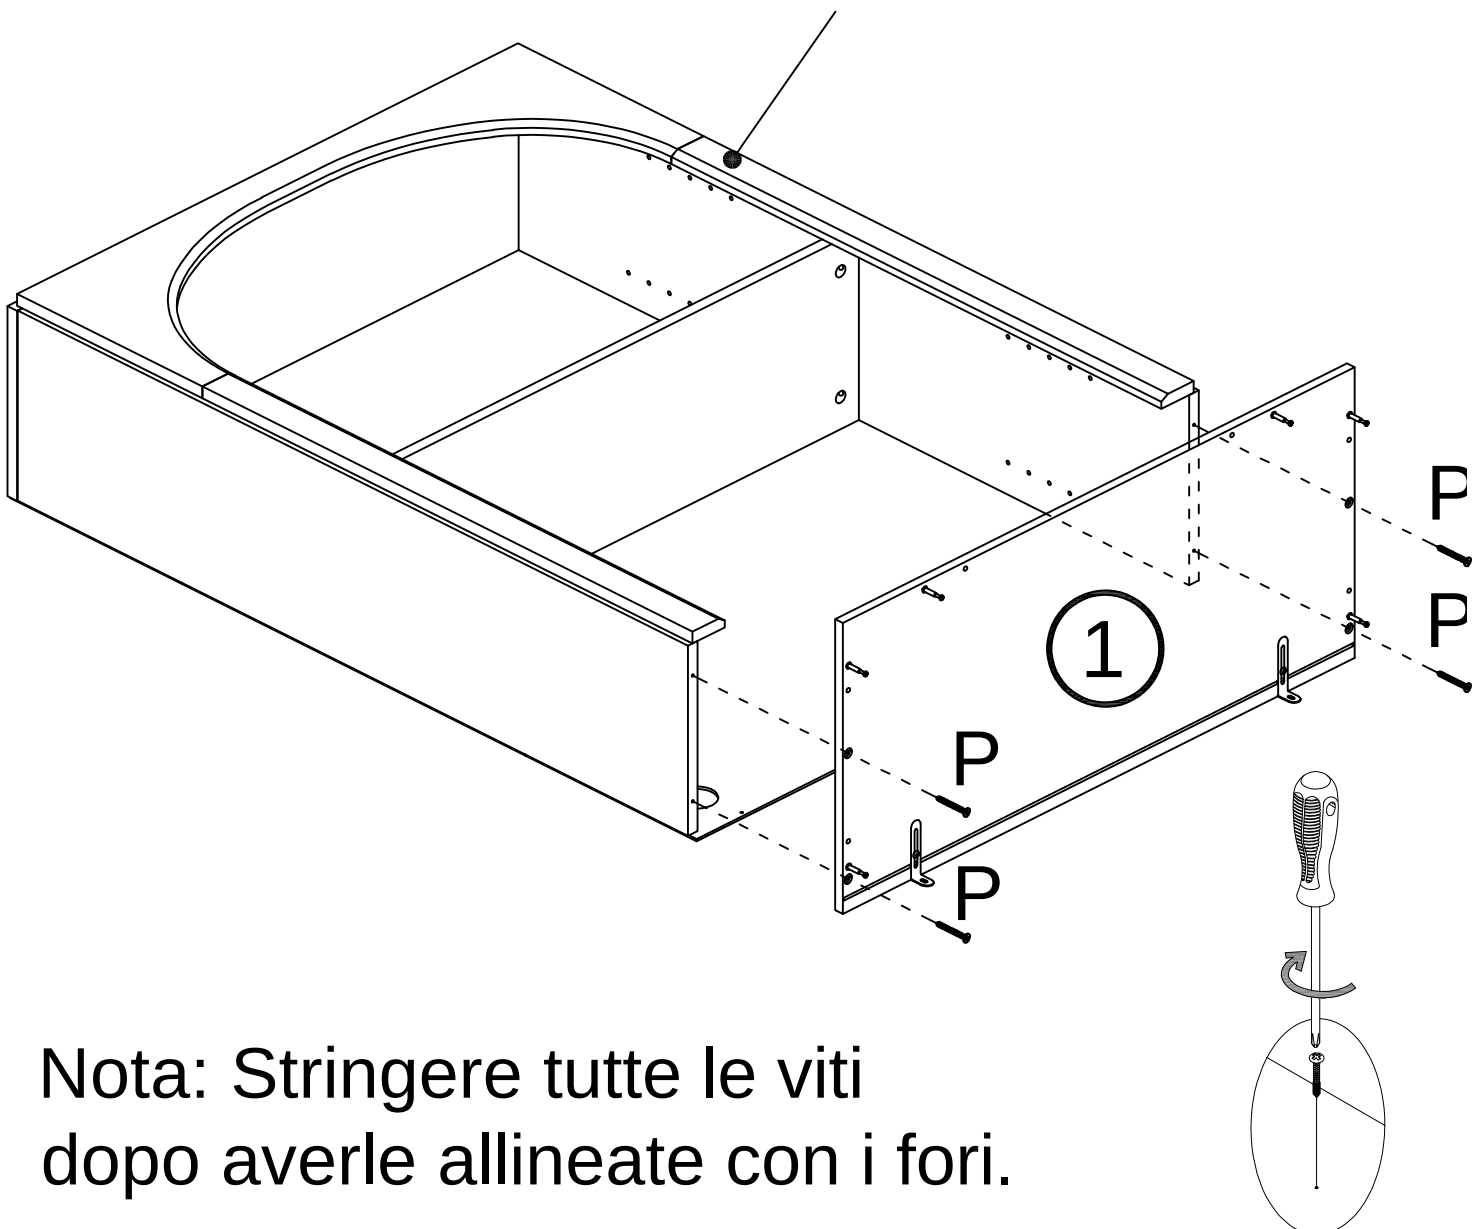

Nota: Stringere tutte le viti
dopo averle allineate con i fori.



STEP 23

(B)




KD Cam
Ø15x9.5mm

[6]

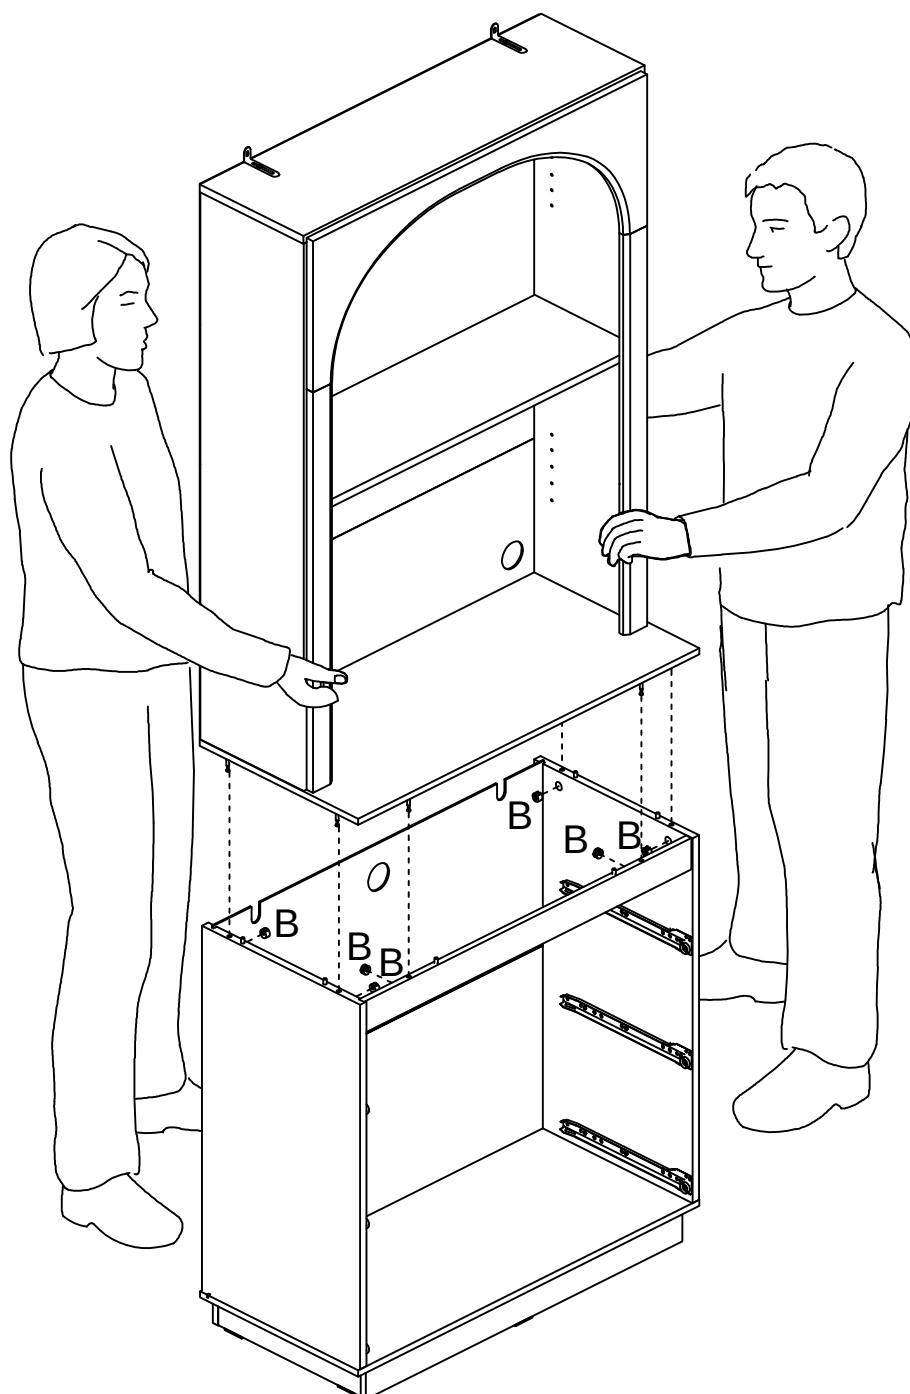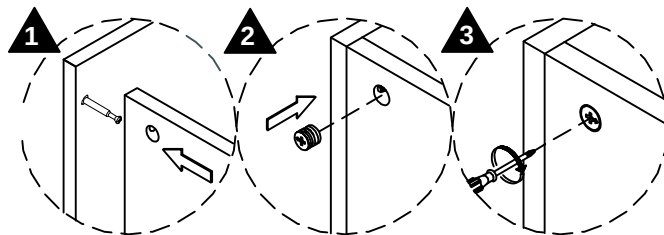

STEP 24


(F)



[2]

ST3.0x16mm


(I)

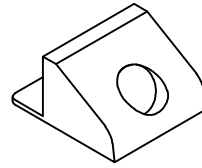

[2]





Back Clip

(Q)



[3]


ST3.5x12mm

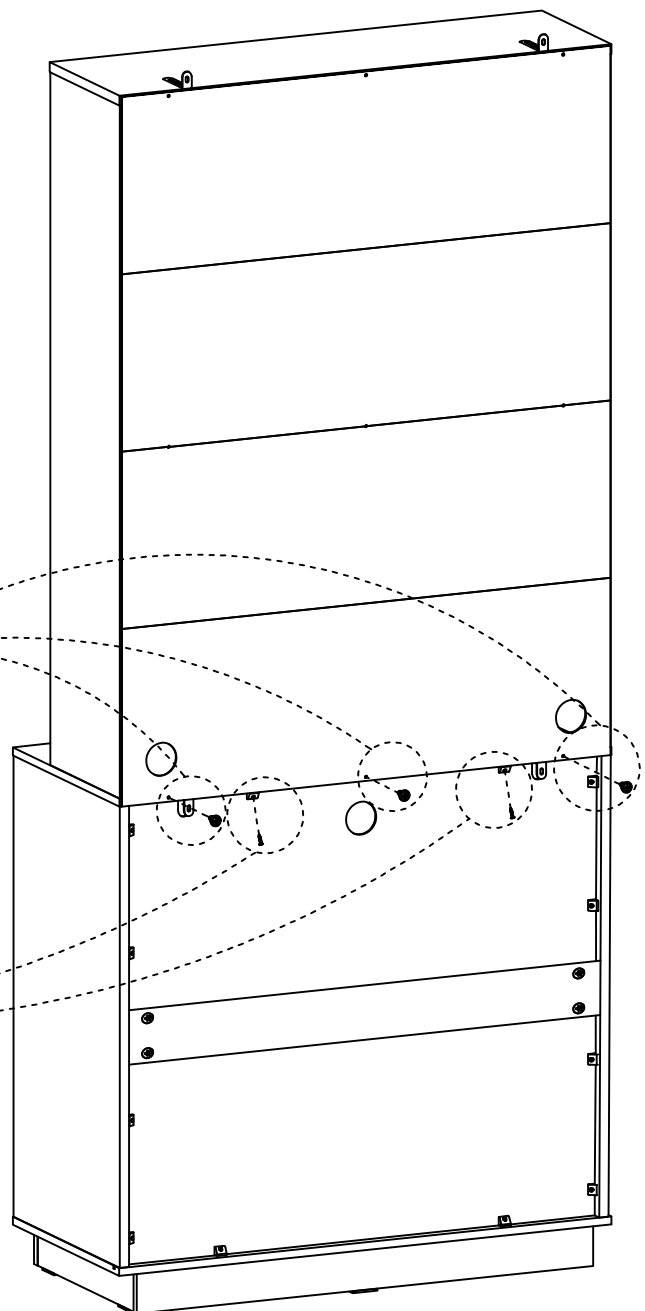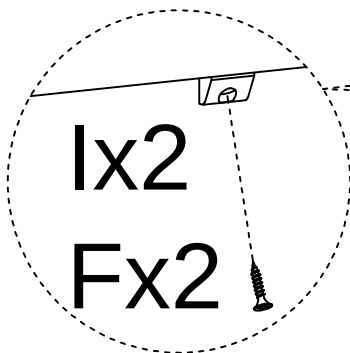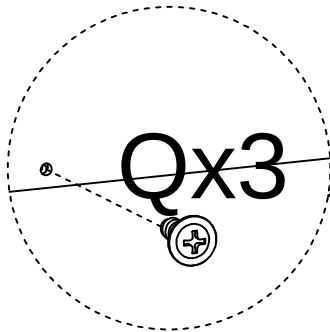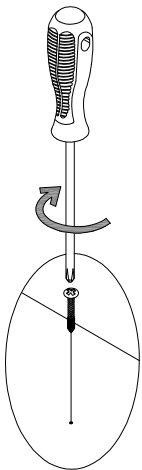


STEP 25

Method 1: For solid or concrete wall.


1. Choose your desired location on the wall.
Have your friend hold the product in place and use a pencil to mark where the anchor will go.

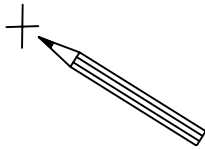


2. Pre-drill holes on the wall with a drill bit that is larger than the diameter of the wall anchors.

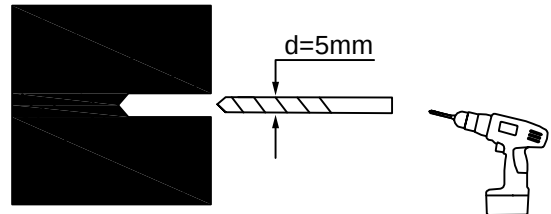

3. Gently insert the wall anchor into the pre-drilled hole.


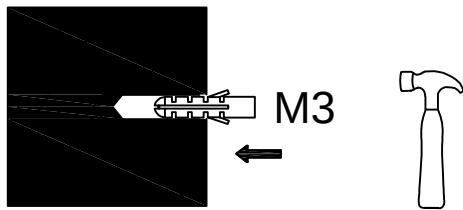


4. Insert the screws into the wall anchor with a screwdriver to complete the installation.

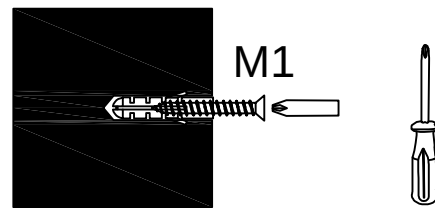


(M)

M3 M1 [4]

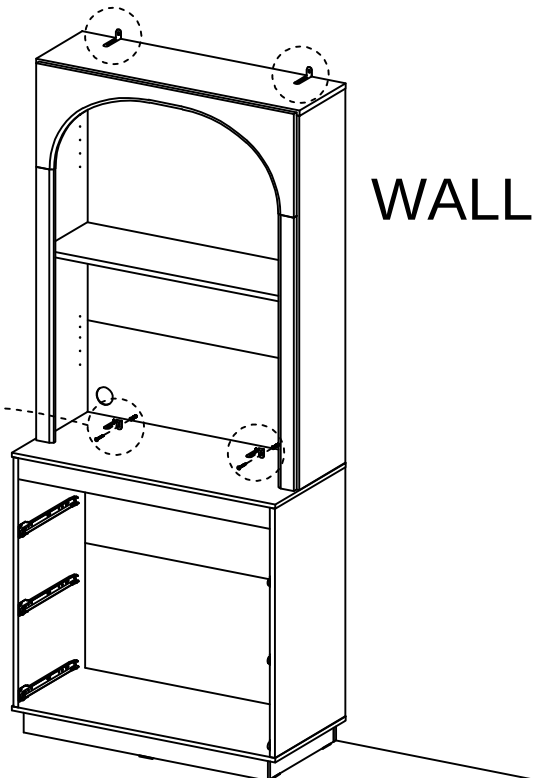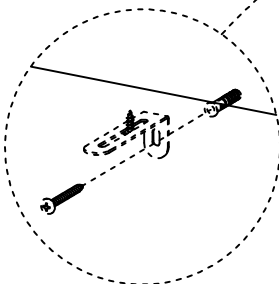



STEP 26

(K)




[8]

Shelf Pin

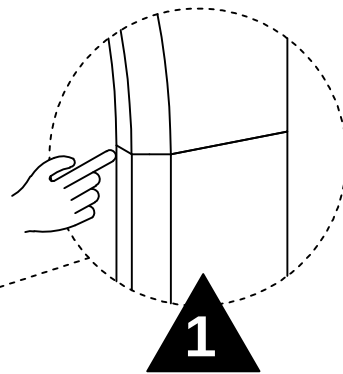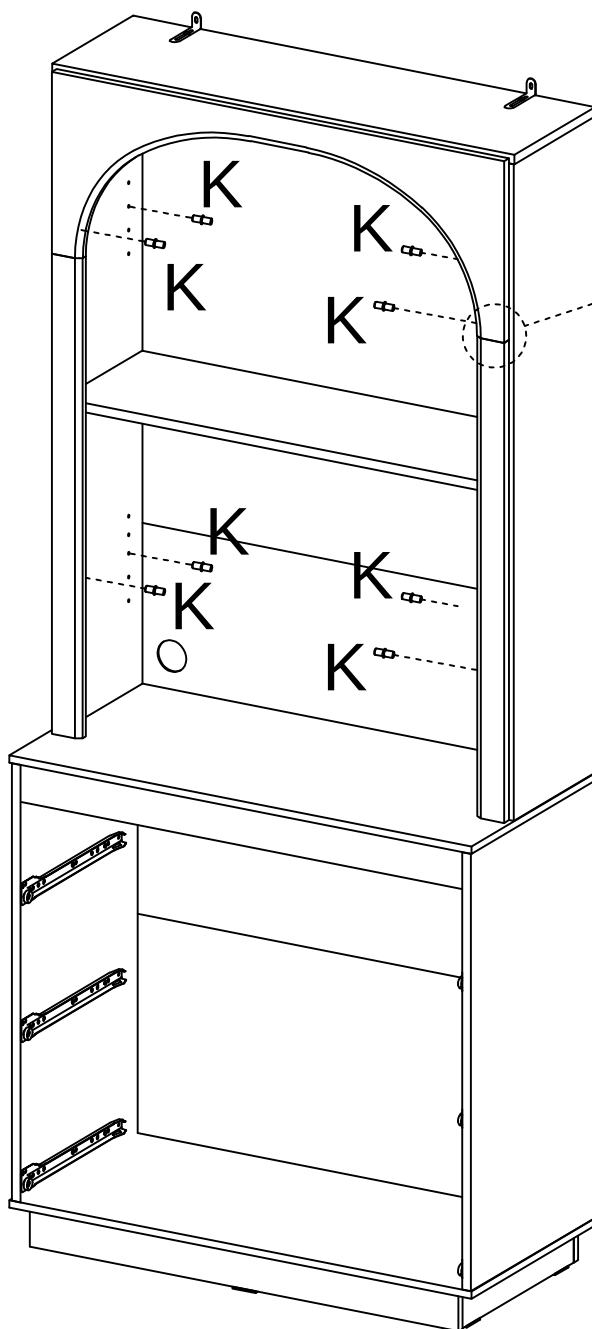

1

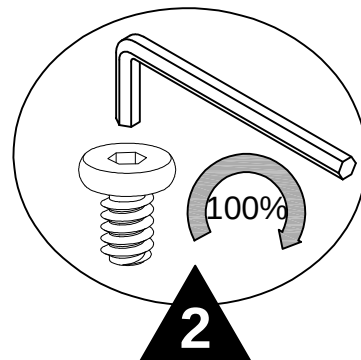

2

Nota: Align first,
then tighten the
screws.


STEP 27

(N)



Cover

[12]

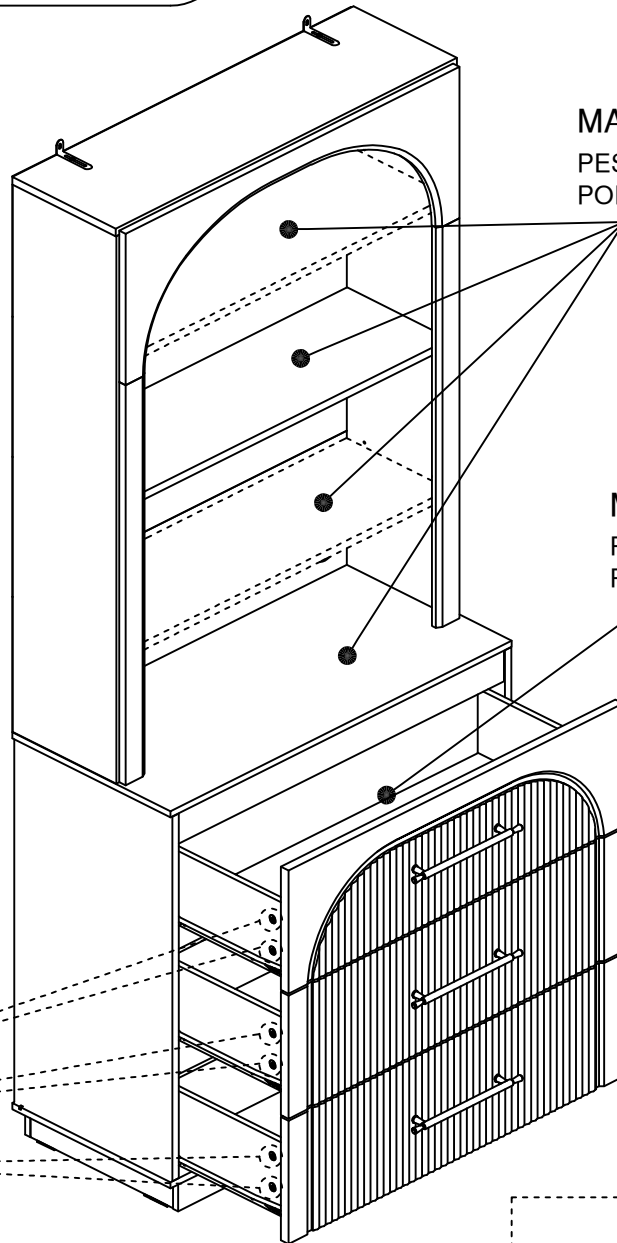

MAXIMUM WEIGHT: 40 LBS


PESO MÁXIMO: 40 LIBRAS

POIDS MAXIMUM: 40 LIVRES

MAXIMUM WEIGHT: 25 LB


PESO MÁXIMO: 25 LIBRAS

POIDS MAXIMUM: 25 LIVRES

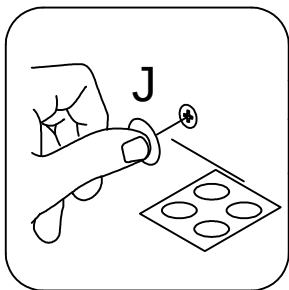

Please note that the drawers must be installed as indicate by the arrows.

MODEL 2
Installation complete

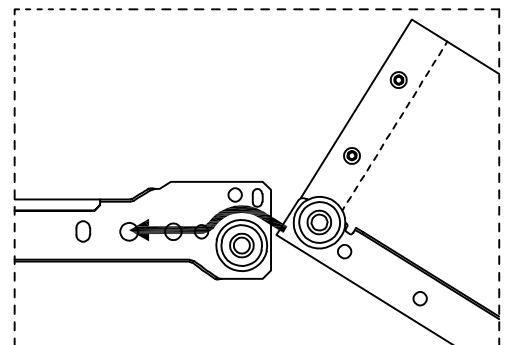

STEP 28

