



Installation instruction

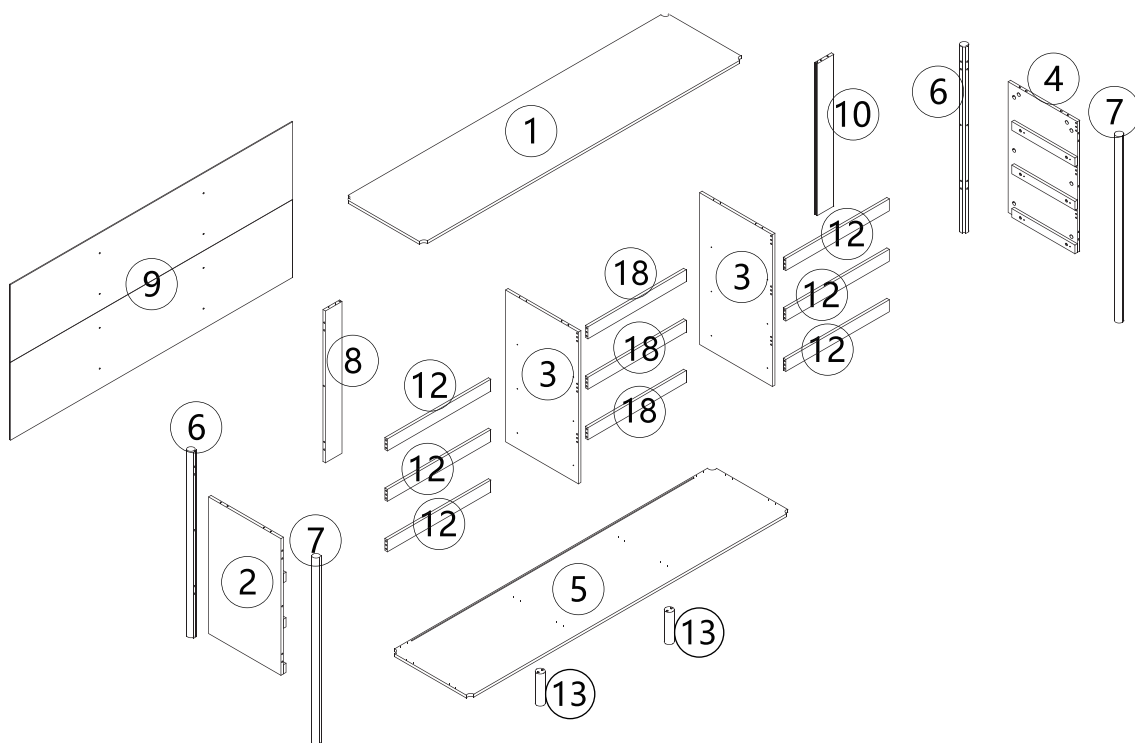


Left

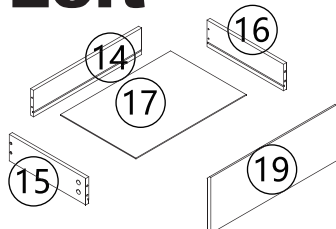


X3

Middle


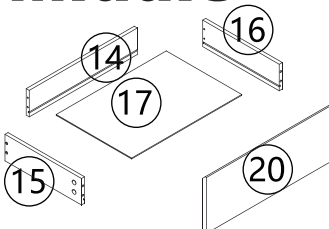





















X3

Right

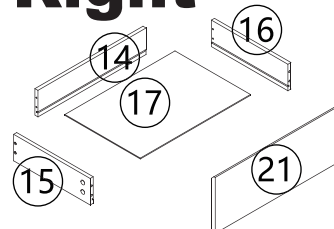


X3

A	X 84	B	X 84	C	X 40	D	X 54	E	X 4	F	X 6	G	X 6
													
M6*35		Φ15*10		Φ8*30		M4*35		Φ25*3		M3*14			
H	X 8	I	X 72	J	X 12	K	X 2	L	X 10	M	X 2	N	X 2
													
M4*20		M3*12		Φ8*50				M4*12					
CL	X 9	CR	X 9	DL	X 9	DR	X 9						
													

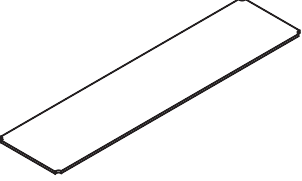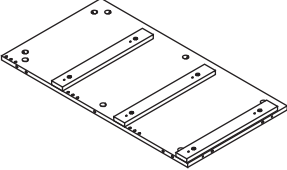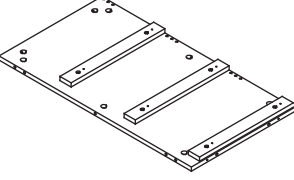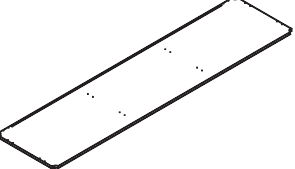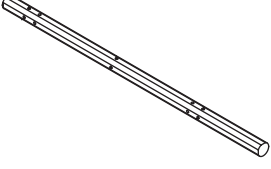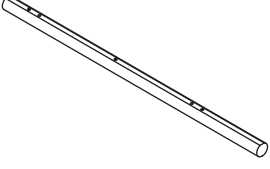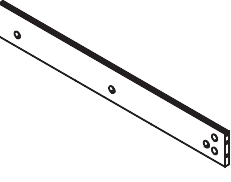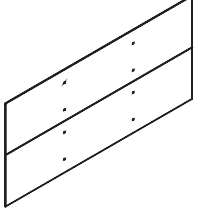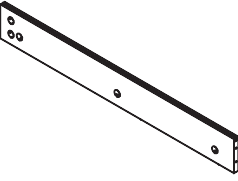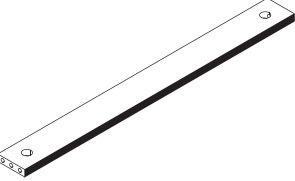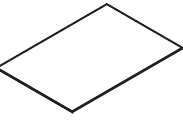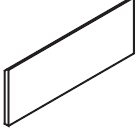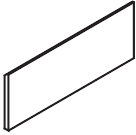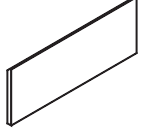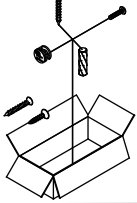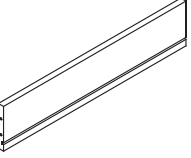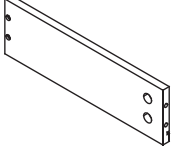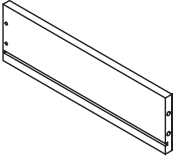XD002-A		
1  x1	2  x1	3  x2
4  x1	5  x1	6  x2
7  x2	8  x1	9  x1
10  x1	12  x6	13  x2
17  x9	18  x3	19  Left x3
20  Middle x3	21  Right x3	AccessoryCase  x1
XD002-B		
14  x9	15  x9	16  x9

STEP1


A	X 18
	
M6*35	

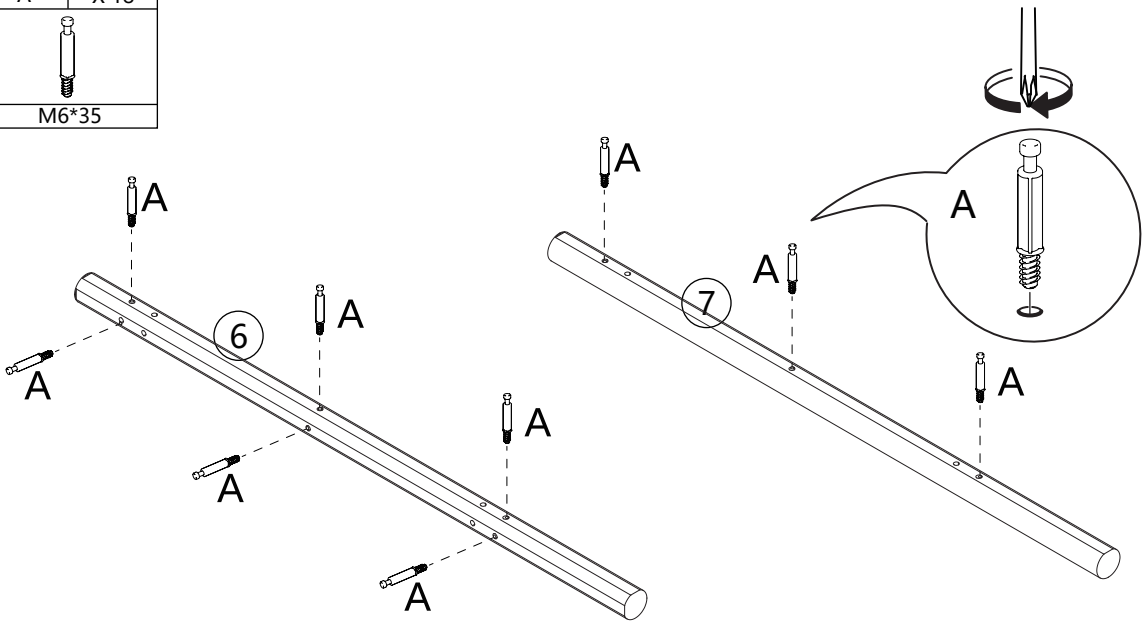


X2

STEP2


B	X 6	C	X 4
			
Φ15*10		Φ8*30	

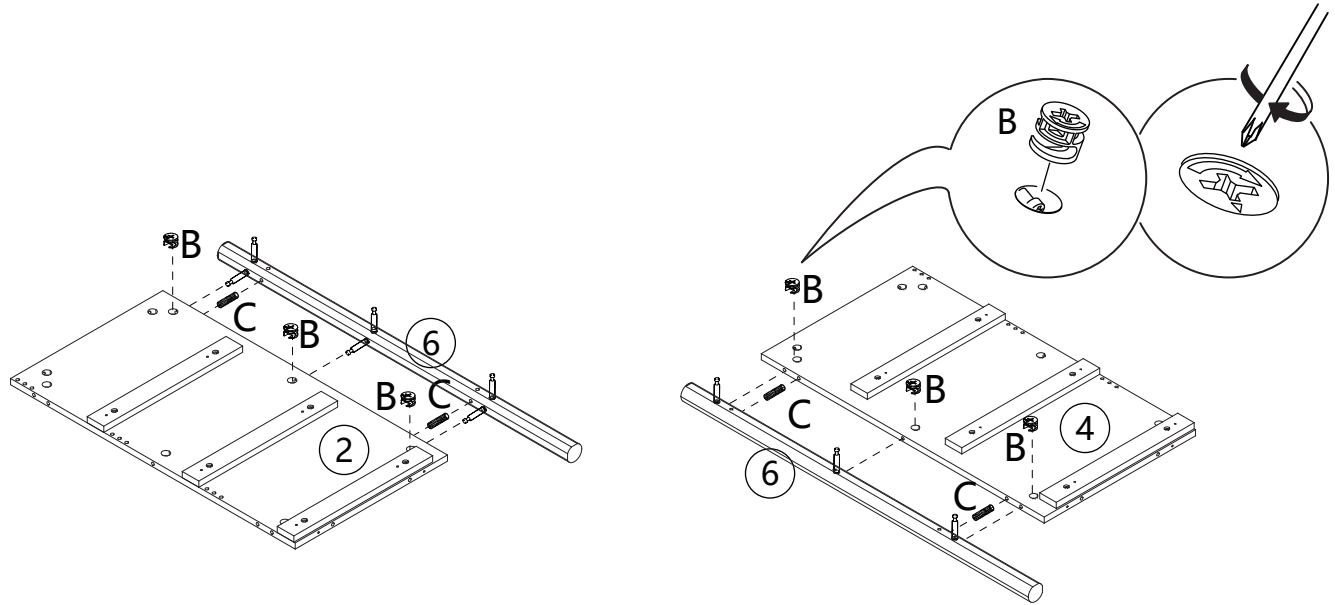

STEP3

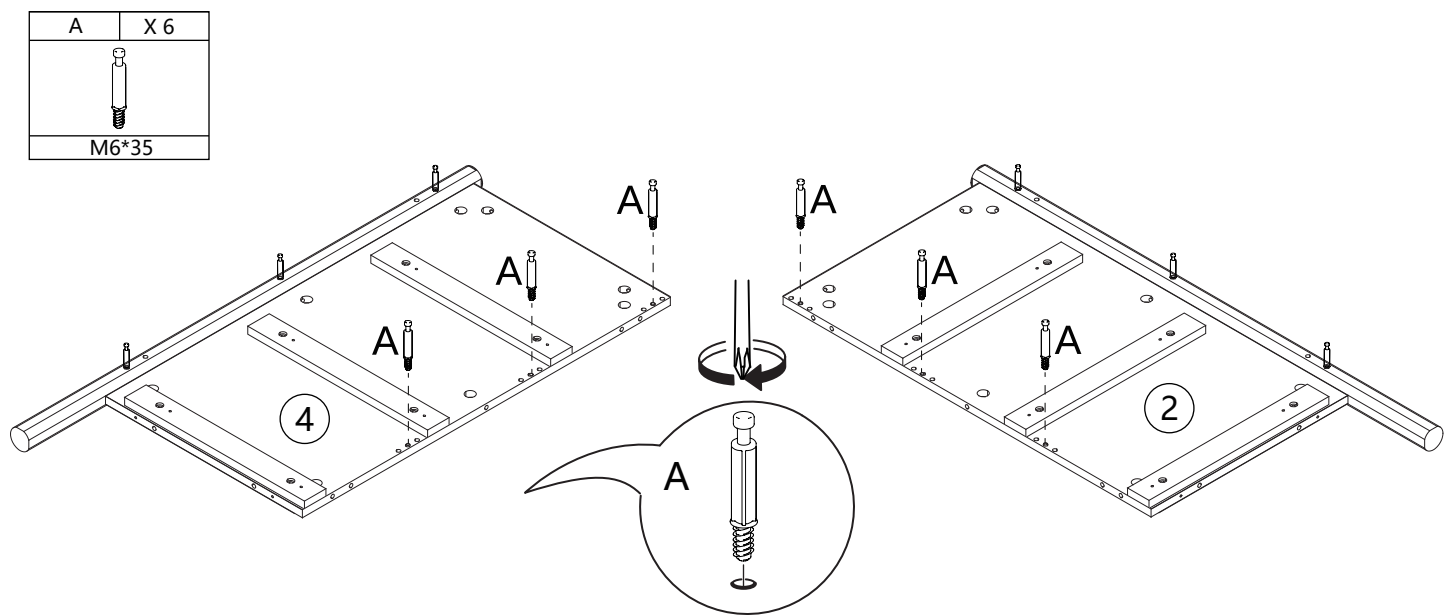


STEP4

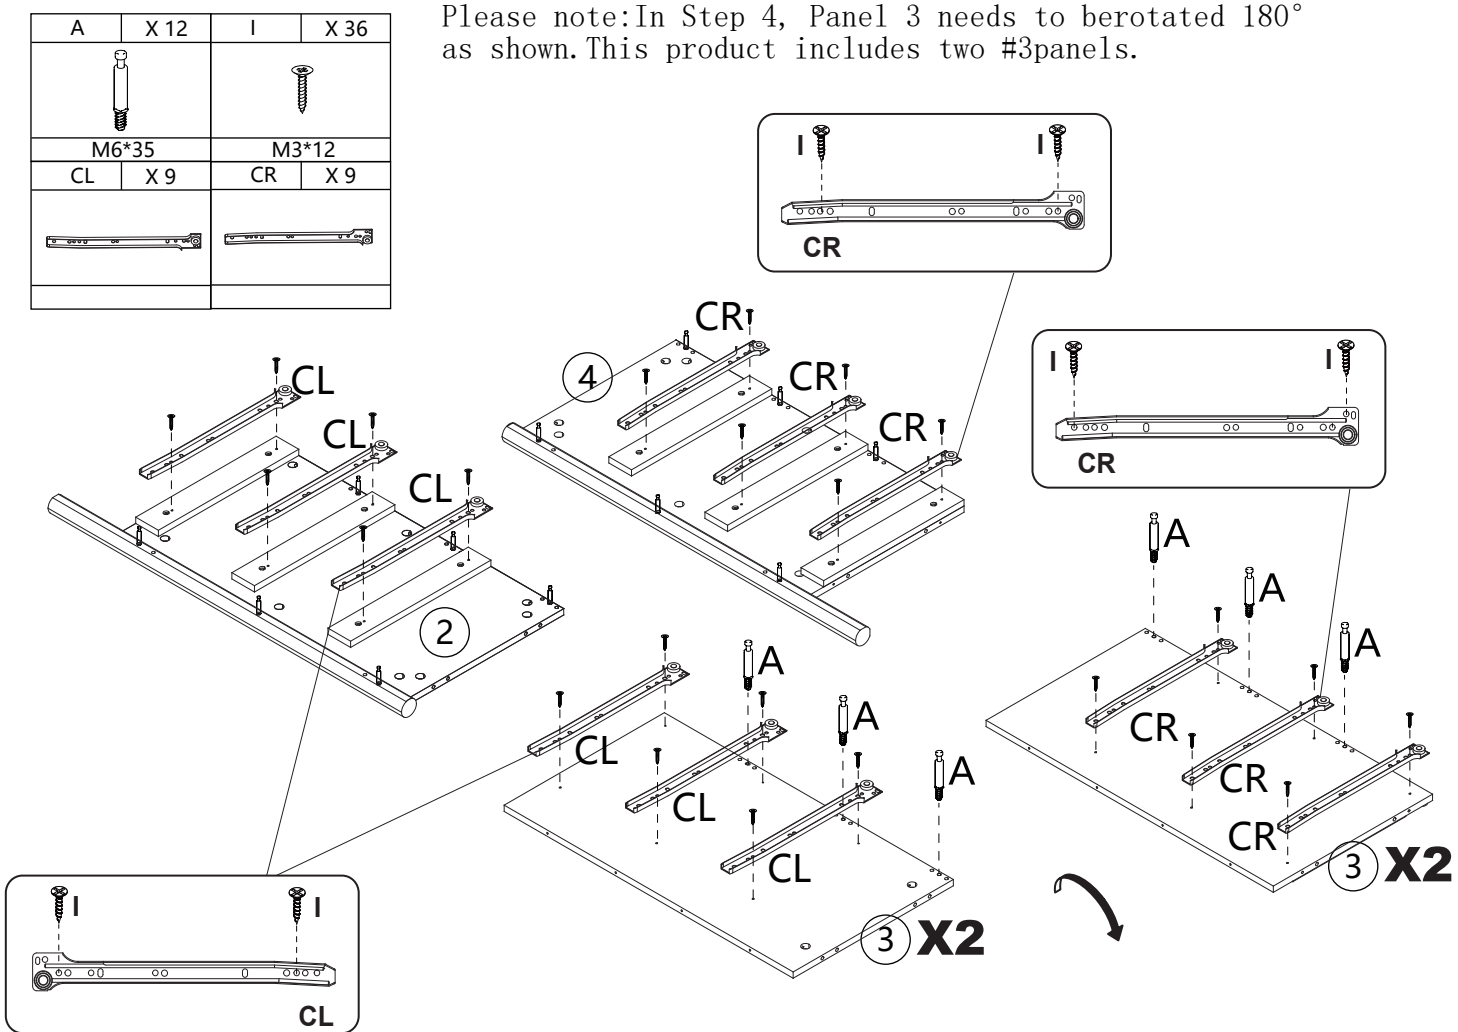

STEP5


B	X 6	C	X 4
			
Φ15*10		Φ8*30	

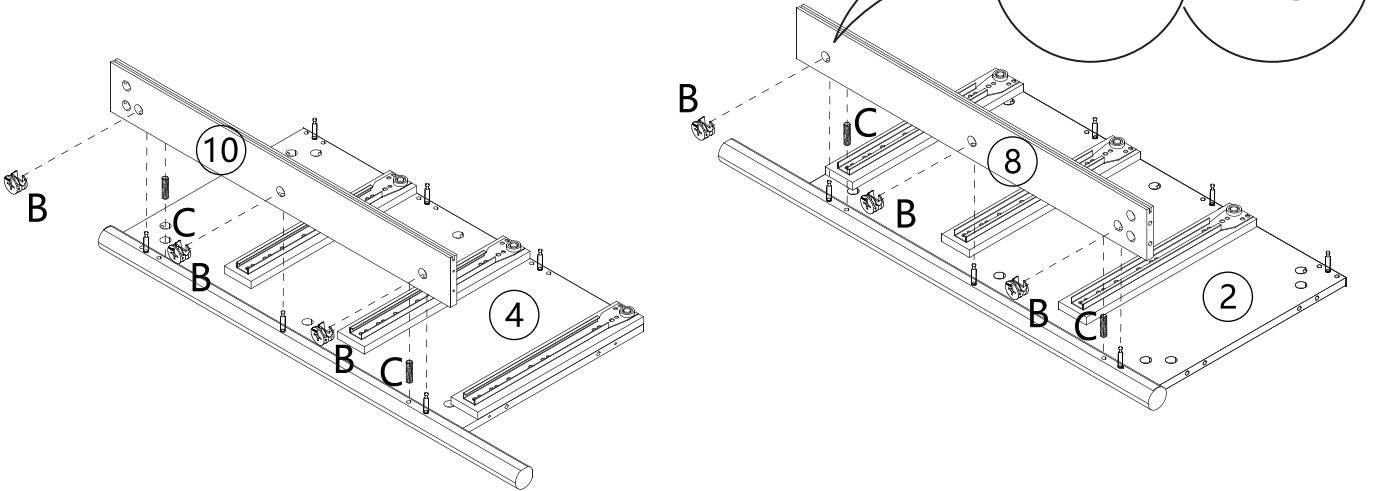

STEP6


B	X 3	J	X 6
			
Φ15*10		Φ8*50	

For part #3, insert the J piece into the middle position of the hole, ensuring it is visible.

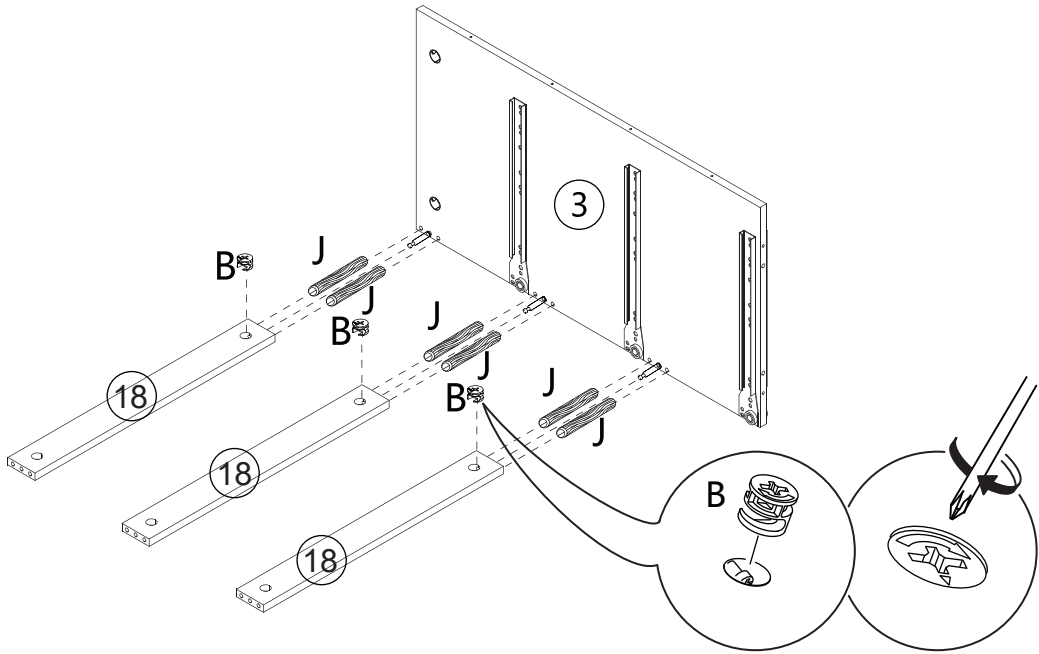

STEP7


B	X 3	J	X 6
			
$\phi 15 \times 10$		$\phi 8 \times 50$	

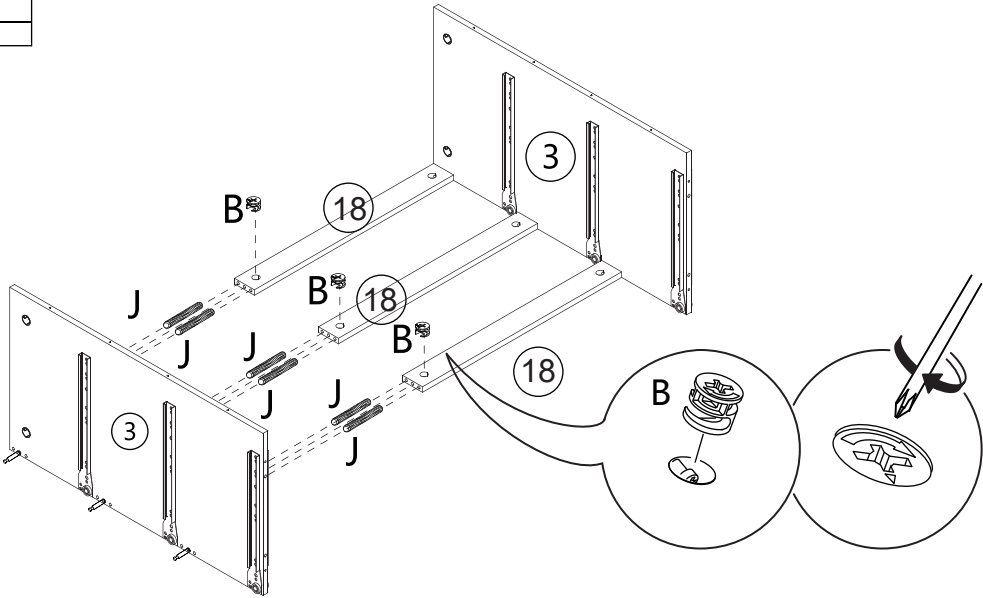

STEP8


B	X 6
	
$\phi 15 \times 10$	

For part #3, insert the J piece into the middle position of the hole, ensuring it is visible.

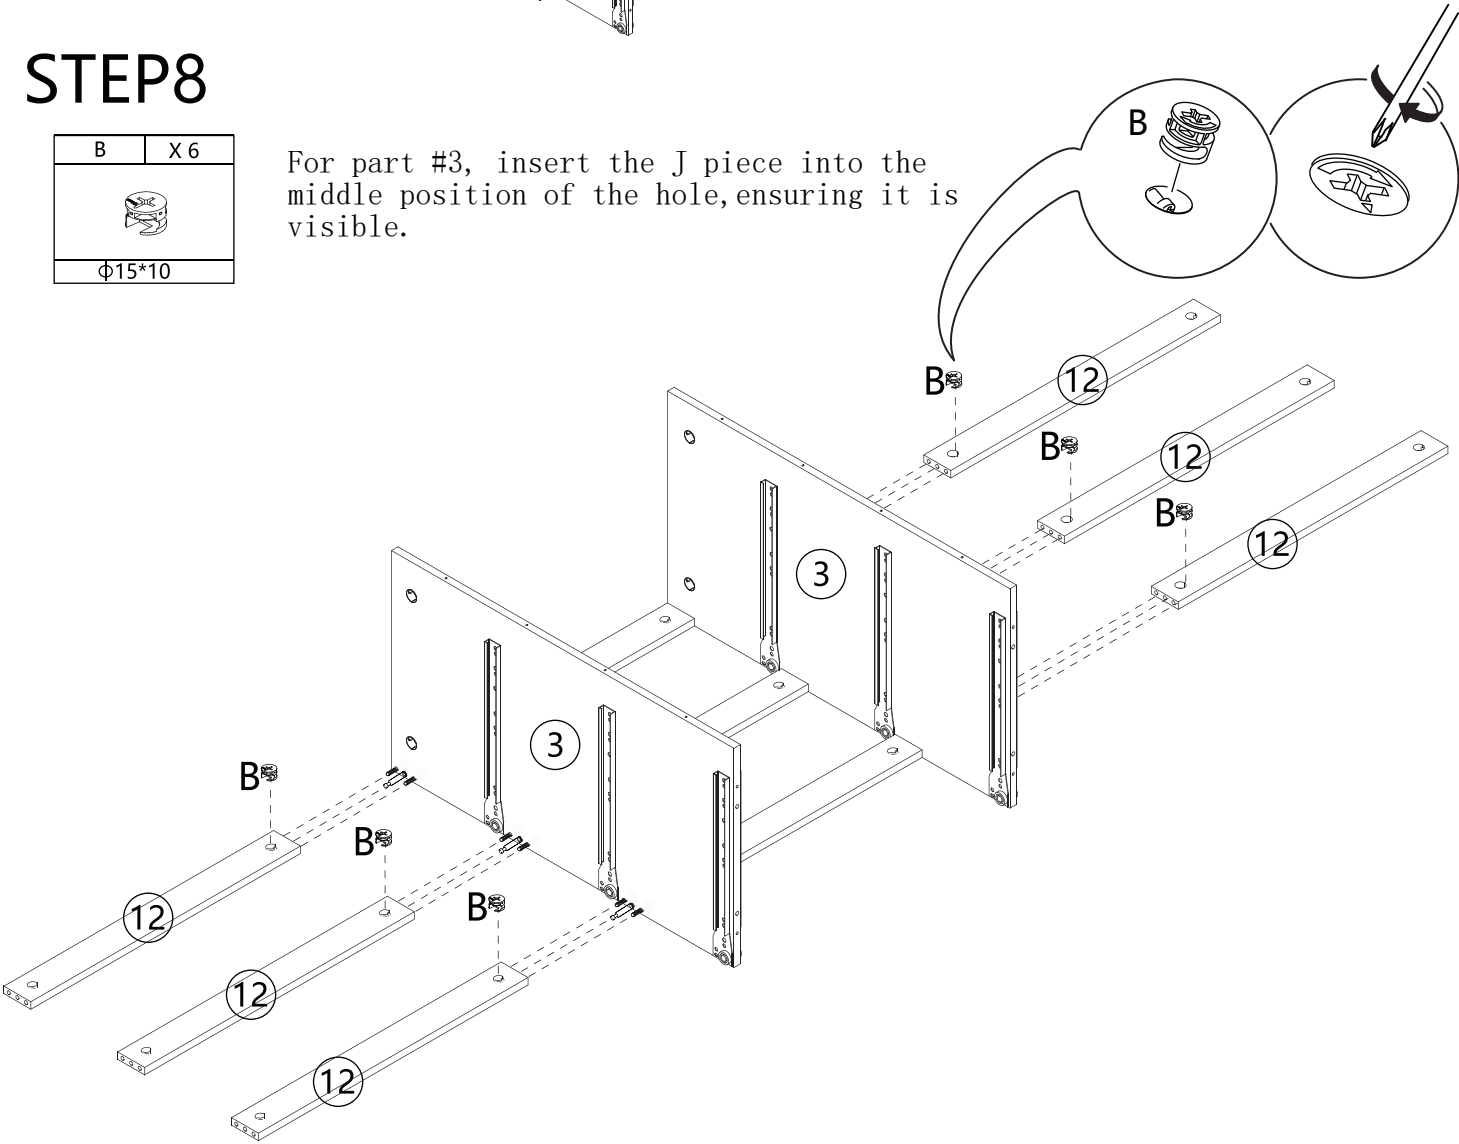


STEP9

B	X 3	C	X 6
			
$\phi 15 \times 10$		$\phi 8 \times 30$	

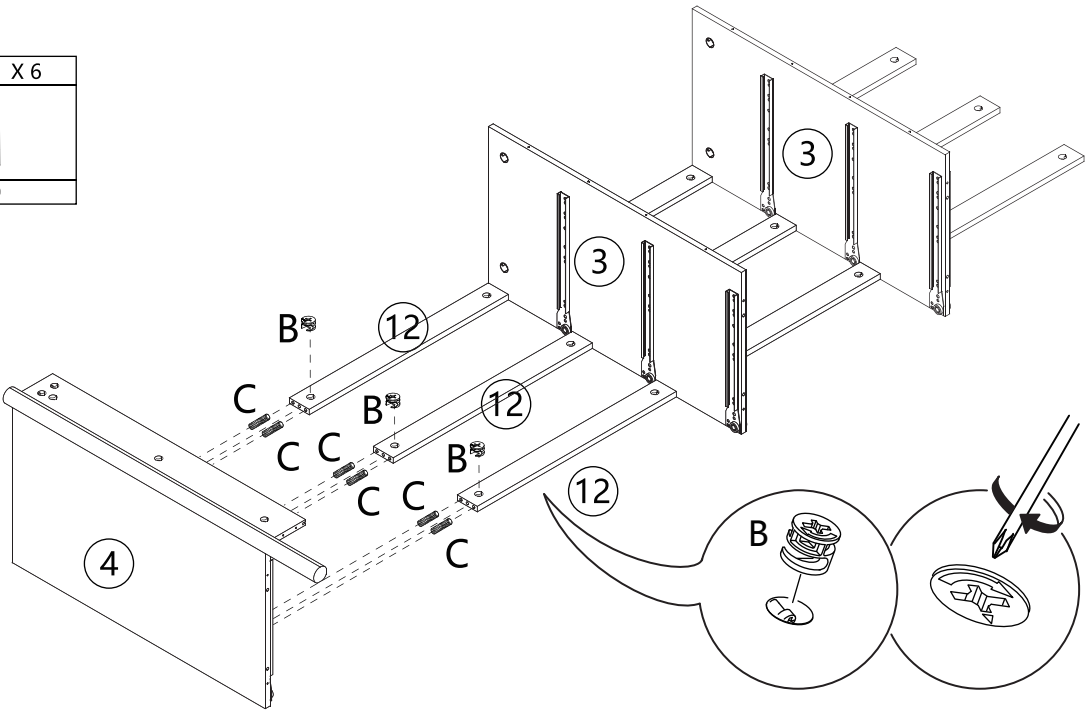

STEP10



B	X 3	C	X 6
			
$\phi 15 \times 10$		$\phi 8 \times 30$	

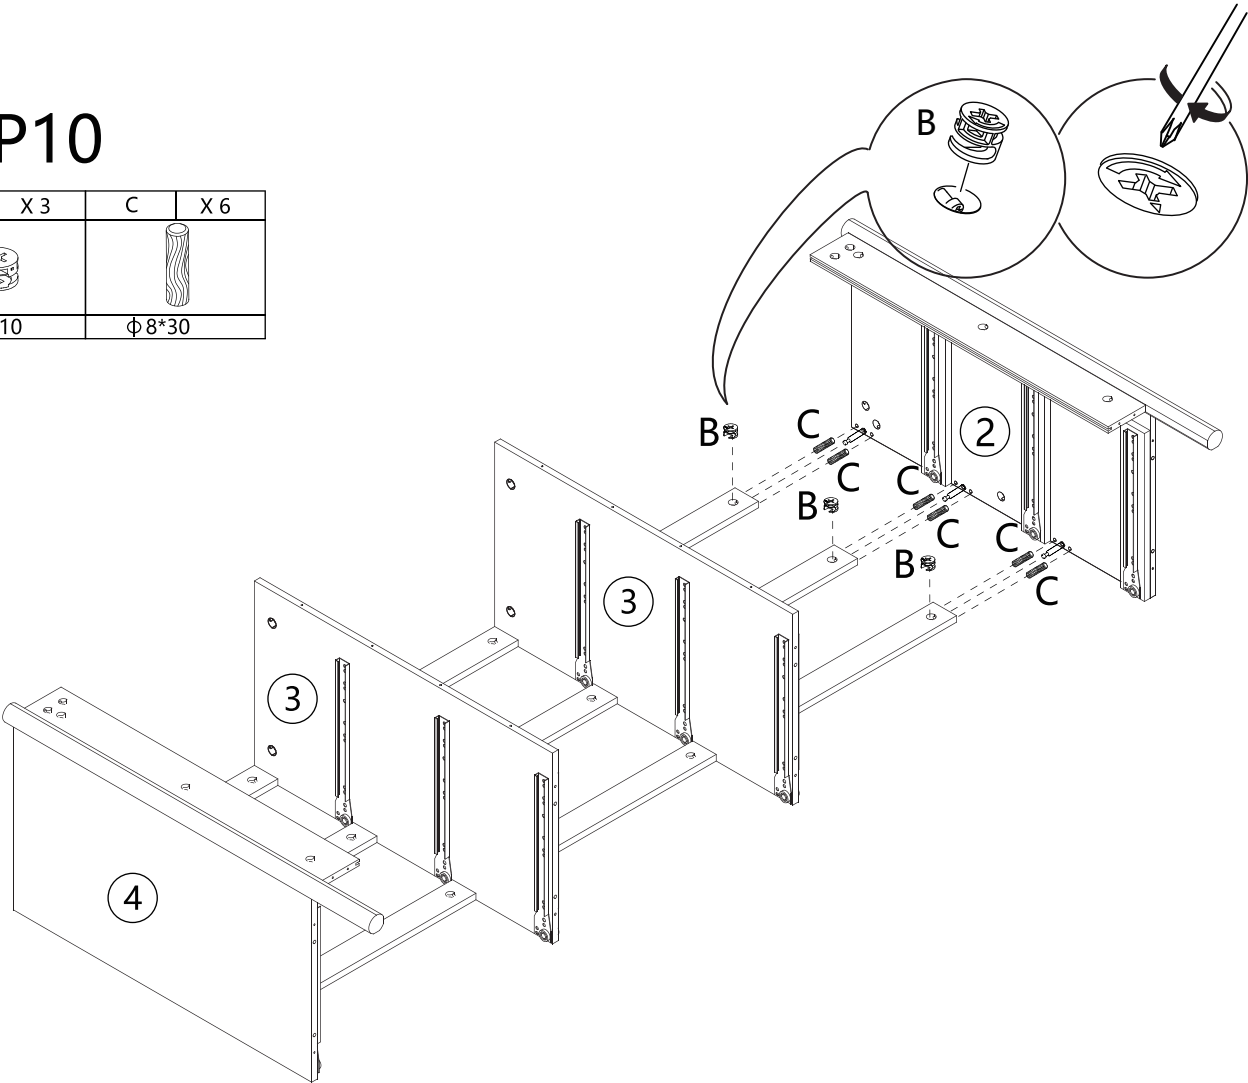

STEP 11


First, install leg #13 according to the steps. Then, turn leg#13 upward and secure the bottom plate K with screw L.

D	X 4	K	X 2
			
M4*35			
L	X 8	M	X 2
			
M4*12			

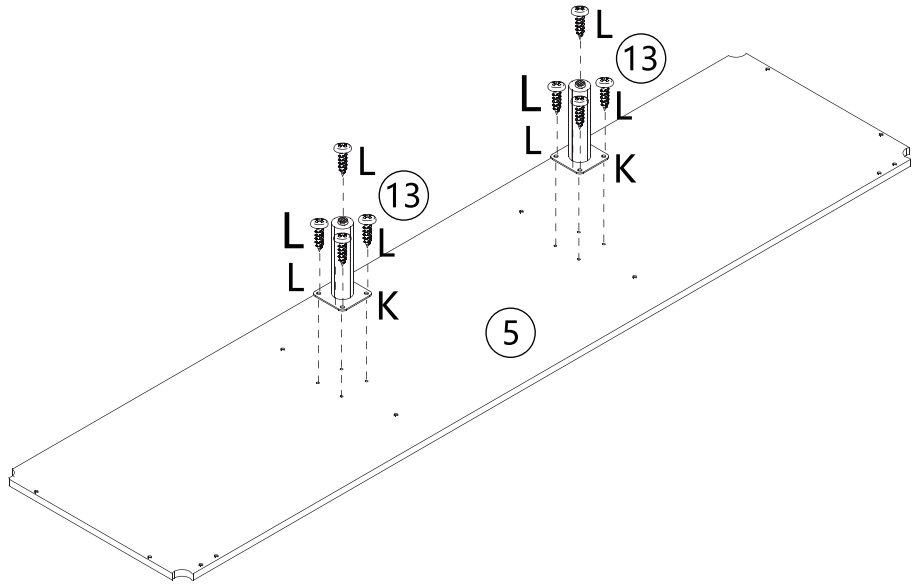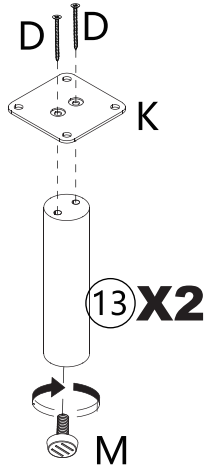


STEP12

C	X 8	D	X 12
			
φ 8*30		M4*35	

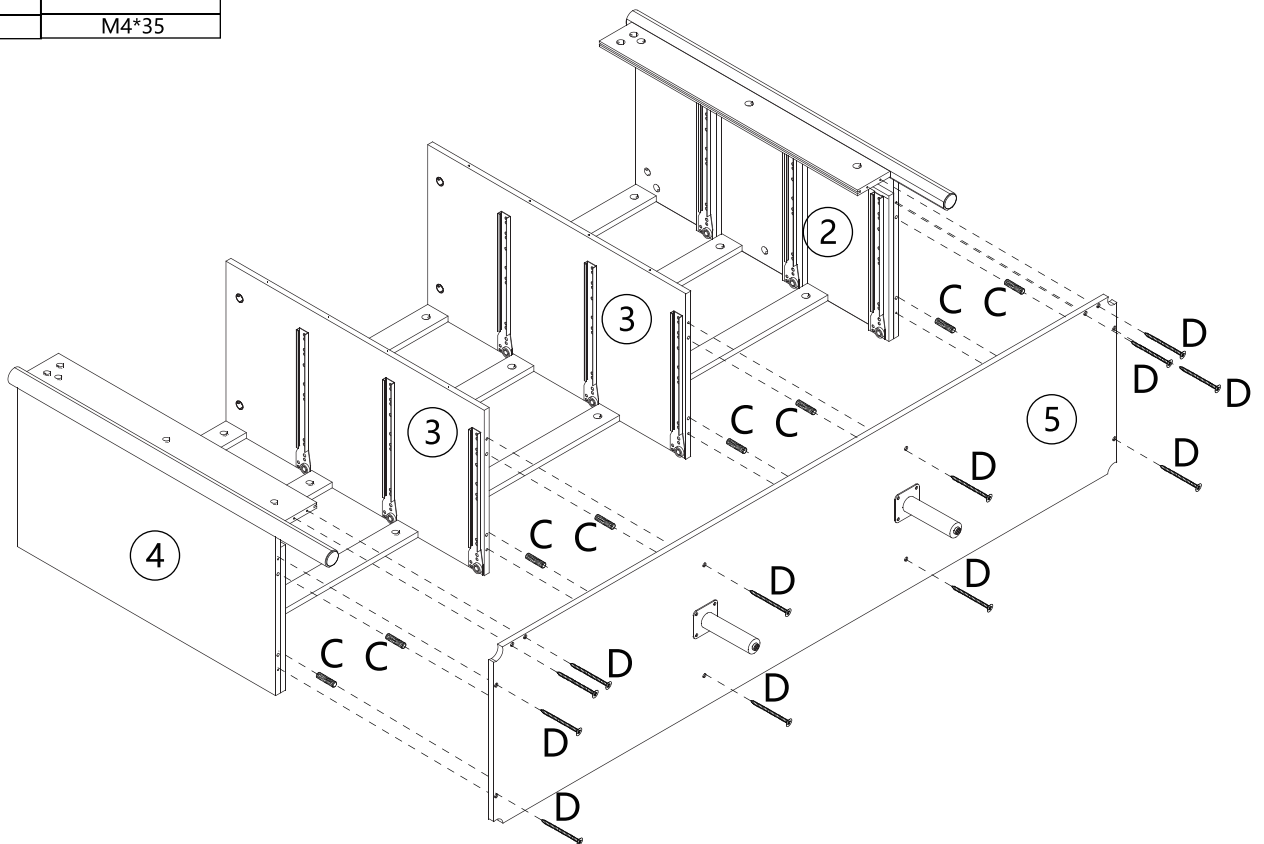


STEP13

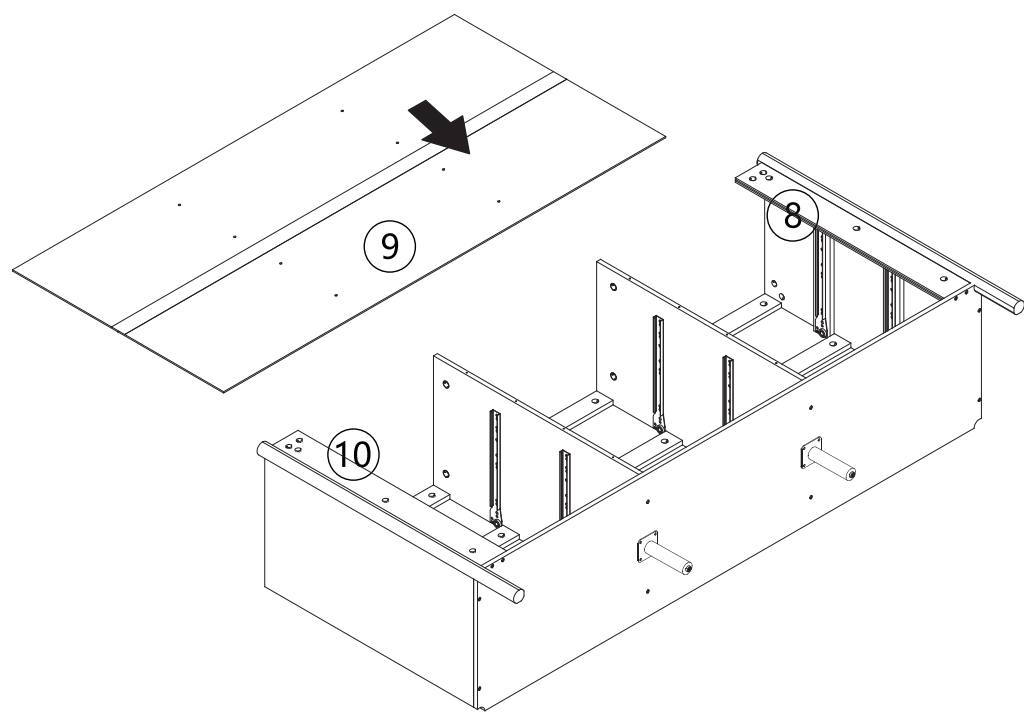


STEP14

A	X 12
	
M6*35	

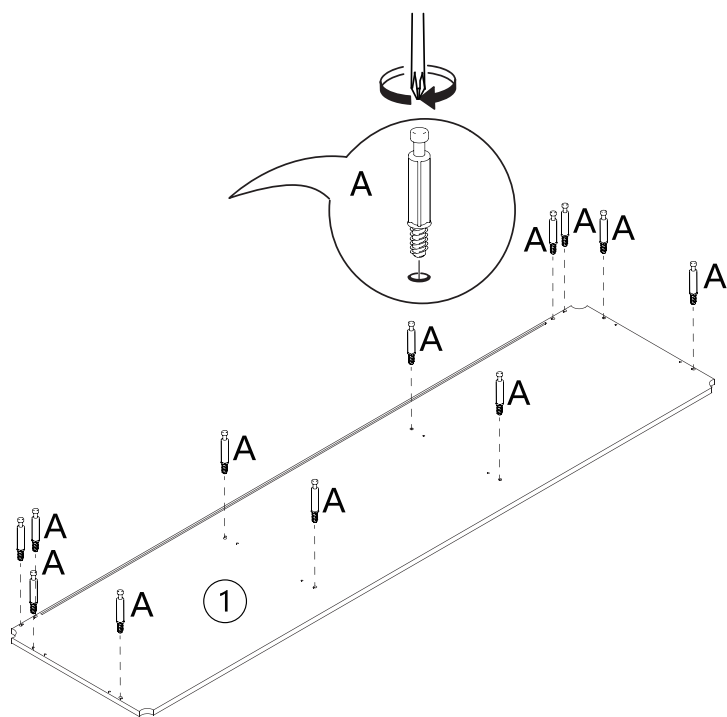


STEP15

B	X 8	C	X 8
			
Φ15*10		Φ8*30	

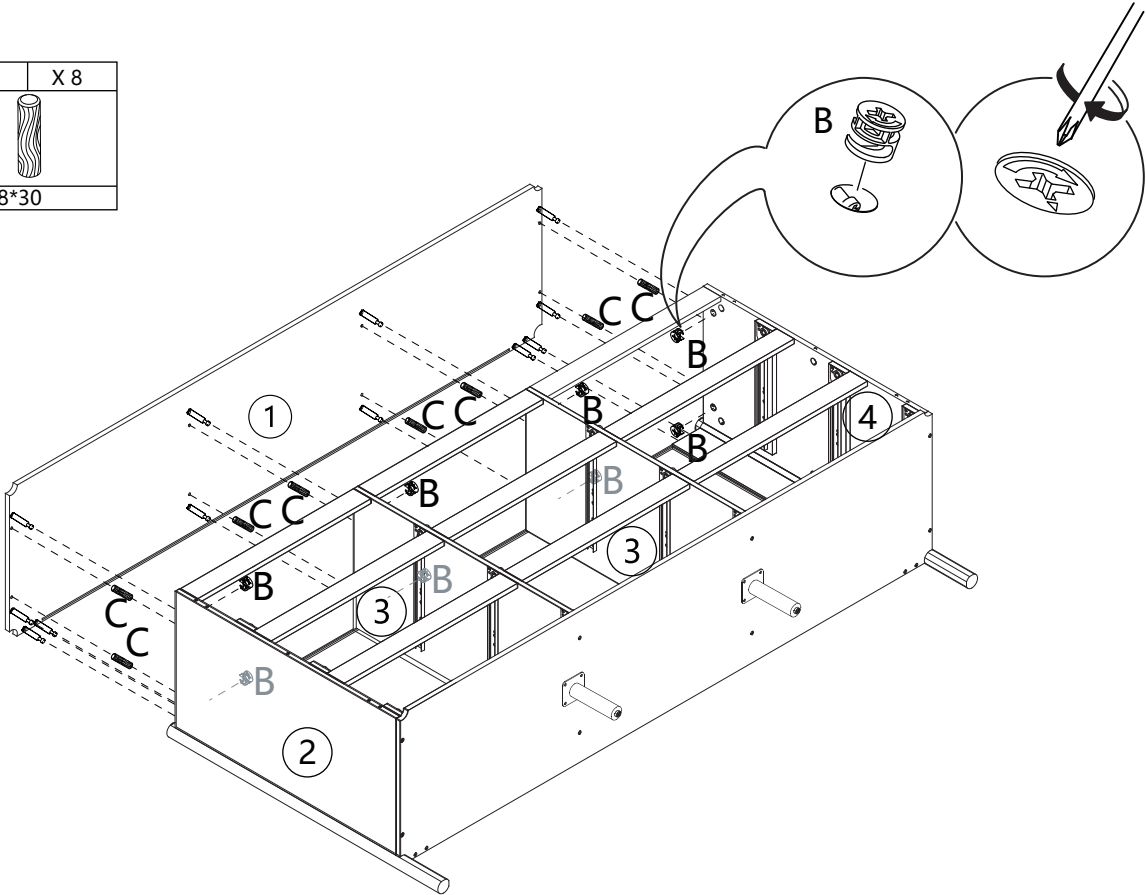


STEP16

B	X 6	C	X 4
			
Φ15*10		Φ8*30	
E	X 4		
			
Φ25*3			

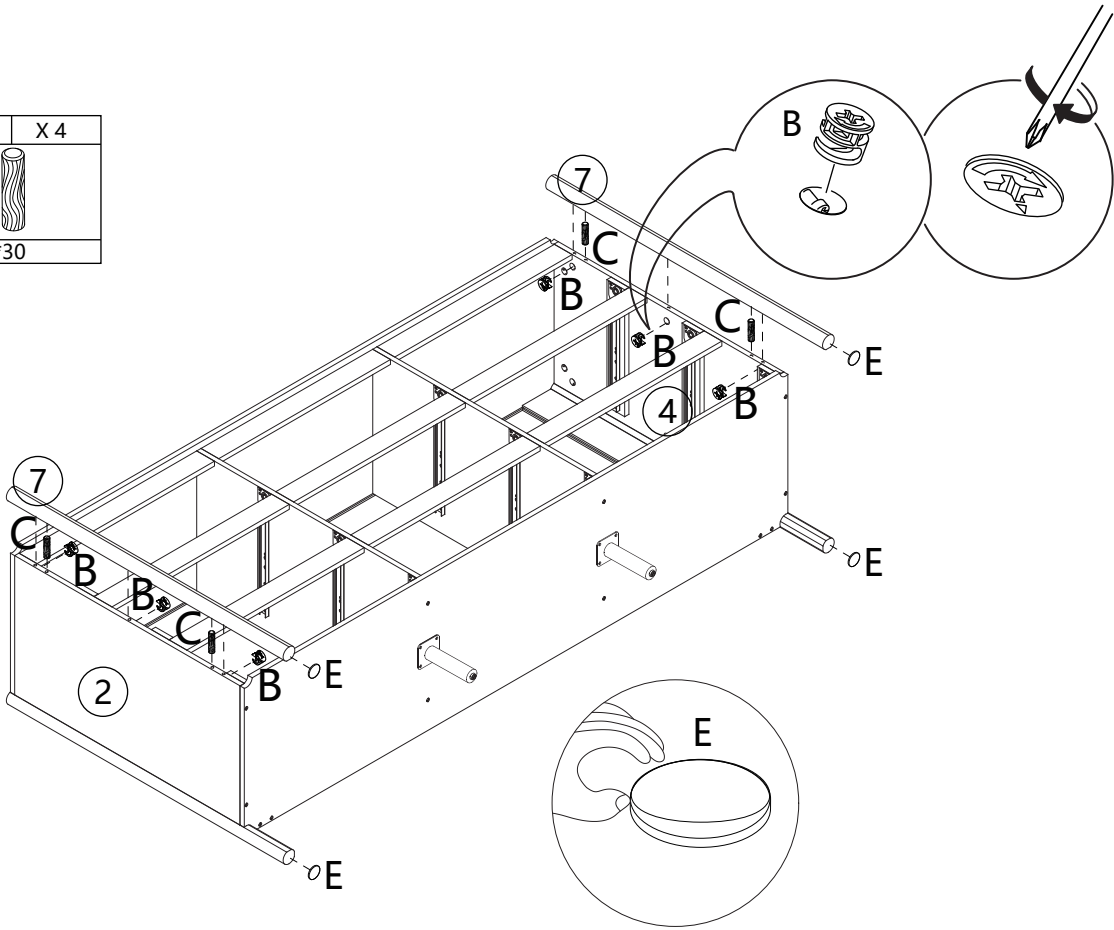


STEP17

D	X 36
	
M4*35	

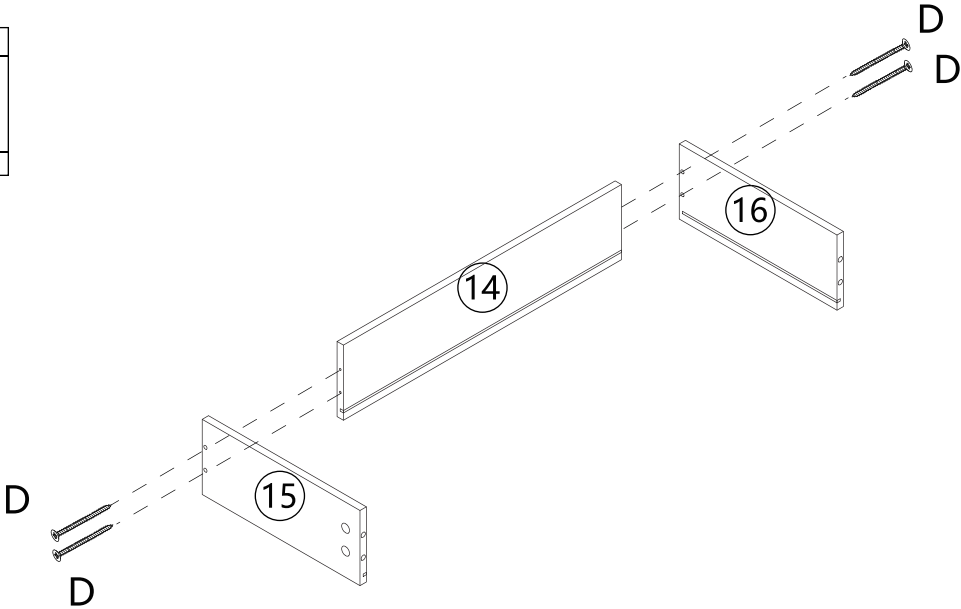

X9

STEP18


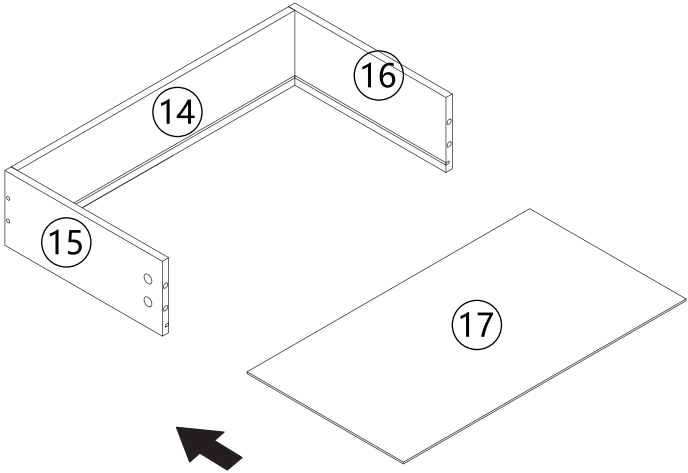


X9

STEP19

A	X 12	B	X 12
			
M6*35		φ15*10	



First, install screw A into the back holes of part # 19, #20 and# 21. Then, align and part #19,#20 #21 into the corresponding drawer holes.

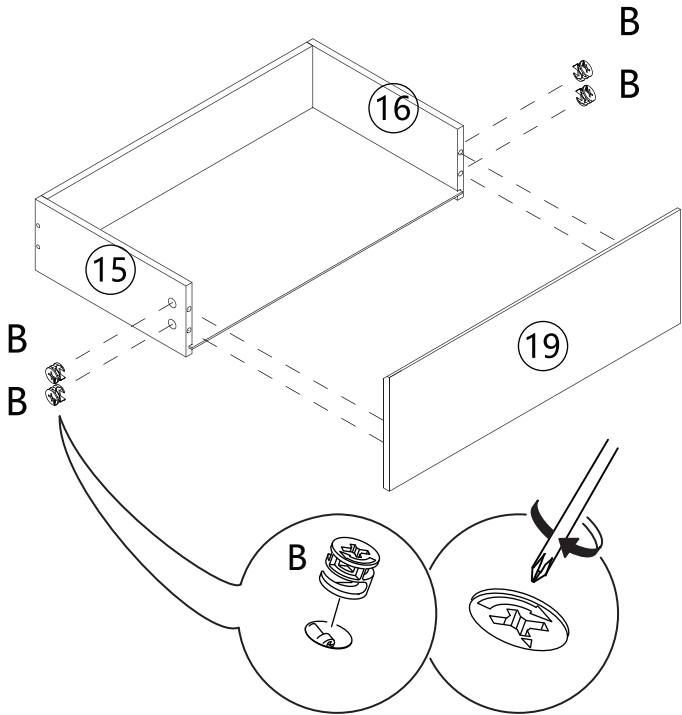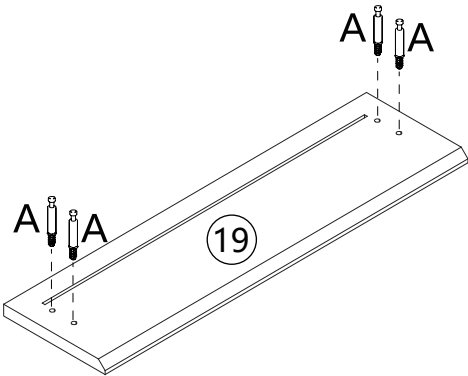

Left
X3

STEP20


A	X 12	B	X 12
			
M6*35		φ15*10	

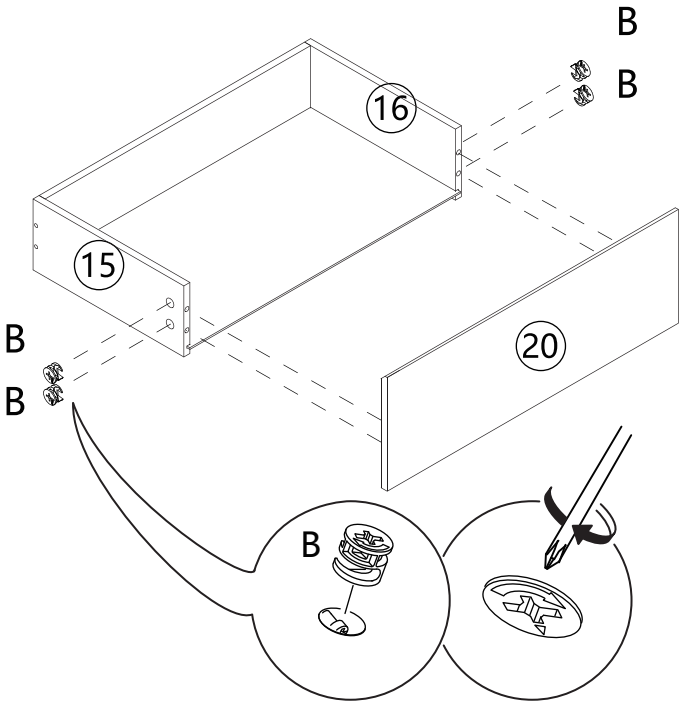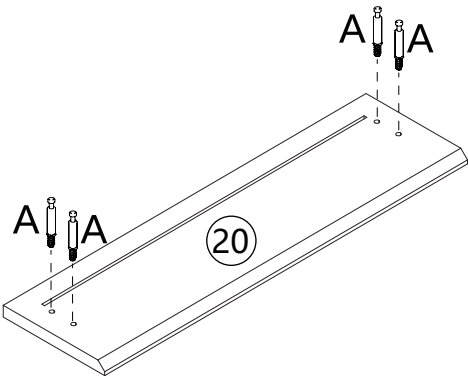

Middle
X3


STEP21

A	X 12	B	X 12
			
M6*35		φ15*10	

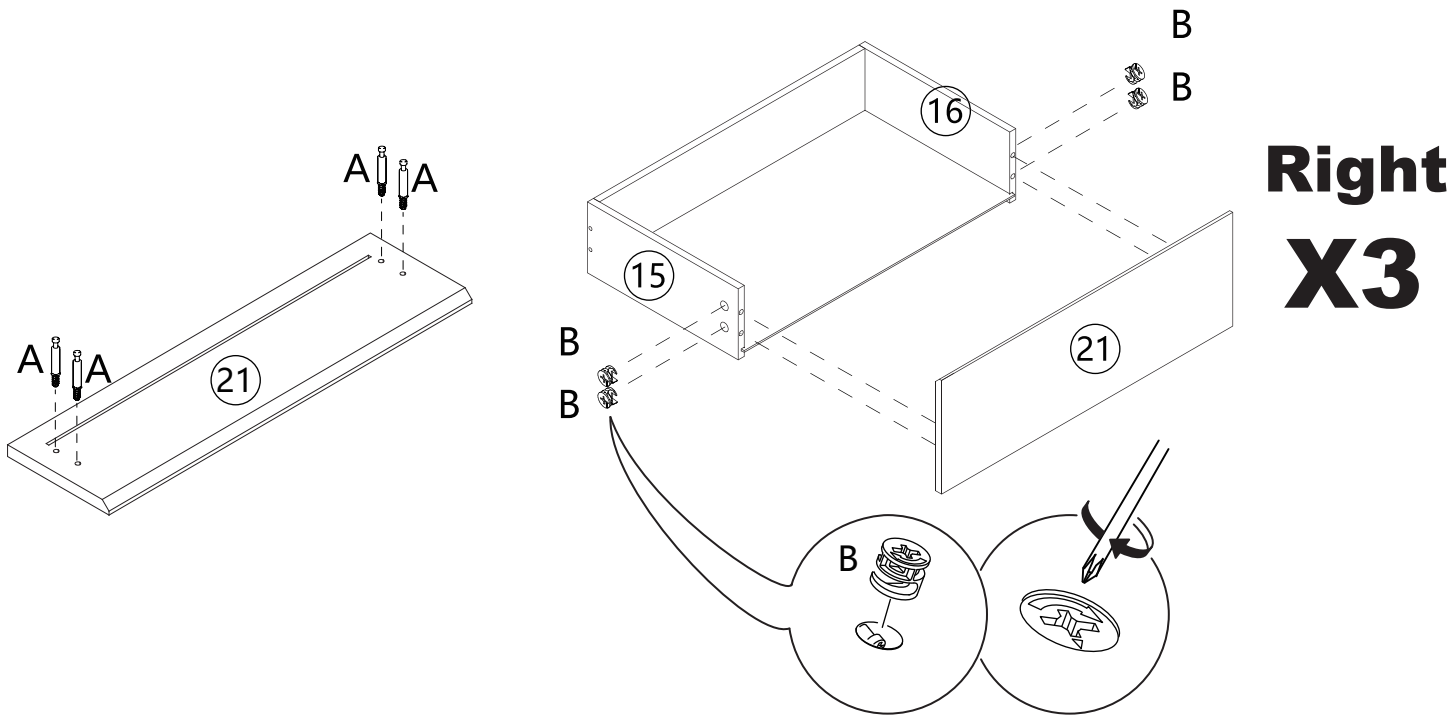


STEP22

I	X 36	DL	X 9
			
DR	X 9		
			

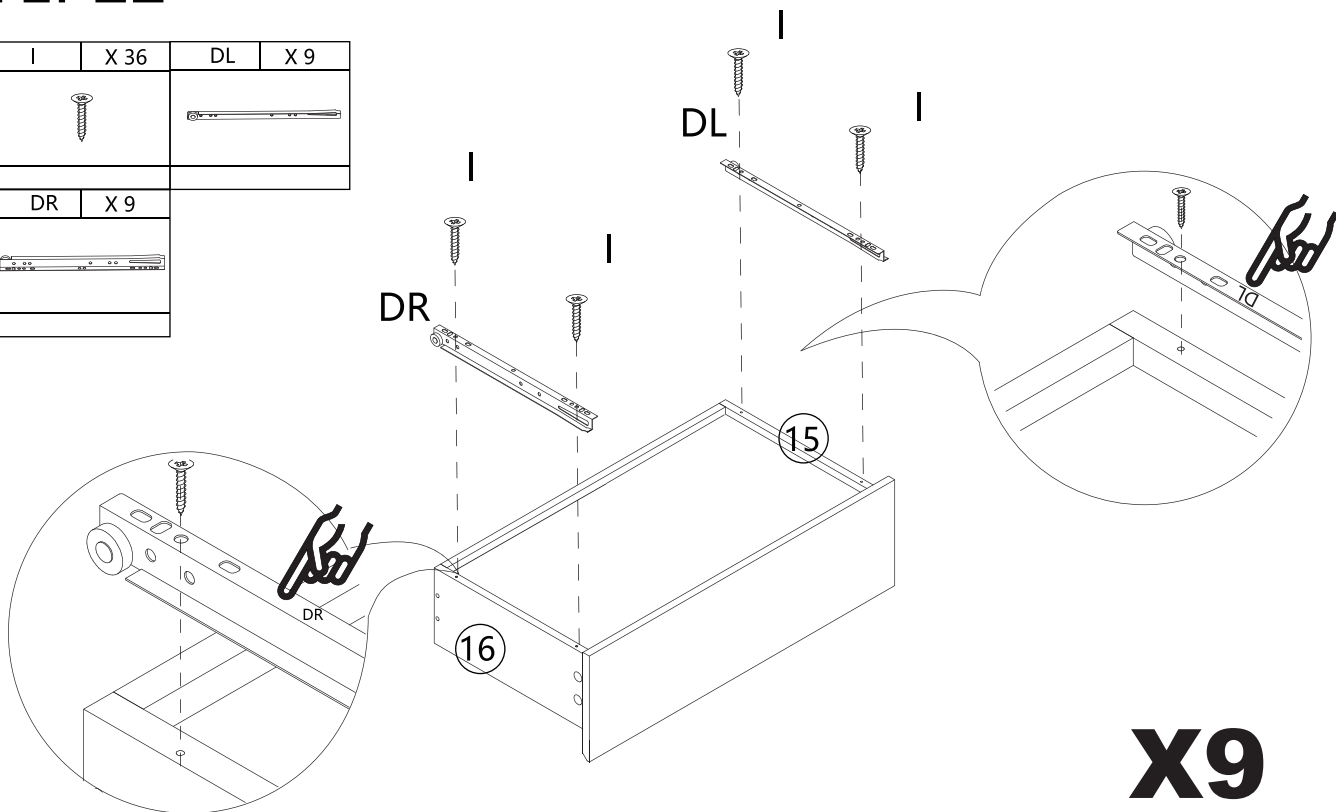


STEP23

Please Note:part #19 on the left and part # 20 on the middleand part #21 on the right.
Incorrect placement of the panels will prevent proper use.

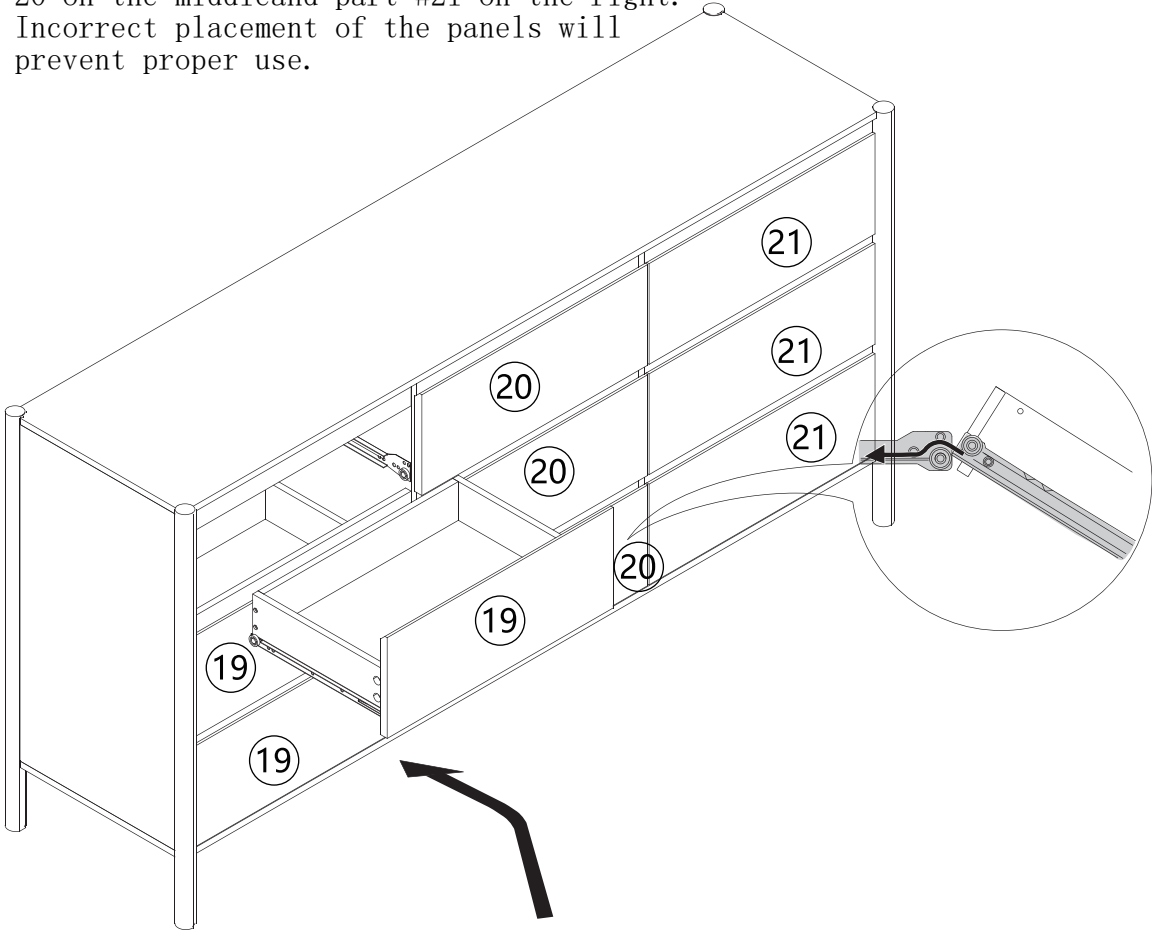


STEP24

B	X 4	F	X 6
			
$\phi 15*10$		M3*14	
G	X 6	H	X 8
			
		M4*20	

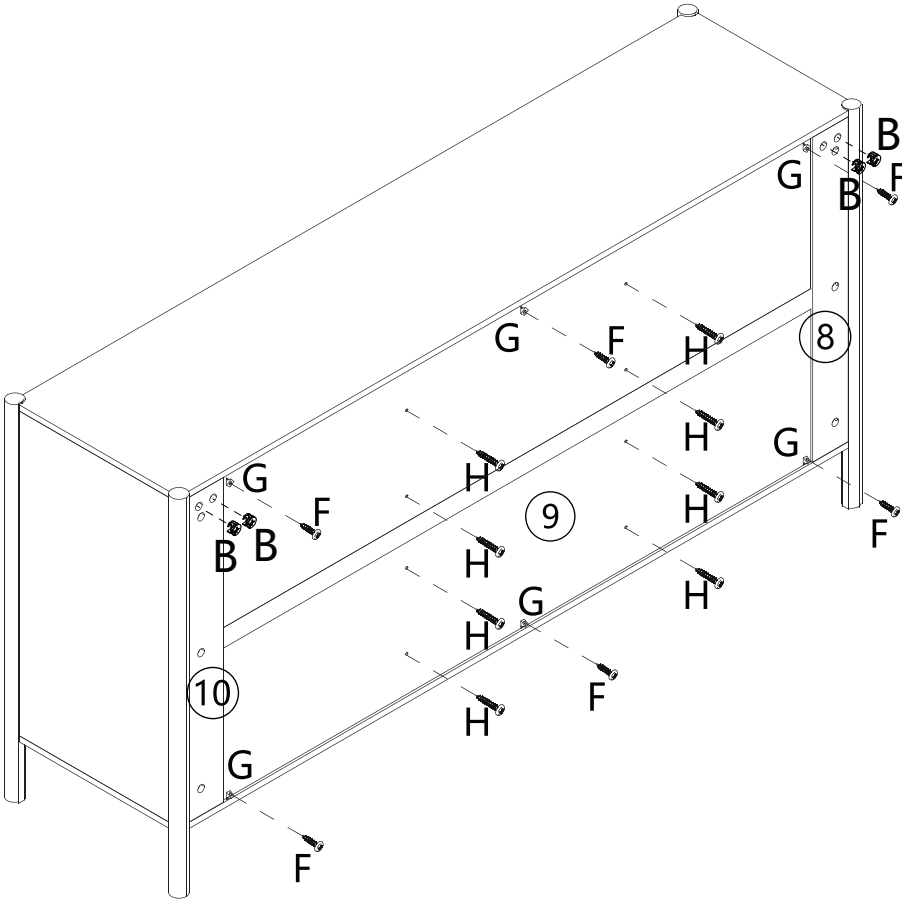


STEP25

D	X 2	L	X 2
			
M4*35		M4*12	
N	X 2		
			

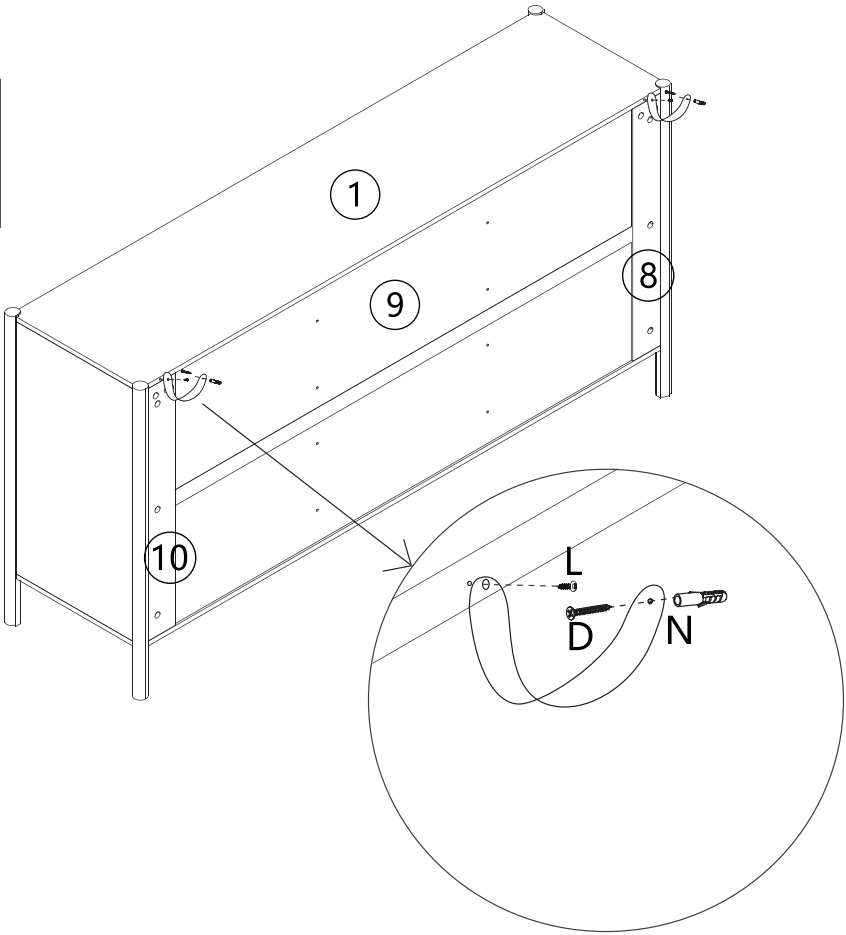

STEP26

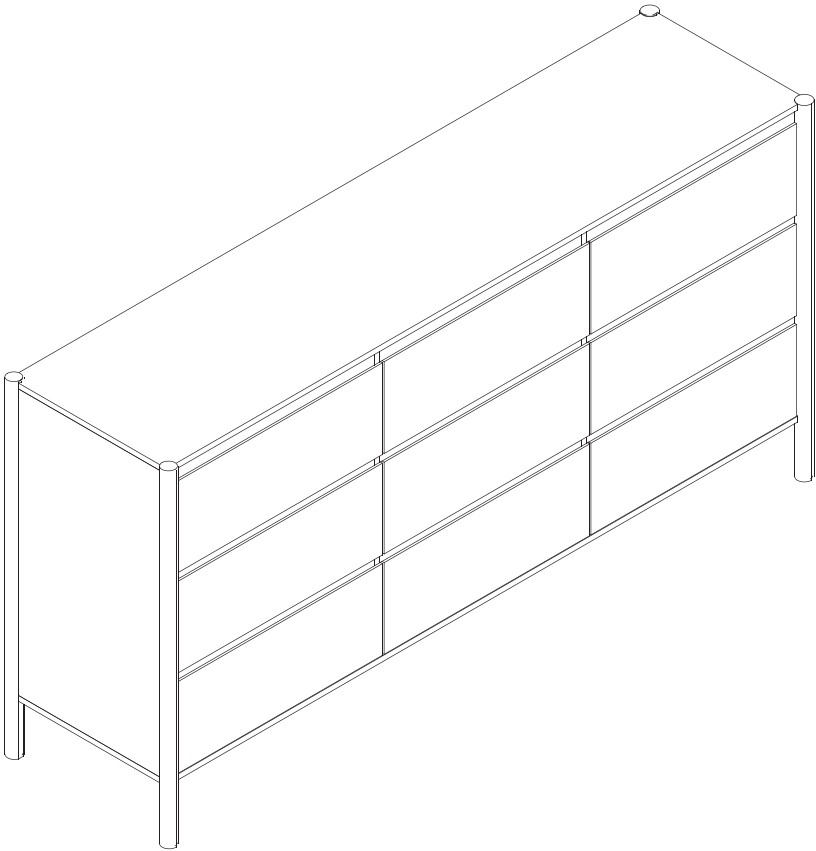

IMPORTANT SAFETY INFORMATION

Please carefully read the instructions and caution warnings below before assembling the product. Following this guide will ensure that you install, use and maintain the product properly.

- Please keep this installation and user manual/instructions for future reference in case you need to assemble the product.
- Do not assemble if you notice serious damage such as cracks or bends.
- During installation, please use work gloves for hand safety.
- Please assemble the unit on carpeted floor or the flat cardboard box to avoid scratching the surface or your floor while assembling on the floor.
- Pay more attention to the direction of components at each steps.
- It is recommended that two people work together to assemble the product.

Missing / Wrong / Broken parts and installation issues

How to find us?

Customer Service

Email: support@homejoyee.com