


# GLASS BARN DOOR ASSEMBLY INSTRUCTIONS

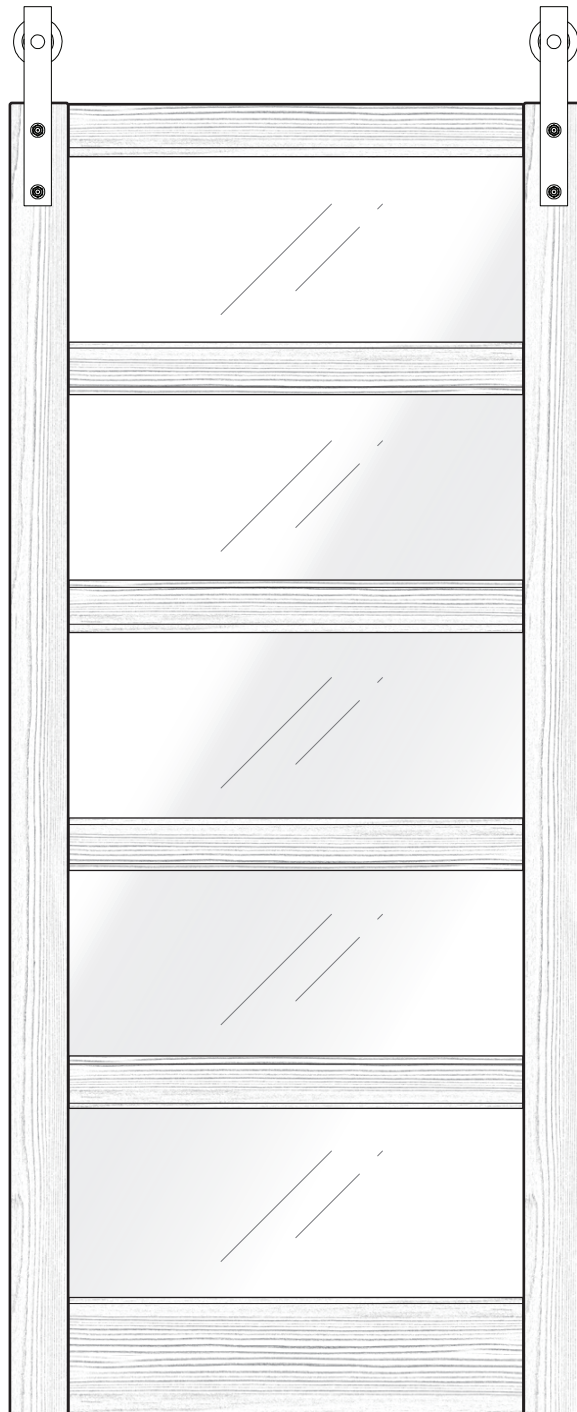


# DOOR PANEL ASSEMBLY INSTRUCTIONS

For best results, carefully follow the instructions in this guide. Glue and other adhesives are not required, and we do not recommend their use during the assembly process.

First, remove all parts from the box and place them on a flat, open surface. Then, using the guide drawings at the bottom of this page, identify each slat. Next, follow the drawing on the left to place each part as shown.

Make sure to pay special attention to the direction of the tongues and grooves on each piece. A1 and A2 's groove are facing inside. B4 is wider than B1, B2 and B3.

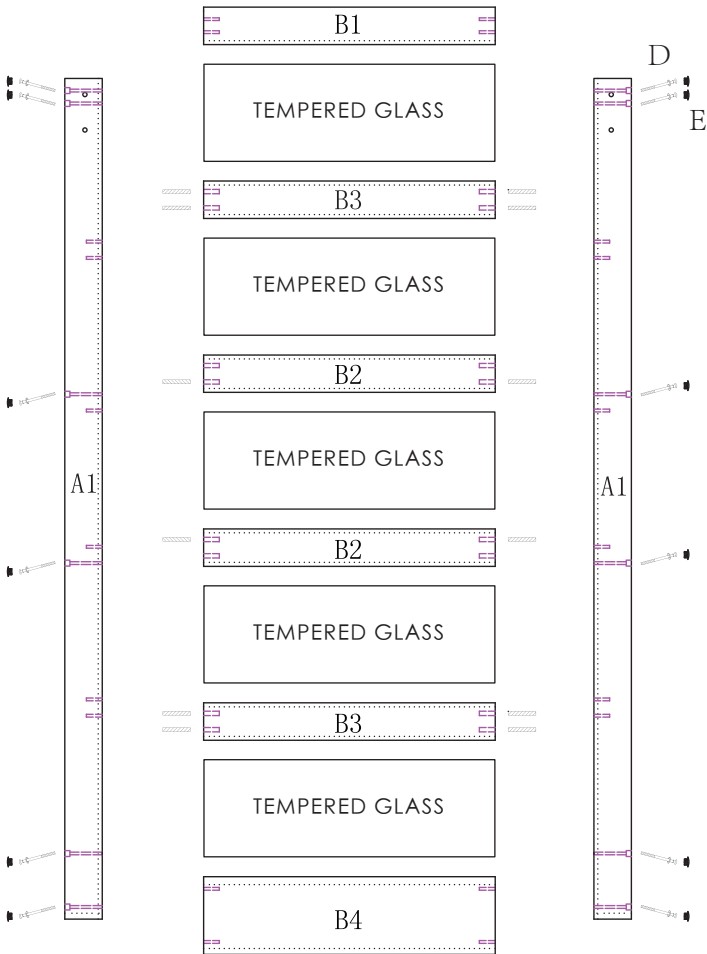


|    | <i>Description</i>          | <i>QTY</i> |
|----|-----------------------------|------------|
| A1 | Side Stile                  | 2          |
| B1 | Top Rail                    | 1          |
| B2 | Rail with 2 different holes | 2          |
| B3 | Rail with 2 same holes      | 2          |
| B4 | Bottom Rail                 | 1          |
| D  | Carriage Bolts              | 12         |
| E  | Hole Sticker                | 12         |
| F  | Allen Key                   | 1          |




B1



B2



B3



Carriage Bolt




Wood Plug

|   |   |
|---|---|
| 1 | 3 |
| 2 | 4 |


ONE

Attach B1 (top slat) and B4(lower slat)to stile A1 by inserting the tongues into the groove of A1 and fastening with four carriage bolts. Using one wood plug and one carriage bolt to connect each B2 with stile A1.

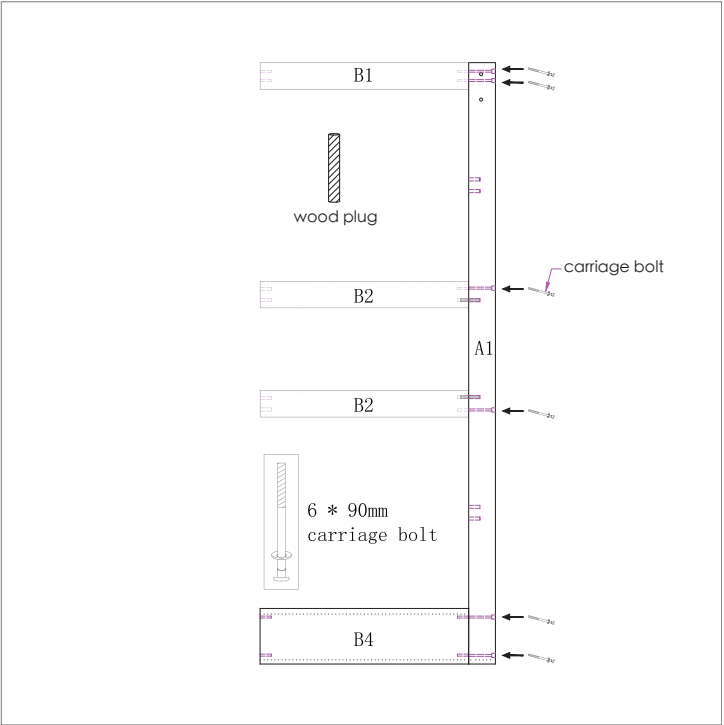


TWO

Using two wood plugs to connect each B3 with stile A1. Make sure that each slats of B1,B2 and B3 is tightly connected with A1.

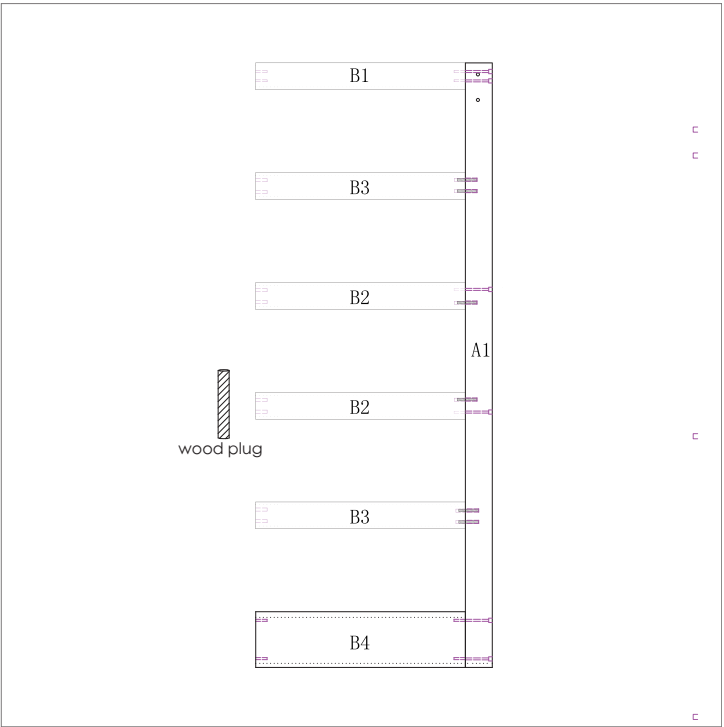

THREE

Gently slide five tempered glass into A1' s groove following the instruction. Then insert 2 wood plugs into each left side of B3 slat and 1 wood plug into each left side of B2 slat.

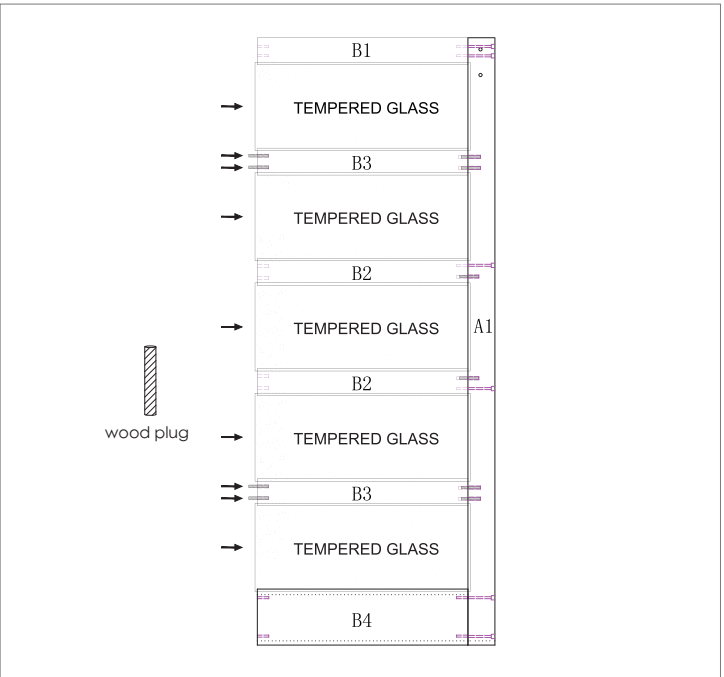

FOUR

Align stile A2 's holes with wood plugs and make sure all the tempered glass is align with stile 's groove. In the end, fasten A2 with all B1 B2 and B4 with 12 carriage bolts . After making sure all the bolts are tightened, place the included plastic trim covers on top of the bolts. Then your door is ready to hang.

