



# Bookshelf

## Instruction Manual

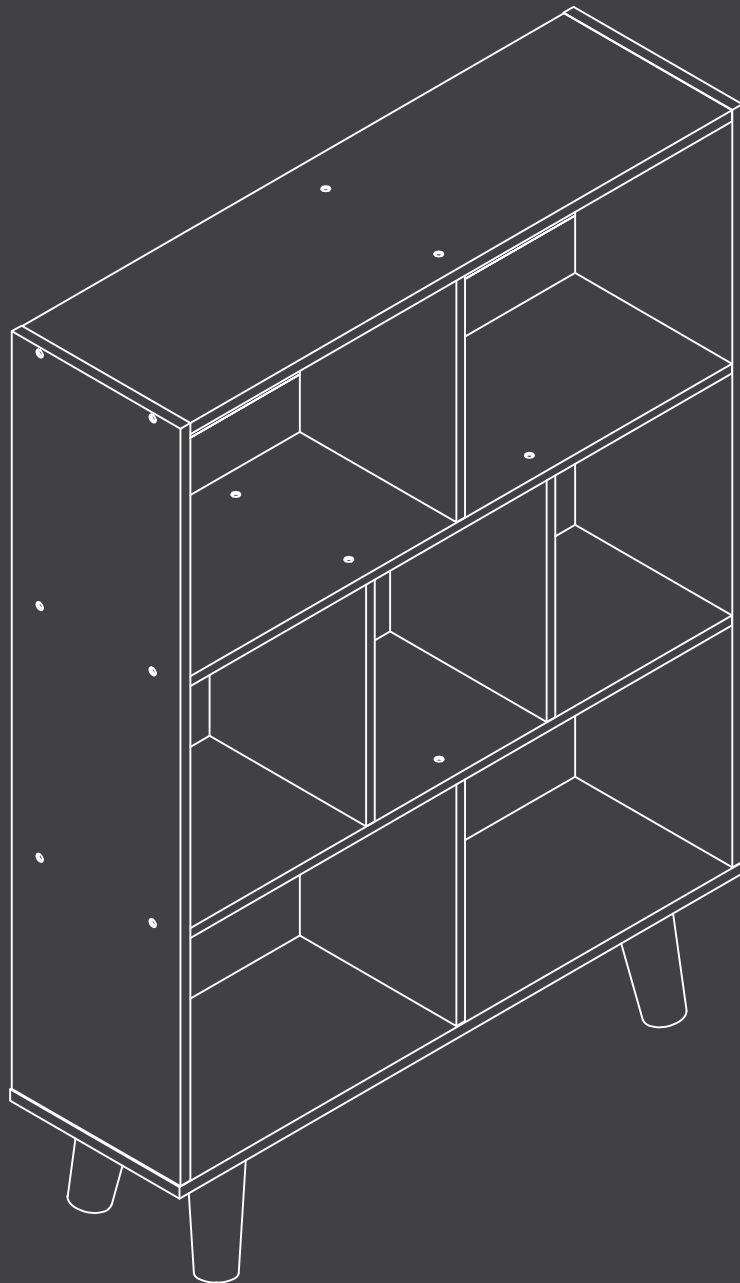


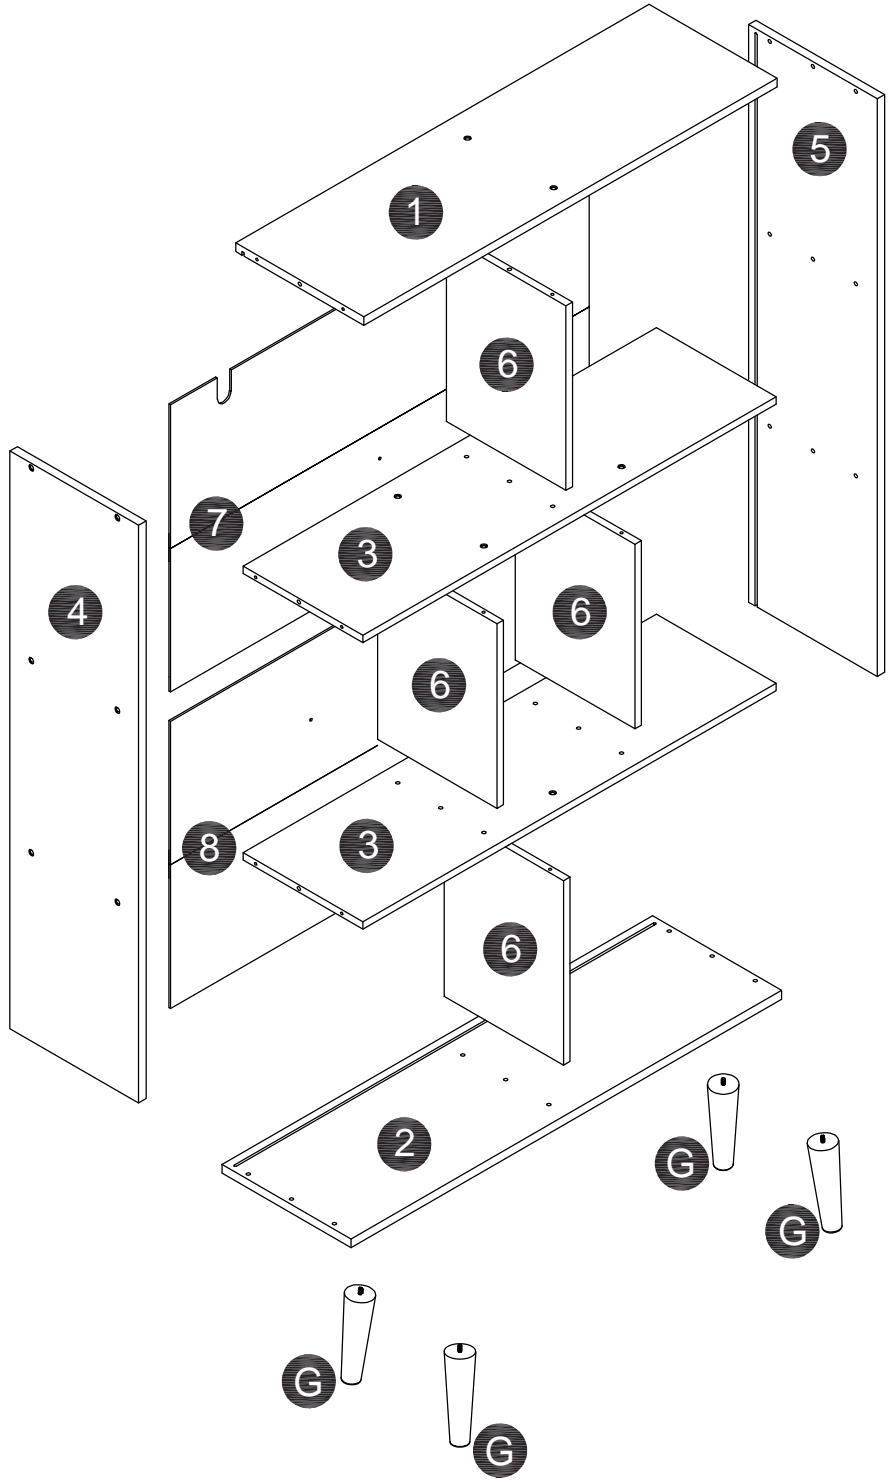


# 1 Component List

---


1 X1

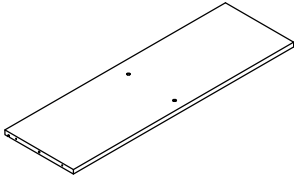


2 X1

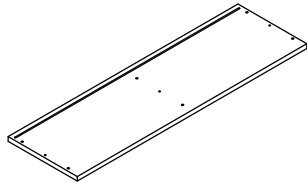


3 X2

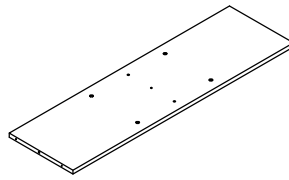


4 X1




5 X1




6 X4



7 X1

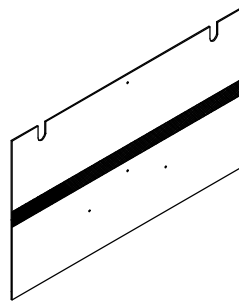


8 X1

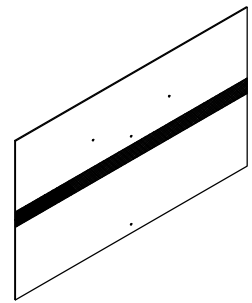


## 2 Supplied Parts and Hardware

**A** X32+2



Ø9.5\*Ø6.2\*40mm

**B** X16+1



Ø6x30mm

**C** X4




Solid Wood Foot Connector

**D** X28+2




Ø3.5x15mm

**E** X1

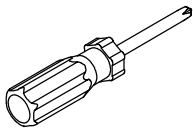


**F** X2SETS



**G** X4



**H** X20




**I** X12




Ø3.5x12mm


**J** X12




Please have the following auxiliary tools ready:  
Bitte halten Sie folgende Hilfswerkzeuge bereit:  
Veuillez préparer les outils auxiliaires suivants :  
Si prega di avere pronti i seguenti strumenti ausiliari:  
Por favor, tenga listas las siguientes herramientas auxiliares:

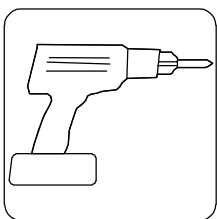


Electric Drill

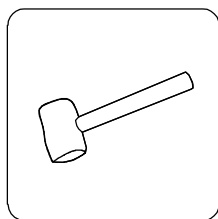


Hammer

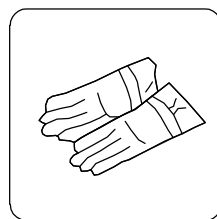

Gloves

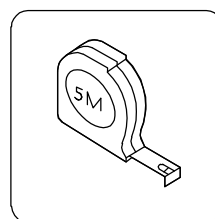



Tape Measure 5M

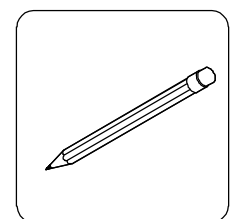


Pencil

**NOTE:** This product requires at least two people for installation.



# Step 1

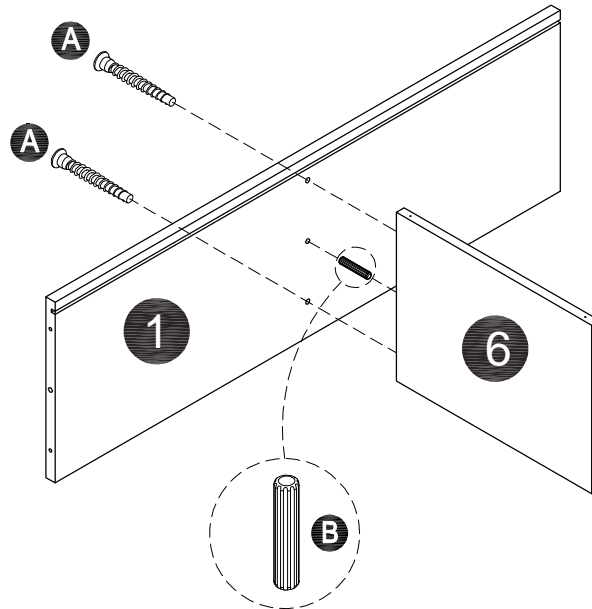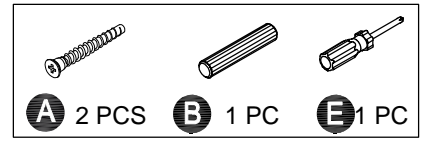



# Step 2

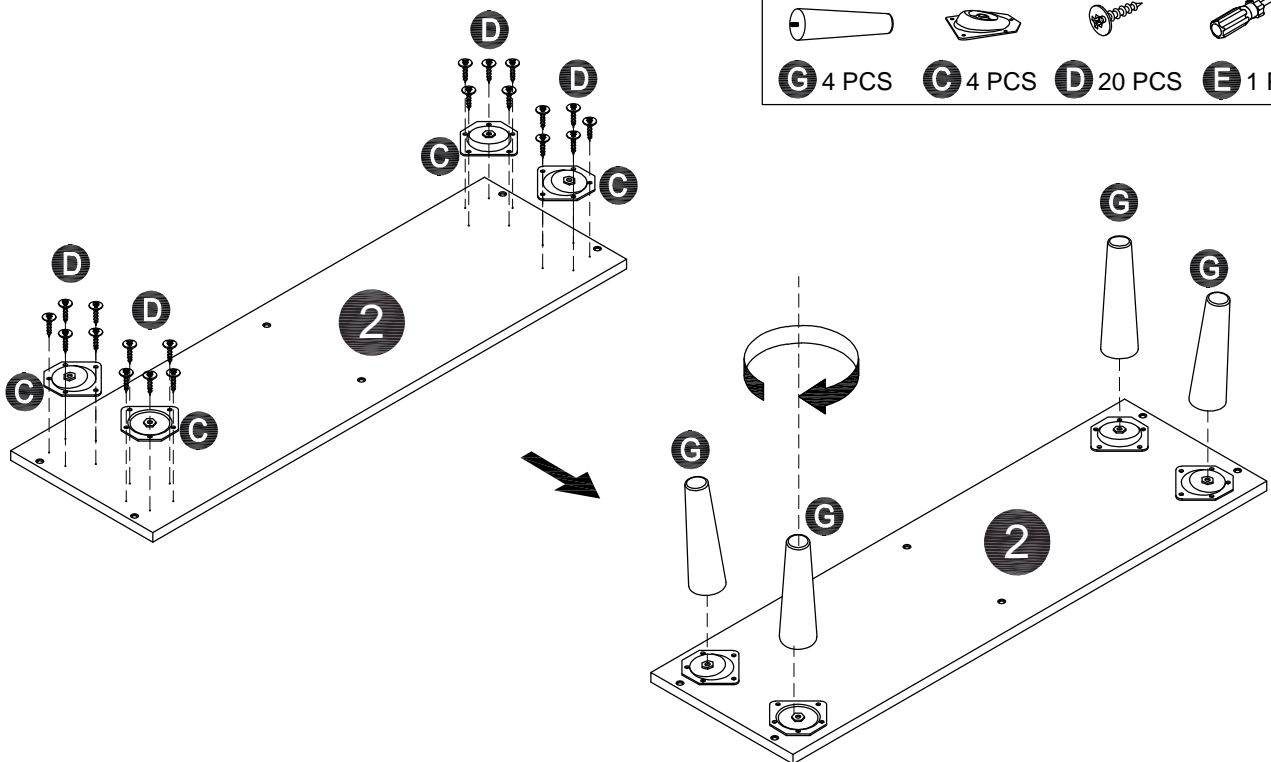


# Step 3

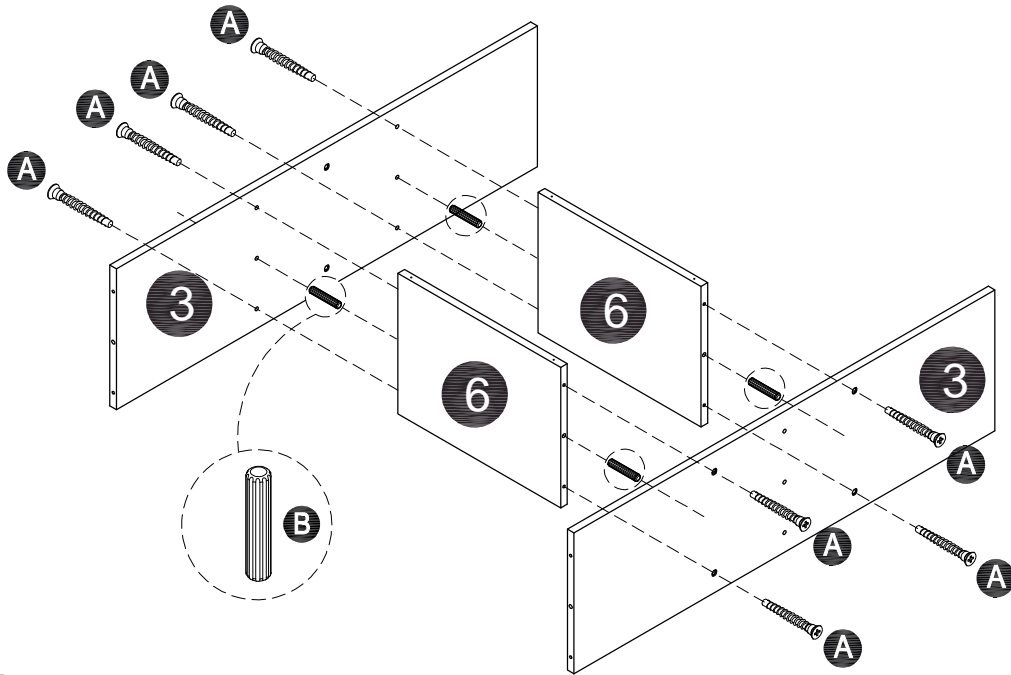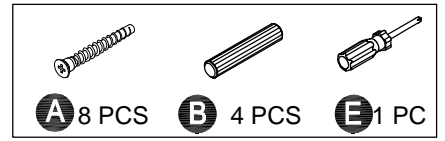


# Step 4

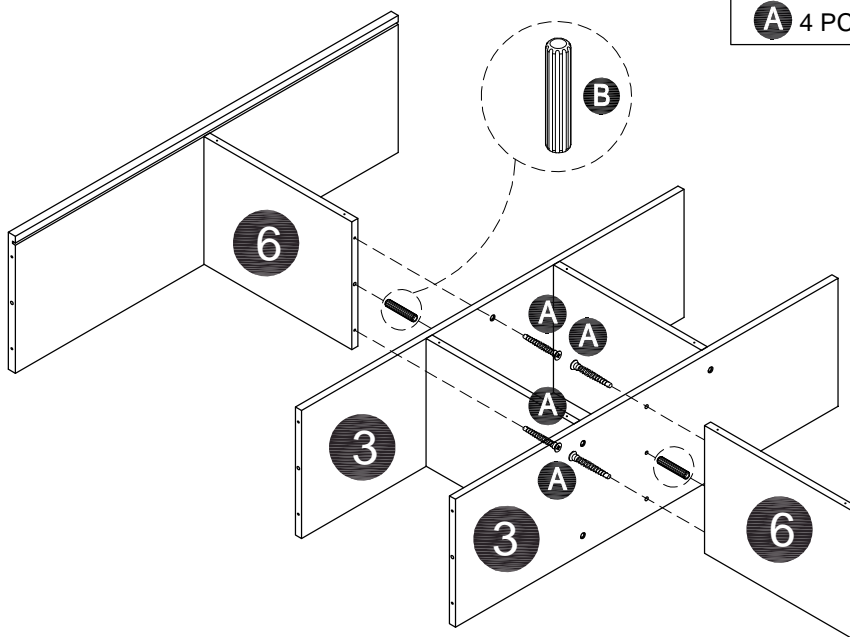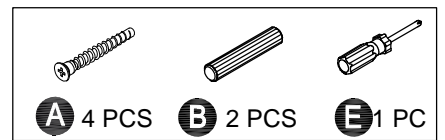


# Step 5

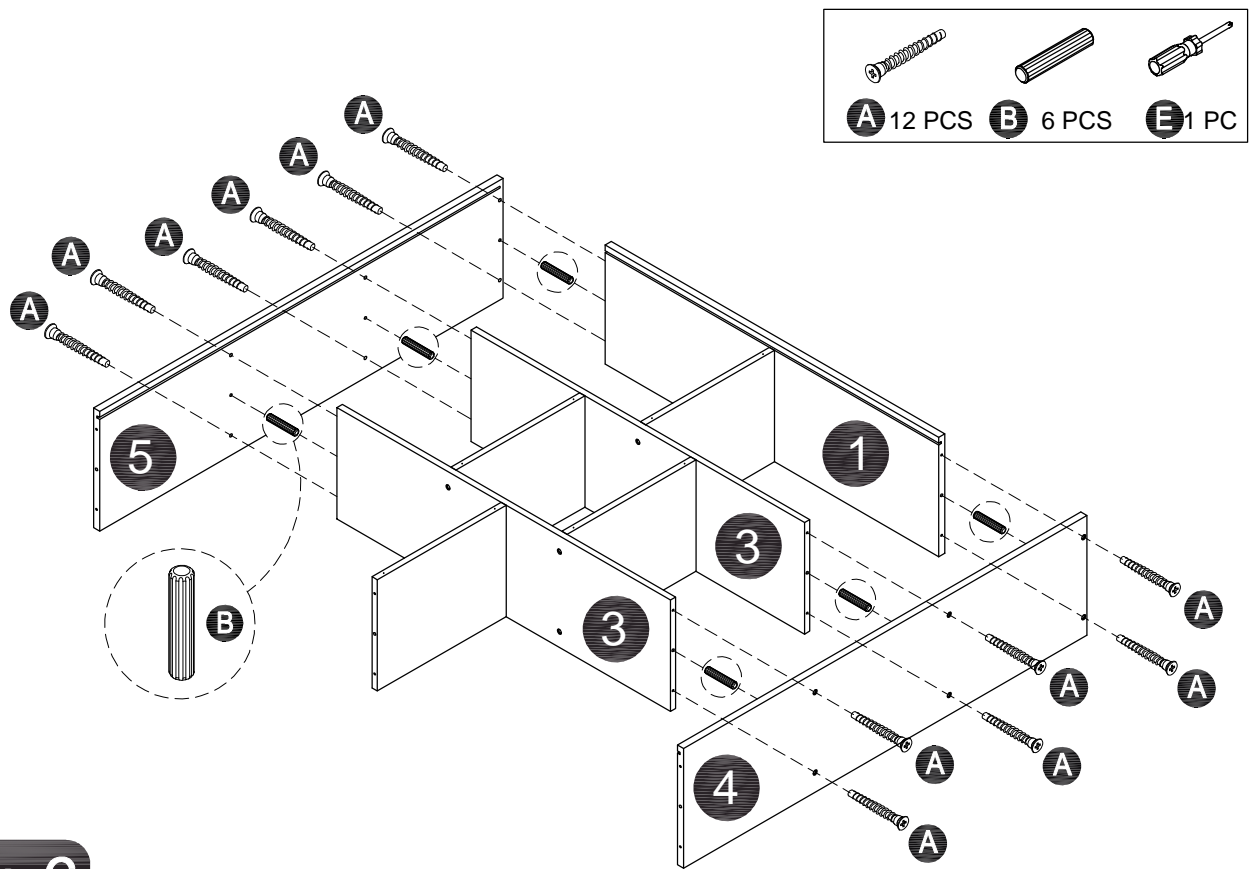


# Step 6

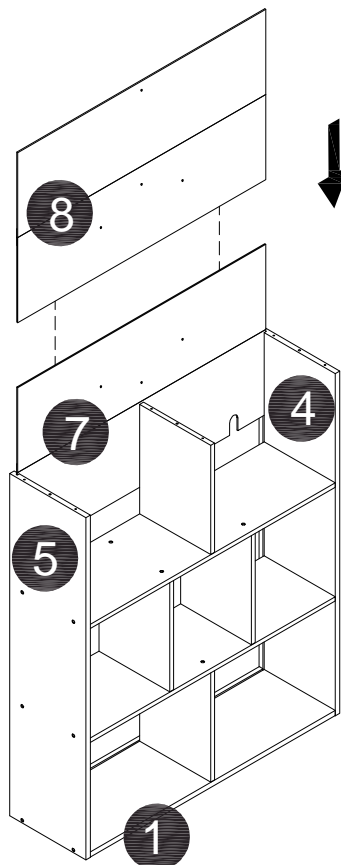

# Step 7

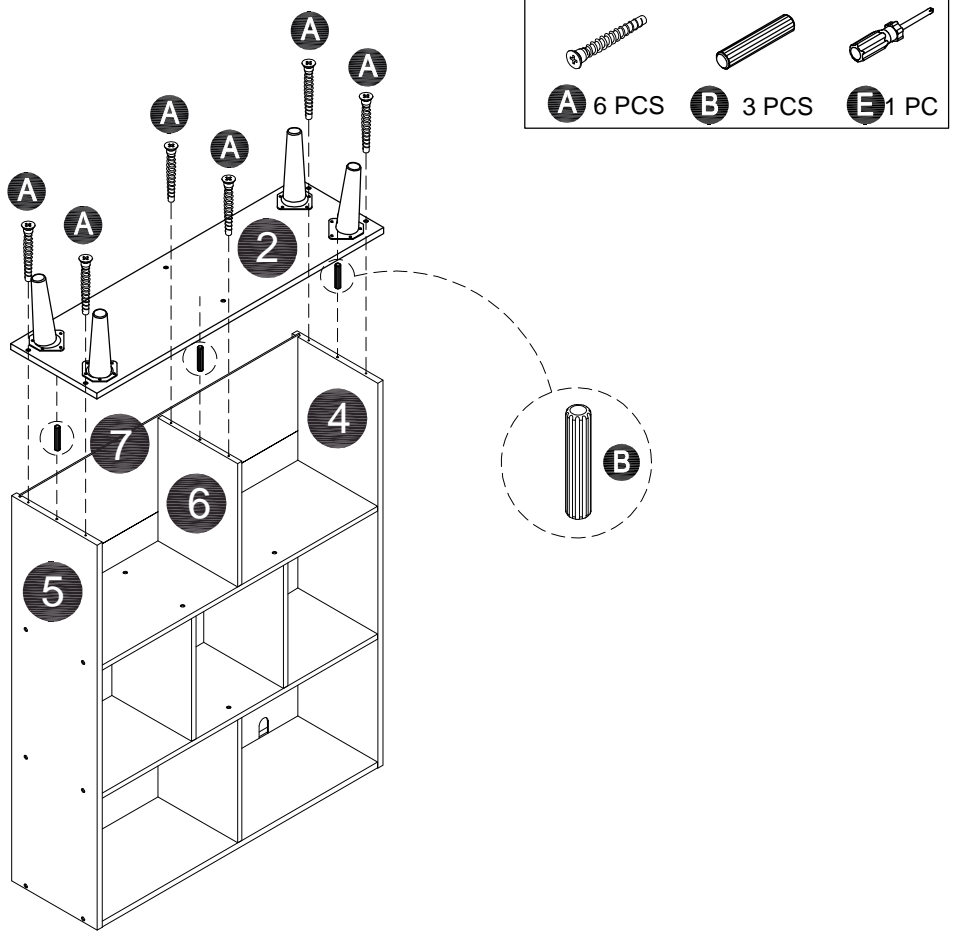


# Step 8

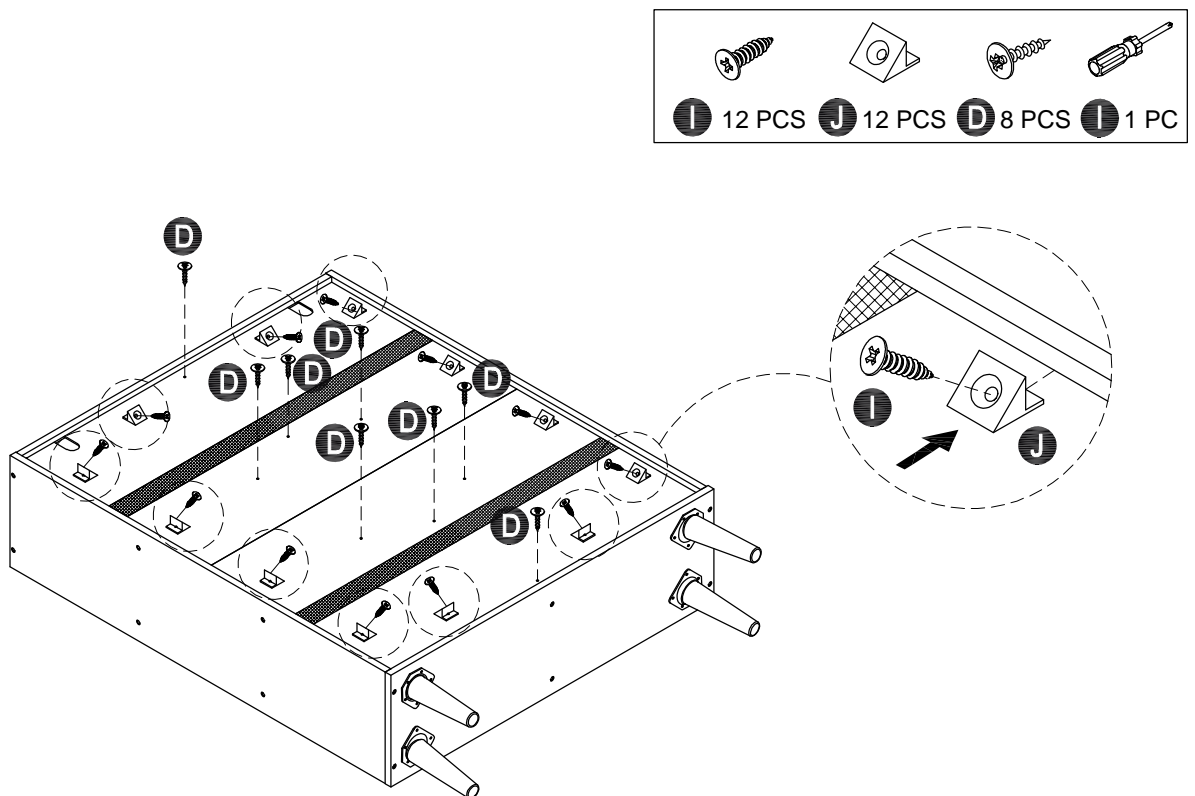


# Step 9


## Install the anti-tip kit

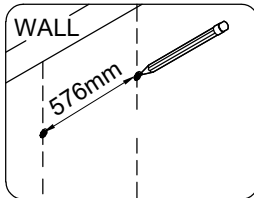


1. Make mark on the wall

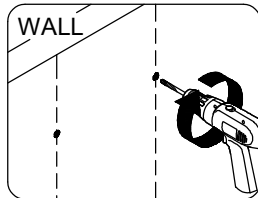

2. Drill two 6 holes on the wall

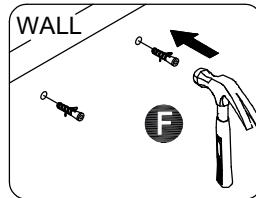


3. Put two anchors in the holes

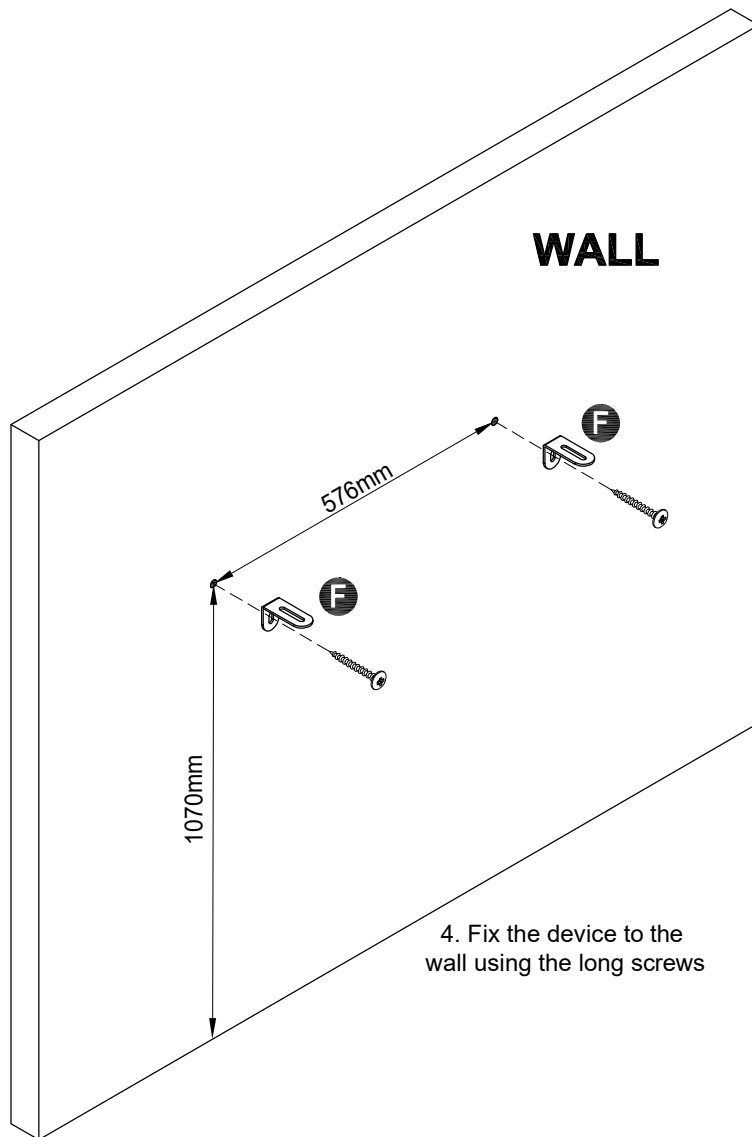

4. Fix the device to the wall using the long screws

# Step10

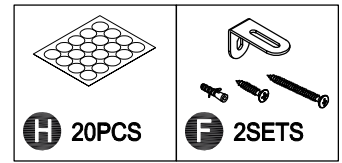

NOTE:  
Move the cabinet into position **F**, Pencil, electric drill,  
and hammer not included.

