
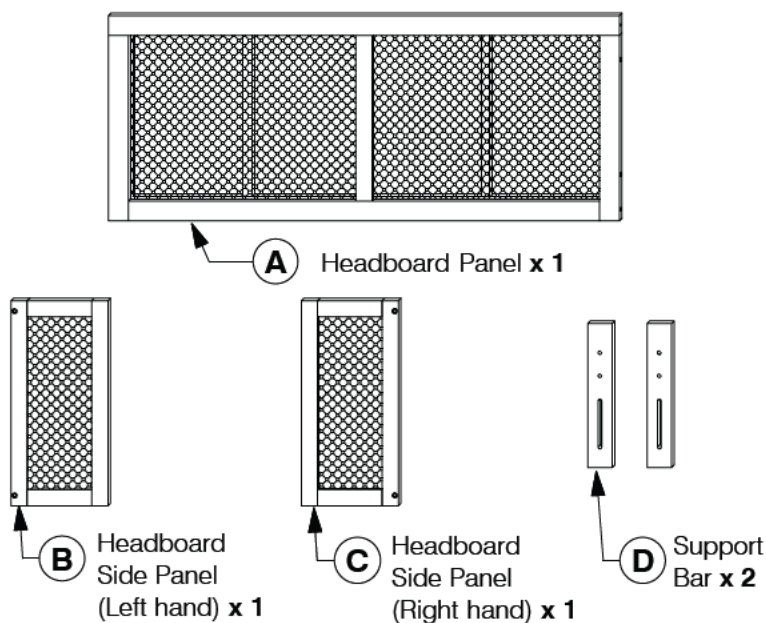


# Full Headboard

## Assembly Instructions

### 1 Parts List

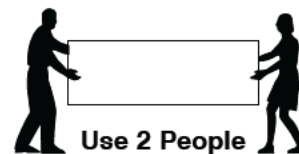

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened

### 2 Hardware List



**1** M6 x 60mm JCB x 4



**2** M6 x 35mm JCB x 4



**3** Barrel Nut x 4



**4** Wood Dowel (M10 x 40mm) x 4



**5** Spring Washer x 4




**6** Flat Washer x 4



**7** M4 Allen Key x 1

### 3 Fit the Headboard Side Panel (B & C) to the Headboard Panel (A).

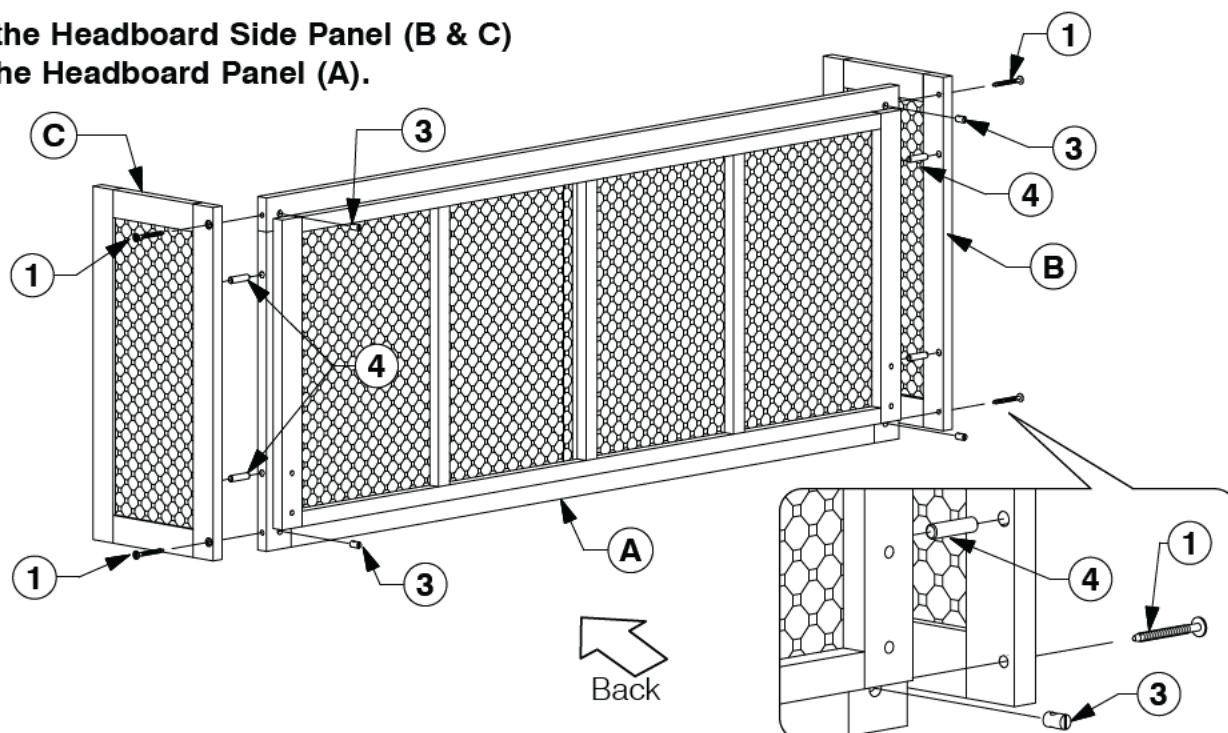


# Full / Queen Headboard

## Assembly Instructions

### 4 Assemble the Support Bars (D) to the Headboard Panel.

✓ Footboard, Rails & Slats are packed in separate Boxes with Bolts.

Note: Bolts & Washers from Footboard, Rails & Slats Box.

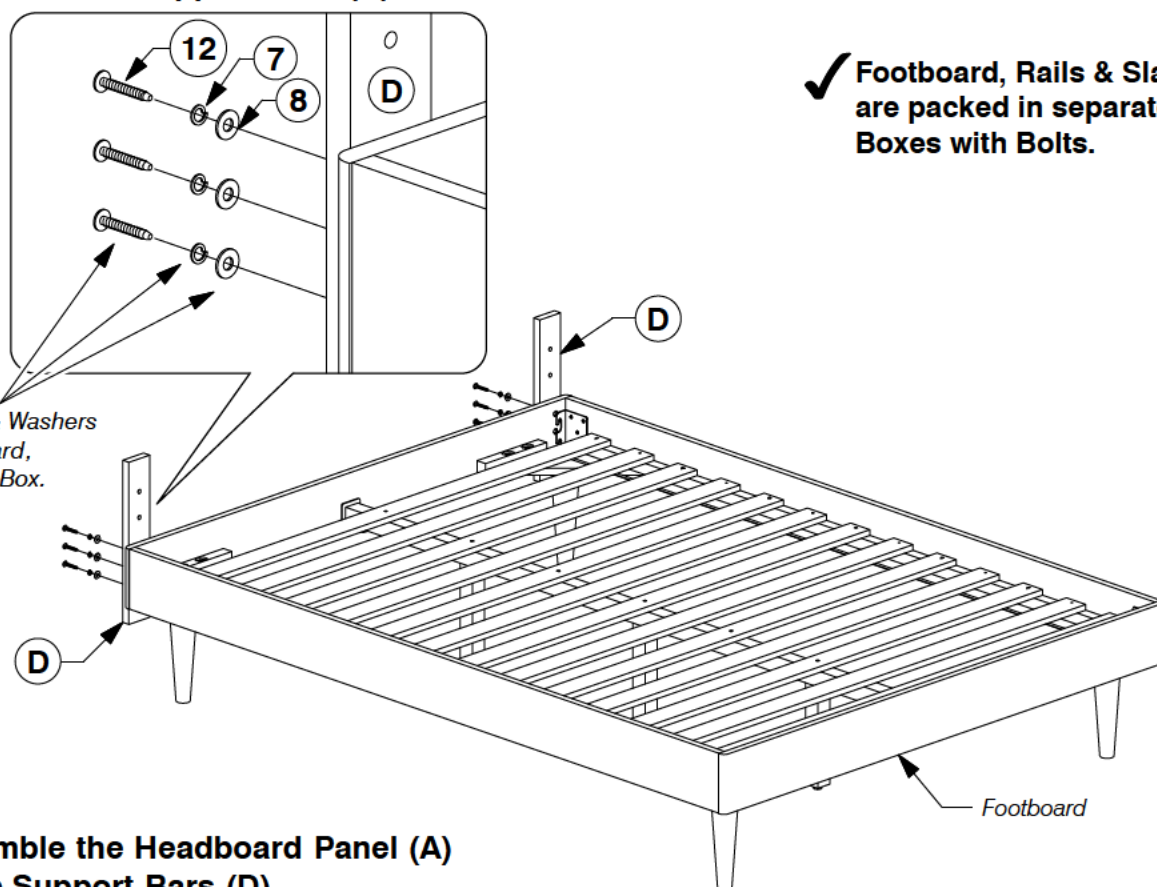

### 5 Assemble the Headboard Panel (A) to the Support Bars (D).

