

Assembly Instructions

KEYBOARD TRAY

TUN010CL	TUN011KC			
A DOTATION	В	° •		E (X)
Cam lock 3pcs	K li x Cam 3pcs	Cam Cover 3pcs	S li de 1Set	Screw #3*12 12Pcs

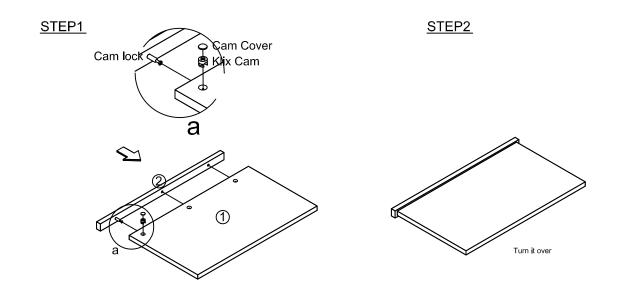

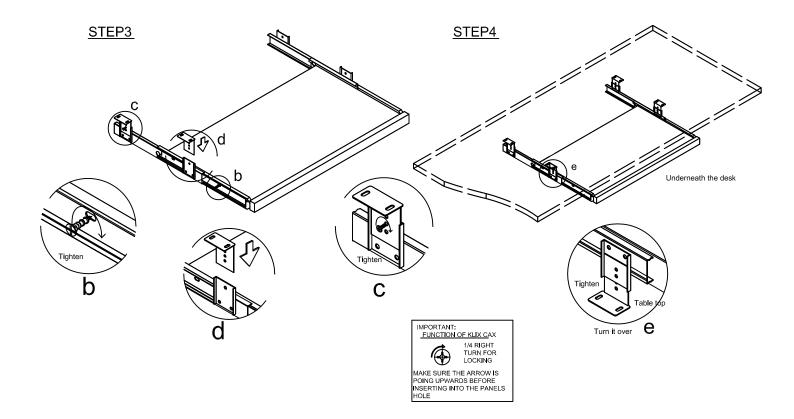

IMPORTANT NOTE:

- Place all laminated parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Don't tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children