







ASSEMBLY INSTRUCTIONS


PARTS

S.NO.	DESCRIPTION	QNT
A	 TOP	01
B	 LEGS	02

HARDWARE


S.NO.	DESCRIPTION	QNT
D	 WASHER	08
E	 SPRING WASHER	08
F	 JCBC M6 x 30	08
G	 ALLEN KEY	01

STEP - 1

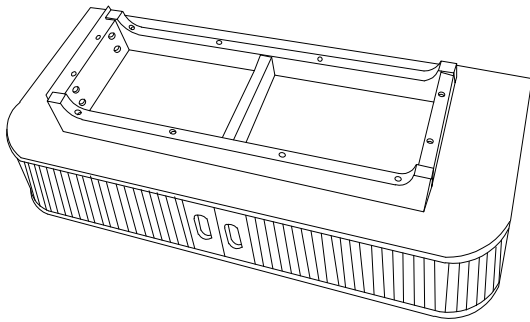


Place the TOP Cabinet on the floor upside down

STEP - 2

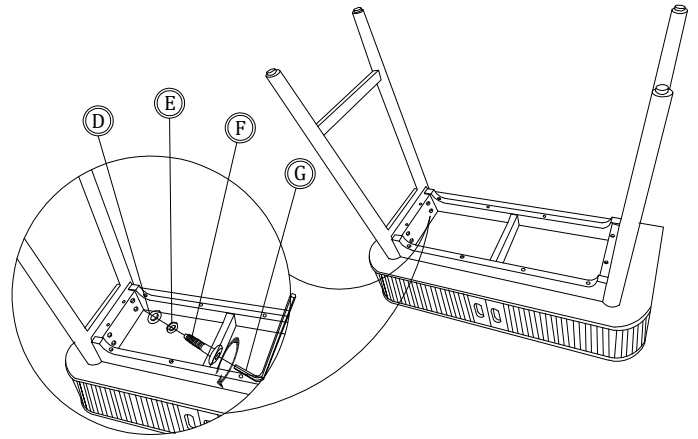


Attach the two legs (B), make sure the JCBC legs holes are aligned with the JCBC top cabinet holes, then install the JCBC (F), washer (D) and spring washer (E), (Tighten with the allen key (G))

COMPLETED

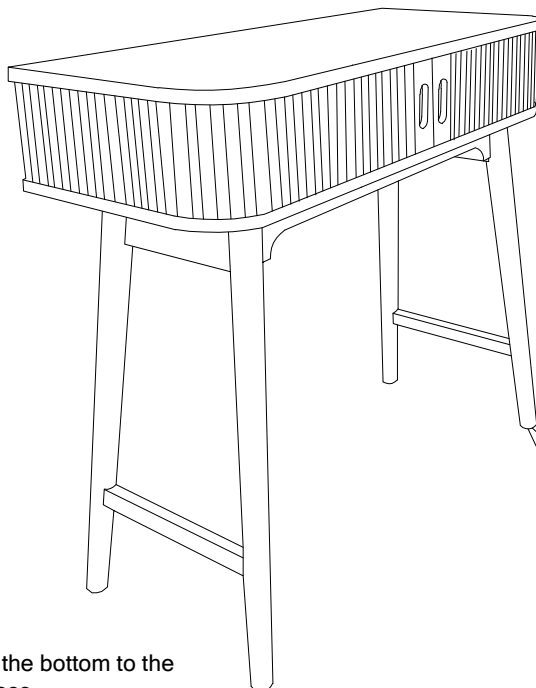






Leveller are provided at the bottom to the balance on uneven surface

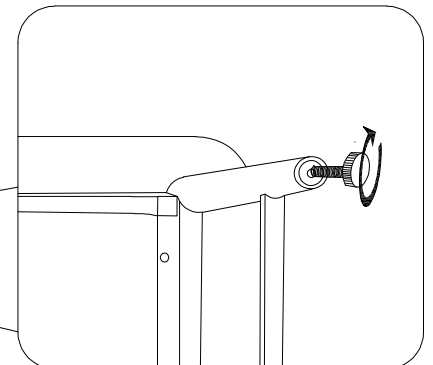


MADE IN INDONESIA

ANTI - TIP KIT INSTALLATION INSTRUCTIONS

DOORS DESK



- A : 1X 
- B : 2X 
- C : 2X  S5
- D : 2X 
- E : 2X 

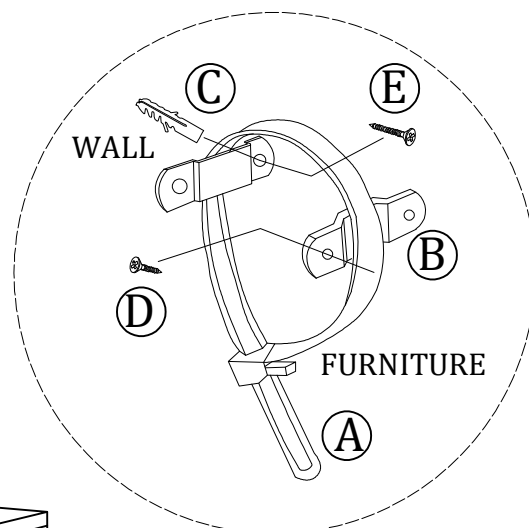


Anti-tip kit
bracket

Anti-tip
kit strap

Attach this
bracket to furniture




i




Attach this
bracket to wall



ii

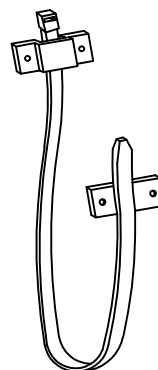

iii

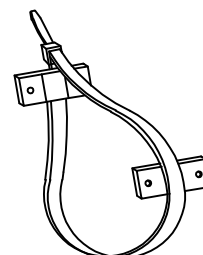

iv