





Assembly Instructions

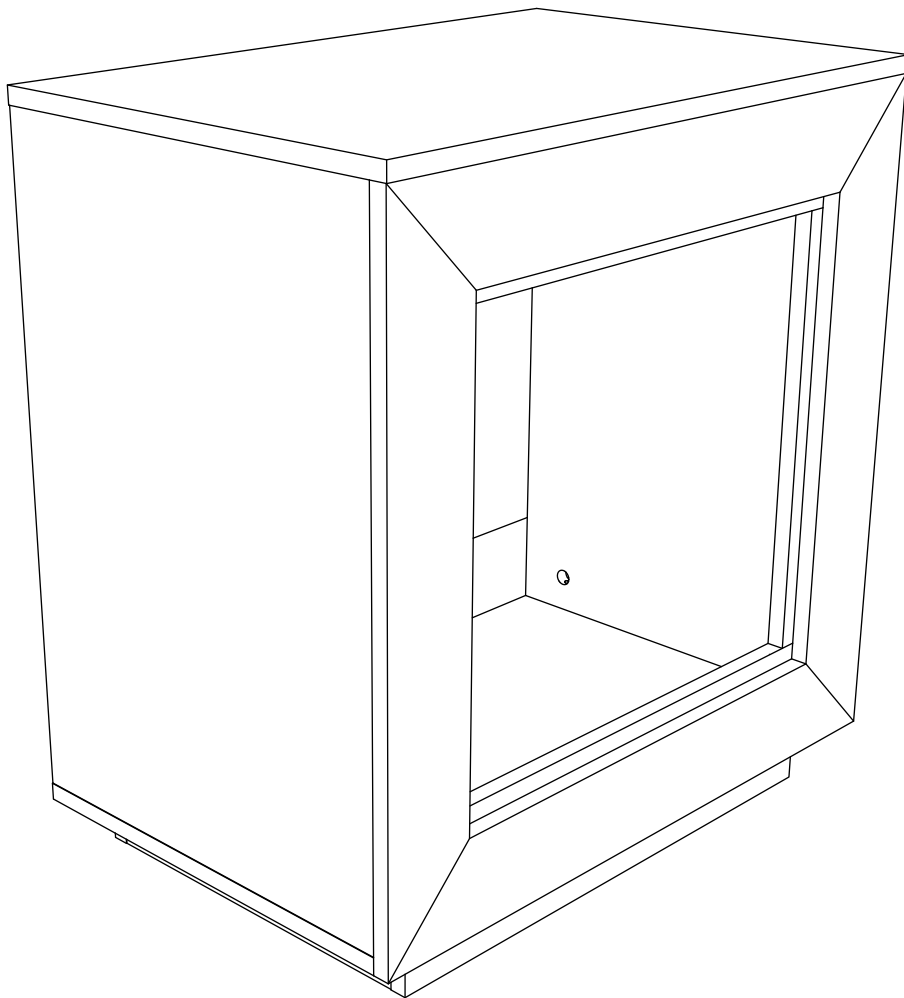

End Table

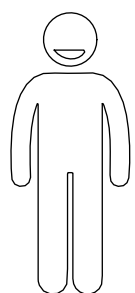


X2

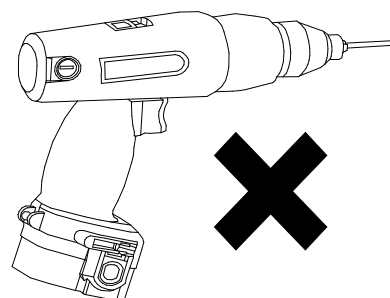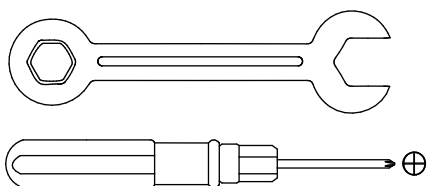



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

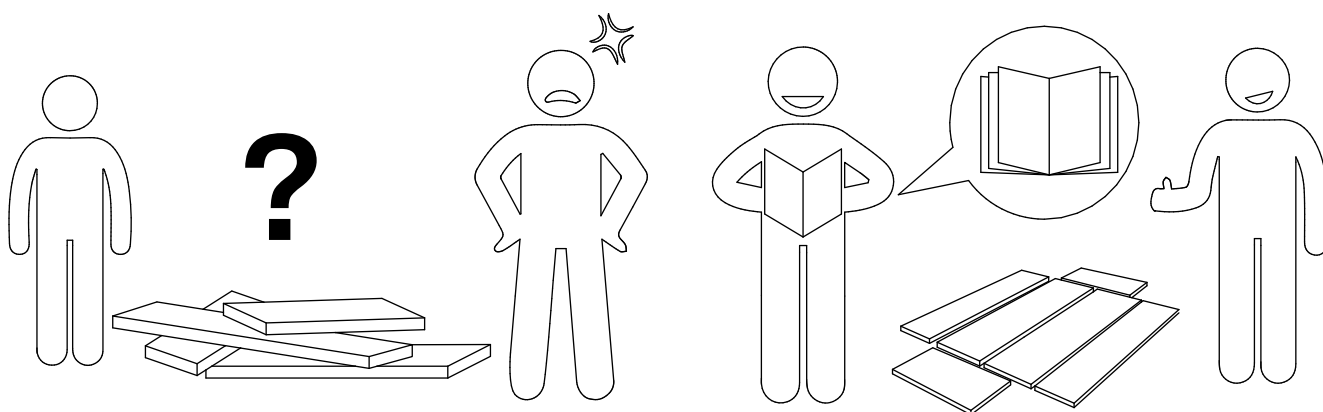

AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.





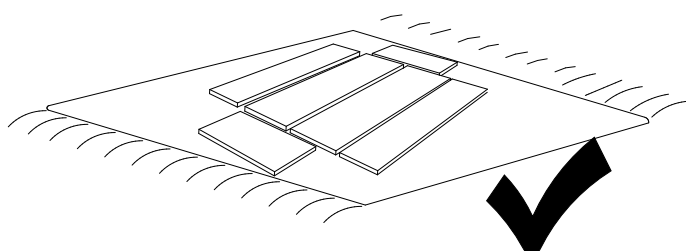
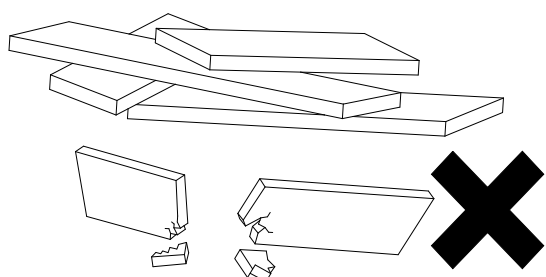


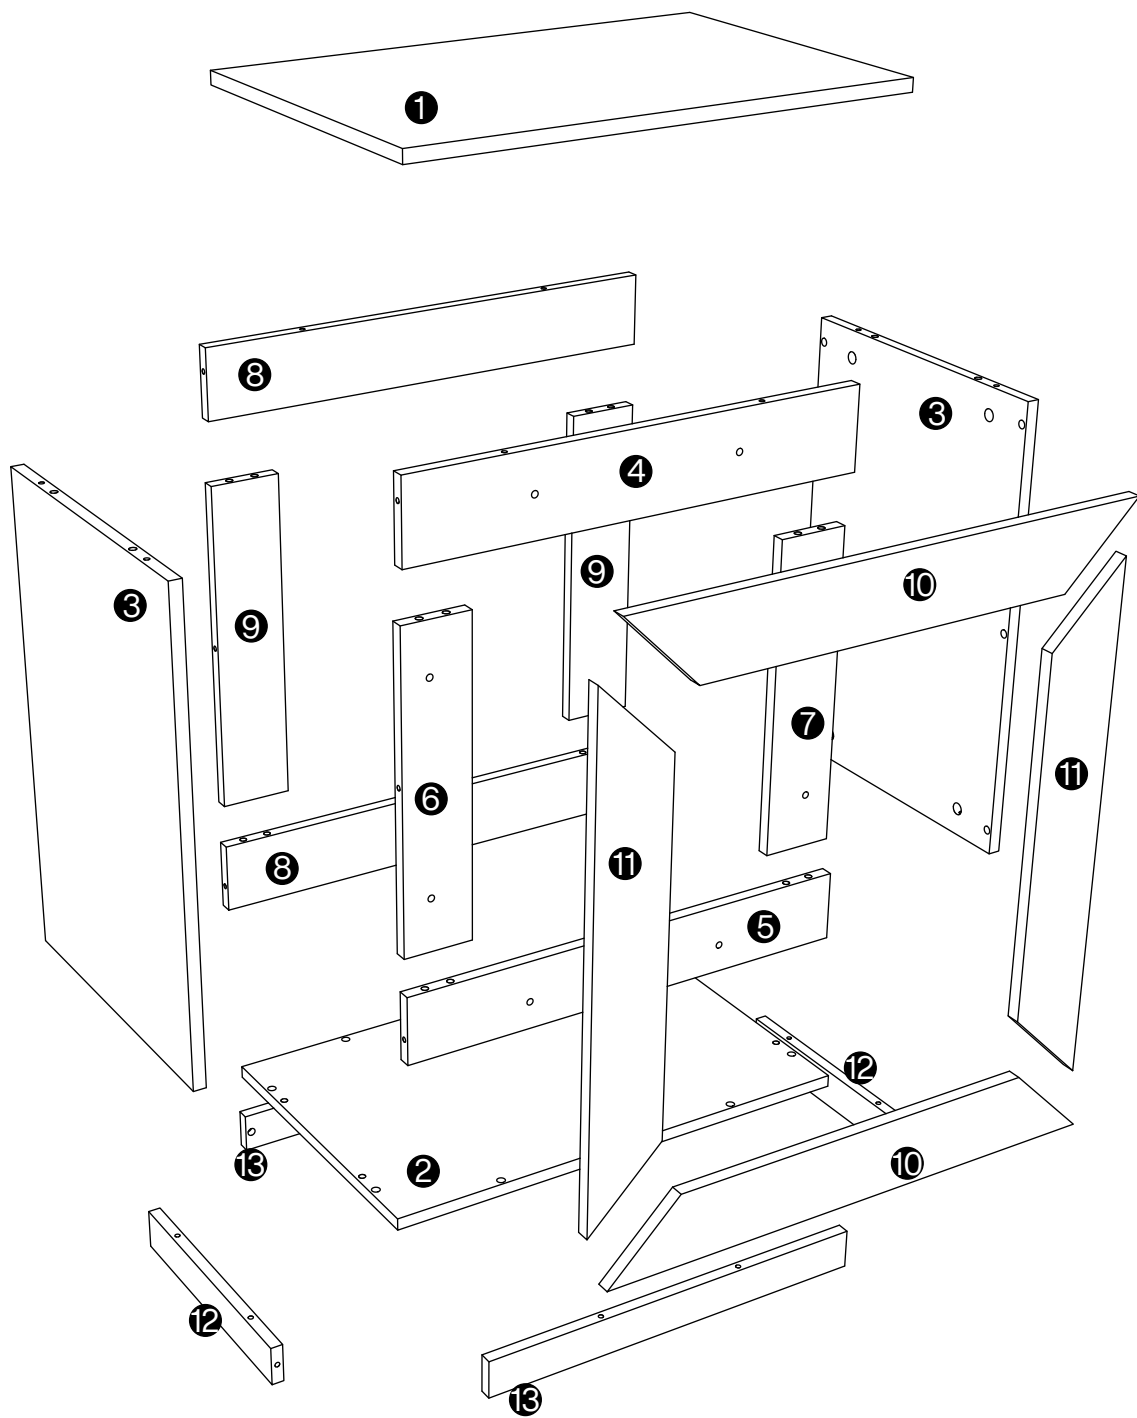





⚠ Caution

Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

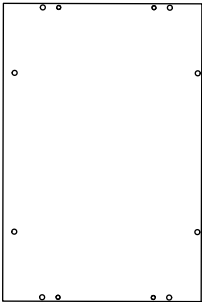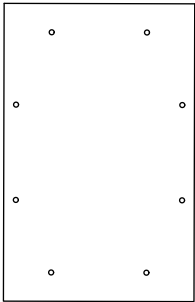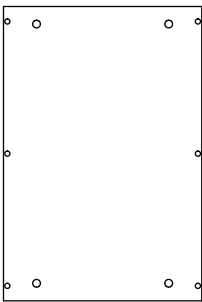
1  1pc	2  1pc	3  2 pcs	4  1pc	5  1pc
6  1pc	7  1pc	8  2 pcs	9  2 pcs	10  2 pcs
11  2 pcs	12  2 pcs	13  2 pcs		

Hardware List

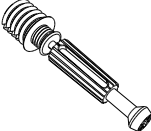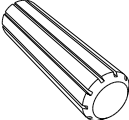
A	B	C	D	E	F	G
 Ø15x12mm	 M6x40mm	 Ø8x30mm		 M4x25mm		 M4
40 pcs	40 pcs	24 pcs	1pc	8 pcs	4 pcs	1pc
H						
						
28 pcs						

Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

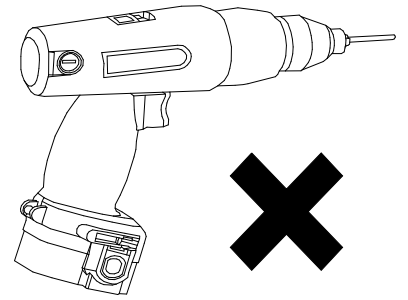



No gap

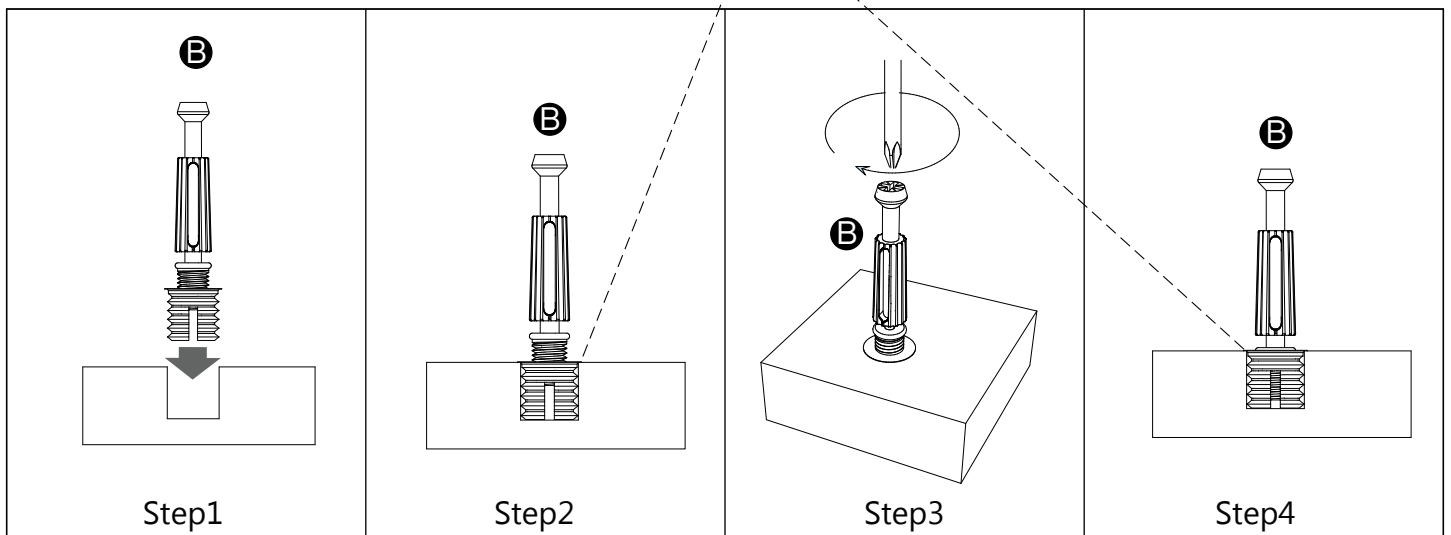



Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

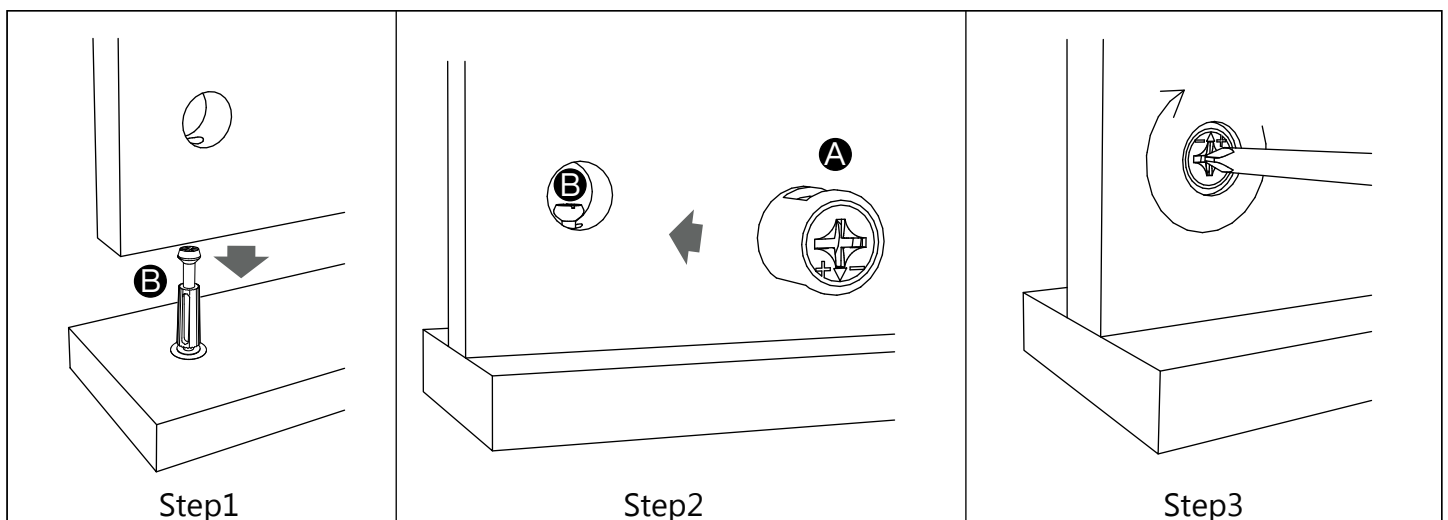


1

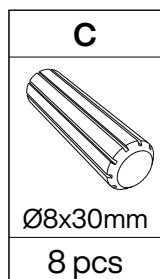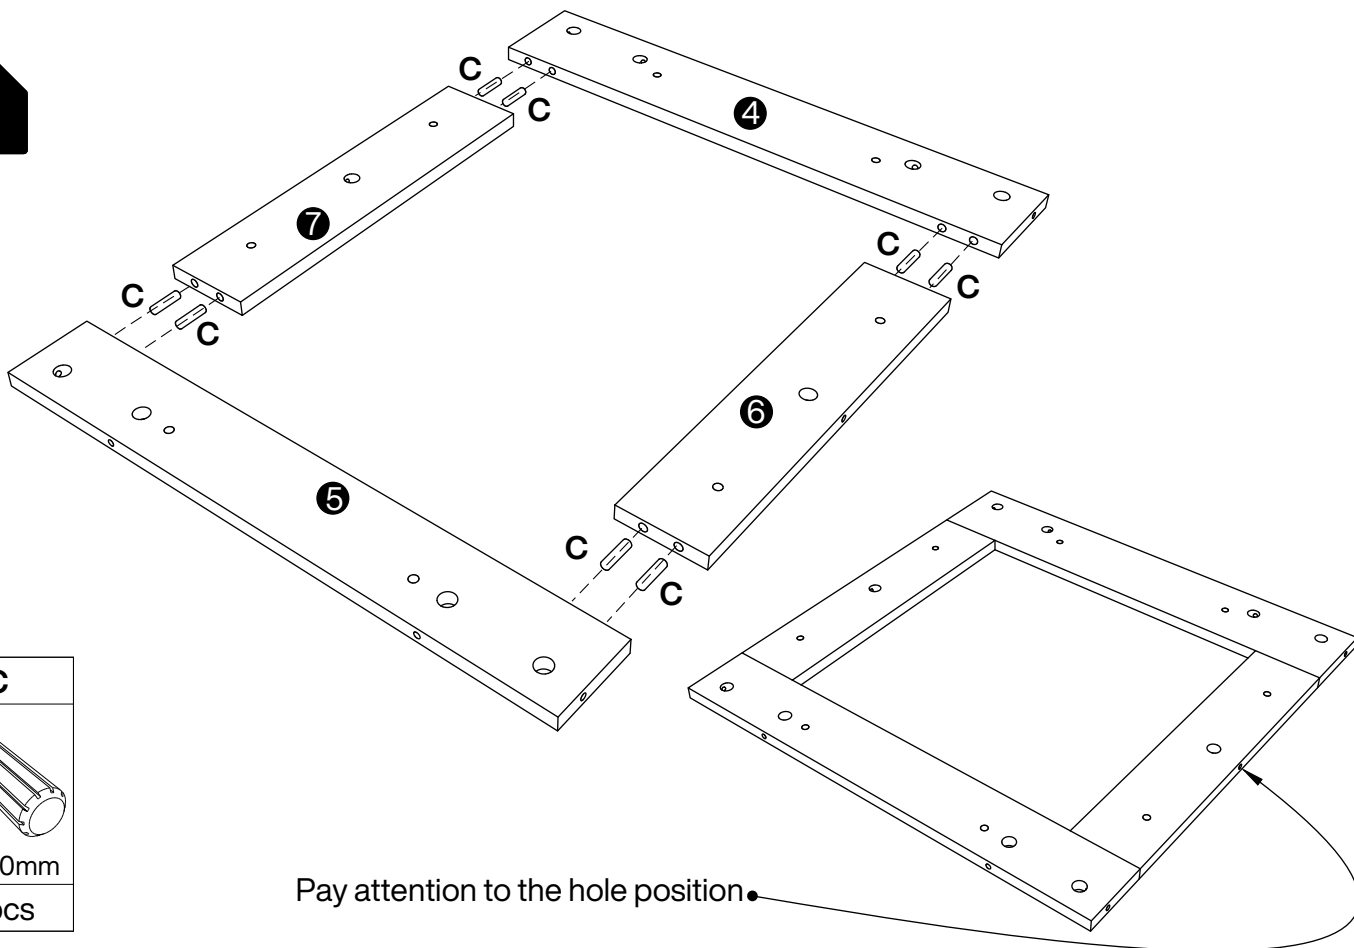


2

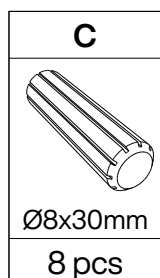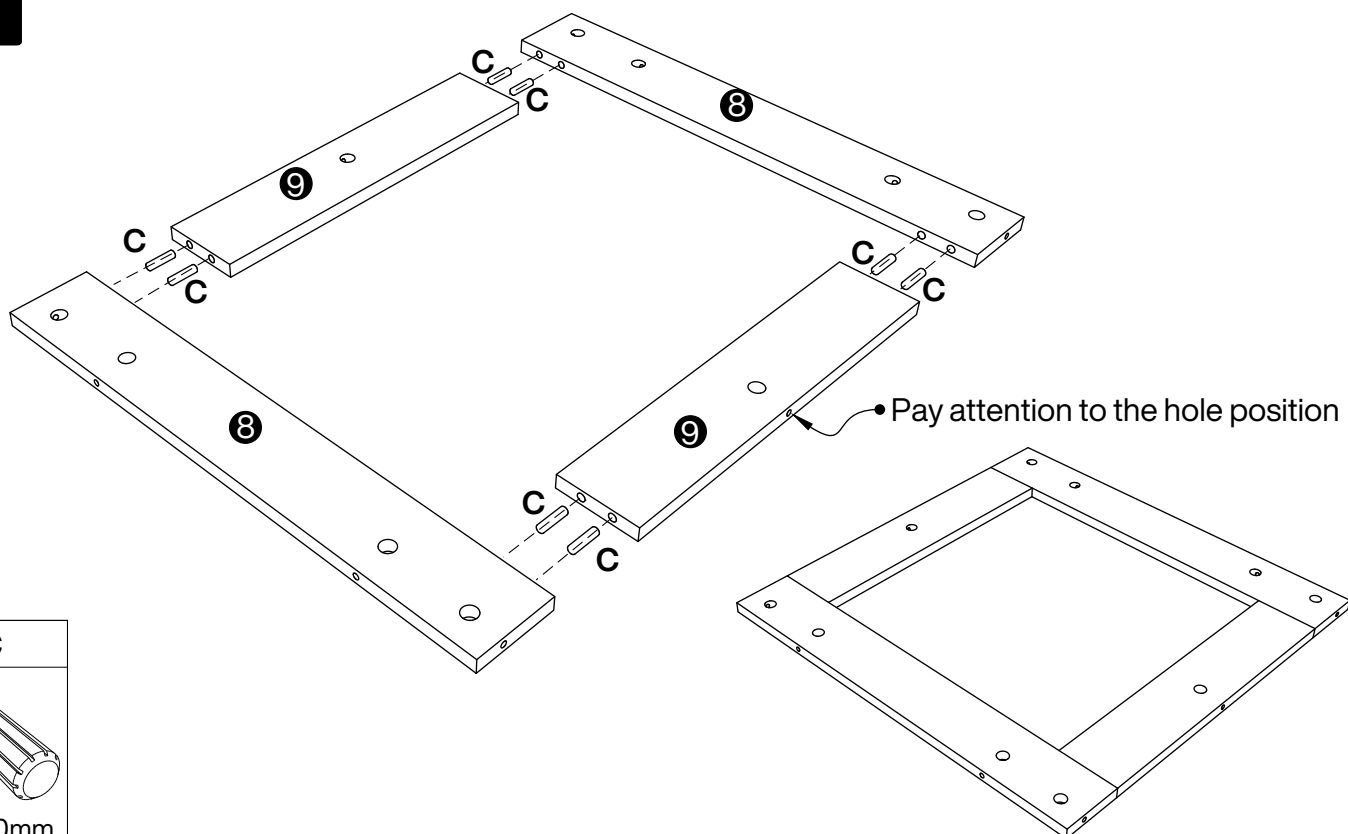


3

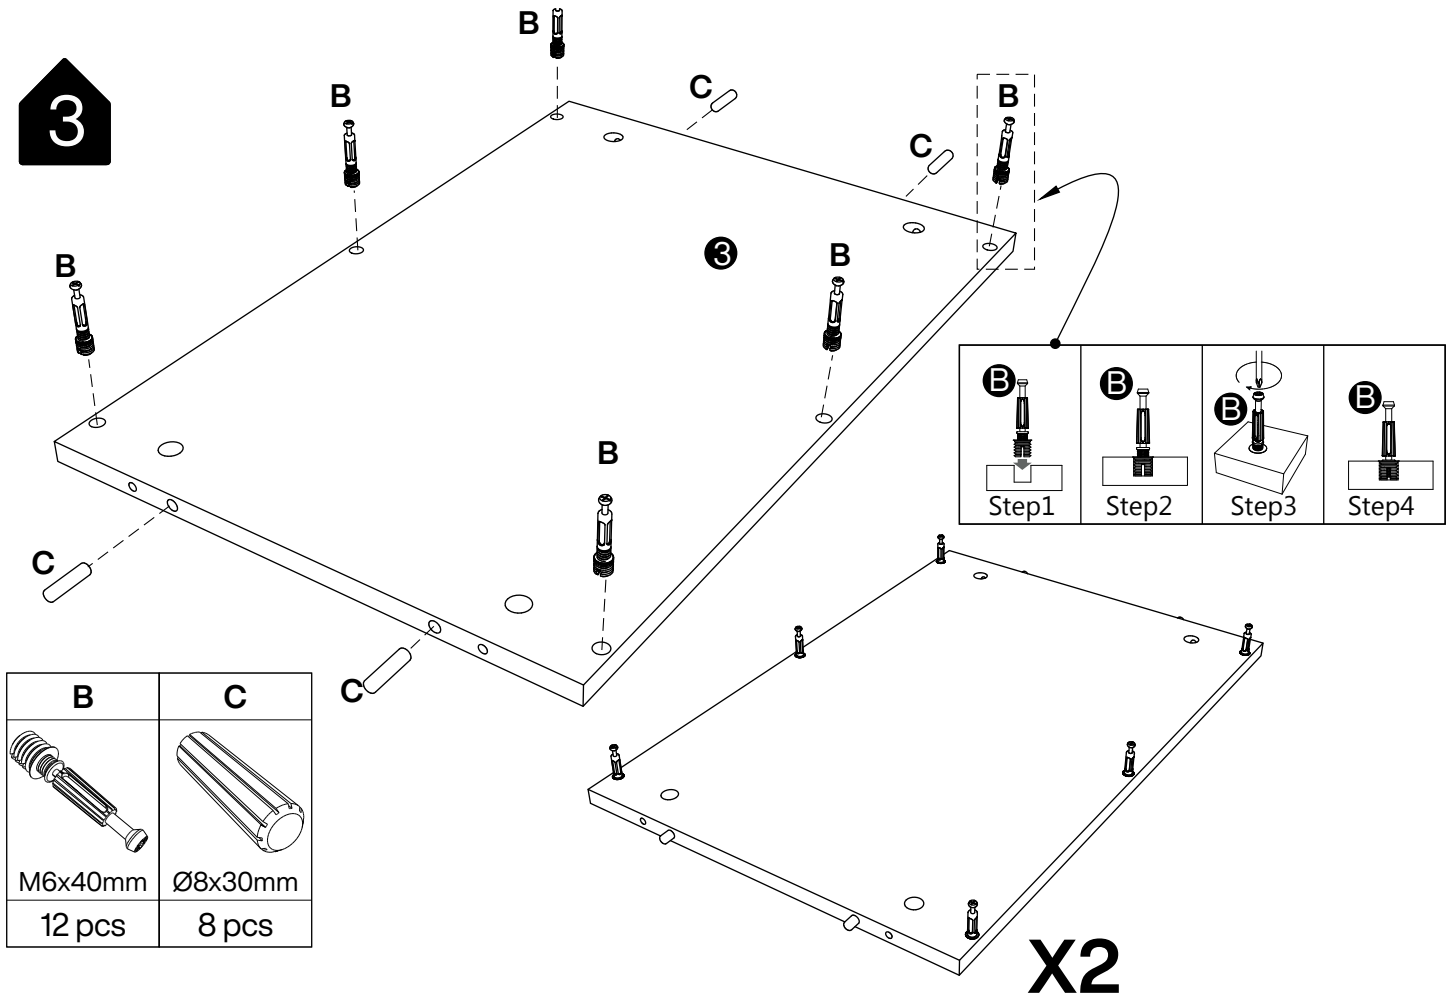


4

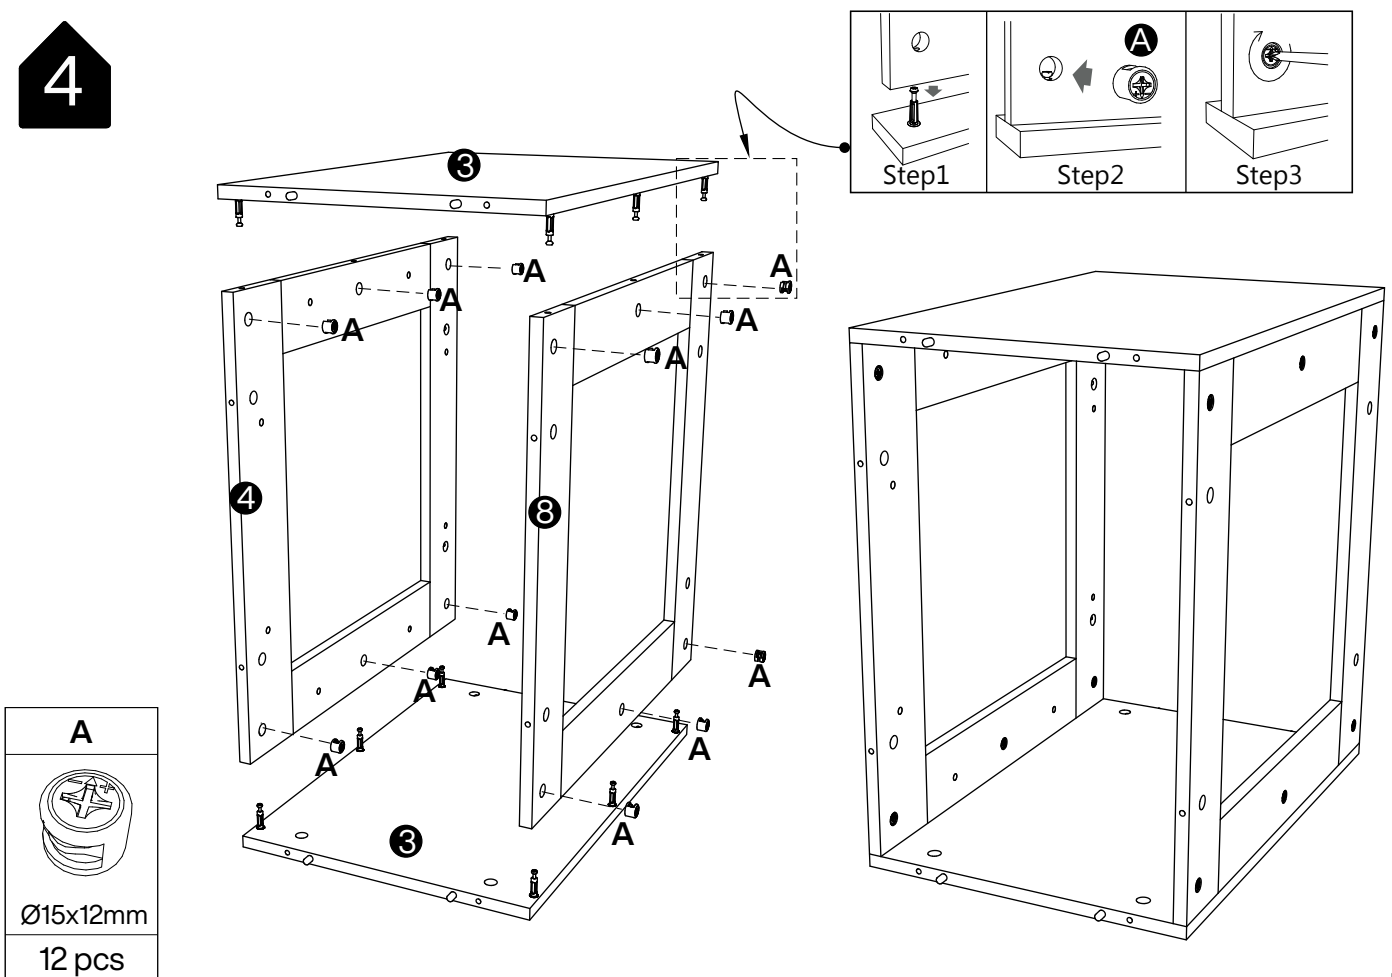



5

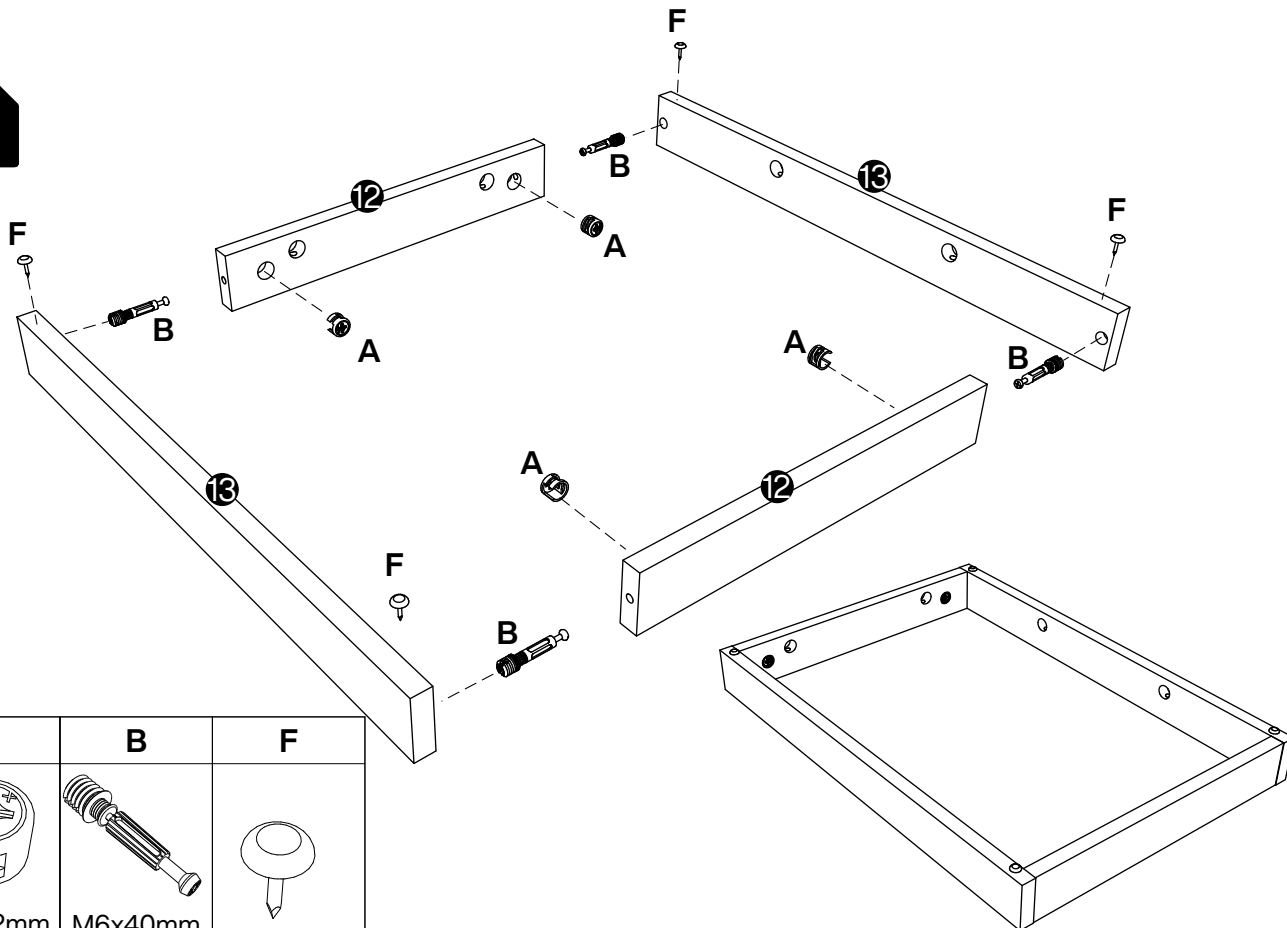



A	B	F
		
Ø15x12mm	M6x40mm	
4 pcs	4 pcs	4 pcs

6

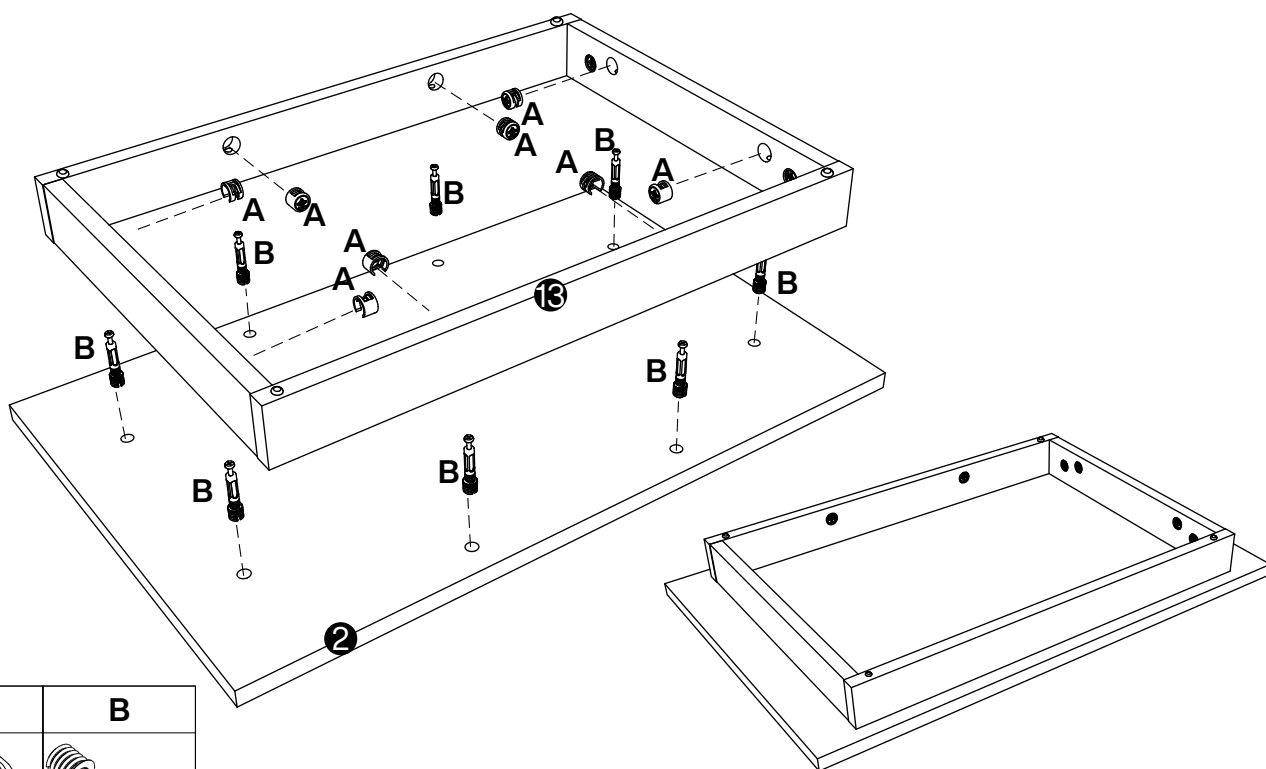


A	B
	
Ø15x12mm	M6x40mm
8 pcs	8 pcs



7

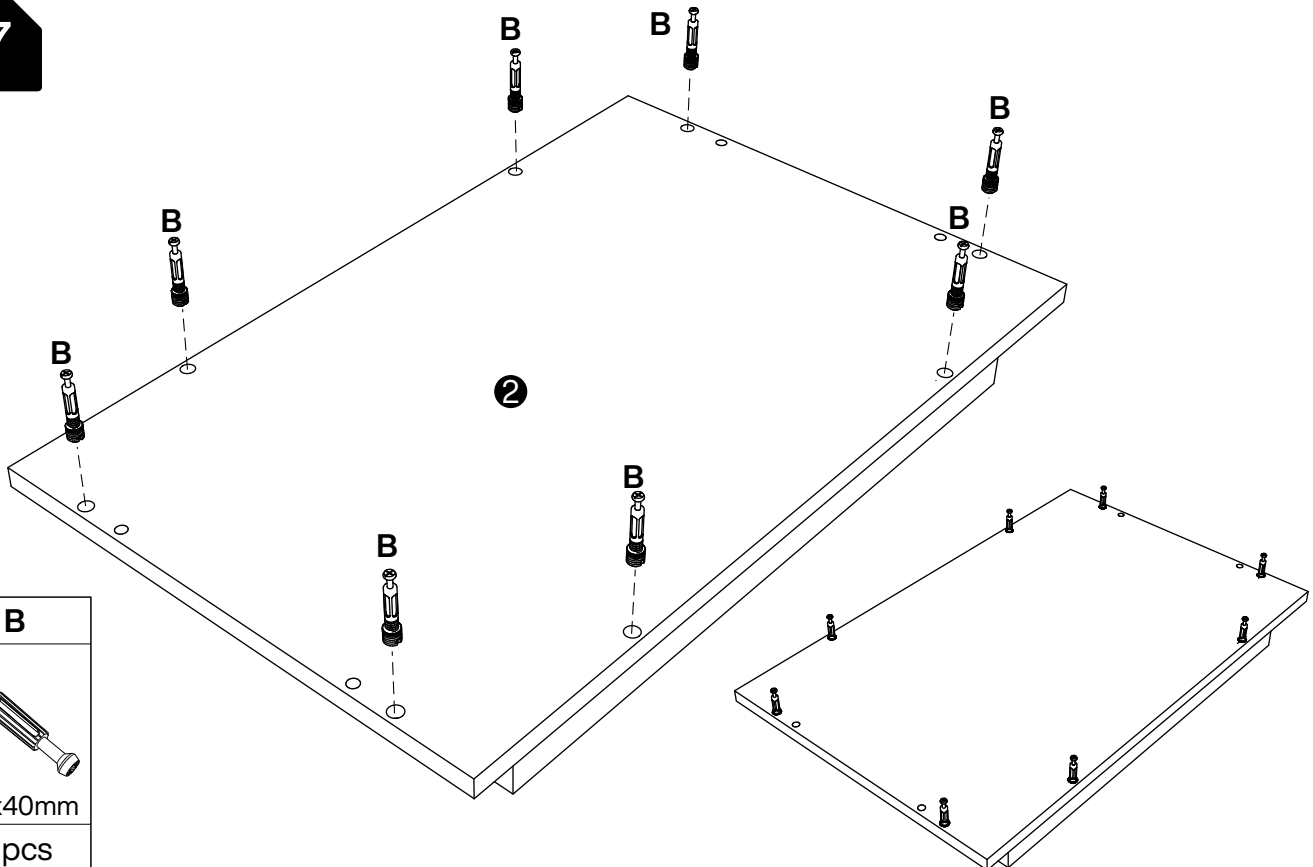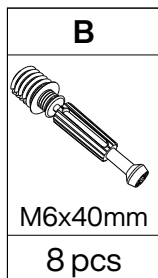


8

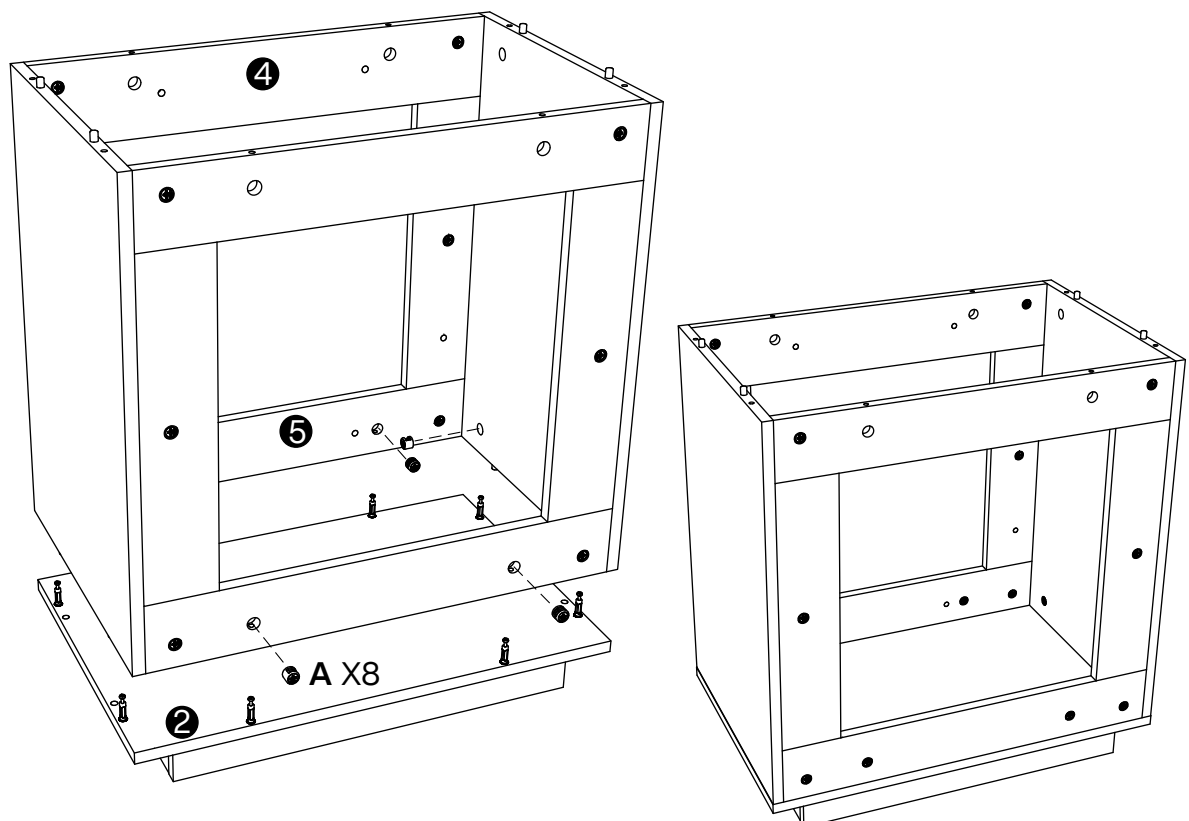


9

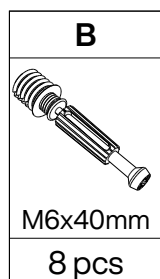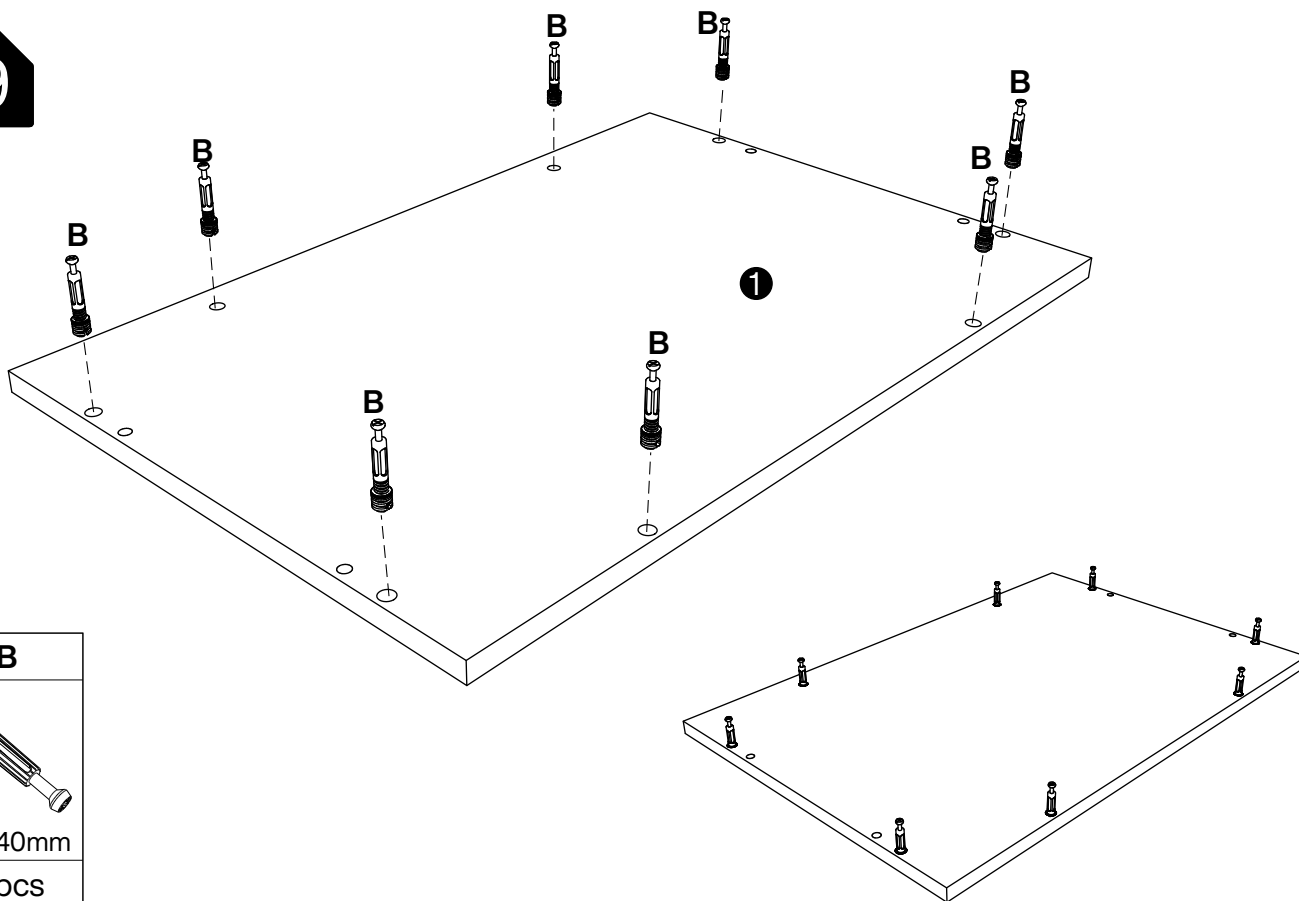

10

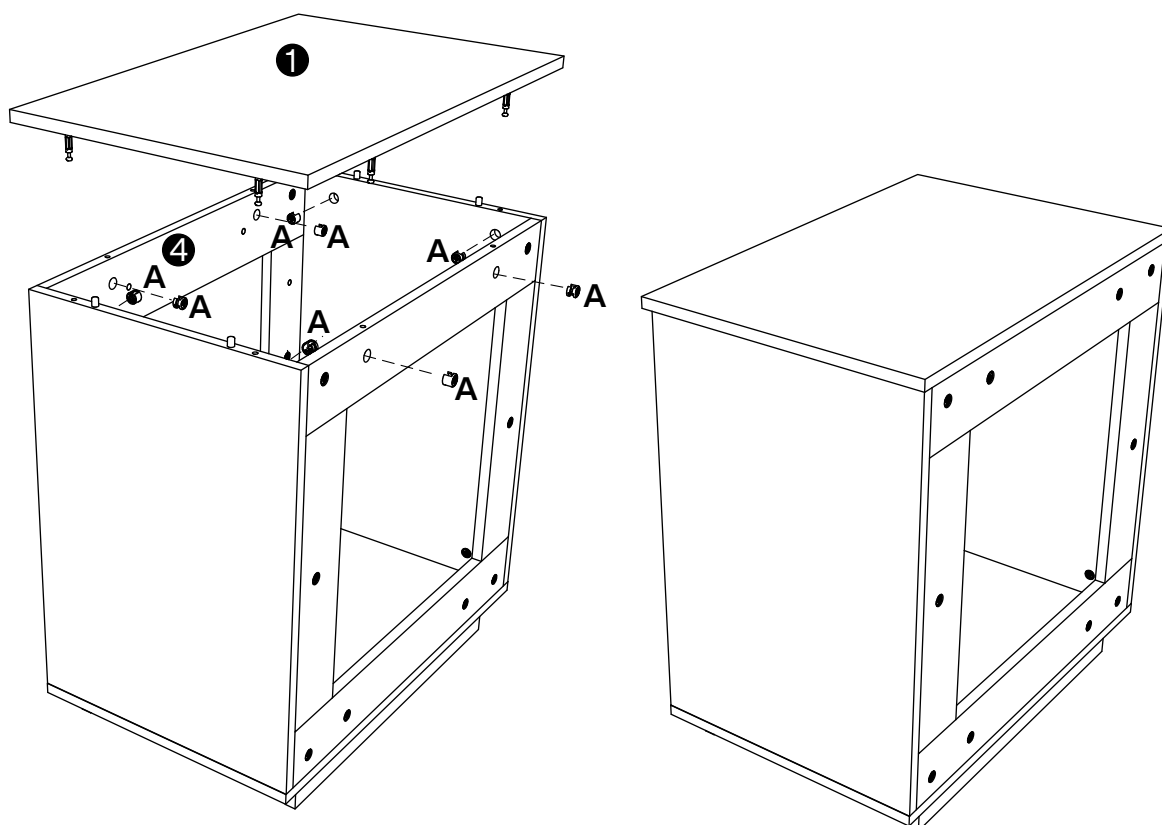

11

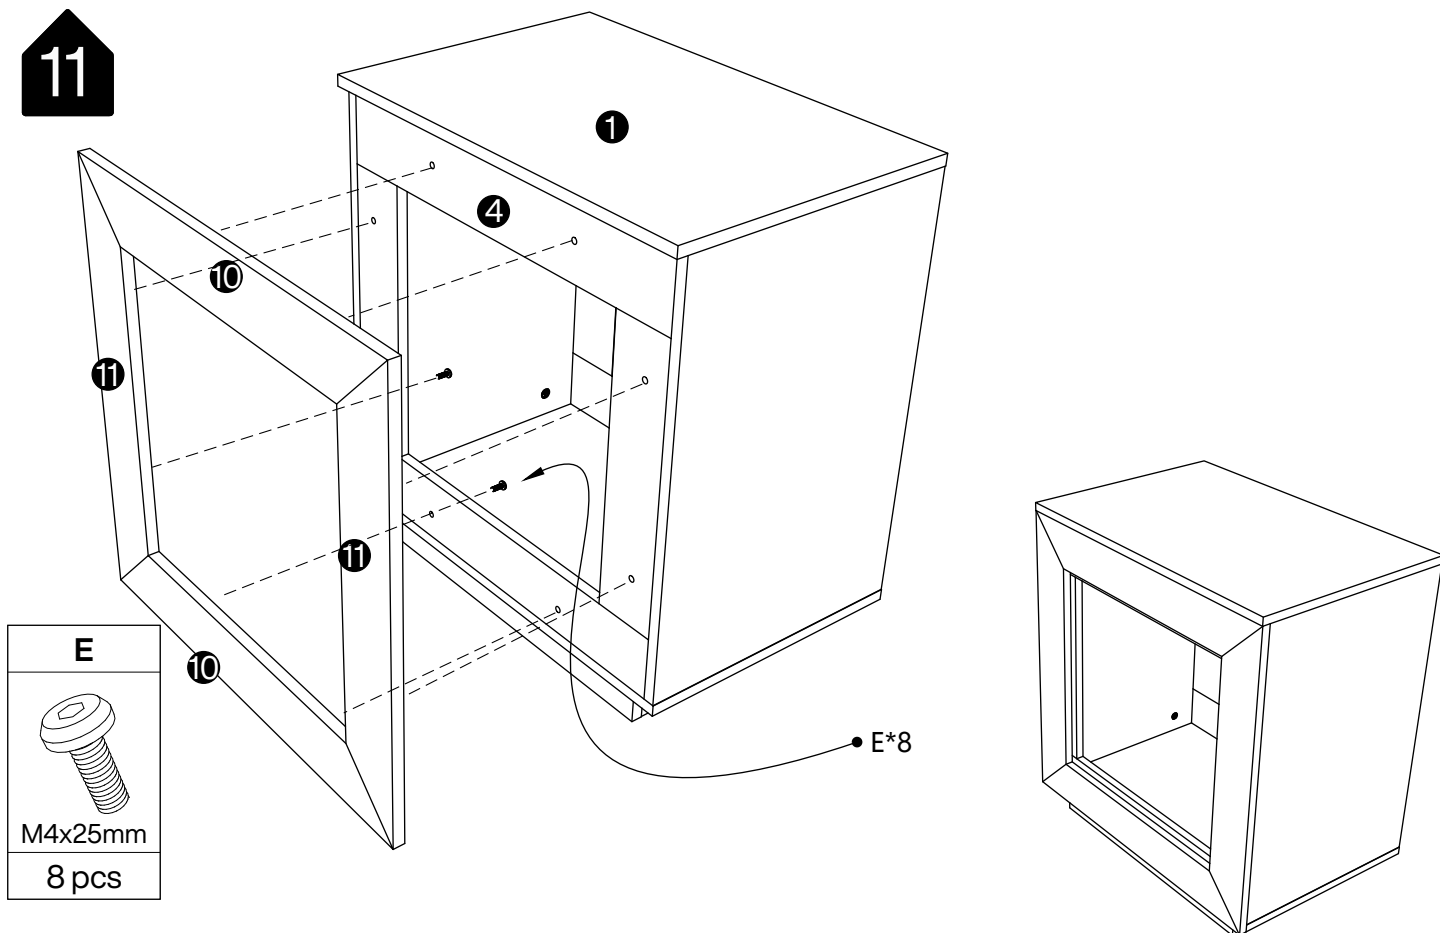

12

