


Installation & Assembly


	A	1	4mm
	B	8	M6*50
	C	8	M6
	D	8	M6*12*1
	E	4	Φ 20*3

Tighten the screws to 90%

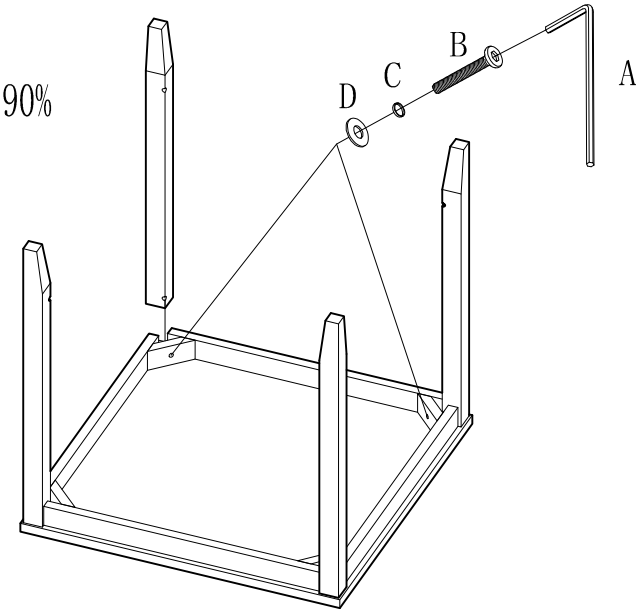


Step 1

Tighten all screws.

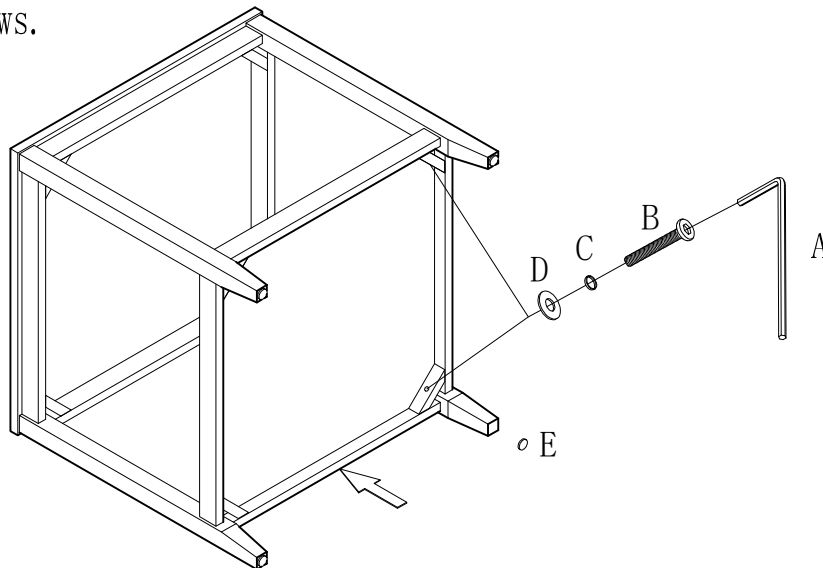

Step 2

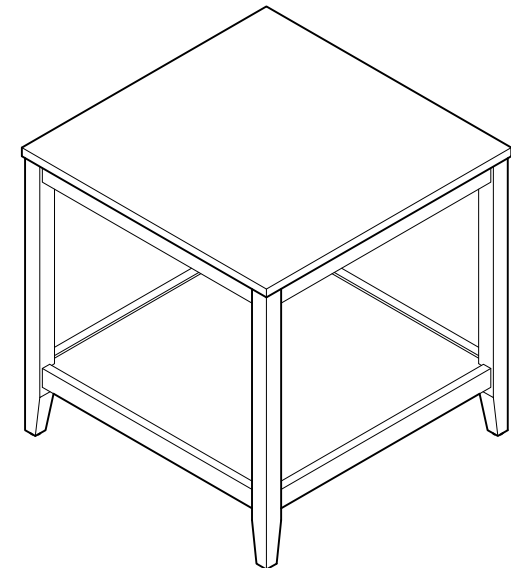

Step 3