


King Poster Headboard


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

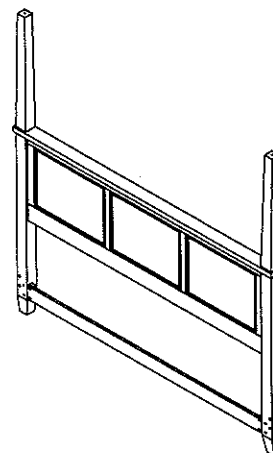

Part List

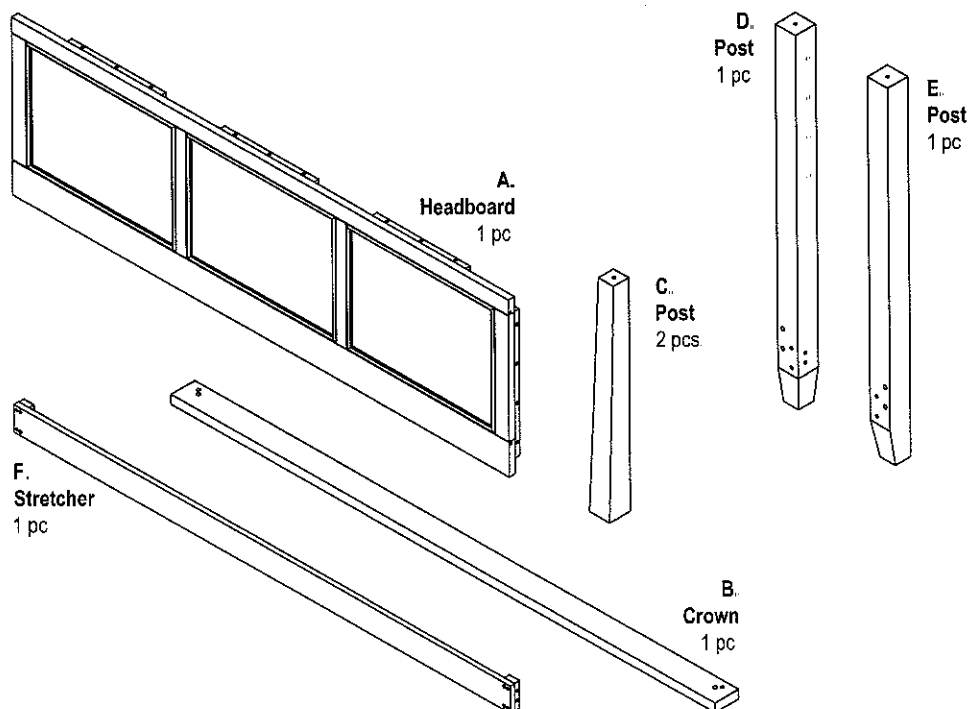


Hardware List



Head Cap Bolt
21 pcs. (+1 extra)



Flat Washer
21 pcs. (+1 extra)



Key Wrench
1 pc.



Small Key Wrench
1 pc.



Bolt
2 pcs. (+1 extra)



Square Washer
2 pcs. (+1 extra)



Nut
2 pcs. (+1 extra)



Wrench
1 pc.



Wooden Dowel
2 pcs. (+1 extra)


Assembly Instructions 2/3

IMPORTANT


- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future

STEP 1


Attach Posts (D) and (E) to Headboard (A) and Stretcher (F) using Head Cap Bolts and Flat Washers.

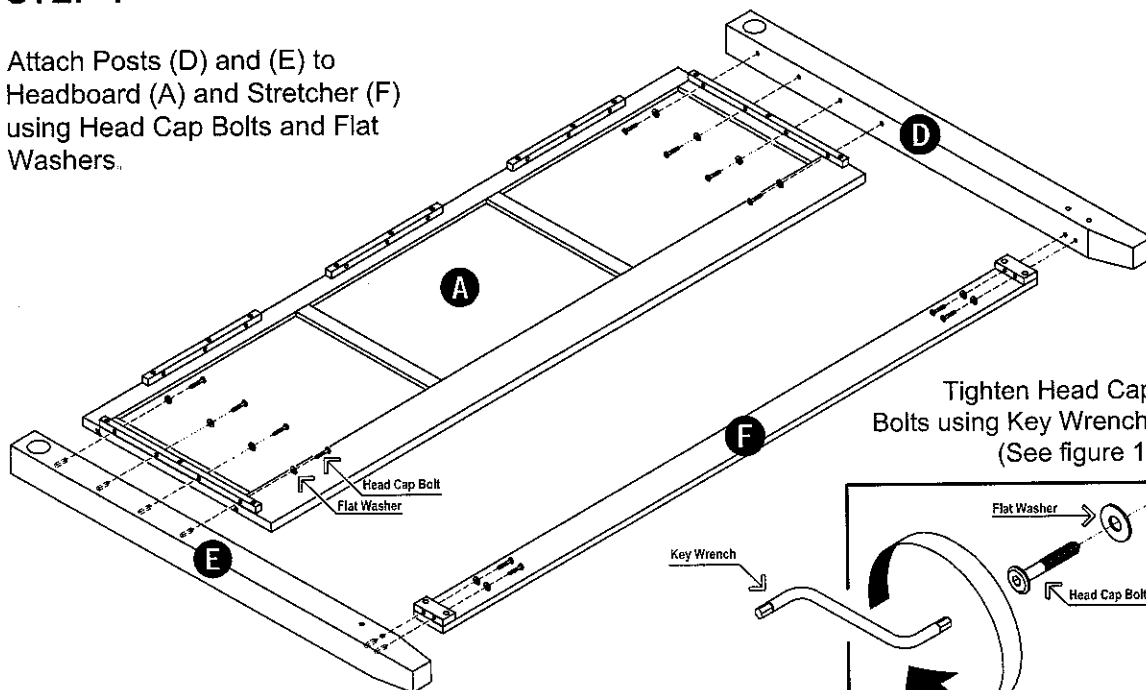

Tighten Head Cap Bolts using Key Wrench.
(See figure 1)

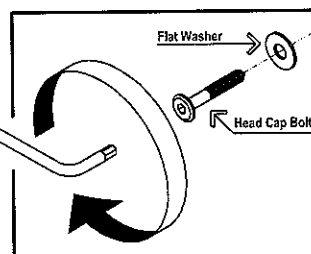

(Figure 1)

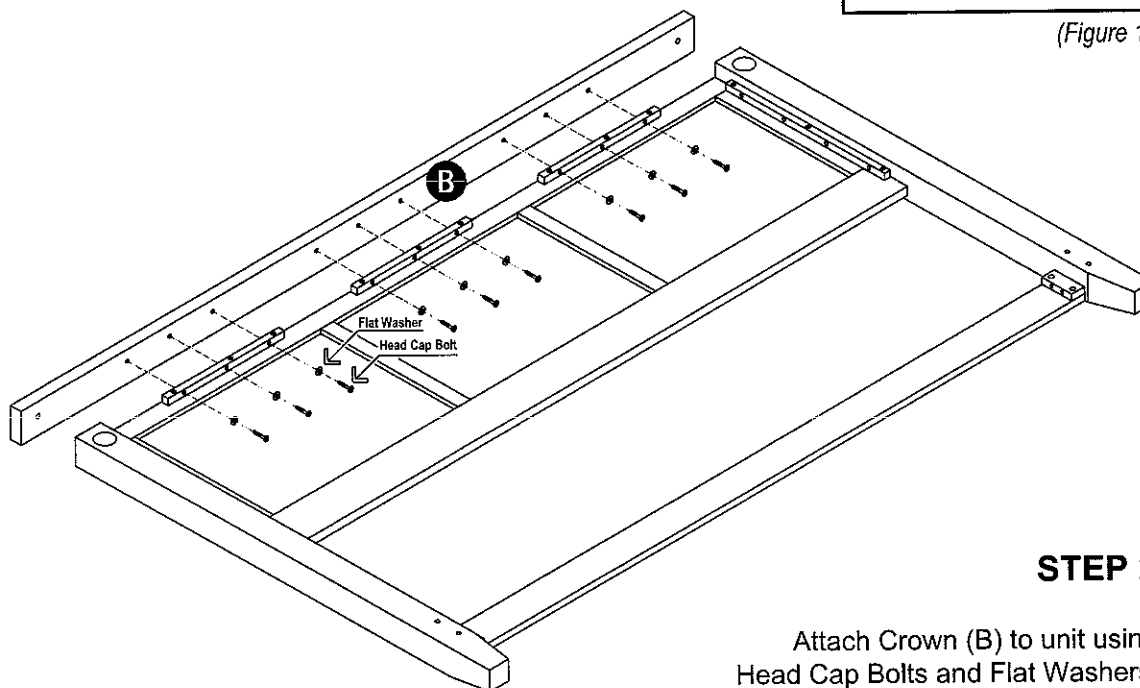


STEP 2

Attach Crown (B) to unit using
Head Cap Bolts and Flat Washers

Assembly Instructions 3/3

STEP 3


Insert Bolts into Posts (C).

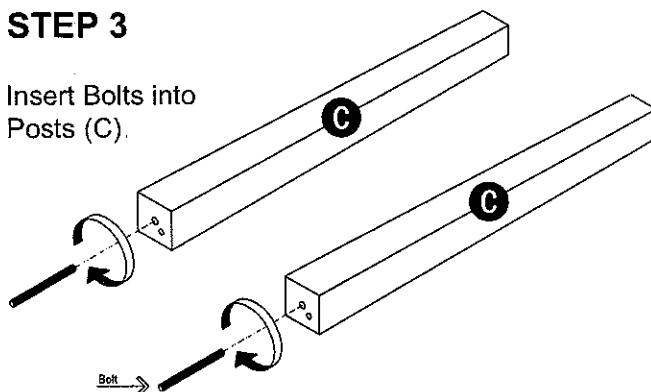


STEP 4

Attach Posts (C) to unit using Square Washers, Nuts and Wooden Dowel.

Tighten the Bolts with Wrench (See figure 2)

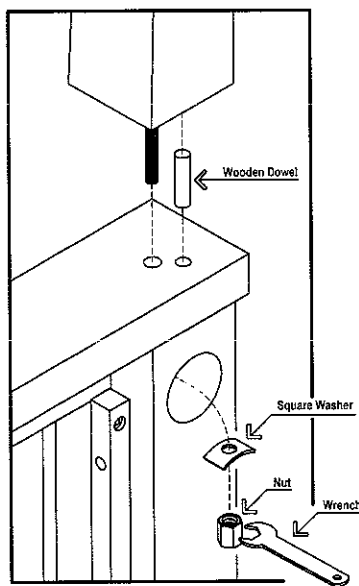

(Figure 2)

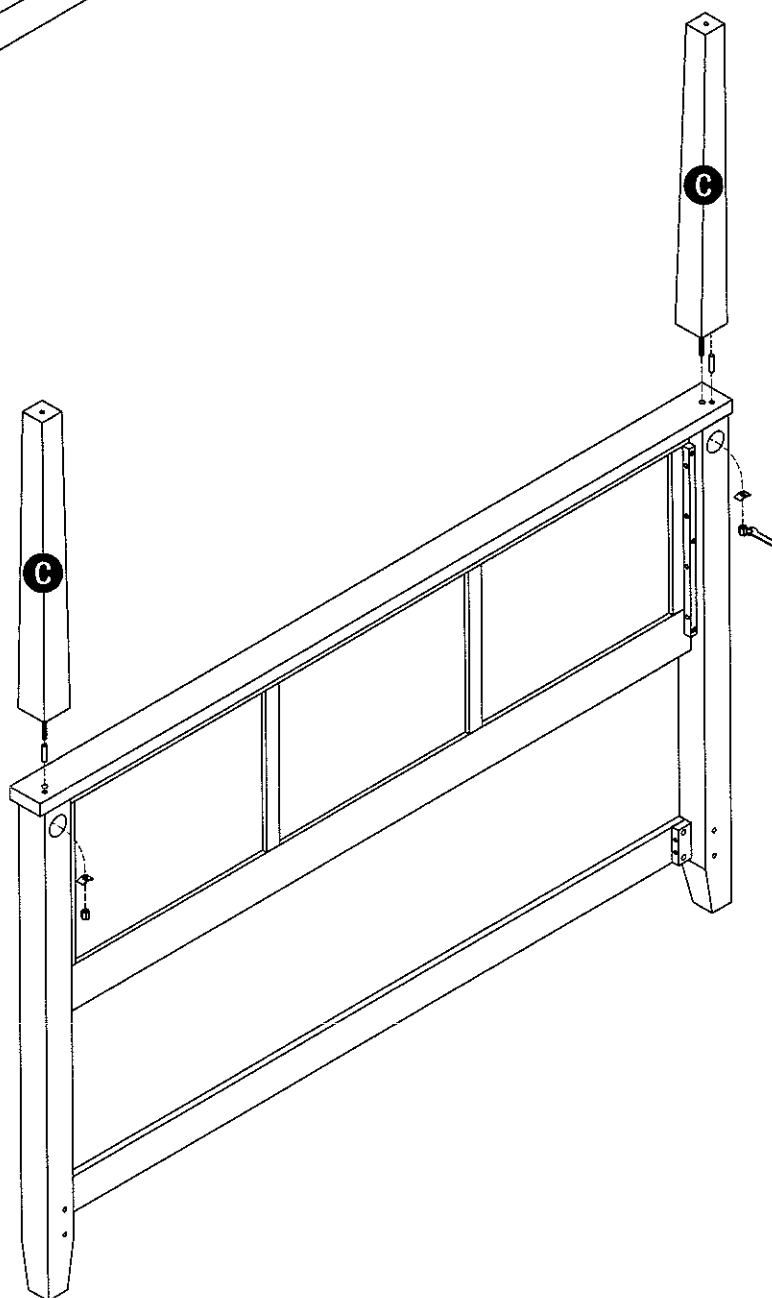

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON
FINISHED FURNITURE. AMMONIA
WILL CHEMICALLY ATTACK THE
LACQUER

NEVER

ALLOW LIQUIDS OF ANY KIND TO
REMAIN ON THE FURNITURE.
ABSORPTION CAUSES WOOD TO WARP
AND SPLIT AND FINISHES TO DELAMINATE

DO NOT
WRITE
DIRECTLY
ON
SURFACE



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE



**PREVENT
FINISH DAMAGE**


DO NOT
USE
RUBBER
BASED
PLACE MATS



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL
POLISH OR LUKEWARM SOAP AND WATER,
THEN BUFF WITH A DRY CLEAN CLOTH

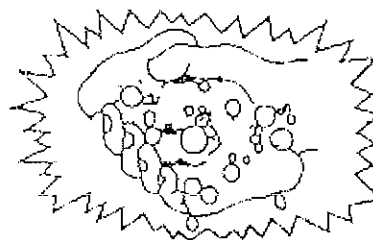


We will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, we are under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale.

King Poster Footboard


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

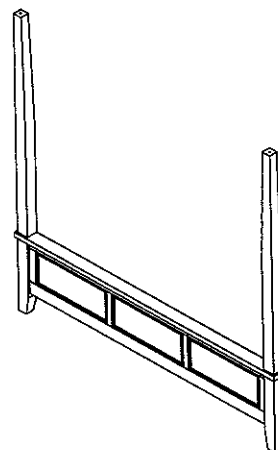

Part List

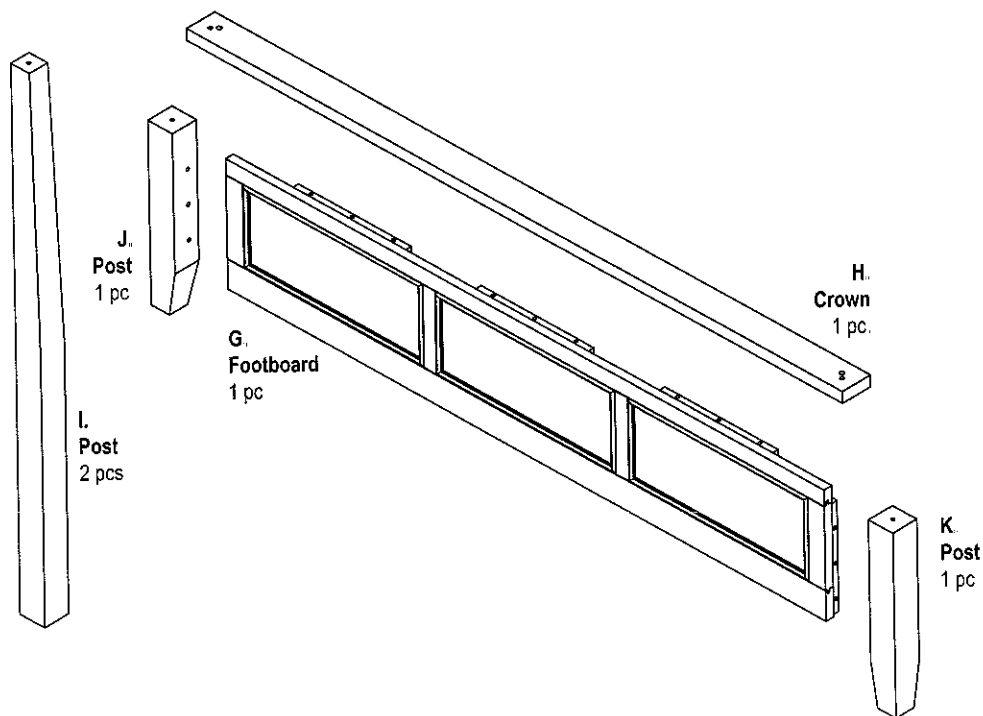


Hardware List



Head Cap Bolt
15 pcs (+1 extra)



Flat Washer
15 pcs (+1 extra)



Key Wrench
1 pc



Small Key Wrench
1 pc



Bolt
2 pcs (+1 extra)



Square Washer
2 pcs (+1 extra)



Nut
2 pcs (+1 extra)



Wrench
1 pc



Wooden Dowel
2 pcs (+1 extra)



Assembly Instructions 2/3

IMPORTANT

- * Do not tighten up all the bolts until each part is properly assembled.
- * You should keep Key Wrench in a safe place as you may need to tighten up the bolts in the future

STEP 1

Attach Posts (J) and (K) to Footboard (G) using Head Cap Bolts and Flat Washers.

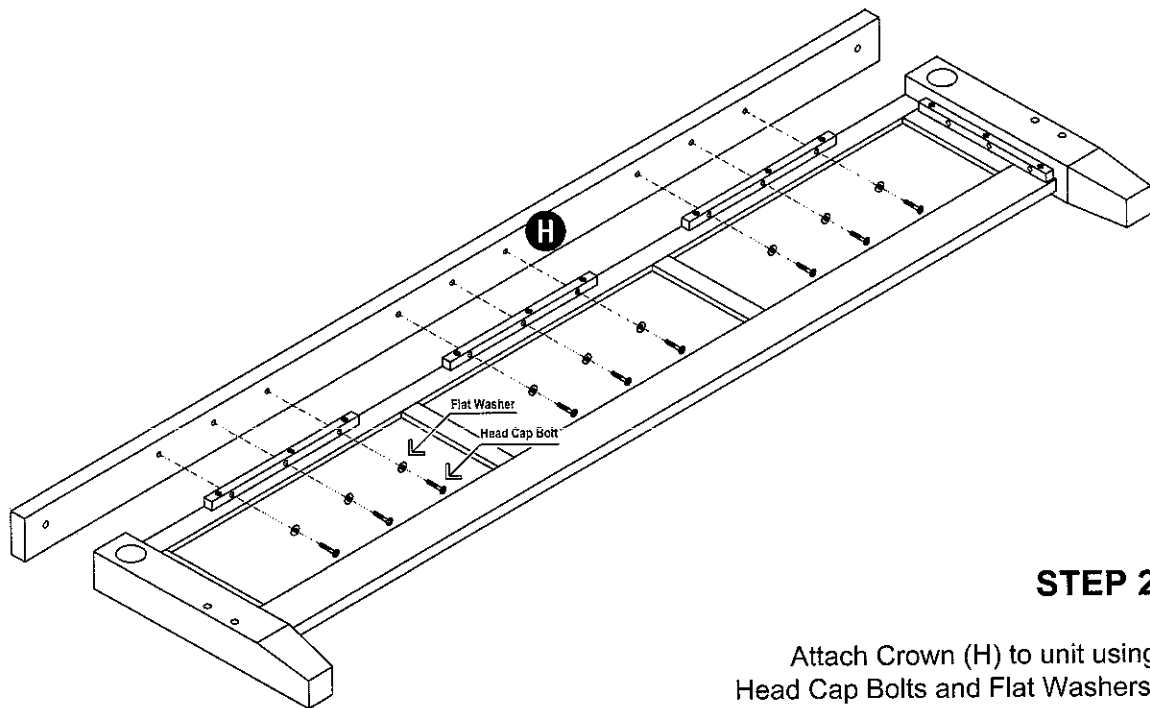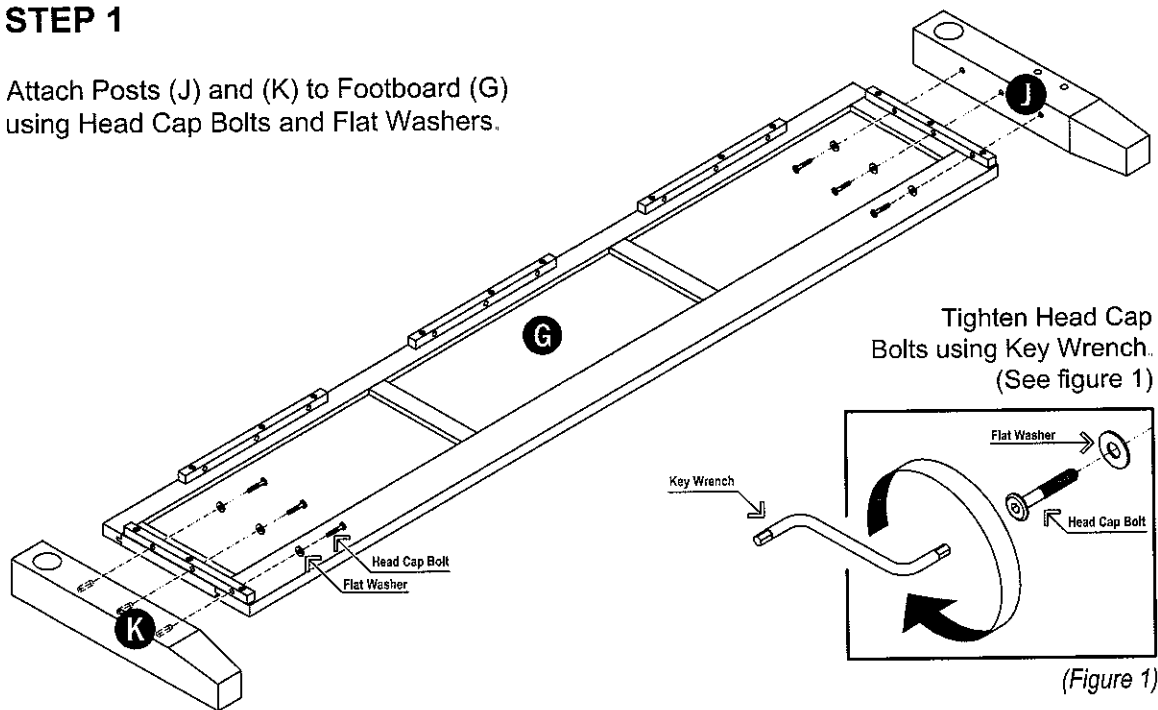


STEP 2

Attach Crown (H) to unit using Head Cap Bolts and Flat Washers.

Assembly Instructions 3/3

STEP 3


Insert Bolts into Posts (I)

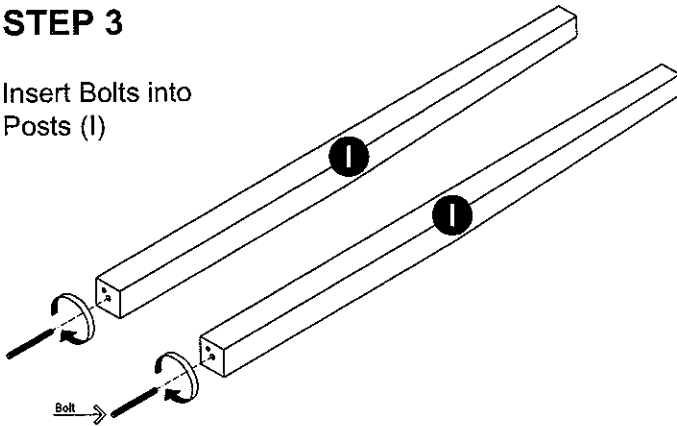


STEP 4

Attach Posts (I) to unit using Square Washers, Nuts and Wooden Dowel.

Tighten the Bolts with Wrench (See figure 2)

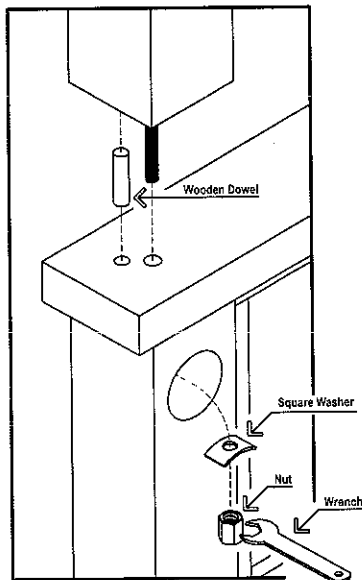

(Figure 2)

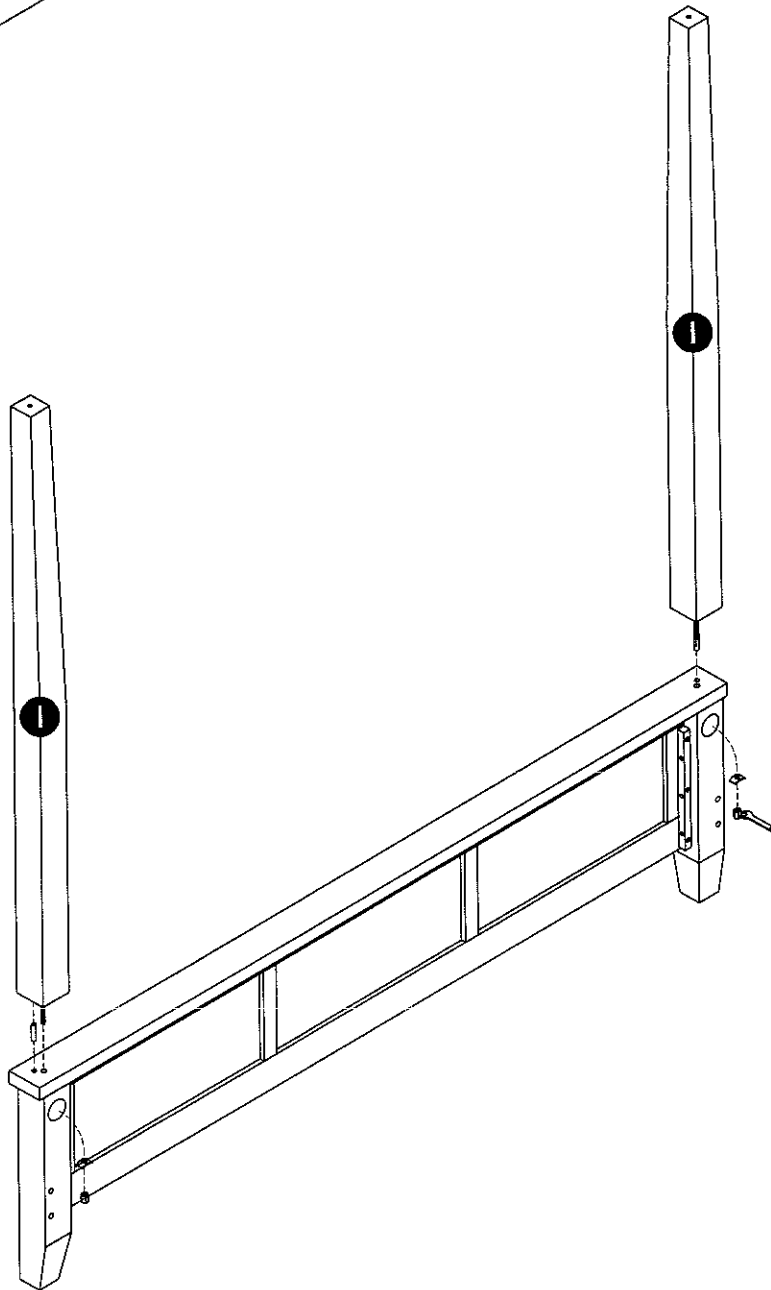

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON
FINISHED FURNITURE. AMMONIA
WILL CHEMICALLY ATTACK THE
LACQUER

NEVER


ALLOW LIQUIDS OF ANY KIND TO
REMAIN ON THE FURNITURE.
ABSORPTION CAUSES WOOD TO WARP
AND SPLIT AND FINISHES TO DELAMINATE

DO NOT
WRITE
DIRECTLY
ON
SURFACE



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE



**PREVENT
FINISH DAMAGE**


DO NOT
USE
RUBBER
BASED
PLACE MATS



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL
POLISH OR LUKEWARM SOAP AND WATER,
THEN BUFF WITH A DRY CLEAN CLOTH

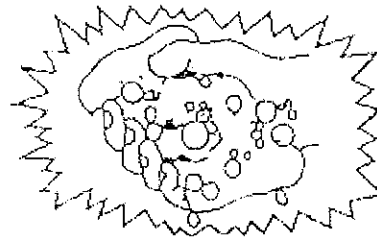


We will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, we are under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale.

King Poster Bed Rails with Slats


IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

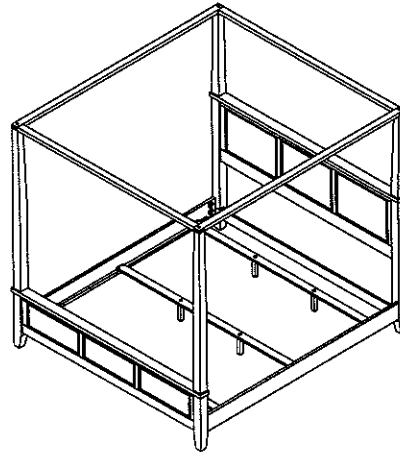

Part List

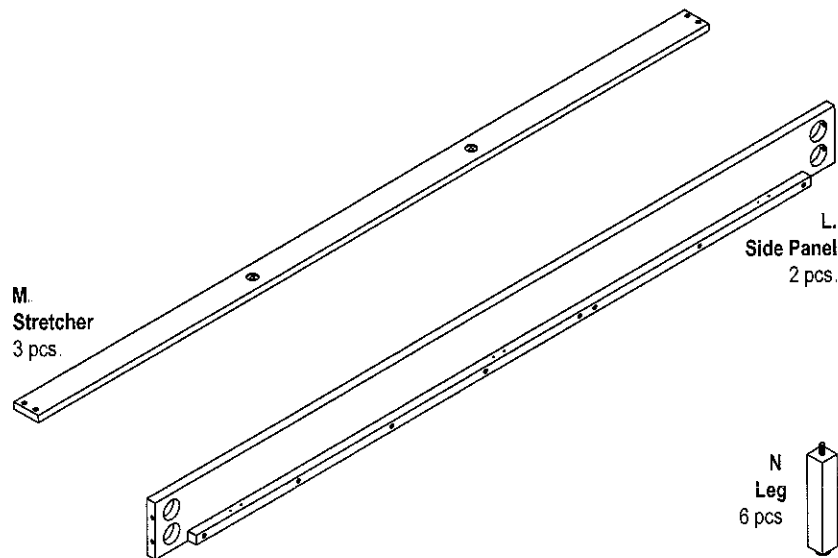

Hardware List



Bolt
8 pcs. (+1 extra)




Square Washer
8 pcs. (+1 extra)



Nut
8 pcs. (+1 extra)



Wrench
1 pc.



Wood Screw
12 pcs. (+1 extra)

Also need the Parts and Hardware in carton

Tools Required For Assembly : Phillips screwdriver

Tools Recommended For Assembly : Level


Assembly Instructions 2/2

IMPORTANT

- * Do not tighten up all the bolts & screws until each part is properly assembled
- * You should keep Wrench in a safe place as you may need to tighten up the Nuts in the future
- * After assembly, item must be level to work properly Use the included adjustable levellers to level

STEP 1

Insert Bolts into the pre-drilled holes of Headboard and Footboard.

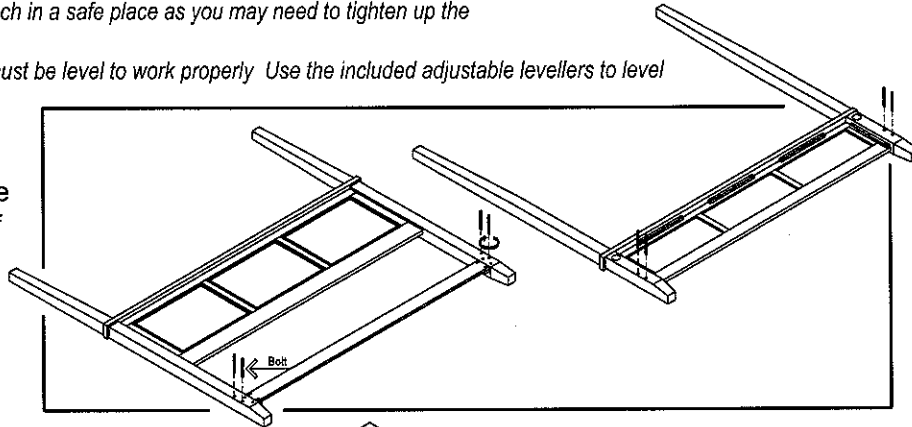

STEP 2

Assemble Side Panels (L) to Headboard and Footboard using Square Washers and Nuts. Tighten all the Bolts with Wrench. (See figure 1)

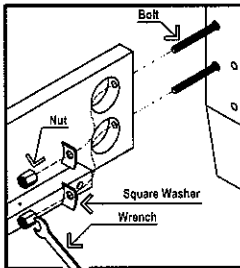
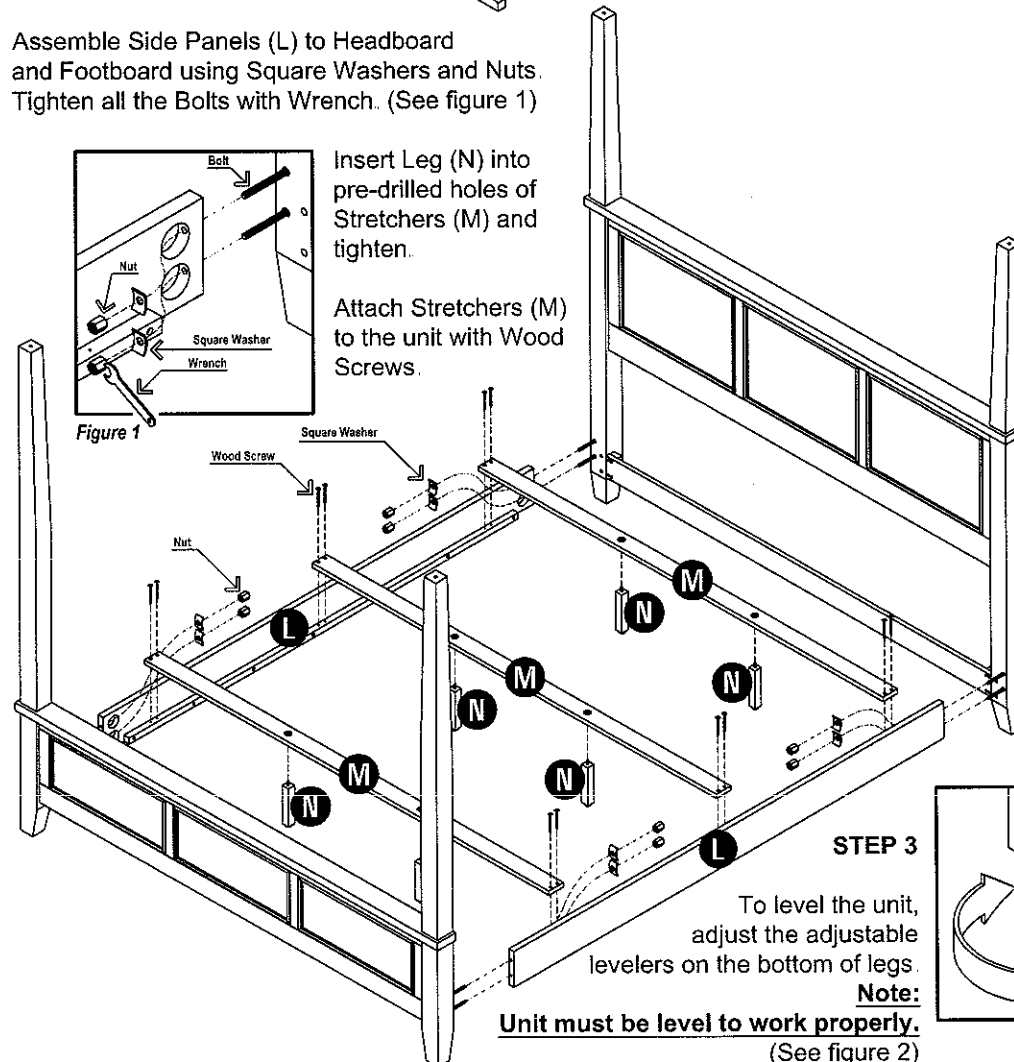


Figure 1

Insert Leg (N) into pre-drilled holes of Stretchers (M) and tighten.

Attach Stretchers (M) to the unit with Wood Screws.

STEP 3

To level the unit, adjust the adjustable levelers on the bottom of legs.

Note:

Unit must be level to work properly.
(See figure 2)

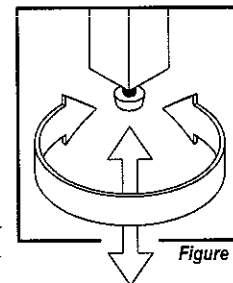


Figure 2

VERY IMPORTANT !!

CARE INSTRUCTIONS

NEVER

USE GLASS CLEANERS ON
FINISHED FURNITURE. AMMONIA
WILL CHEMICALLY ATTACK THE
LACQUER

NEVER

ALLOW LIQUIDS OF ANY KIND TO
REMAIN ON THE FURNITURE.
ABSORPTION CAUSES WOOD TO WARP
AND SPLIT AND FINISHES TO DELAMINATE

DO NOT
WRITE
DIRECTLY
ON
SURFACE



**PREVENT
MARKING**

DO NOT
PLACE IN
DIRECT
SUNLIGHT



**PREVENT
FADING**

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES



**PREVENT
YELLOWING**

DO NOT
PLACE HOT
OBJECTS
ON SURFACE



**PREVENT
FINISH DAMAGE**

DO NOT
USE
RUBBER
BASED
PLACE MATS.



**PREVENT
DISCOLORING**

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL
POLISH OR LUKEWARM SOAP AND WATER,
THEN BUFF WITH A DRY CLEAN CLOTH



We will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If this product was not purchased from an authorized retail affiliate, we are under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale.