



Freestanding Vanity Installation Guide

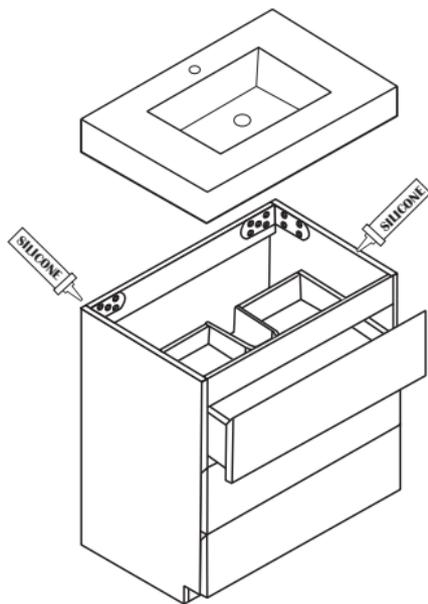

Please fix the cabinet with M6x65 screws which included in the hardware pack. Make sure screw were installed on the wooden stub of the wall.

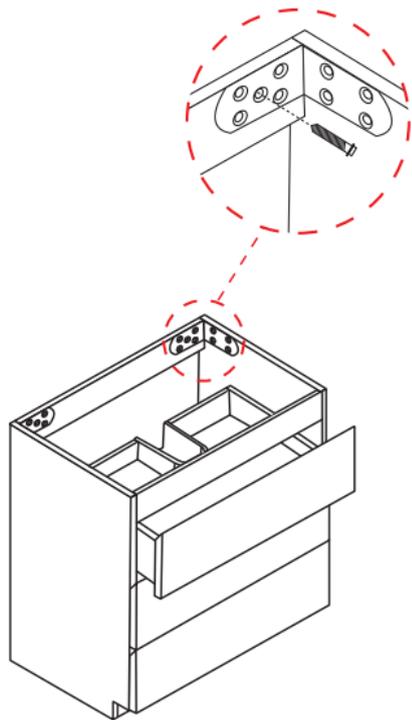

Seal the sink onto the base by silicone glue and press firmly into its place. Wipe away any excess silicone sealant with a damp cloth.