



ASSEMBLY INSTRUCTION

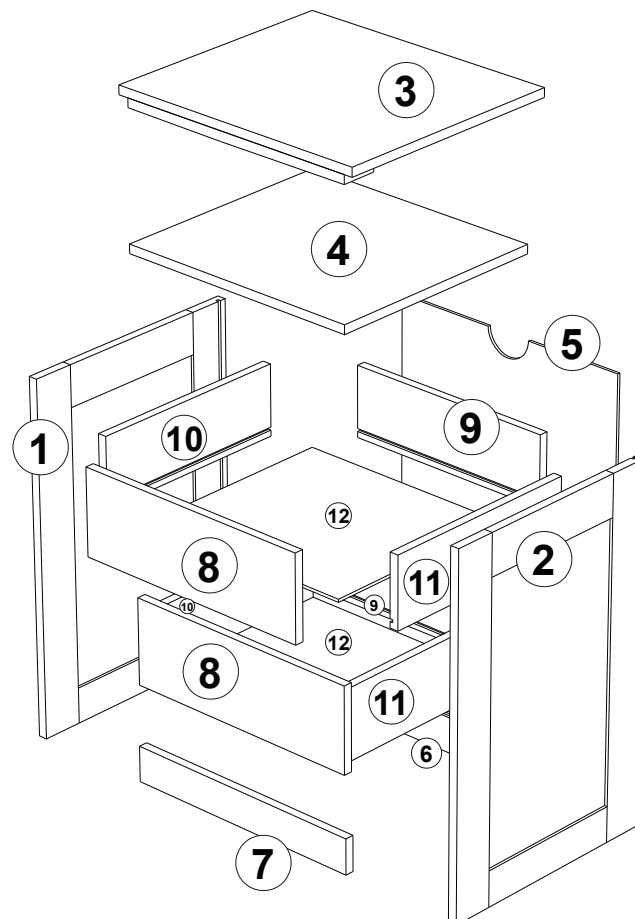


ASSEMBLY INSTRUCTION


1 1PC

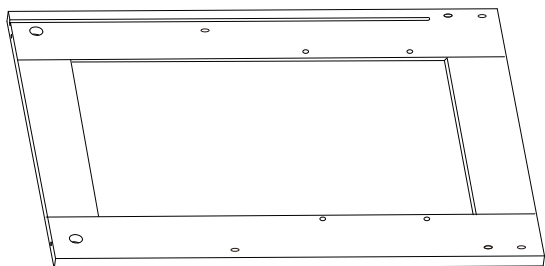


2 1PC

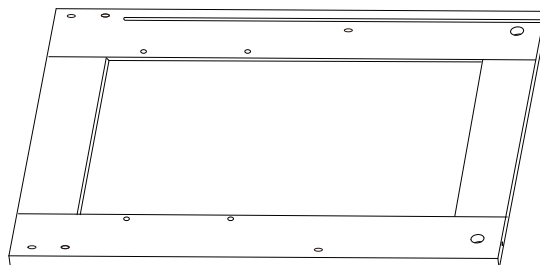

3 1PC

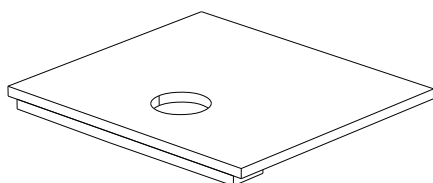

4 1PC

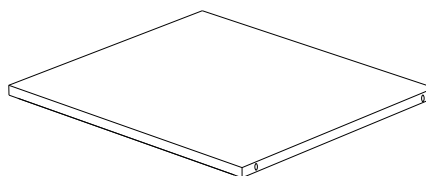


5 1PC




6 1PC



7 1PC



8 2PCS

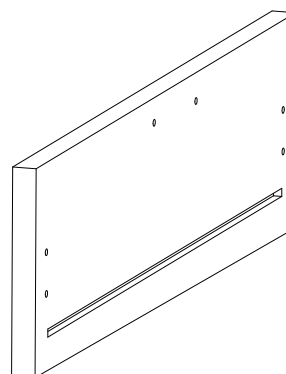

ASSEMBLY INSTRUCTION


9 2PCS




10 2PCS



11 2PCS



12 2PCS

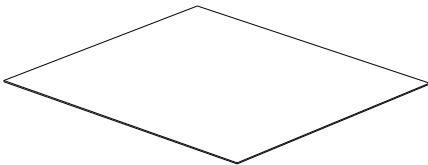


A 32PCS



B 32PCS




C1 4PCS

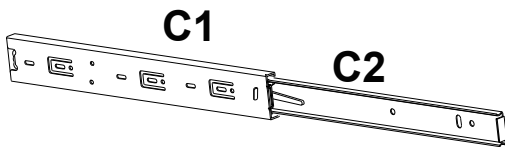


C2 4PCS


D 20PCS




E 4PCS




F 2PCS



G 1PCS

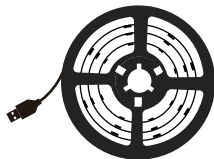


I 4PCS





J 1PCS




1

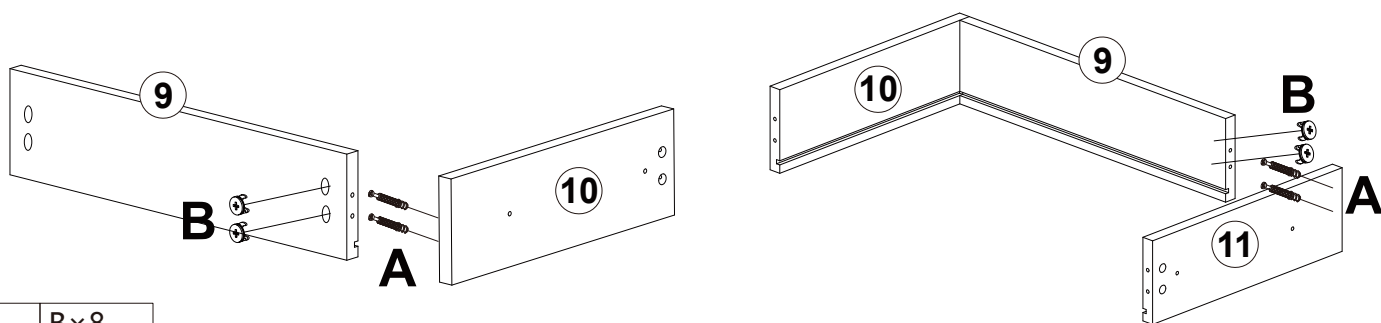

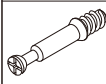A×8	B×8
	


Twist Screw A into the white holes on Board 10 and 11, then connect Board 9, 10 and 11 as displayed. Twist Screw B into the board.

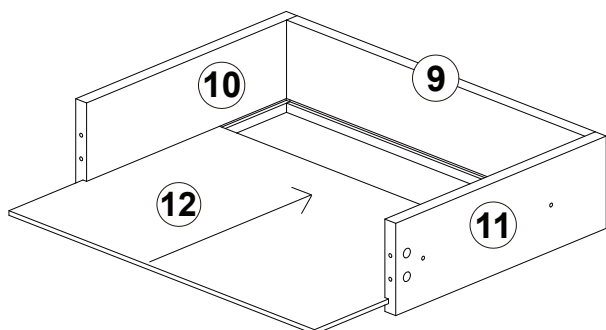



2



Insert Board 12 into the grooves on Board 9, 10 and 11.

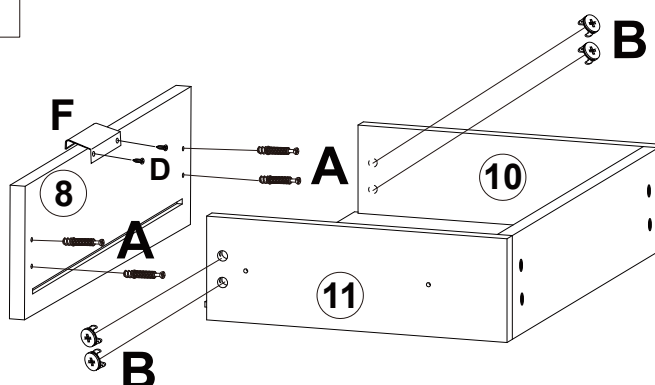
3

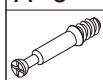
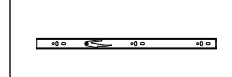


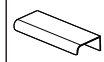A×8	B×8
	
D×4	F×2
	

Twist Screw A into the white holes on Board 8, connect Board 8, 10 and 11 as displayed, and then twist Screw B into the board. Twist Screw D to connect Part F with Board 8 to complete the handle.



4

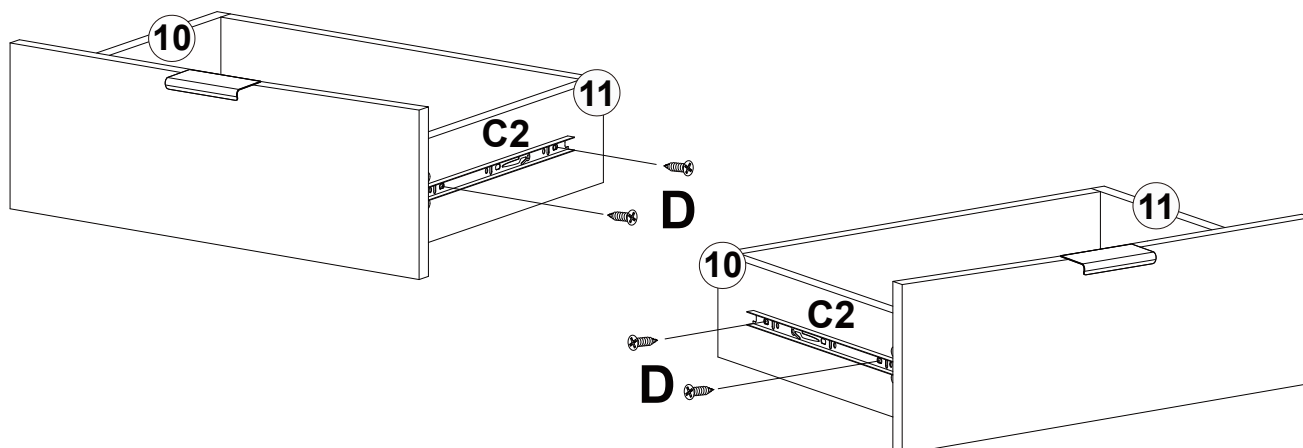

D×8	C2×4
	

Twist Screw D to attach C2 to the predrilled holes on Board 10 and 11 as displayed. Repeat the above steps to get another drawer.


5

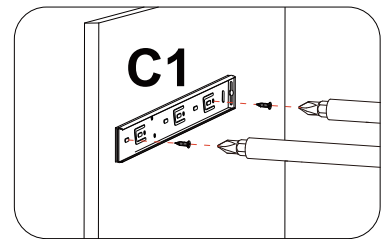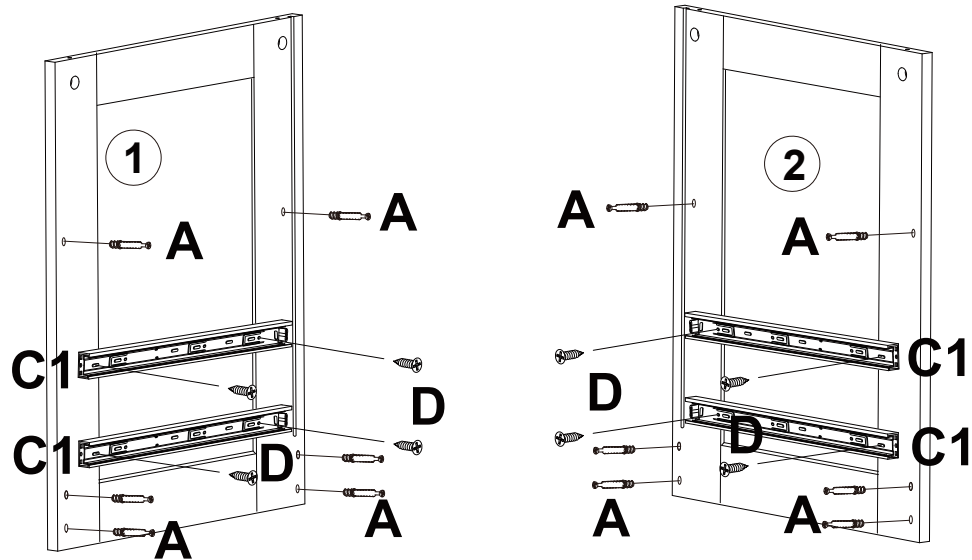

A×12	D×8	C1×4

Twist Screw A into the white holes on Board 1 and 2.
Twist Screw D to connect C1 with Board 1 and Board 2.

6

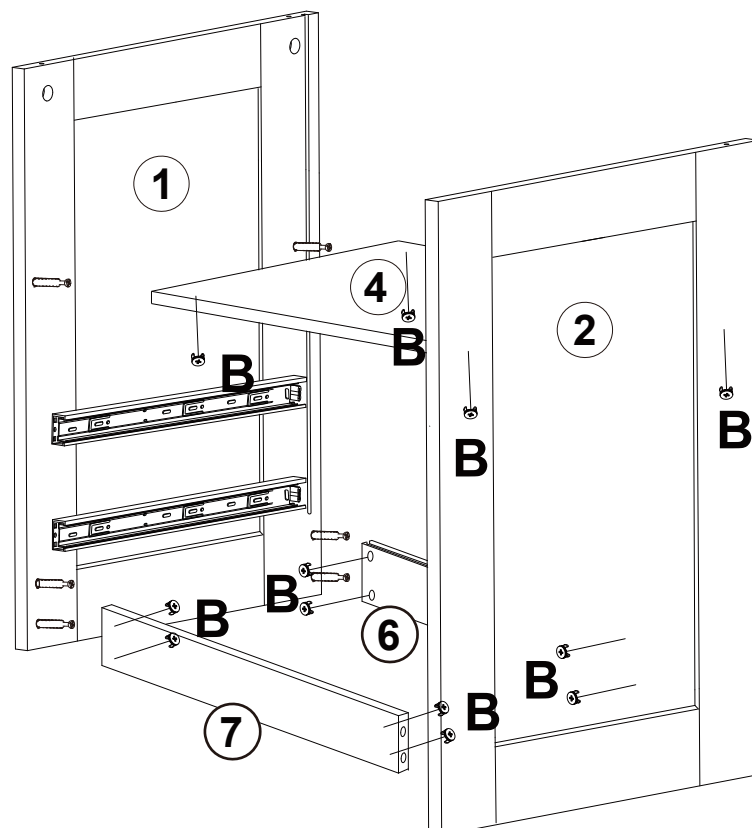


D×12




Connect Board 4, 6, and 7 with Board 1 and 2, then twist Screw B into the board.

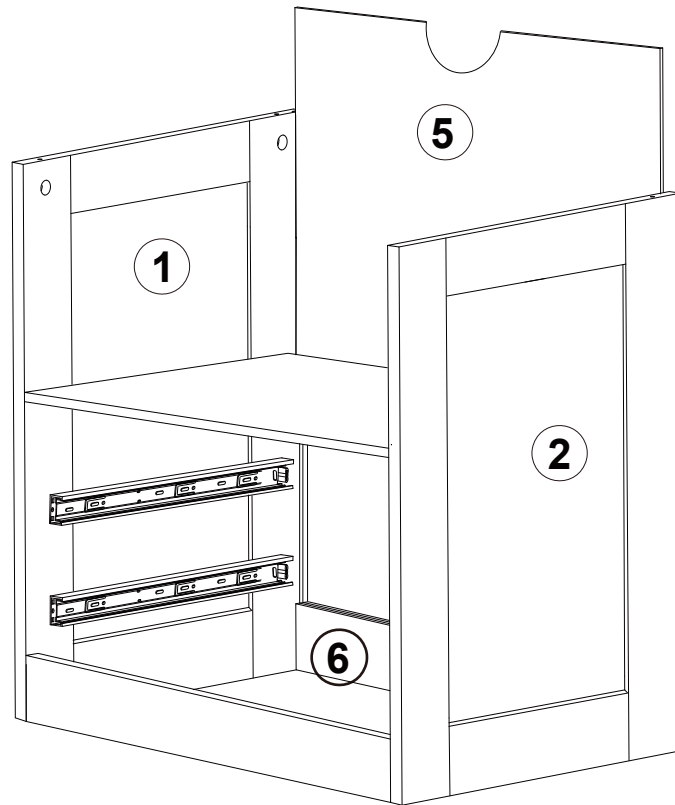


7



Insert Board 5 into the grooves on Board 1, 2 and 6.

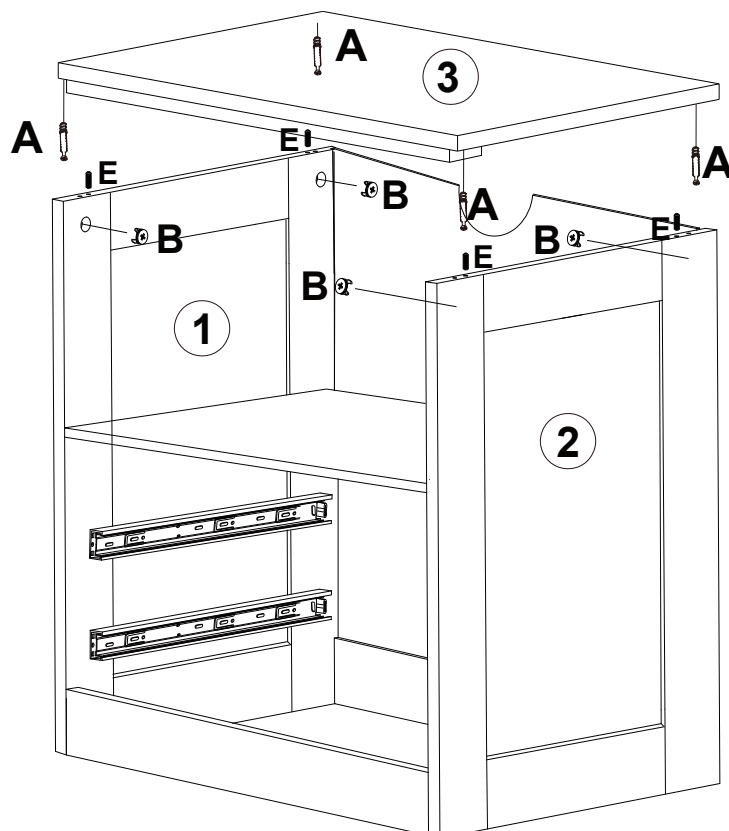
8

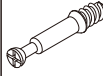

A×4	B×4	E×4
		

Twist Screw A into the white holes on Board 3, and insert E into the holes on Board 1 and 2. Then connect Board 3 with Board 1 and 2 as displayed, and twist Screw B into the board to complete the table frame.

9

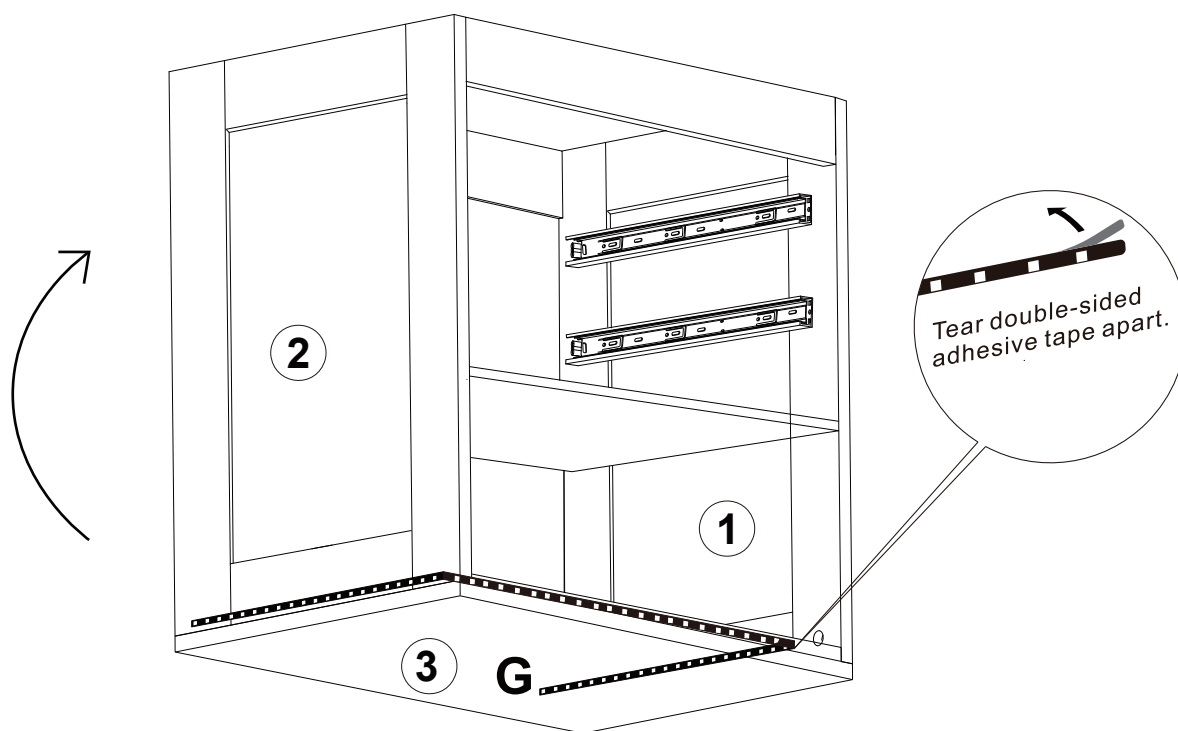


G×1



Stick the LED belt G around the open shelf.


10

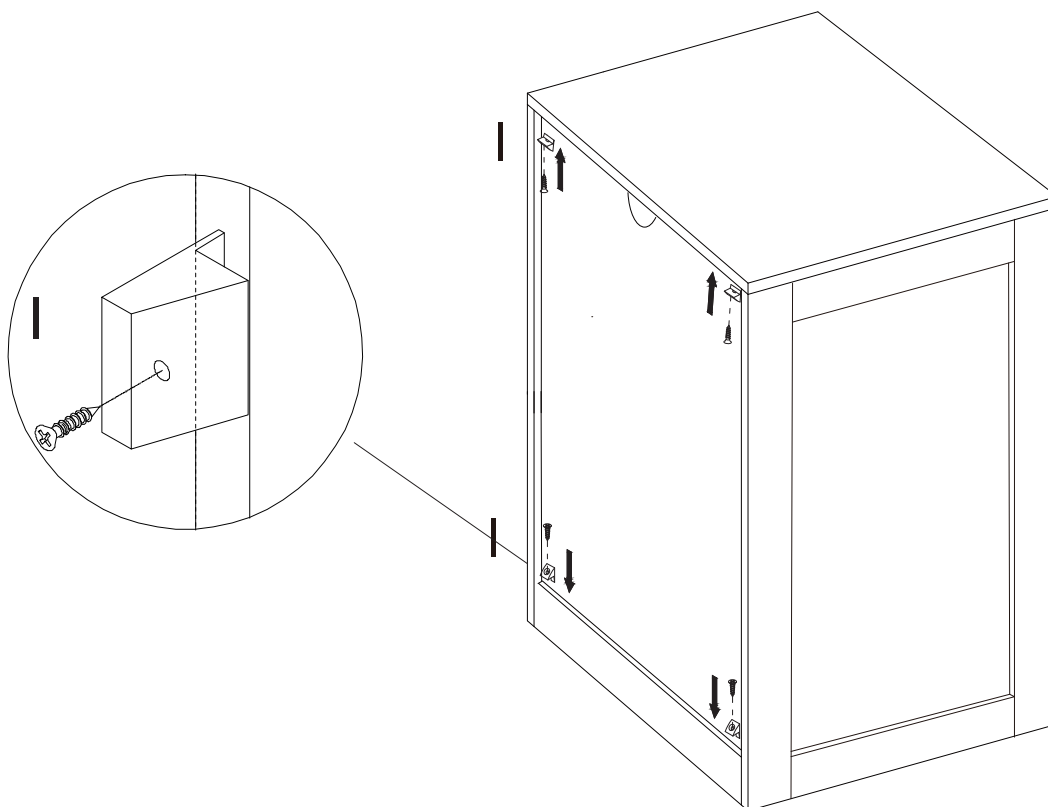

I×4



Insert Part I into the back of the table, then twist Screw B into the board as displayed.

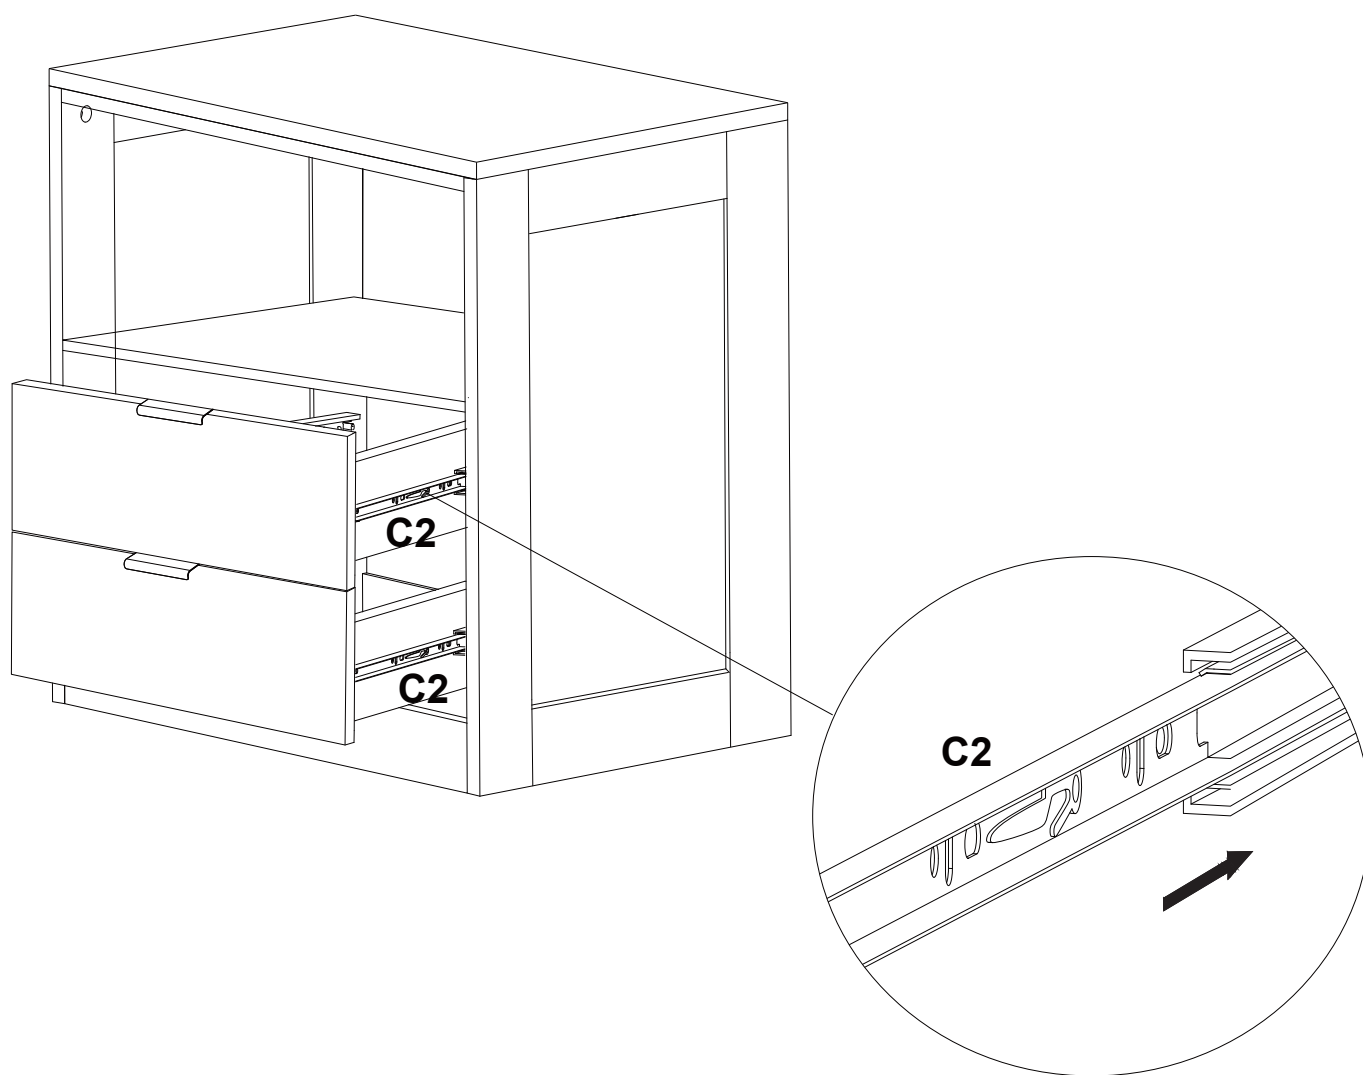

Put in the 2 drawers.