
ModernMate

ASSEMBLY INSTRUCTIONS

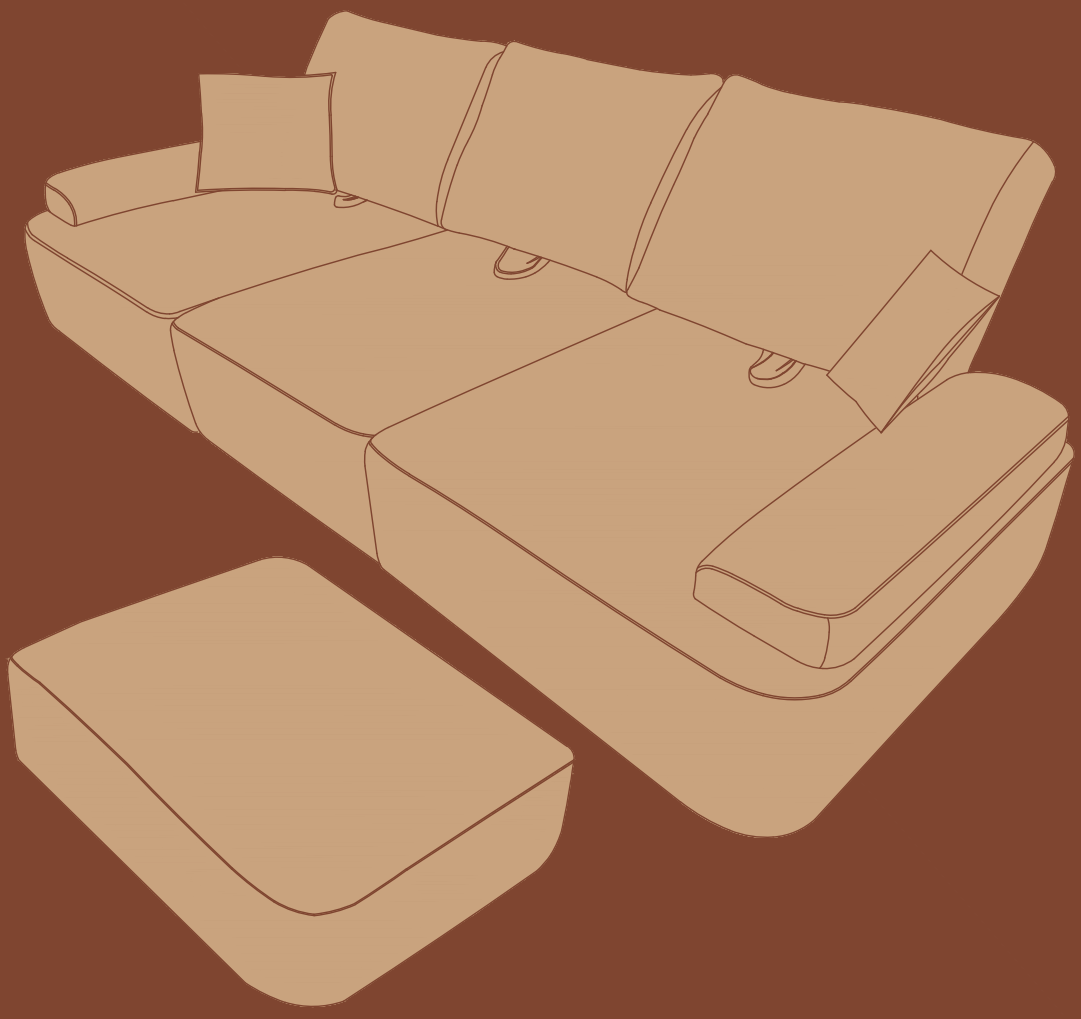

Sofa

CONTENTS

Introduction 01

Safety Information 01

Preparation & Guidelines 02-03

Parts List 04-07

Configuration Options 08

Sofa Assembly Process 09-20

Sofa Pillows 21

Sofa Configuration 22

Care & Maintenance 23

INTRODUCTION

Thank you for your purchase. Please read these instructions carefully before assembly and retain this manual for future reference. If you require assistance, please contact our Customer Support team.

SAFETY INFORMATION

This package contains multiple components and hardware pieces. Please verify all items against the Parts List before beginning assembly.

WARNING: Choking hazard. This product contains small parts. Keep all hardware and components out of reach of small children during assembly.

To prevent scratches, assemble the unit on a soft, non-abrasive surface such as a carpet, blanket, or the flattened cardboard carton.

Some components are heavy. For your safety, two-person assembly is strongly recommended.

The unit may be unstable until fully assembled. Do not move the product until all assembly steps are complete.

For questions or replacement parts, please contact Customer Support.
Toll-Free: (800) 661-5928


NOTICE: Strictly follow the assembly steps in order. Failure to do so may result in product damage or void the warranty.


ASSEMBLY TIP: UNPACKING

Carefully open the vacuum-sealed bags and remove the seat cushions, back-rests, and armrest pillows.

Firmly pat all cushions and allow 72 hours for them to fully expand to their original shape.

To speed up the expansion process, firmly and evenly pat all sides of each cushion.

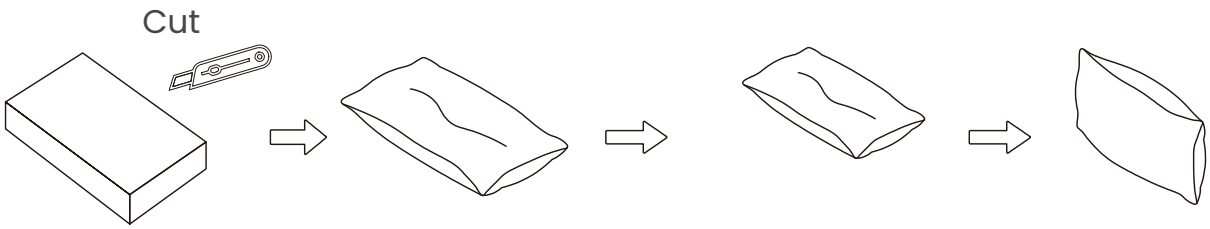

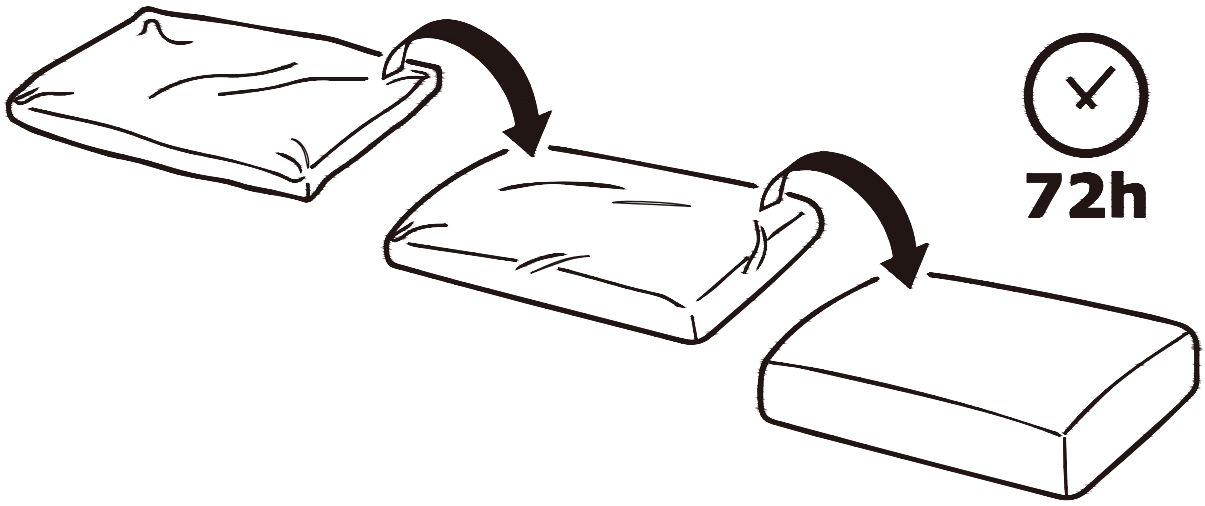


MAINTENANCE: CUSHION CARE






Due to the natural properties of down filling, cushions may require time to recover their loft after extended use. Regular fluffing and patting will restore loft and ensure long-lasting comfort.






To maintain the sofa's appearance and comfort, gently pat and fluff the cushions as needed:

- **When to Fluff:** If the cushions feel compressed or appear flat.
- **How to Fluff:** With your hands cupped, gently pat the sides, front, and back of the cushion. Repeat as necessary until the original shape is restored. Avoid using excessive force.






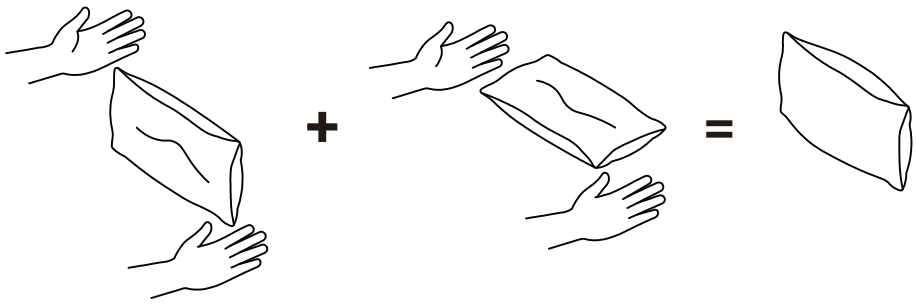



Parts List - BOX A1

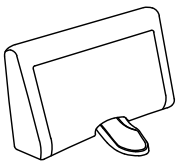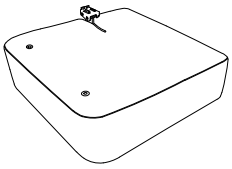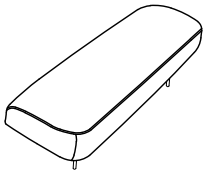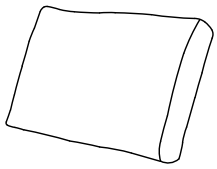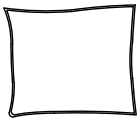ID	Description	QTY
A		1
B		1
C		1
D		1
I		1
1		1
2	 M8*40	2+1
3		2+1

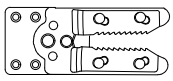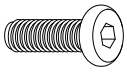
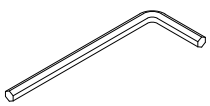
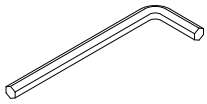
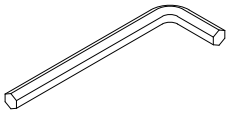
ID	Description	QTY
4		3
5	 M8*20	1
6		1
7		1
9	 M6*20	2+1
Z1	 M6	1
Z2	 M8	1
Z3	 M10	1


Parts List - BOX A2

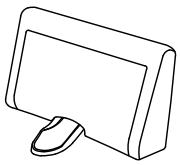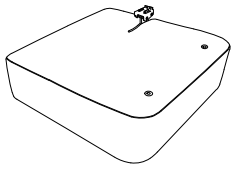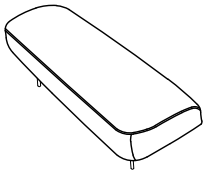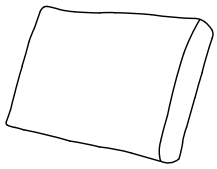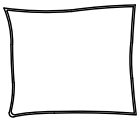ID	Description	QTY
A		1
E		1
F		1
D		1
I		1
1		1
2	 M8*40	2+1


ID	Description	QTY
3		2+1
4		3
5	 M8*20	1
6		1
8		1
9	 M6*20	2+1

Parts List - BOX B

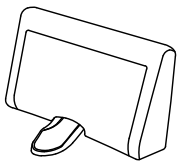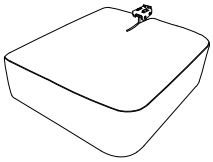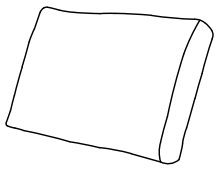
ID	Description	QTY
A		1
G		1
D		1
4		4
5	 M8*20	1
6		1
7		1

ID	Description	QTY
8		1
9	 M6*20	4+1

Parts List - BOX C

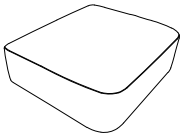
ID	Description	QTY
H		1
4		4

This product is shipped in multiple boxes.

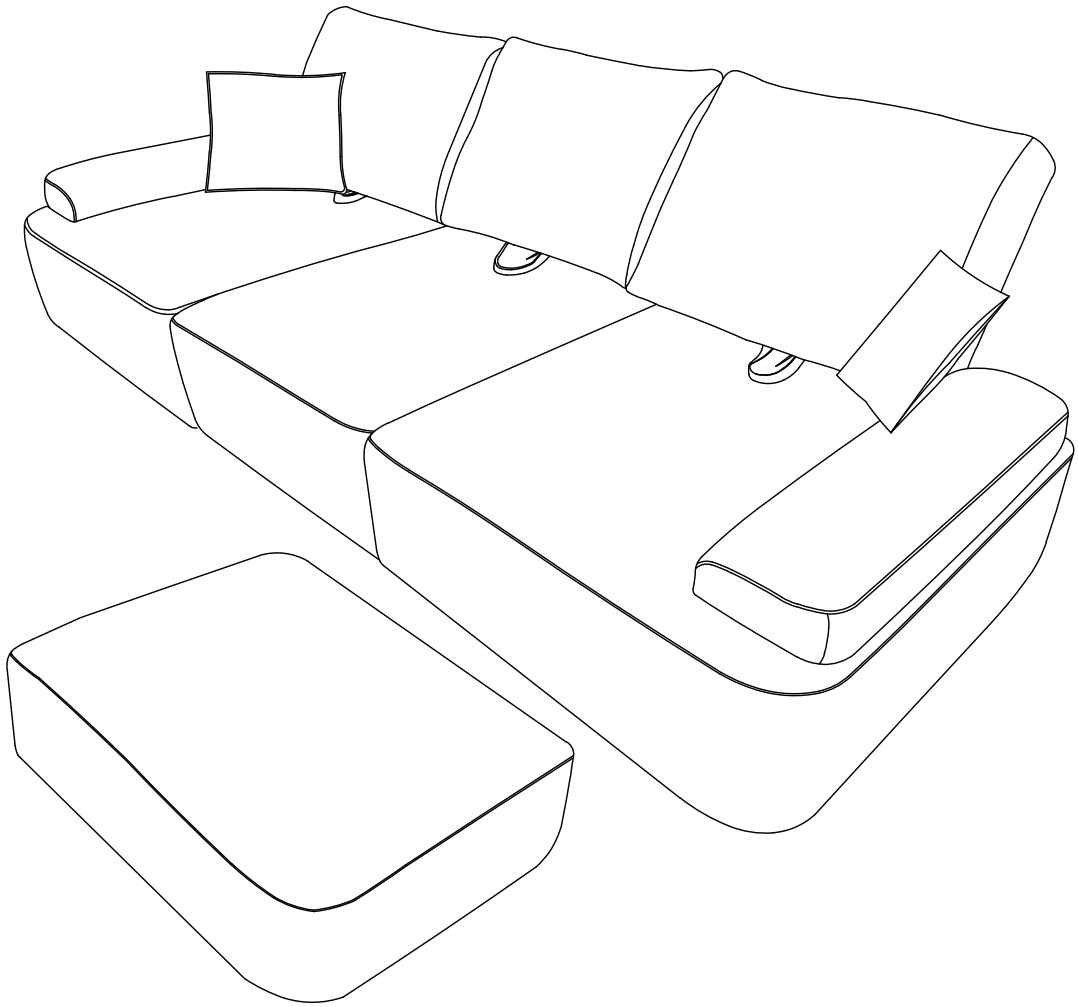


STEP 1

BOX A1


7 X1


9 X2


Z1 X1

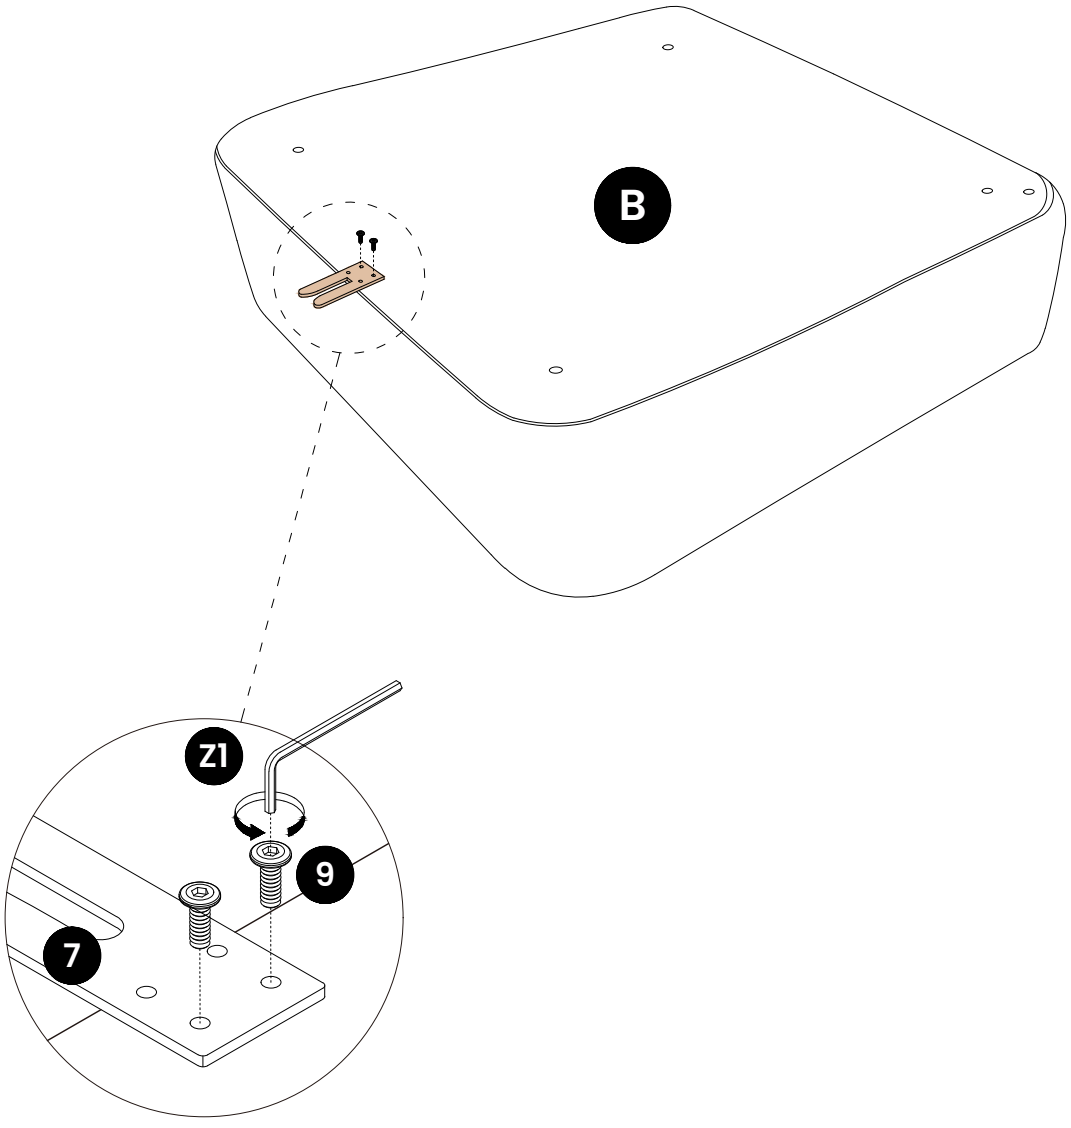


STEP 2

BOX A1

	1 X1
	2 X2
	3 X2
	4 X3
	Z2 X1

STEP 3


BOX A1

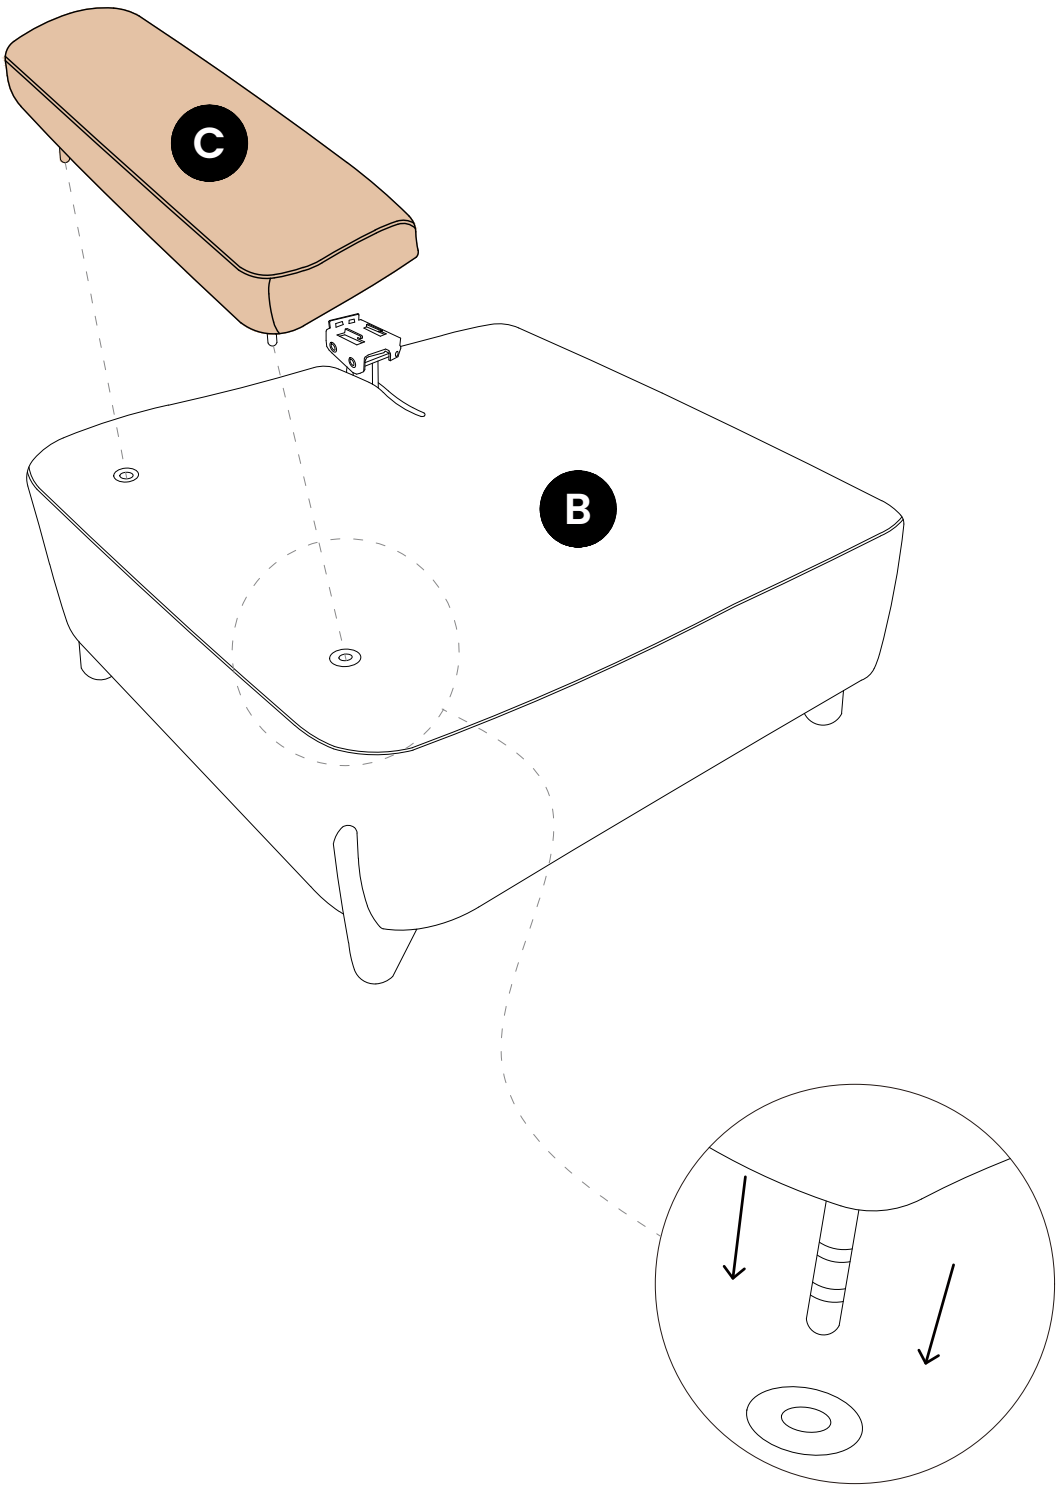


STEP 4


BOX A1

	5 X1
	6 X1
	Z3 X1

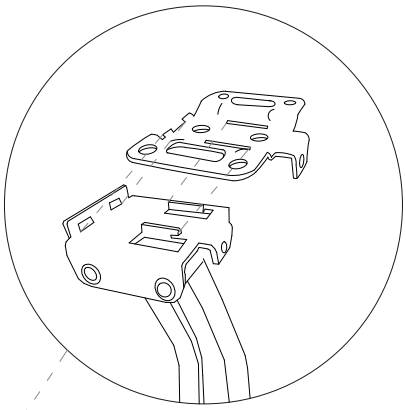

As shown in the figure, align the buckles at the bottom of the rack with the slots to secure the front and rear sliding hardware. Then, align the screw holes on the back of the bracket.

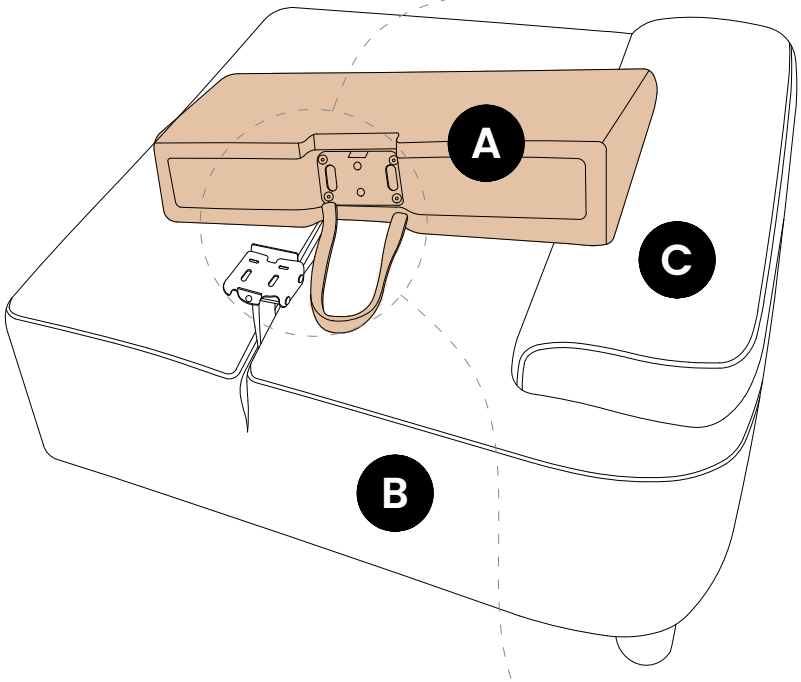

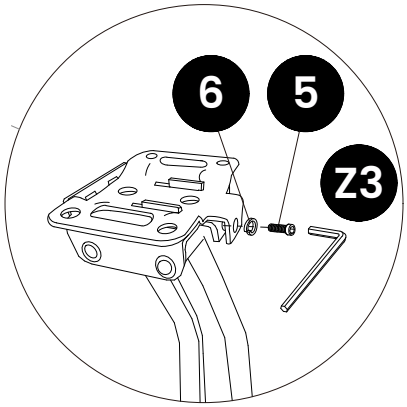


As shown in the figure, use 1 M8*20 flat-head socket head cap screw and 1 spring washer to secure the front and rear sliding hardware to the rack. Then, tighten it with an Allen wrench.

STEP 5

BOX A2

	8 X1
	9 X2
	Z1 X1

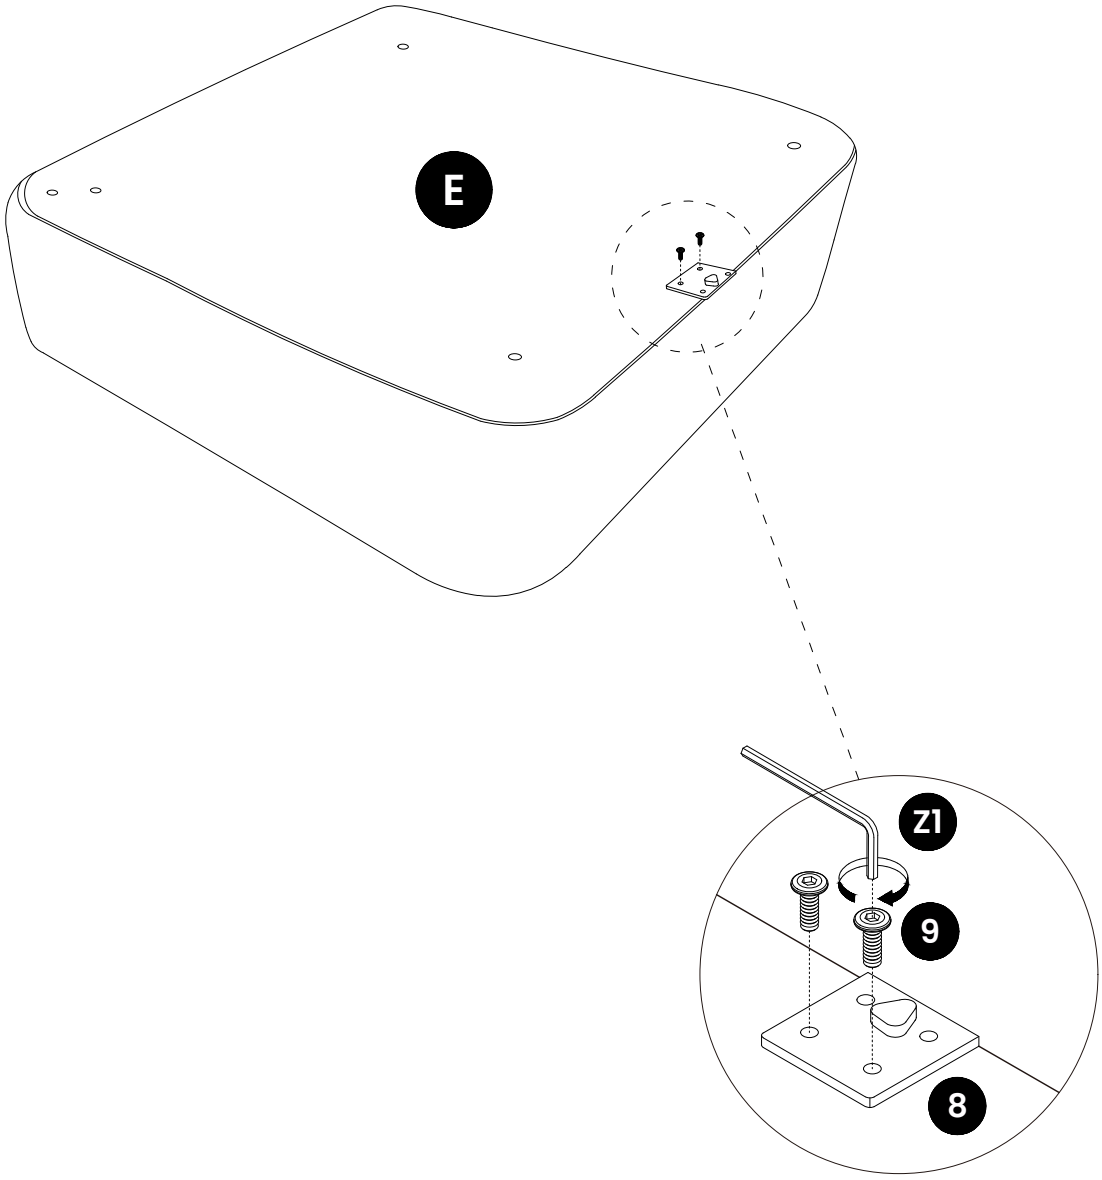


STEP 6

BOX A2

	1 X1
	2 X2
	3 X2
	4 X3
	Z2 X1

STEP 7

BOX A2

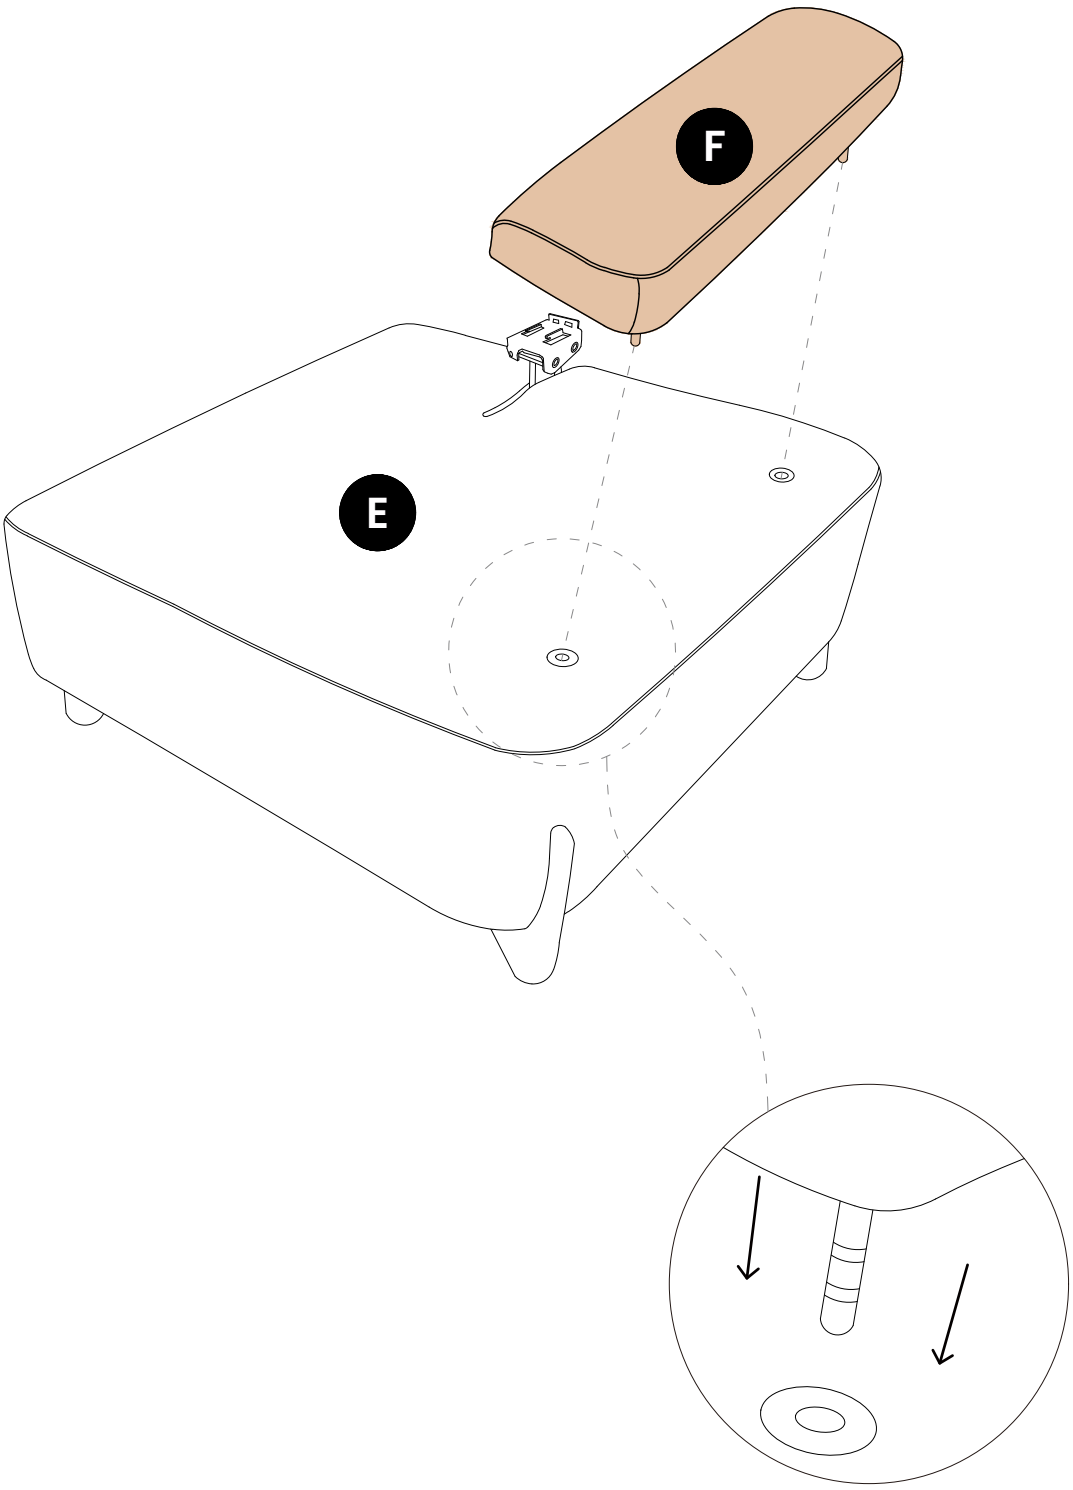



STEP 8


BOX A2

	5 X1
	6 X1
	Z3 X1

As shown in the figure, align the buckles at the bottom of the rack with the slots to secure the front and rear sliding hardware. Then, align the screw holes on the back of the bracket.

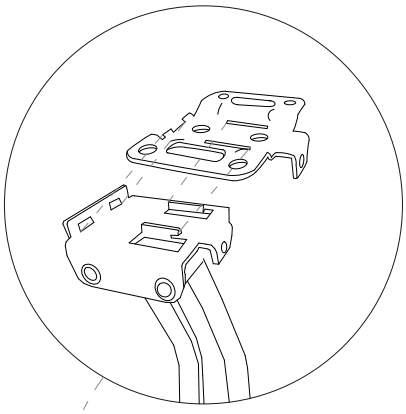

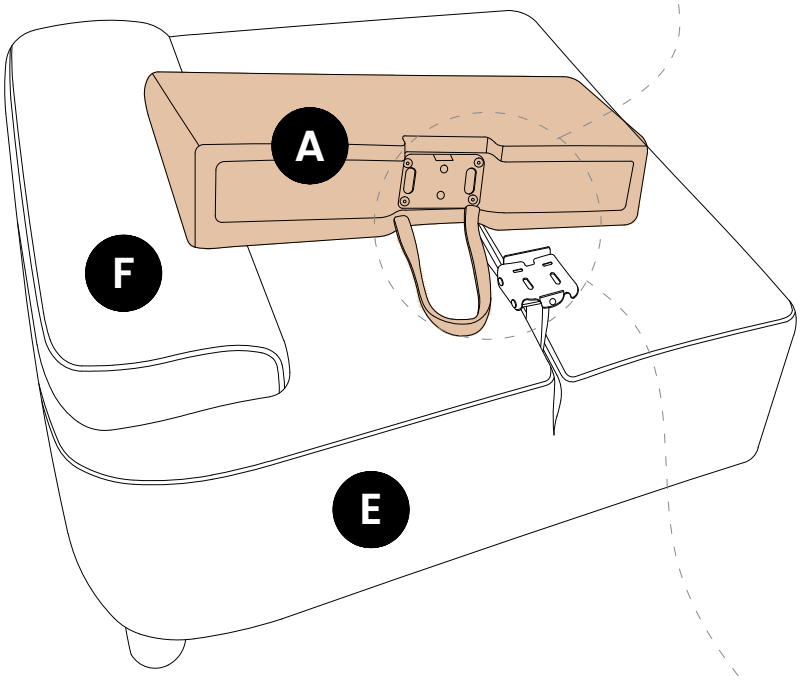


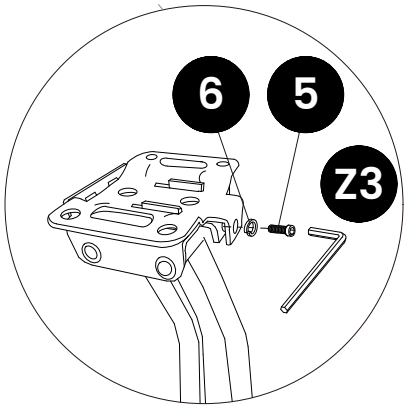


As shown in the figure, use 1 M8*20 flat-head socket head cap screw and 1 spring washer to secure the front and rear sliding hardware to the rack. Then, tighten it with an Allen wrench.

STEP 9

BOX B

	7 X1
	8 X1
	9 X4
	Z1 X1

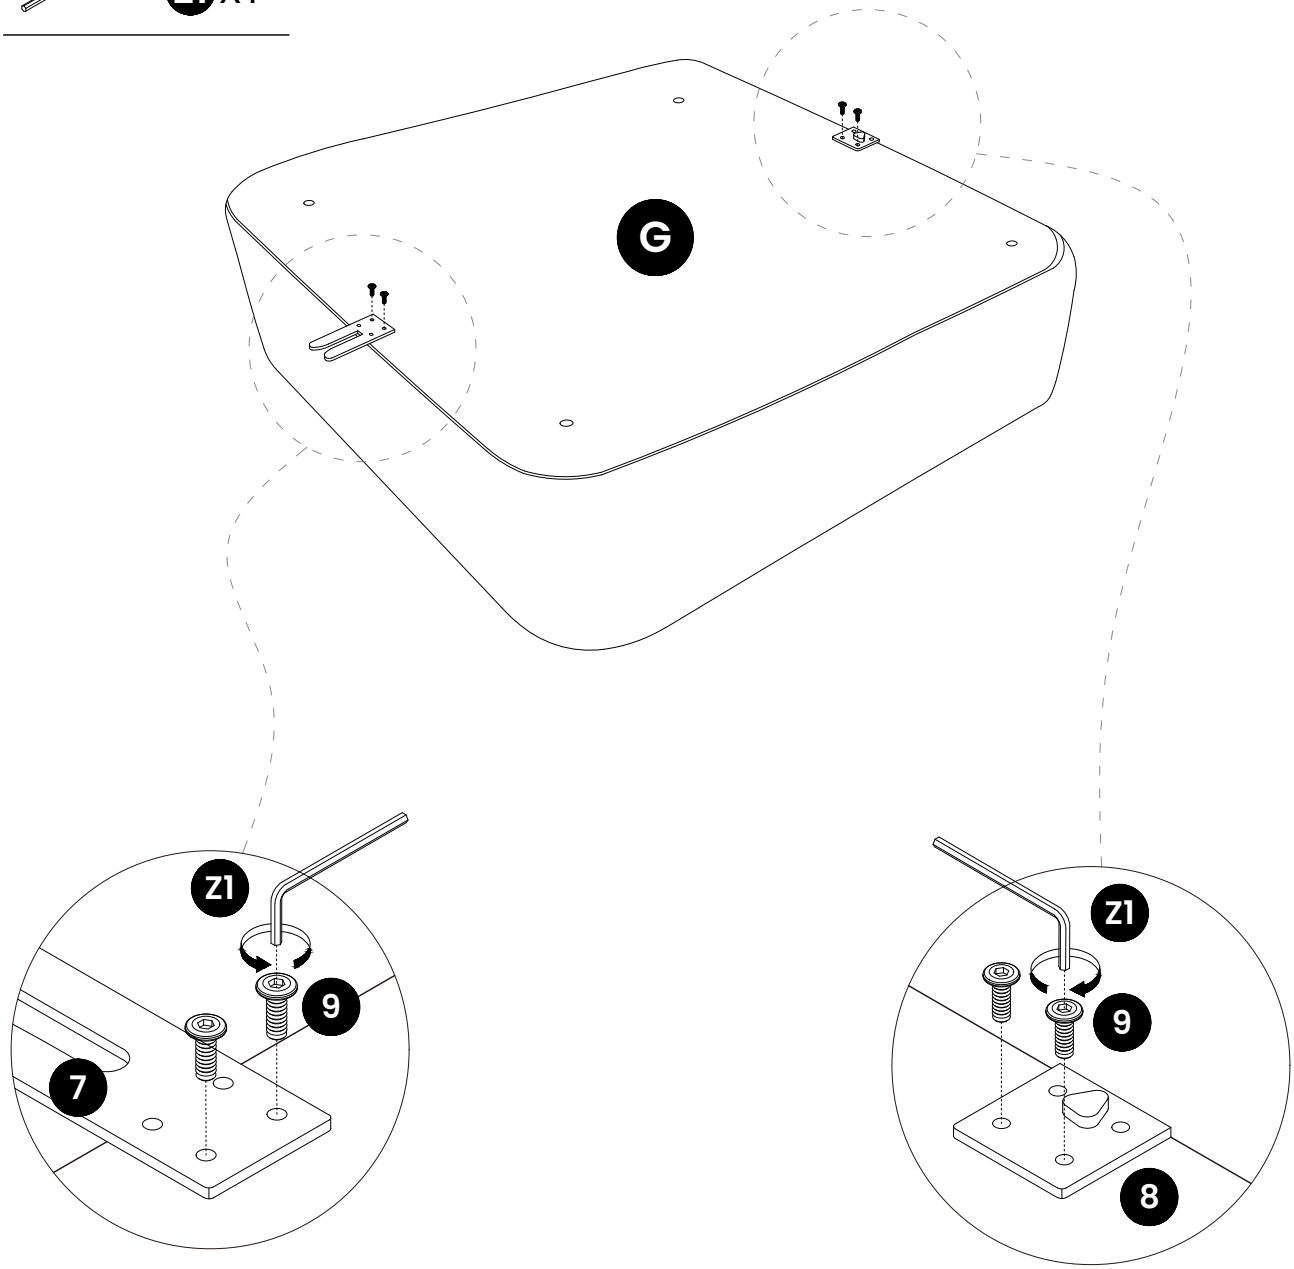



STEP 10

BOX B



4 X 4

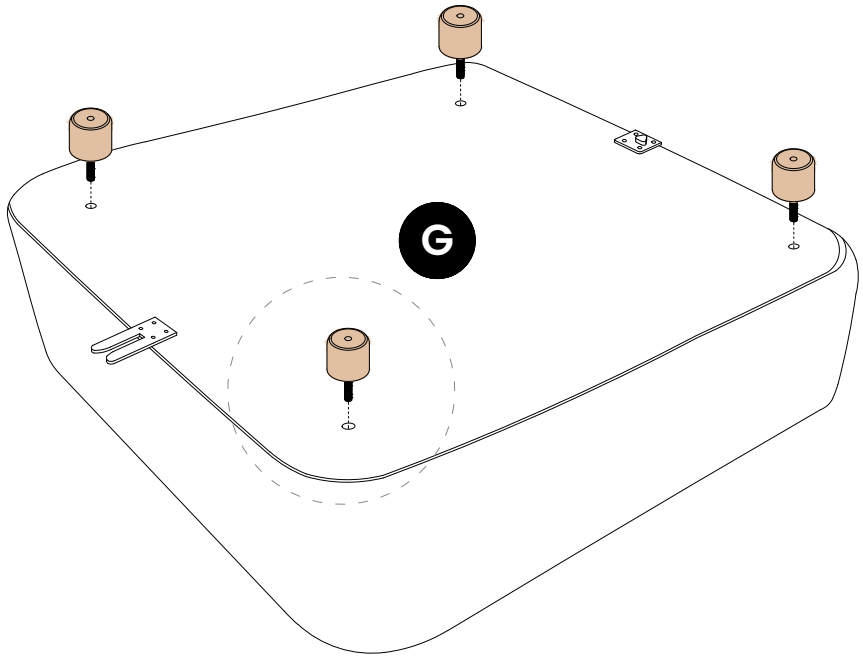

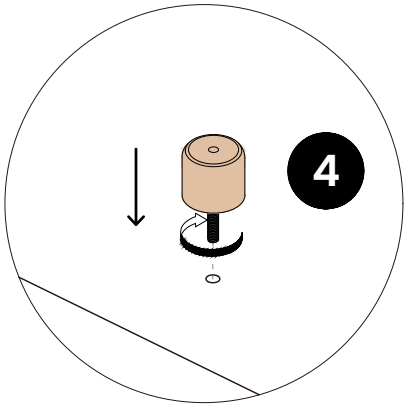



STEP 11


BOX B

	5 X1
	6 X1
	Z3 X1

As shown in the figure, align the buckles at the bottom of the rack with the slots to secure the front and rear sliding hardware. Then, align the screw holes on the back of the bracket.

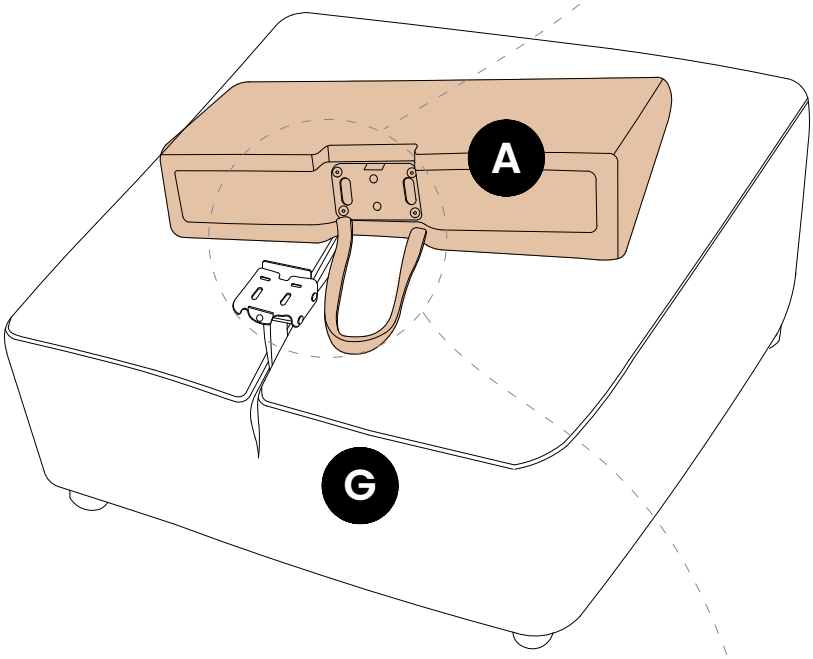

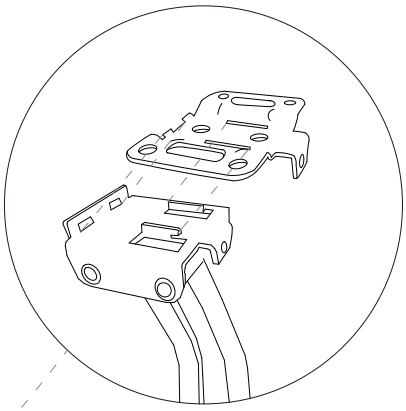

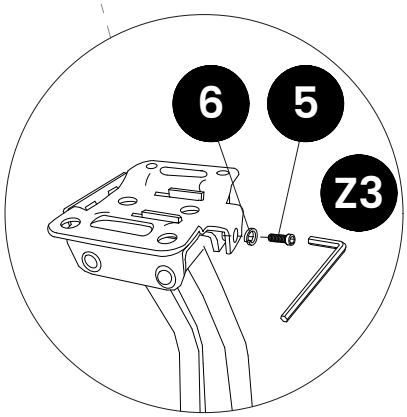


As shown in the figure, use 1 M8*20 flat-head socket head cap screw and 1 spring washer to secure the front and rear sliding hardware to the rack. Then, tighten it with an Allen wrench.


STEP 12

BOX C




4 X 4

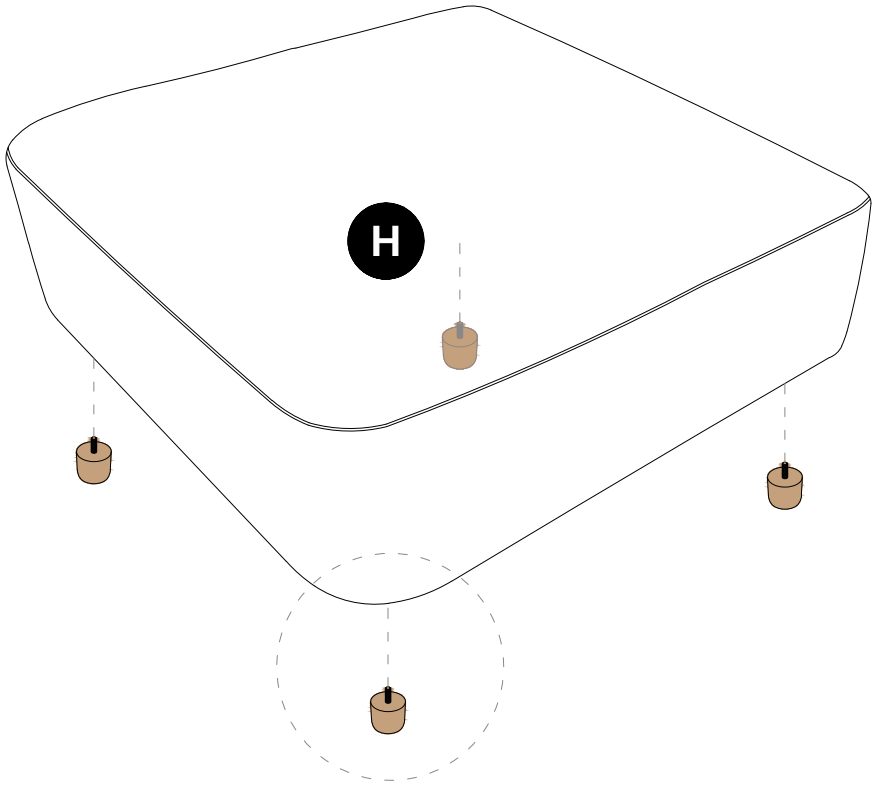

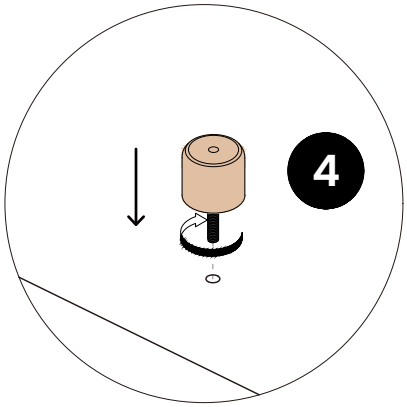



Final appearance after assembly as shown in drawing.

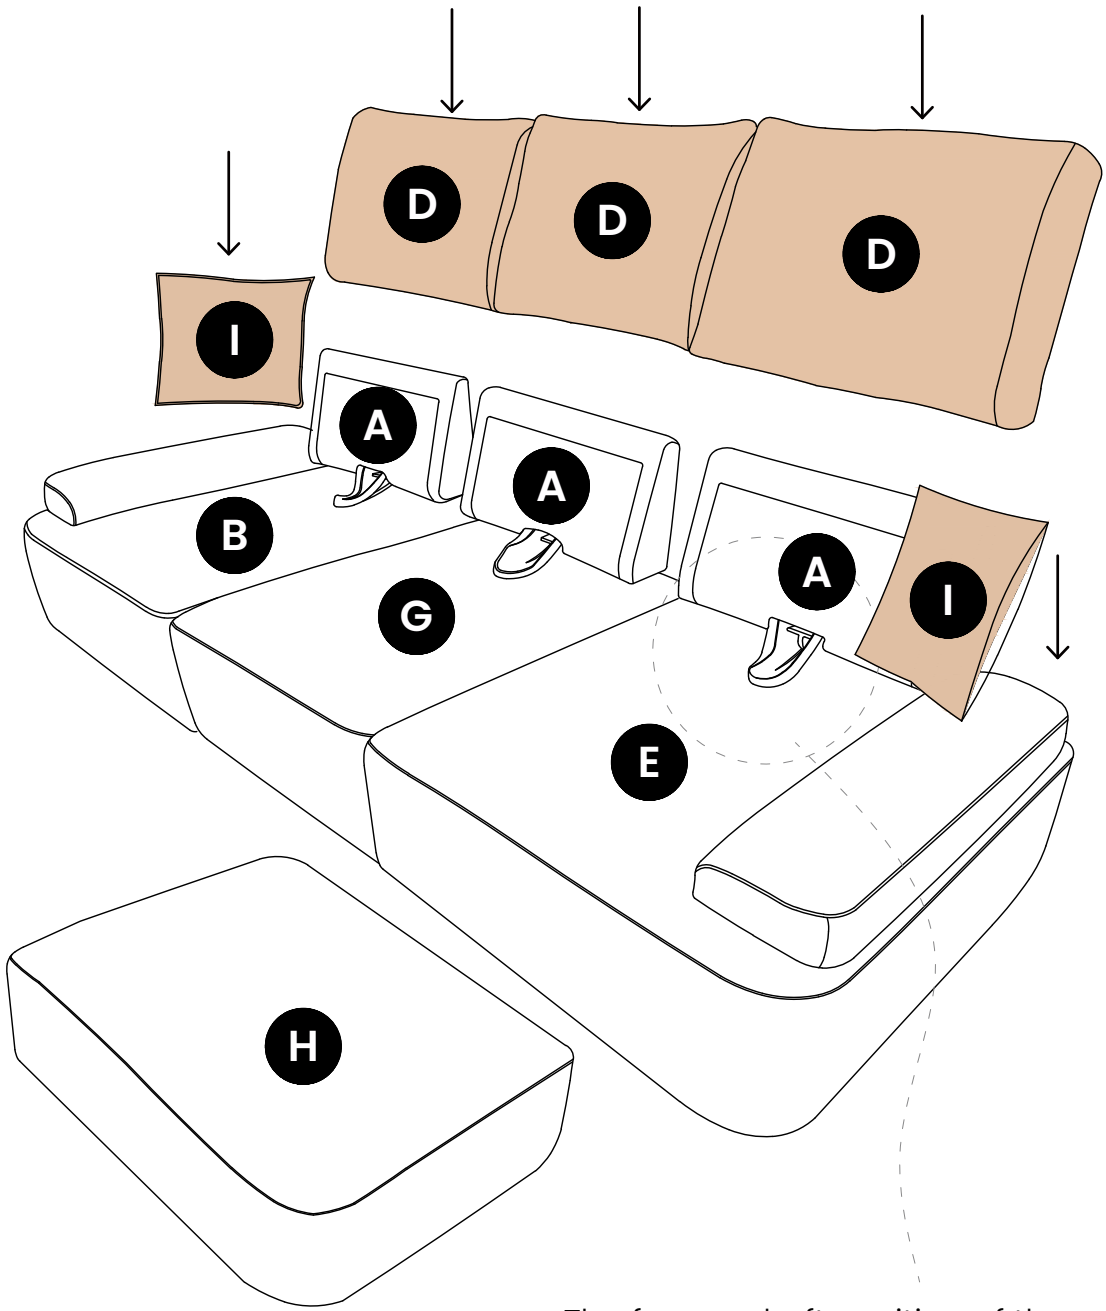


The fore and aft position of the sofa backrest may be adjusted by means of the pull handle fitted to the backrest.

This product is shipped in multiple boxes.
you will receive three boxes of A1 + A2 + B ,

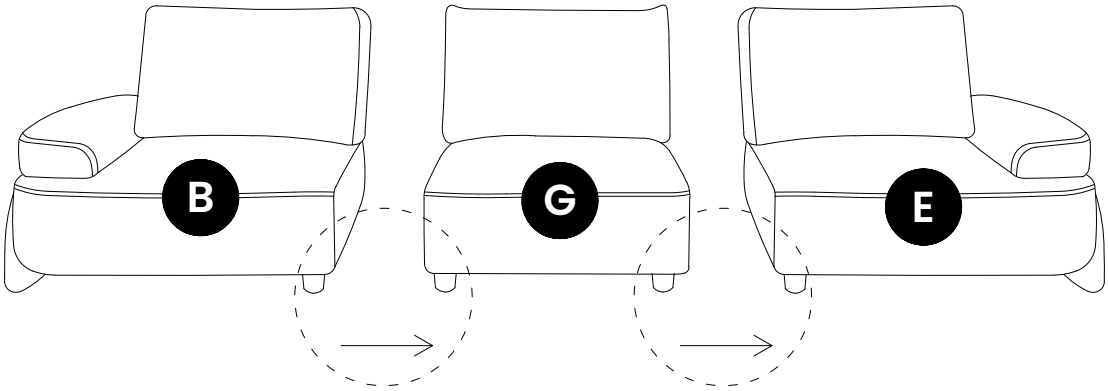

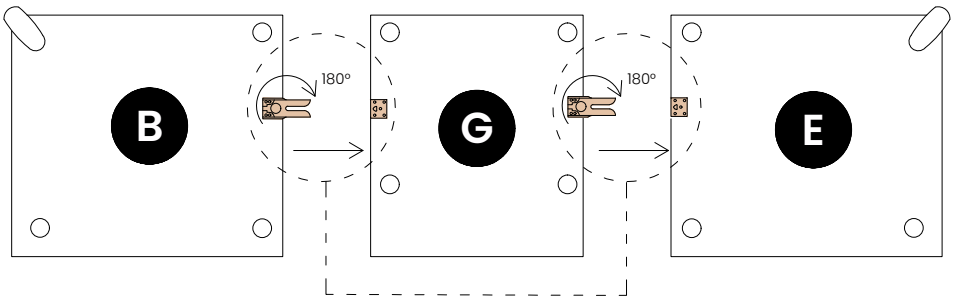

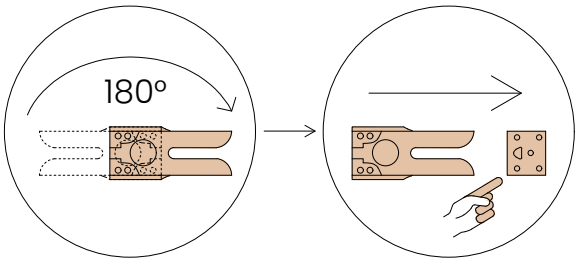

Rotate the clasp 180° outward and snap it into the corresponding slot in the direction of the arrow.

Care Guide: Fabric + Down-Filled Sofas

Air-Drying + Sunlight: Refreshing Your Sofa

Sustained exposure to high humidity may result in mold growth or lingering odors. On sunny days, move the cushions and removable components to a well-ventilated outdoor area for air-drying once a month (or every 2–3 months in arid climates). Avoid excessive direct sunlight to prevent fabric fading and the structural degradation of down clusters.

Limit direct sun exposure to 2–3 hours per session. While air-drying, gently pat the cushions to redistribute and loft the down filling.

CAUTION: Do not exceed 4 hours of direct sun exposure. Intensive UV rays and heat can cause fabric embrittlement or filling clumping.

Cleaning Instructions: Maintaining Freshness

If your sofa features removable covers (refer to your specific model's specifications), machine wash on a delicate cycle with mild detergent in cold water (max 30°C/86°F).

NOTICE: Do not tumble dry. A brief, low-speed spin cycle (1–2 minutes) is recom-mended for excess water extraction.

To ensure a perfect fit and prevent shrinkage, reinstall the covers while they are still slightly damp or immediately after air-drying.

Adhering to these care guidelines will ensure your down-filled sofa remains plush and exceptionally comfortable for years to come.

ModernMate

After-Sales Service Hotline: (800) 661-5928
Support Hours: Mon-Fri, 9:00 am-5:00 pm PST/PDT