


# ASSEMBLY INSTRUCTIONS

---

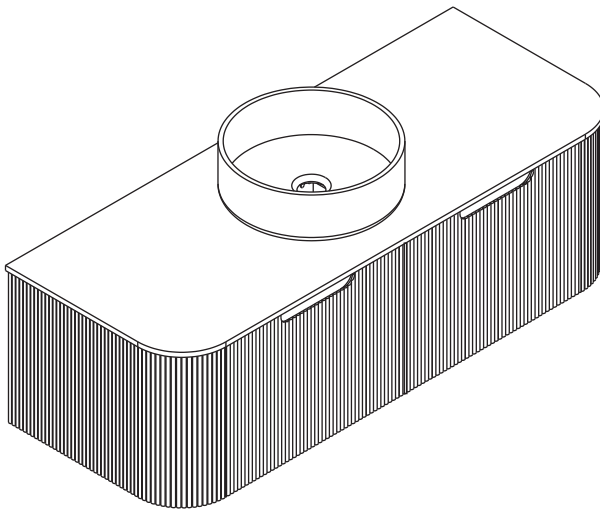


Bathroom Vanity

Notice:


- 1. Follow the installation instructions. Please confirm all accessories are preset before installation.
- 2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
- 3. If you encounter any problems during installation, please contact our customer service.
- 4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.



Recommended installers : 2

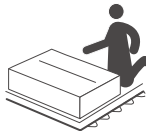

Put a carpet on the floor before unpacking


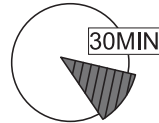


Estimate installation time:  
30 minutes


| Item no. | Reference Image | Qty |
|----------|-----------------|-----|
| A        |                 | x1  |
| B        |                 | x1  |
| C        |                 | x1  |
| 1        |                 | x4  |

| Item no. | Reference Image | Qty |
|----------|-----------------|-----|
| 2        |                 | x4  |
| 3        |                 | x4  |
| 4        |                 | x6  |
|          |                 |     |


# 1

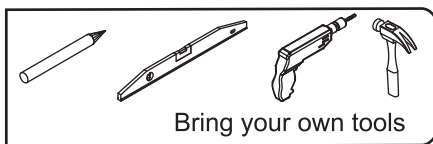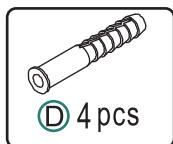

Solid color cabinet hanging  
hole size

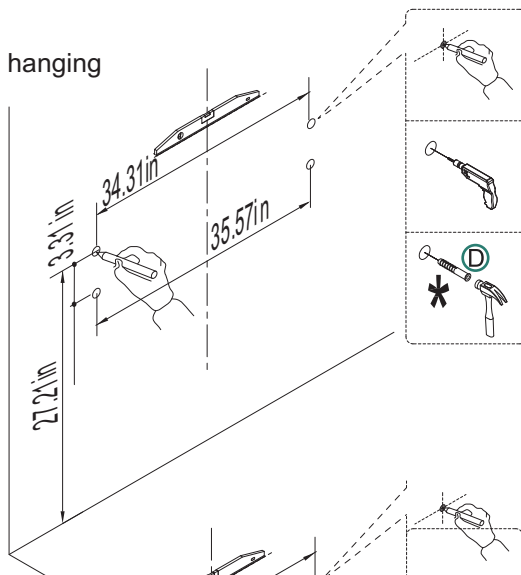


Wood grain cabinet hanging  
wall hole size

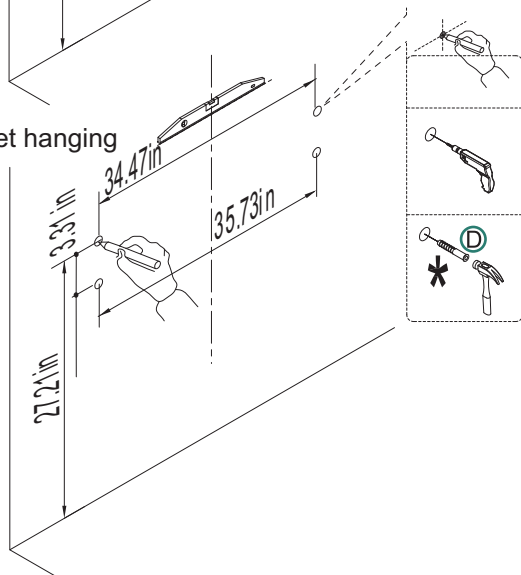

WARNING: To prevent tipping over, this product must be used with the included wall mounting device.

WARNING: Evaluate the suitability of the wall to ensure that the fixtures can withstand the forces that occur.


2






① 1pc



② 4pcs




③ 4pcs

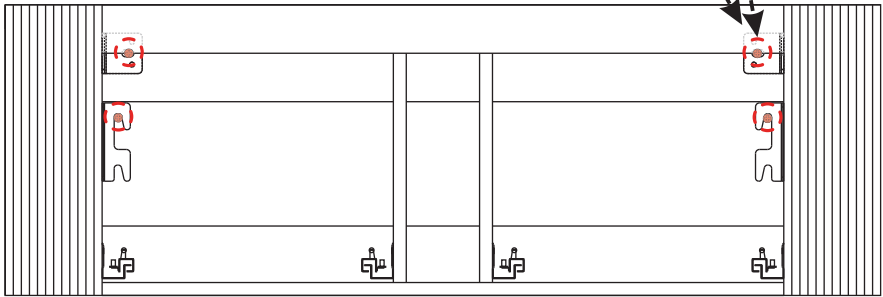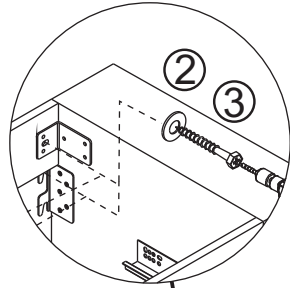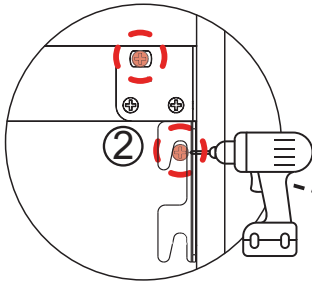


# 3



Ⓐ 1pc



Ⓑ 1pc

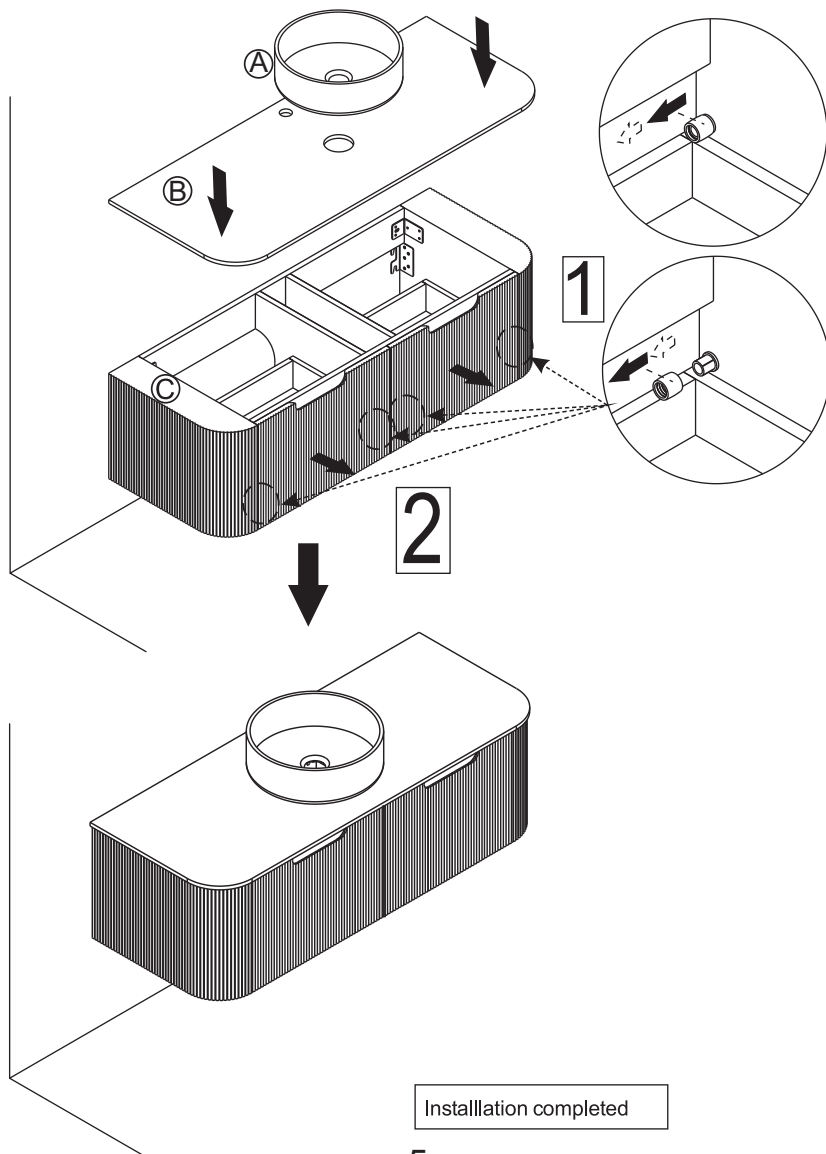



Installation completed

# 4

## Installation of drain assembly




Turn the screw at the bottom of the guide rail counterclockwise!

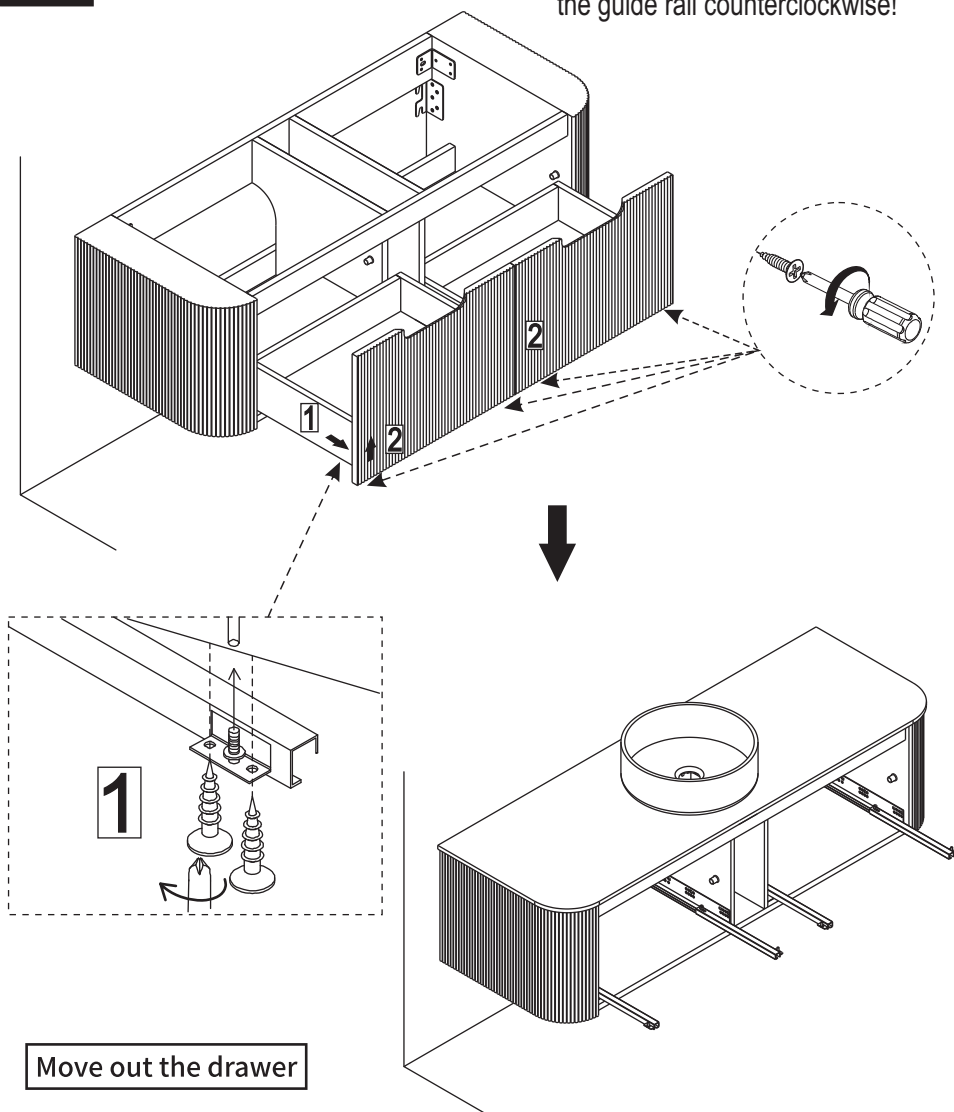

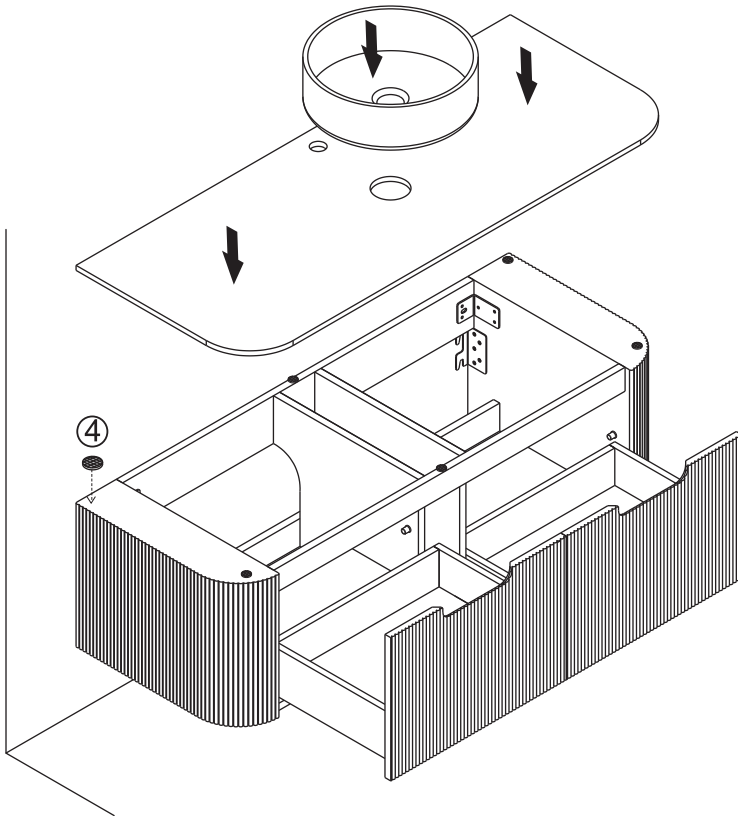

Installation of drain assembly

# 6

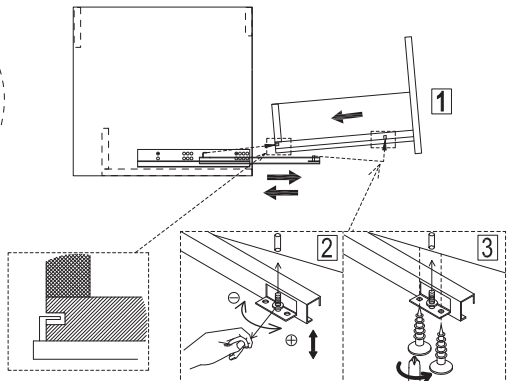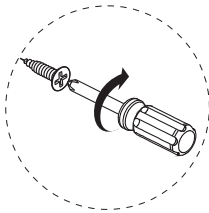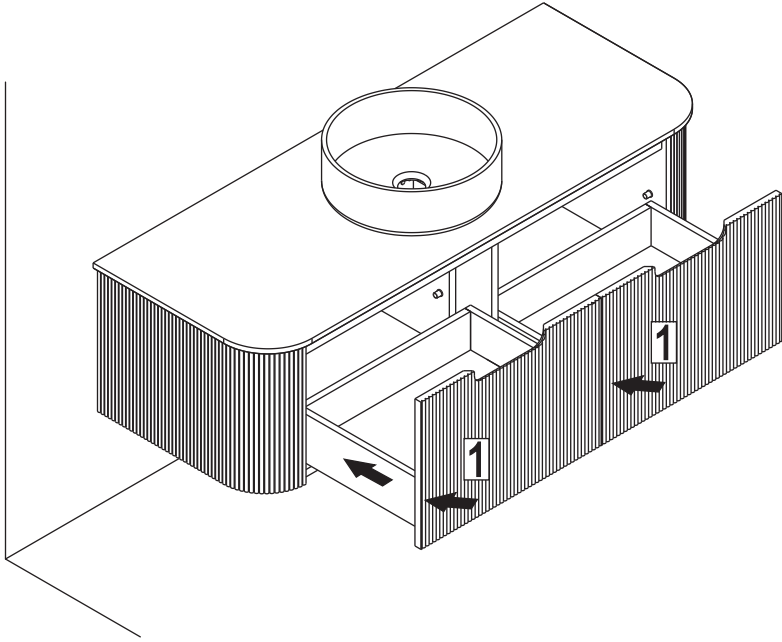

Installation completed