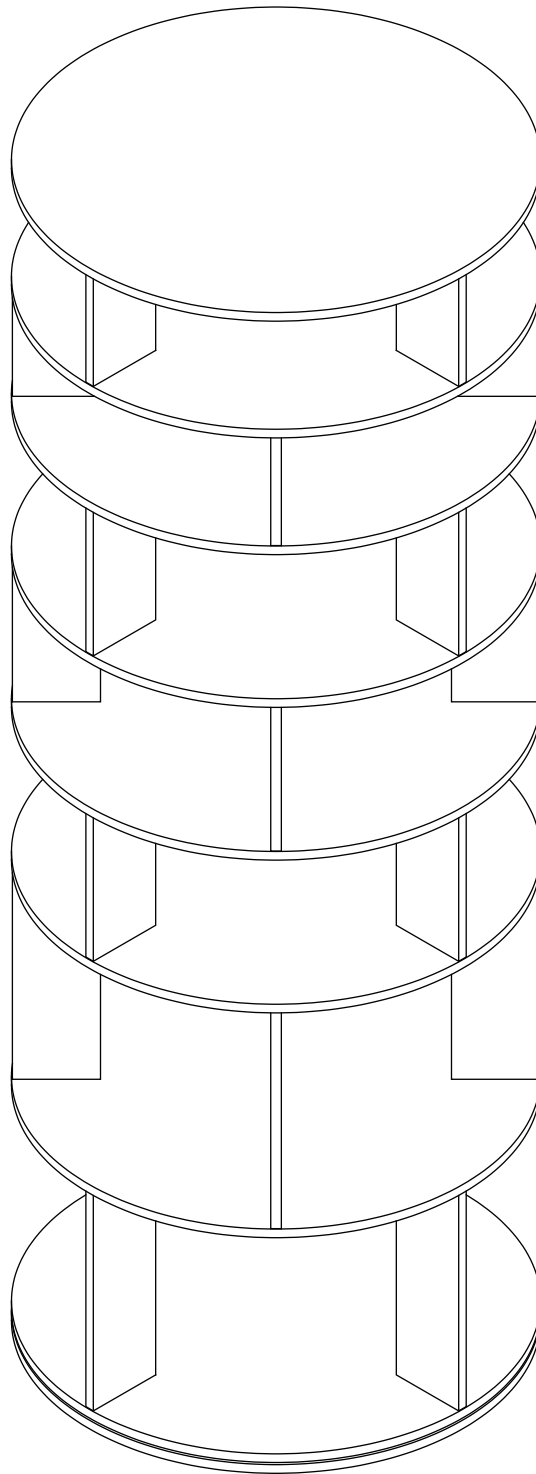
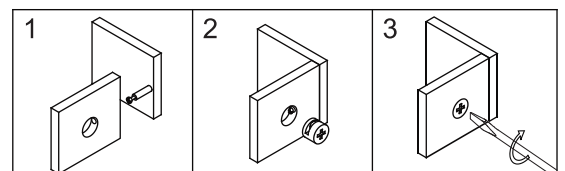


Shoe Cabinet


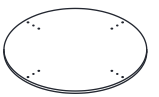



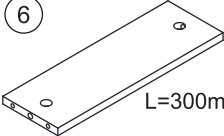
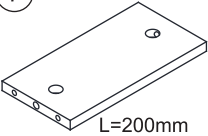
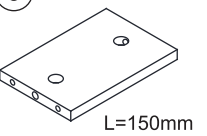



Installation Tips:

Please use a flat screwdriver to install the cam lock.






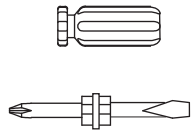


Package Contents: Parts

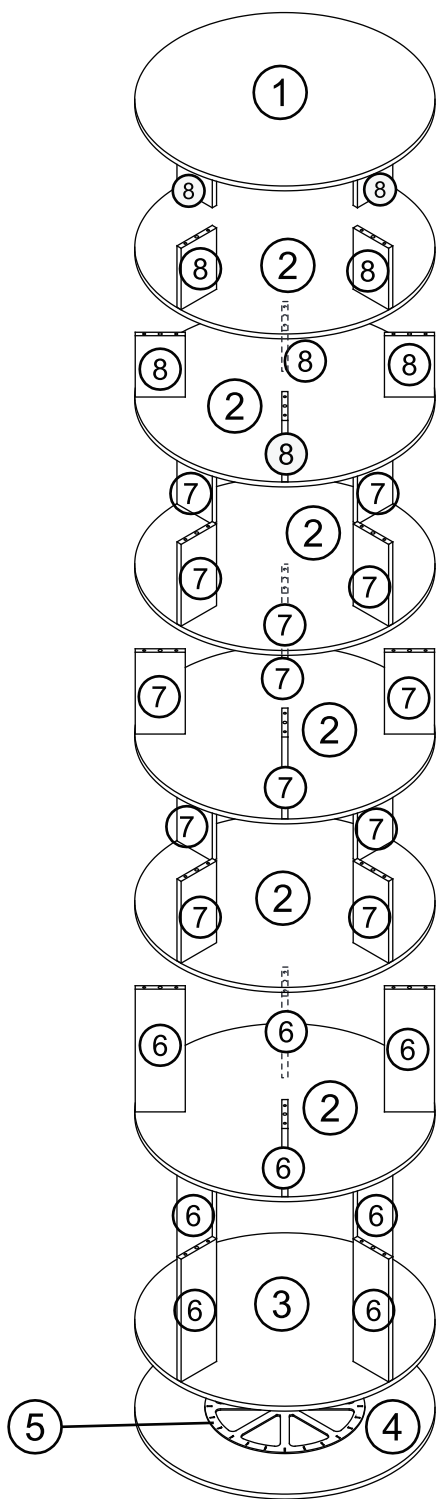 x1	 x6	 x1	 x1	 x1	 x8
 x12	 x8				


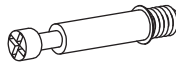


Package Contents: Hardware

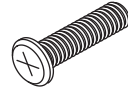 x56+2	 x56+2	 Ø6×30mm x112+2	 M6×20mm x1	 x56+2	
---	--	--	--	--	---



1

Screw (D) through (4) and (5) into the hole on (3).

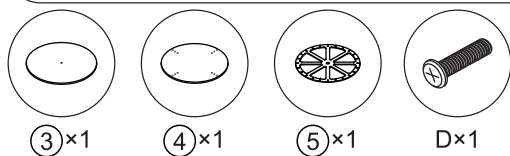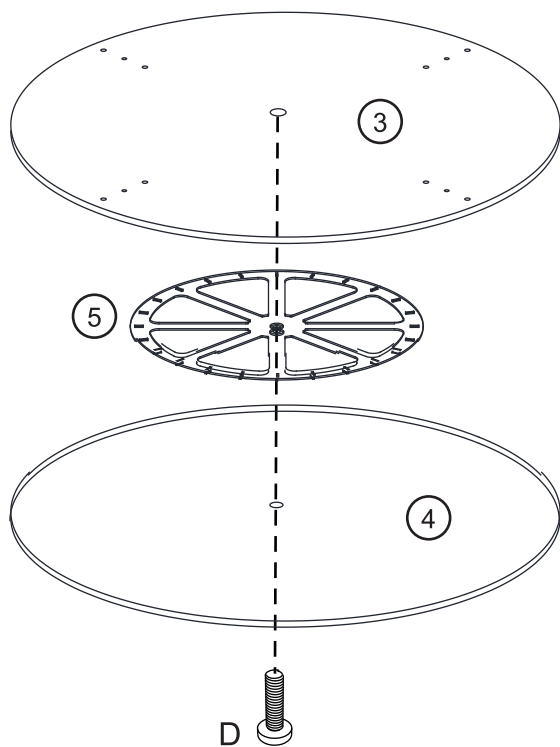



2

Insert (C) into the holes on the sides of (6), (7), and (8).

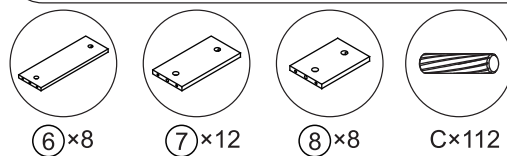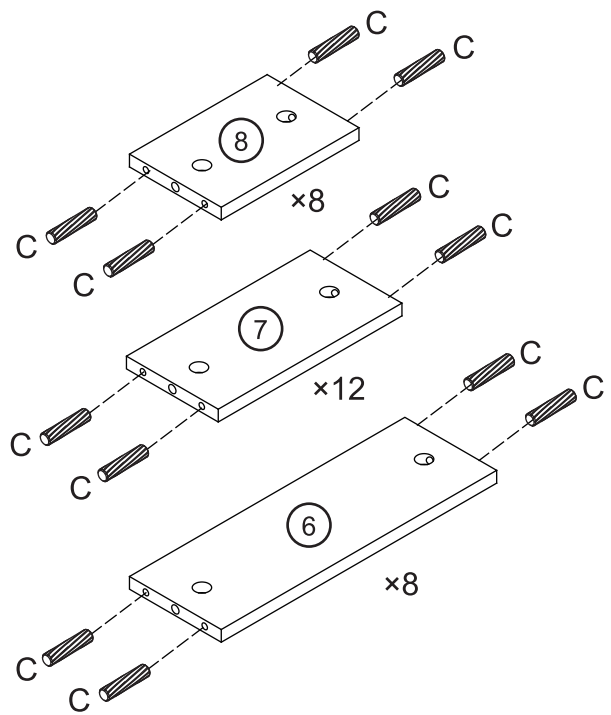



3

Screw (A) into the designated holes on (1) and (3).

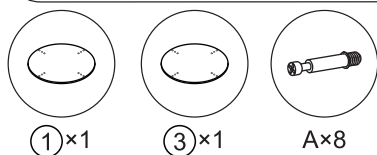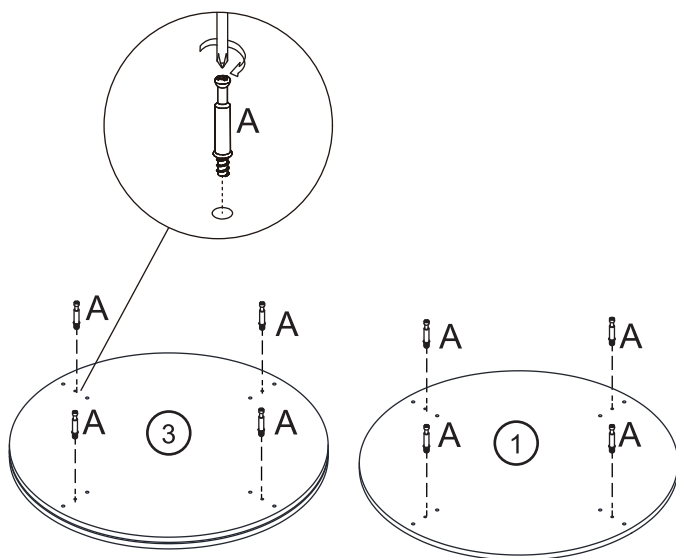



4

Screw (A) into the designated holes on (2). Flip (2) over and screw (A) into the holes on the back of (2).

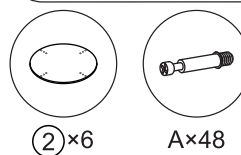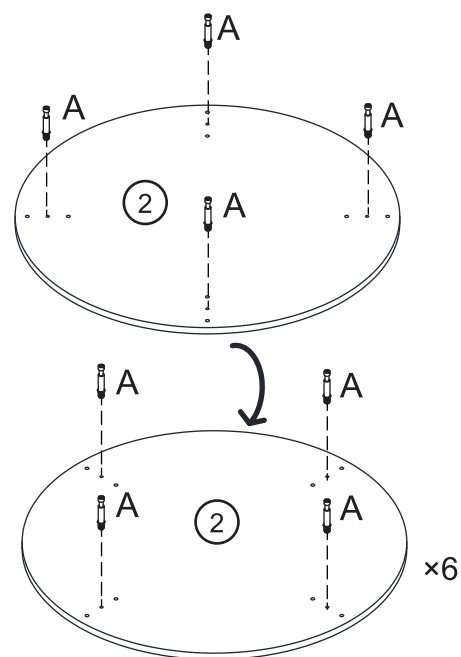

5


Connect (6) to (3) by screwing (B) into the designated holes on (6).

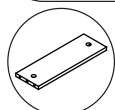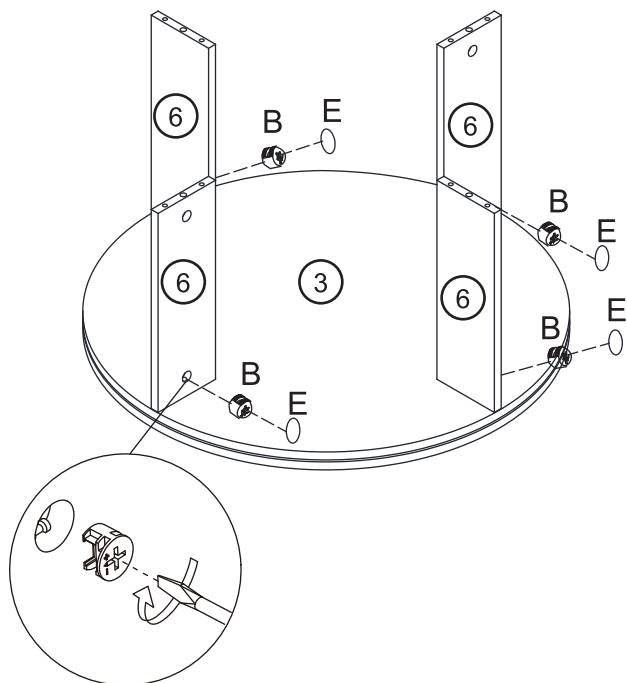

⑥×4





B×4

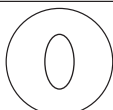

E×4

7


Connect (8) to (1) by screwing (B) into the designated holes on (8).

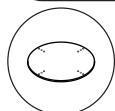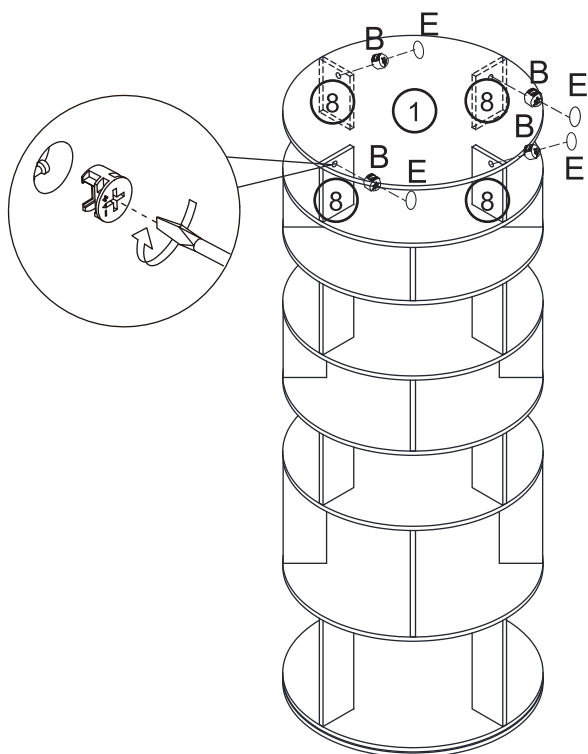

①×1





B×4

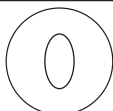

E×4

6


Connect (6) to (2) by screwing (B) into the designated holes on (6). Assemble the remaining shelves using the same method.

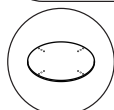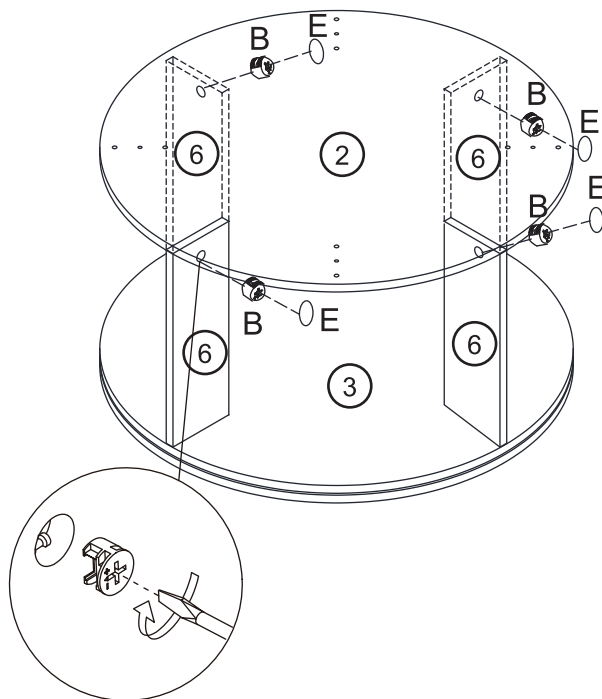

②×6



B×48

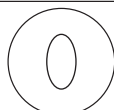

E×48

8

The height of each shelf is customizable by swapping (6), (7), (8). For example, you can install (6) on the top as a higher shelf and (7), (8) on the bottom as a shorter shelf to suit your shoe storage needs.

