
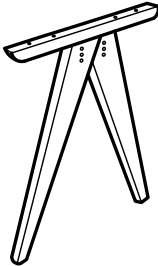
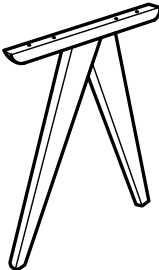
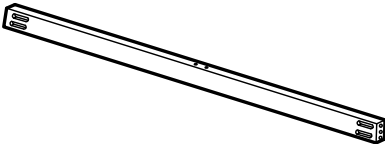


# ASSEMBLY INSTRUCTION FOR ACME FURNITURE


## MODEL#DN02371

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\* Do not fully tighten screws until fully assembled \*\*\*

|             | COMPONENT PARTS                                                                                        |           |
|-------------|--------------------------------------------------------------------------------------------------------|-----------|
| DESCRIPTION | PART NAME                                                                                              | QTY (PCS) |
| ①           | TABLE TOP<br>        | 1         |
| ②A          | LEFT SIDE LEG<br>   | 1         |
| ②B          | RIGHT SIDE LEG<br> | 1         |
| ③           | APRON<br>          | 2         |

# HARDWARE REQUIRED

|   |                                                                                     |                 |            |       |
|---|-------------------------------------------------------------------------------------|-----------------|------------|-------|
| Ⓐ |    | BOLT            | M8 x 50mm  | 8 PCS |
| Ⓑ |    | BOLT            | M6 x 50mm  | 8 PCS |
| Ⓒ |    | SPRING WASHER   | 5/16"      | 8 PCS |
| Ⓓ |    | FLAT WASHER     | 5/16"      | 8 PCS |
| Ⓔ |    | WOOD DOWEL      | M8 x 30mm  | 4 PCS |
| Ⓕ |    | CHIPBOARD SCREW | M4 x 38mm  | 4 PCS |
| Ⓖ |  | ALLEN KEY       | M4 x 100mm | 1 PC  |
| Ⓗ |  | ALLEN KEY       | M5         | 1 PC  |




## Attention


\*\*\* Some number parts listed on the instruction sheet may not to be in parts bag as they already be assembled. Carefully check parts and packing materials prior to ordering replacements.

# How to assemble :


## STEP 1

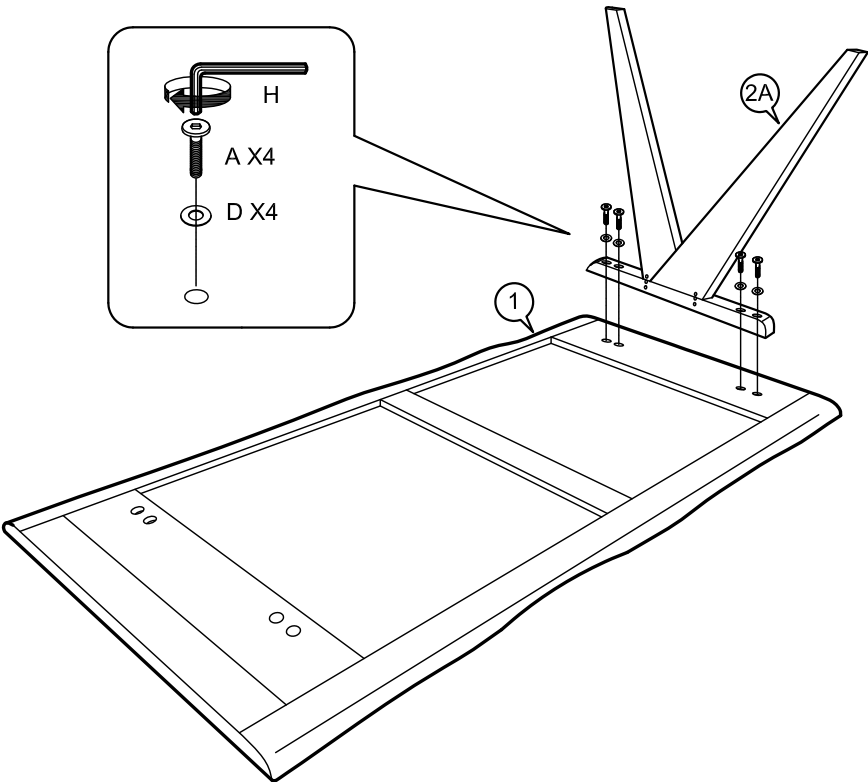

## STEP 2

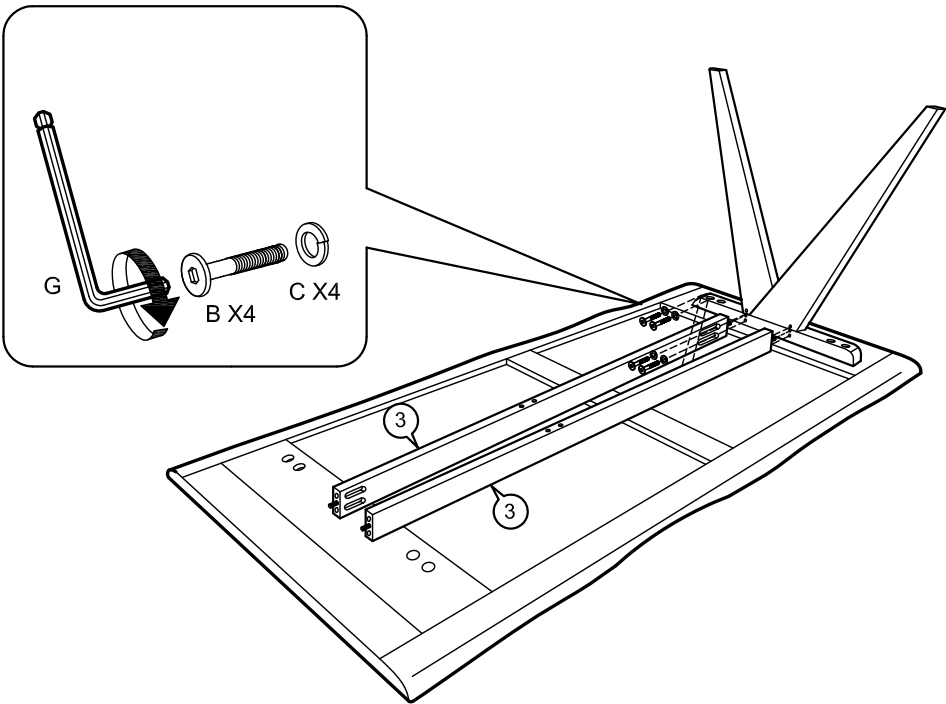

### STEP 3

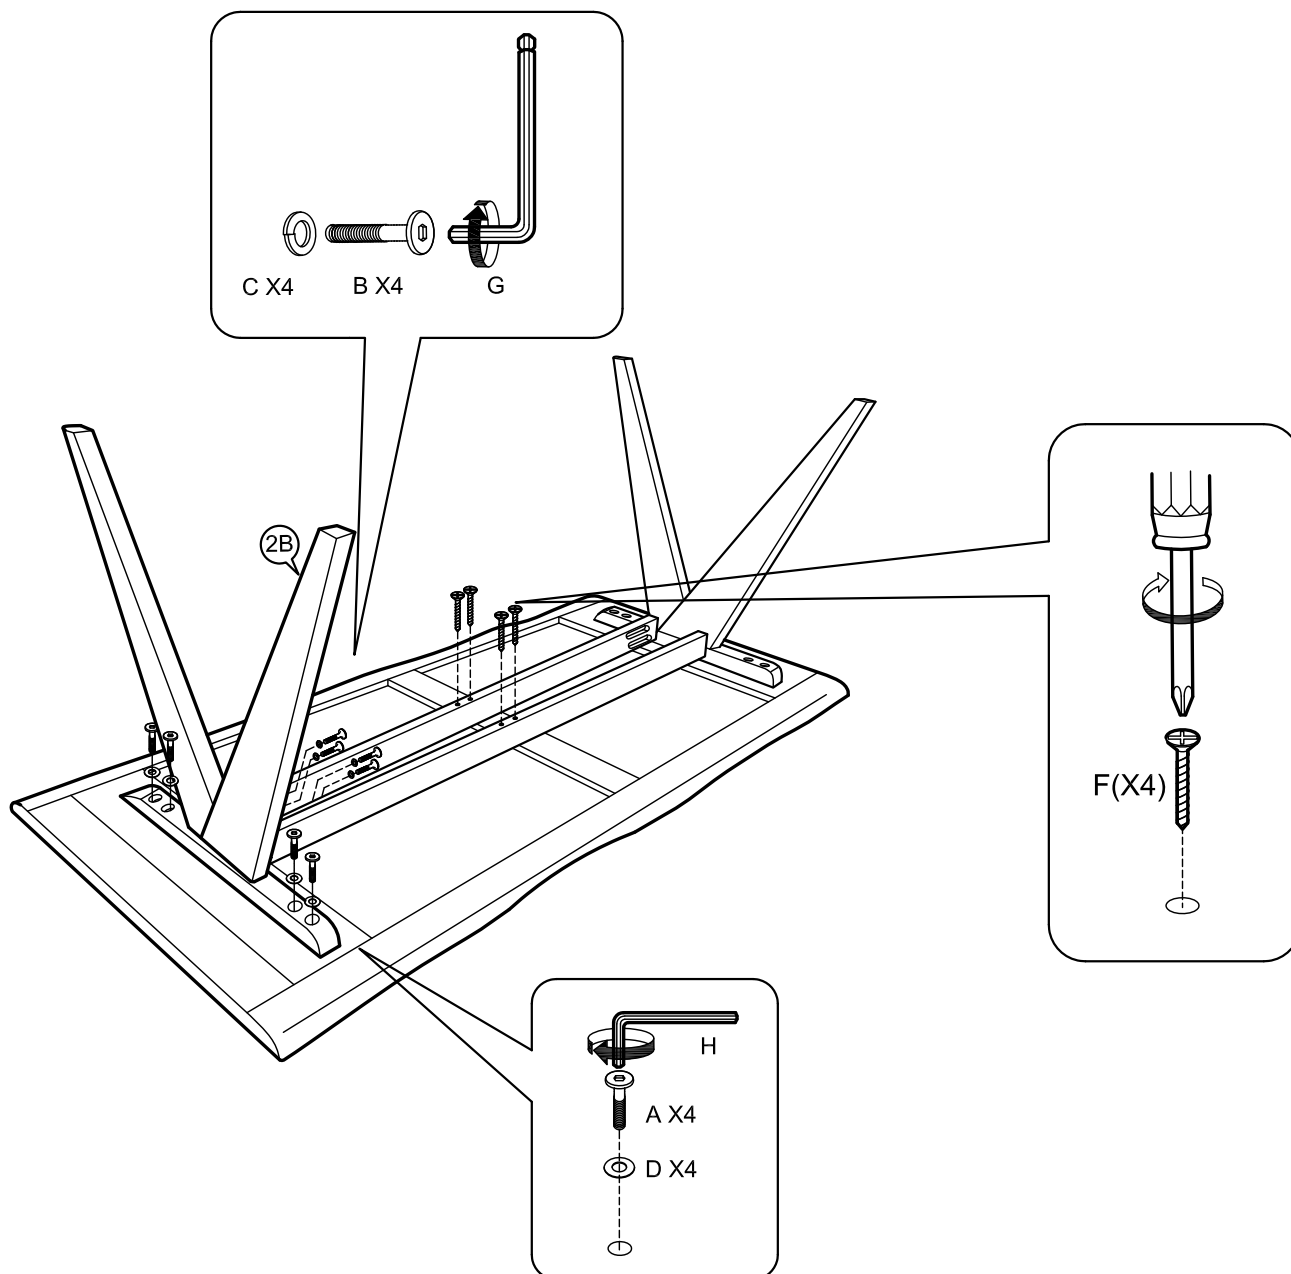

### STEP 4









# **ASSEMBLY INSTRUCTION FOR ACME FURNITURE**



## **MODEL#DN02372**


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\* Do not fully tighten screws until fully assembled \*\*\*
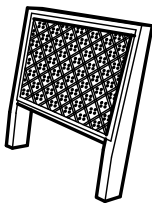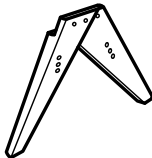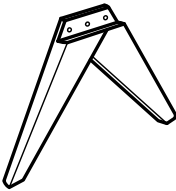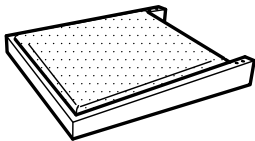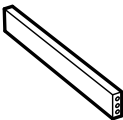
|             | COMPONENT PARTS                                                                                        |           |
|-------------|--------------------------------------------------------------------------------------------------------|-----------|
| DESCRIPTION | PART NAME                                                                                              | QTY (PCS) |
| ①           | CHAIR BACK<br>       | 2         |
| ②A          | LEFT SIDE LEG<br>   | 2         |
| ②B          | RIGHT SIDE LEG<br> | 2         |
| ③           | SEAT<br>           | 2         |
| ④           | APRON - LONG<br>   | 2         |
| ⑤           | APRON - SHORT<br>  | 2         |

# HARDWARE REQUIRED

|   |                                                                                     |               |            |        |
|---|-------------------------------------------------------------------------------------|---------------|------------|--------|
| Ⓐ |    | BOLT          | M6 x 35mm  | 12 PCS |
| Ⓑ |    | BOLT          | M6 x 50mm  | 8 PCS  |
| Ⓒ |    | BOLT          | M8 x 100mm | 8 PCS  |
| Ⓓ |    | BARREL NUT    | M8 x 55mm  | 4 PCS  |
| Ⓔ |    | SPRING WASHER | 5/16"      | 8 PCS  |
| Ⓕ |    | FLAT WASHER   | M6 x 13mm  | 12 PCS |
| Ⓖ |  | WOOD DOWEL    | M8 x 30mm  | 16 PCS |
| Ⓗ |  | WOOD BUTTON   | Ø13.5 x 9  | 4 PCS  |
| Ⓘ |  | ALLEN KEY     | M4 x 100mm | 1 PC   |
| Ⓙ |  | ALLEN KEY     | M5         | 1 PC   |

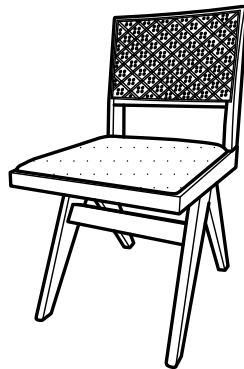


## Attention

\*\*\* Some number parts listed on the instruction sheet may not to be in parts bag as they already be assembled. Carefully check parts and packing materials prior to ordering replacements.


# How to assemble :

## STEP 1

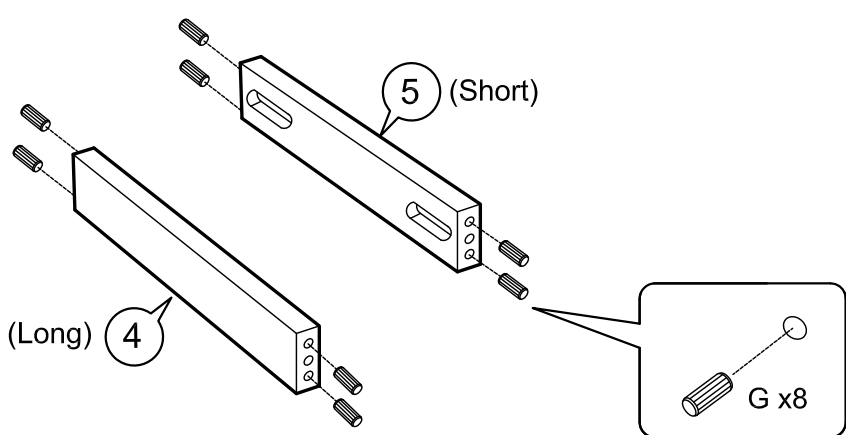


(x2)

## STEP 2

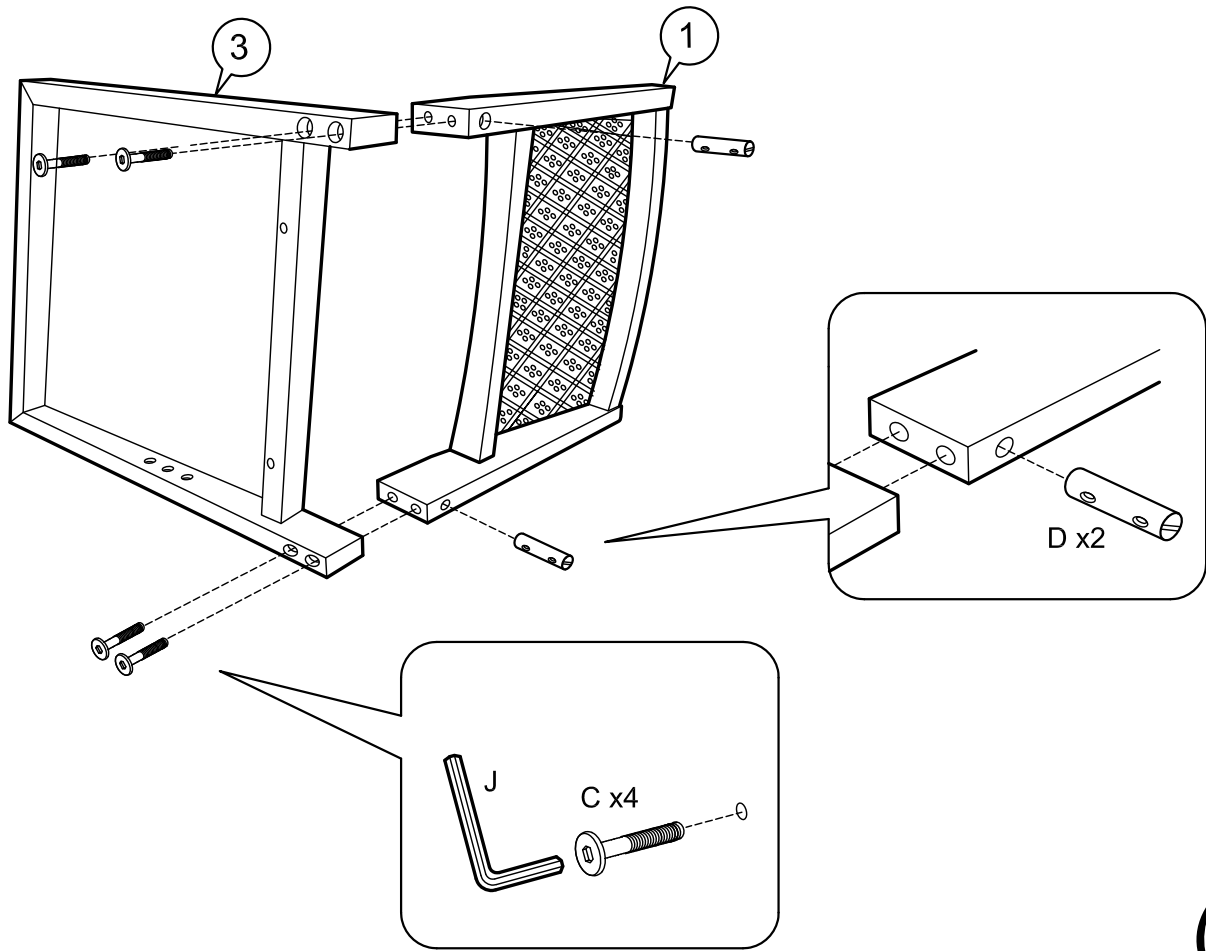


(x2)

STEP 3


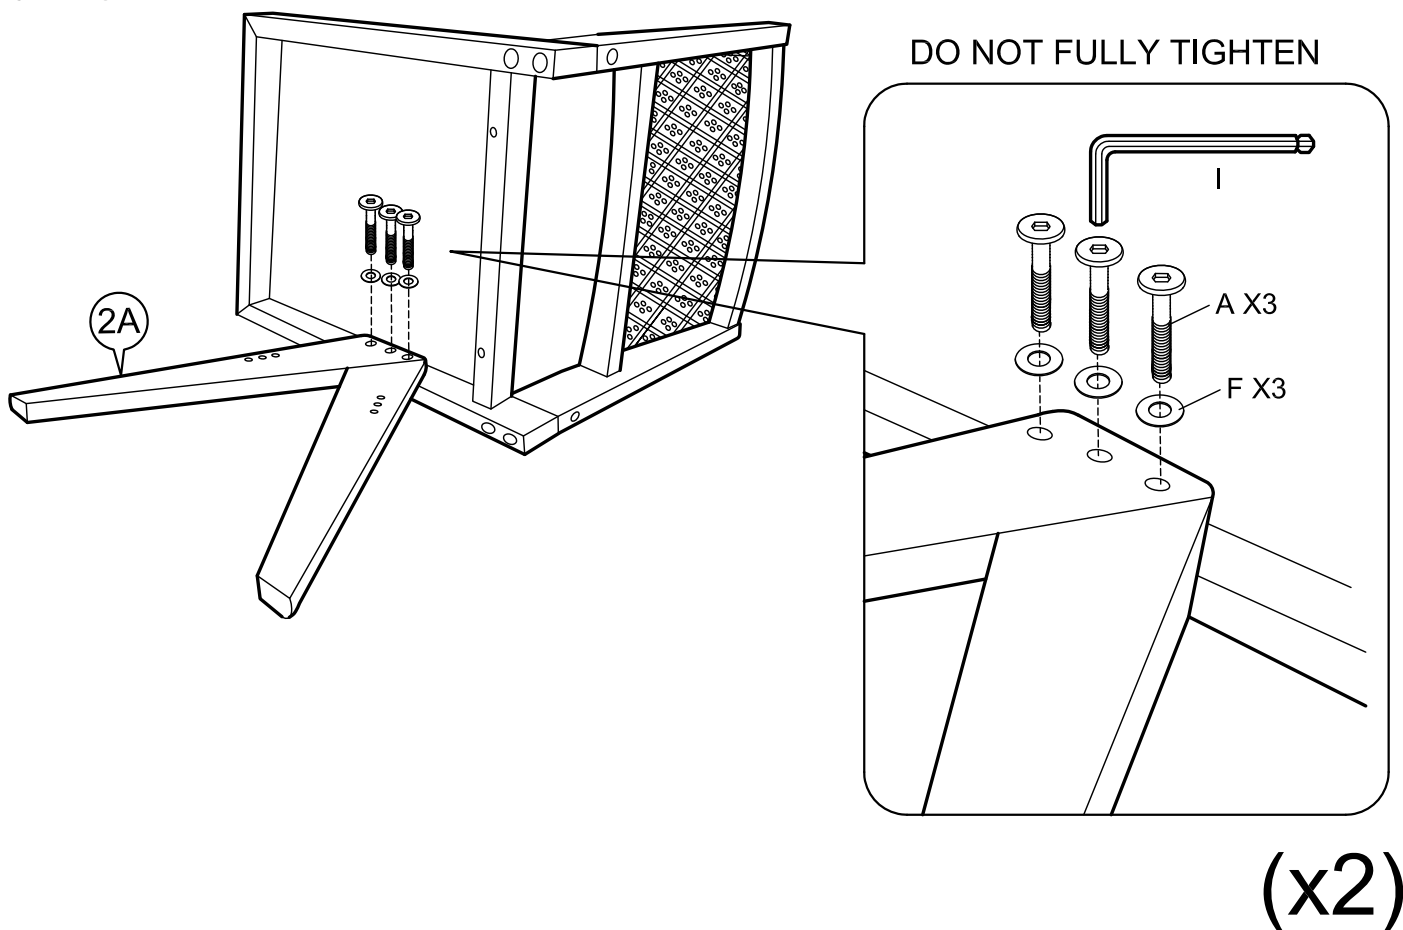


STEP 4

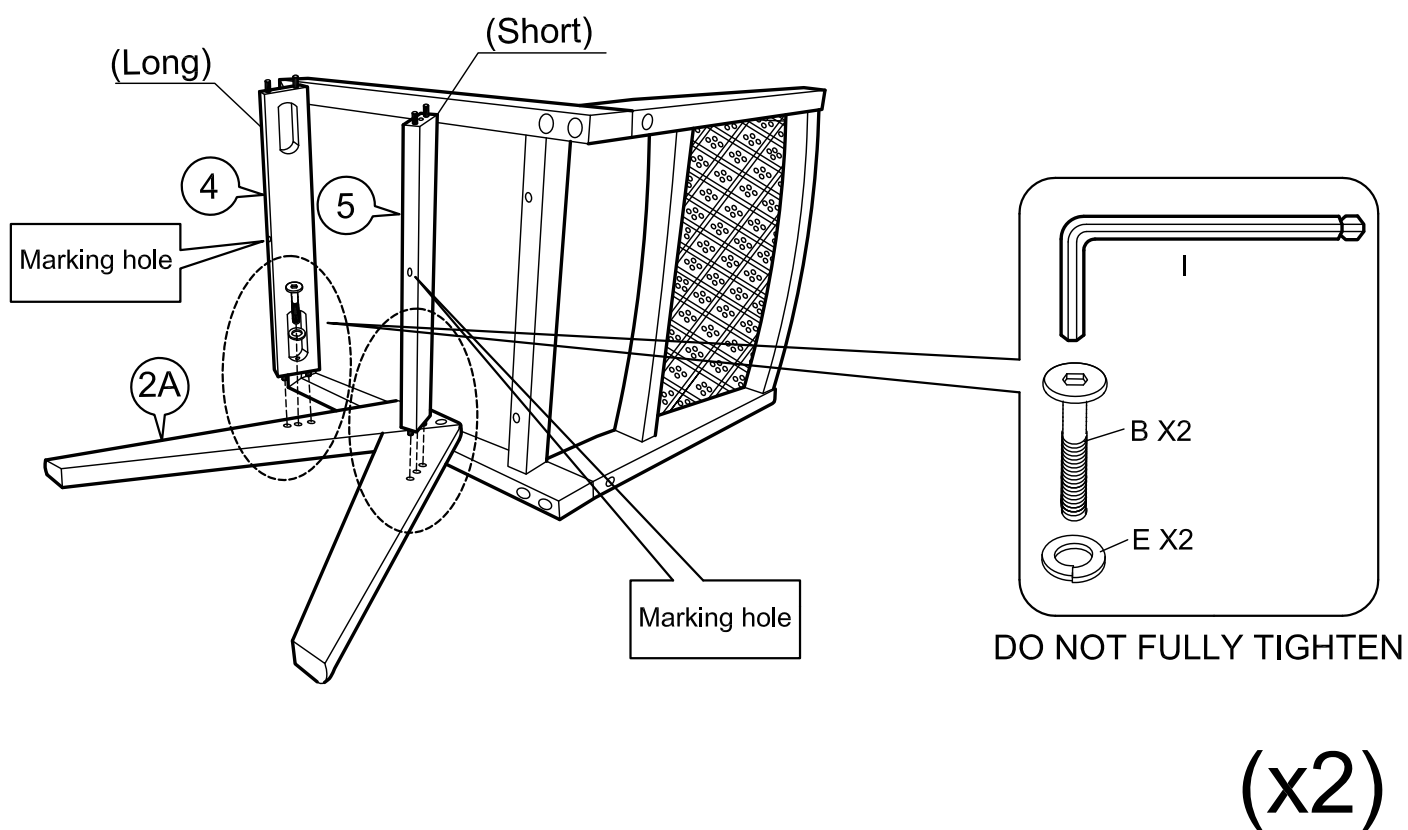





STEP 5

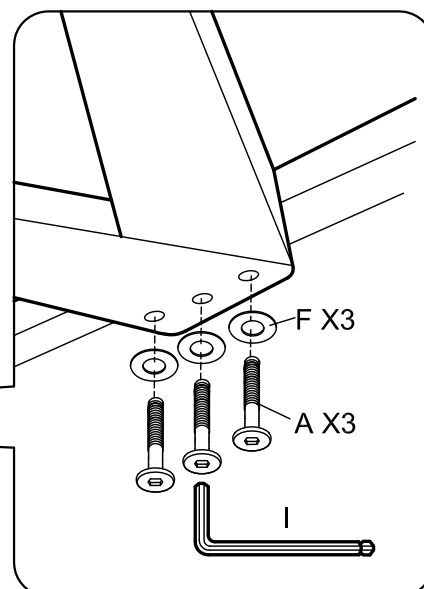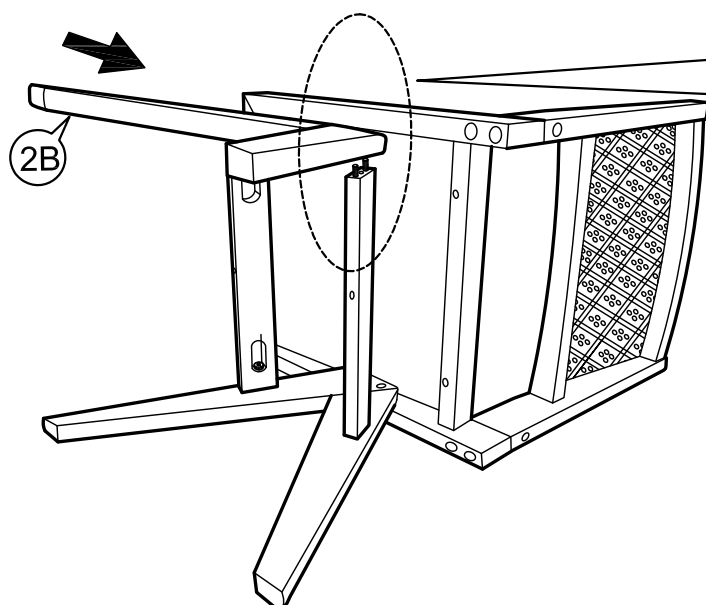

DO NOT FULLY TIGHTEN

(x2)


STEP 6

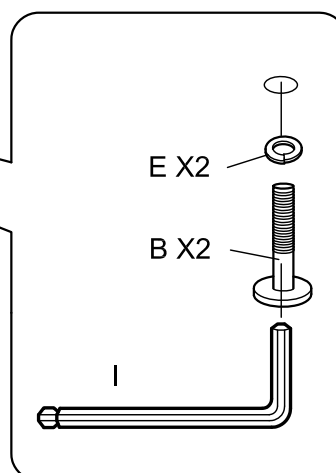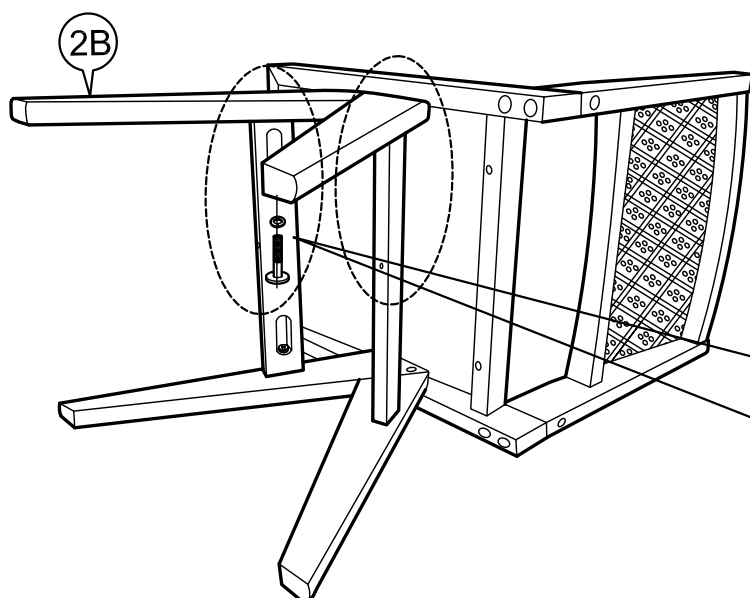

DO NOT FULLY TIGHTEN


(x2)

STEP 7

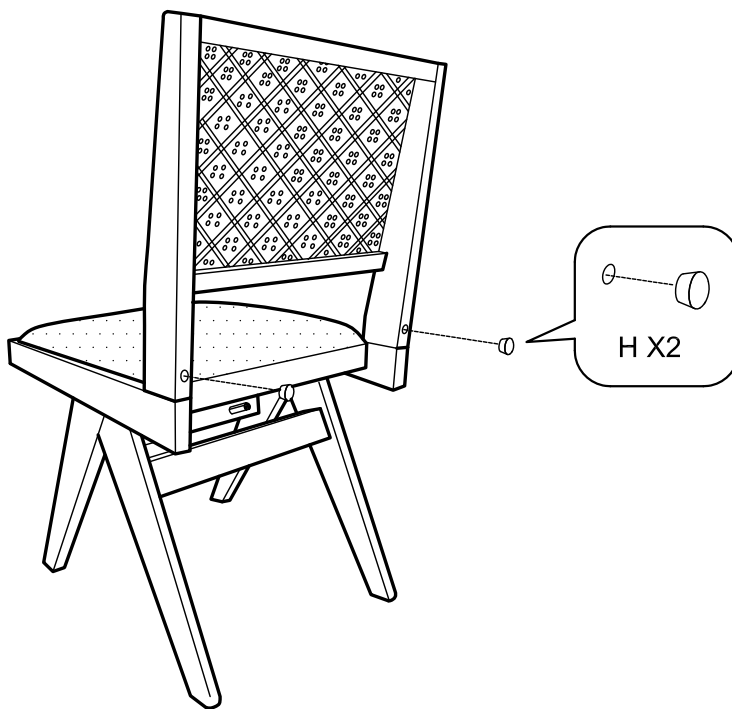

(x2)

STEP 8

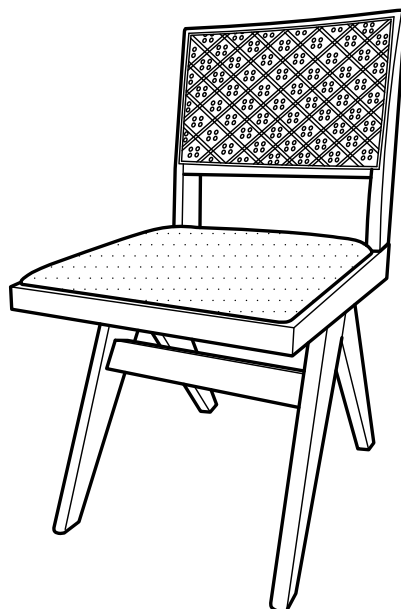

FULLY TIGHTEN ALL BOLTS






(x2)

# ASSEMBLY INSTRUCTION FOR ACME FURNITURE


## MODEL#DN02373


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\* Do not fully tighten screws until fully assembled \*\*\*
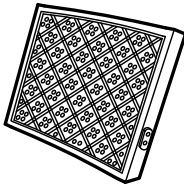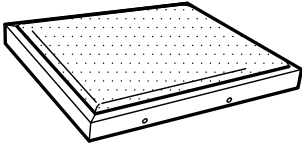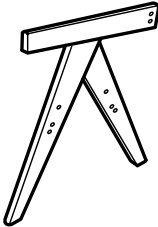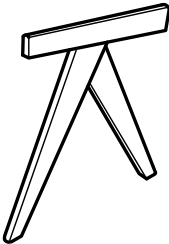
|             | COMPONENT PARTS                                                                                        |           |
|-------------|--------------------------------------------------------------------------------------------------------|-----------|
| DESCRIPTION | PART NAME                                                                                              | QTY (PCS) |
| ①           | CHAIR BACK<br>       | 2         |
| ②           | SEAT<br>            | 2         |
| ③           | LEFT SIDE LEG<br>  | 2         |
| ④           | RIGHT SIDE LEG<br> | 2         |
| ⑤           | APRON<br>          | 4         |

# HARDWARE REQUIRED

|     |                                                                                   |               |            |        |
|-----|-----------------------------------------------------------------------------------|---------------|------------|--------|
| (A) |  | BOLT          | M6 x 50mm  | 24 PCS |
| (B) |  | SPRING WASHER | 5/16"      | 8 PCS  |
| (C) |  | FLAT WASHER   | M6 x 13mm  | 16 PCS |
| (D) |  | WOOD DOWEL    | M8 x 30mm  | 8 PCS  |
| (E) |  | ALLEN KEY     | M4 x 100mm | 1 PC   |

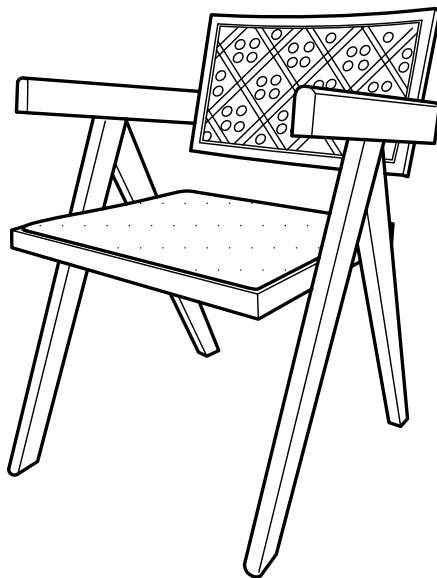


Attention

\*\*\* Some number parts listed on the instruction sheet may not to be in parts bag as they already be assembled. Carefully check parts and packing materials prior to ordering replacements.


# How to assemble :

## STEP 1

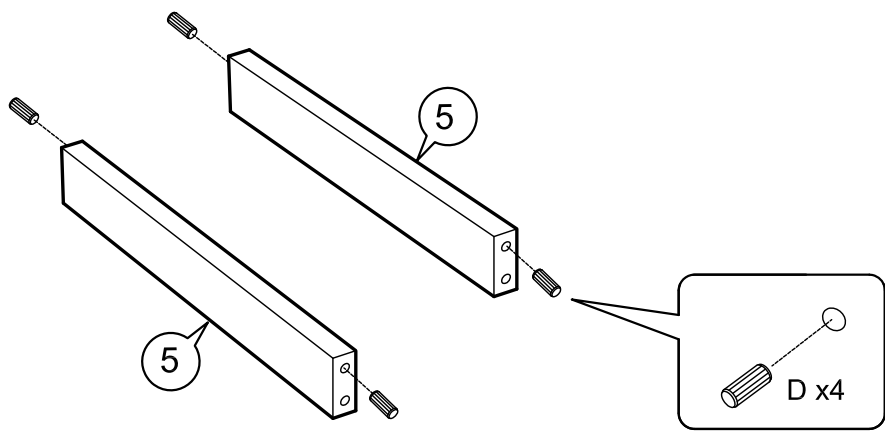

(x2)


## STEP 2

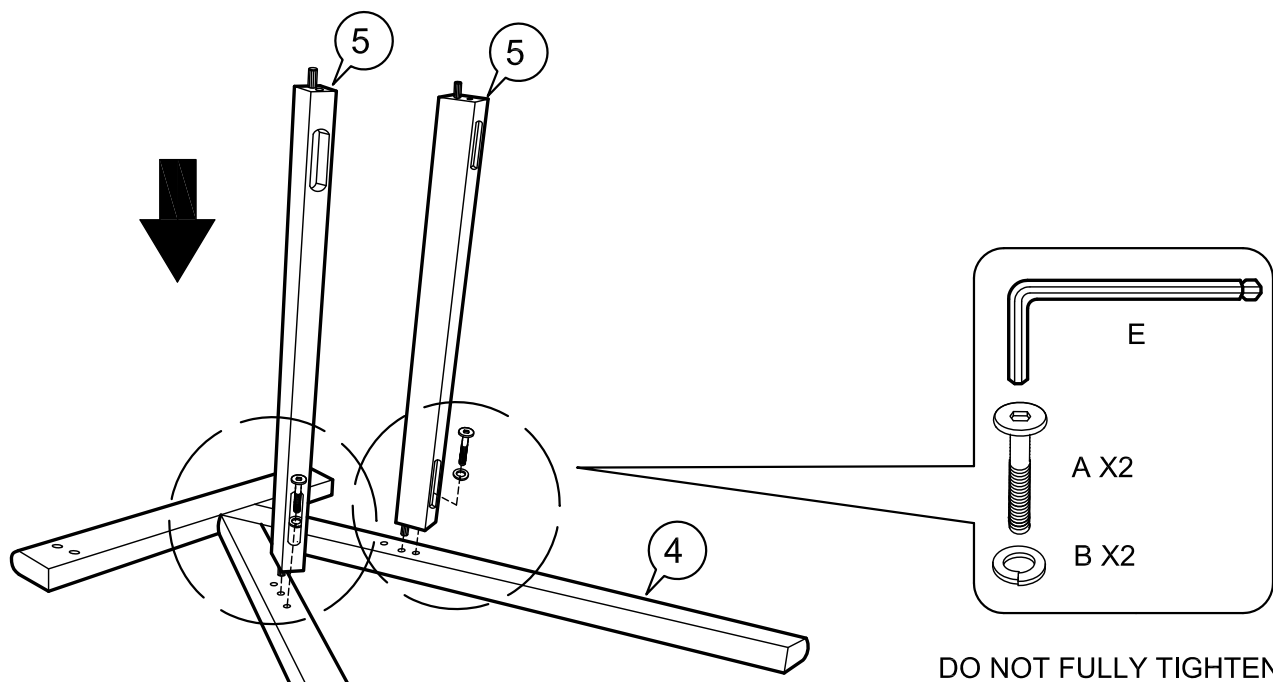


(x2)

STEP 3


DO NOT FULLY TIGHTEN

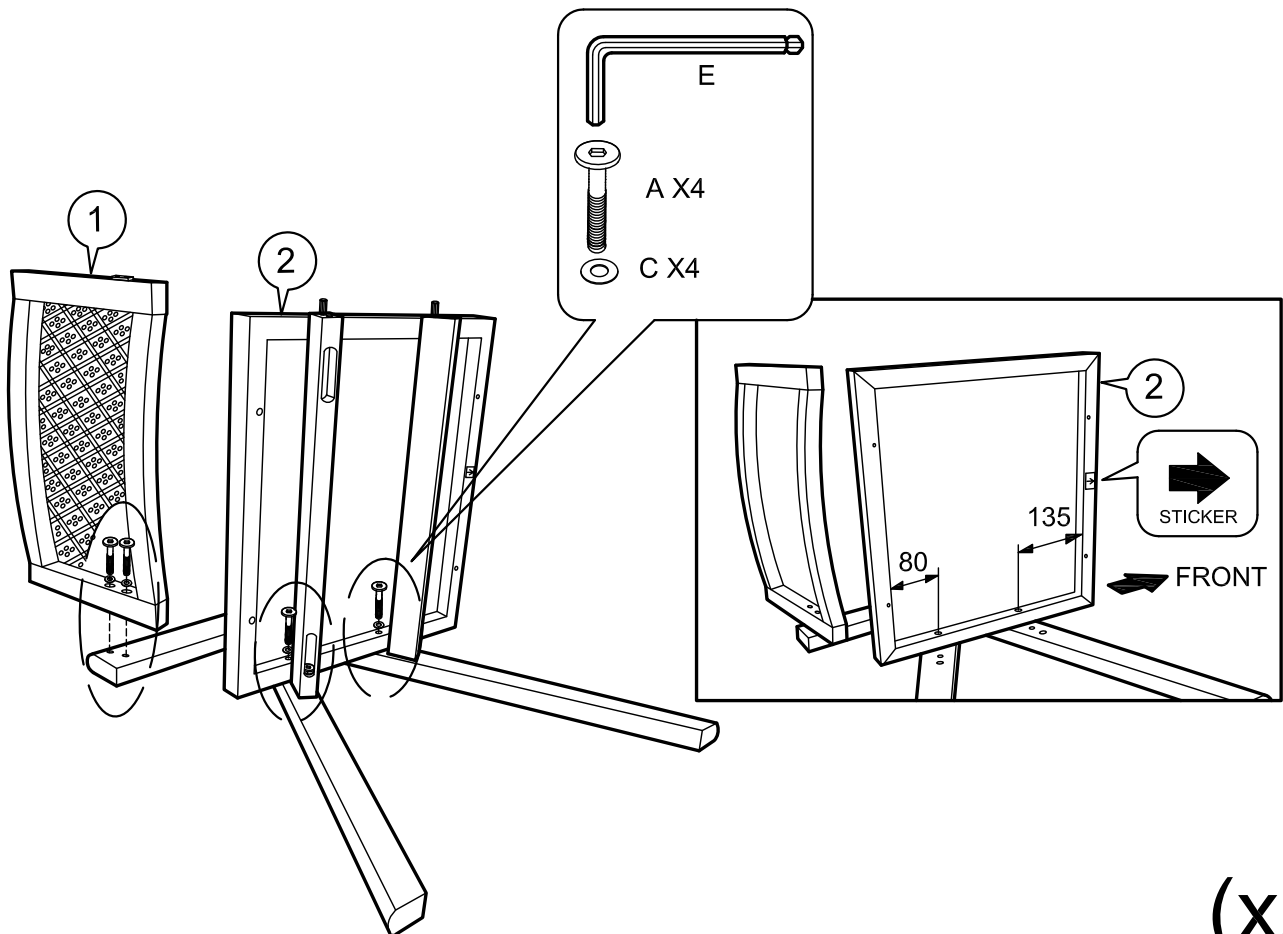

STEP 4

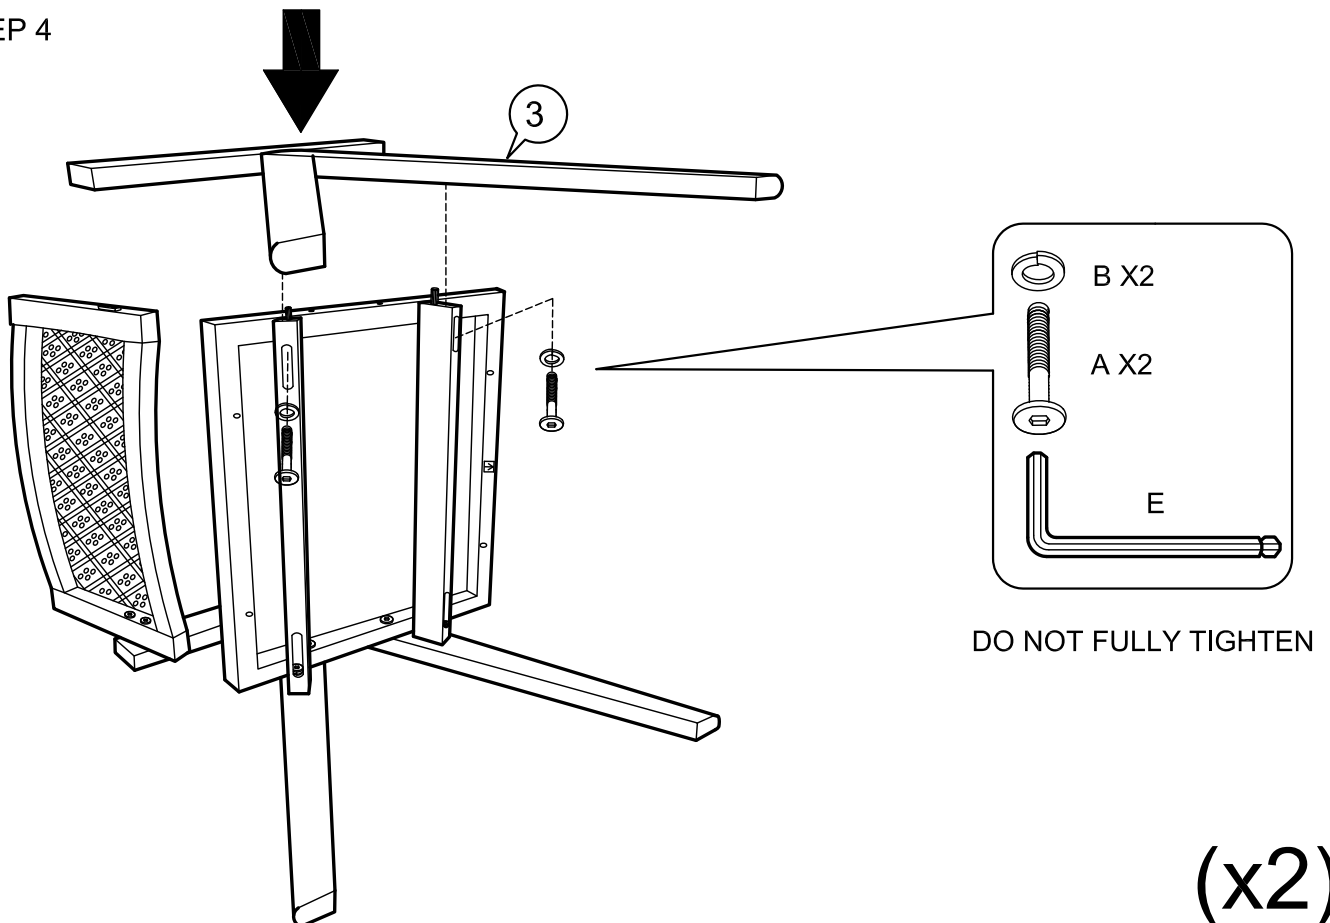


STEP 5

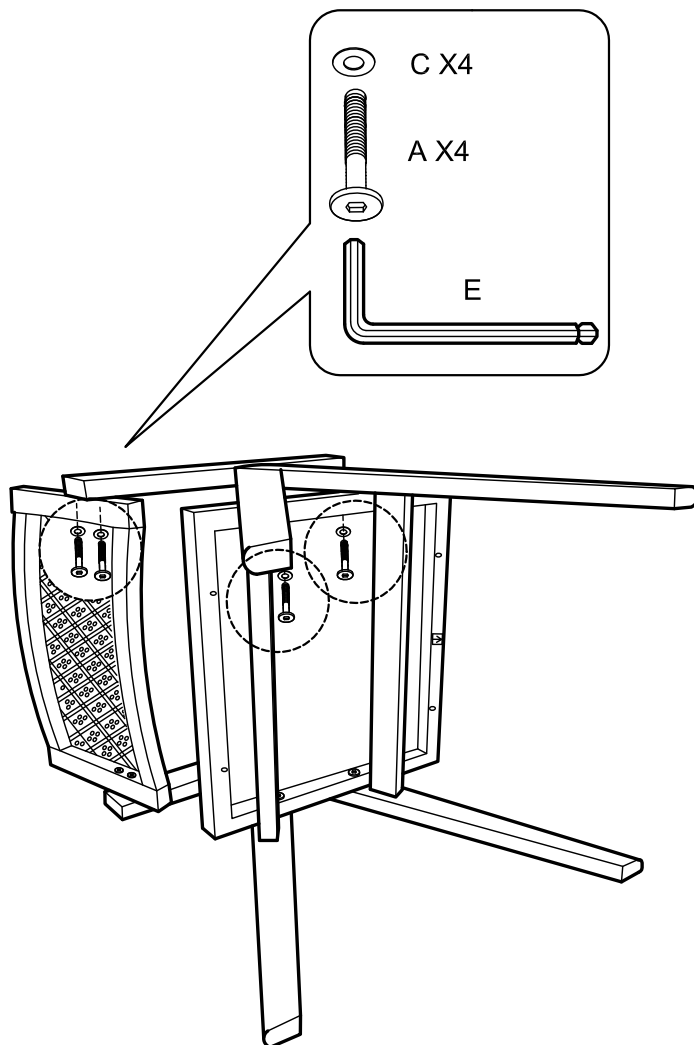

(x2)

STEP 6

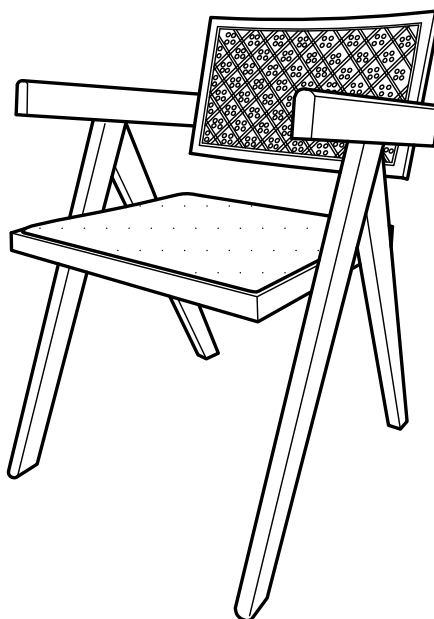

FULLY TIGHTEN ALL BOLTS





(x2)

# **ASSEMBLY INSTRUCTION FOR ACME FURNITURE**

## **MODEL#DN02374**


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.


\*\*\* Do not fully tighten screws until fully assembled \*\*\*
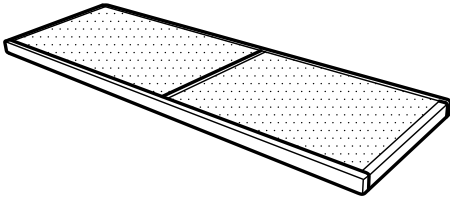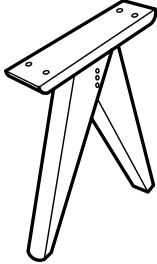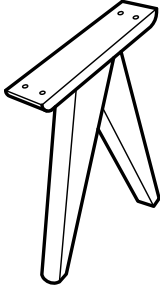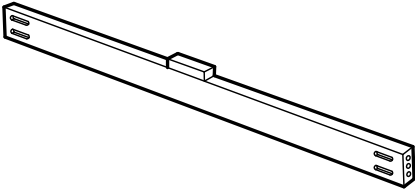
|             | COMPONENT PARTS                                                                                        |           |
|-------------|--------------------------------------------------------------------------------------------------------|-----------|
| DESCRIPTION | PART NAME                                                                                              | QTY (PCS) |
| ①           | SEAT<br>             | 1         |
| ②A          | LEFT SIDE LEG<br>   | 1         |
| ②B          | RIGHT SIDE LEG<br> | 1         |
| ③           | BOTTOM RAIL<br>    | 1         |



# HARDWARE REQUIRED

|   |                                                                                   |               |            |       |
|---|-----------------------------------------------------------------------------------|---------------|------------|-------|
| Ⓐ |  | BOLT          | M6 x 30mm  | 8 PCS |
| Ⓑ |  | BOLT          | M6 x 50mm  | 4 PCS |
| Ⓒ |  | SPRING WASHER | 5/16"      | 4 PCS |
| Ⓓ |  | FLAT WASHER   | M6 x 13mm  | 8 PCS |
| Ⓔ |  | WOOD DOWEL    | M8 x 30mm  | 2 PCS |
| Ⓕ |  | ALLEN KEY     | M4 x 100mm | 1 PC  |

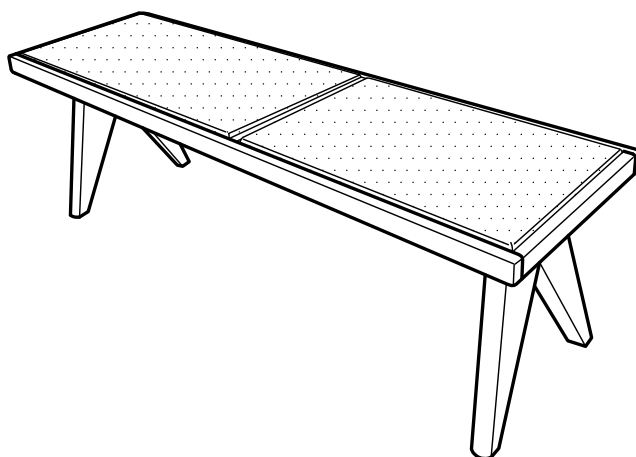


## Attention


\*\*\* Some number parts listed on the instruction sheet may not to be in parts bag as they already be assembled. Carefully check parts and packing materials prior to ordering replacements.

# How to assemble :


## STEP 1

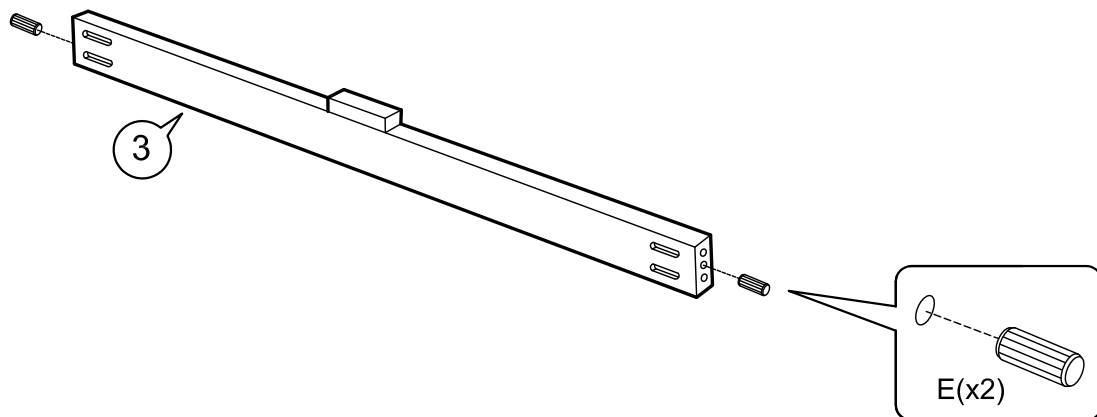


## STEP 2

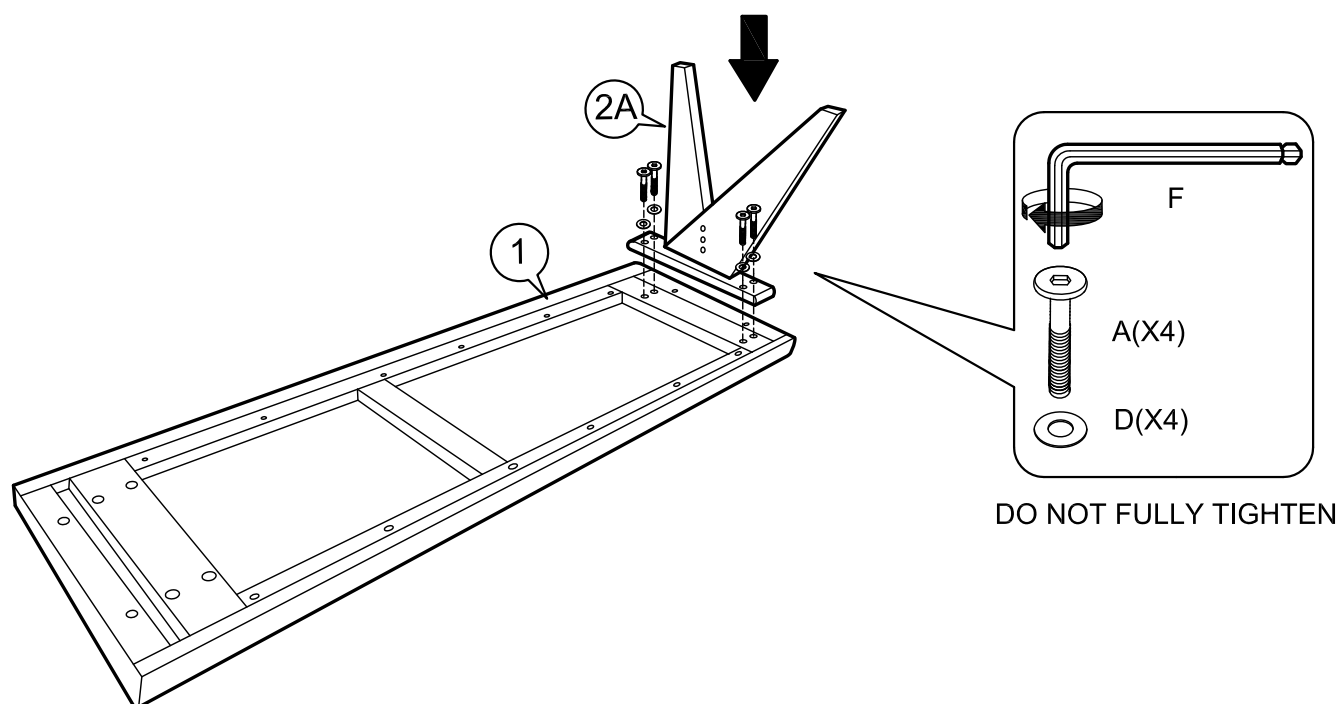

### STEP 3

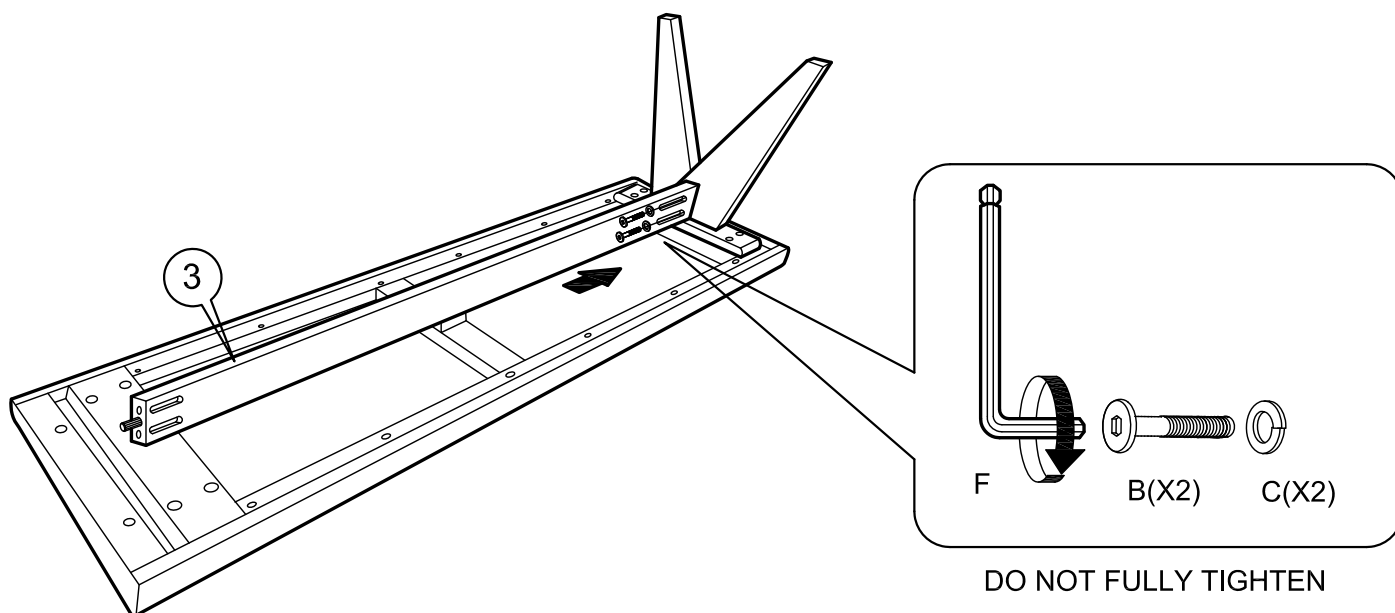

### STEP 4

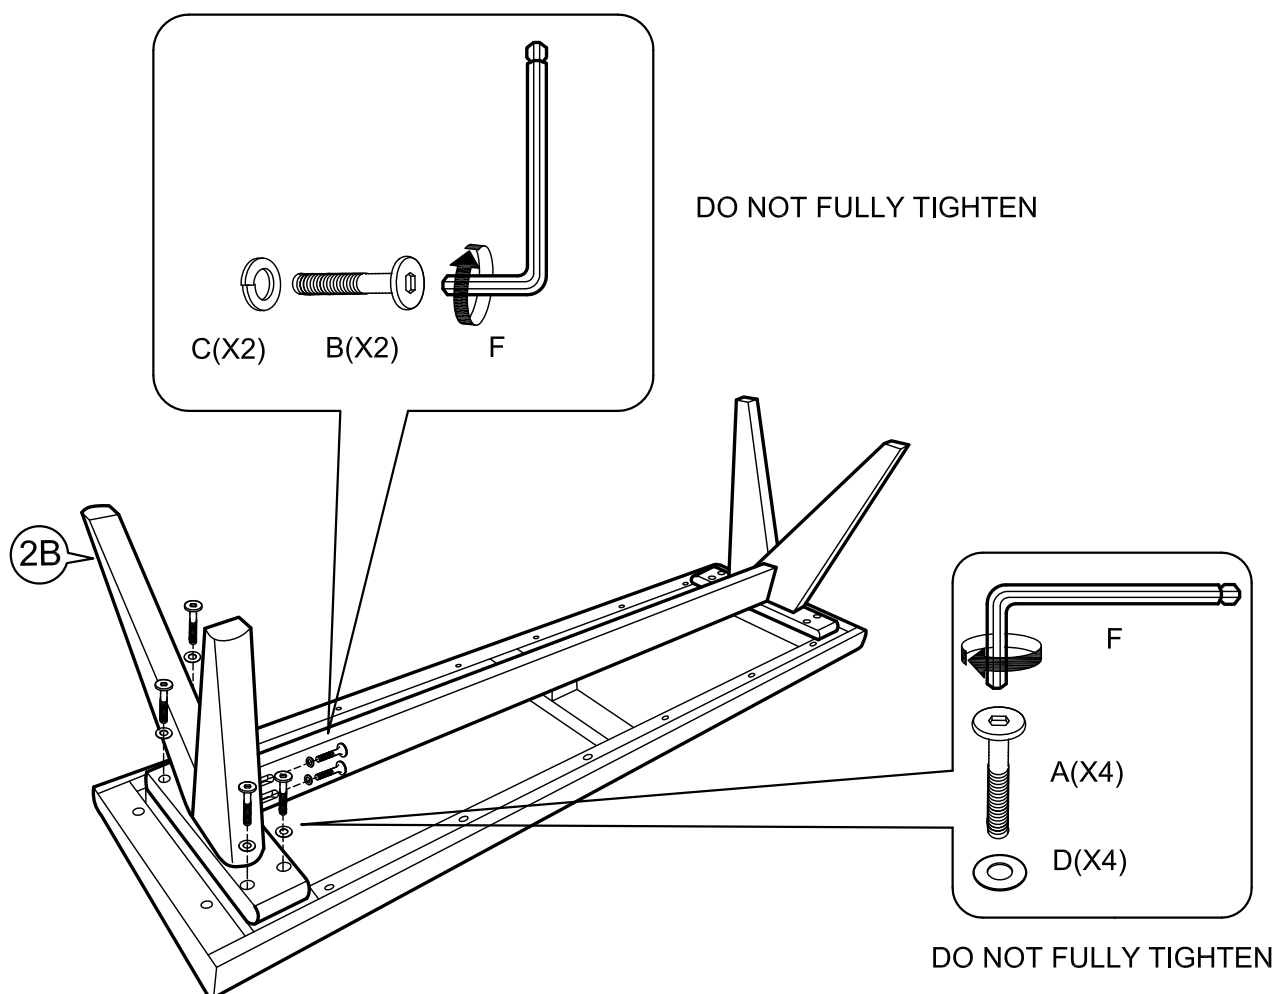

STEP 5

