



INSTALLATION MANUAL Dimensions are ±1/8″

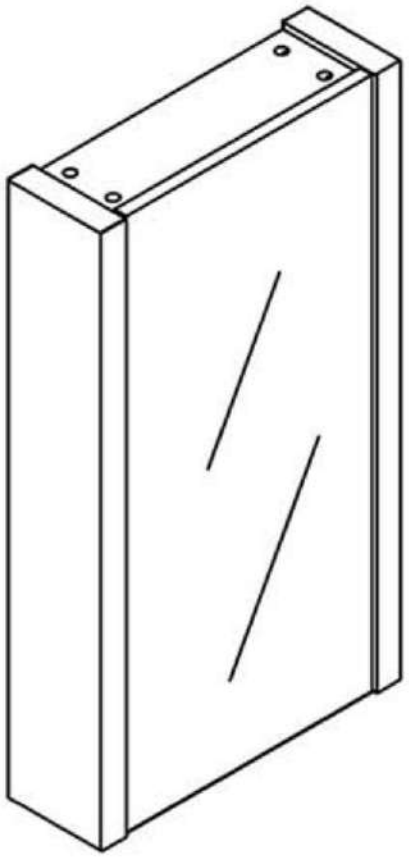

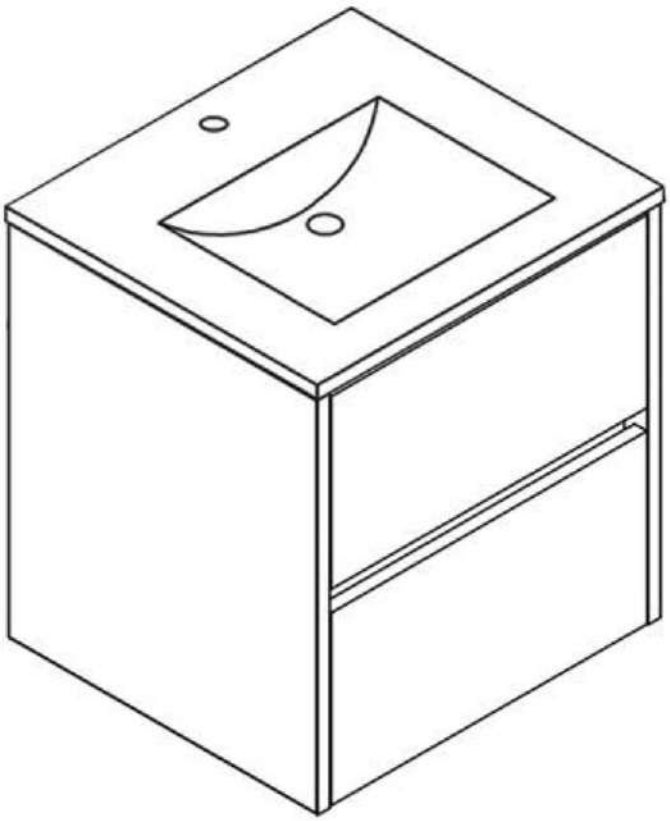


20″ VANITY

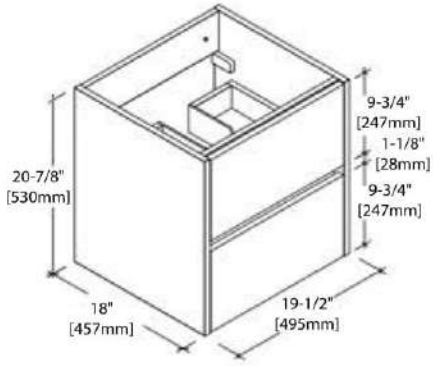

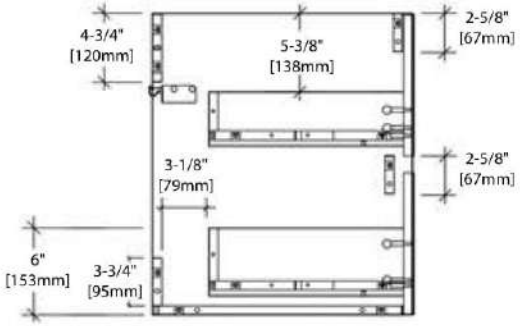



SIDE VIEW

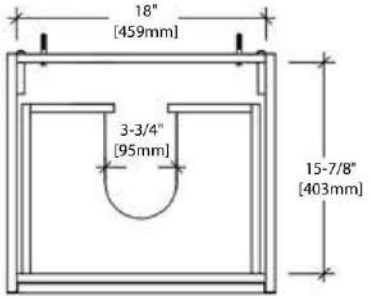


TOP VIEW

24″ VANITY

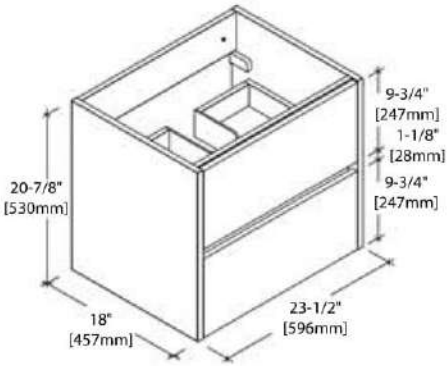

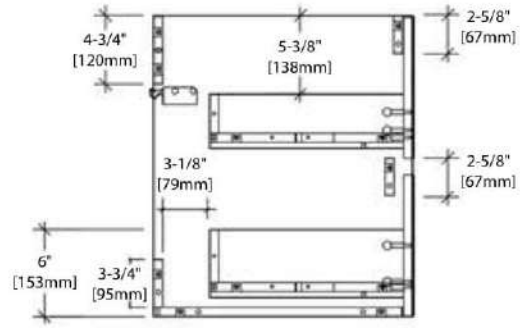



SIDE VIEW

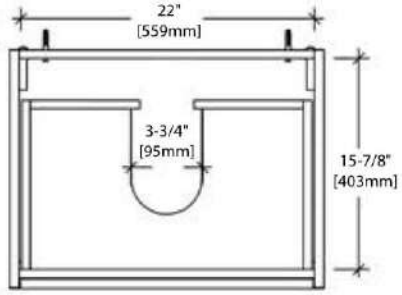


TOP VIEW

30″ VANITY

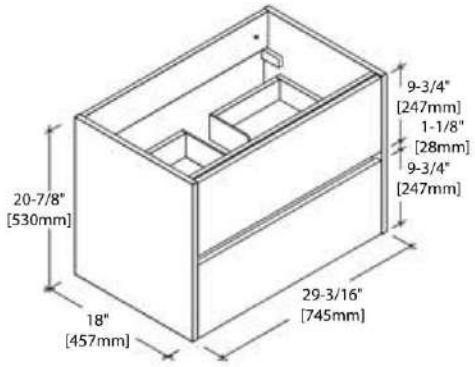

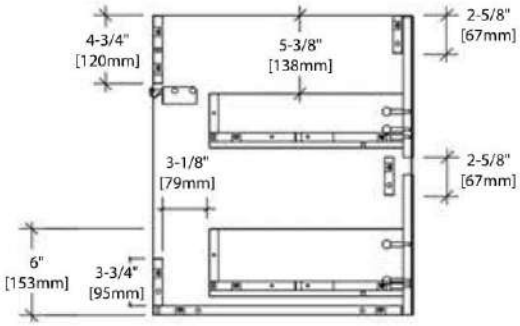



SIDE VIEW

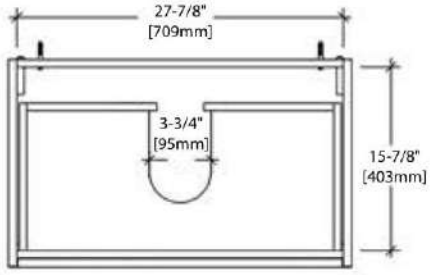


TOP VIEW

36″ VANITY

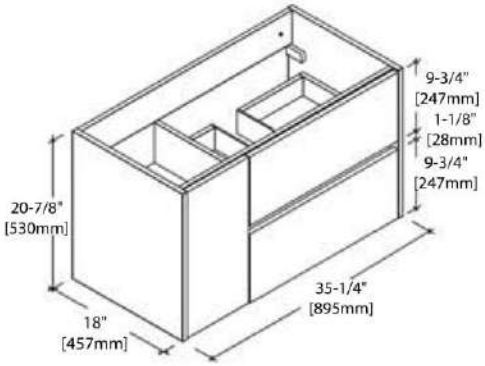

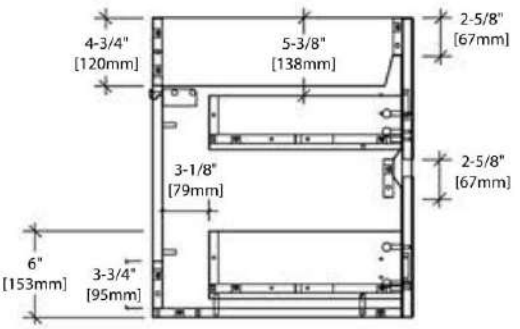


SIDE VIEW

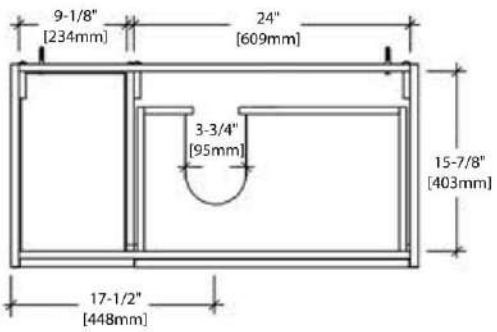

TOP VIEW


INSTALLATION MANUAL

20" TOP-MOUNT BASIN

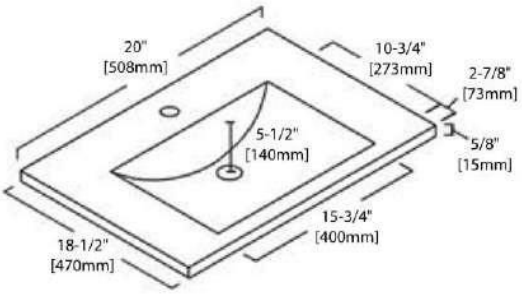


SINGLE HOLE

24" TOP-MOUNT BASIN

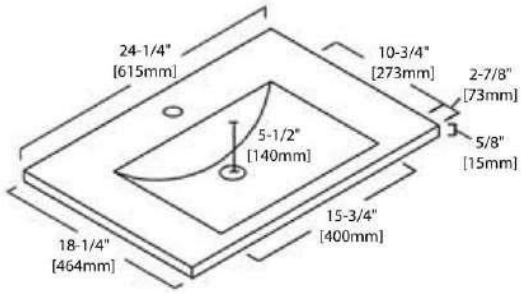


SINGLE HOLE

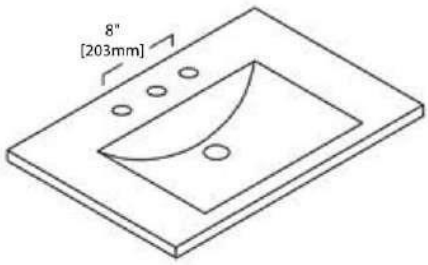


8" WIDESPREAD

30" TOP-MOUNT BASIN

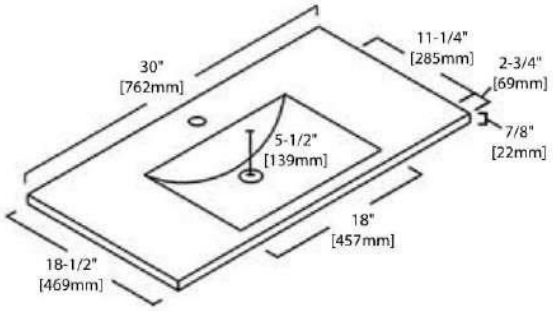


SINGLE HOLE

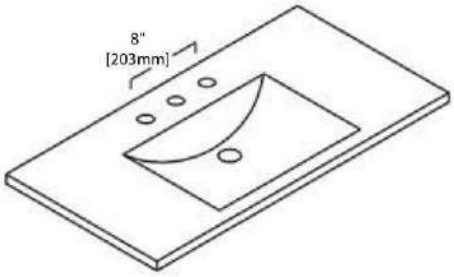


8" WIDESPREAD

36" TOP-MOUNT BASIN

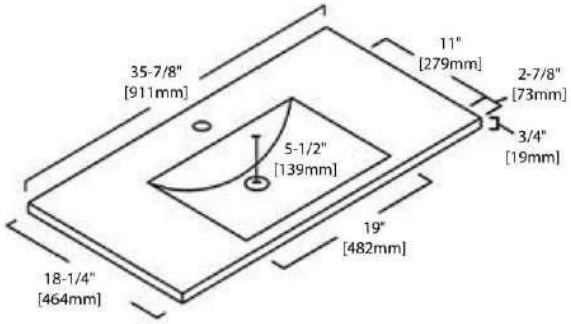


SINGLE HOLE

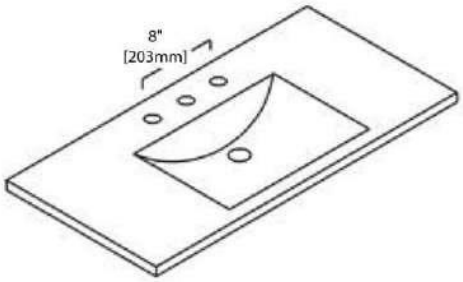


8" WIDESPREAD


INSTALLATION MANUAL

48" SINGLE VANITY

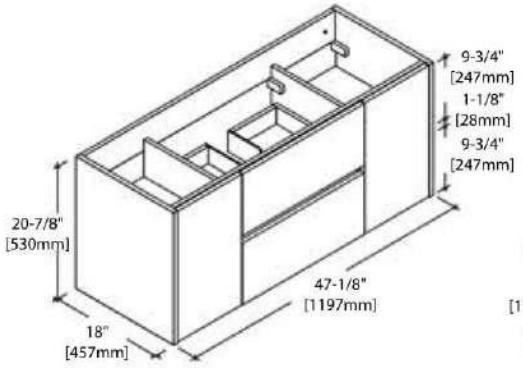

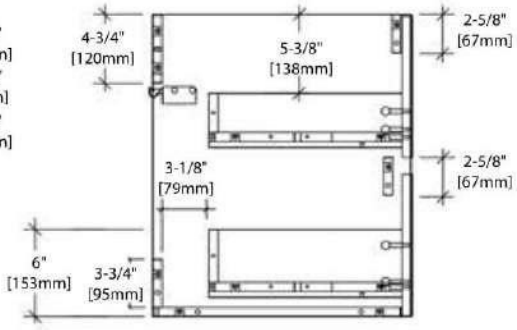



SIDE VIEW

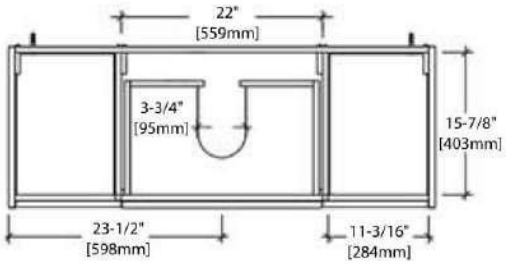


TOP VIEW

48" DOUBLE VANITY

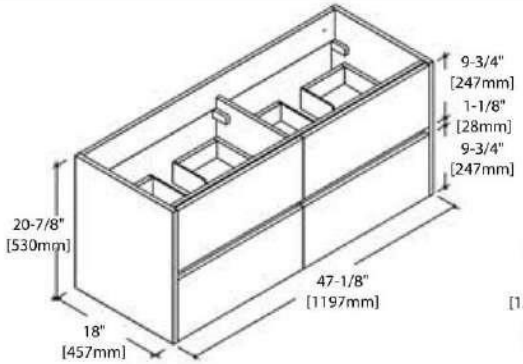

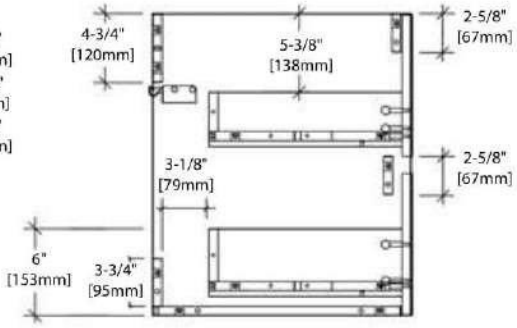


SIDE VIEW

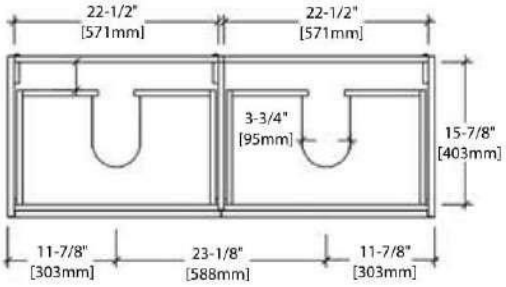


TOP VIEW

48" SINGLE TOP-MOUNT BASIN

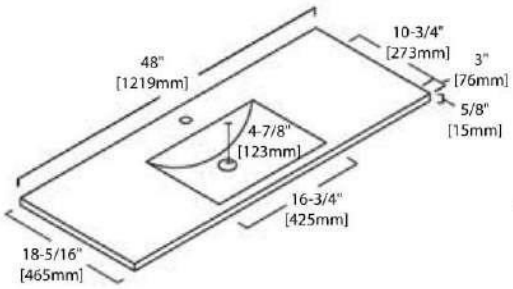


SINGLE HOLE

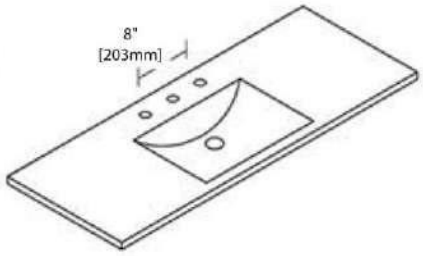


8" WIDESPREAD

48" DOUBLE TOP-MOUNT BASIN

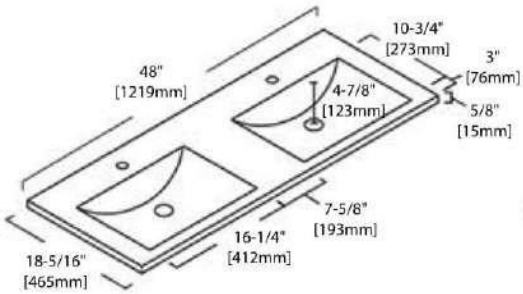


SINGLE HOLE

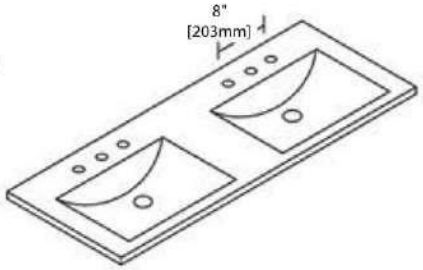


8" WIDESPREAD


INSTALLATION MANUAL


20" MIRROR / MEDICINE CABINET

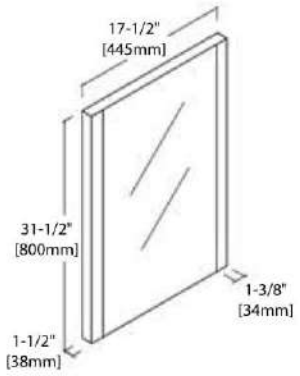

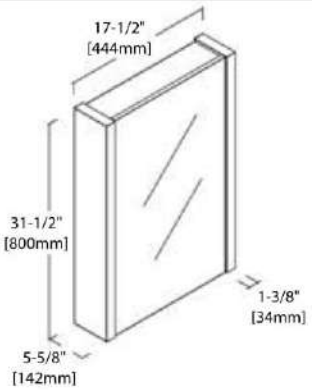



24" MIRROR / MEDICINE CABINET

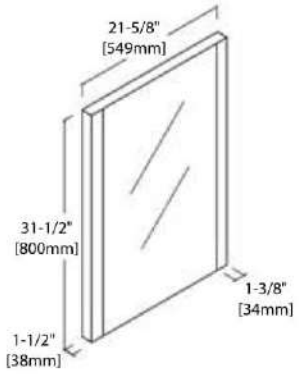

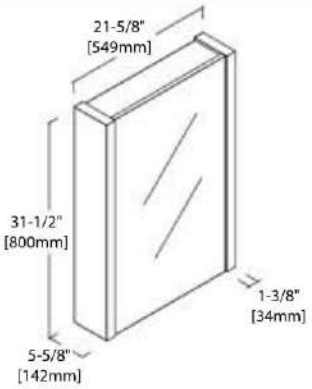


30" MIRROR / MEDICINE CABINET

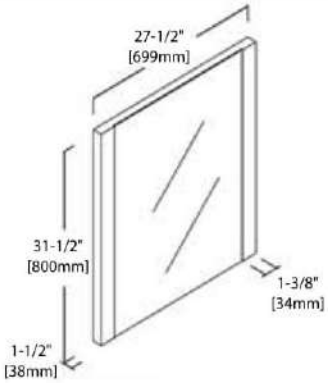


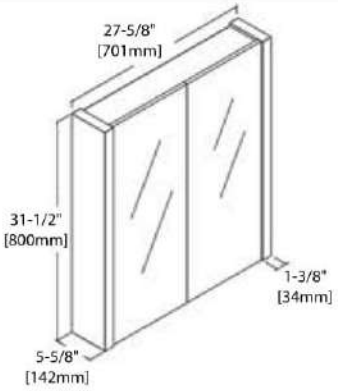

36" MIRROR

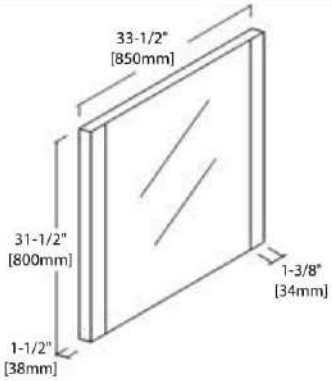


48" MIRROR

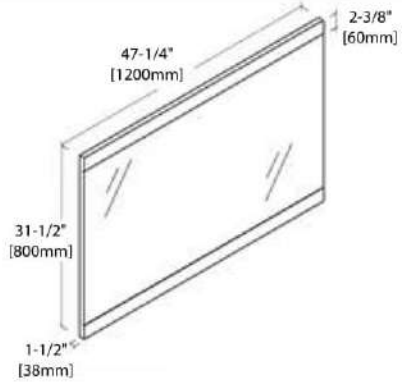

INSTALLATION MANUAL

REQUIRED TOOLS


Tape Measure


Pencil


Electric Drill


Drill Bit (6mm)


Silicone


Screwdriver


Spirit Lever


PARTS INCLUDED



A



B


C


D

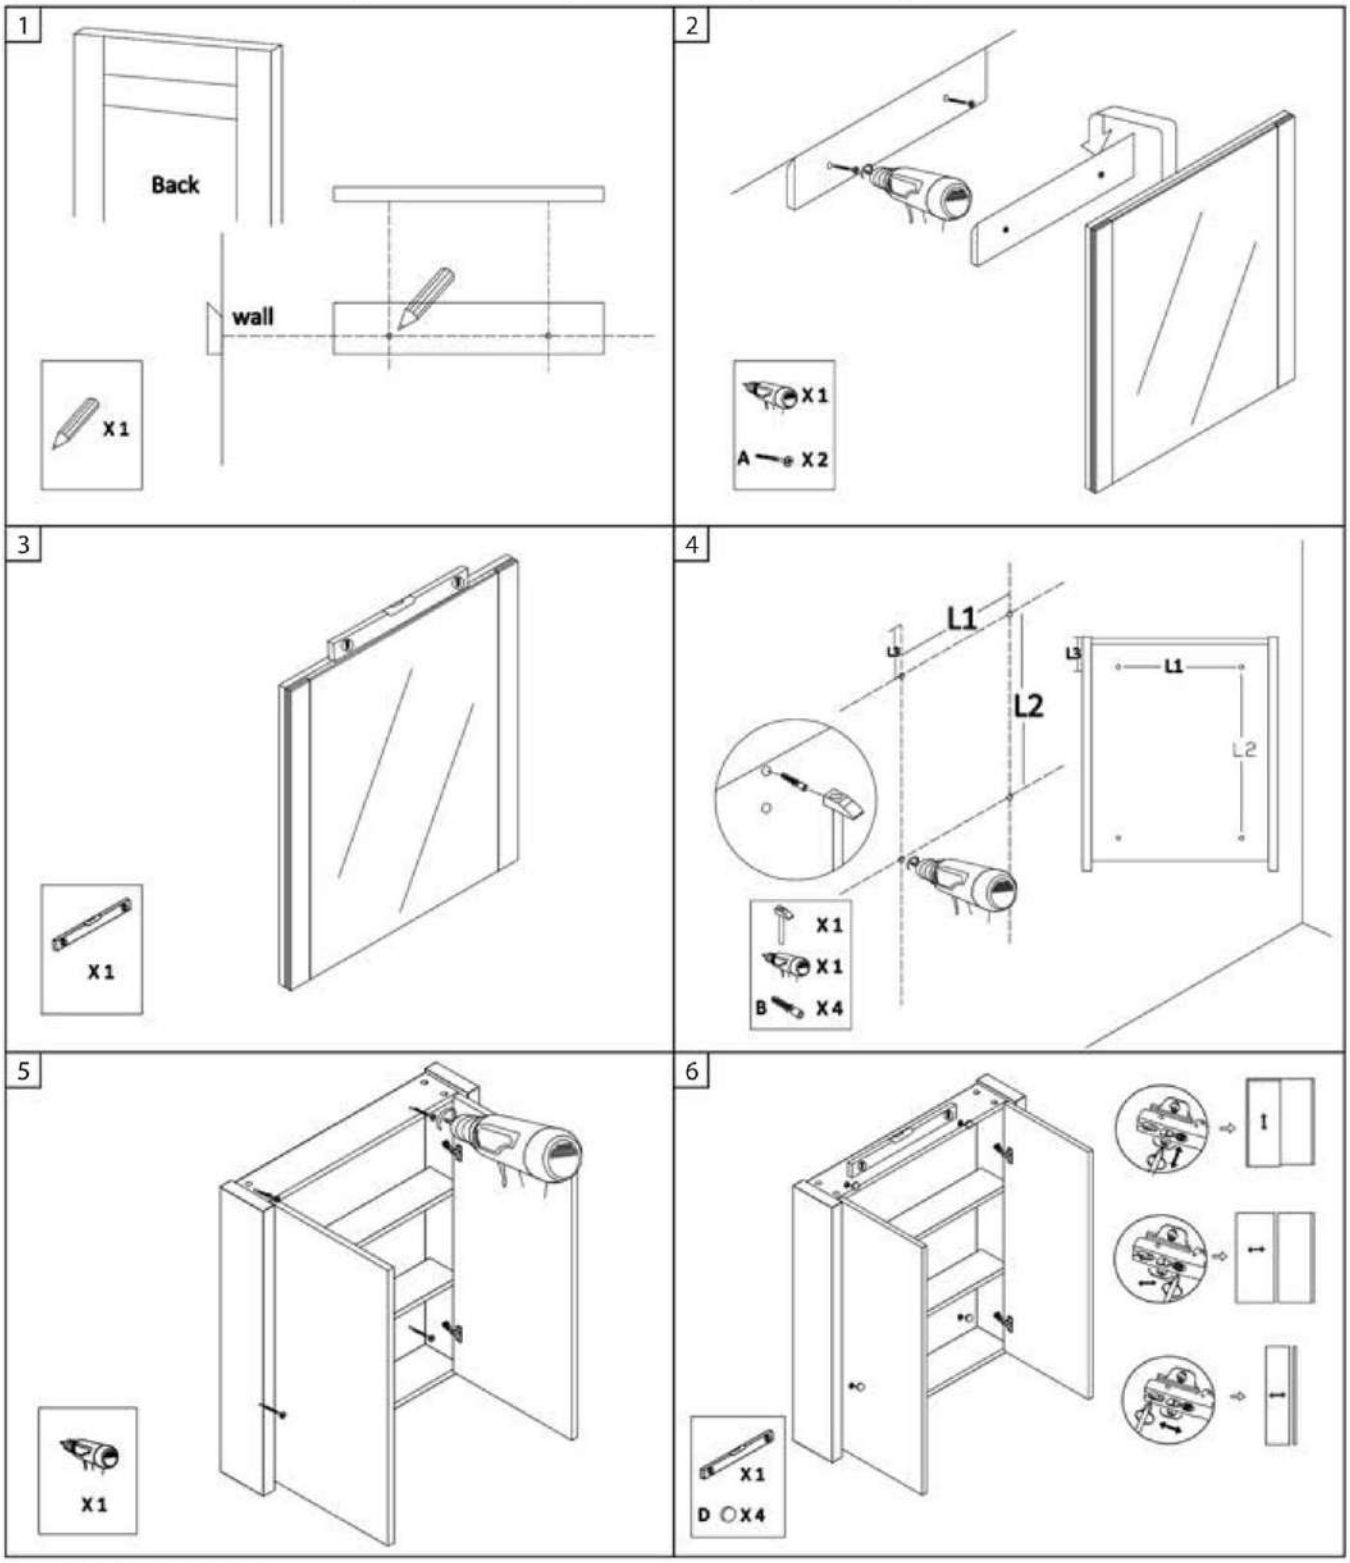

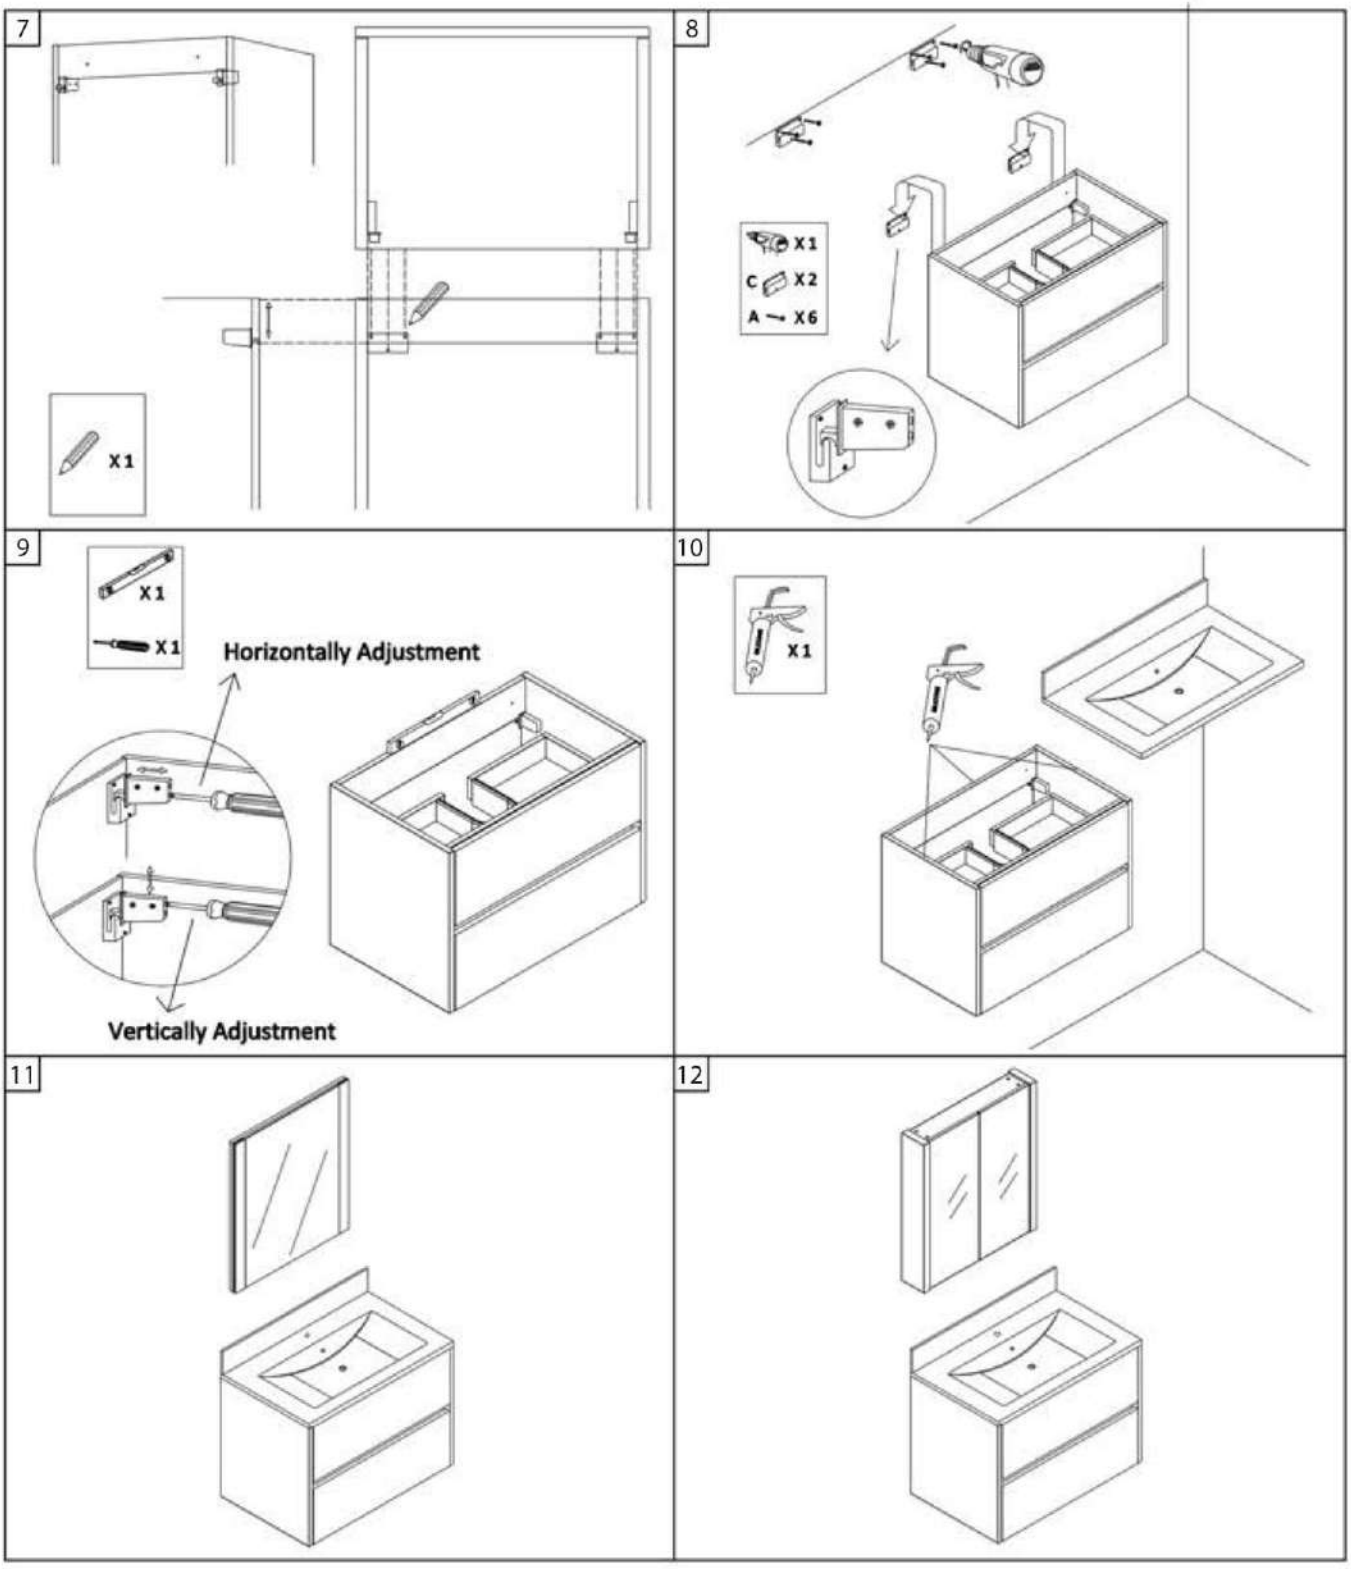
7
X1
8
X1
C X2
A X6
9
X1
X1
Horizontally Adjustment
Vertically Adjustment
10
X1
11
12

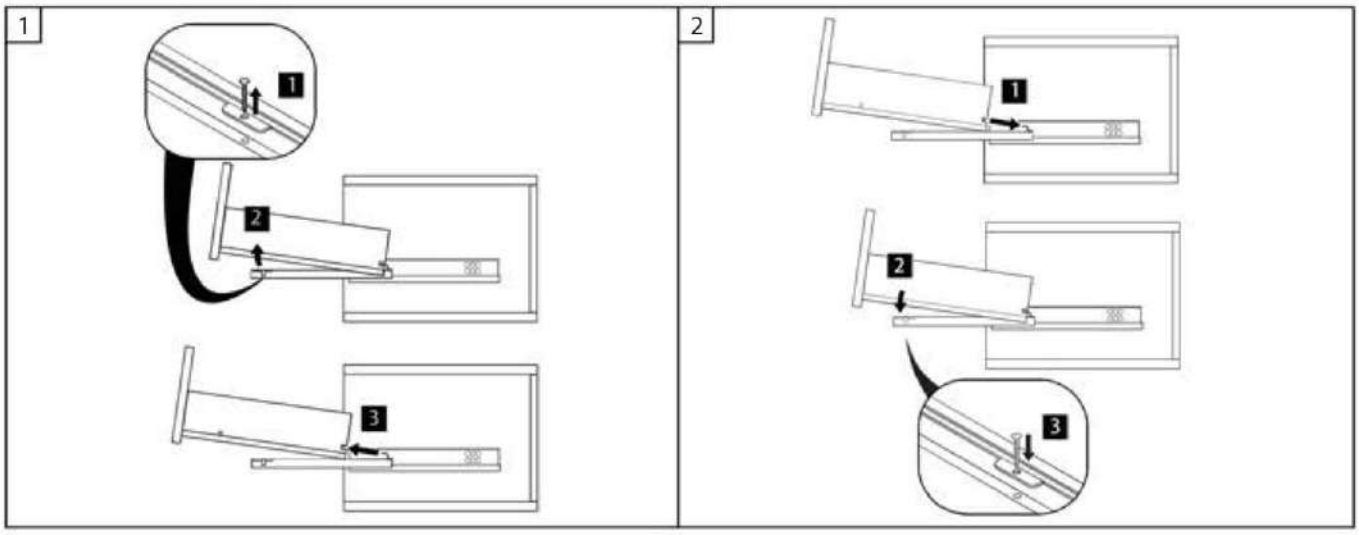
1
1
2
3
2
1
2
3