


LARGE BOOKCASE-ANTIQUE BLACK

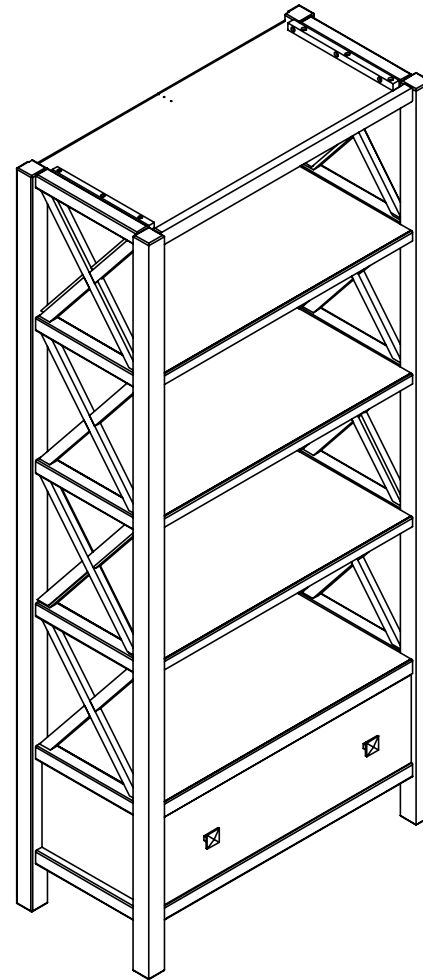

>>assembly instructions

Congratulations on your latest purchase.

Now what? Don't start sweating over this box of parts. This will be easy. We did the hard work for you. All you need to do is follow our simple instructions and you'll be on your way to transforming your room in no time. Good luck-though we're confident you won't need it.

before you begin

1. Check for damaged or missing parts.
2. Use the carton as a working surface to prevent product damage during assembly.
3. Gather all tools prior to assembly.

tools needed

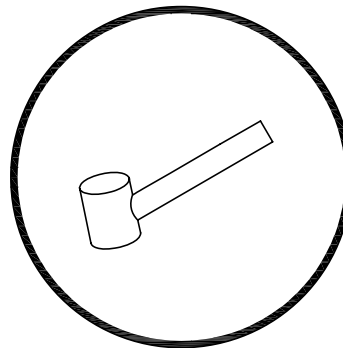
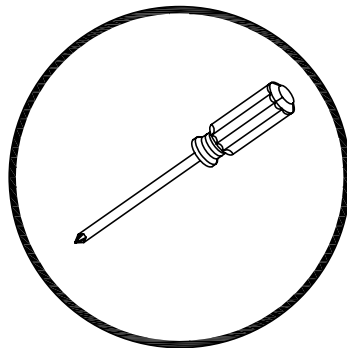
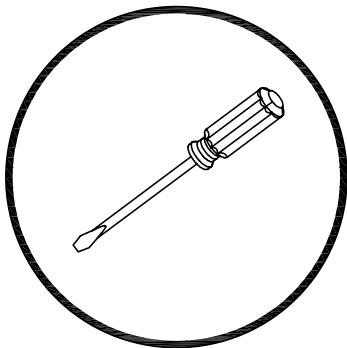



table of contents

.....

introduction	2
hardware	4
parts list	5
how touse the cam lock system	6
assembly	7-17

hardware


(A) x 4
bolt
M4

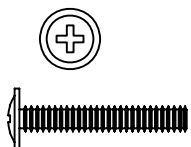


(B) x 2
knob



(C) x10
small screw
Ø3.5x25mm

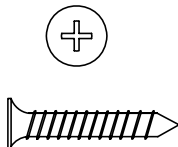


(D) x 7
cam bolt
27mm




(E) x 7
cam lock
Ø13.5x10.5mm




(F) x 24
wood dowel
Ø6x30mm




(G) x 1
strap



(H) x 2
wood screw
Ø3.5x12mm




(I) x 1
wall screw
Ø3.5x30mm

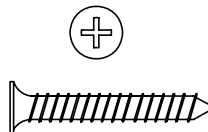

(J) x 1
plastic connector




(K) x 18
small screw
Ø3x15mm



(L) x 1
wall anchor
30mm





(M) x 30
screw
Ø4x30mm

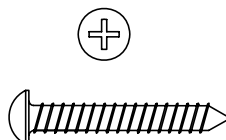


ITEM	DESCRIPTION	QUANTITY
------	-------------	----------

#1	top panel	1
#2	left side	1
#3	right side	1
#4	center shelf	3
#5	bottom shelf	1
#6	bottom panel	1
#7	back panel	2
#8	drawer front	1
#9	drawer back	1
#10	right panel	1
#11	left panel	1
#12	drawer panel	1
#13	drawer rail	1

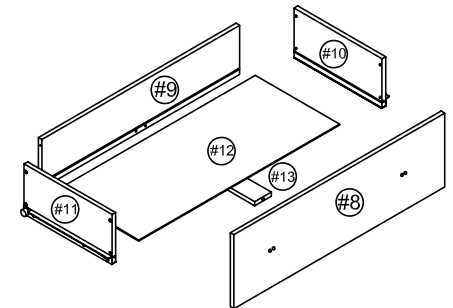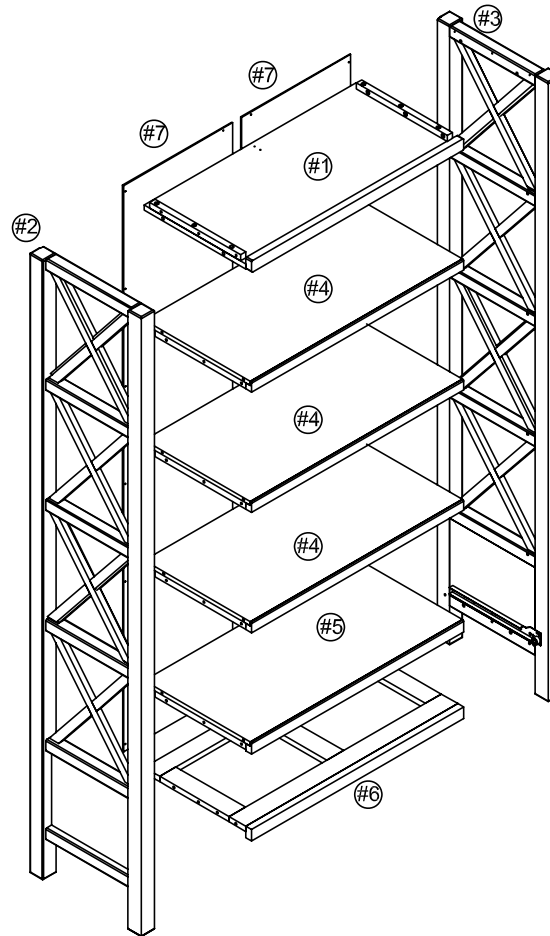


how to use the cam lock system



1.

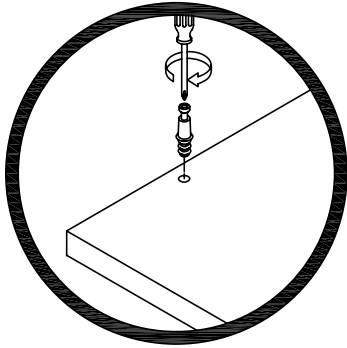


2.

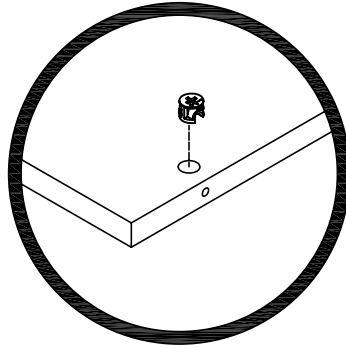

3.

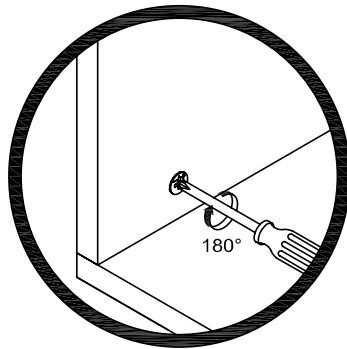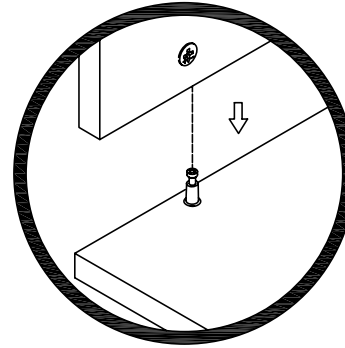

4.

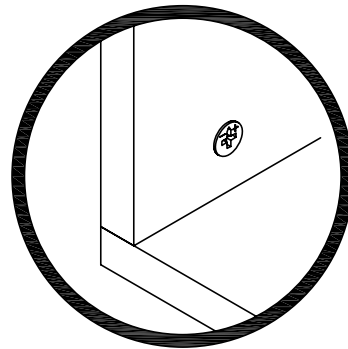


5.

step 1.



(H) x 2
wood screw
Ø3.5x12mm




(-

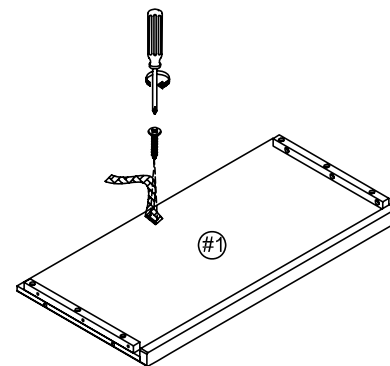


step 2.

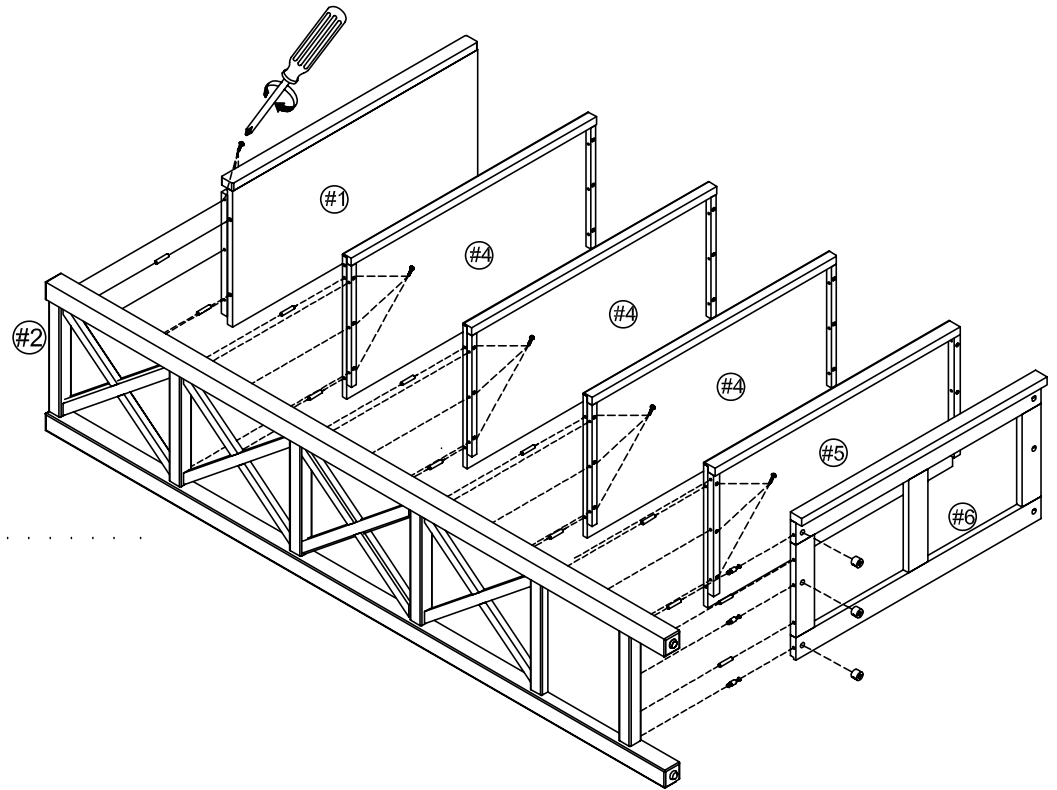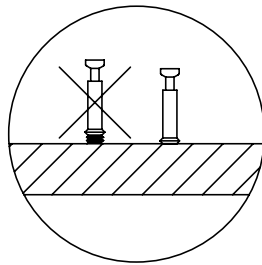


(D) x 3
cam bolt
27mm




(E) x 3
cam lock
Ø13.5x10.5mm



(F) x 12
wood dowel
Ø6x30mm




(M) x 15
screw
Ø4x30mm




1. Screw-in cam bolts must be screwed down flush.


step 3.

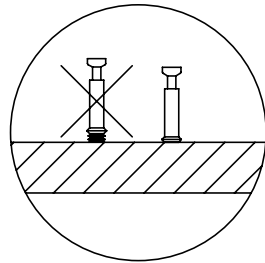


(D) x 3
cam bolt
27mm





(E) x 3
cam lock
Ø13.5x10.5mm



(F) x 12
wood dowel
Ø6x30mm




(M) x 15
screw
Ø4x30mm

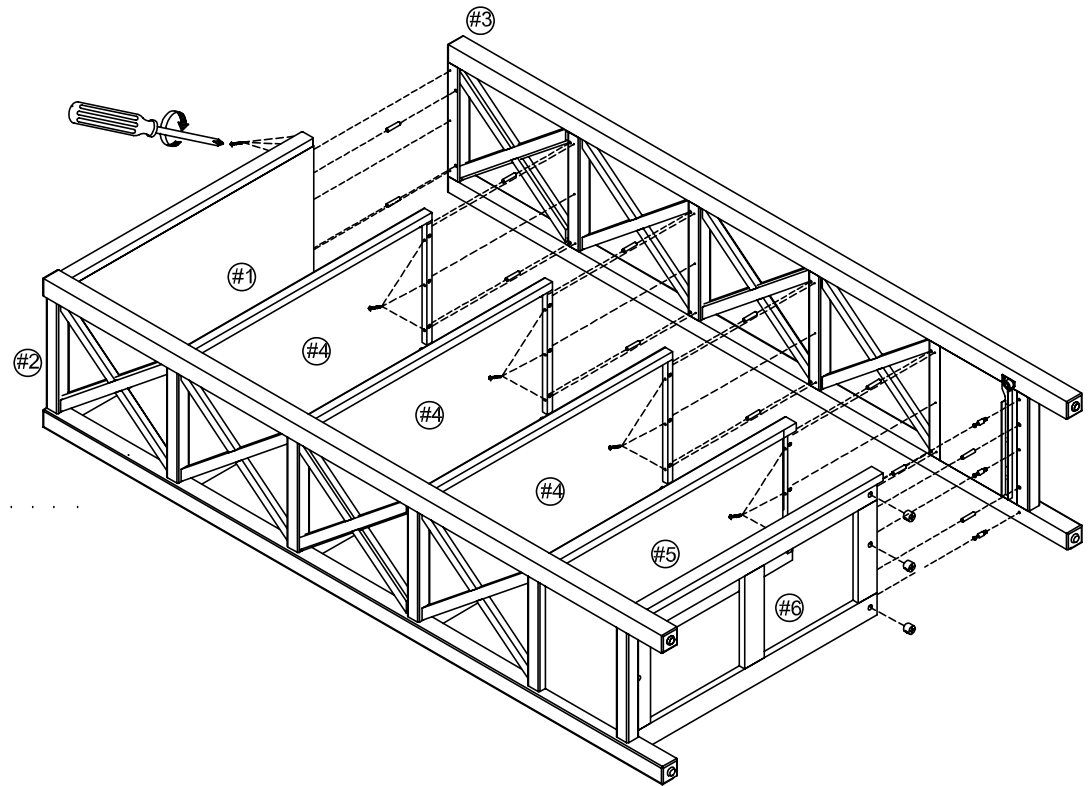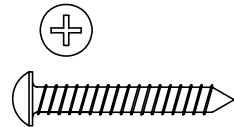



1. Screw-in cam bolts must be screwed down flush.

step 4.

(K) x 18
small screw
Ø3x15mm


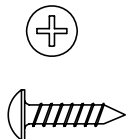


(J) x 1
plastic connector

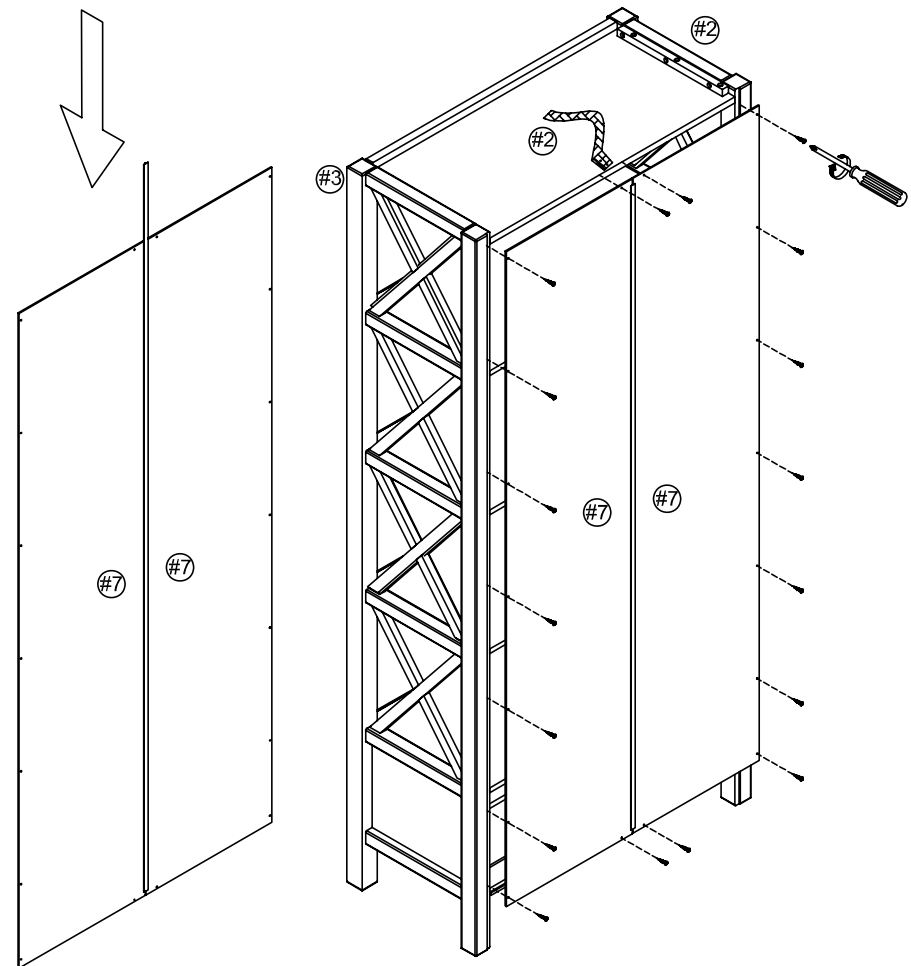


step 5.


(C) x4
small screw
Ø3.5x25mm

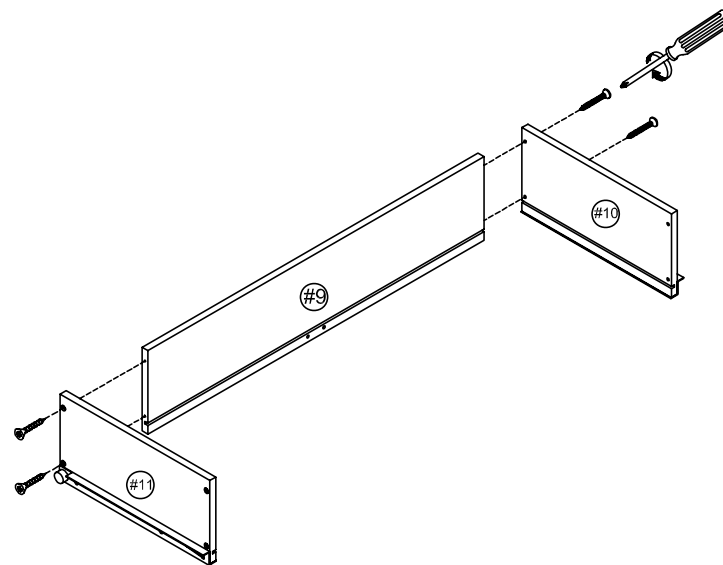


step 6.

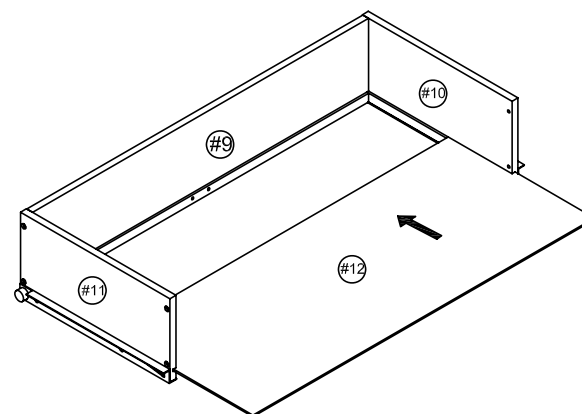



step 7.

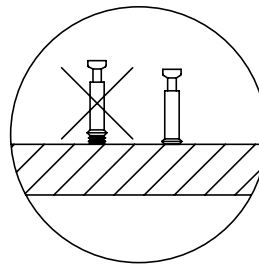

(D) x 1
cam bolt
27mm




(E) x 1
cam lock
Ø13.5x10.5mm

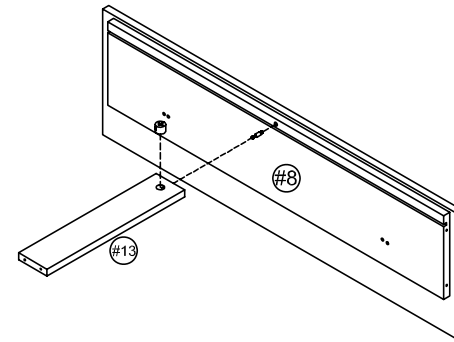

1. Screw-in cam bolts must be screwed down flush.

step 8.



(A) x 4
bolt
M4

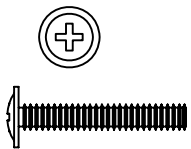

(B) x 2
knob




(C) x4
small screw
Ø3.5x25mm

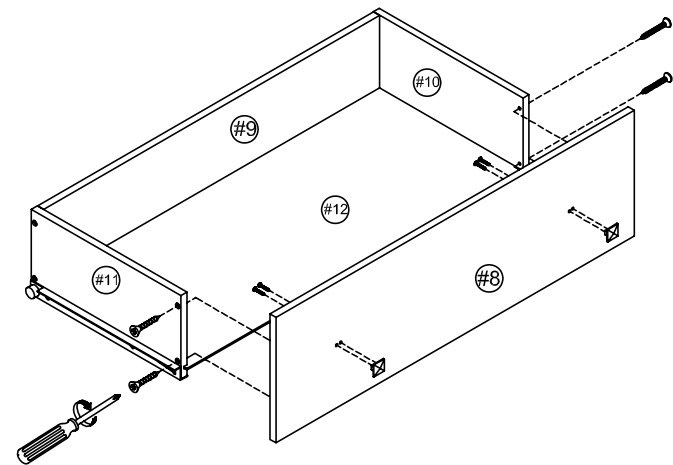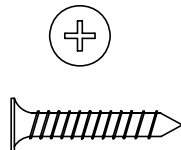


step 9.

(C) x2
samll screw
Ø3.5x25mm

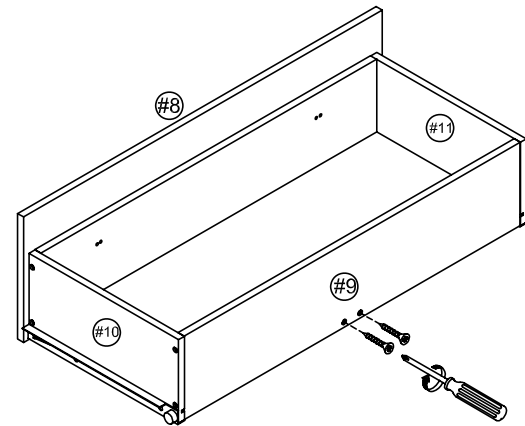

step 10.

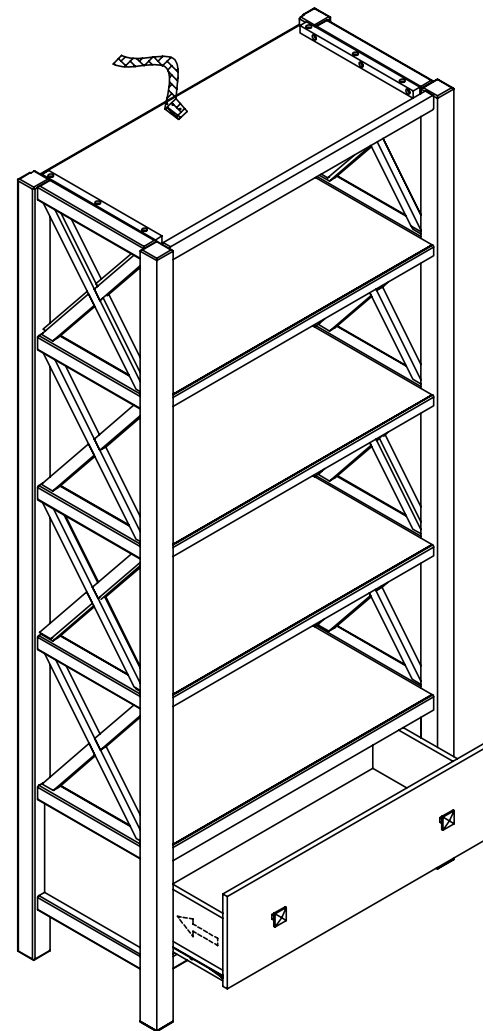

step 11.



WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. To help prevent tip-over:


- Place heaviest items in the lowest drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on the top of this product.
- Never allow children to climb or hang on drawers, doors, or shelves.
- Do not defeat or remove the drawer interlock system.

Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.

This is a permanent label. Do not attempt to remove!

(I) x 1
wall screw
Ø3.5x30mm

(L) x 1
Wall anchor
30mm



WEIGHT LIMITS

