



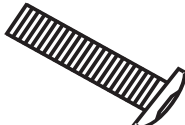


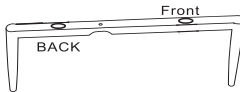
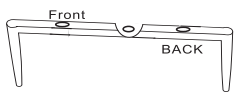



ASSEMBLY INSTRUCTIONS

<p>A</p>  <p>1 PC</p>	<p>B</p>  <p>1 PC</p>	<p>C</p>  <p>1 PC</p>	<p>D</p>  <p>1 PC M6x30</p>	<p>E</p>  <p>4 PCS M6x50</p>
<p>F</p>  <p>5 PCS</p>	<p>G</p>  <p>5 PCS</p>	<p>H</p>  <p>1 PC</p>		


Step 1: Use bolt D, spring washer G, flat washer F, allen wrench H to connect metal leg part A and B together, don't fasten the bolt at this stage.

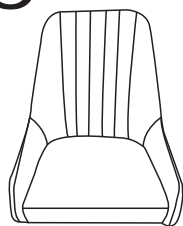

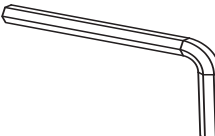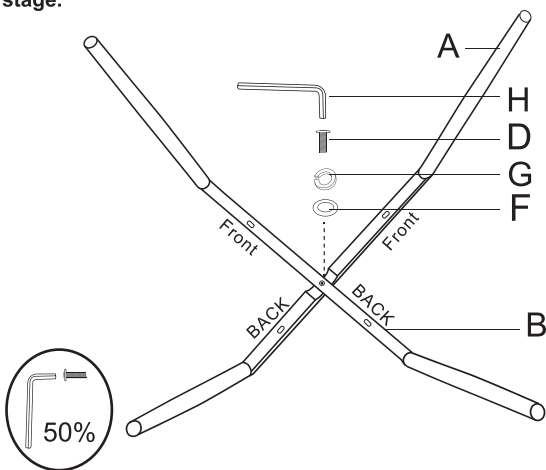Step 2: Use bolt E, spring washer G, flat washer F, allen wrench H to attach the whole metal leg assembly to bottom of the seat.

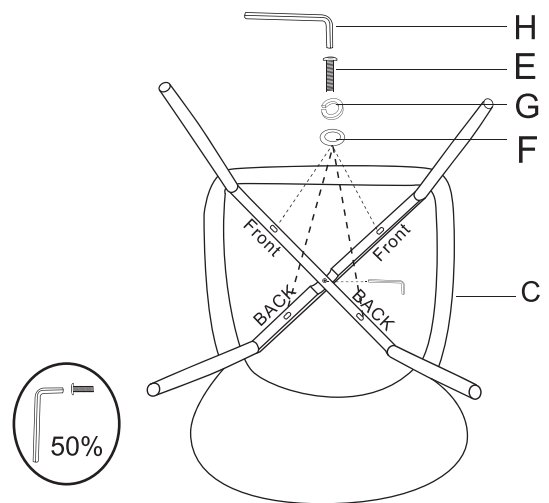

Step 3: Make sure all holes on legs align with holes on bottom of seat then put the chair on a level surface to fasten all bolts to secure.

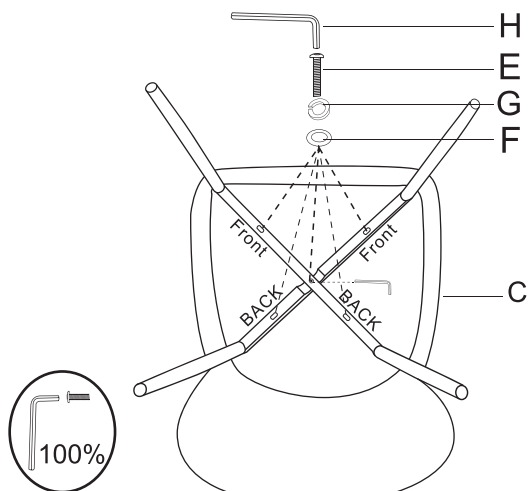

Adjust levelers under legs to swt the seat level

