



ASSEMBLY INSTRUCTIONS

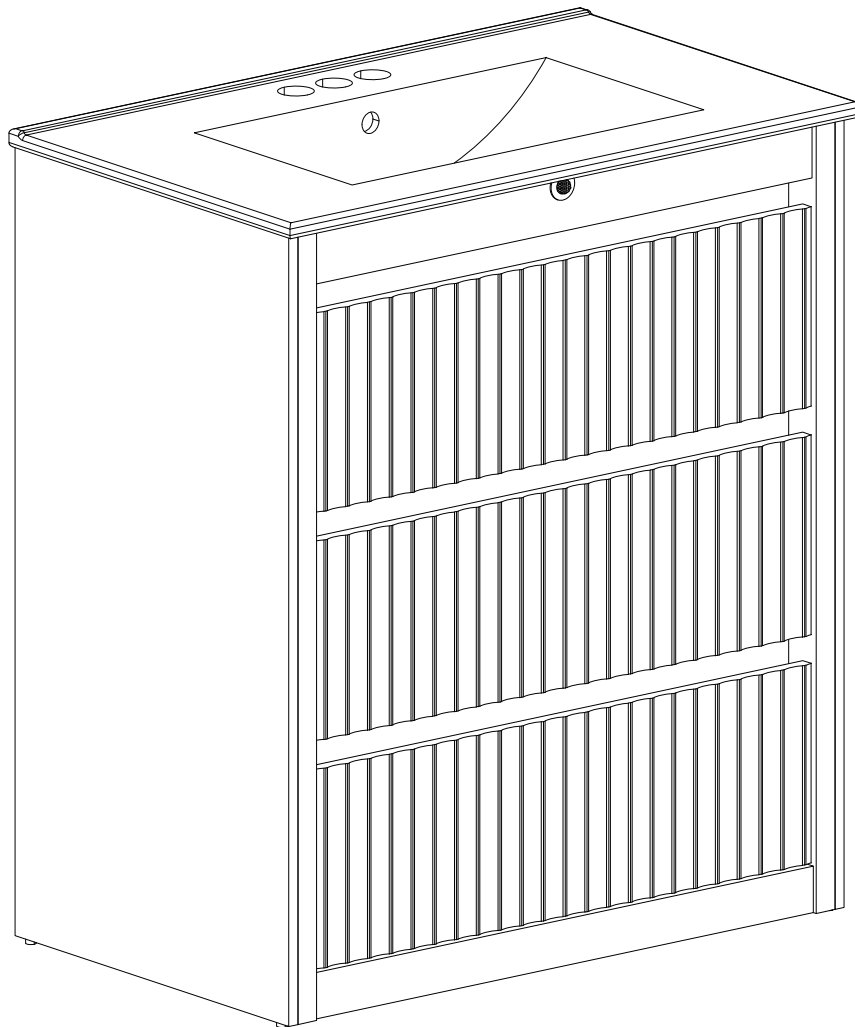


WARNING !

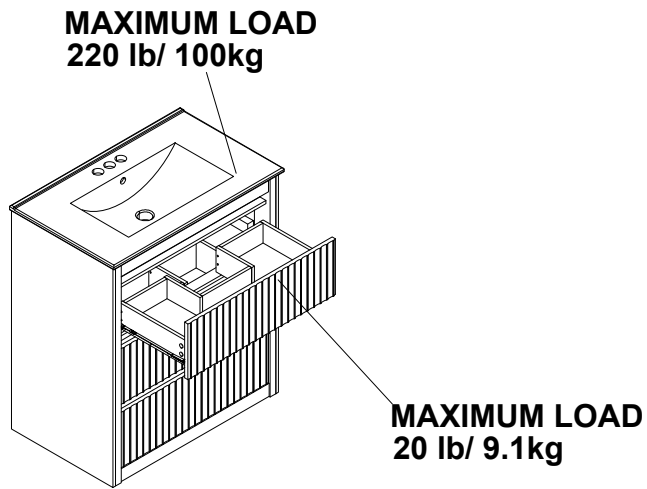


Estimated Time for Assembly

90 mins

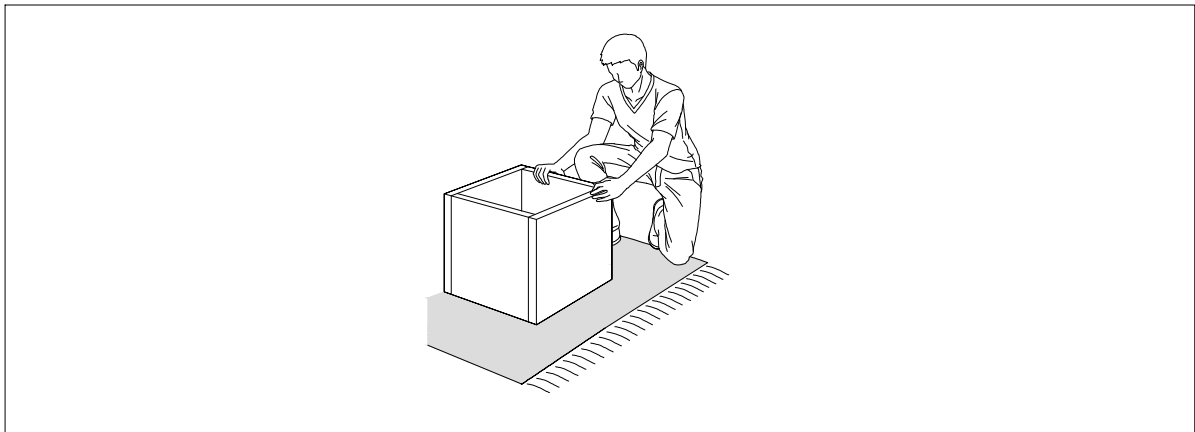

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

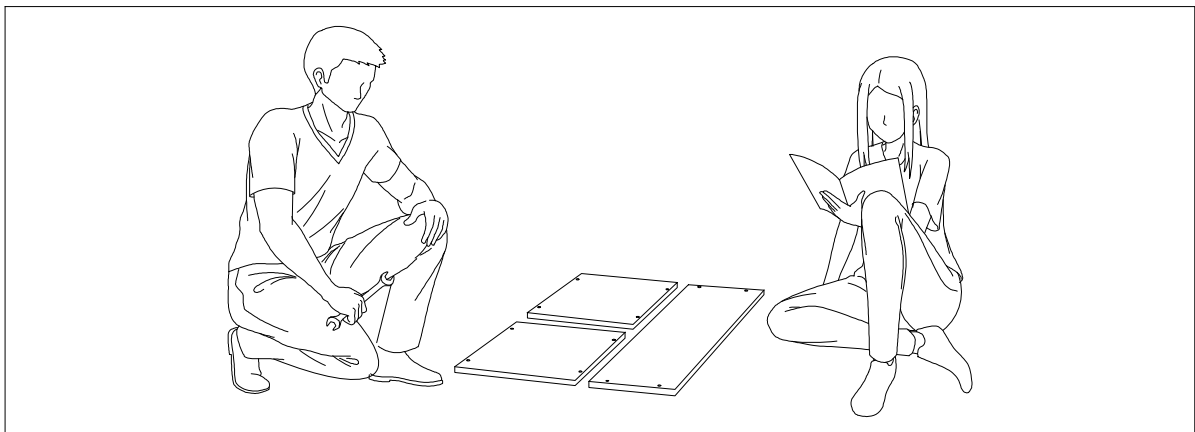


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

























Board Identification

Not actual size

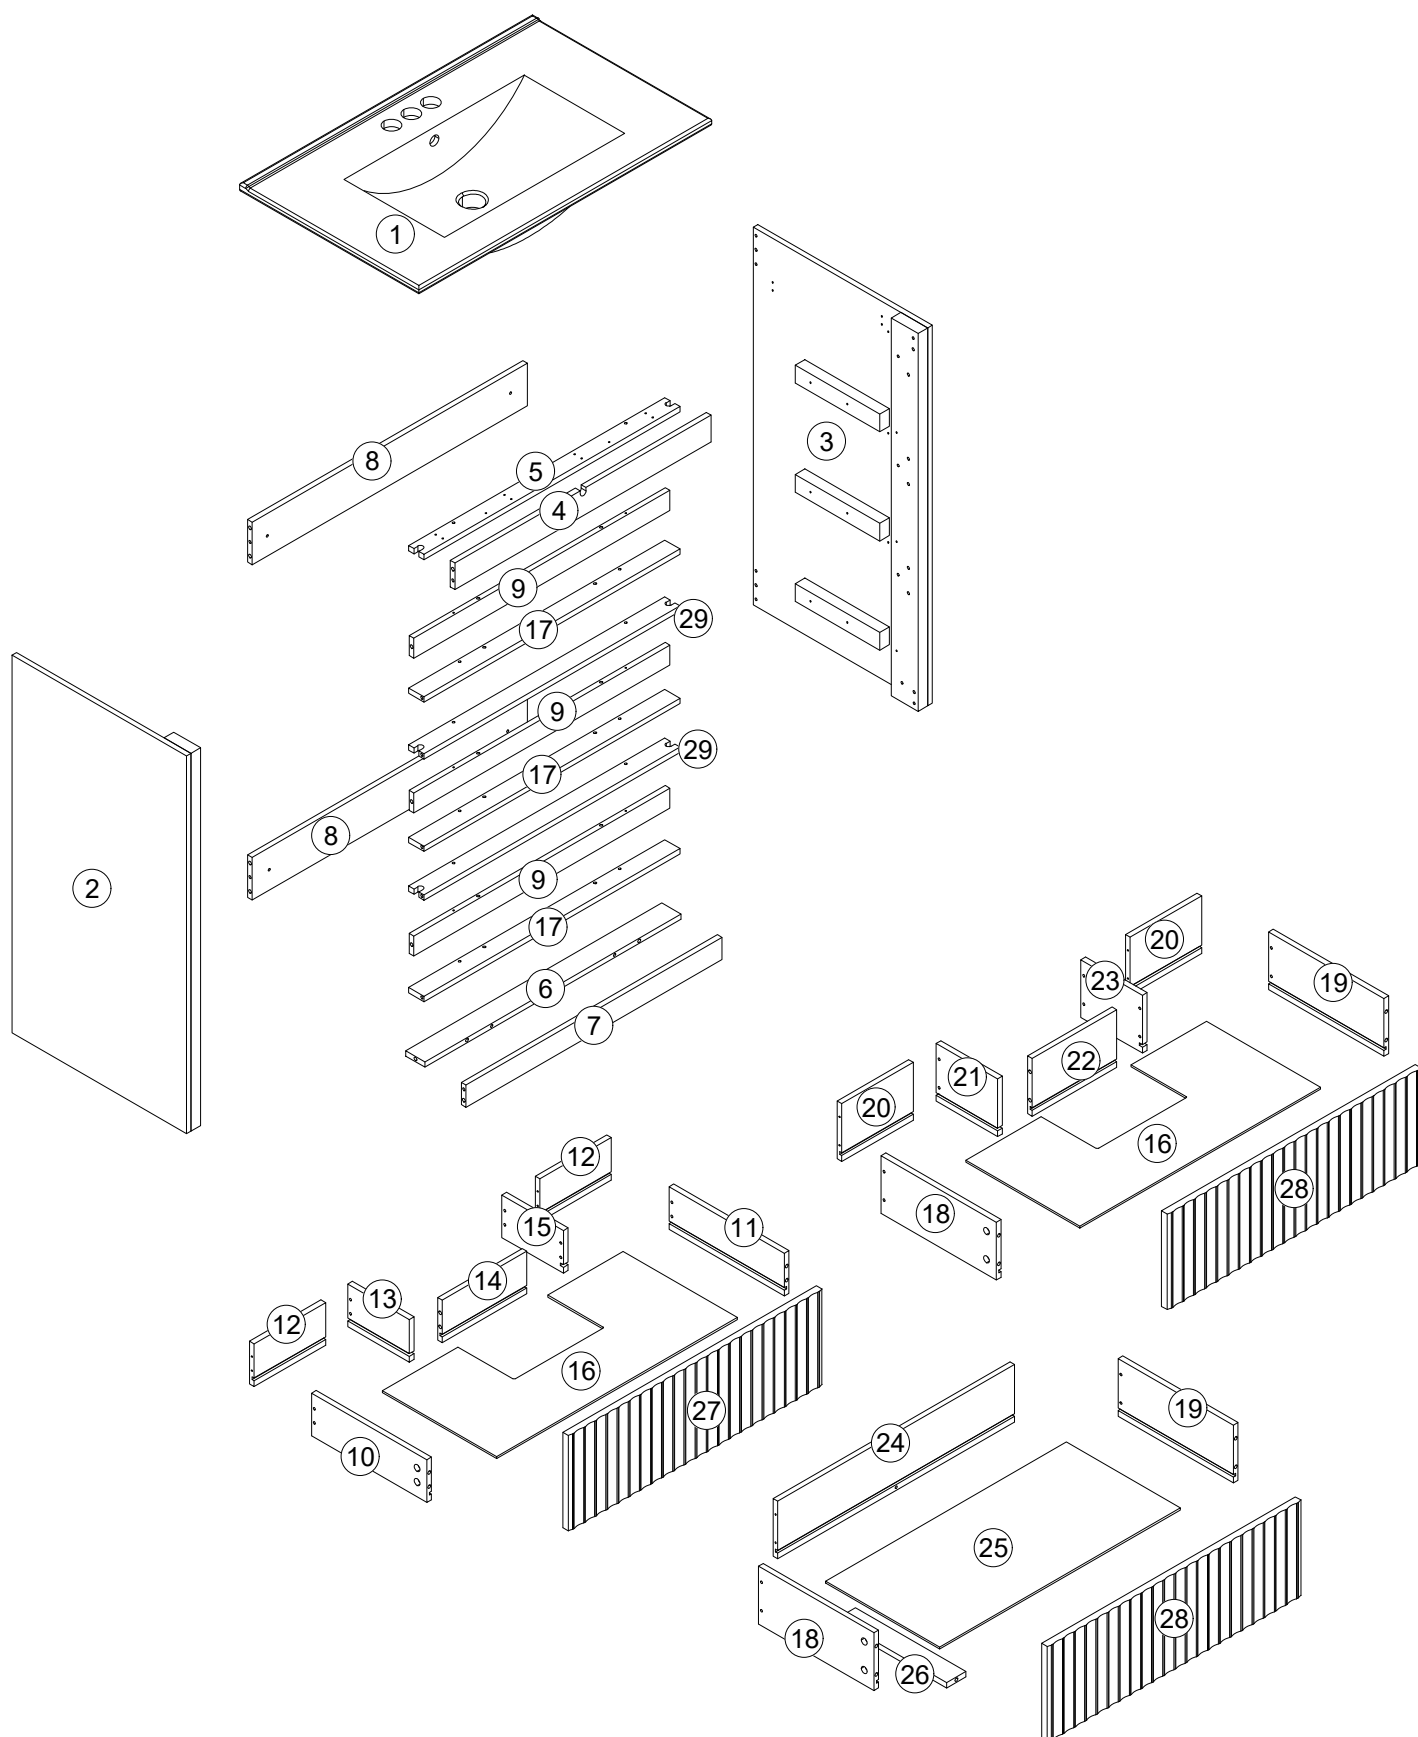

BOARD IDENTIFICATION

Not actual size

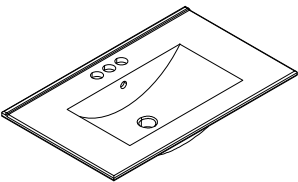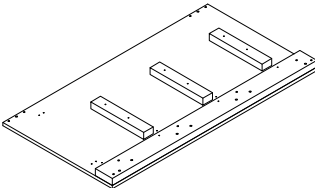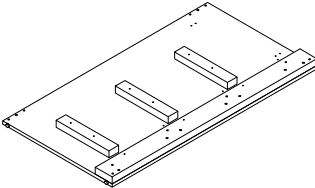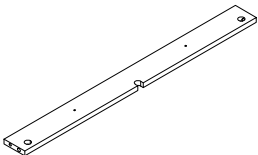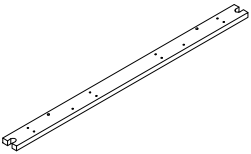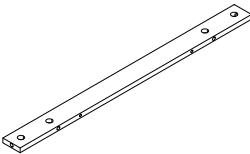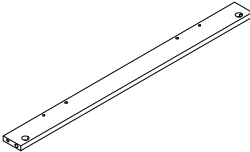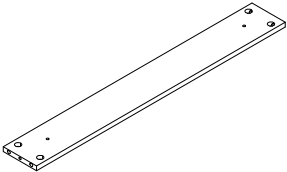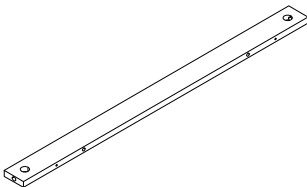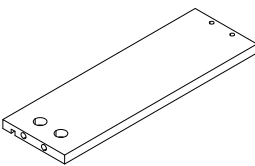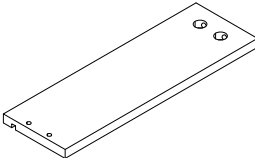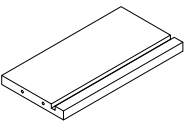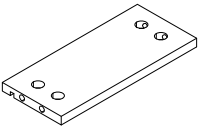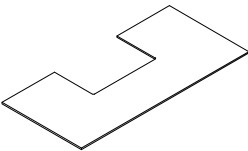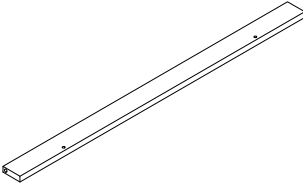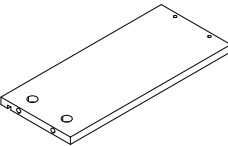
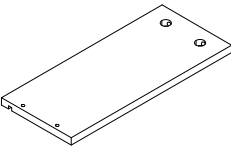


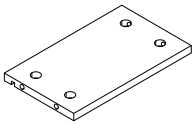

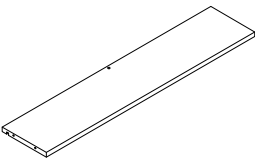
			
① x 1	② x 1	③ x 1	④ x 1
			
⑤ x 1	⑥ x 1	⑦ x 1	⑧ x 2
			
⑨ x 3	⑩ x 1	⑪ x 1	⑫ x 2
			
⑬ x 1	⑭ x 1	⑮ x 1	⑯ x 2
			
⑰ x 3	⑱ x 2	⑲ x 2	⑳ x 2
			
㉑ x 1	㉒ x 1	㉓ x 1	㉔ x 1

BOARD IDENTIFICATION

Not actual size


 A simple rectangular board with a beveled edge.	 A rectangular board with a beveled edge and a small circular hole on one side.	 A rectangular board with a beveled edge and a long slot running down the center.	 A rectangular board with a beveled edge and a long slot running down the center.
25 x 1	26 x 1	27 x 1	28 x 2
 A rectangular board with a beveled edge and a long slot running down the center.			
29 x 2			

HARDWARE LIST

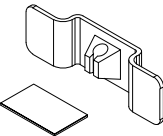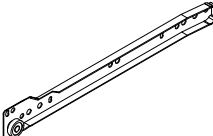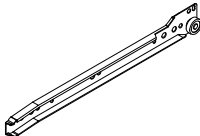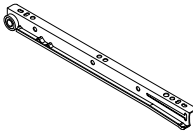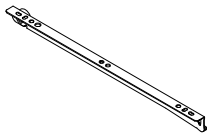
 Ø6x33.5mm A x43+4	 Ø15x9.5mm B x43+4	 Ø6x30mm C x32+3	 Ø4x45mm D x 2
 Ø3.5x12mm E x40+4	 F1=750mm F2=1150mm F3=1400mm F4x1 F5x1 F x 1SET		 Ø6x30mm G x 2
 Ø3x15mm H x 8+1	 Ø4x38mm I x33+3	 J x 1	 K x 9+1
 L x 1SET	 M x 2		
 CL x 3	 CR x 3	 DL x 3	 DR x 3

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

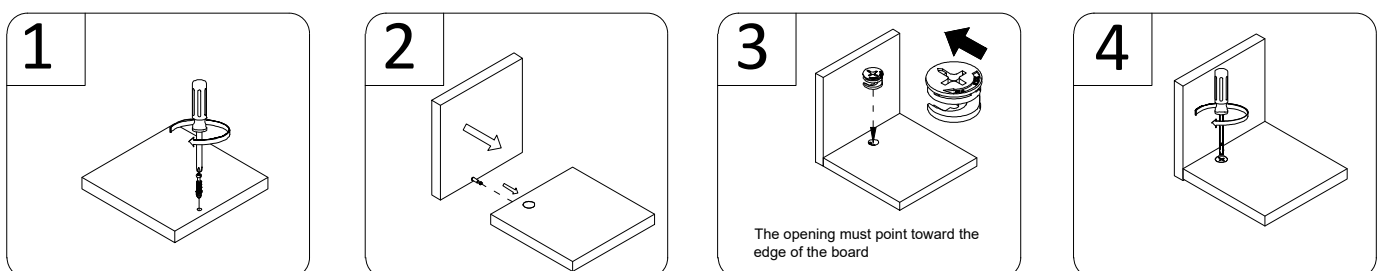




STEP 1

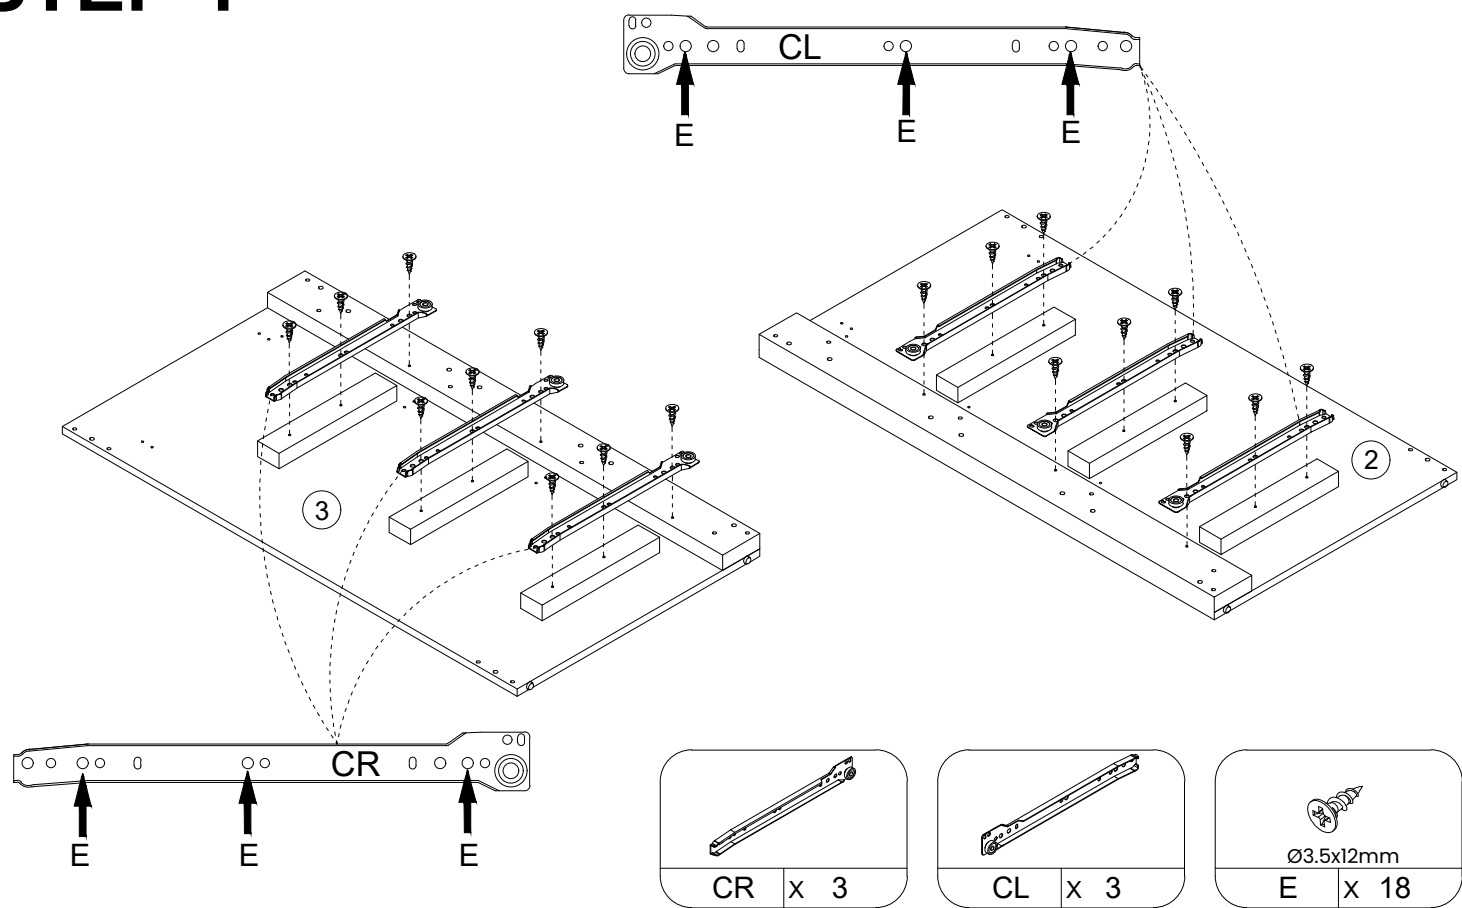





STEP 2

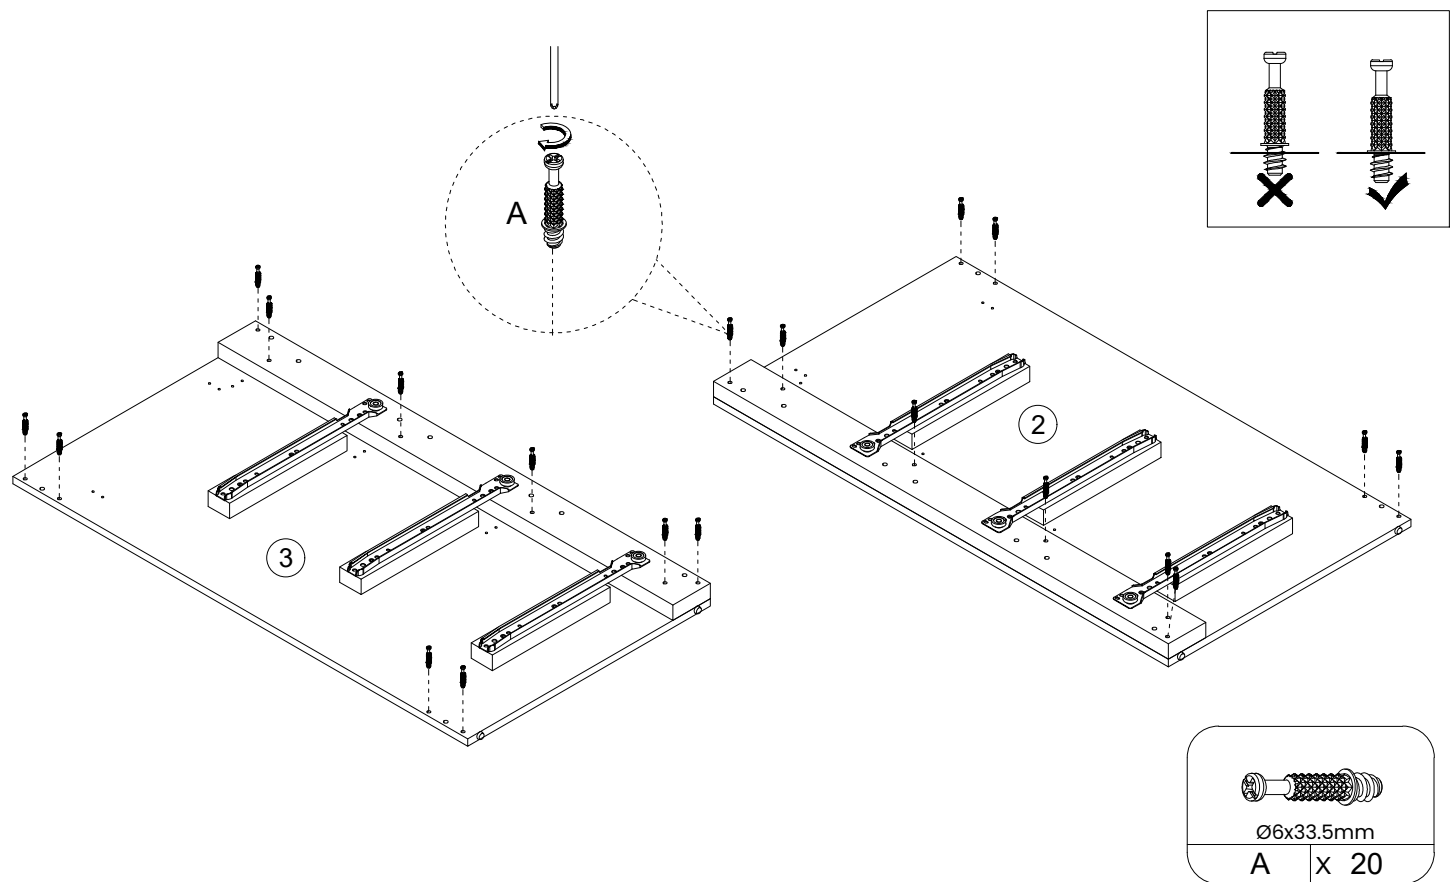


STEP 3

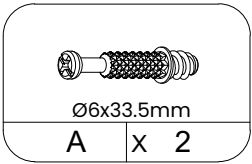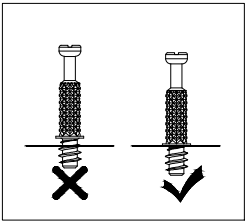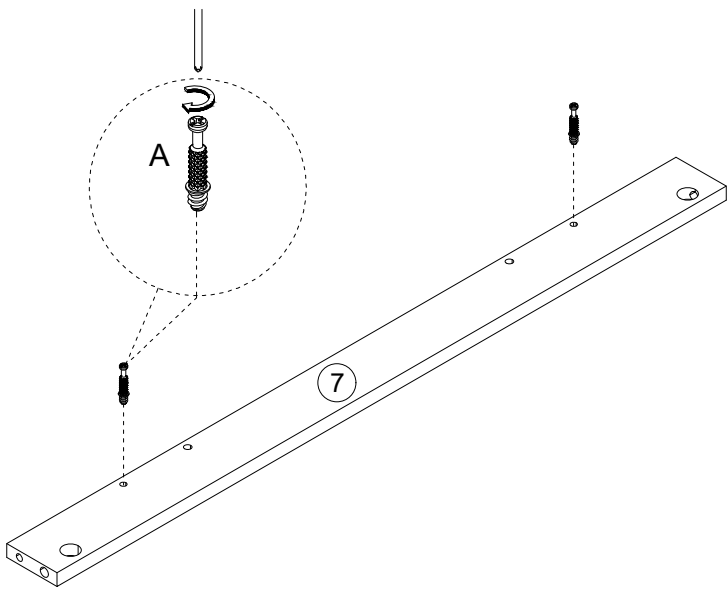


STEP 4

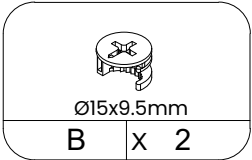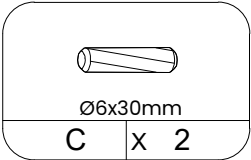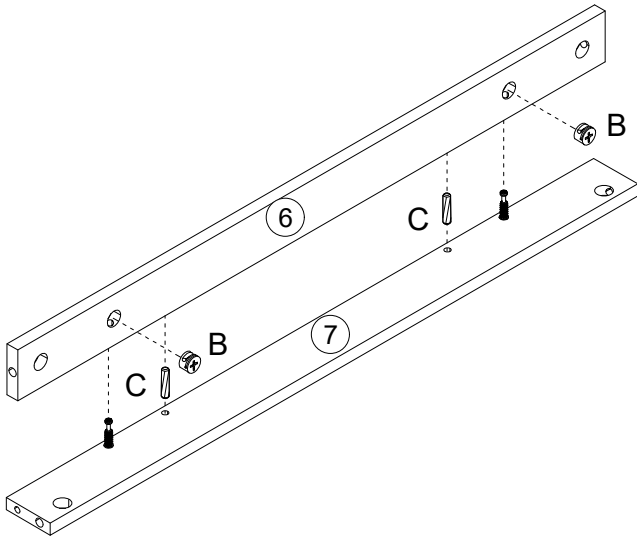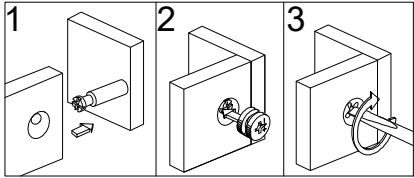


STEP 5

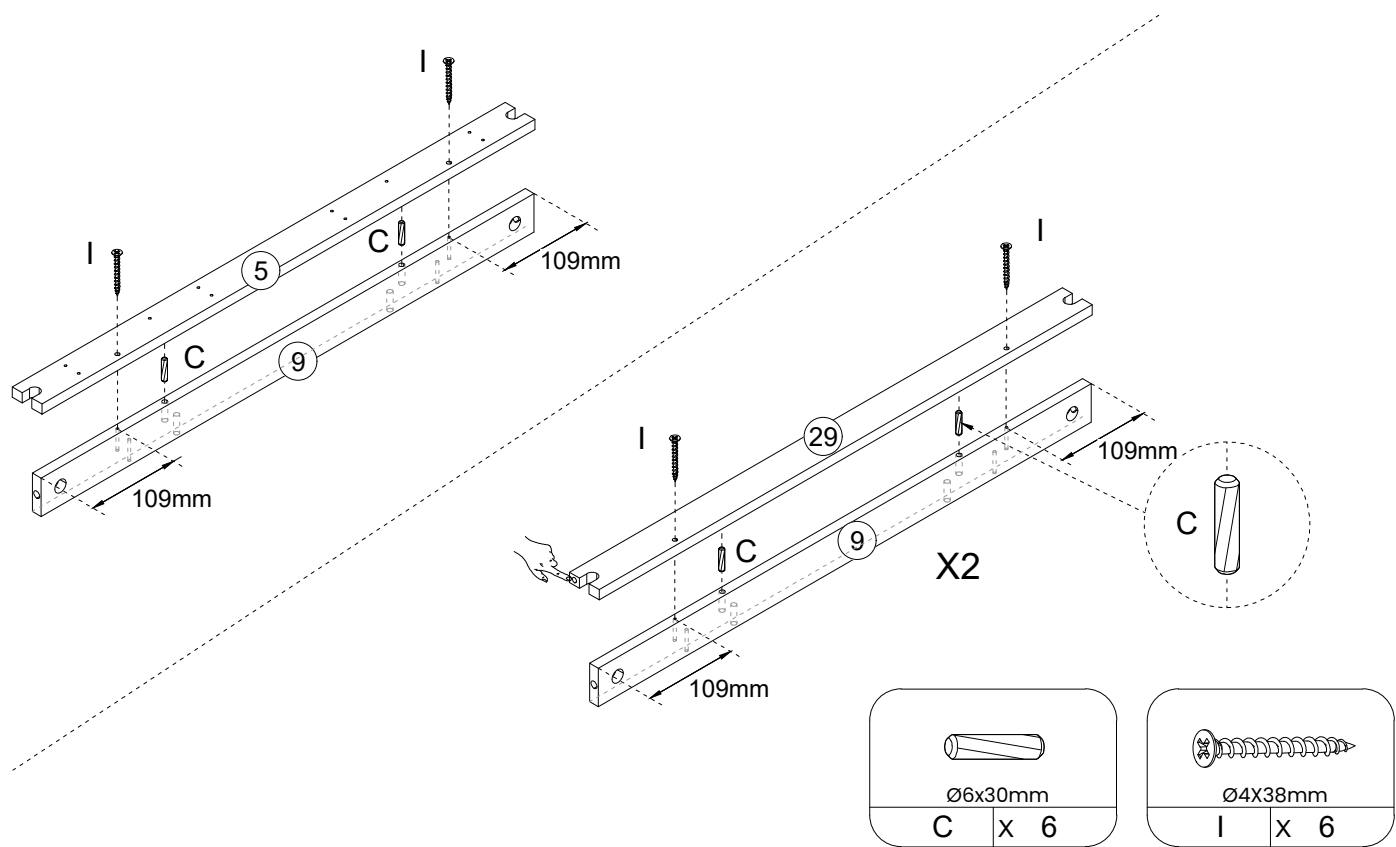


STEP 6

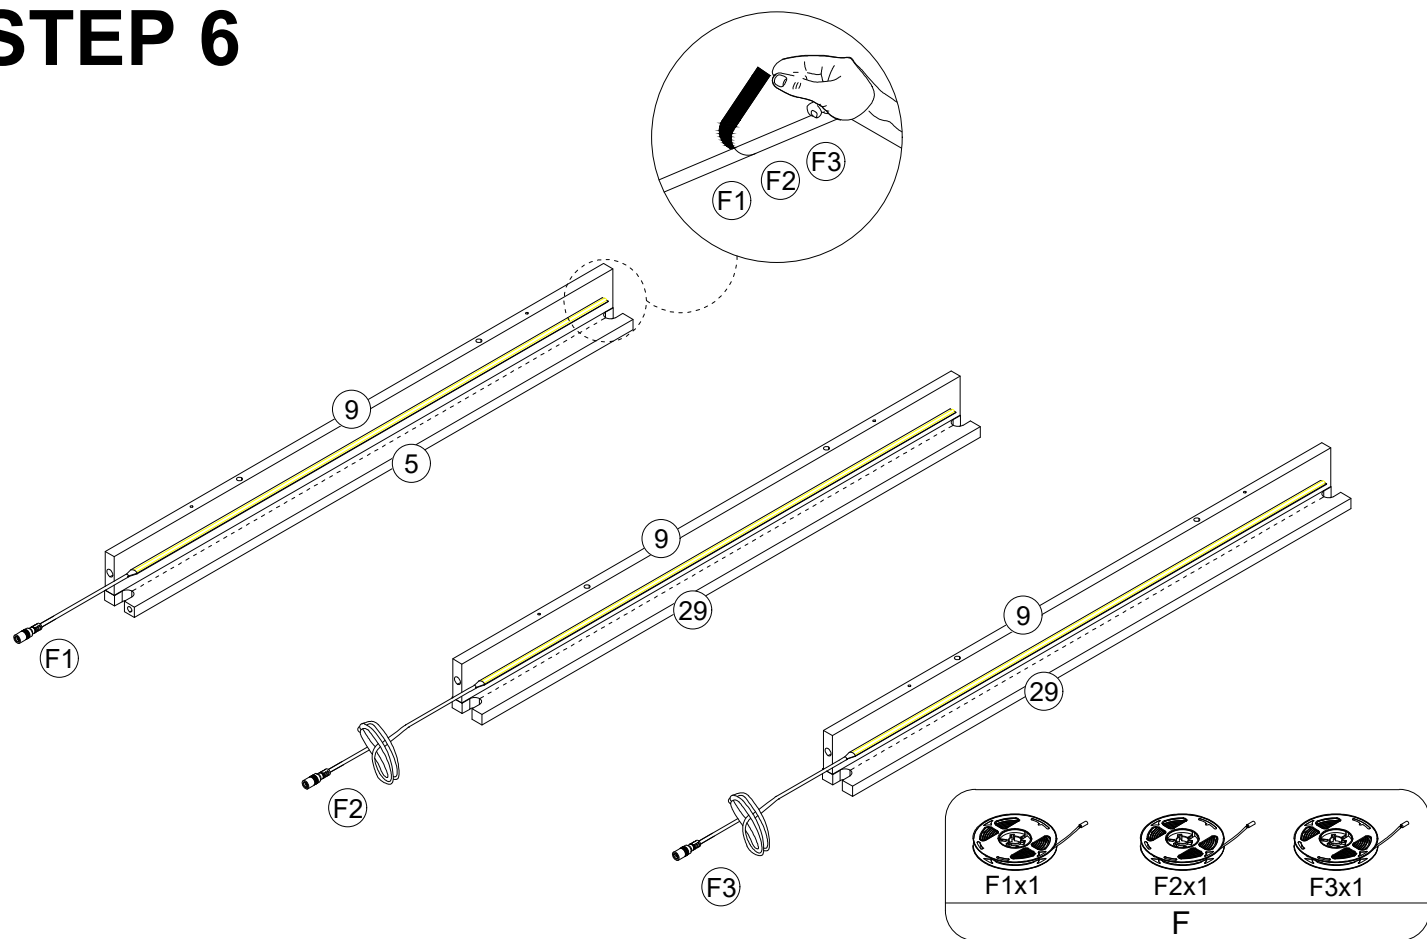

STEP 7




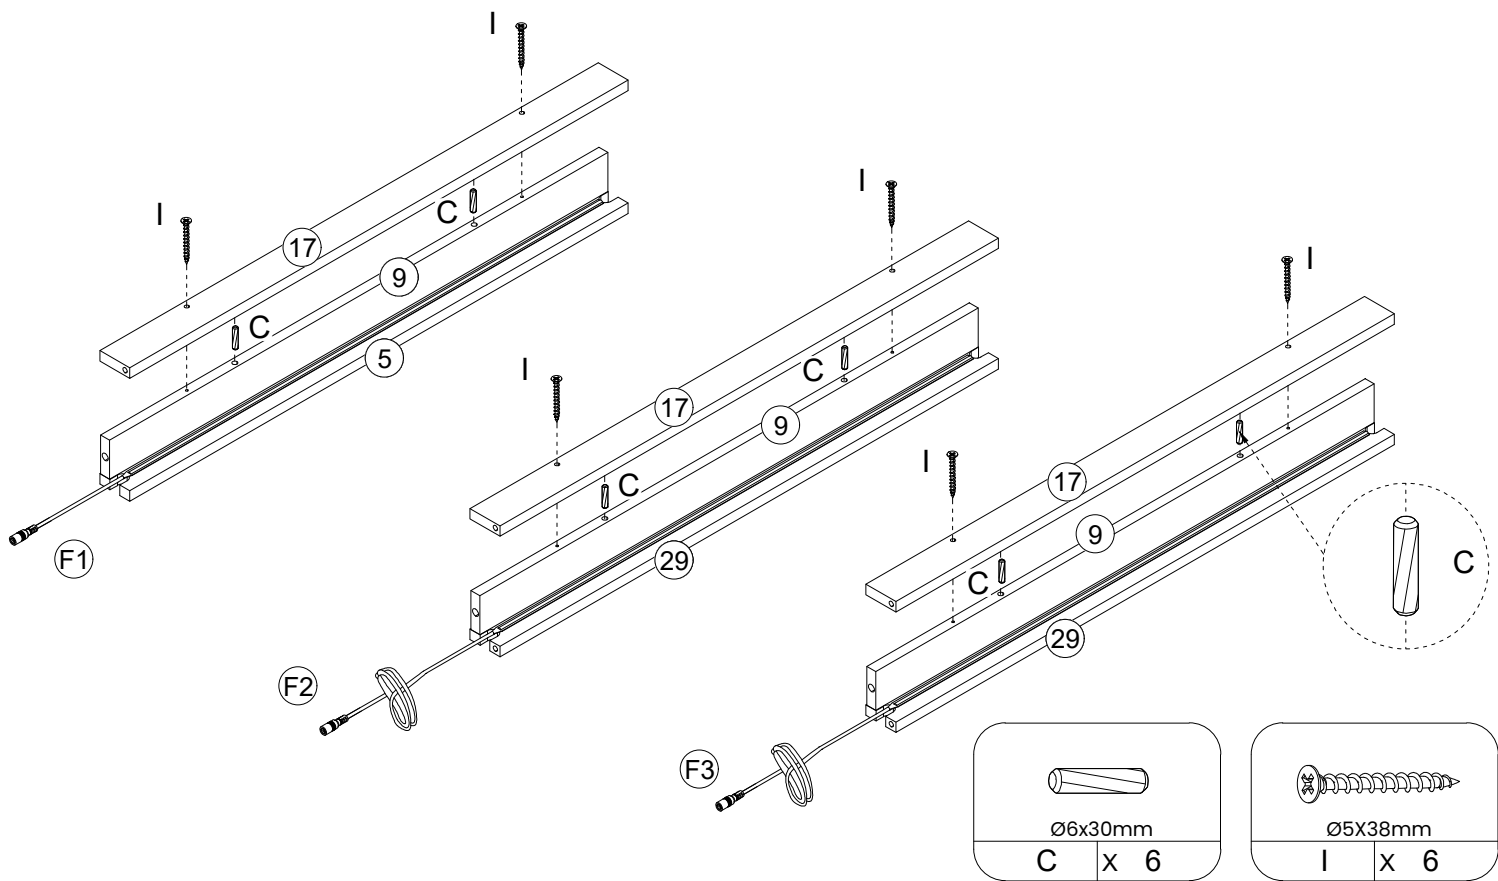


STEP 8


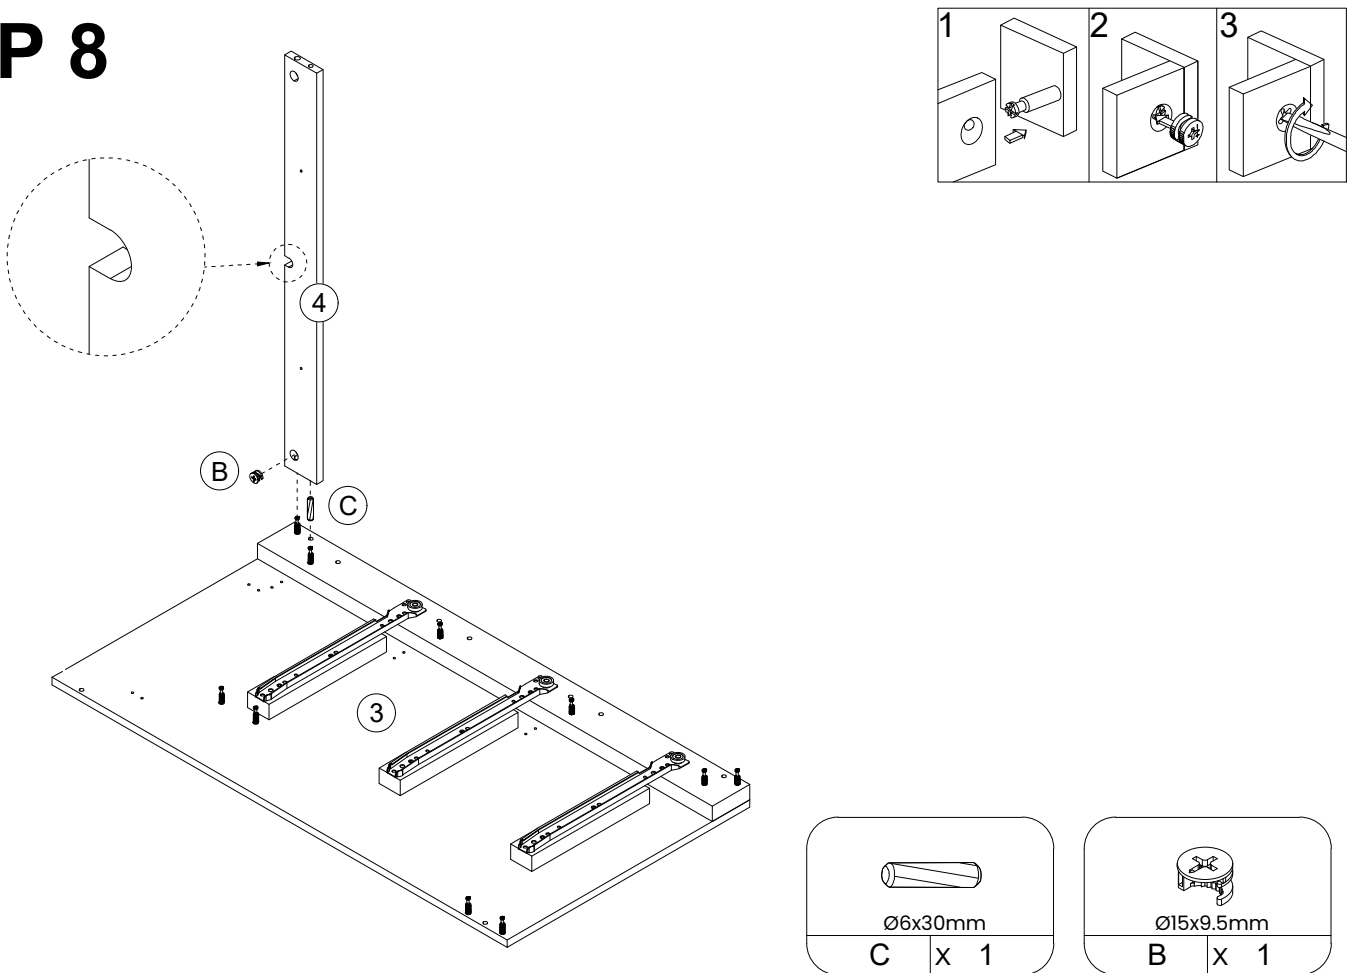


STEP 9





F1=750mm
F2=1150mm
F3=1400mm

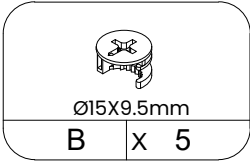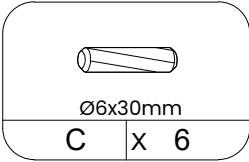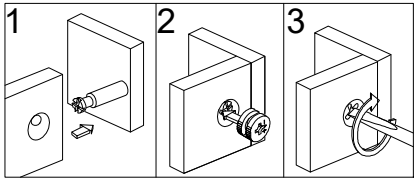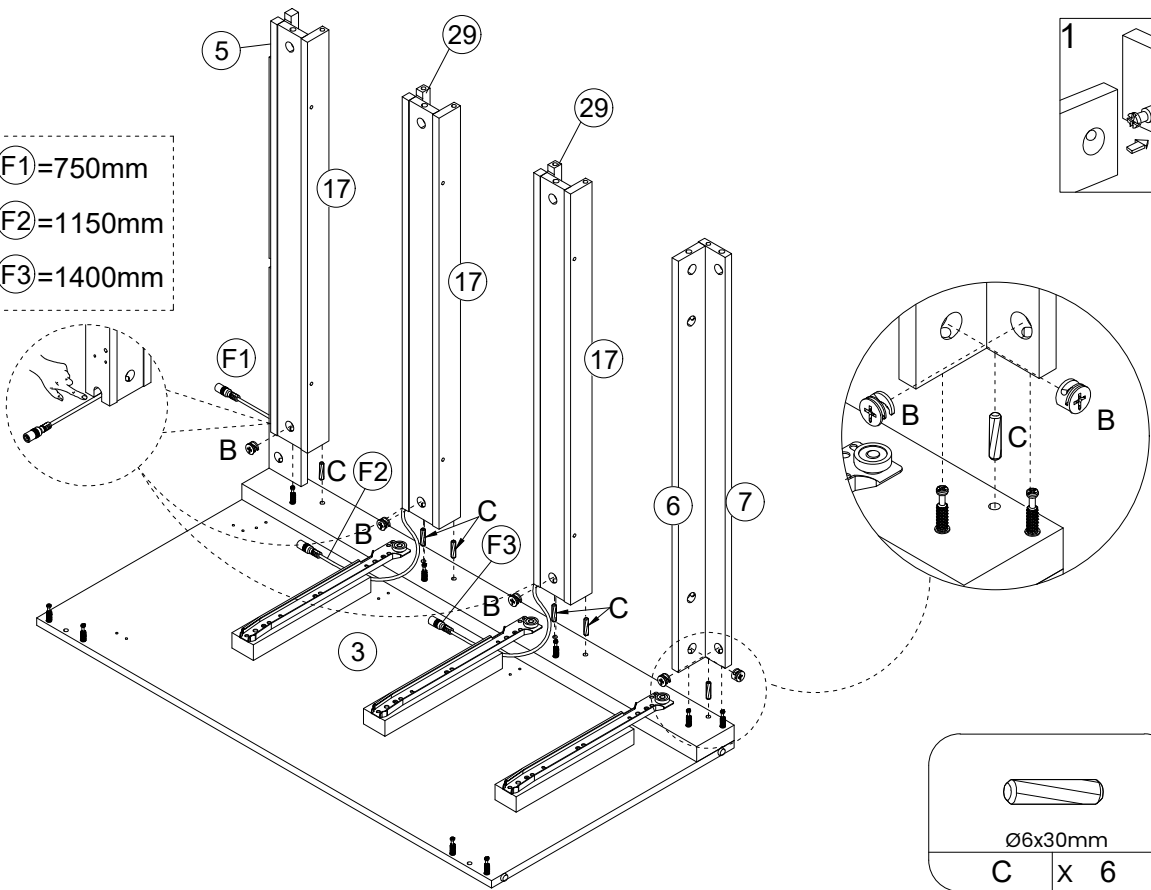





STEP 10

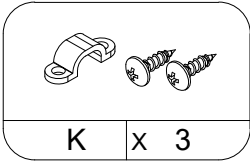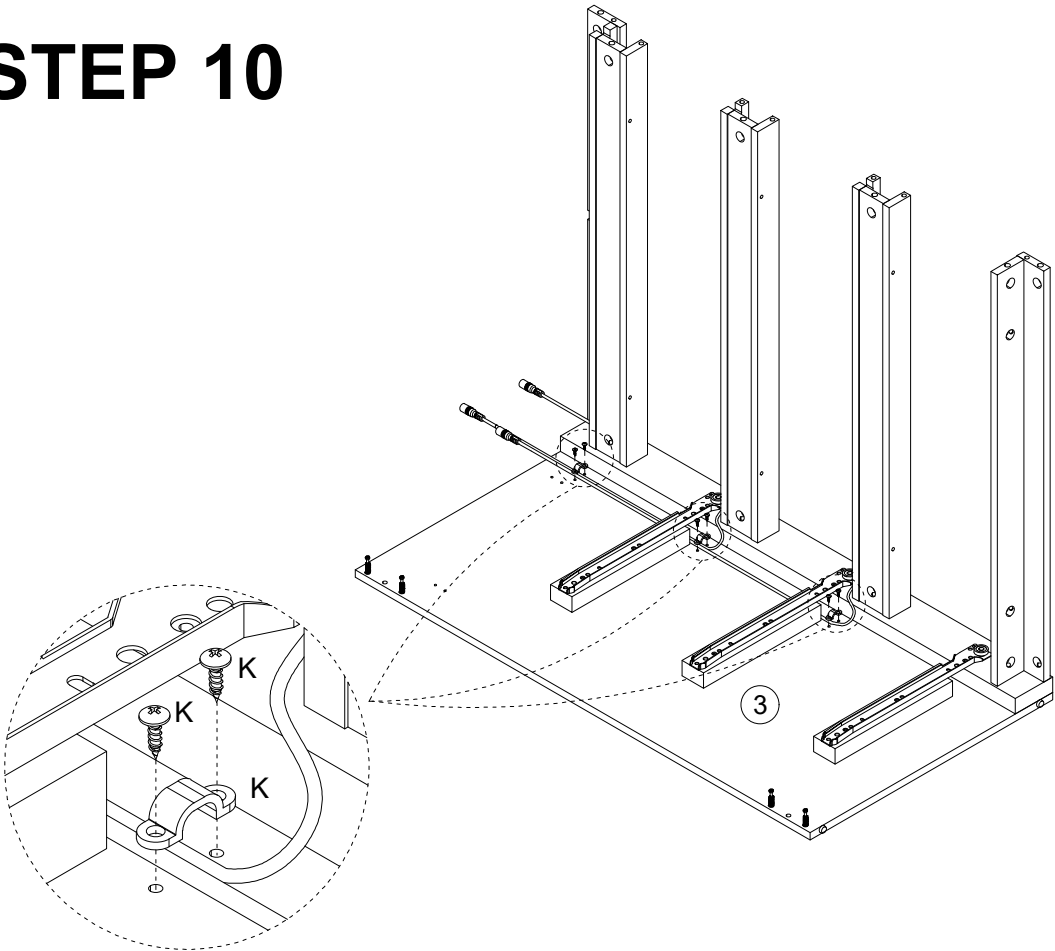


STEP 11

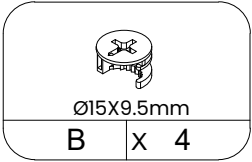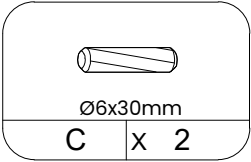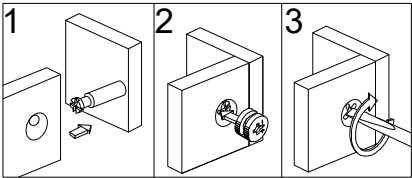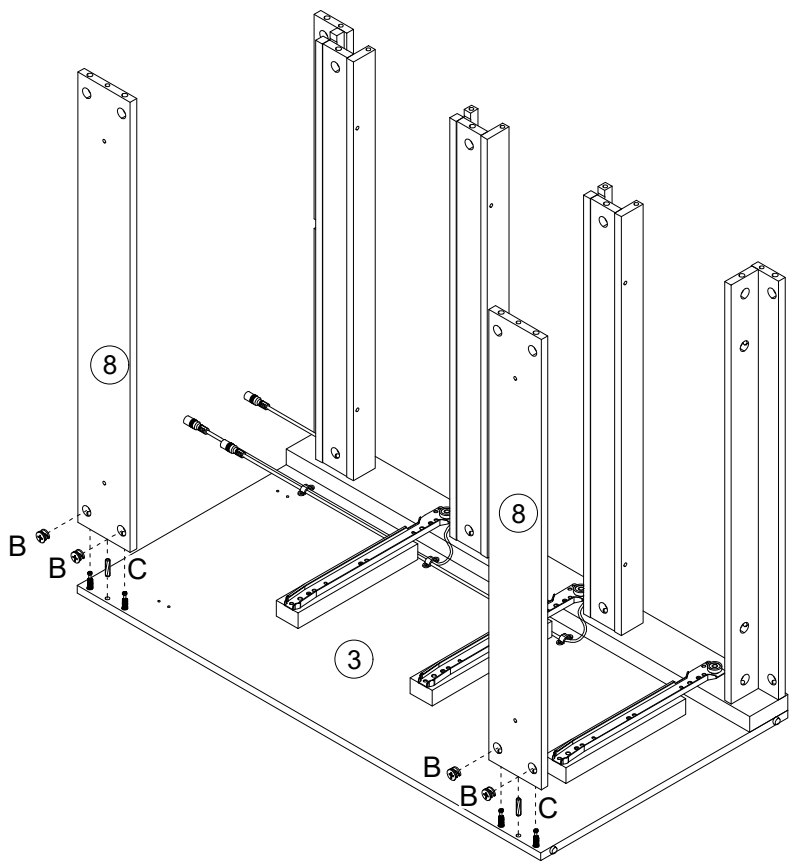

STEP 12

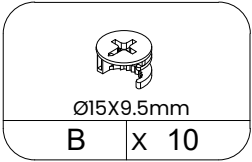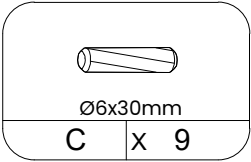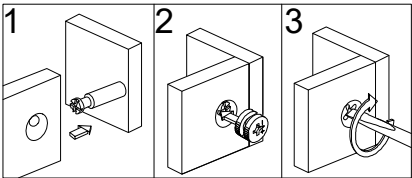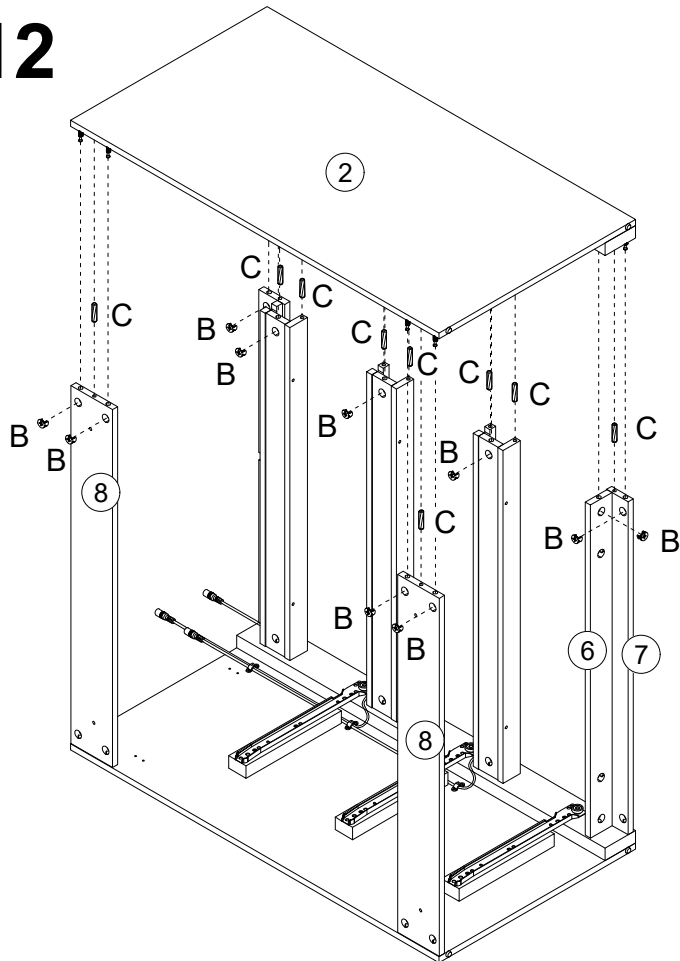


STEP 13

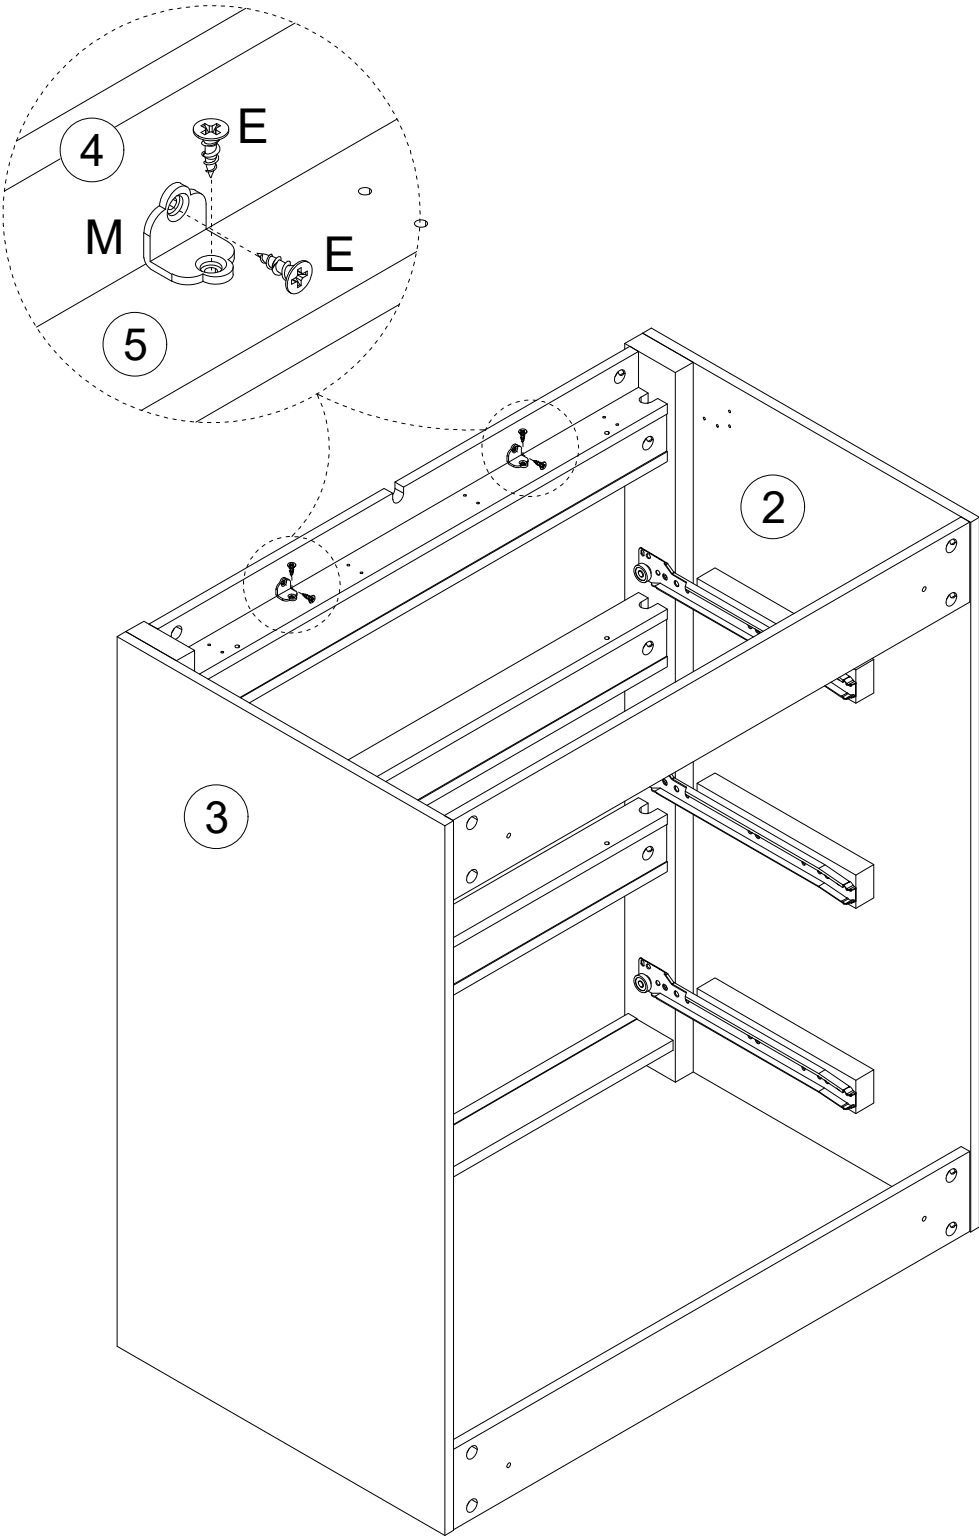

		
M	x	2

		
Ø3.5x12mm		
E	x	4



STEP 14

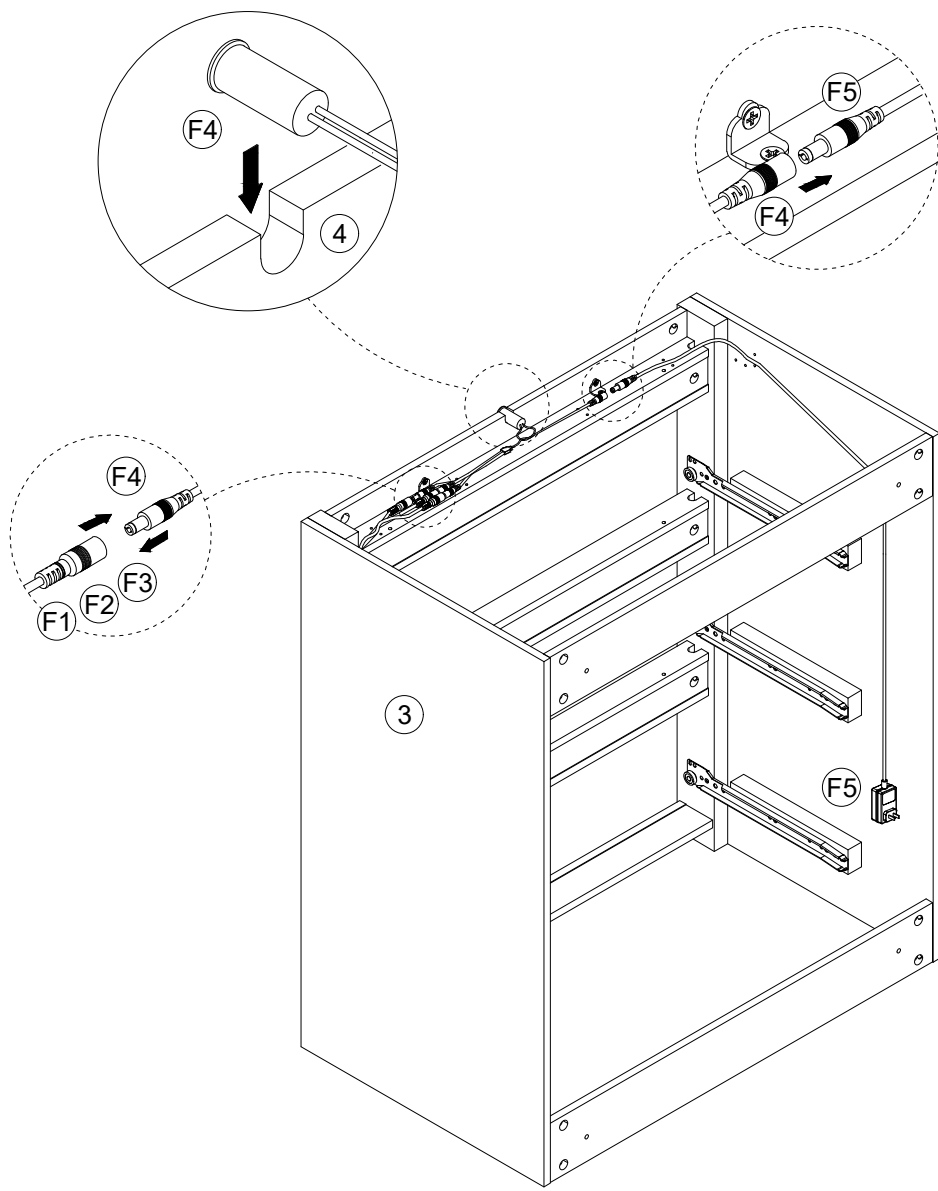




F4	x	1

F5	x	1





STEP 15

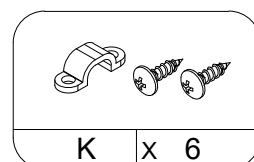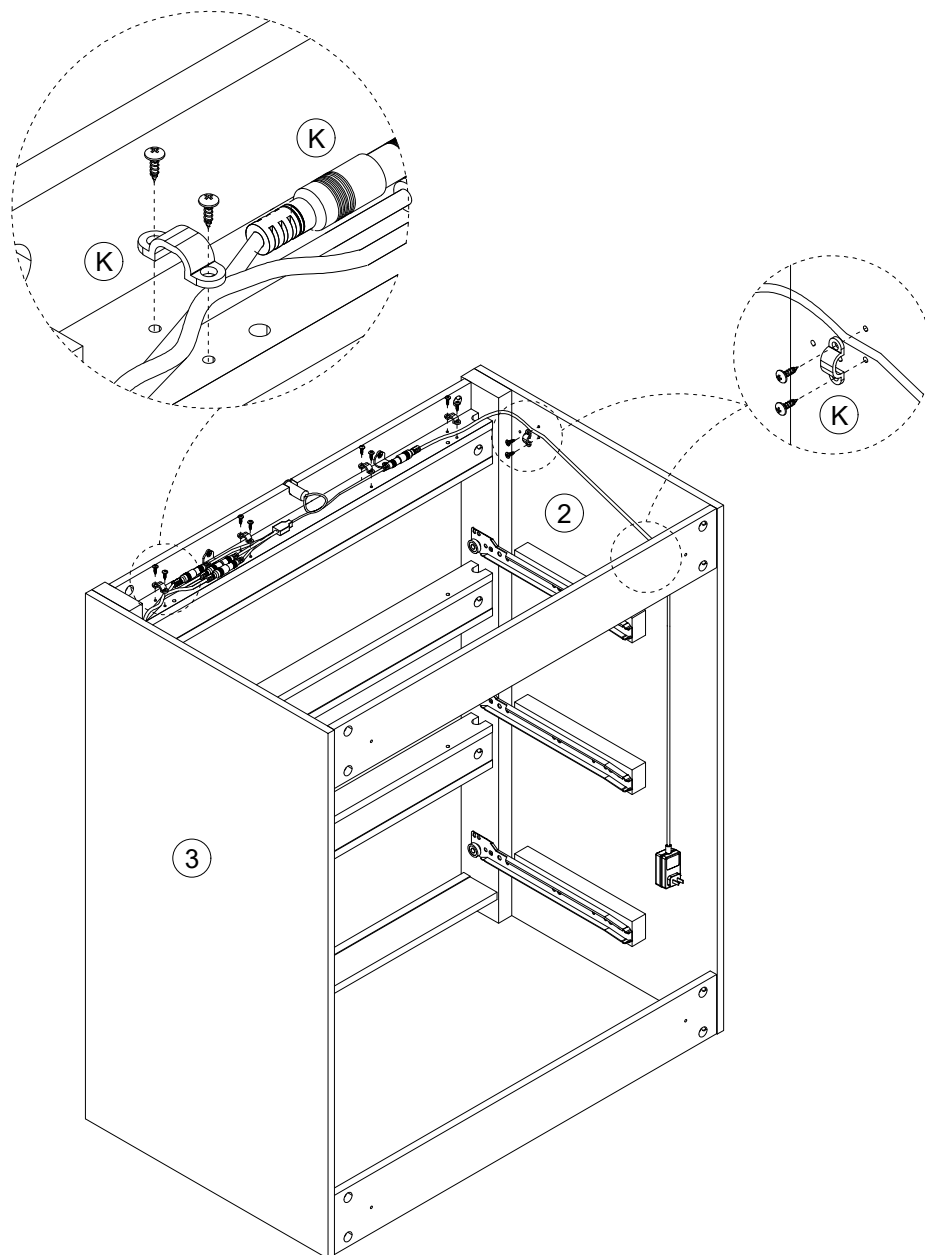







STEP 16

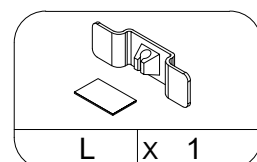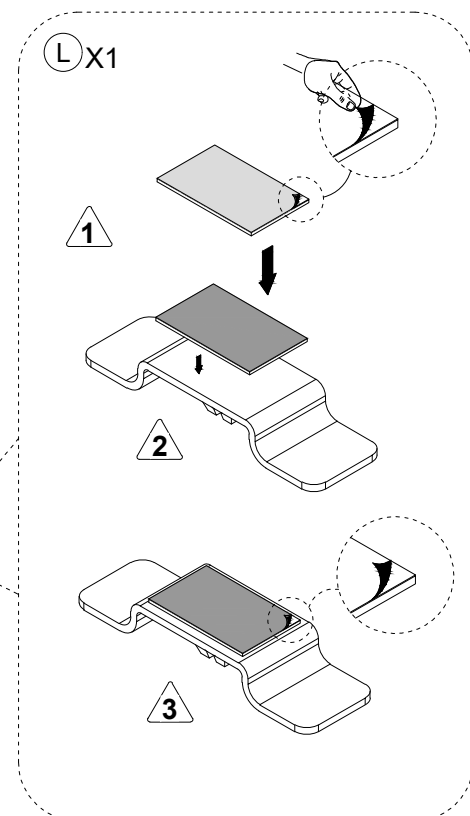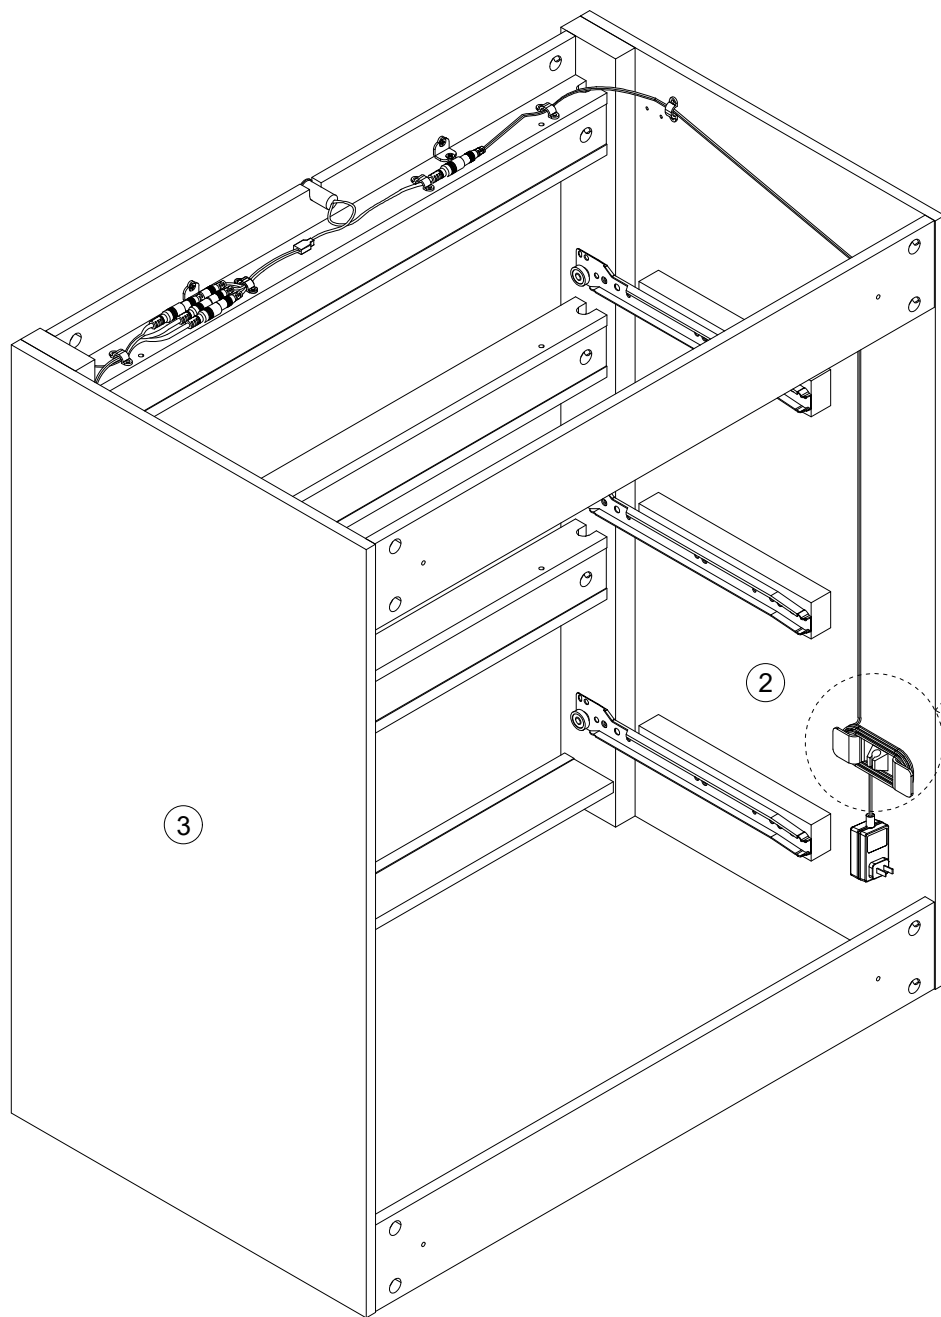


STEP 17

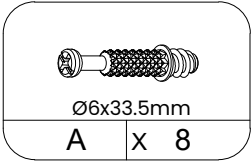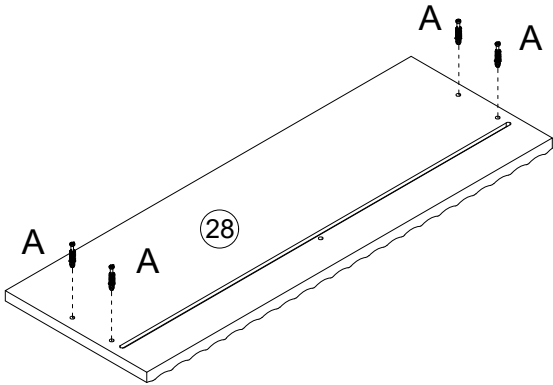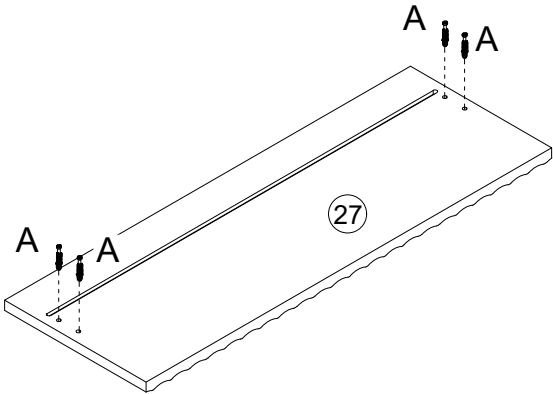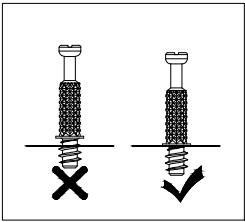



STEP 18

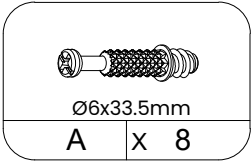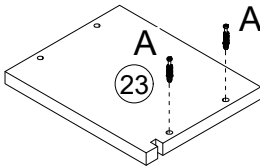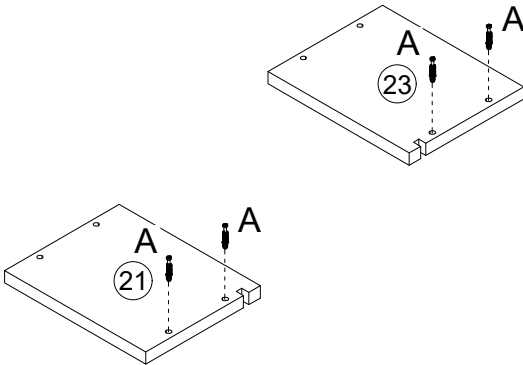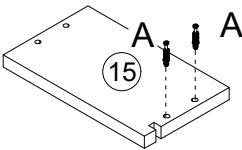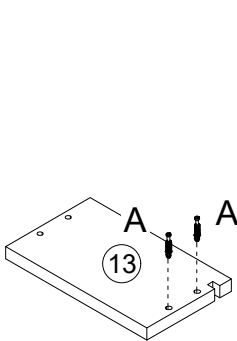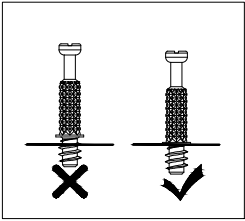


STEP 19

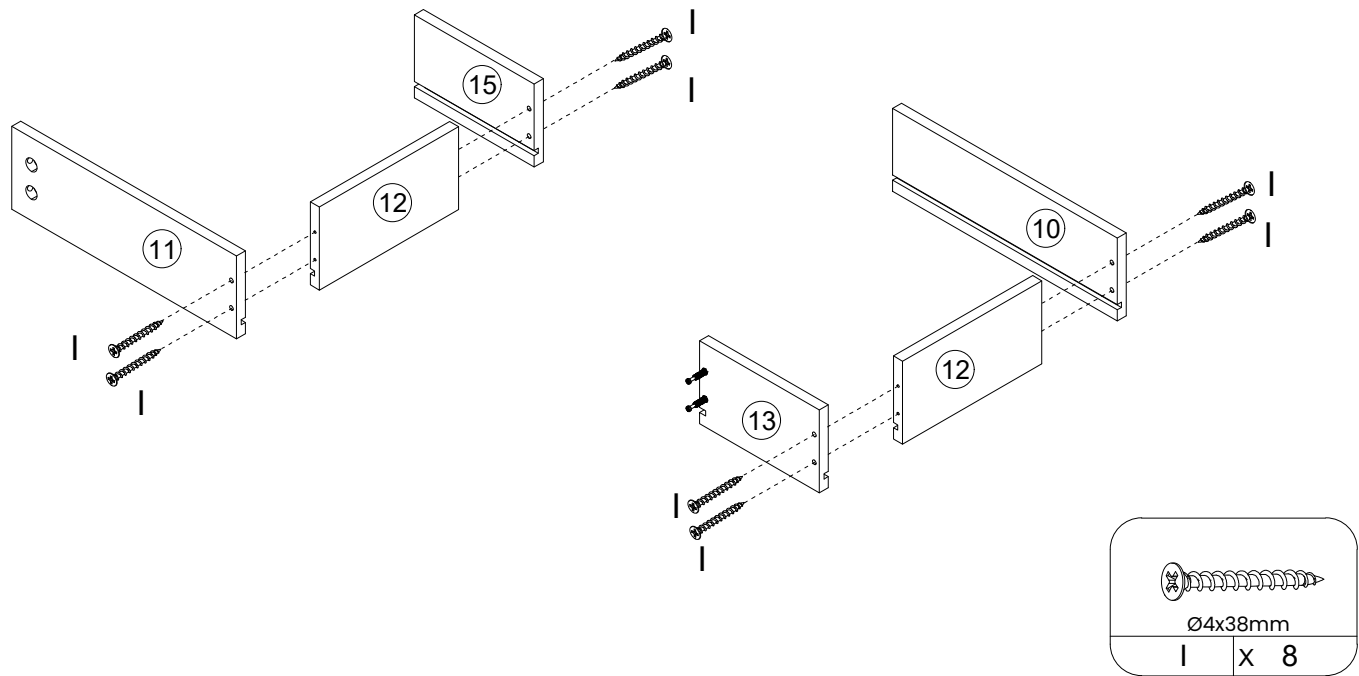




STEP 20

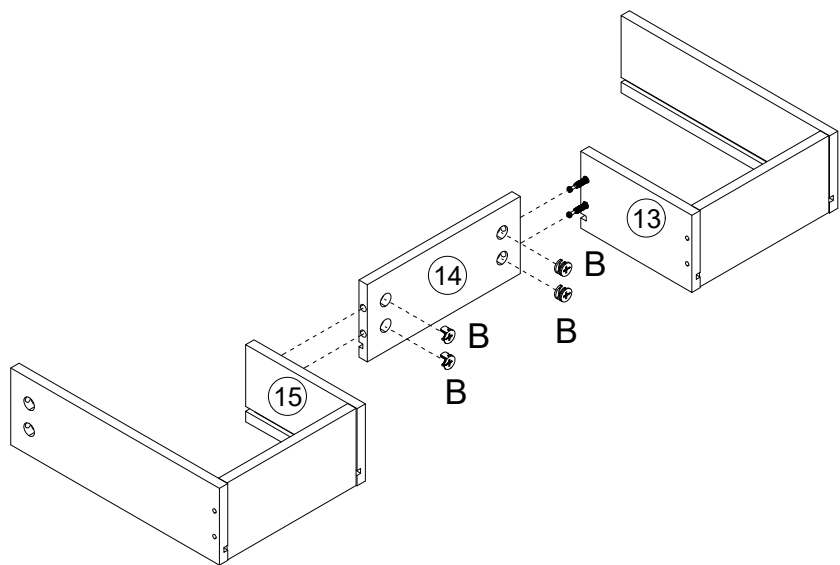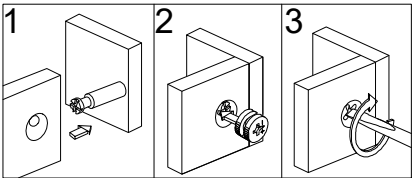


STEP 21

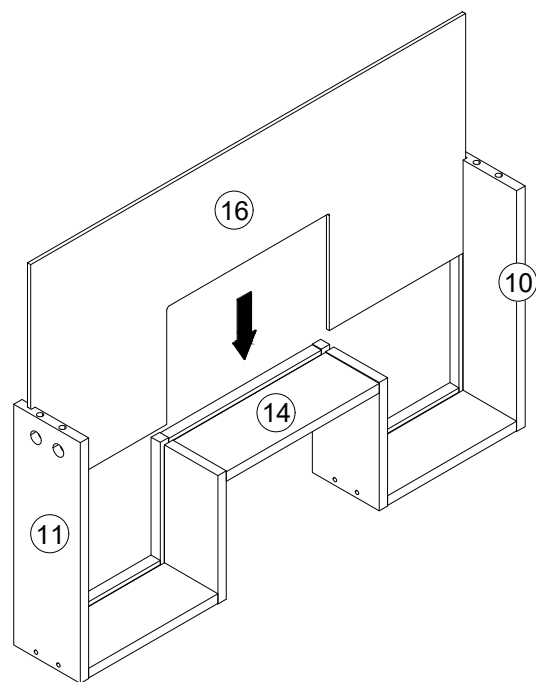


STEP 22

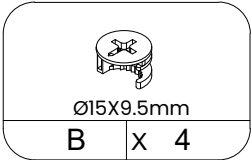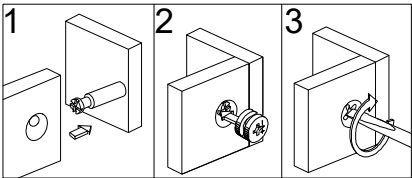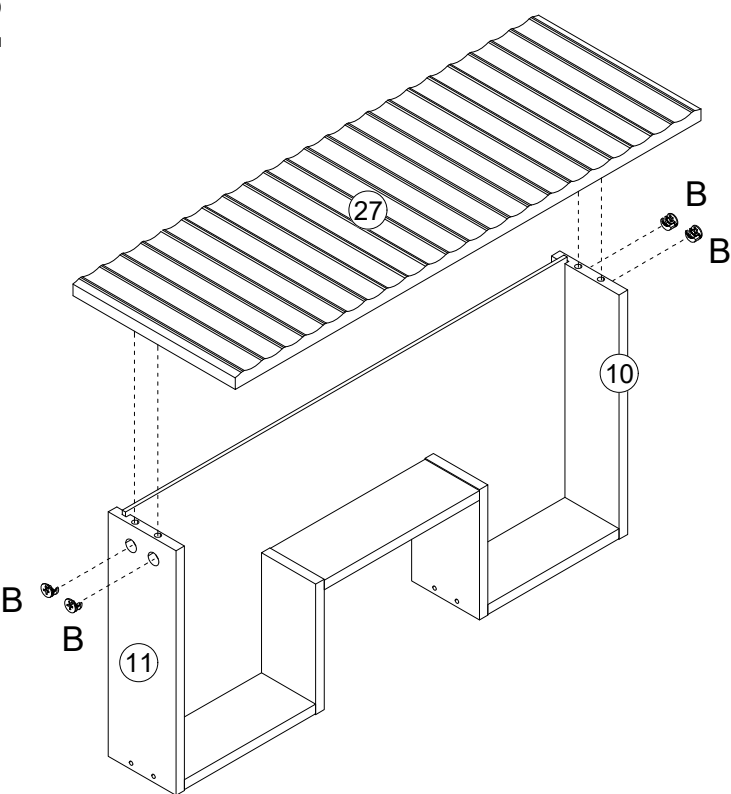




STEP 23

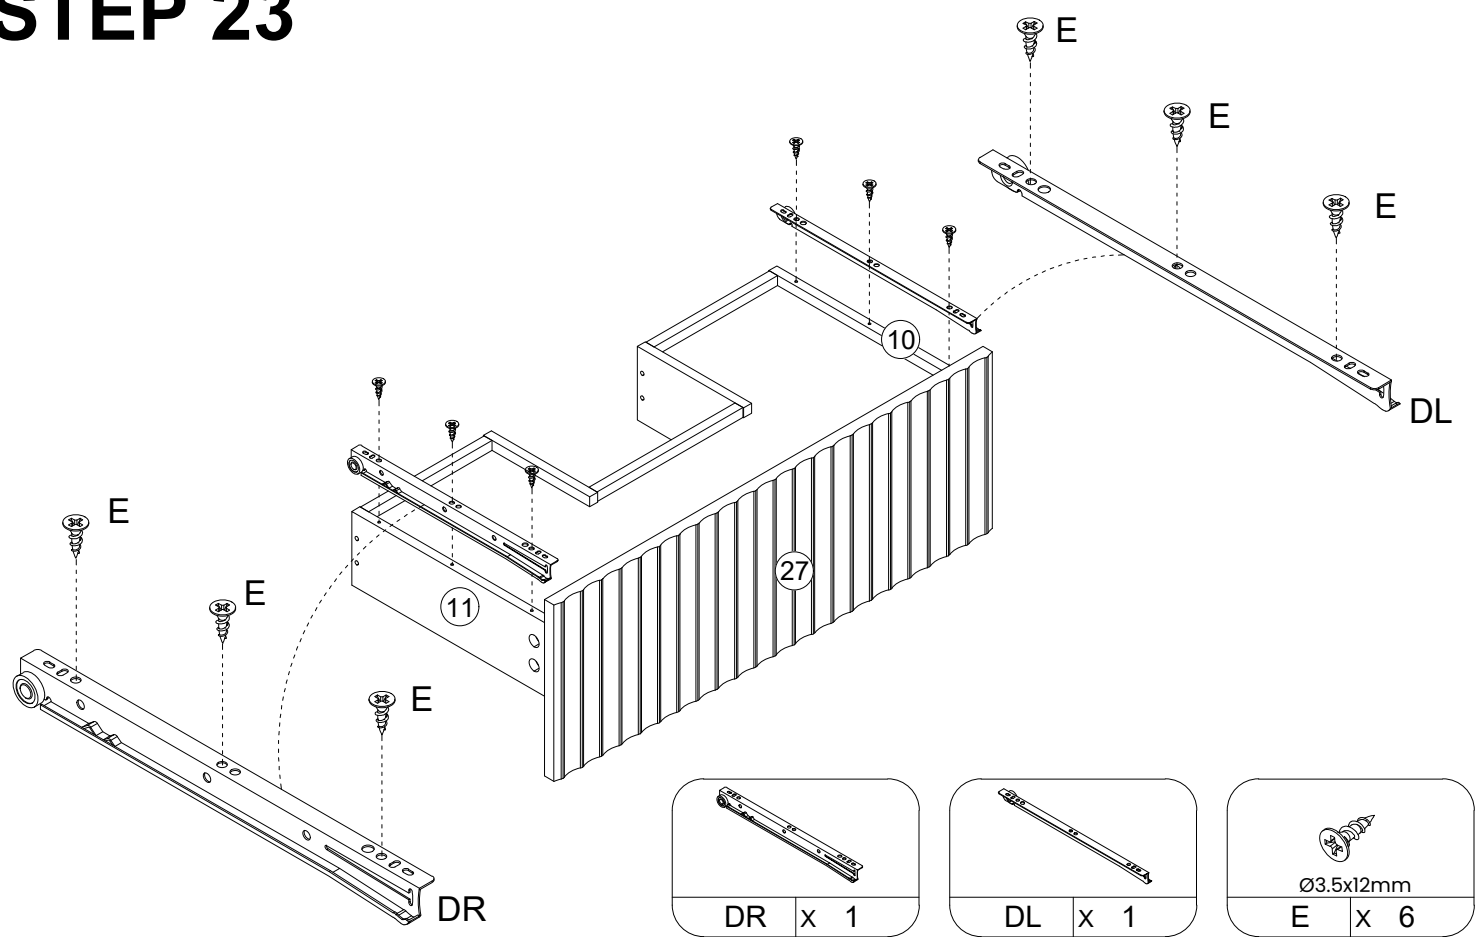


STEP 24

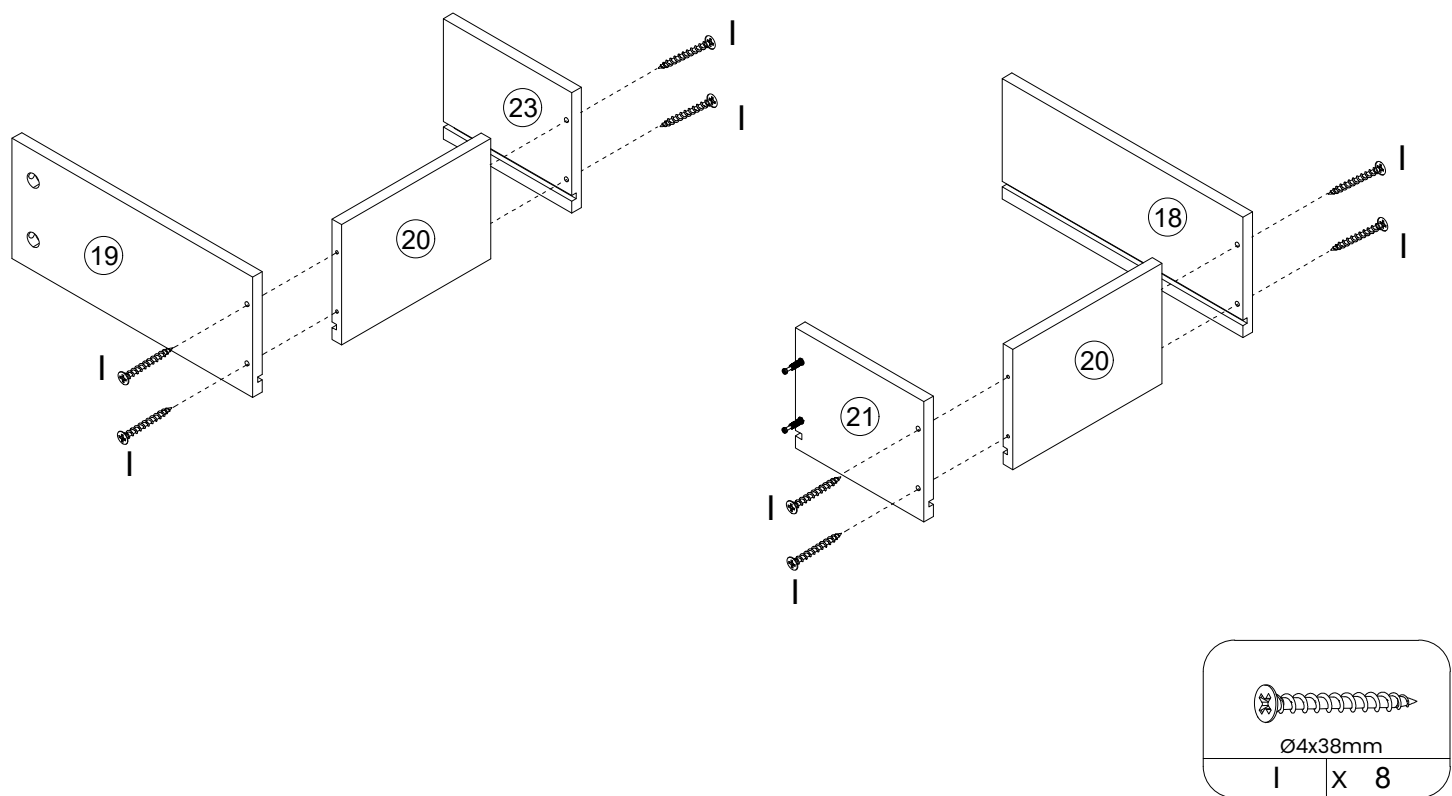




STEP 25

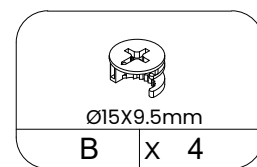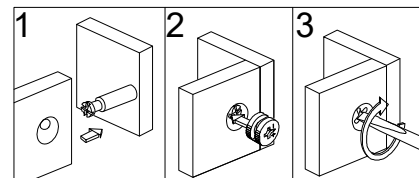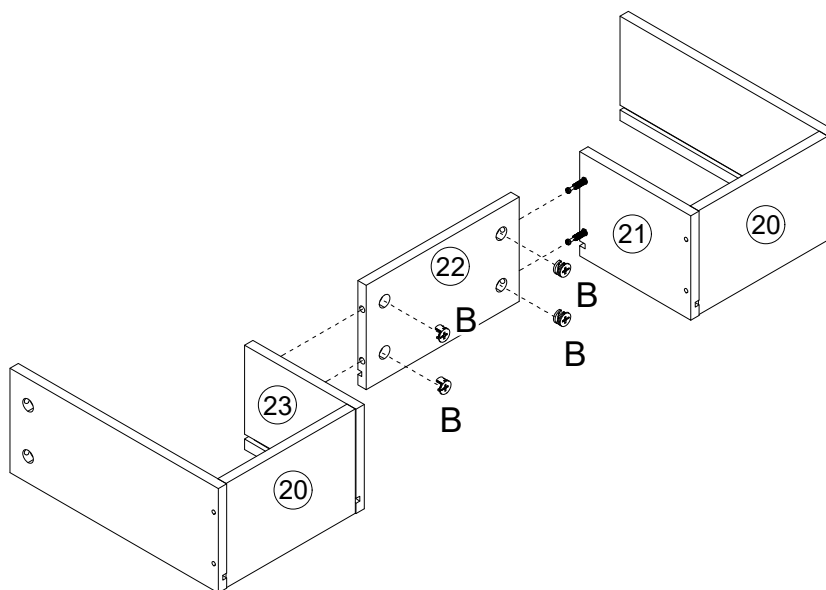





STEP 26

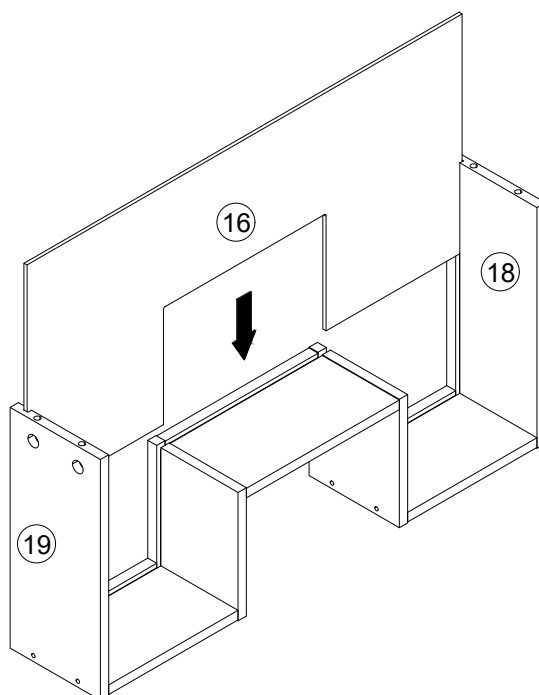



STEP 27

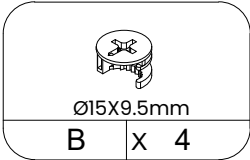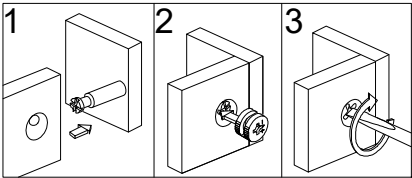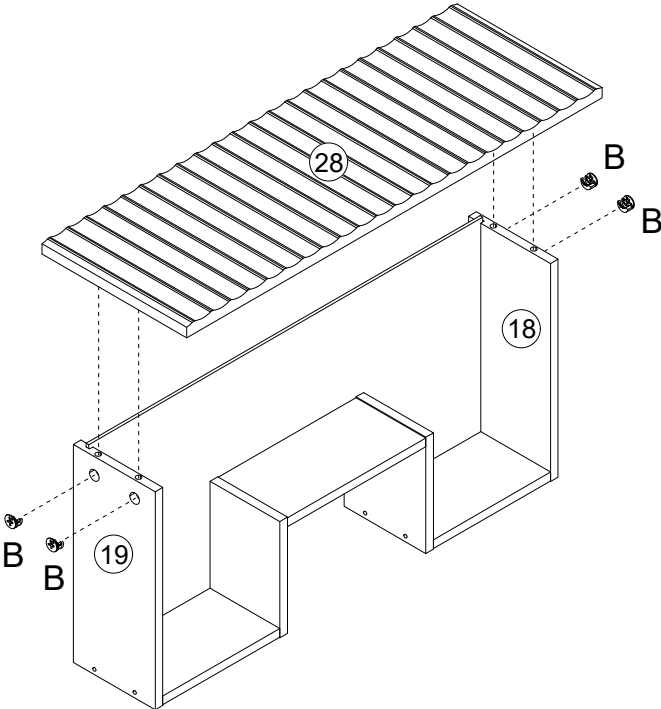




STEP 28

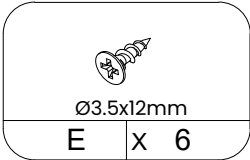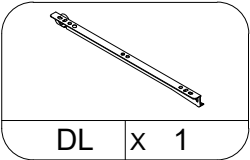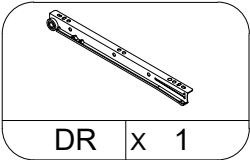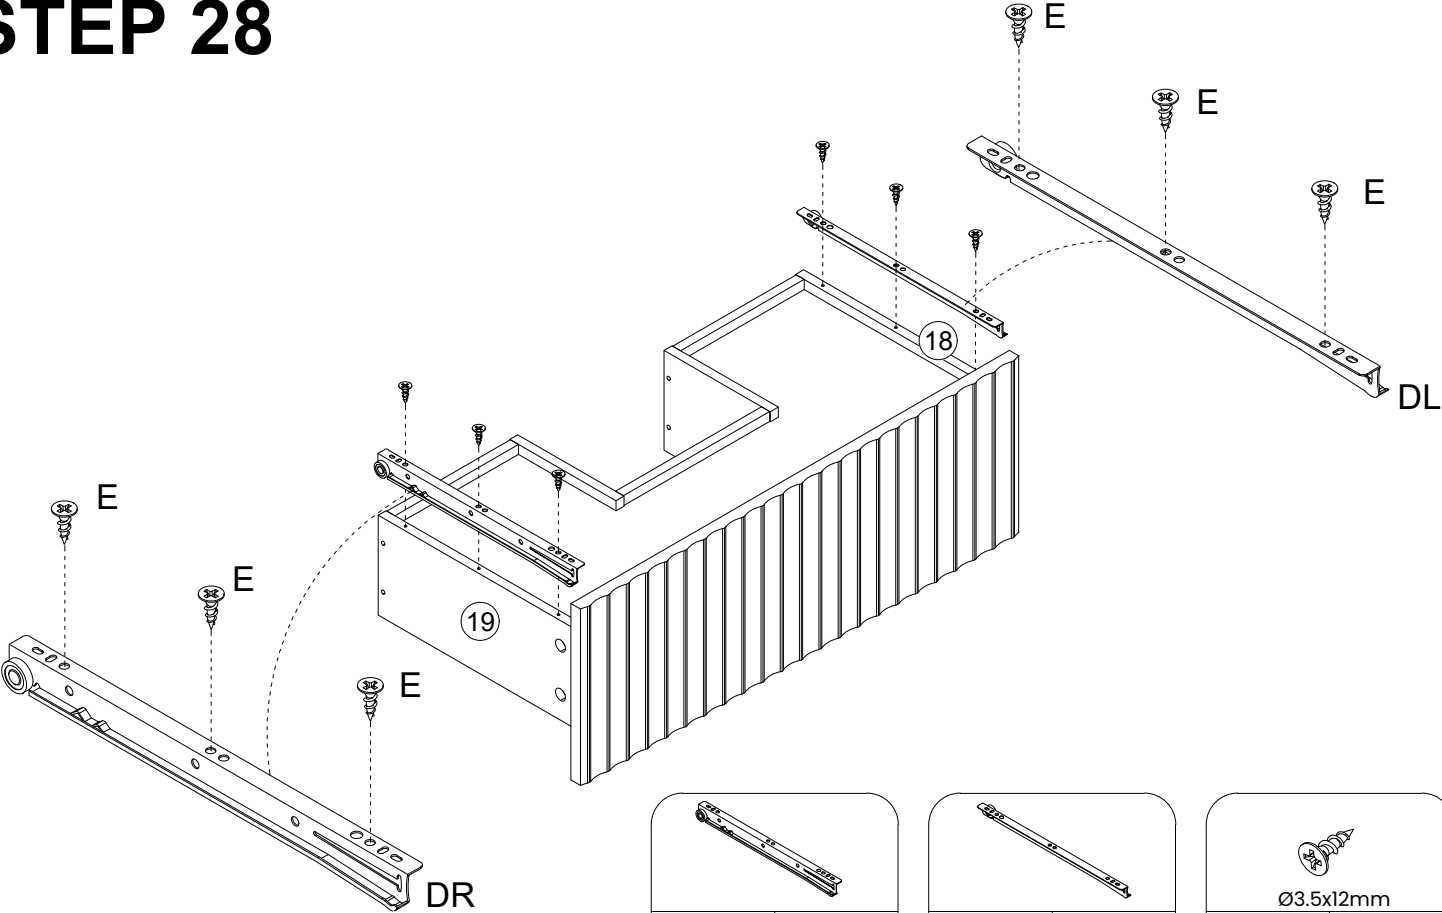



STEP 29

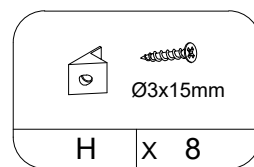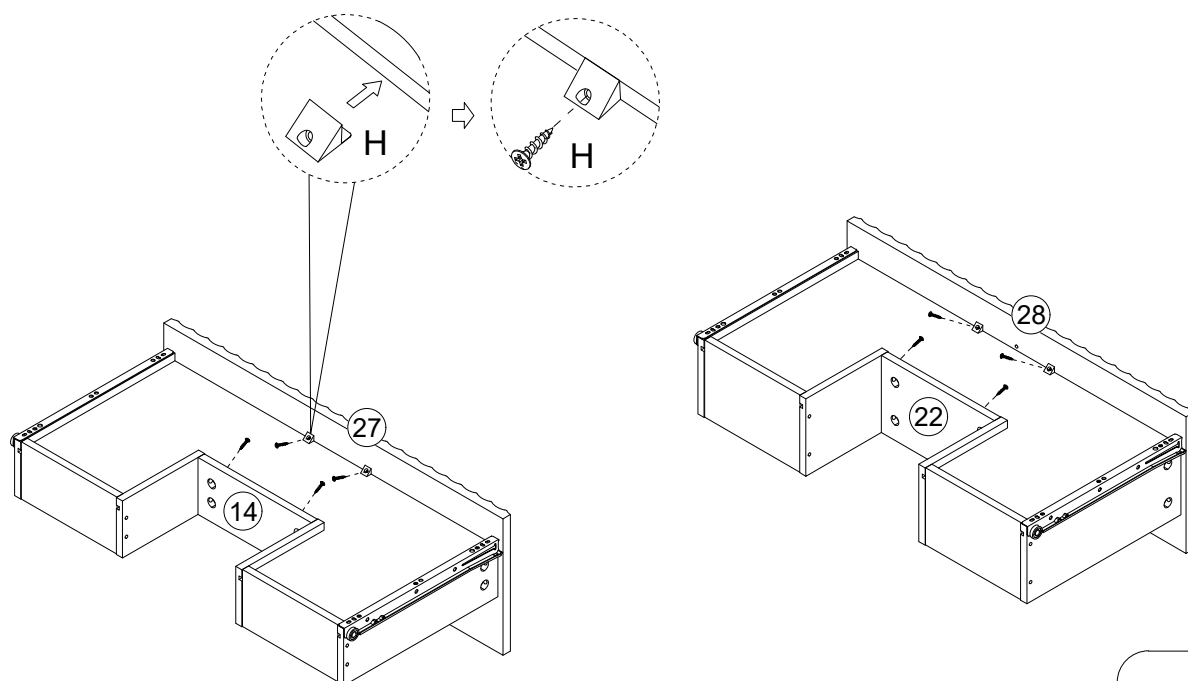


STEP 30

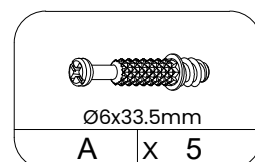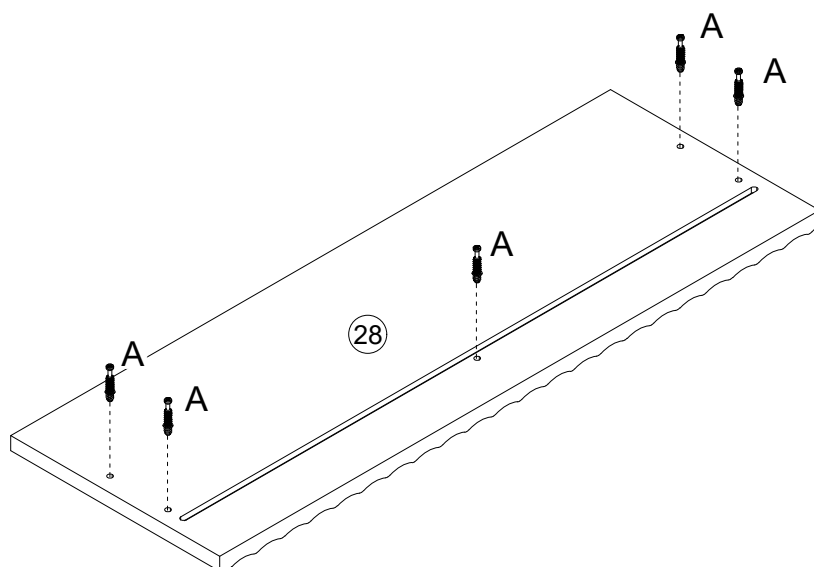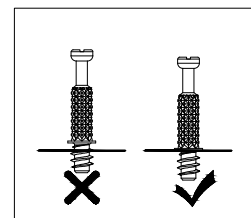




STEP 31

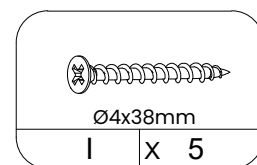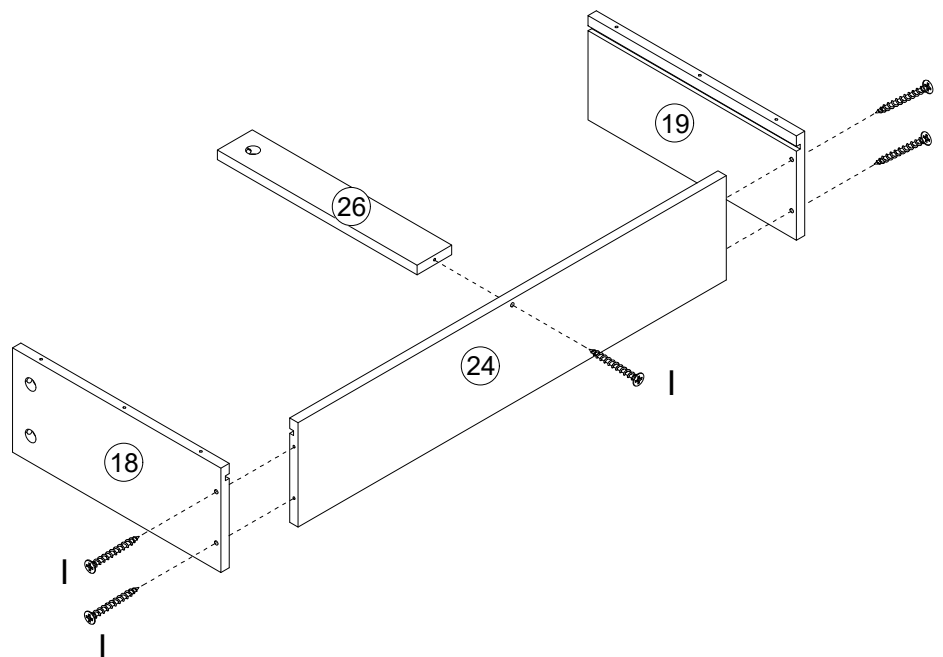





STEP 32

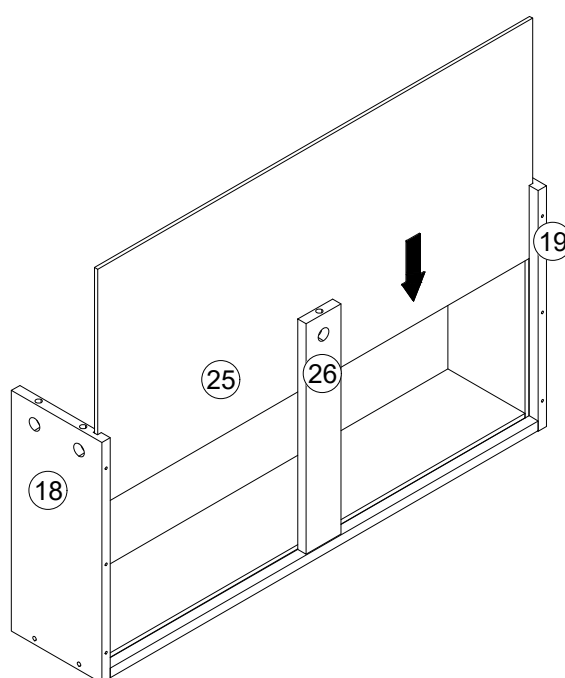


STEP 33

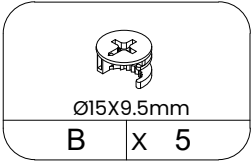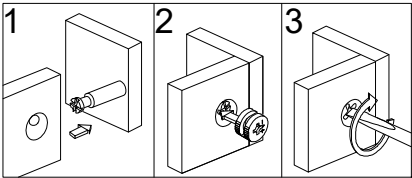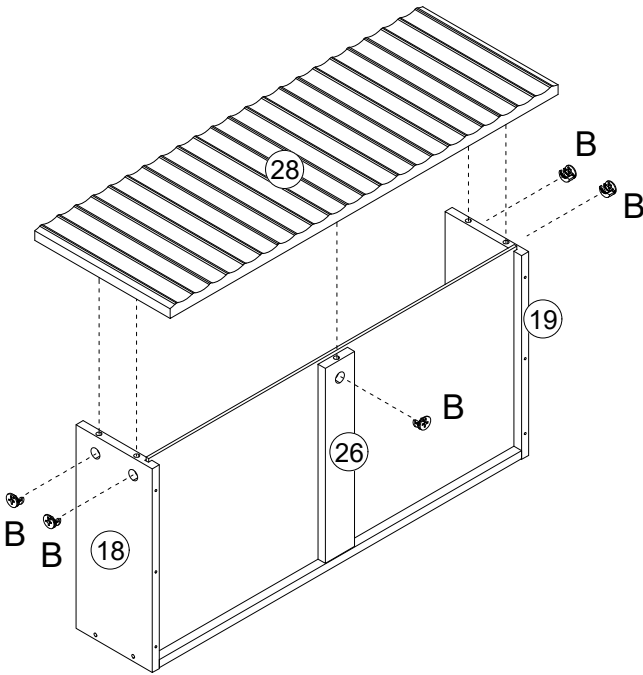

STEP 34

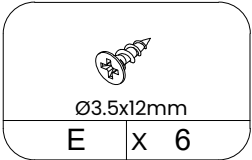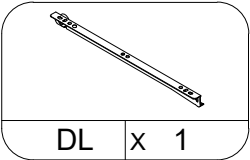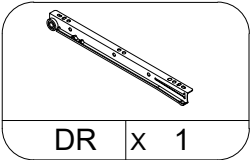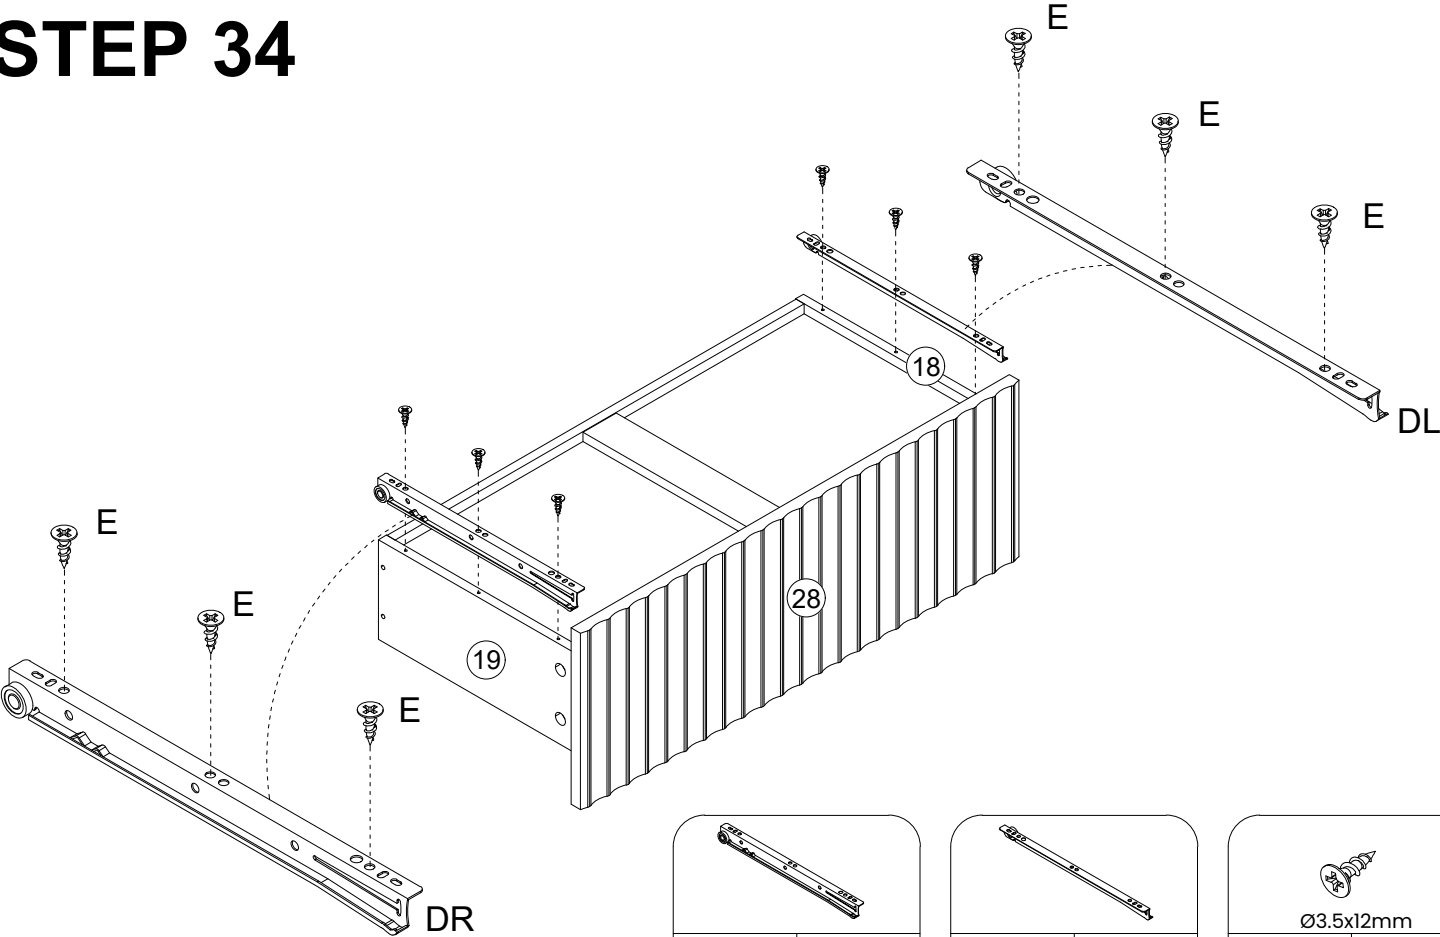


STEP 35

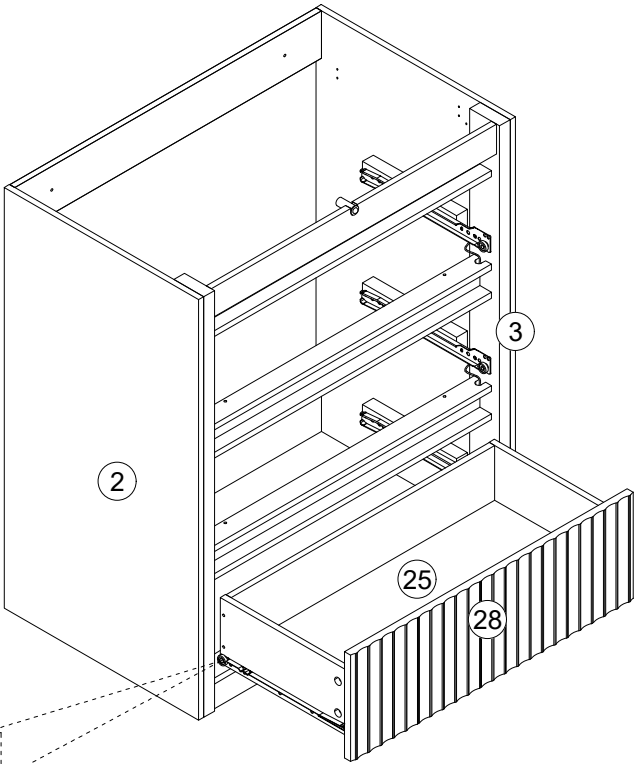

Cabinet Slide arms

Drawer Slide brackets


STEP 36

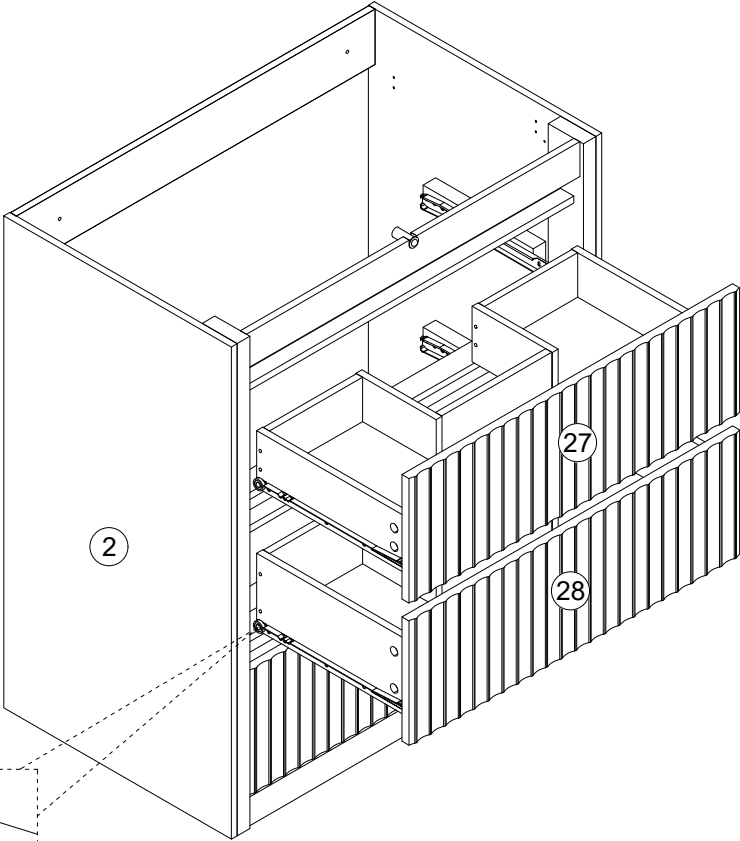

Cabinet Slide arms

Drawer Slide brackets

STEP 37






Ø4x45mm

D x 2






Ø6x30mm

G x 2

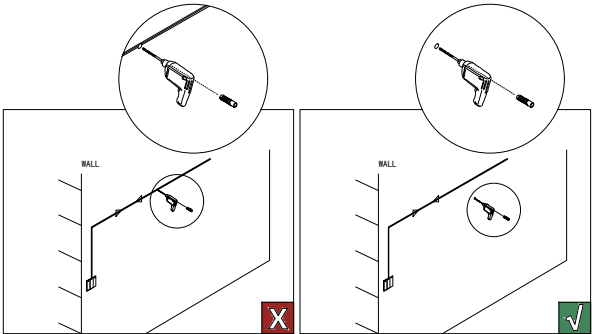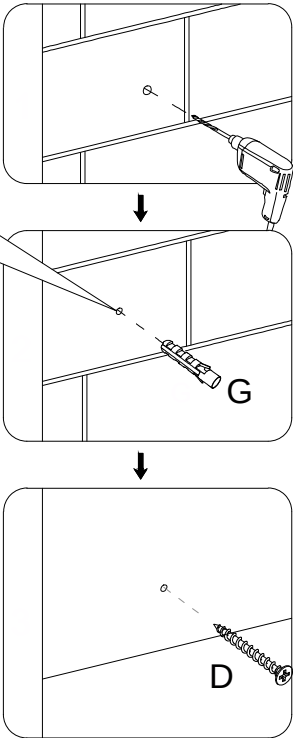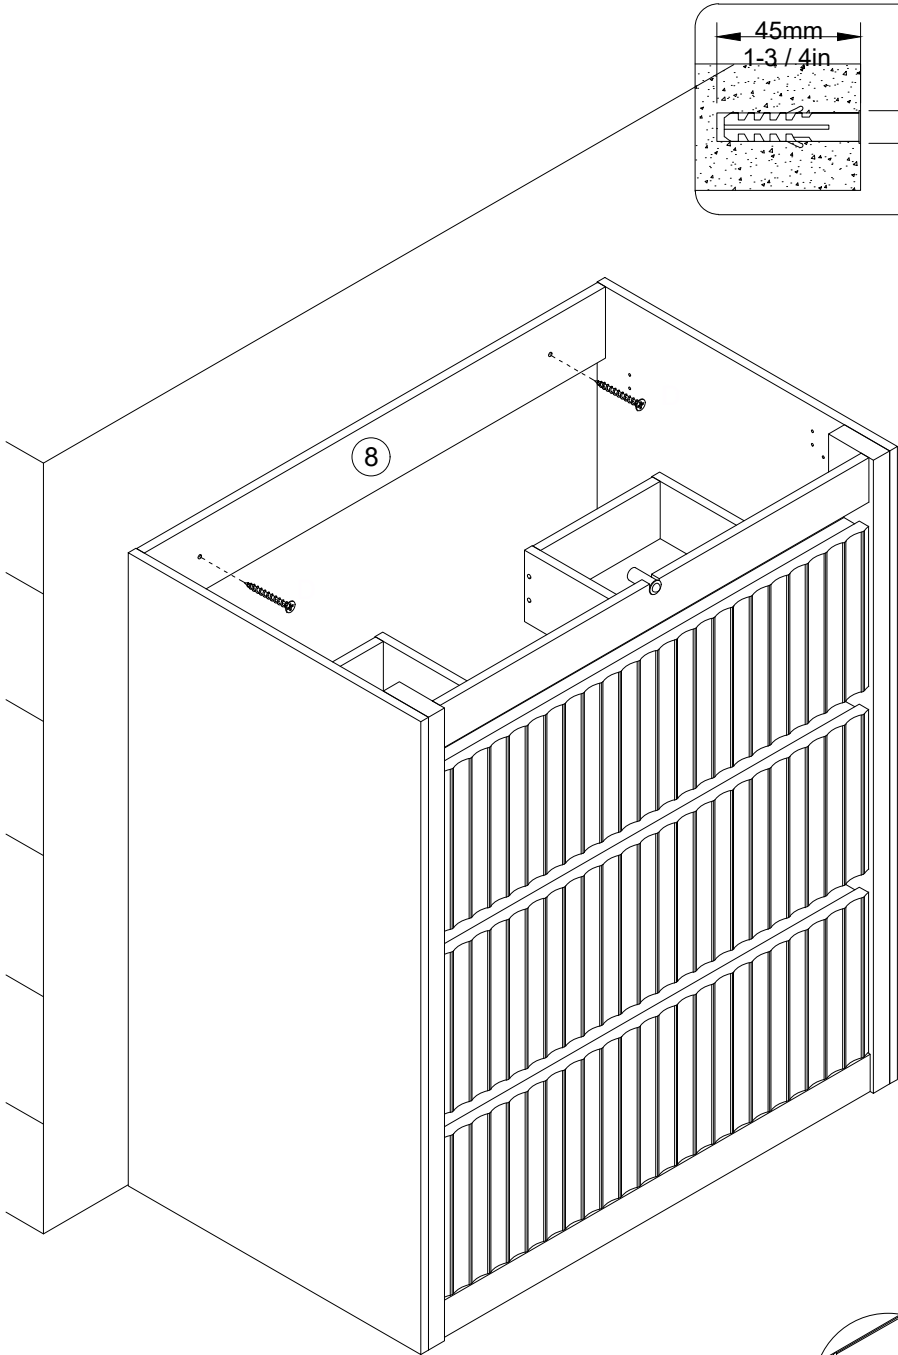

STEP 38

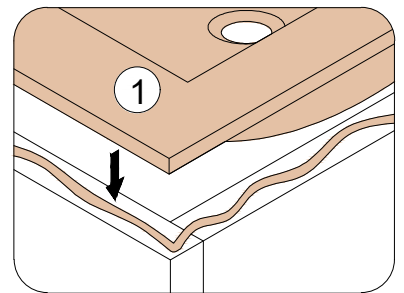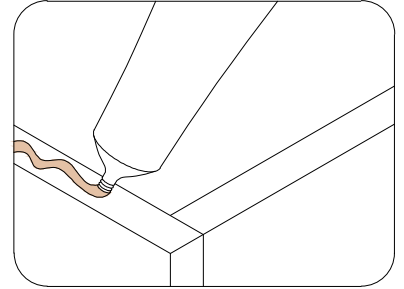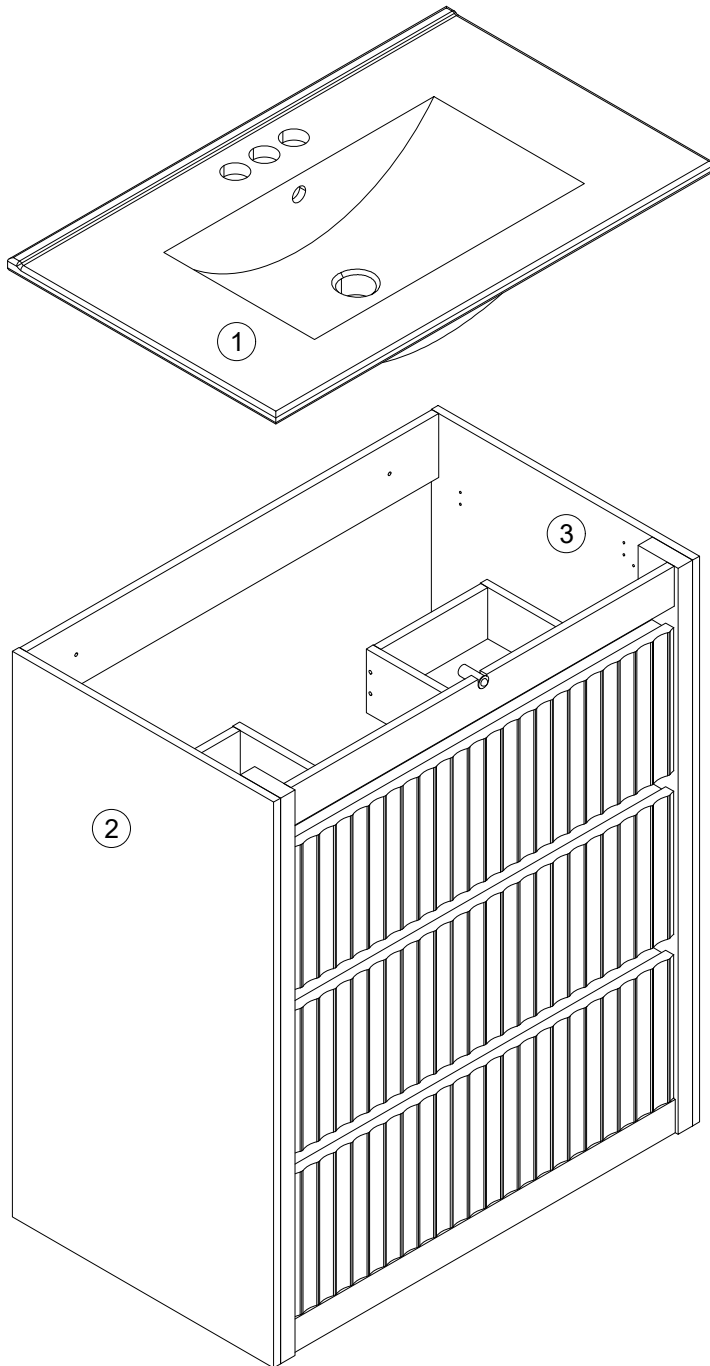

*Apply stain free silicone or latex silicone caulk(not included)to the top edge of vanity. with the help of another adult, gently lower top onto the vanity.wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
 - Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning