

ASSEMBLY INSTRUCTIONS


HYBC-007-B

HYBC-007-W




Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.

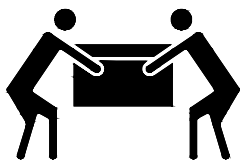

Recommended installers:2

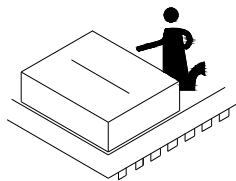

















Put a carpet on the floor
before unpacking

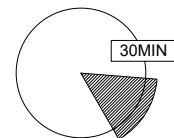

Estimate installation time:
30minutes












ASSEMBLY INSTRUCTIONS

PART LIST

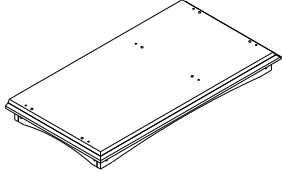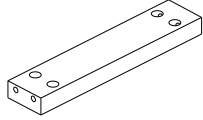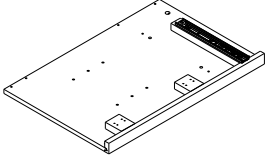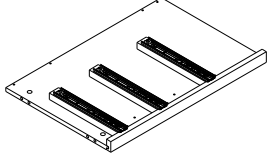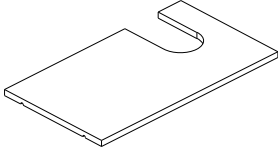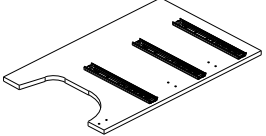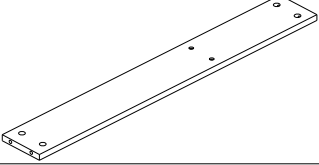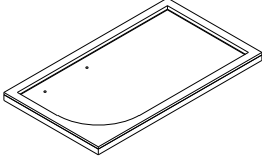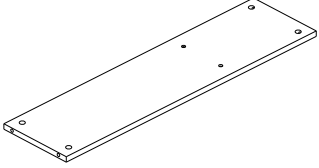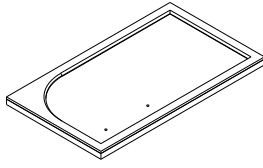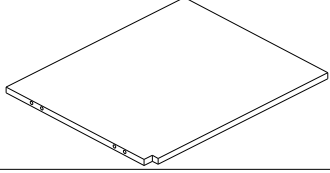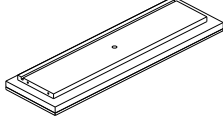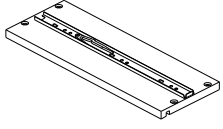Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
(A)		X1	(I)		X1
(B)		X1	(J)		X2
(C)		X1	(K)		X1
(D)		X1	(L)		X1
(E)		X1	(M)		X1
(F)		X1	(N)		X1
(G)		X1	(O)		X1
(H)		X1	(P)		X3












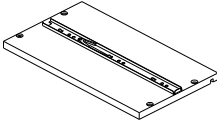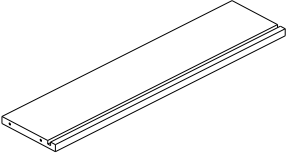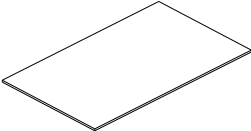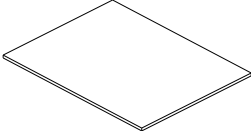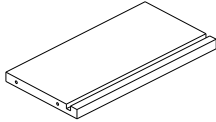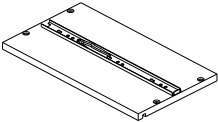



ASSEMBLY INSTRUCTIONS

PART LIST


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
Q		X3	V		X1
R		X1	W		X1
S		X1	X		X3
T		X1	Y		X2
U		X1	Z		X2
			ZZ		X4

ASSEMBLY INSTRUCTIONS

HARDWARE LIST


Item no.	Reference Image	Qty	Item no.	Reference Image	Qty
1	 Ø8*30mm	X11+1	9	 Ø5*3/4"	X9
2		X37+3	10		X4
3		X37+3	11	 Ø1/4"*1-1/4"	X8
4	 Ø3.5*30mm	X36+3	12		X8
5		X4	13		X8
6	 Ø3*14mm	X24+2	14		X2
7		X5	15		X1
8		X2			

ASSEMBLY INSTRUCTIONS

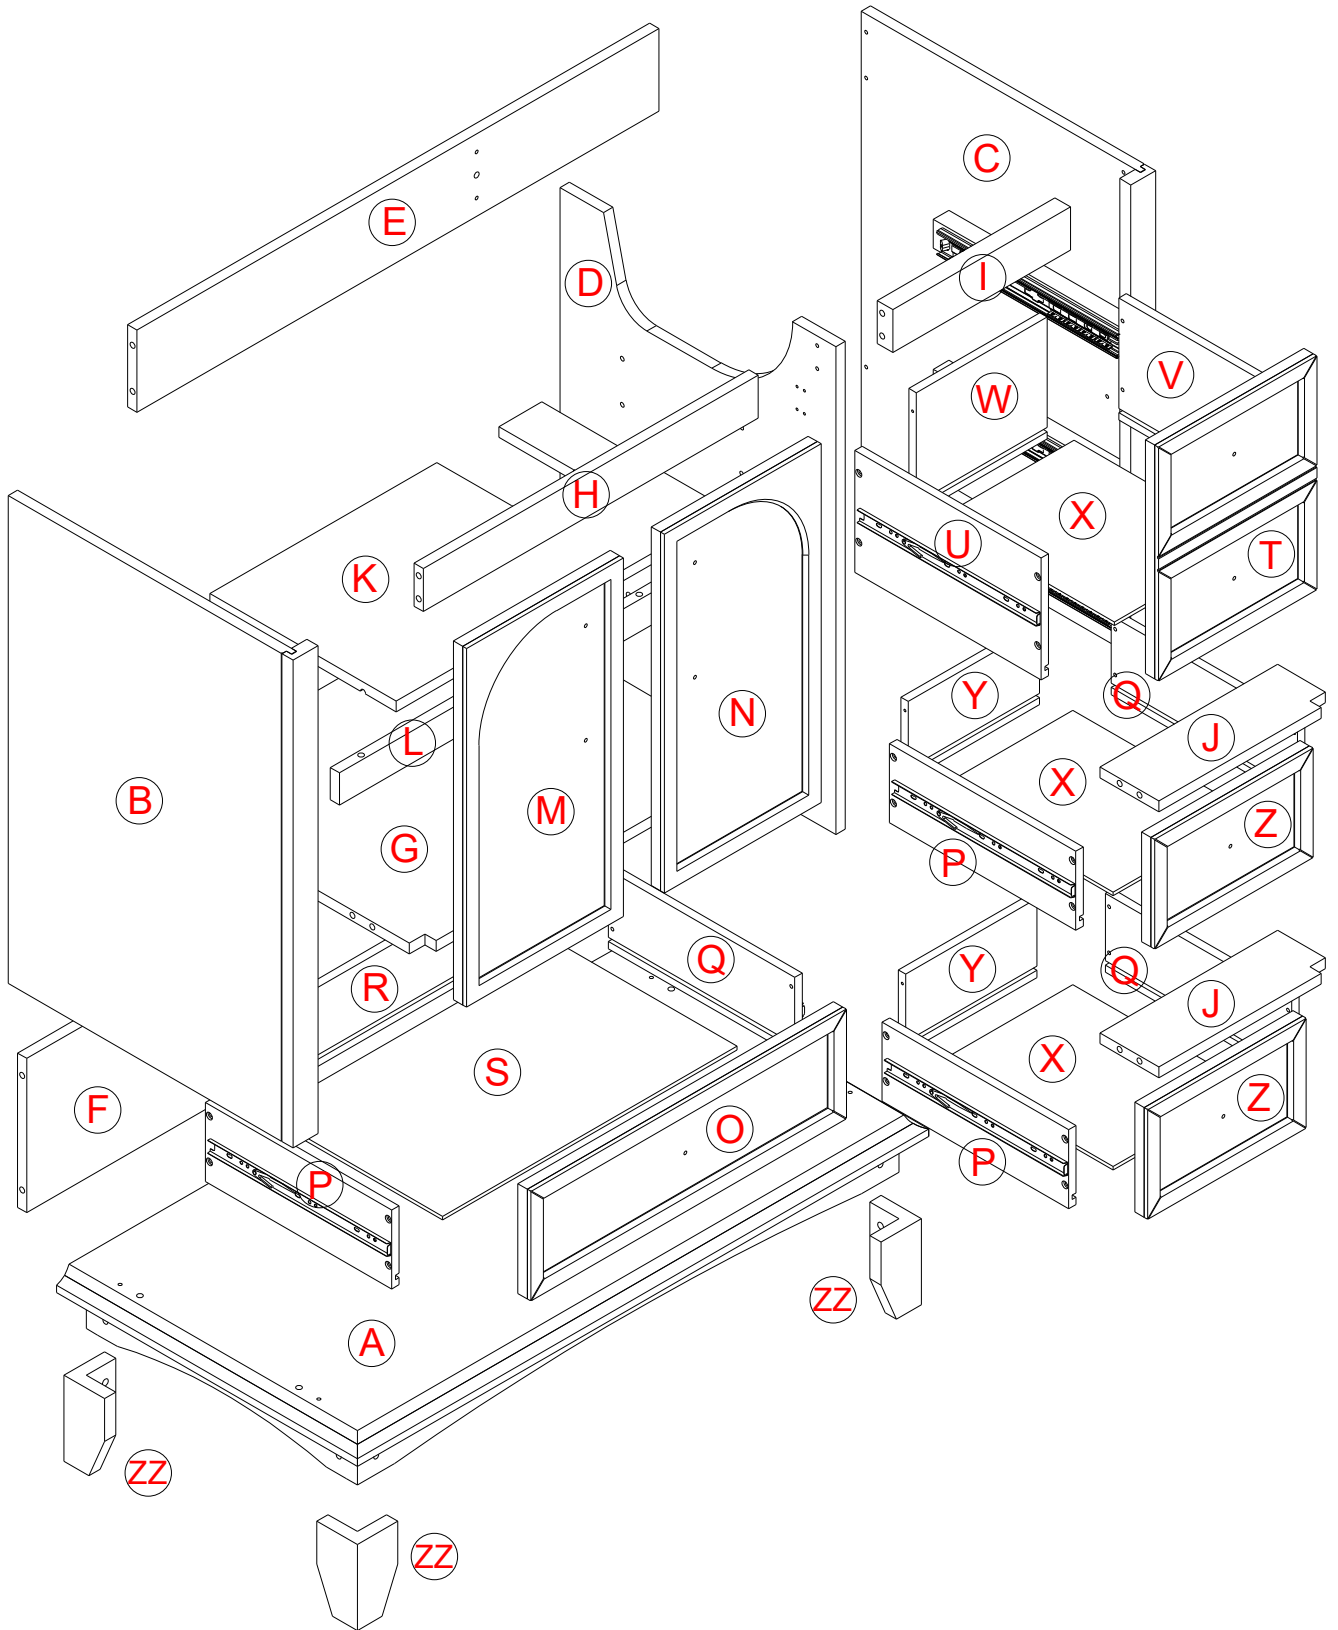


ASSEMBLY INSTRUCTIONS

1

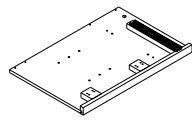


Ⓑ 1PC

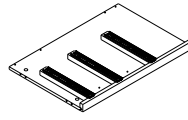

Ⓒ 1PC





② 18PCS

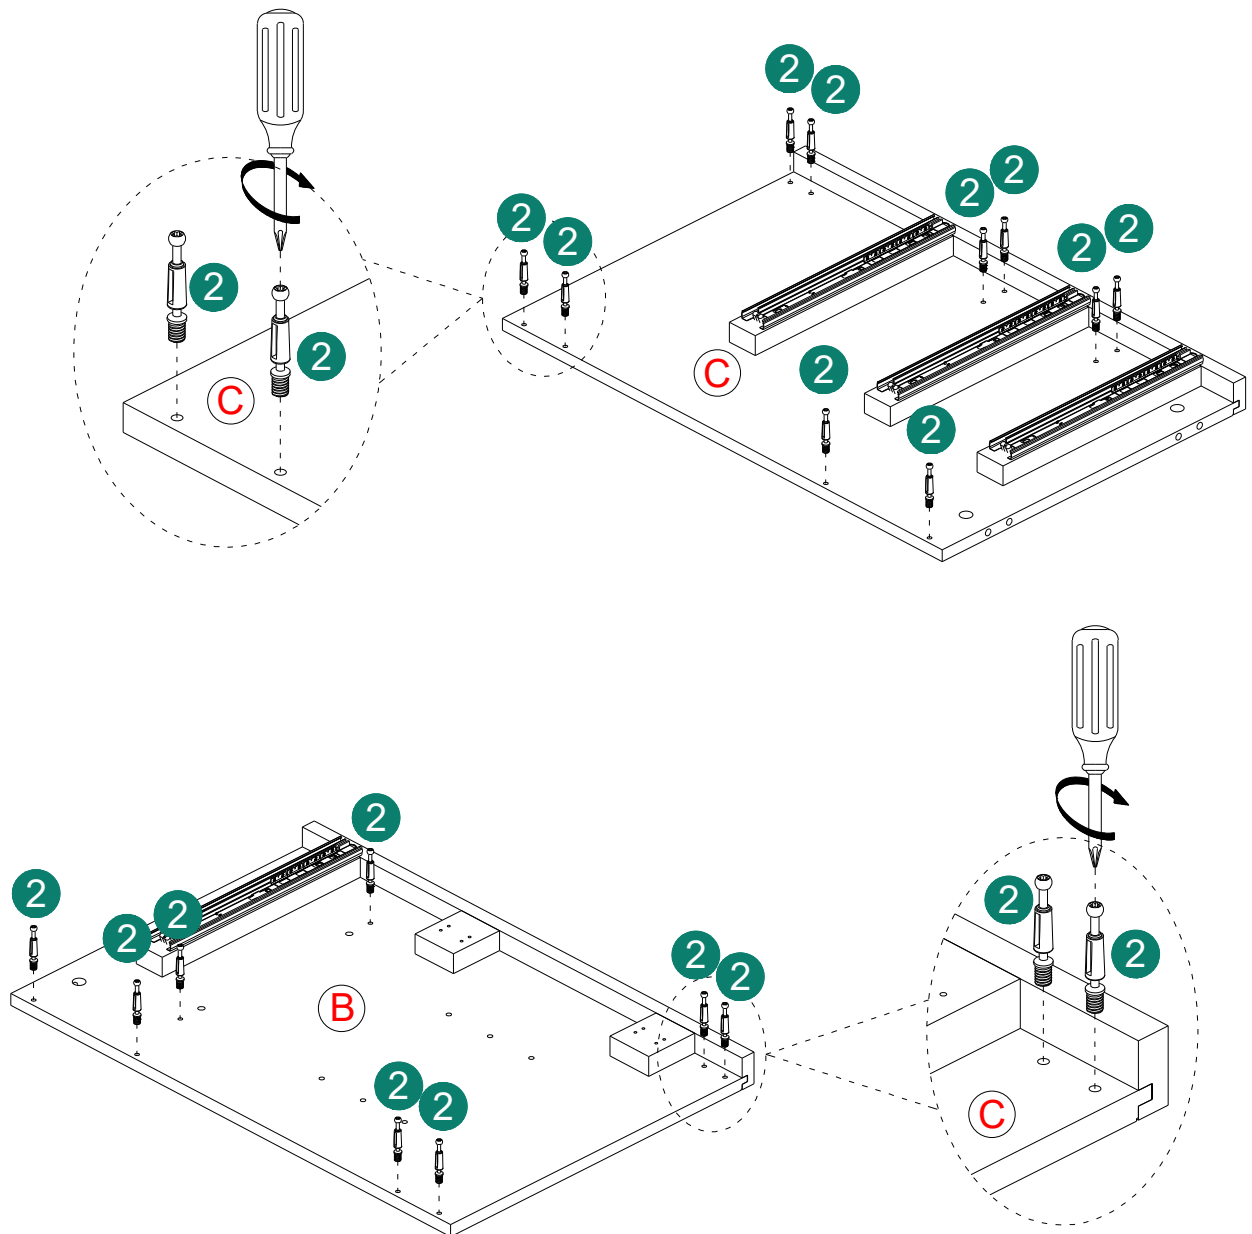


ASSEMBLY INSTRUCTIONS

2

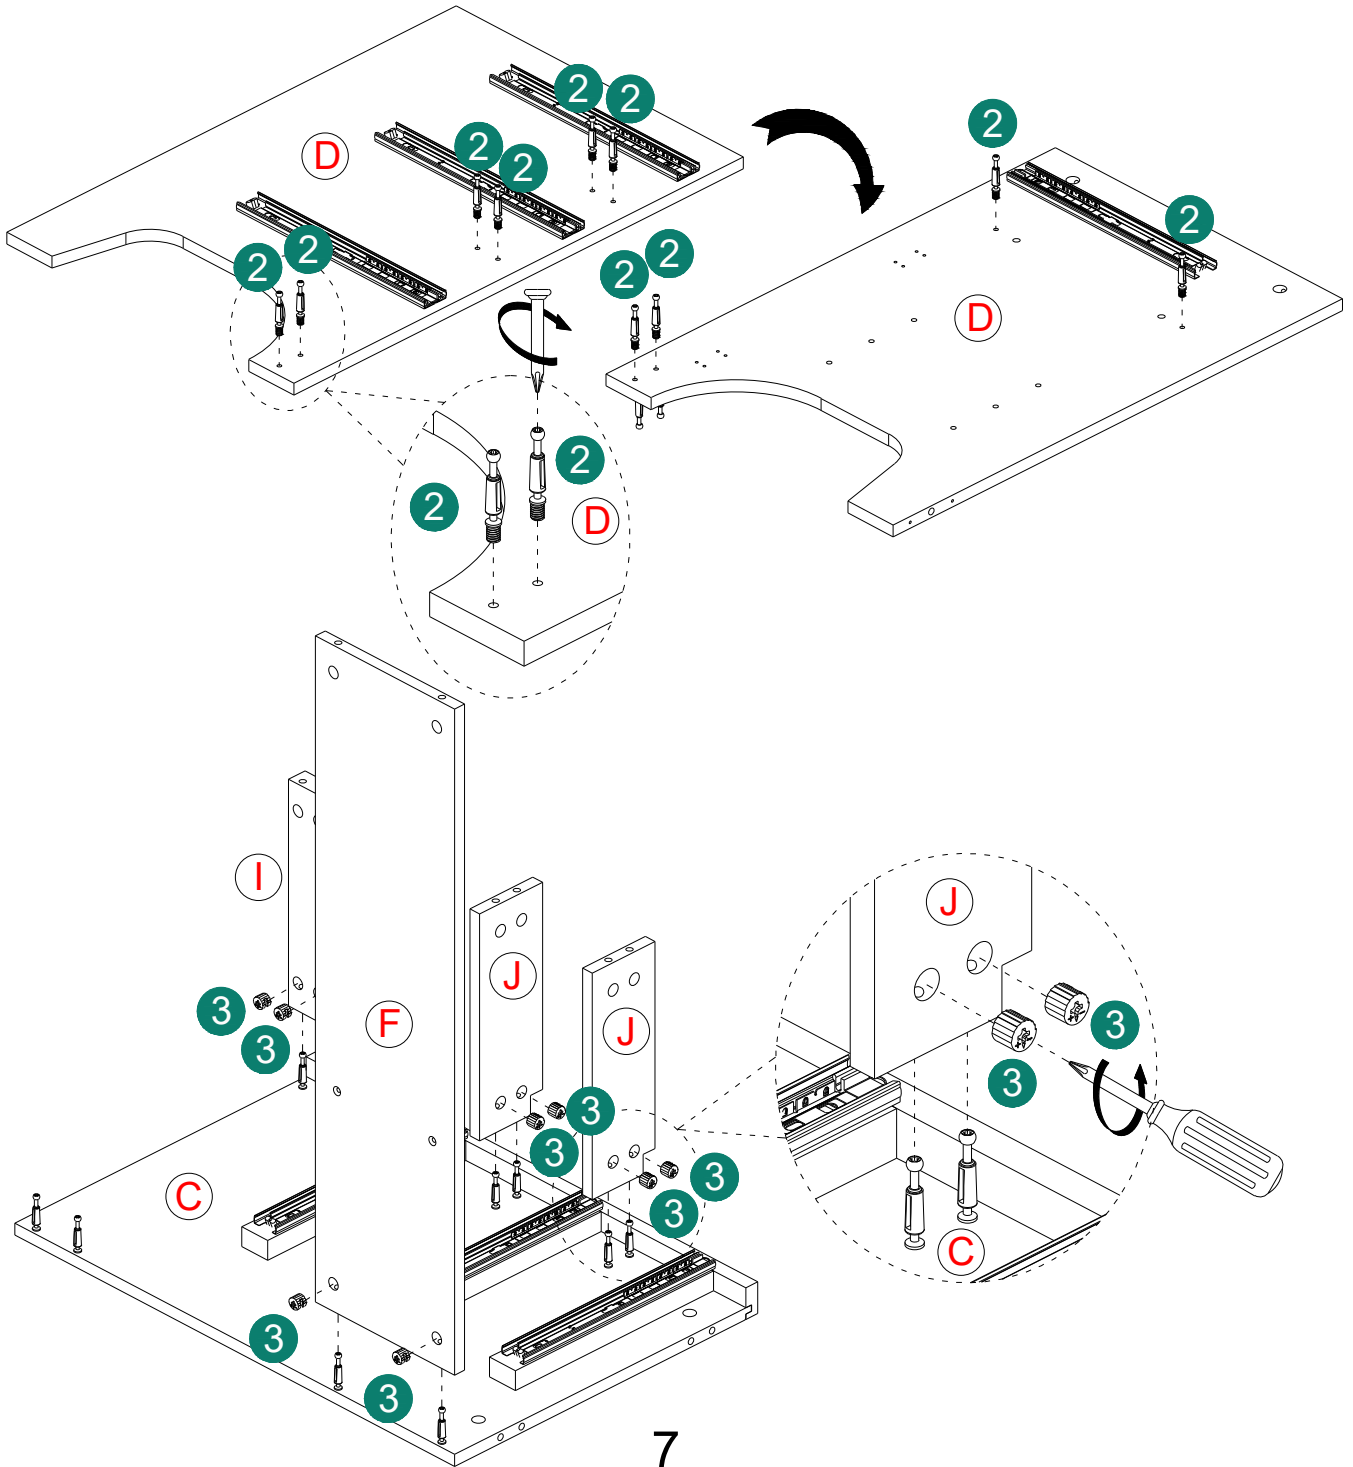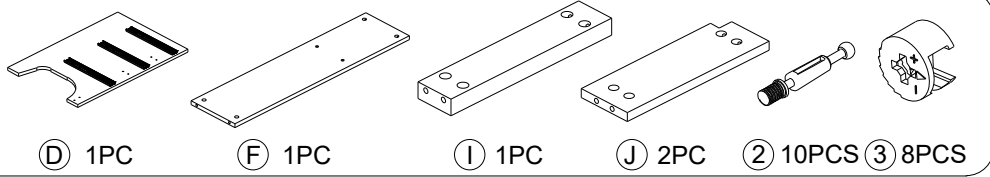


ASSEMBLY INSTRUCTIONS

3




D 1PC

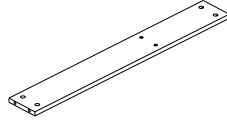


E 4PC



3 8PCS




1 1PCS

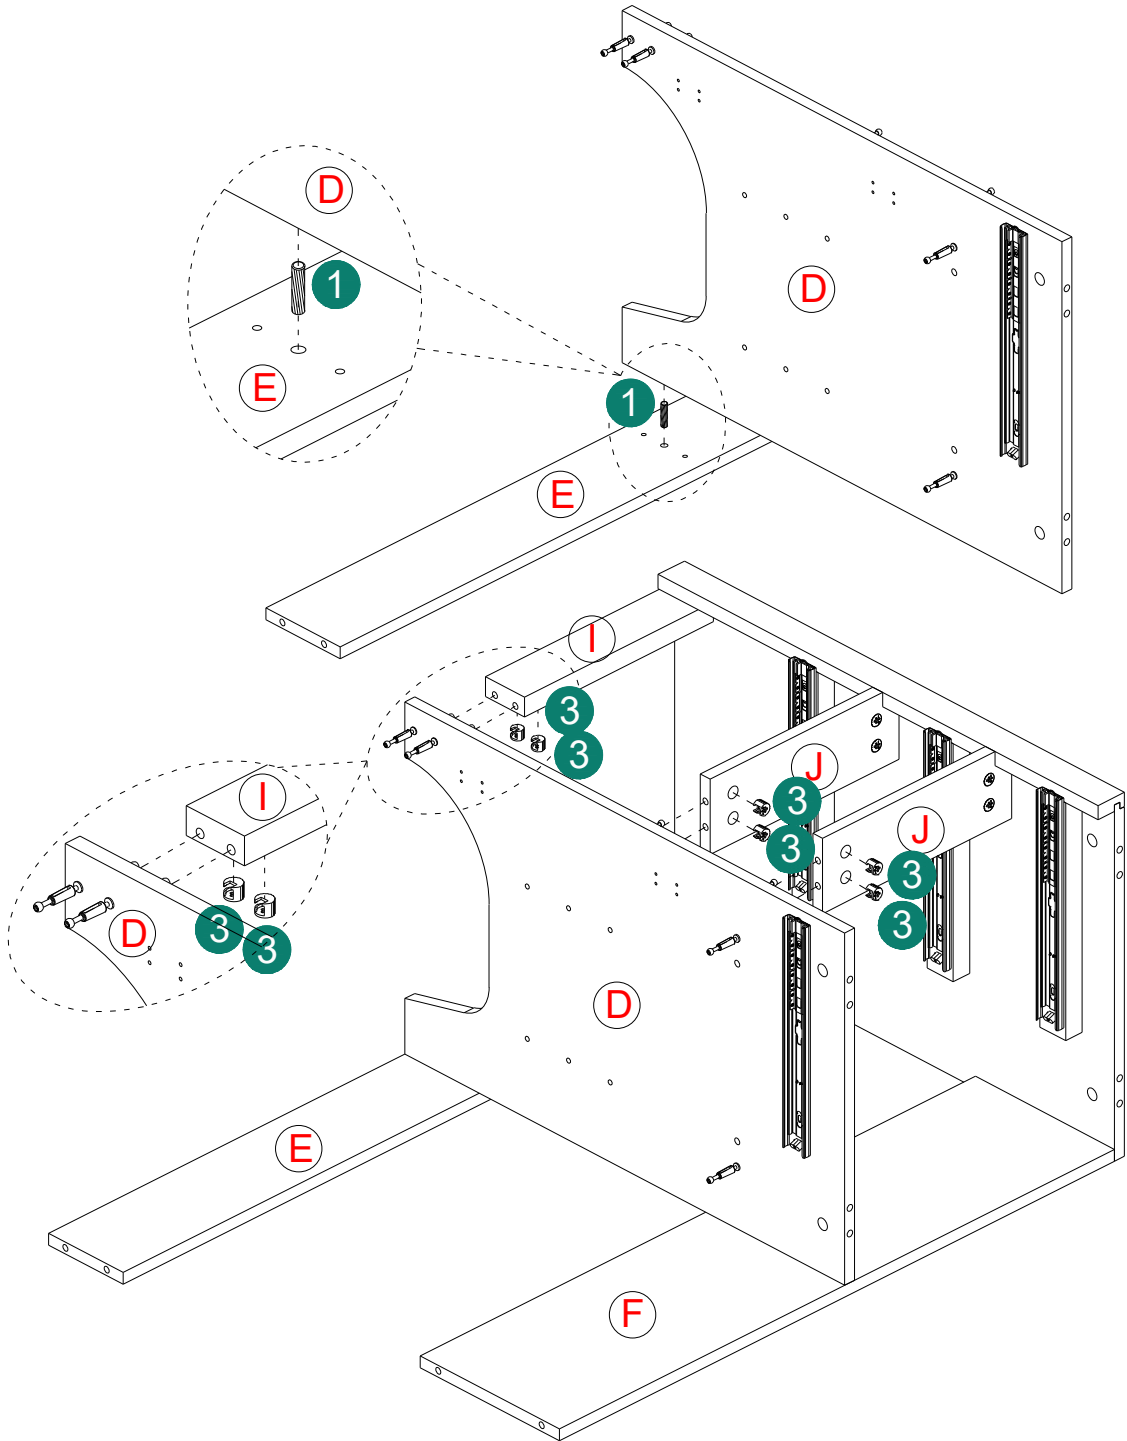


ASSEMBLY INSTRUCTIONS


4

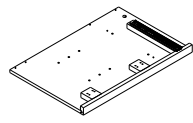

(B) 1PC




(H) 1PC

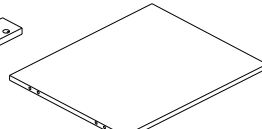


(G) 1PC



(3) 12PCS






(1) 4PCS

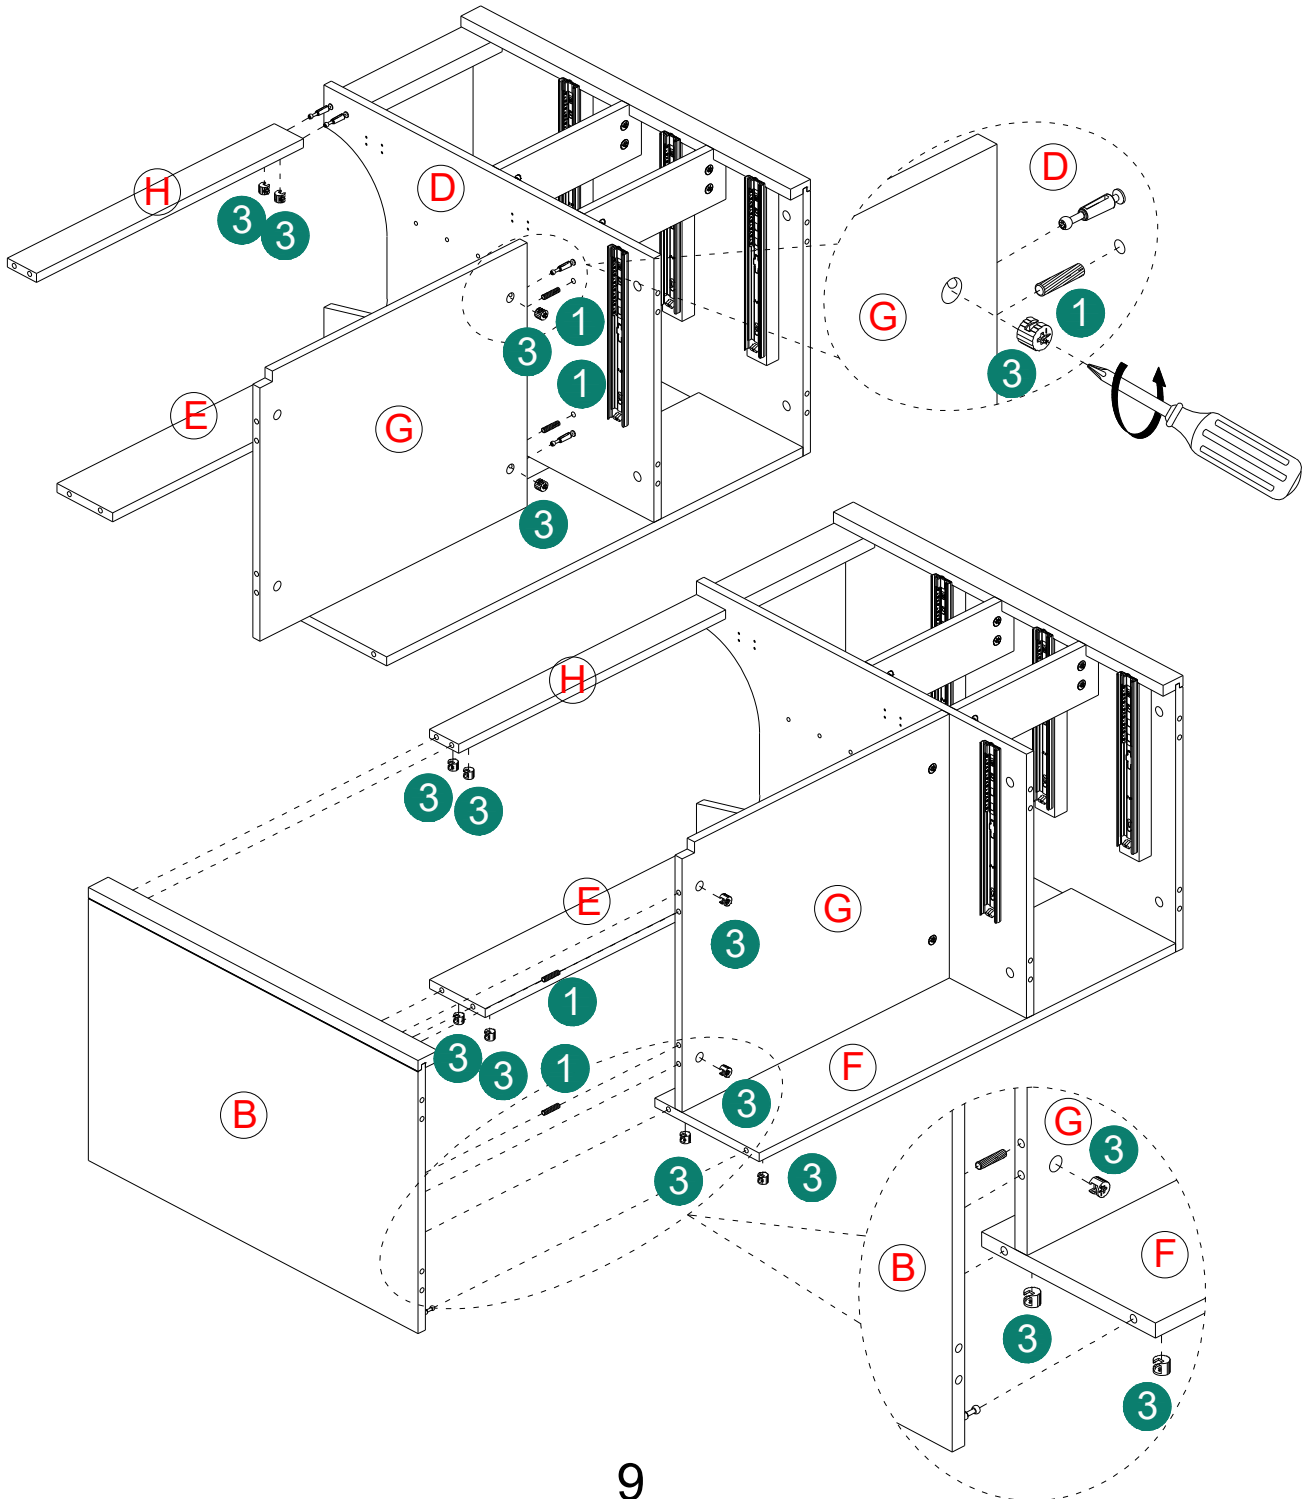

ASSEMBLY INSTRUCTIONS

5

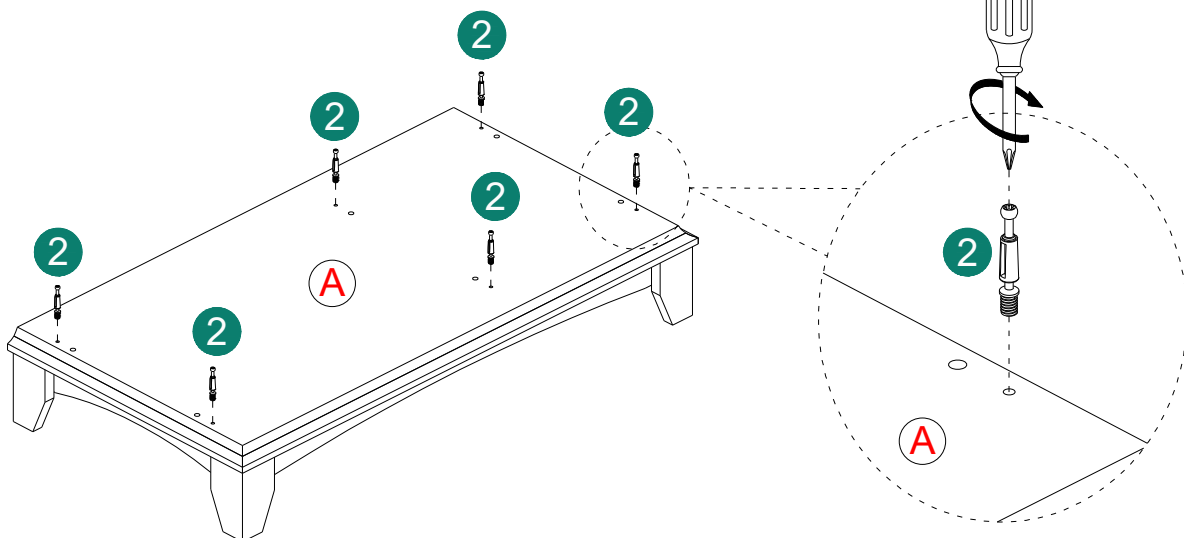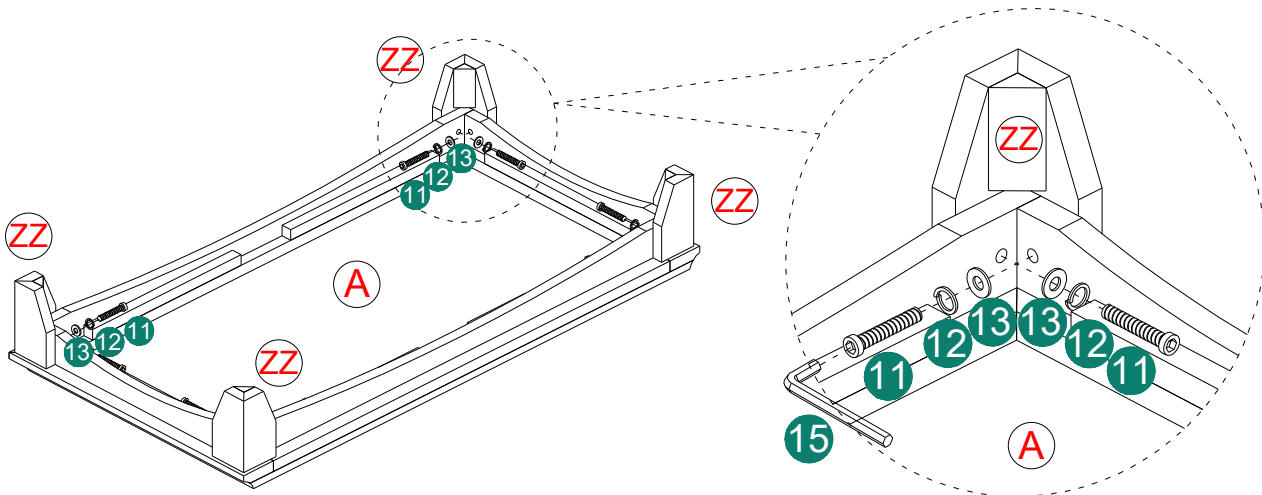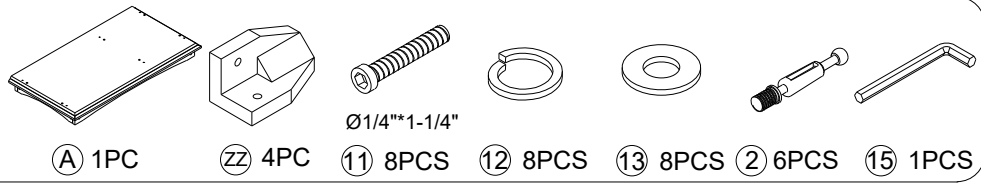


ASSEMBLY INSTRUCTIONS

6



③ 6PCS




① 6PCS




Ø3.5*30mm

④ 4PCS

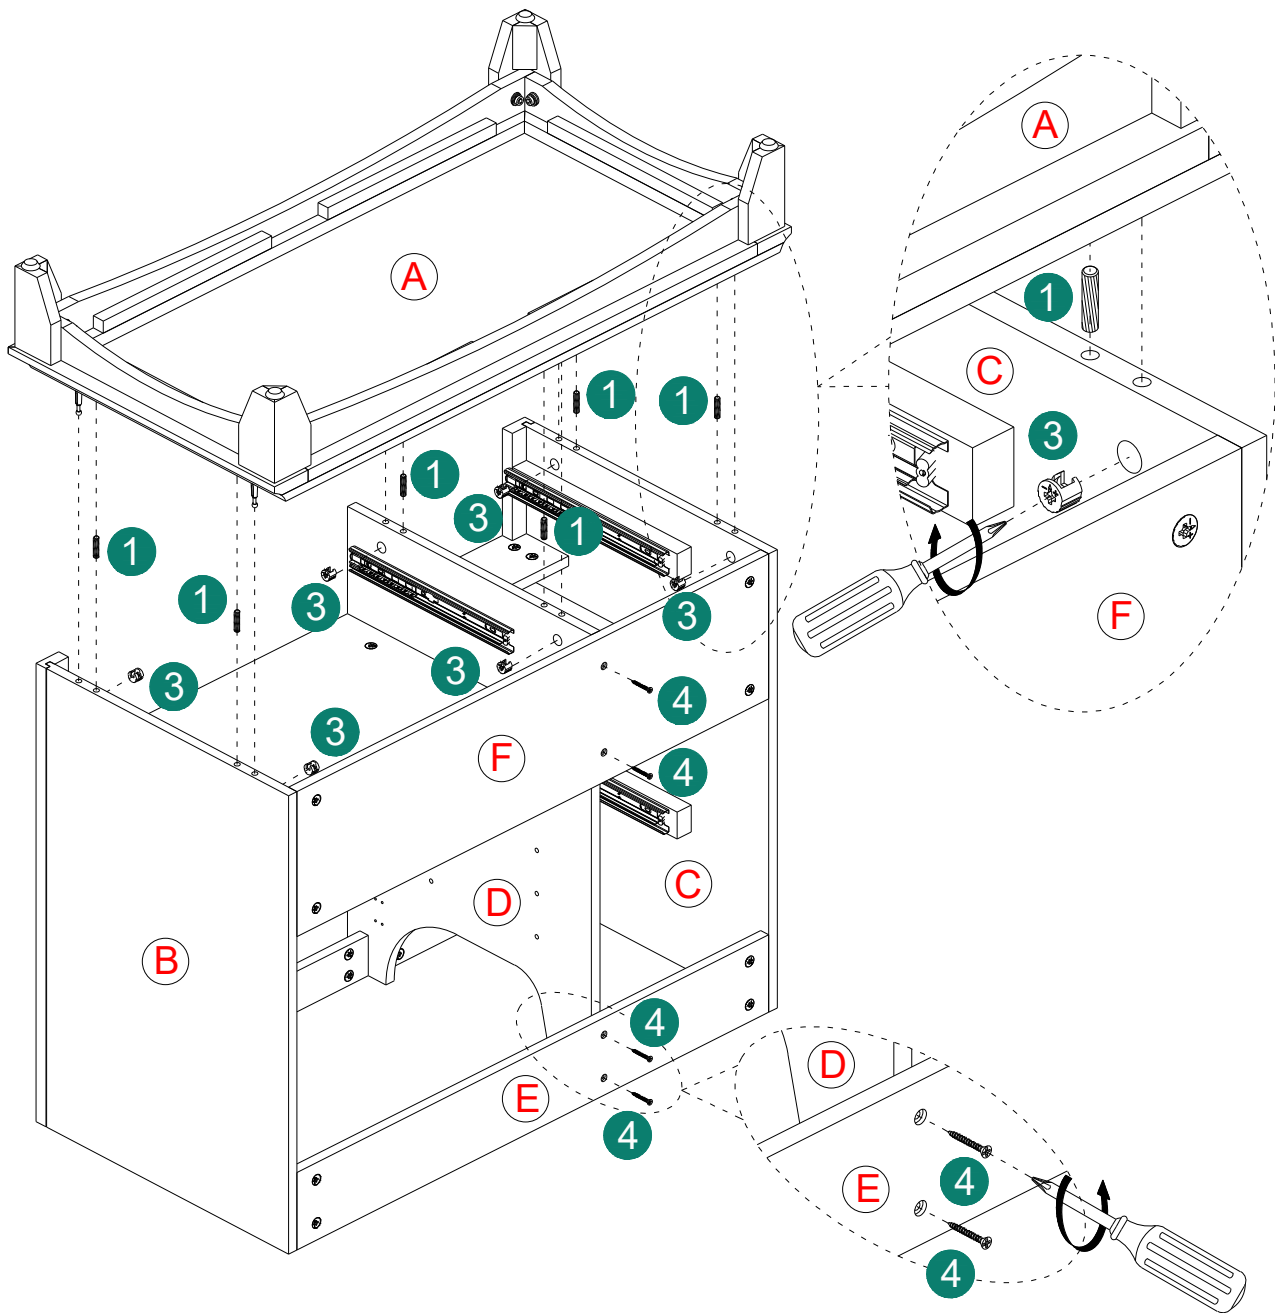


ASSEMBLY INSTRUCTIONS


7

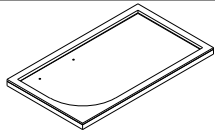

(M) 1PC

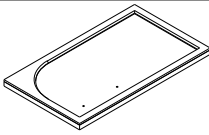

(N) 1PC



(5) 4PCS





Ø3*14mm

(6) 8PCS



(14) 2PCS

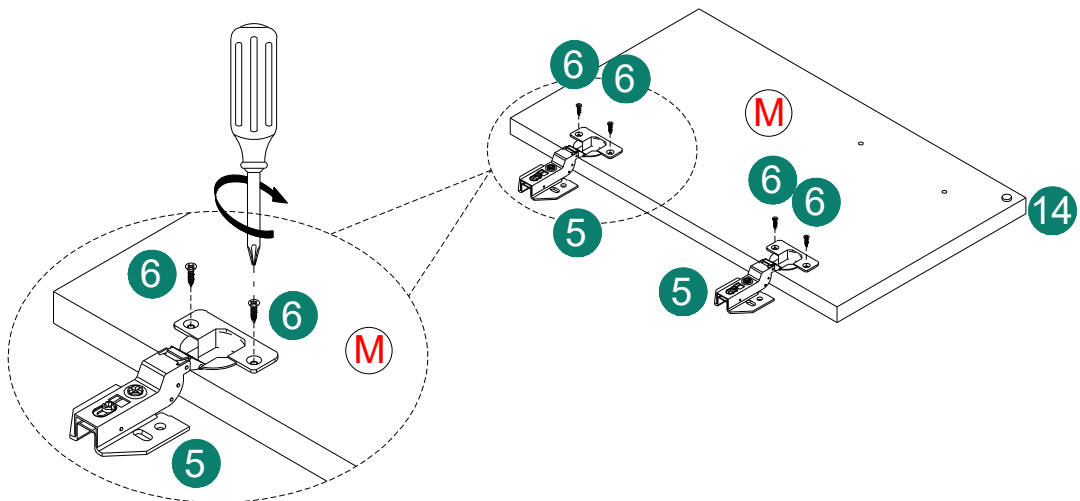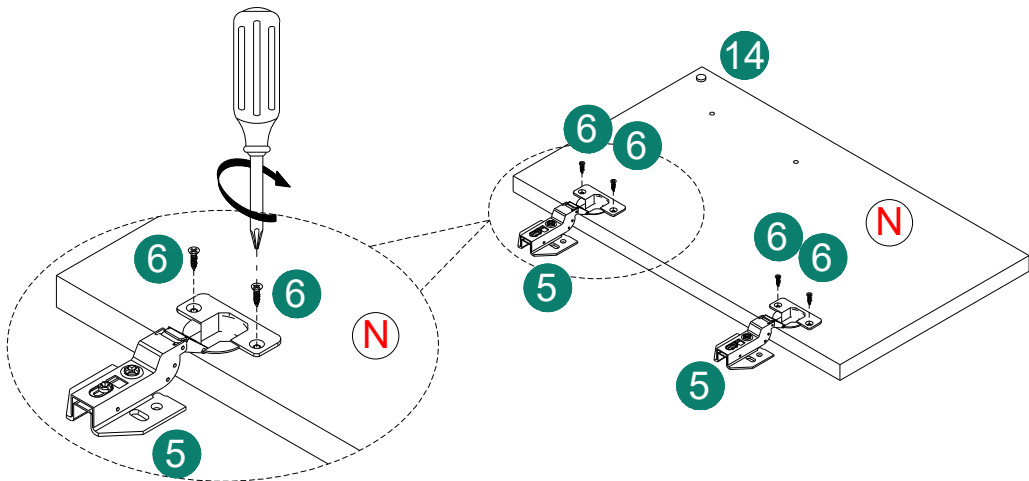


ASSEMBLY INSTRUCTIONS

8



10 4PCS



8 2PCS




Ø5*3/4"

9 4PCS




Ø3*14mm

6 16PCS

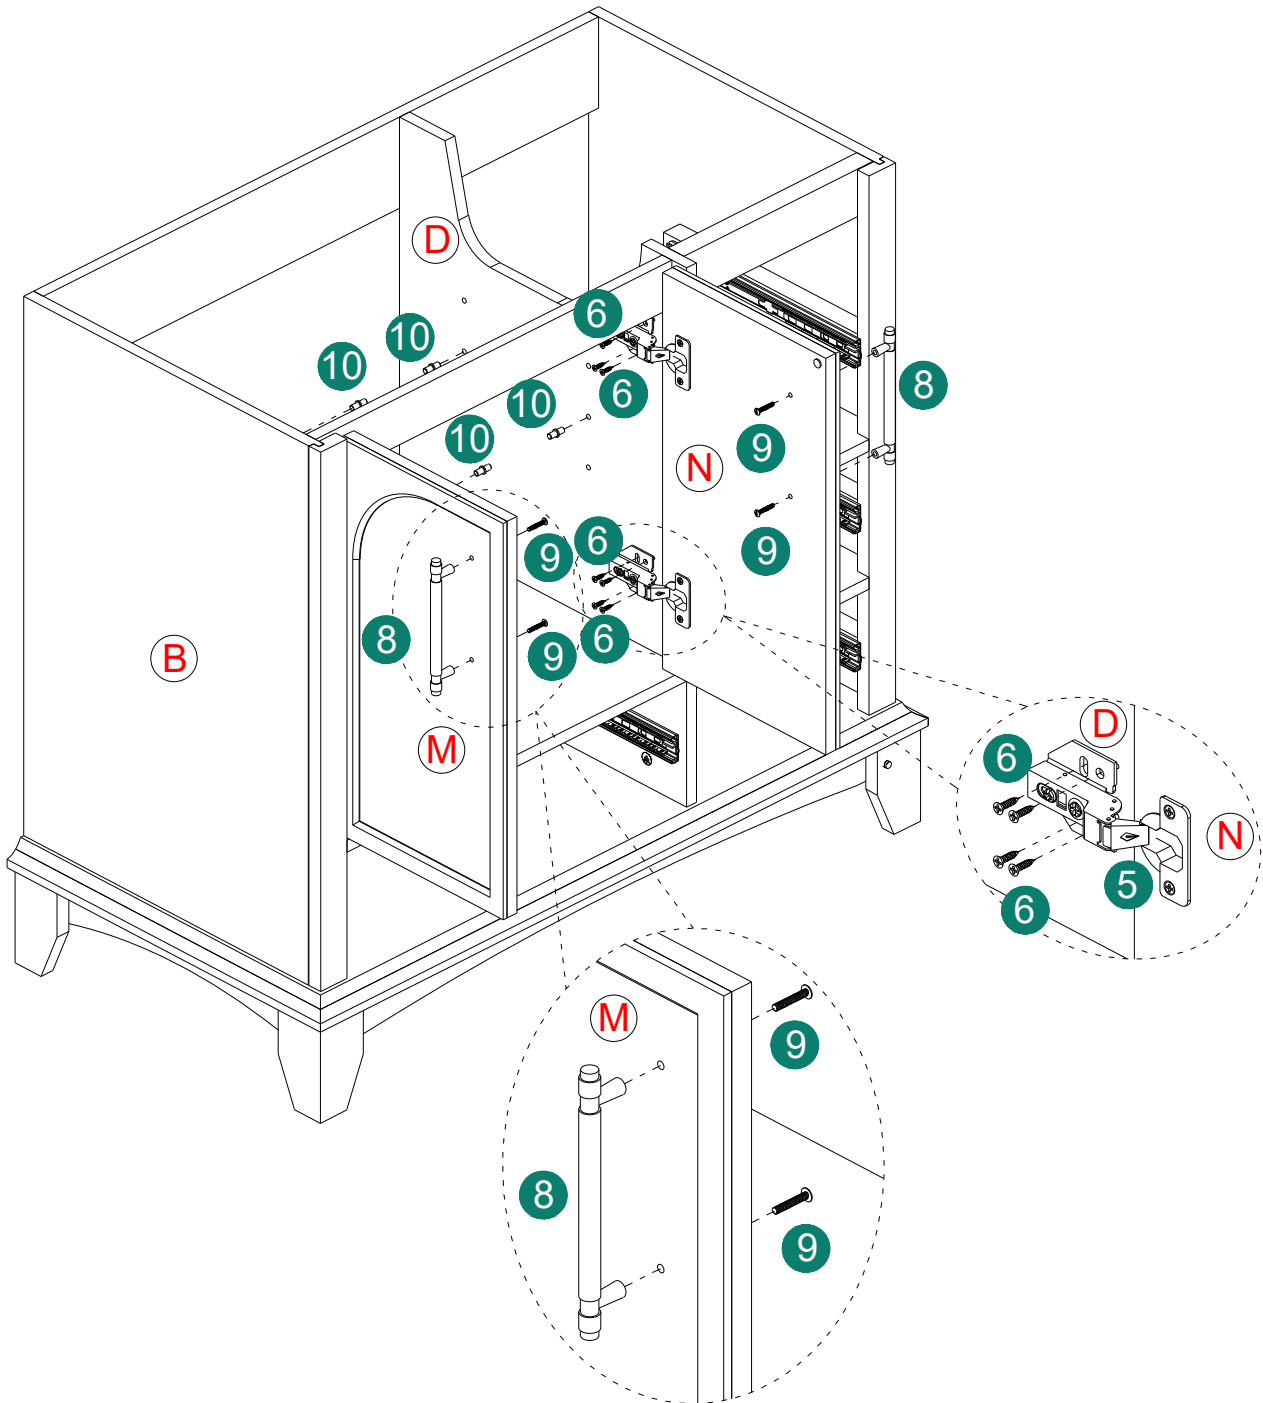

ASSEMBLY INSTRUCTIONS


10

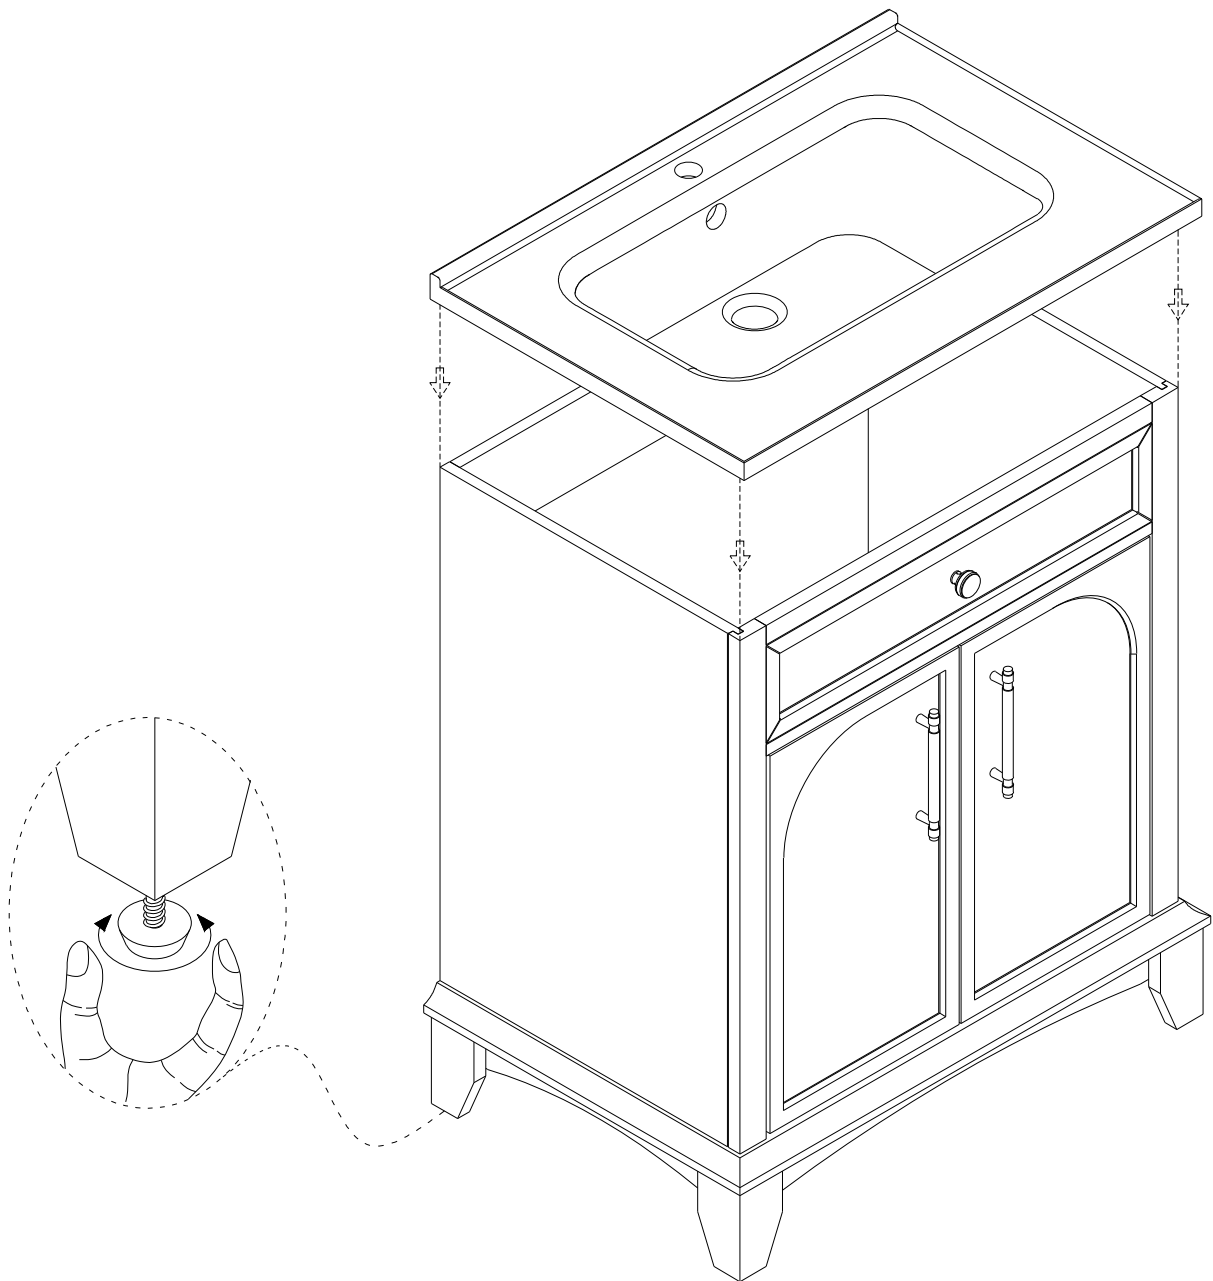


ASSEMBLY INSTRUCTIONS

10


Common Door Panel Issues:

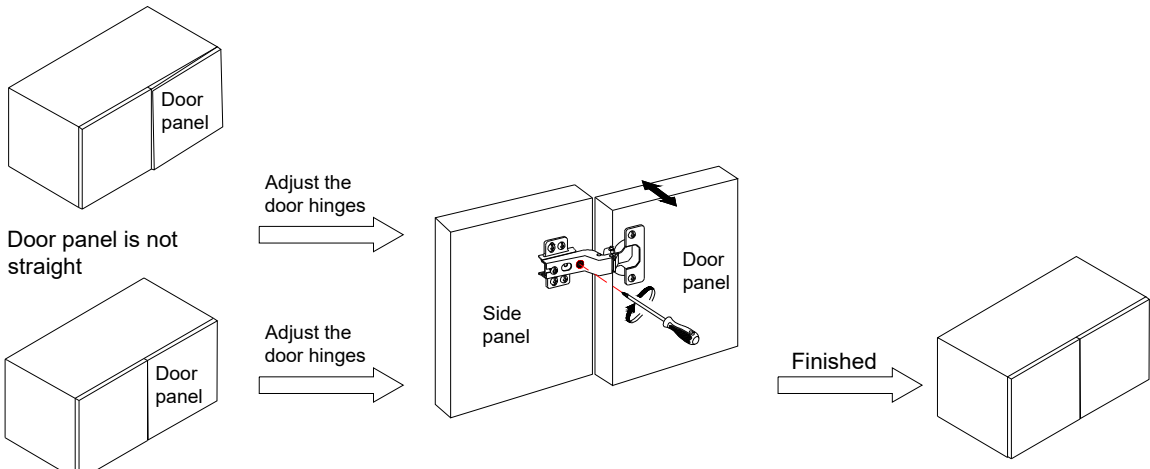

The gap between door panels is too large

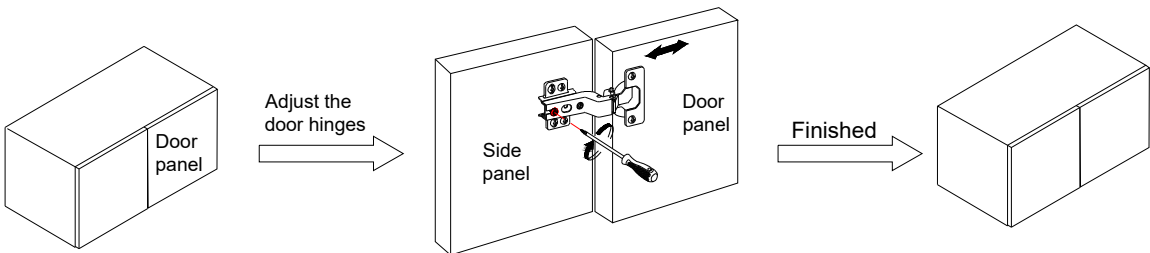



The door panels are not coplanar

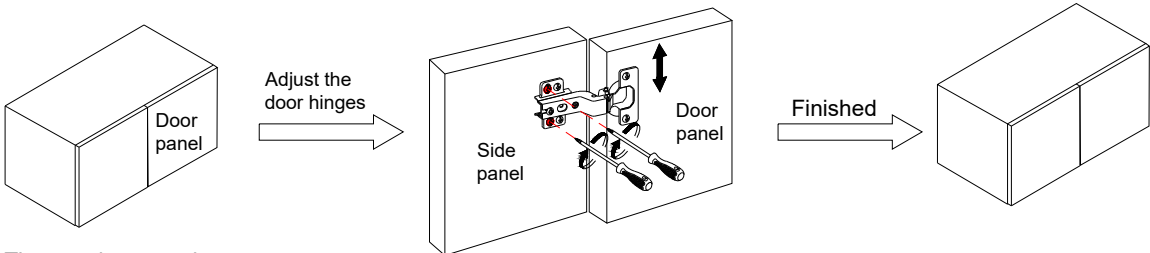

The two door panels are not at the same height


ASSEMBLY INSTRUCTIONS

12

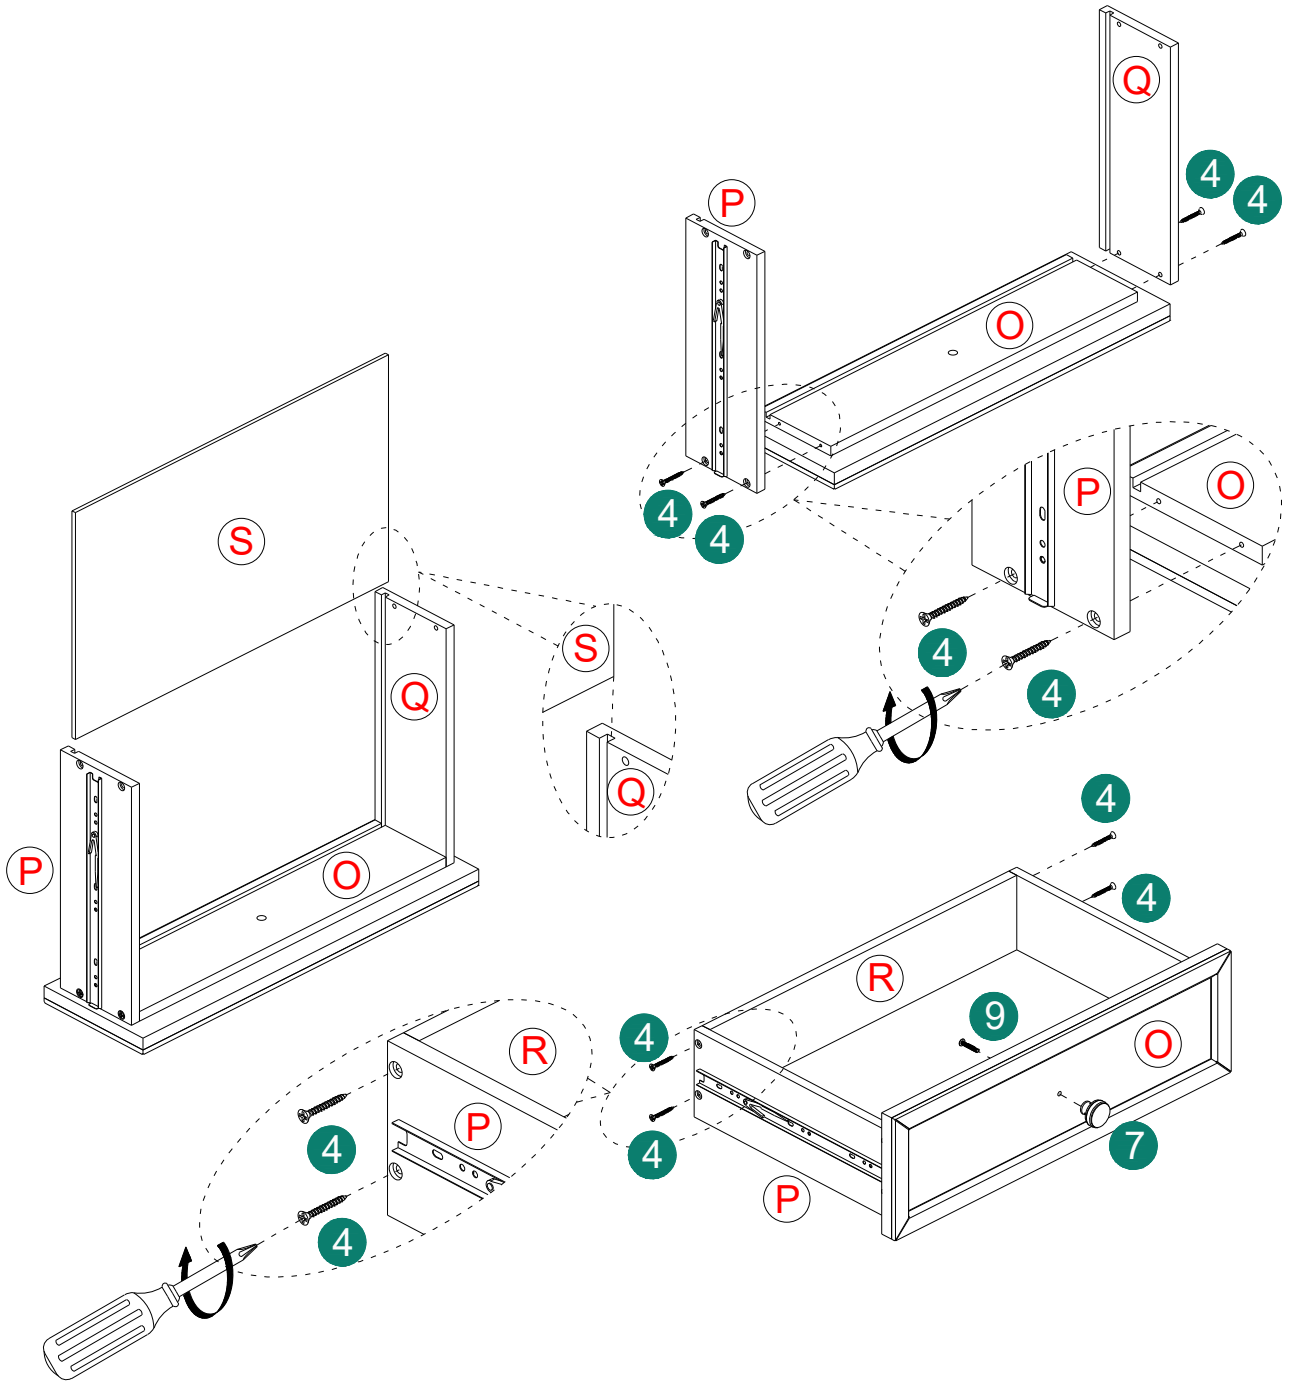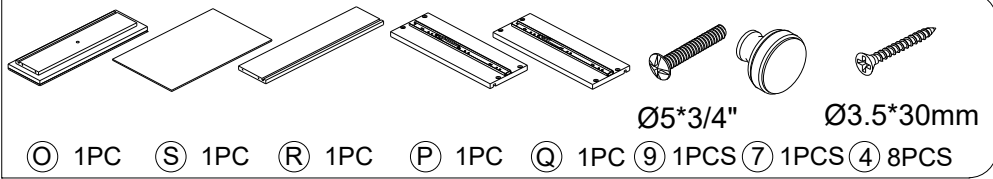


ASSEMBLY INSTRUCTIONS


13




Ⓣ 1PC




Ⓦ 1PC




Ⓤ 1PC



Ⓥ 1PC



Ⓧ 1PC



Ø5*3/4"


⑨ 2PCS



Ø3.5*30mm



⑦ 2PCS

④ 8PCS

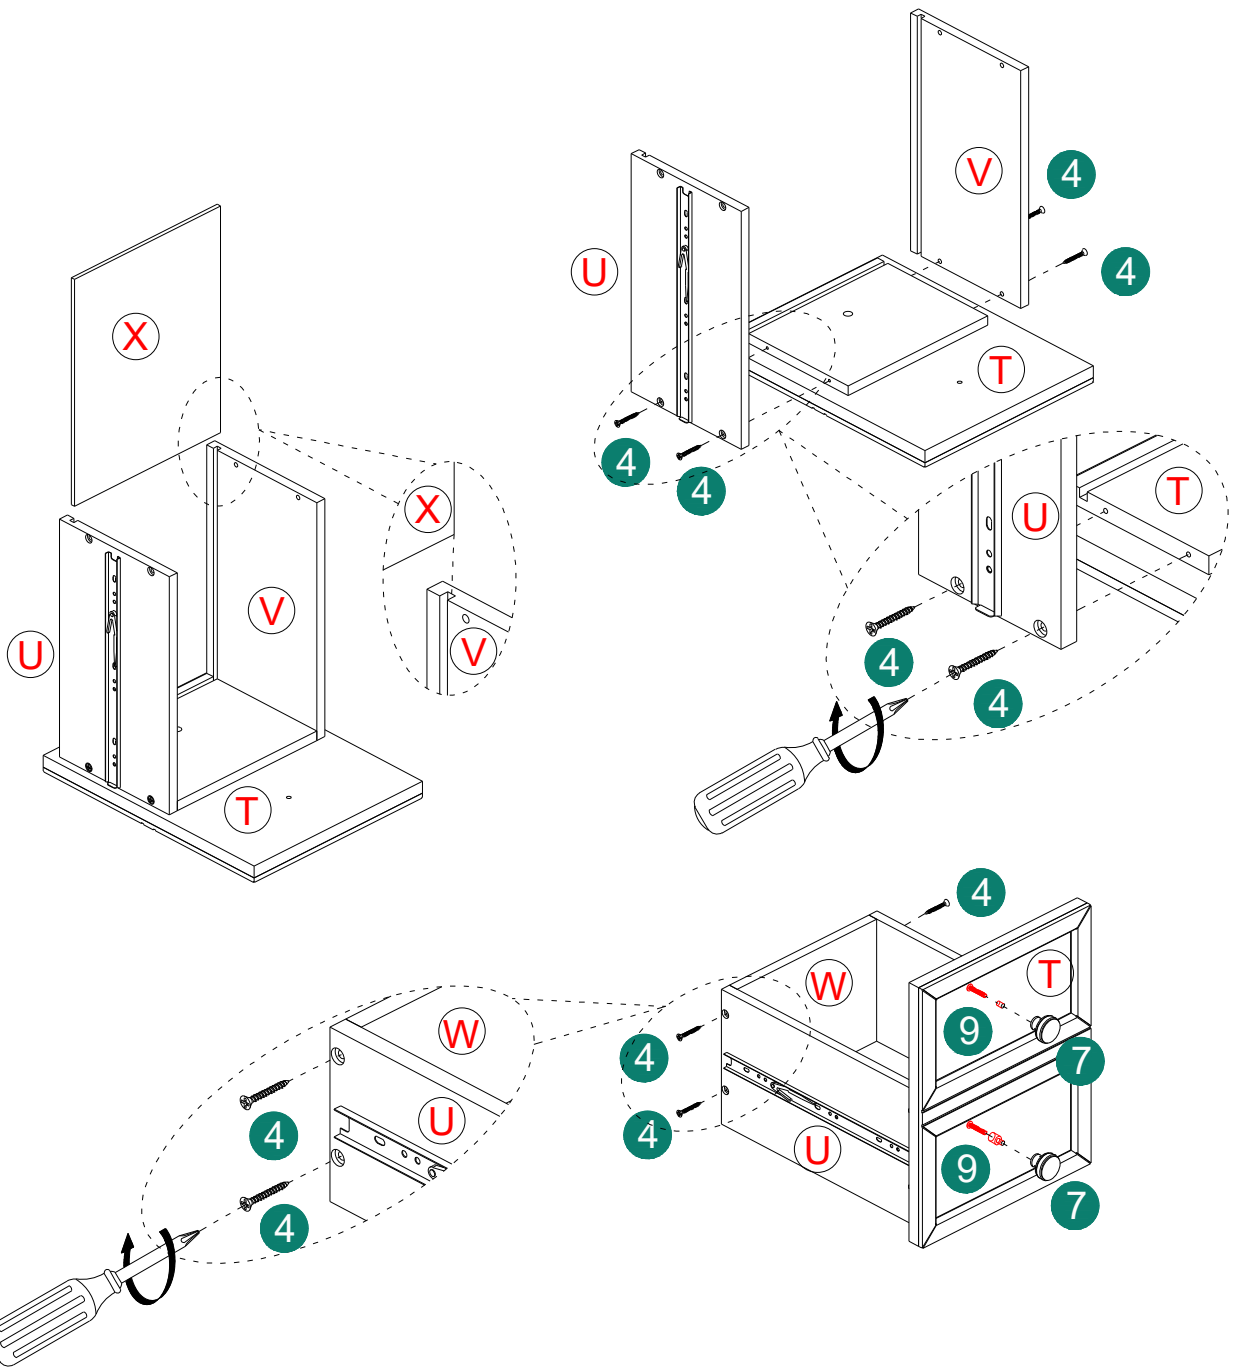


ASSEMBLY INSTRUCTIONS

14

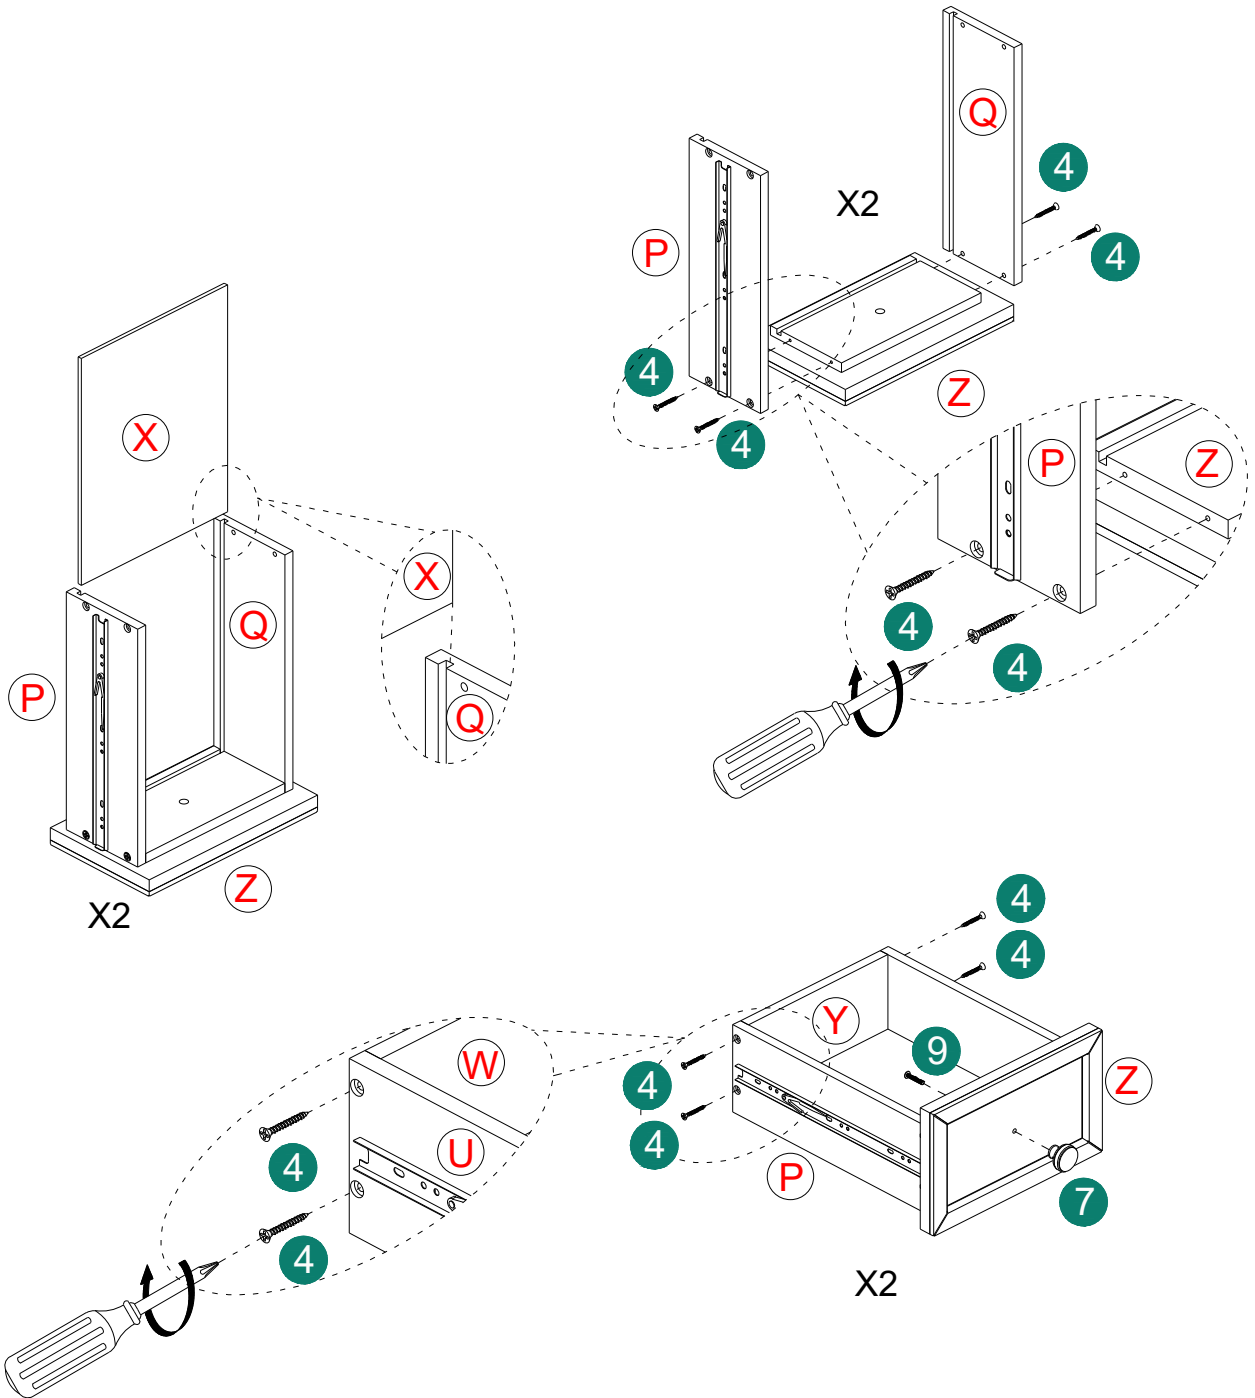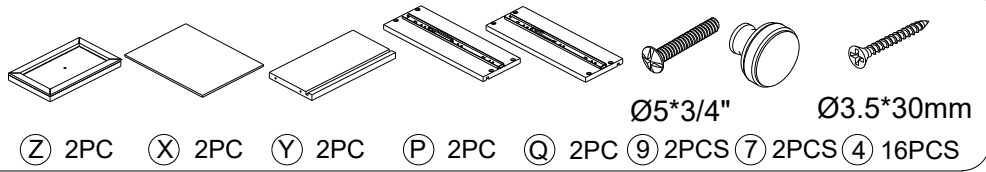

ASSEMBLY INSTRUCTIONS

15

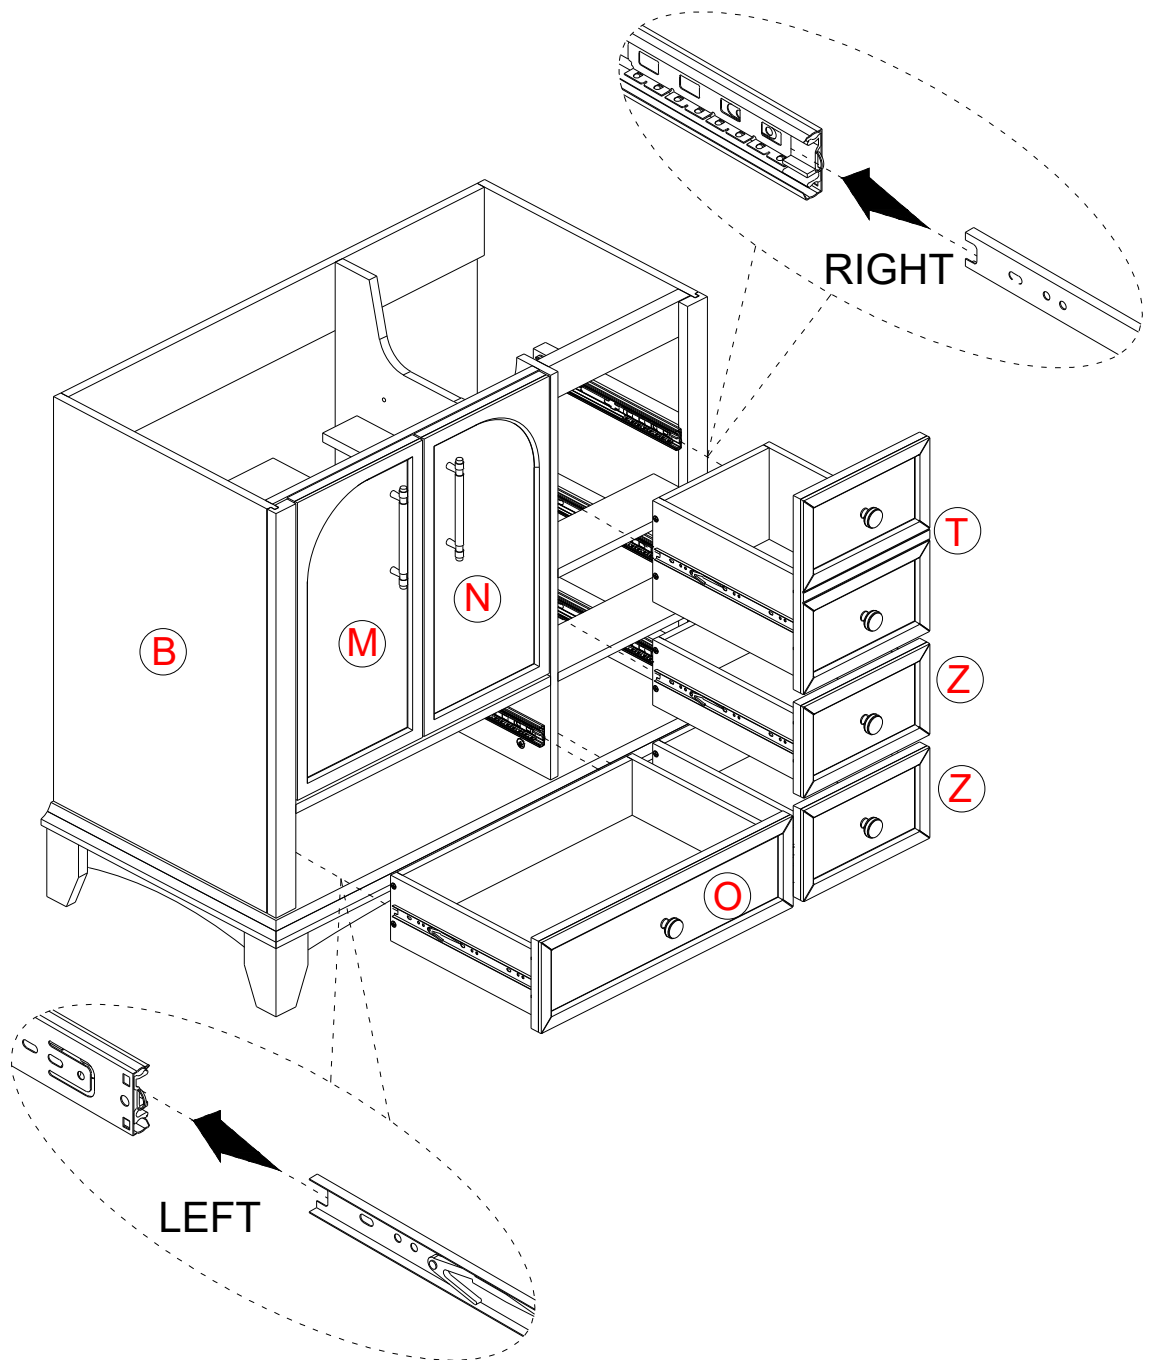

20

ASSEMBLY INSTRUCTIONS

16

