Product Assembly Instructions

Counter Height Swivel Stool
Bar Height Swivel Stool

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment . Please identify and count all parts and compare with the HARDWARE LIST below.

Caution : Please read instructions carefully before unpacking assembly parts. Sharp , exposed staples can cause injury , therefore , for your protection , please remove any exposed staples used in packing.

*** Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance. ***

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process , and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolt until the assembly is completed.
3. Please put all parts on a smooth , flat surface before assembly , and carefully follow the assembly steps to assemble your newly purchased correctly and efficiently.




PARTS LIST		
NO.	COMPONENT	QTY.
A	Back Panel	1 pc
B	Seat Base	1 pc
C	Upper Leg	1 pc
D	Lower Leg	1 pc
E	Footest Ring	1 pc
F	Cushion Seat	1 pc

HARDWARE LIST		
NO.	COMPONENT	QTY.
1	JCBC Bolt M6 x 45mm	14 pcs
2	1/4" Spring Washer	14 pcs
3	1/4" x 16 x 2mm Flat Washer	10 pcs
4	CB Screw M4 x 32mm	4 pcs
5	Allen Wrench M4 x 65mm	1 pc

* Phillips screwdriver not included *


Step 1

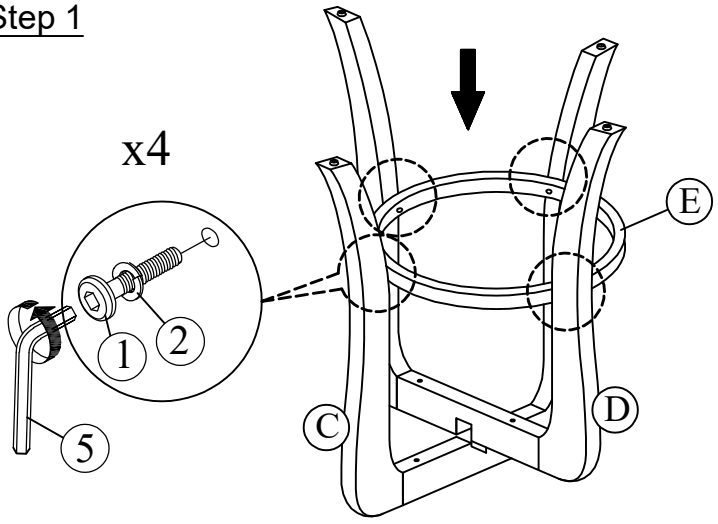

Do not fully tighten bolts from this step


1) Attach Lower Leg (D) across Upper Leg (C) to complete the half-lap joint.
2) Attach Footest Ring (E) to the Legs by using 4pcs JCBC bolts (1) and 4pcs Spring Washers (2). Tighten all bolts using the provided Allen Wrench (5).

Step 2

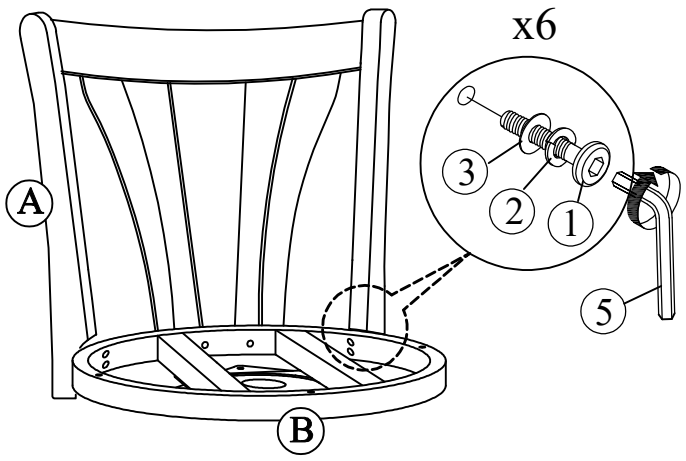


1) Attach Seat Frame (B) into the Chair Back (A) by using 6pcs JCBC bolts (1) , 6pcs spring washers (2) and 6pcs flat washers (3). Use Allen Wrench (5) to secure . Fully tighten all the bolt.

Step 3

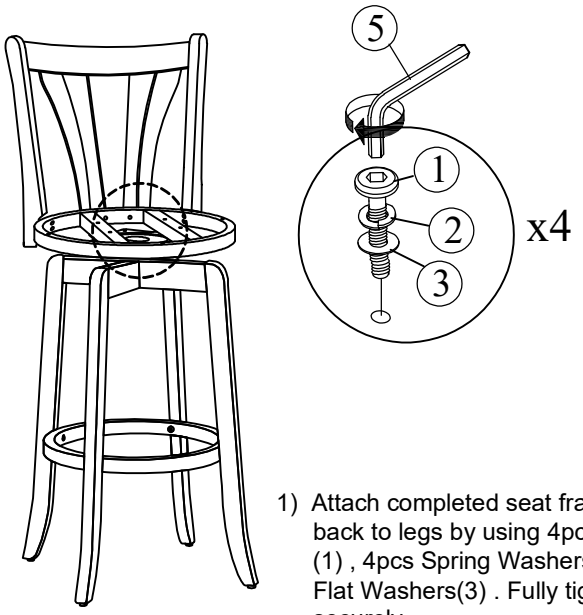

1) Attach completed seat frame and chair back to legs by using 4pcs JCBC bolts (1) , 4pcs Spring Washers (2) , 4pcs Flat Washers(3) . Fully tighten all bolts securely.

Step 4

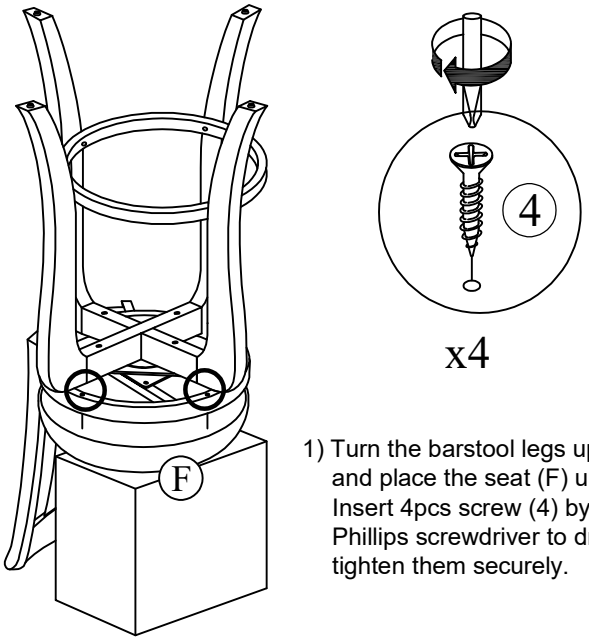


1) Turn the barstool legs up right side and place the seat (F) underneath. Insert 4pcs screw (4) by using Phillips screwdriver to drive and tighten them securely.

Step 5

Adjustment Step

NOTE : ADJUST THE BOTTOM LEVELERS TO ENSURE ALL FOUR LEVELERS ARE FLUSH WITH AND FIRMLY SEATED ONE THE FLOOR, ESPECIALLY ON UNEVEN FLOORS.

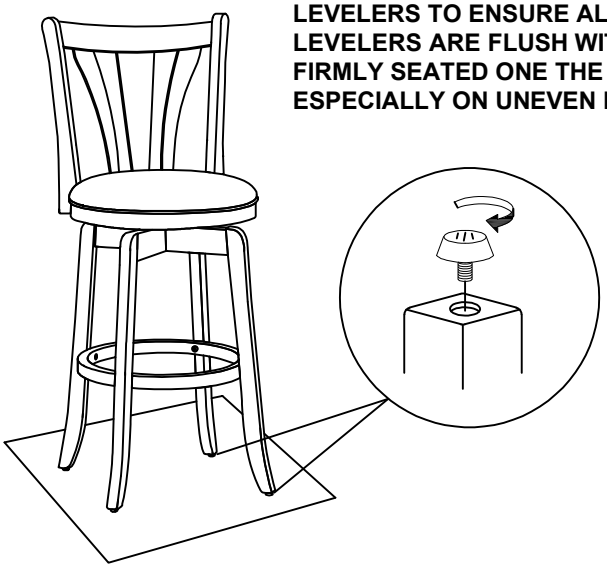



Version #3 Date: 02/10/2026