

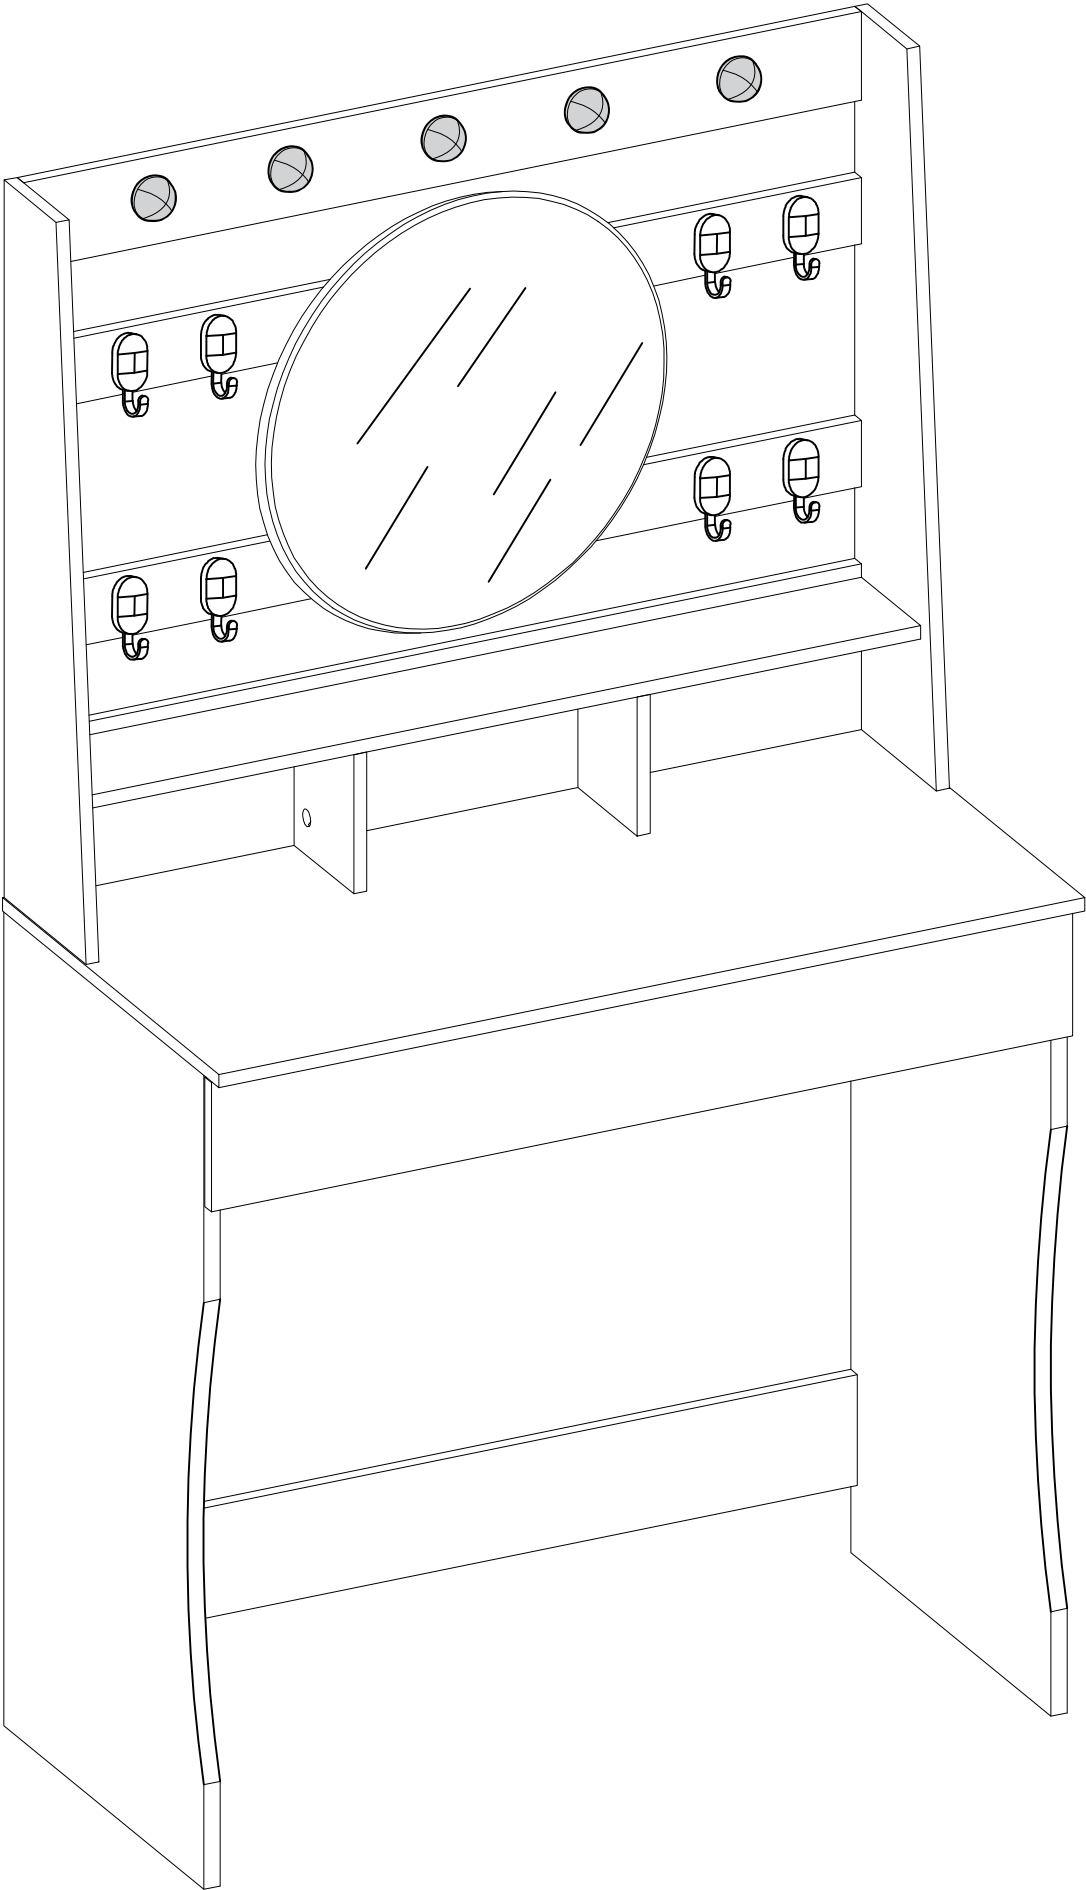
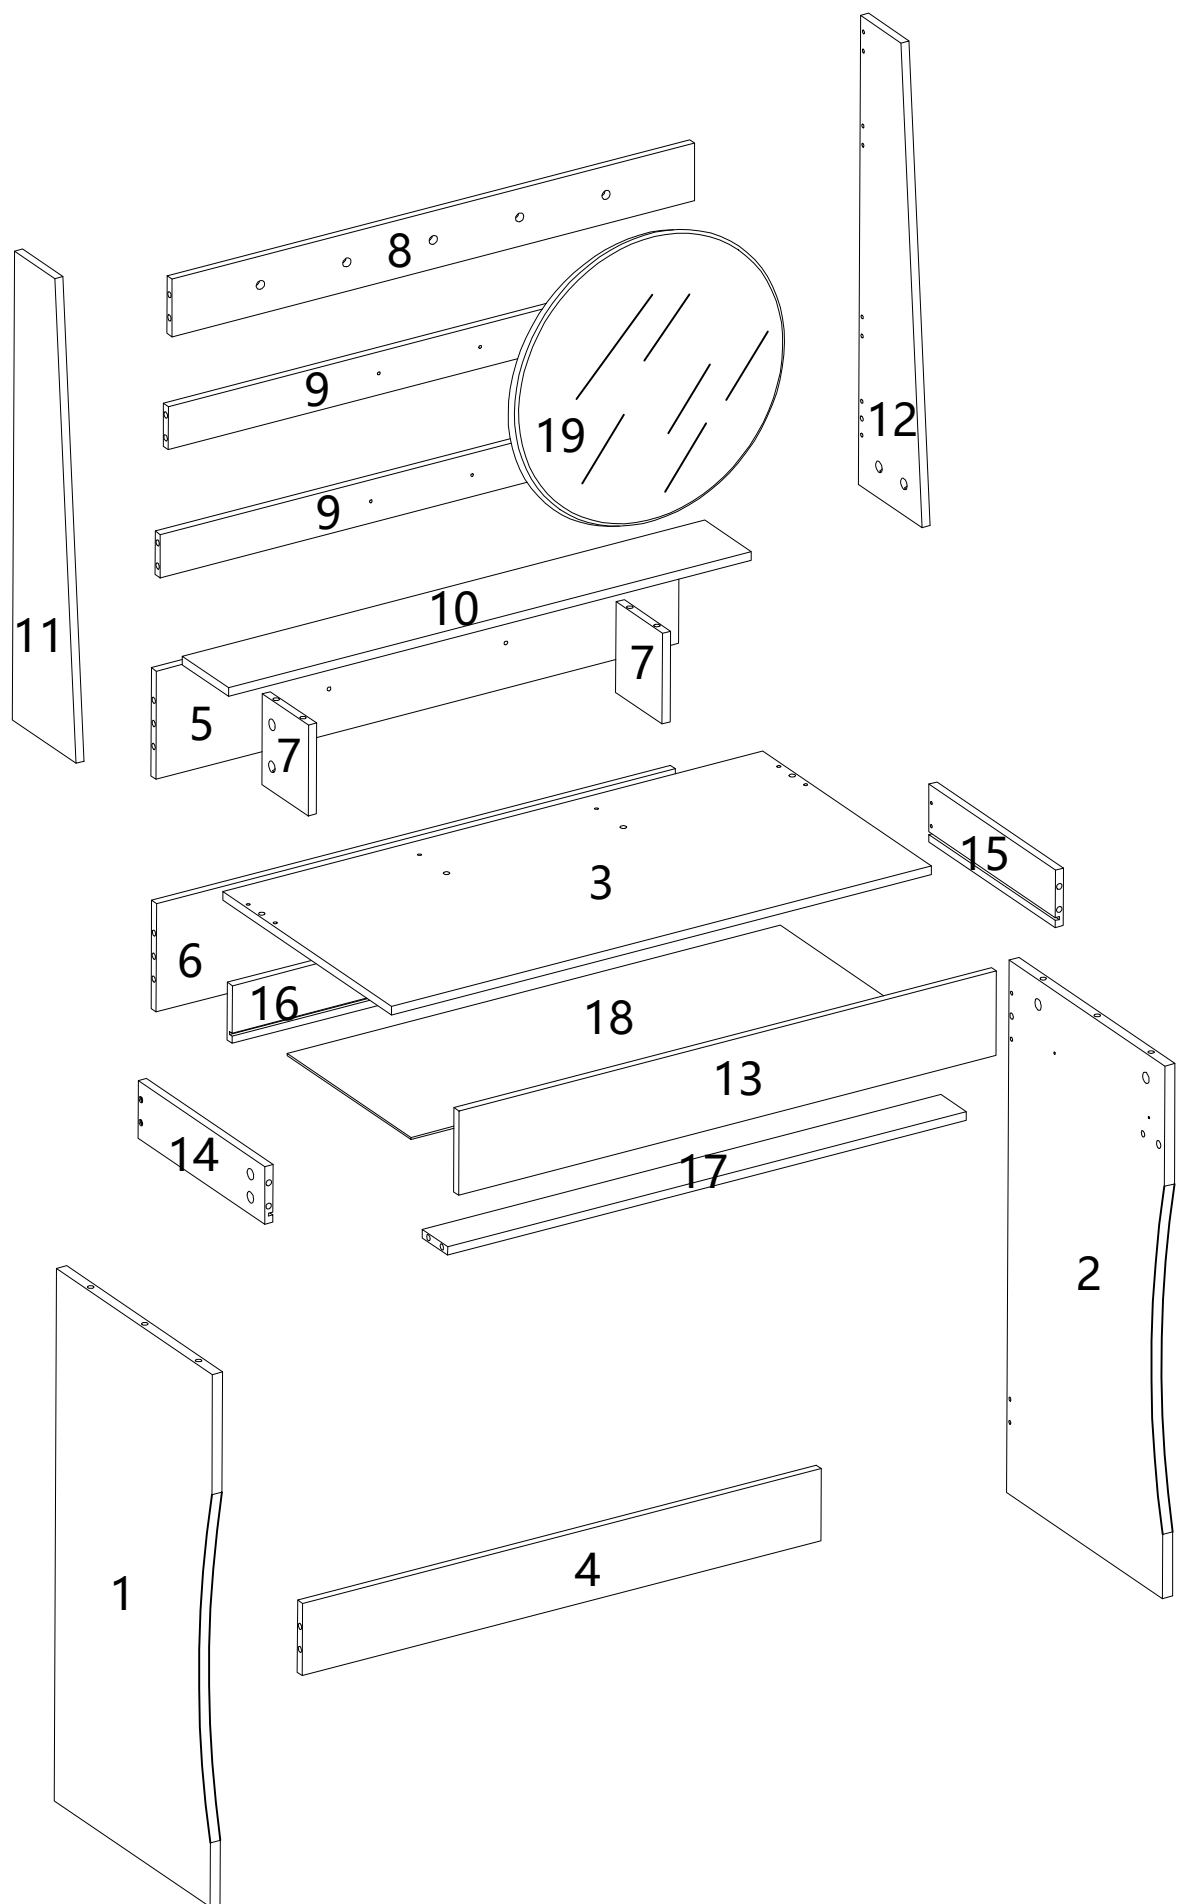
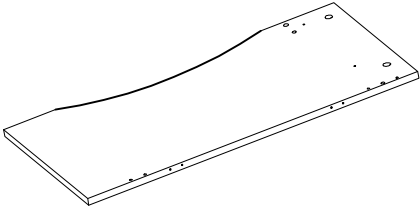
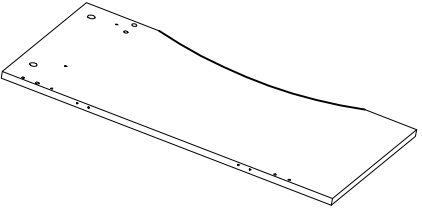
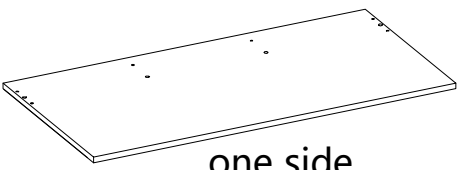
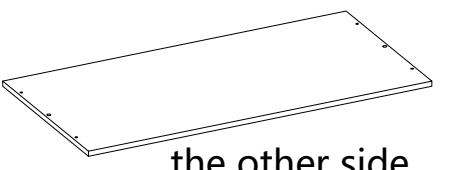
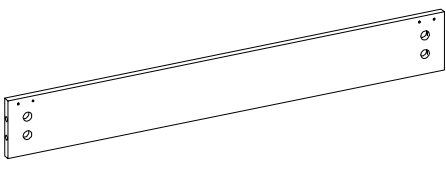
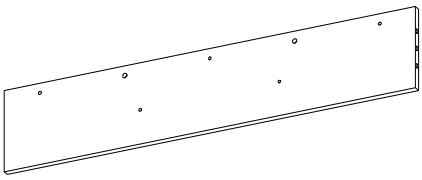
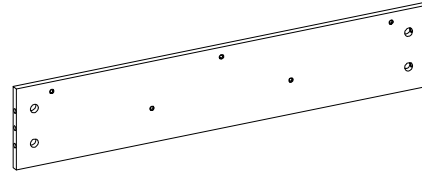
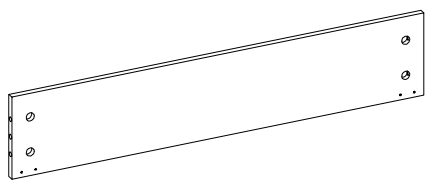
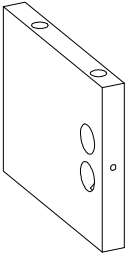
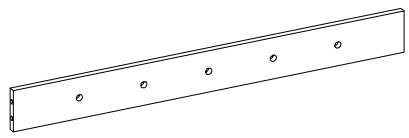
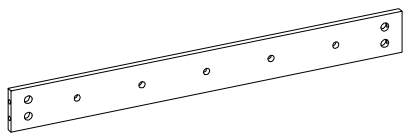
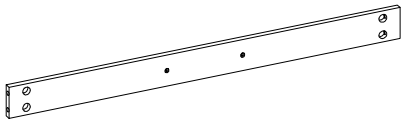
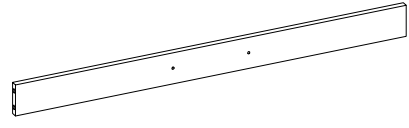
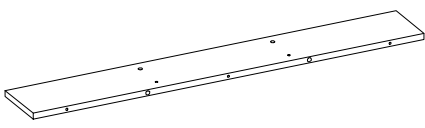
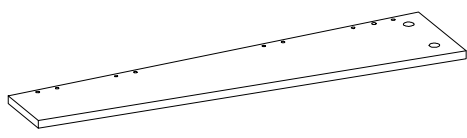
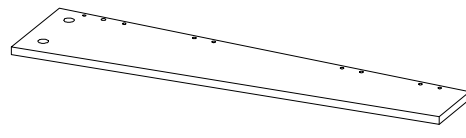
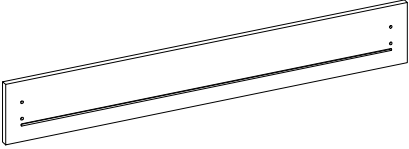
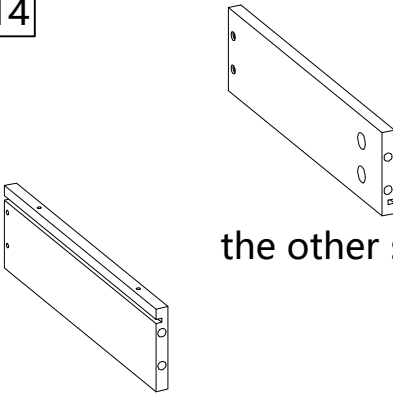
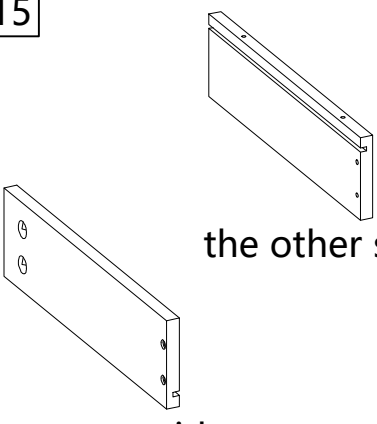
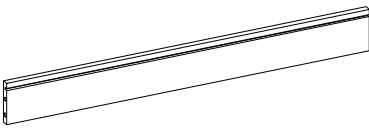













Owner Manual

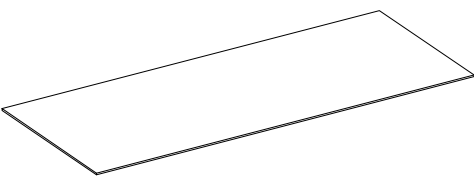

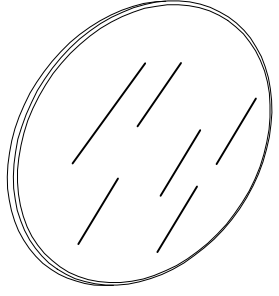

1  738*371mm	2  738*371mm	3  one side  the other side 800*395mm
4  768*100mm	5   774*150mm	6  774*150mm
7 2pcs  126*110mm	8   774*80mm	9 2pcs   774*60mm
10  774*110mm	11  650*151mm	12  650*151mm


13  796*118mm	14  the other side one side 300*80mm	15  the other side one side 300*80mm
16  718*80mm	17  768*60mm	18  726*296mm
19  404*404mm		

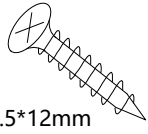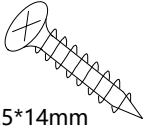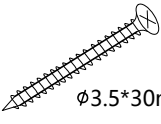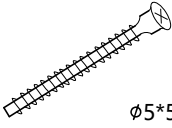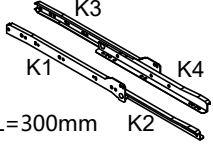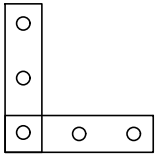A	 ø7*40mm	×42	B	 ø15*9.5mm	×40
C	 ø8*30mm	×16	D	 ø3.5*12mm	×20
E	 ø3.5*14mm	×8	F	 ø3.5*20mm	×4
G	 ø3.5*30mm	×4	H	 H1:5pcs  H2:1pcs	×1
J	 ø5*50mm	×5	K	 K1 K2 K3 K4 L=300mm	×1
L	 L1  L2 8pcs	×1	O		×4
M		×4	N		×2


Hardware installation demonstration

NOTE: Please make sure
"A" hardware tightened
and can't be pulled out!


I

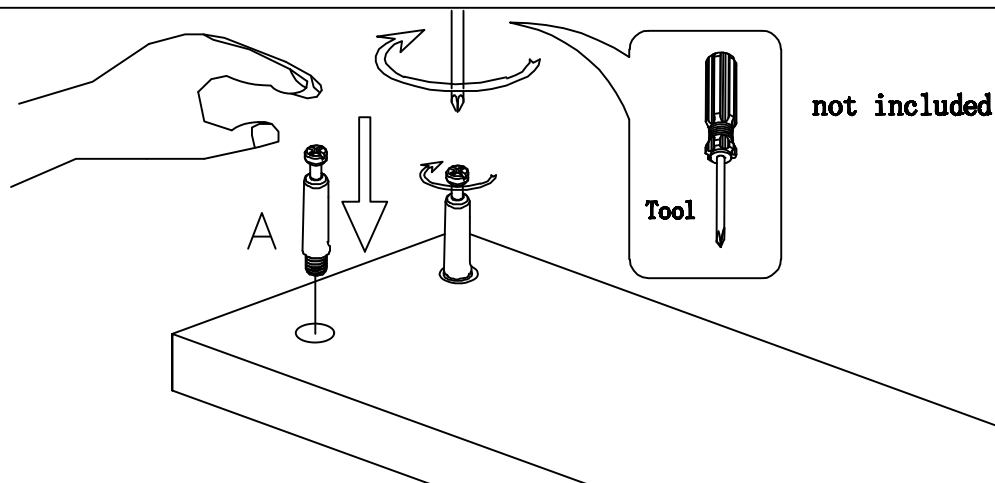


II

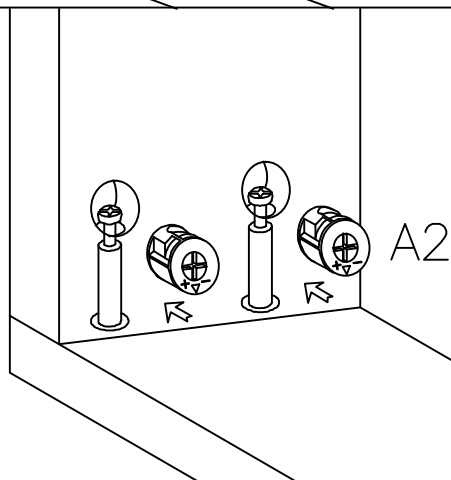



III

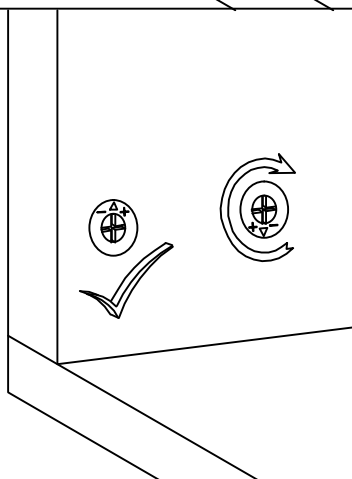


STEP 1

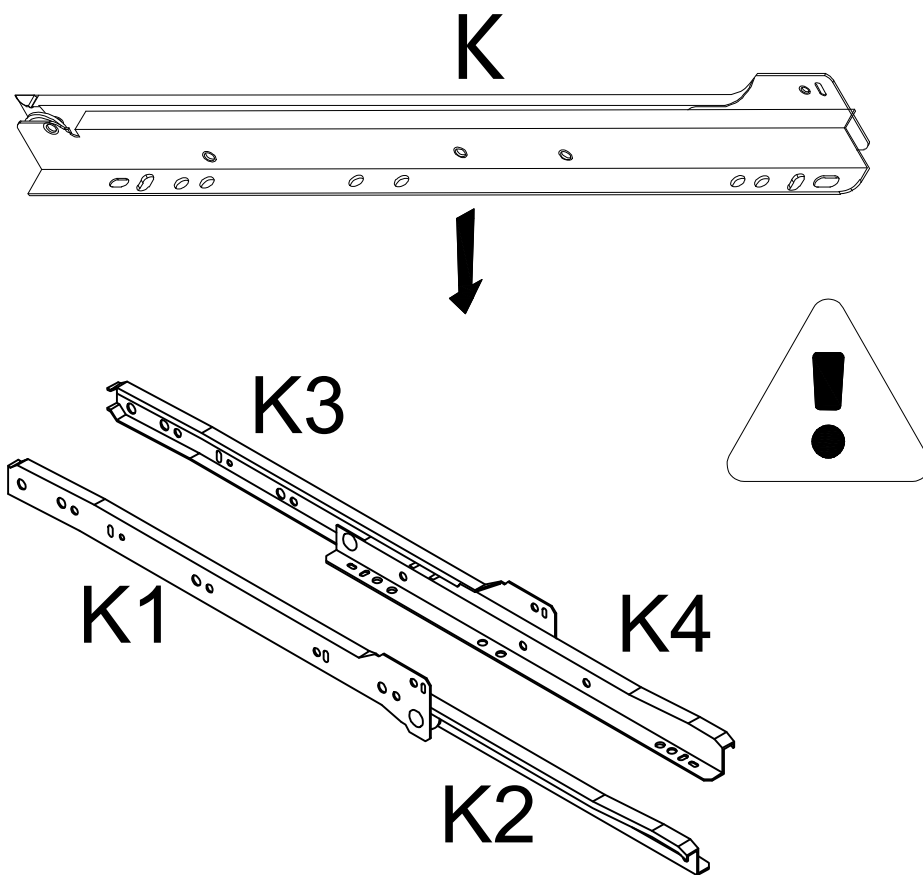

STEP 2

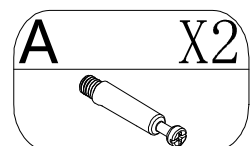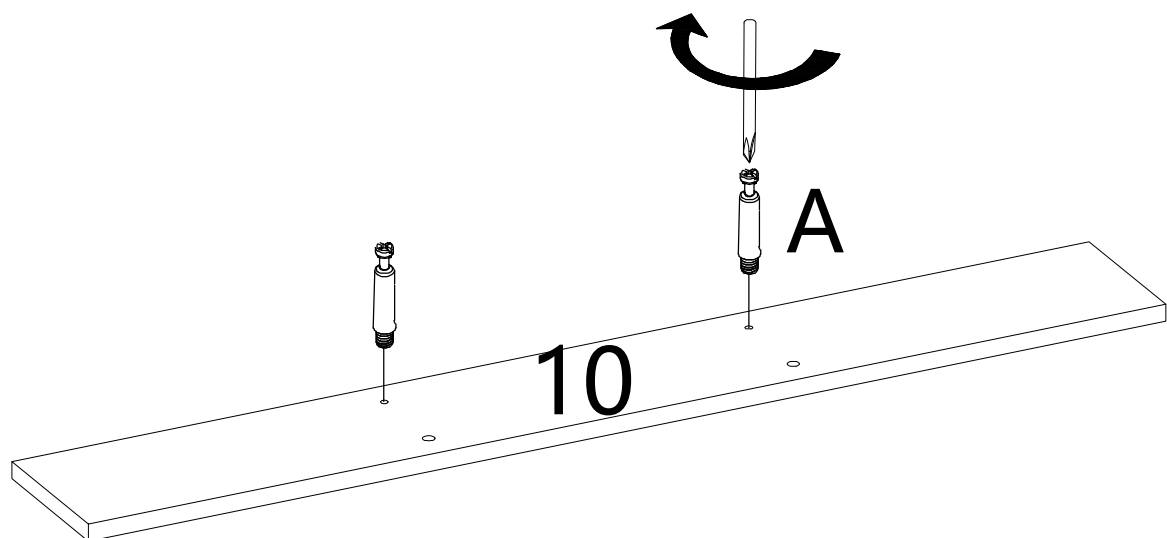


STEP 3

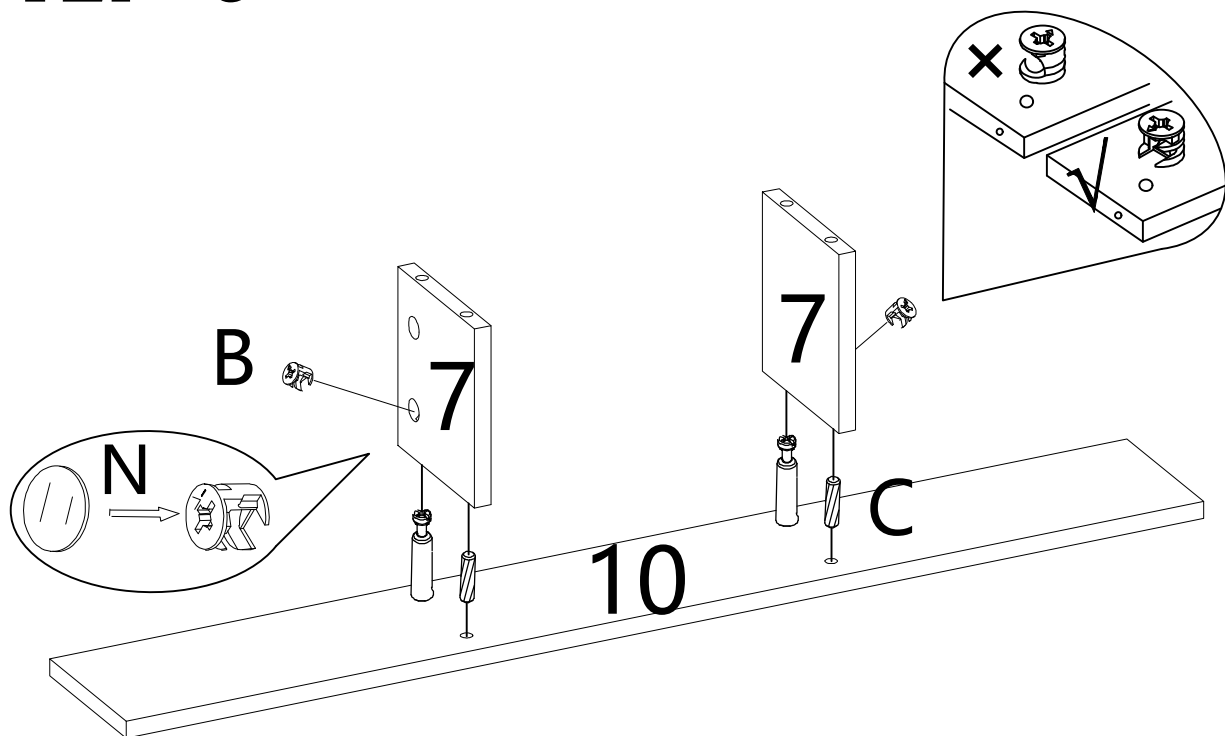



N	X2	B	X2	C	X2

STEP 4


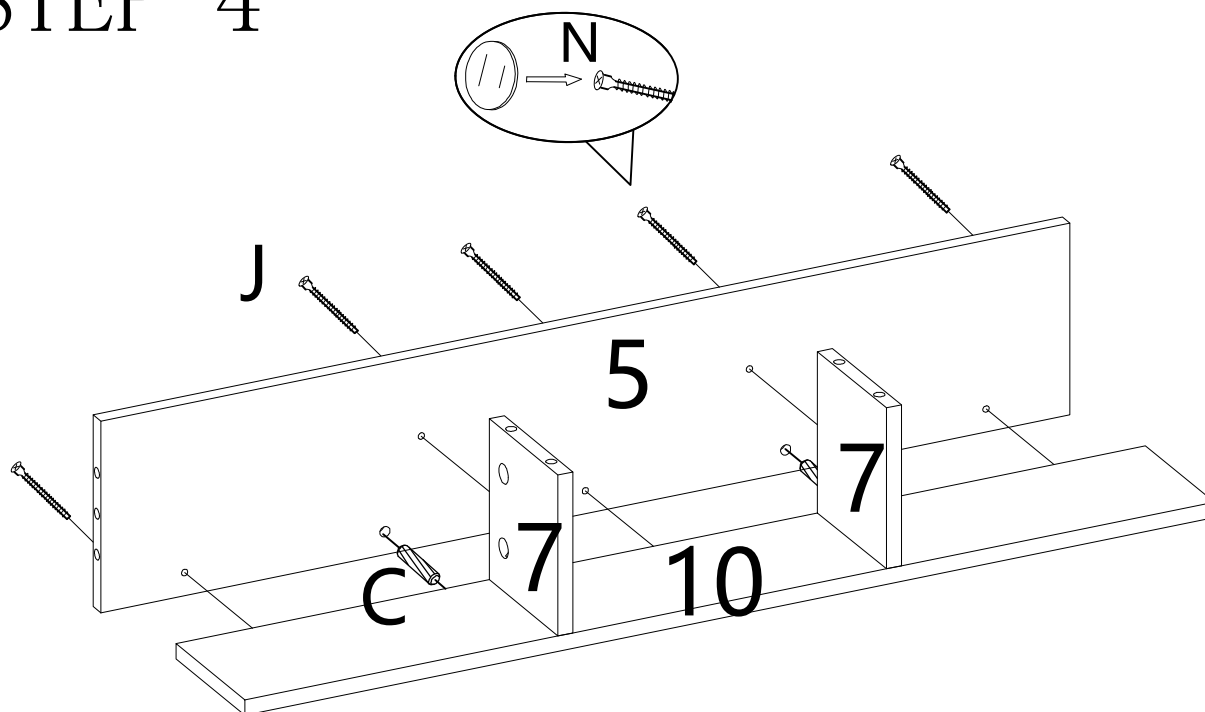


N	X5	J	X5	C	X2



STEP 5

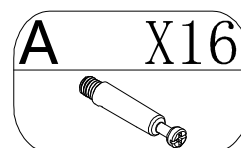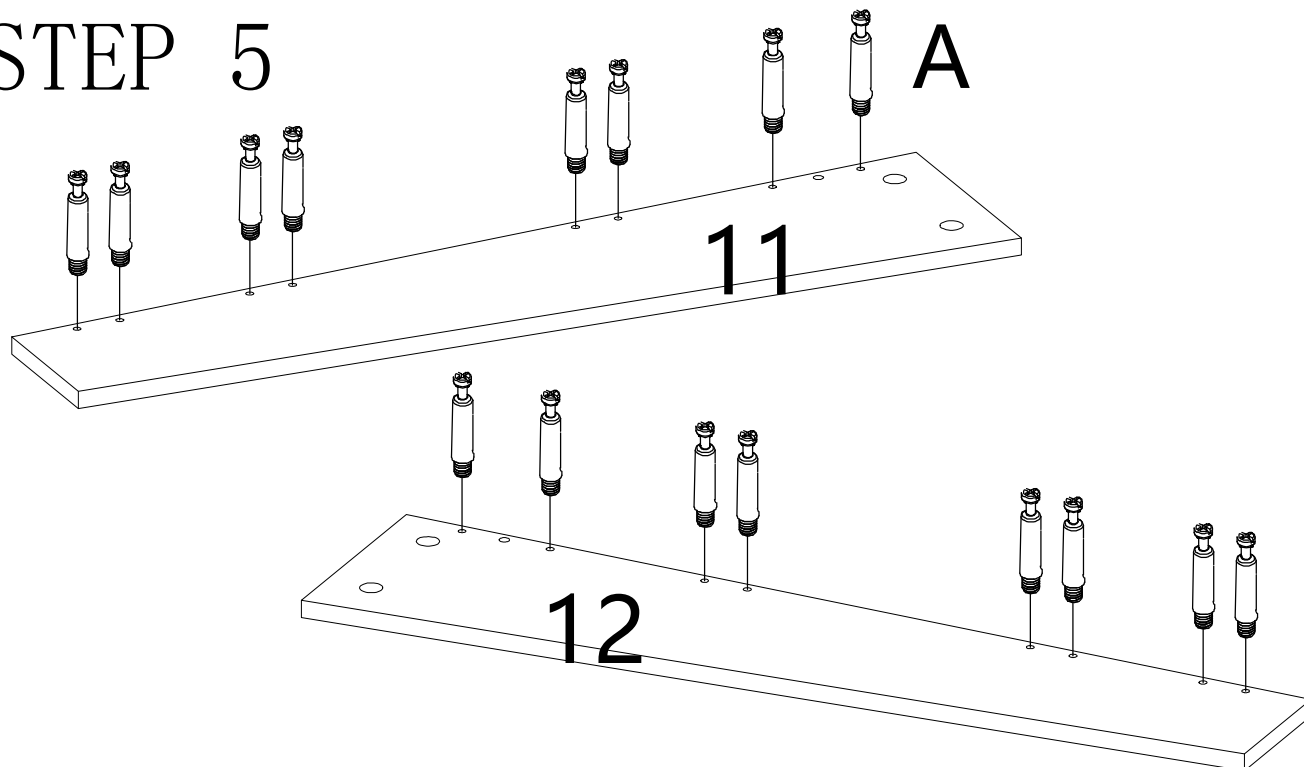


STEP 6

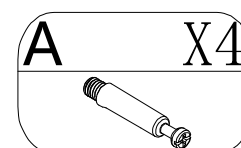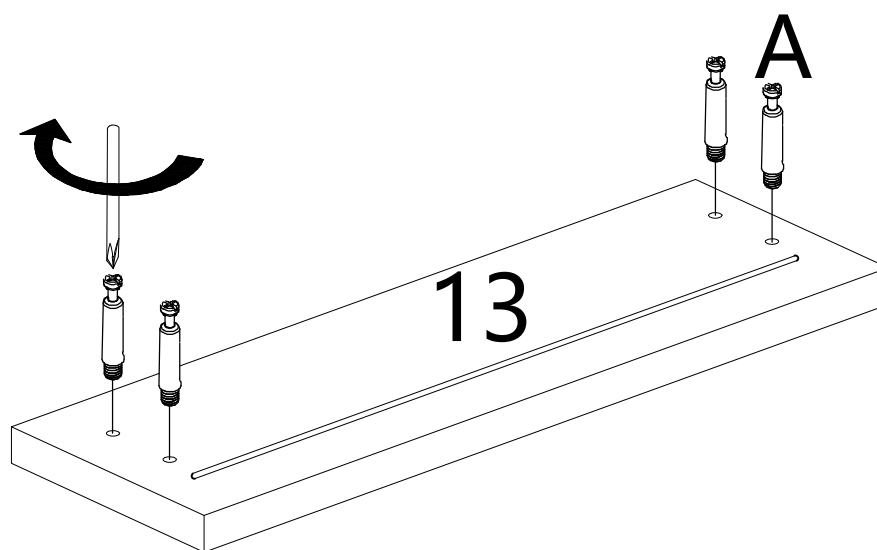



STEP 7

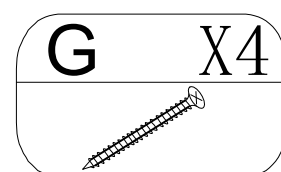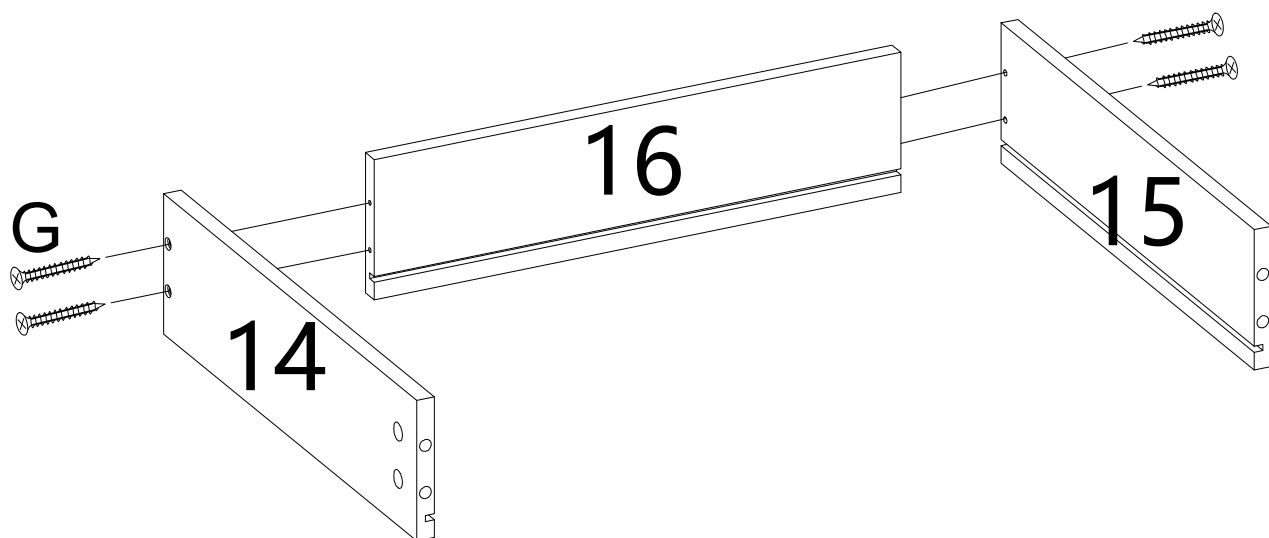



STEP 8

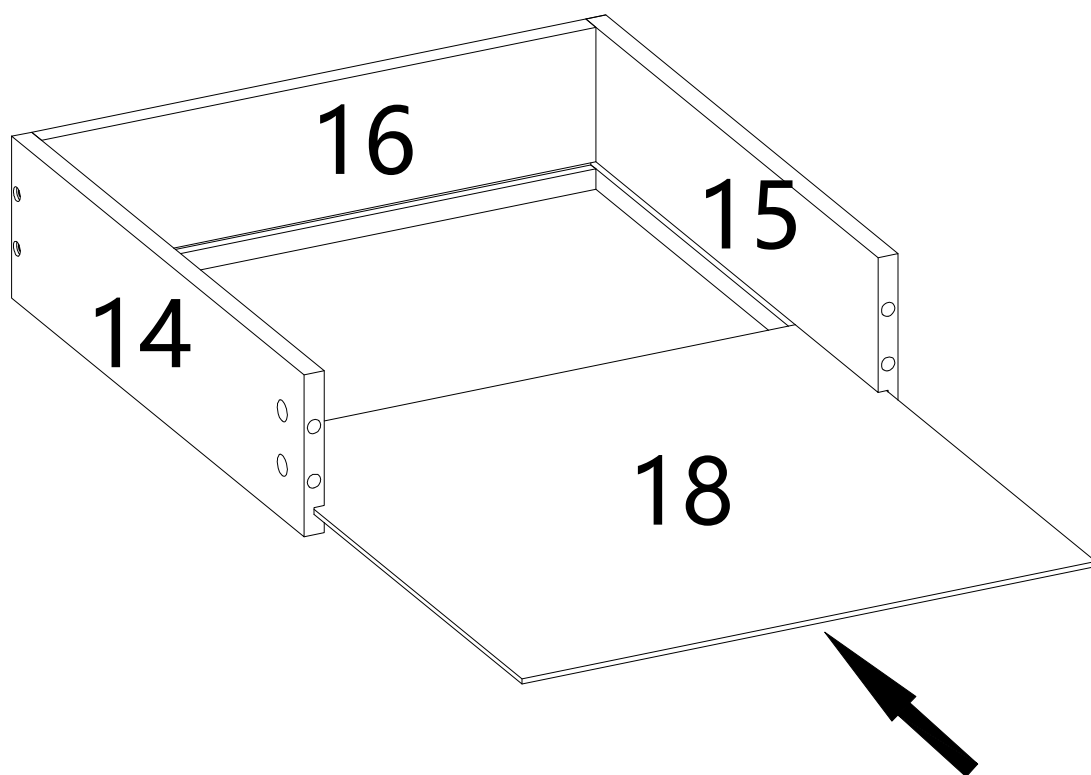


STEP 9

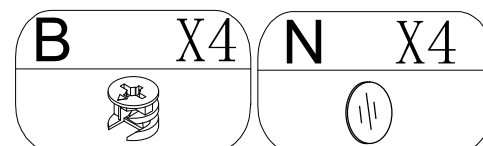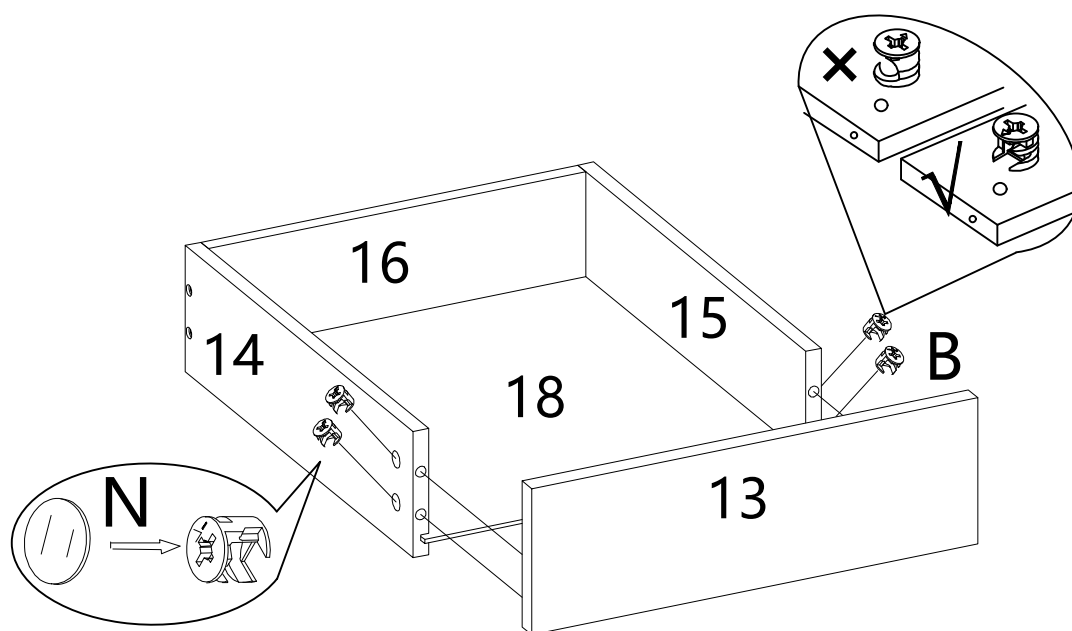



STEP 10

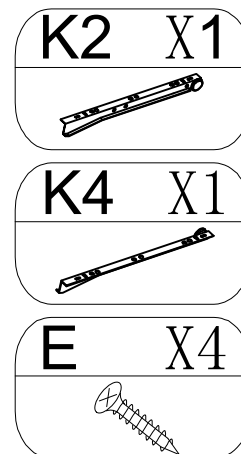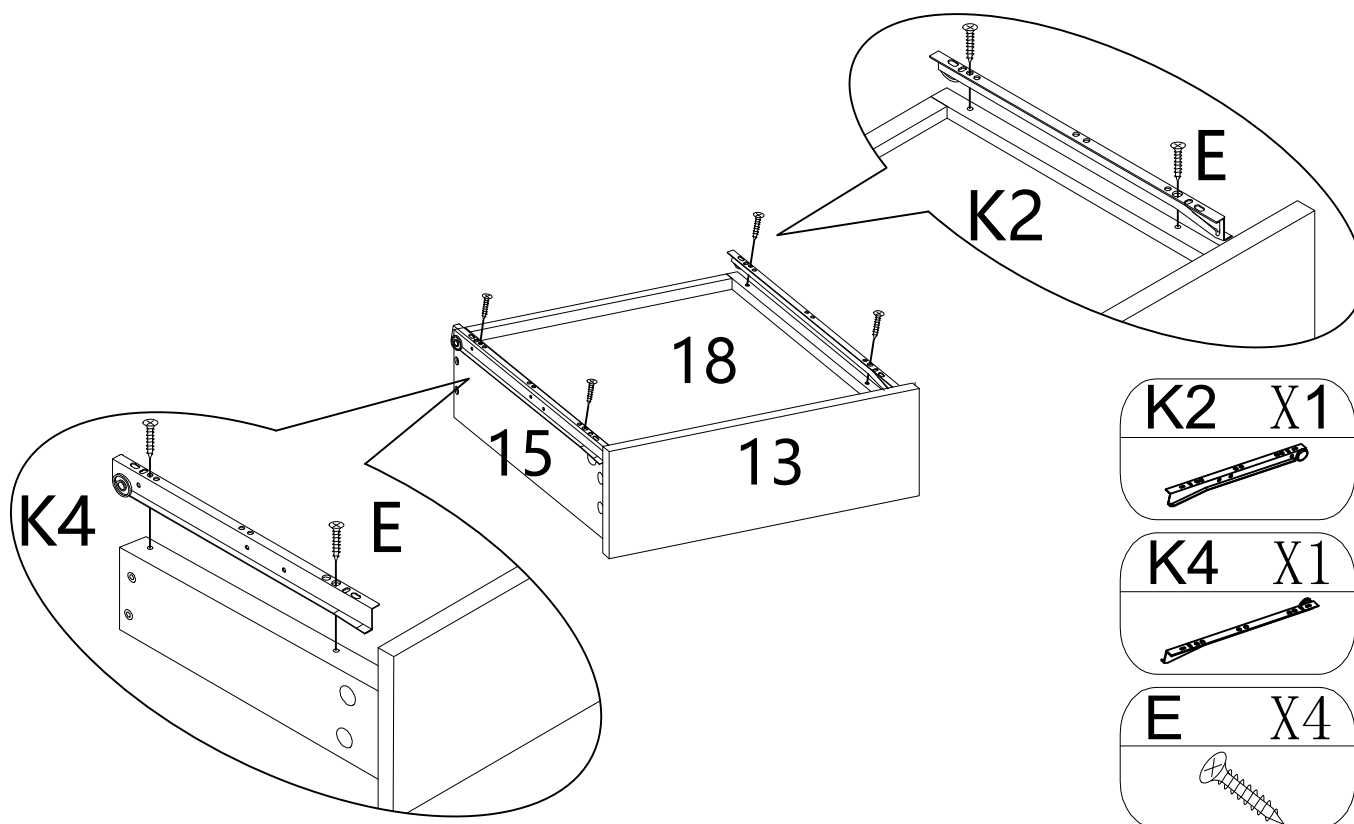



STEP 11

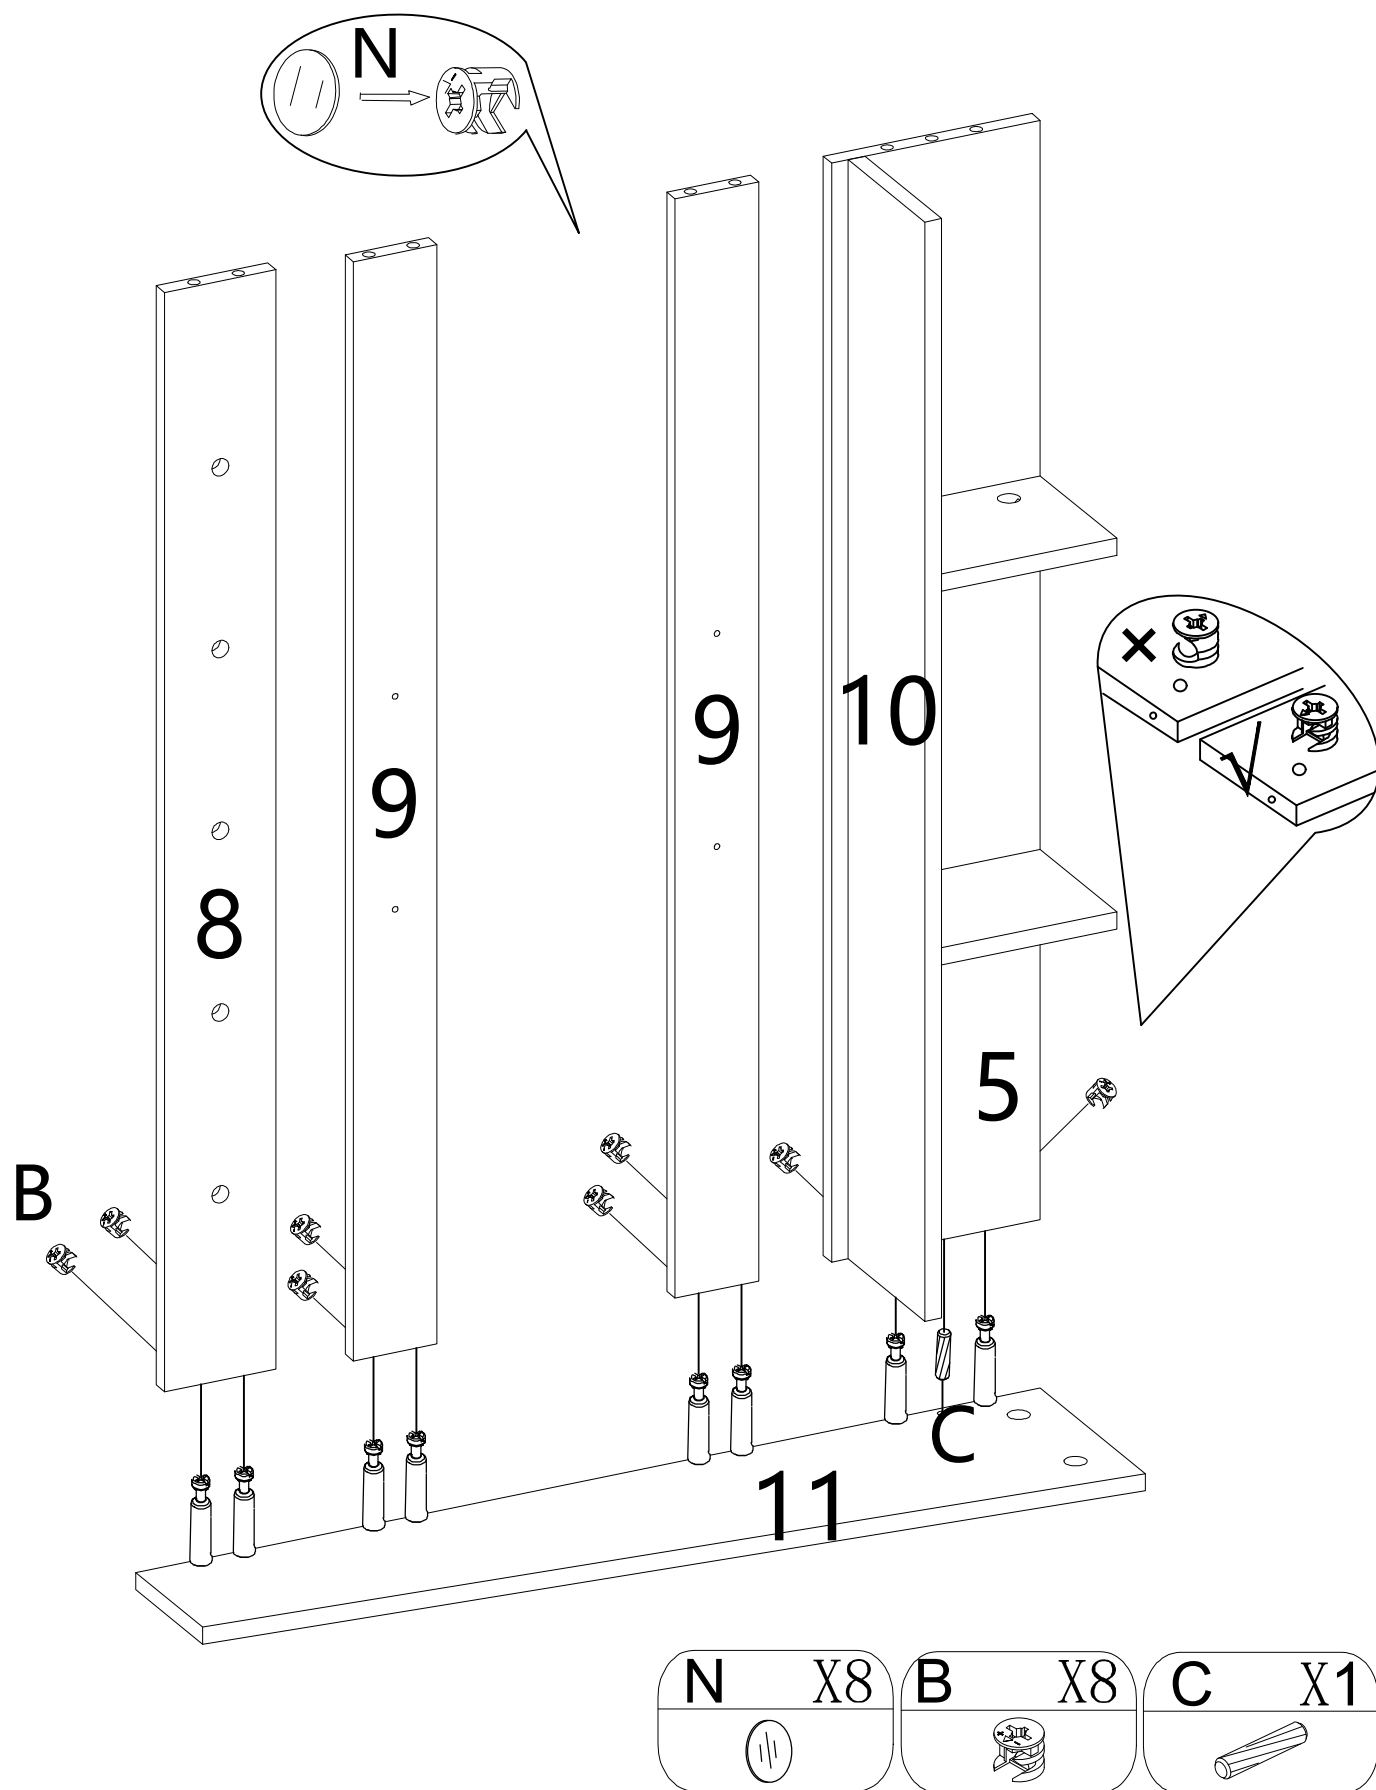


STEP 12

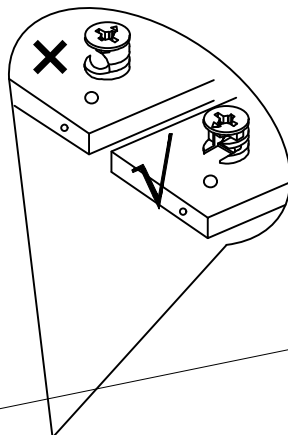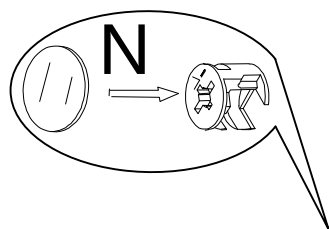

B

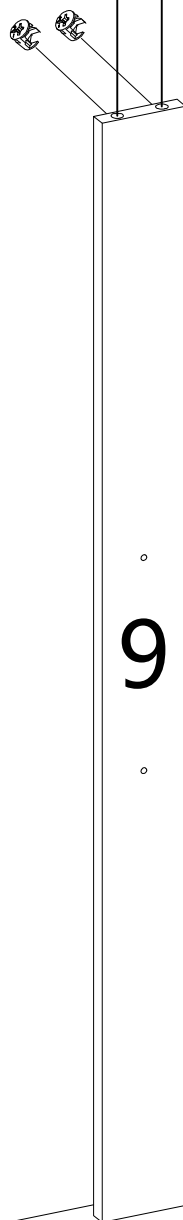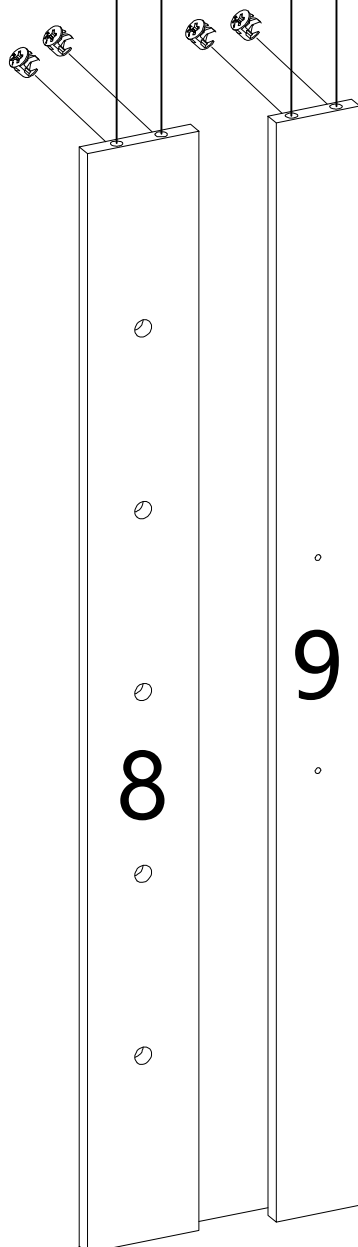

11

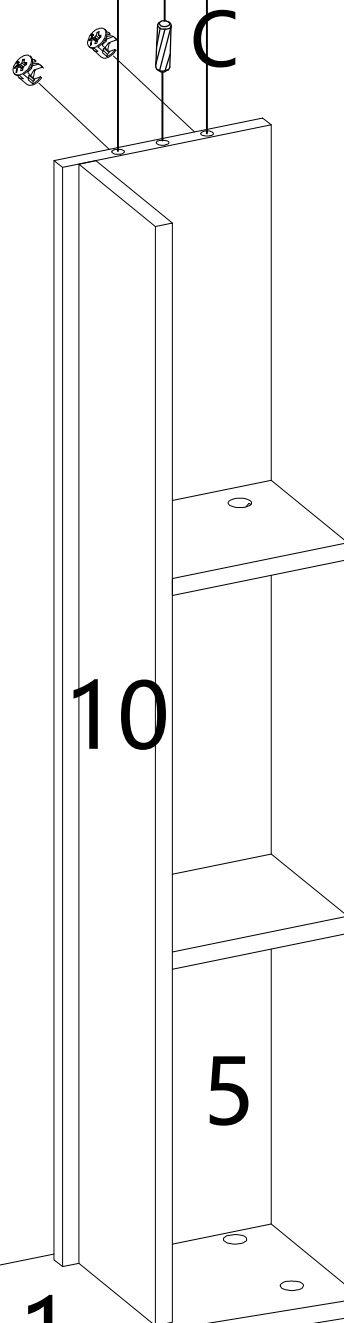

12

C

10


9

8


5

N	X8	B	X8	C	X1


STEP 13

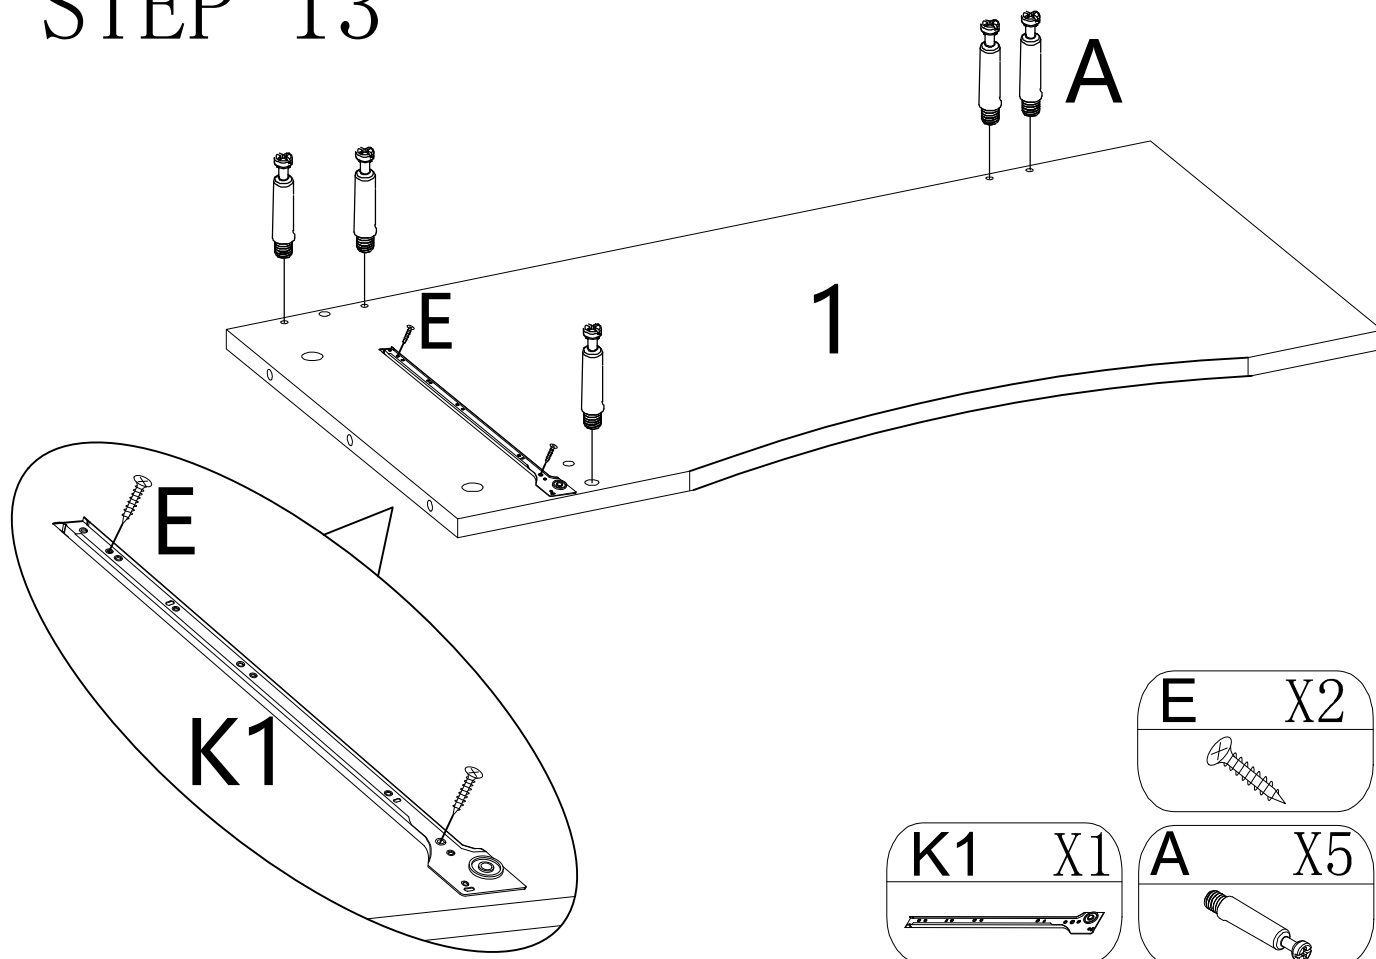

STEP 14

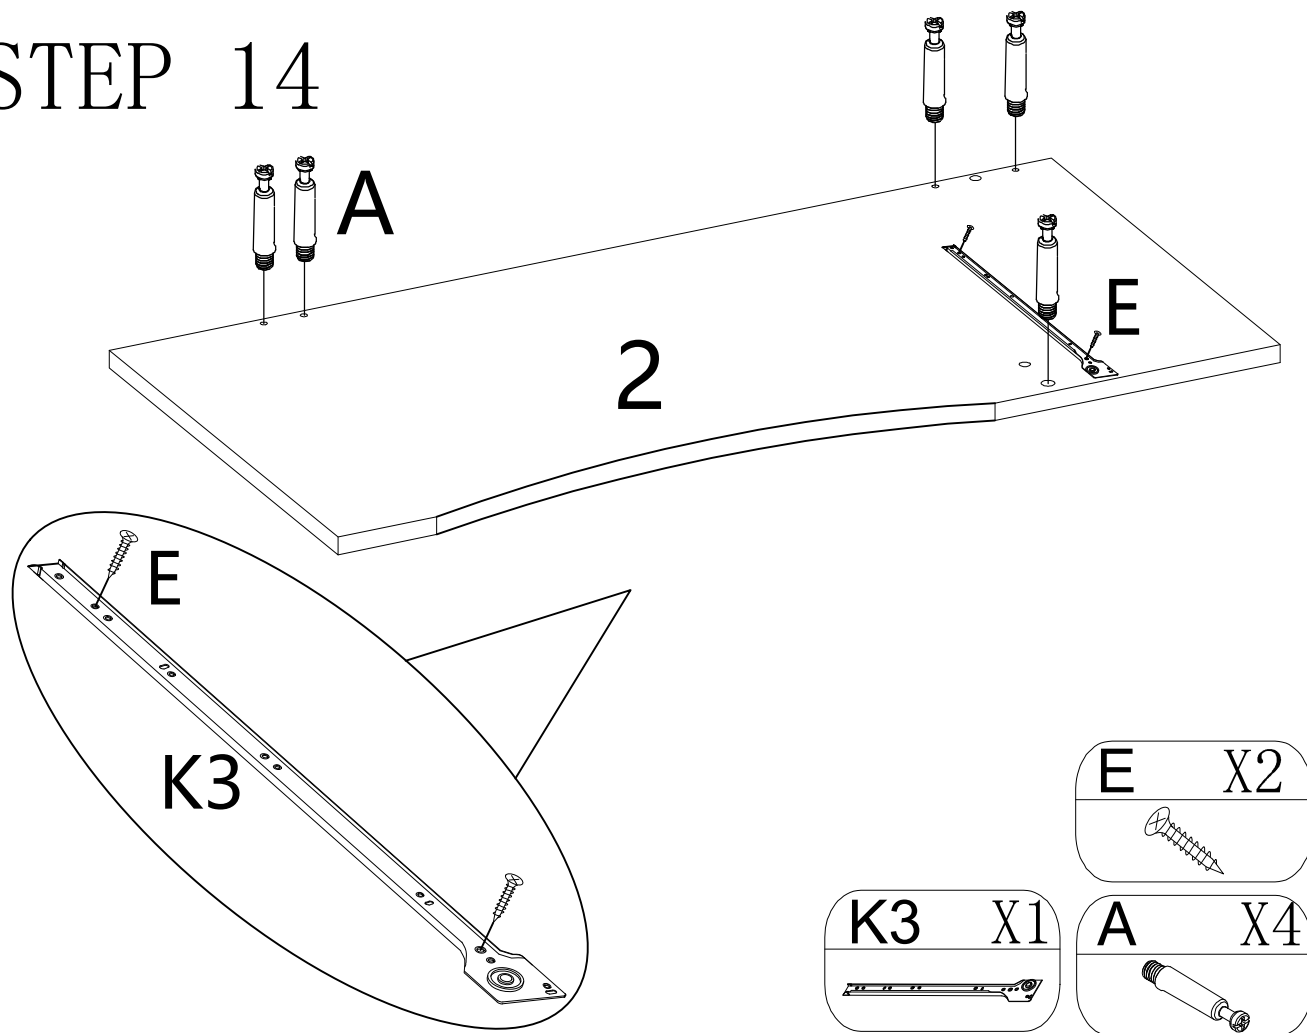


STEP 15

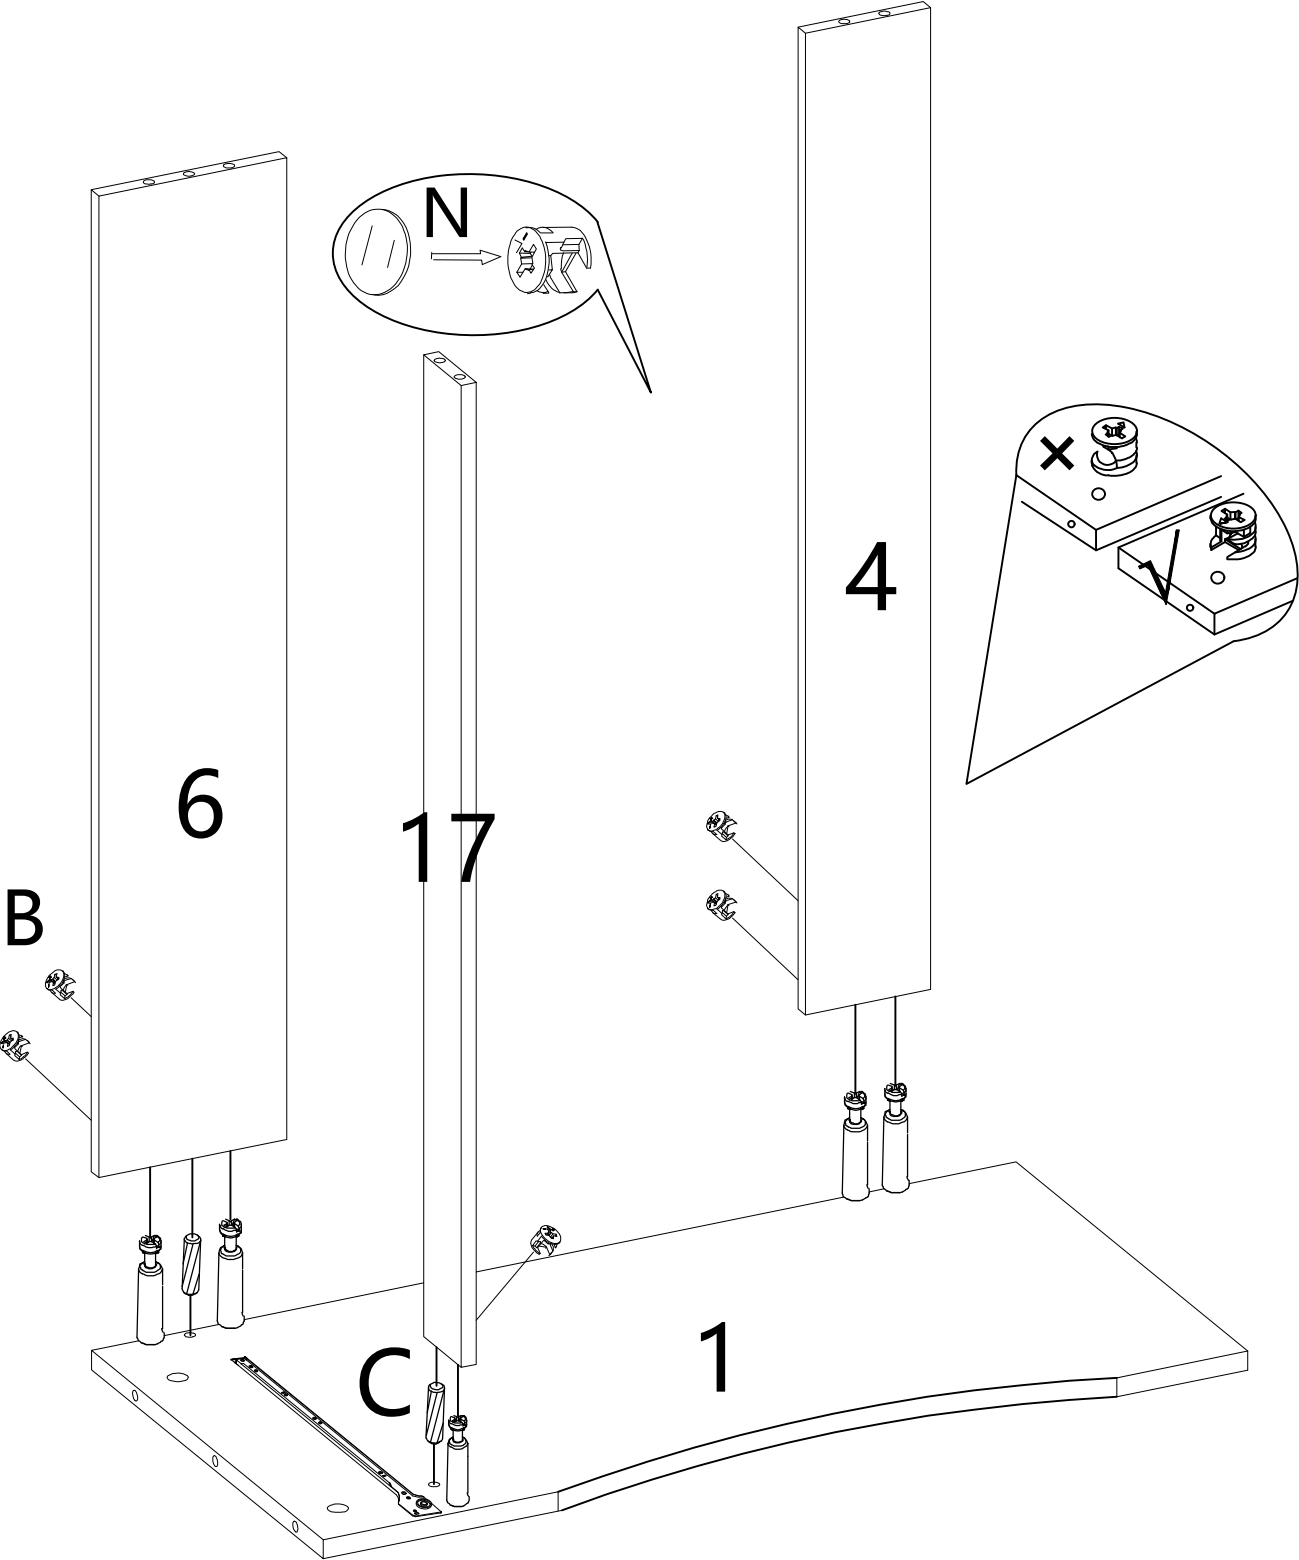


C	X2	N	X5	B	X5
					

STEP 16

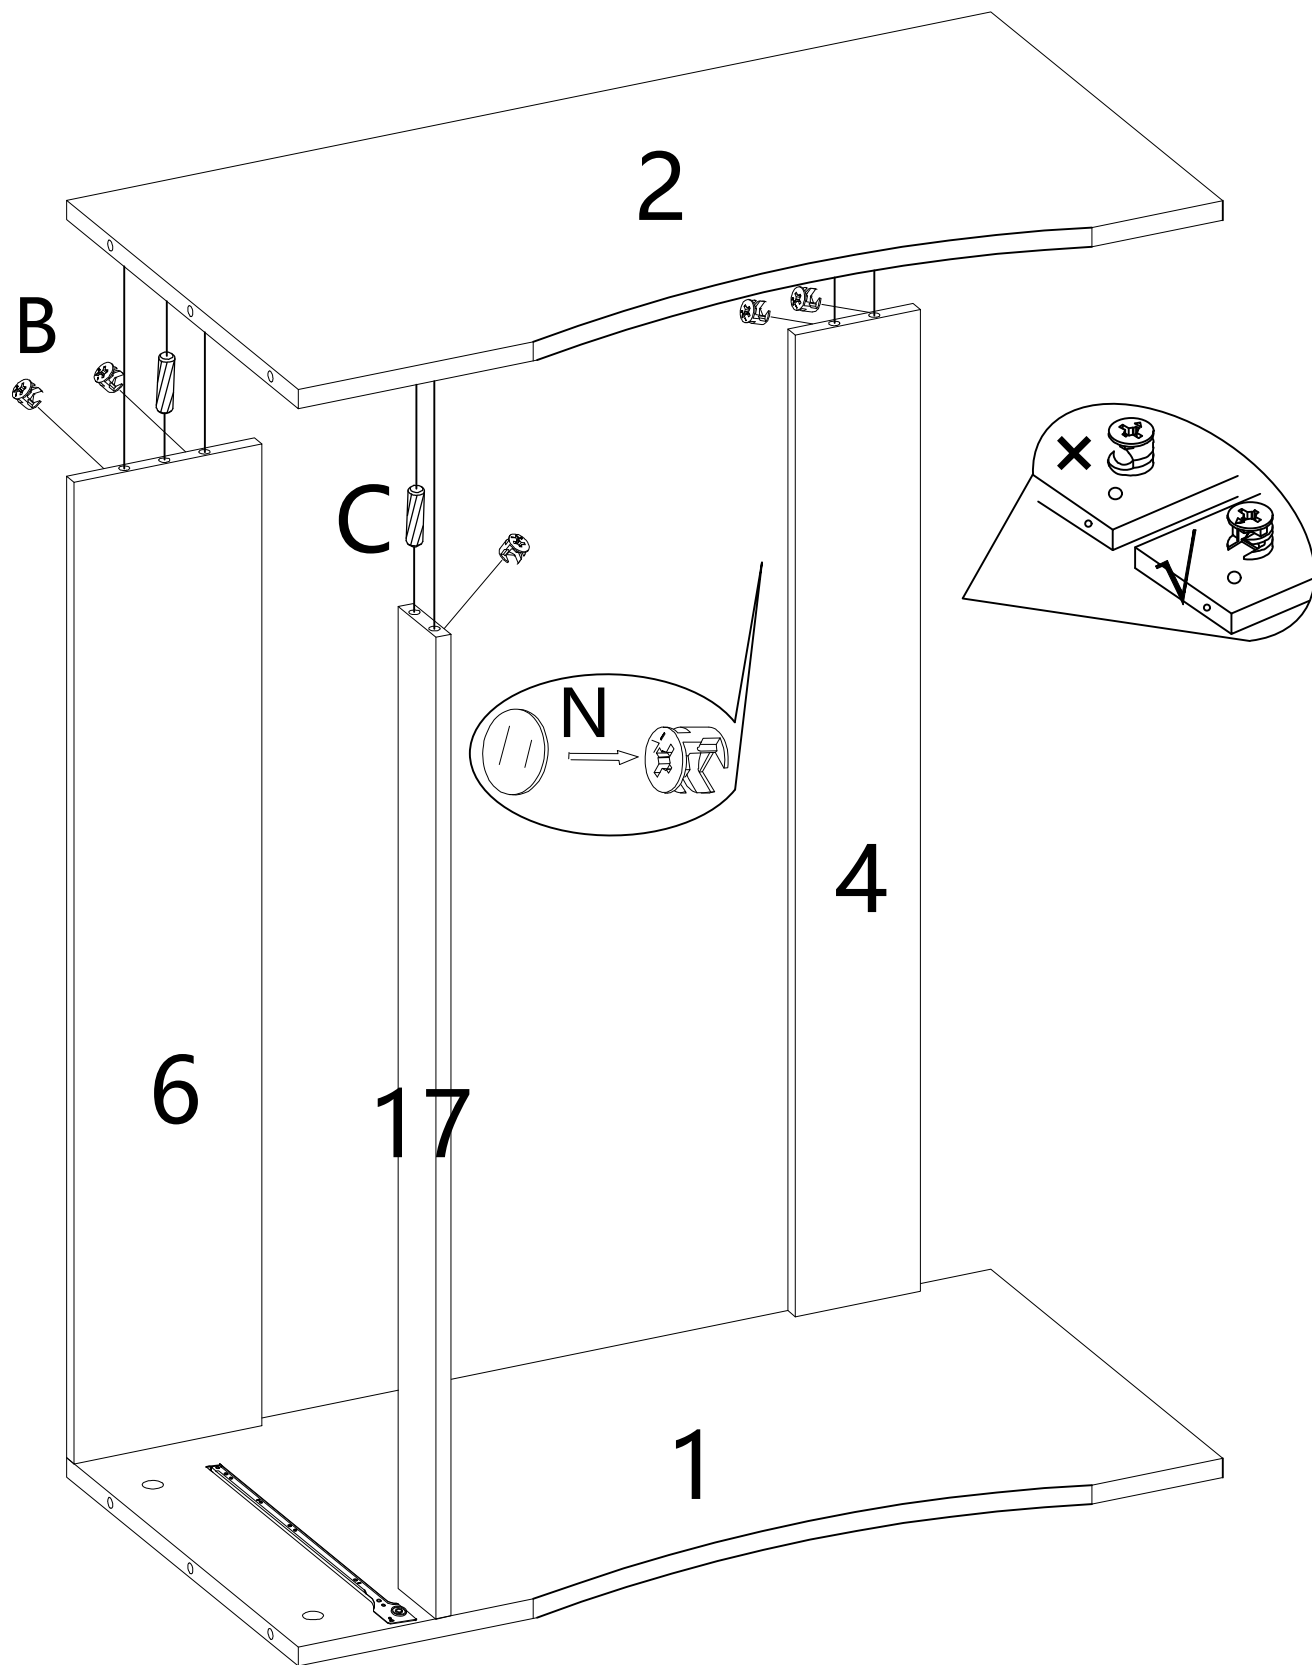


C	X2	N	X5	B	X5
					


STEP 17

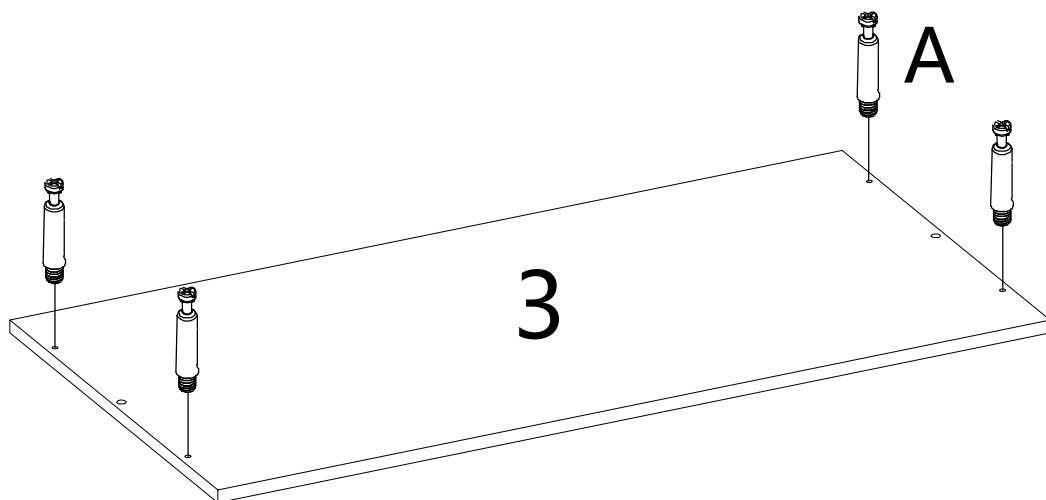


one side

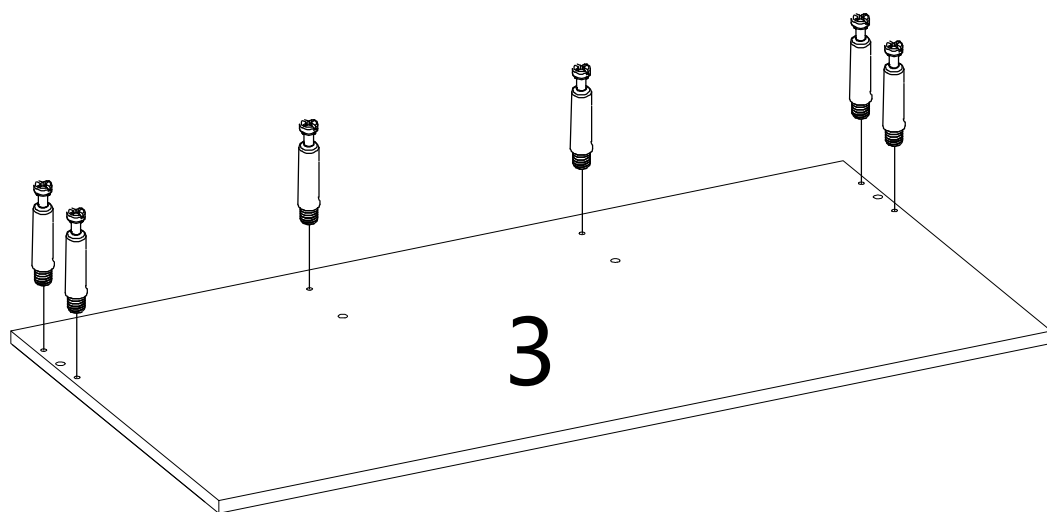

the other side


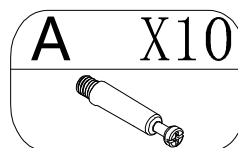


STEP 18

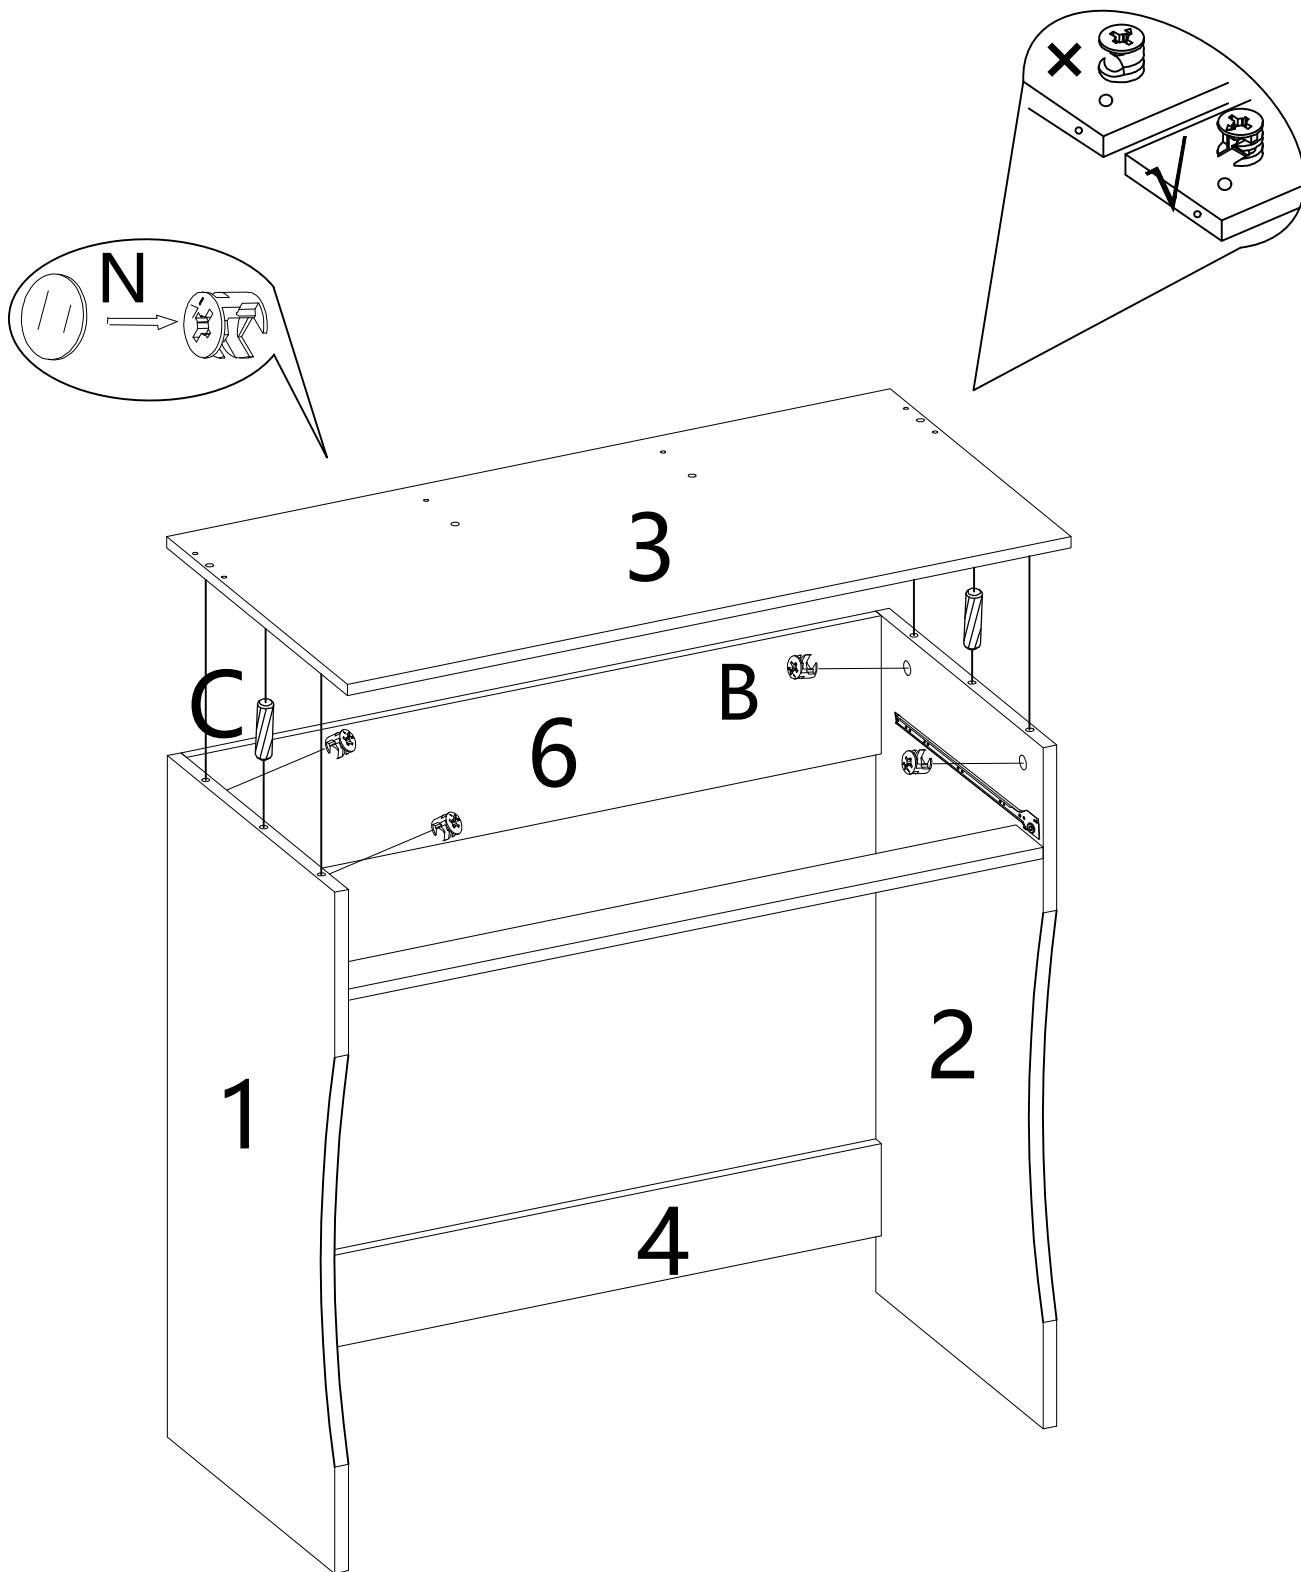


C	X2	N	X4	B	X4
					


STEP 19

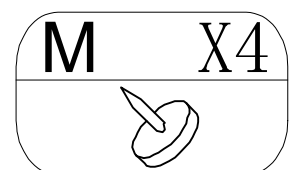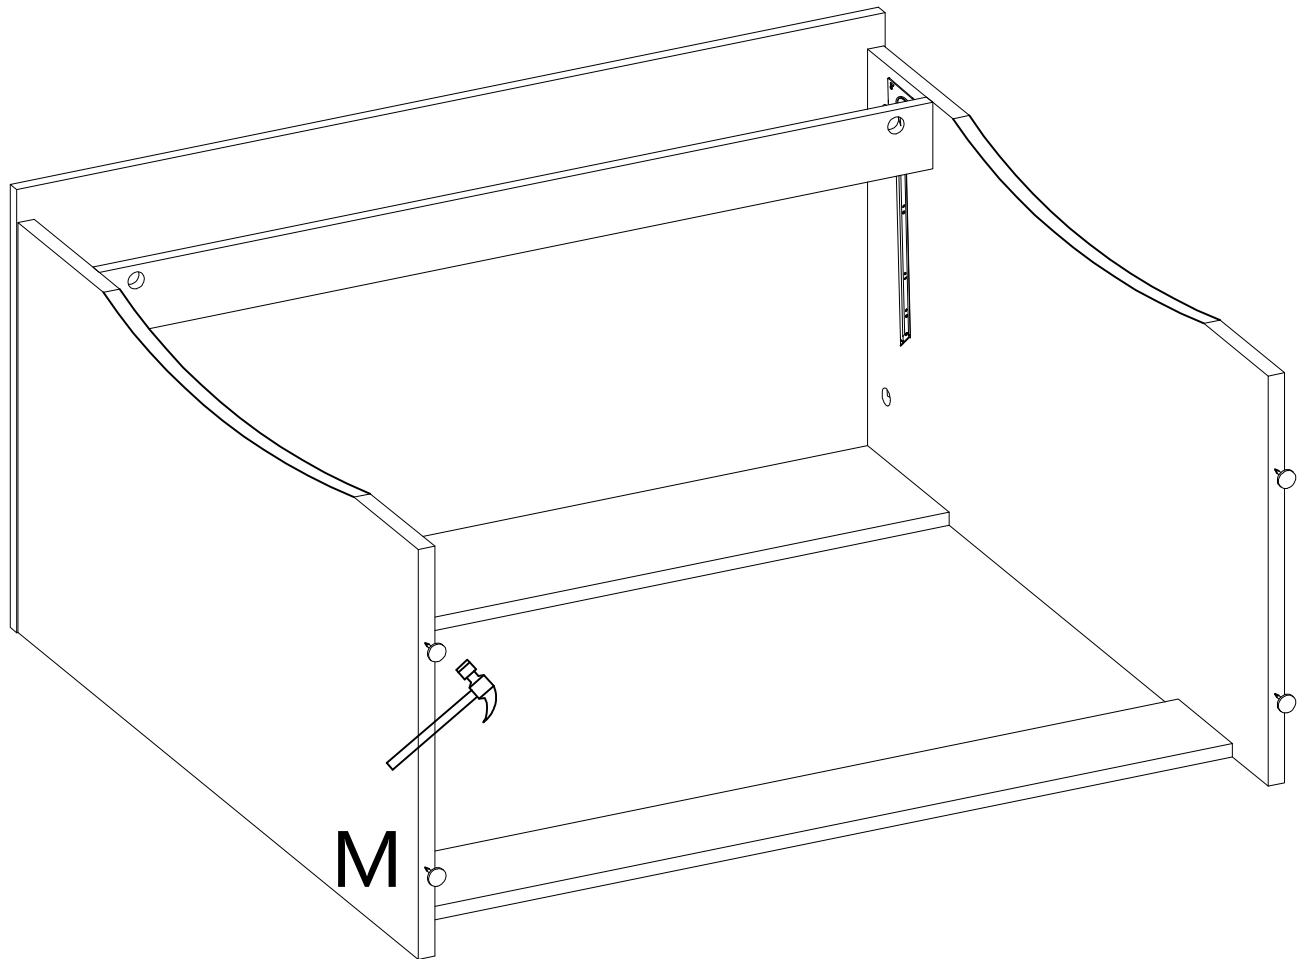

STEP 20


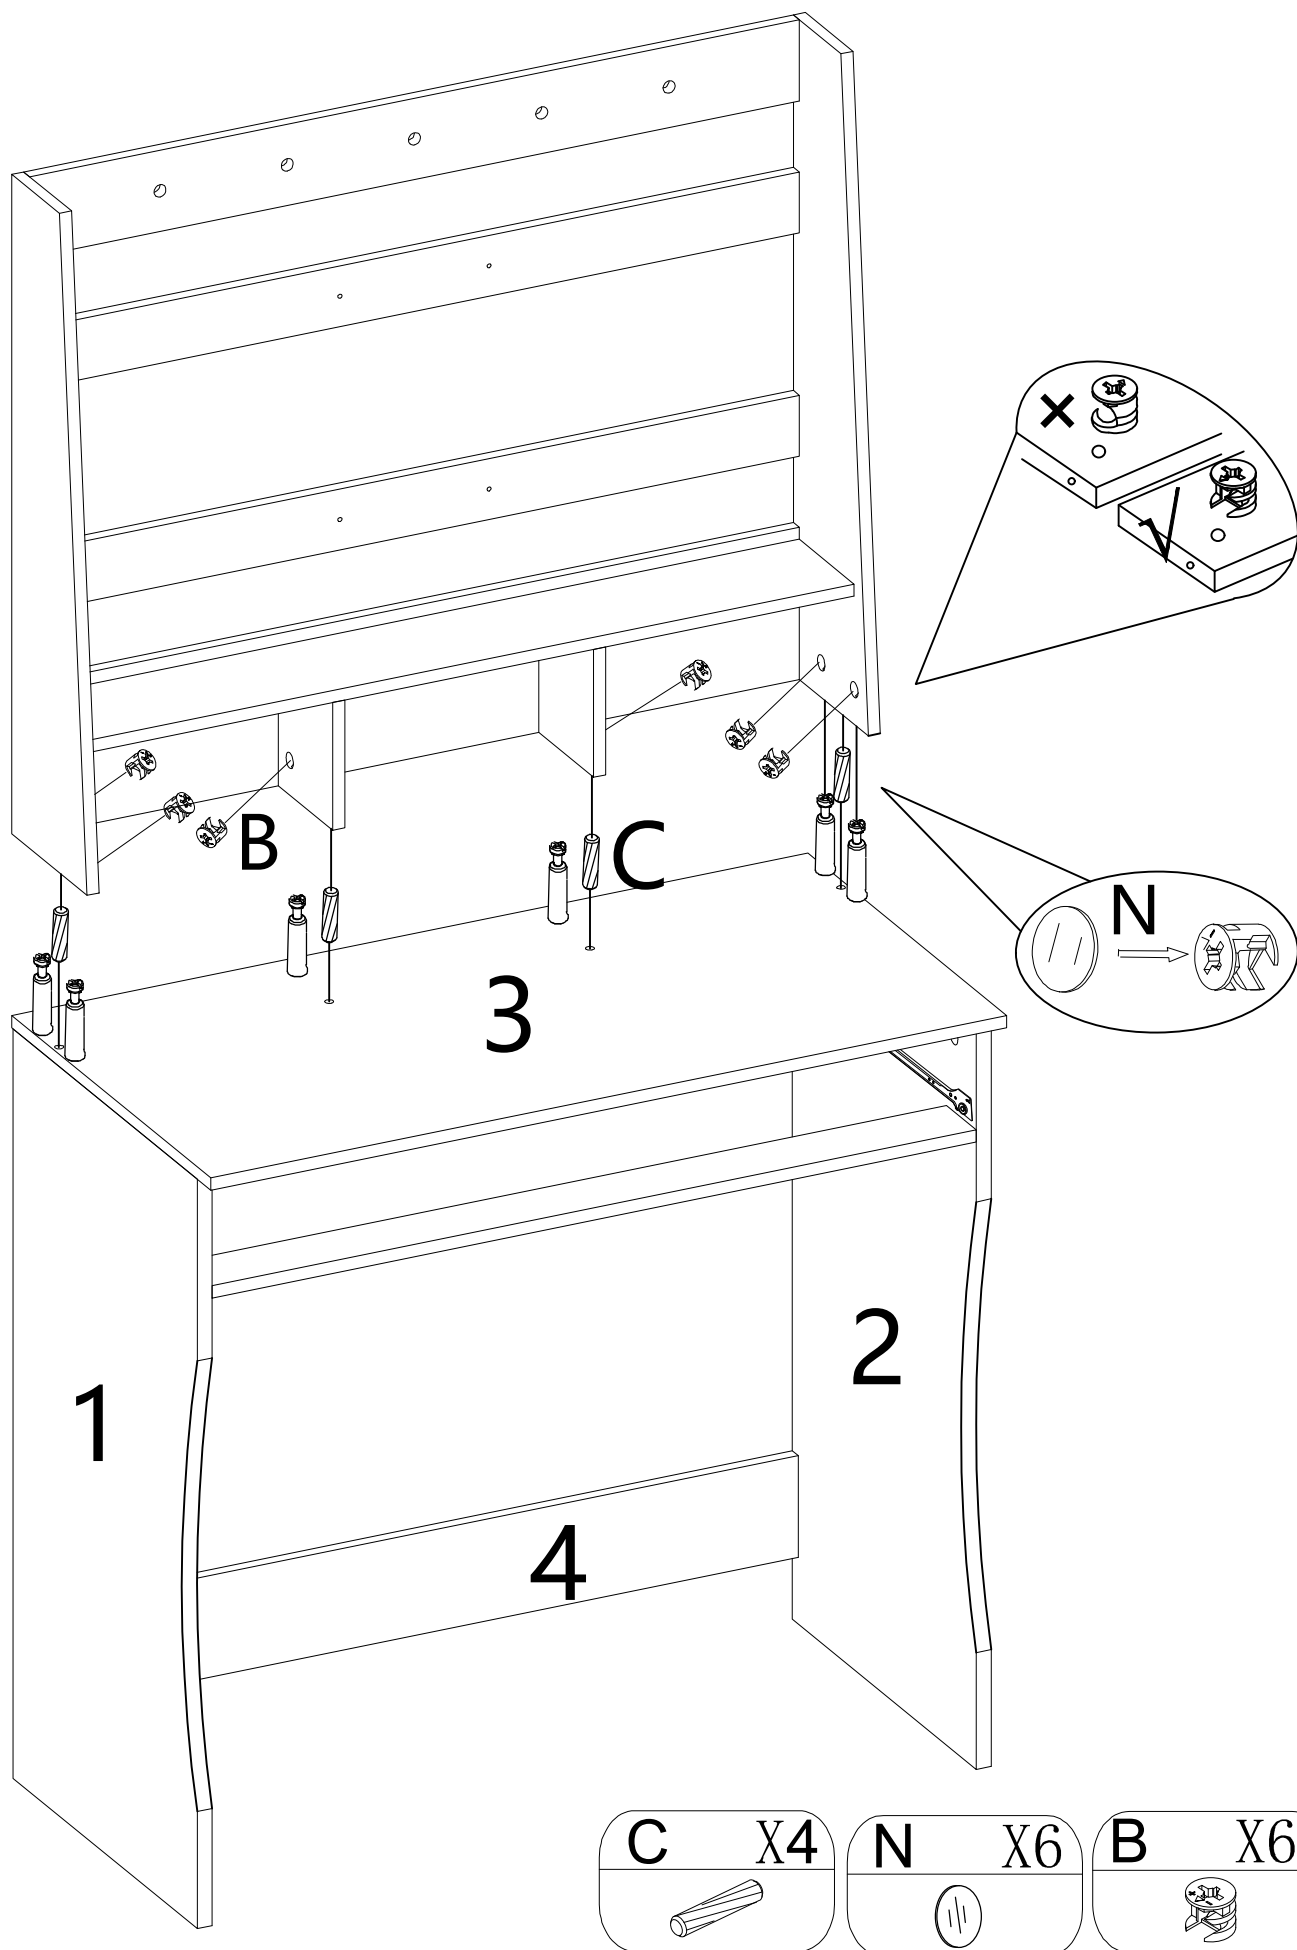


STEP 21

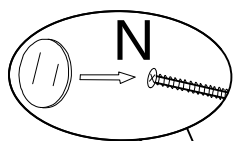

F

19

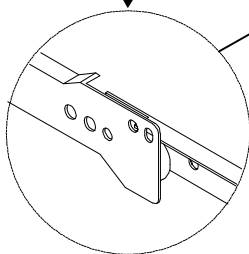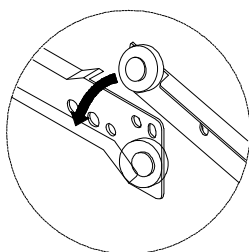

N

X4





F

X4








STEP 22

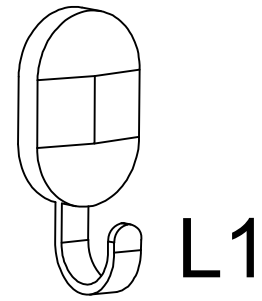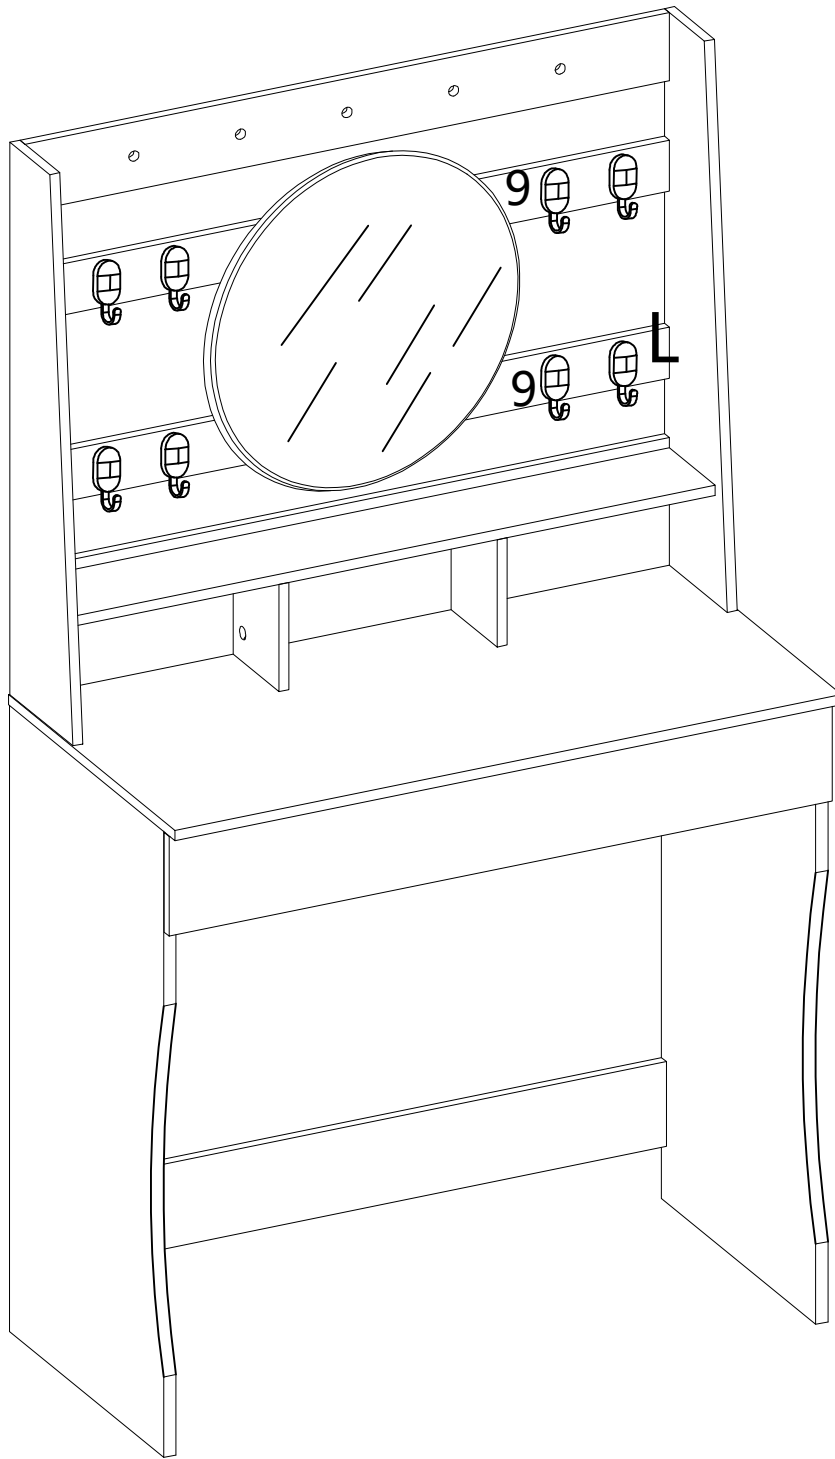


Please choose whether to attach the hook.

If you need to attach, first tear the film on both sides of L2, attach one side to L1, and then attach L1 and L2 together to 9

STEP 23

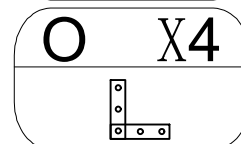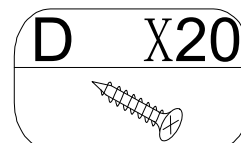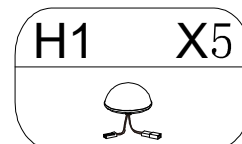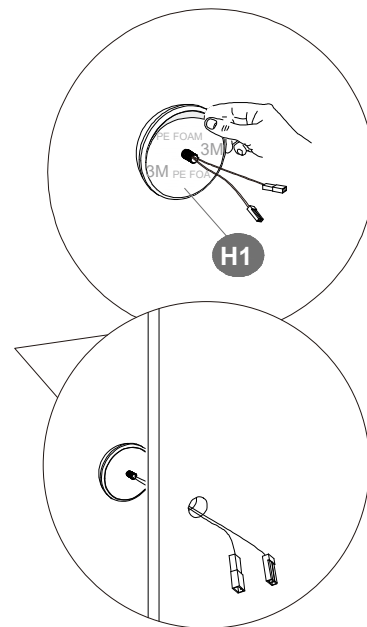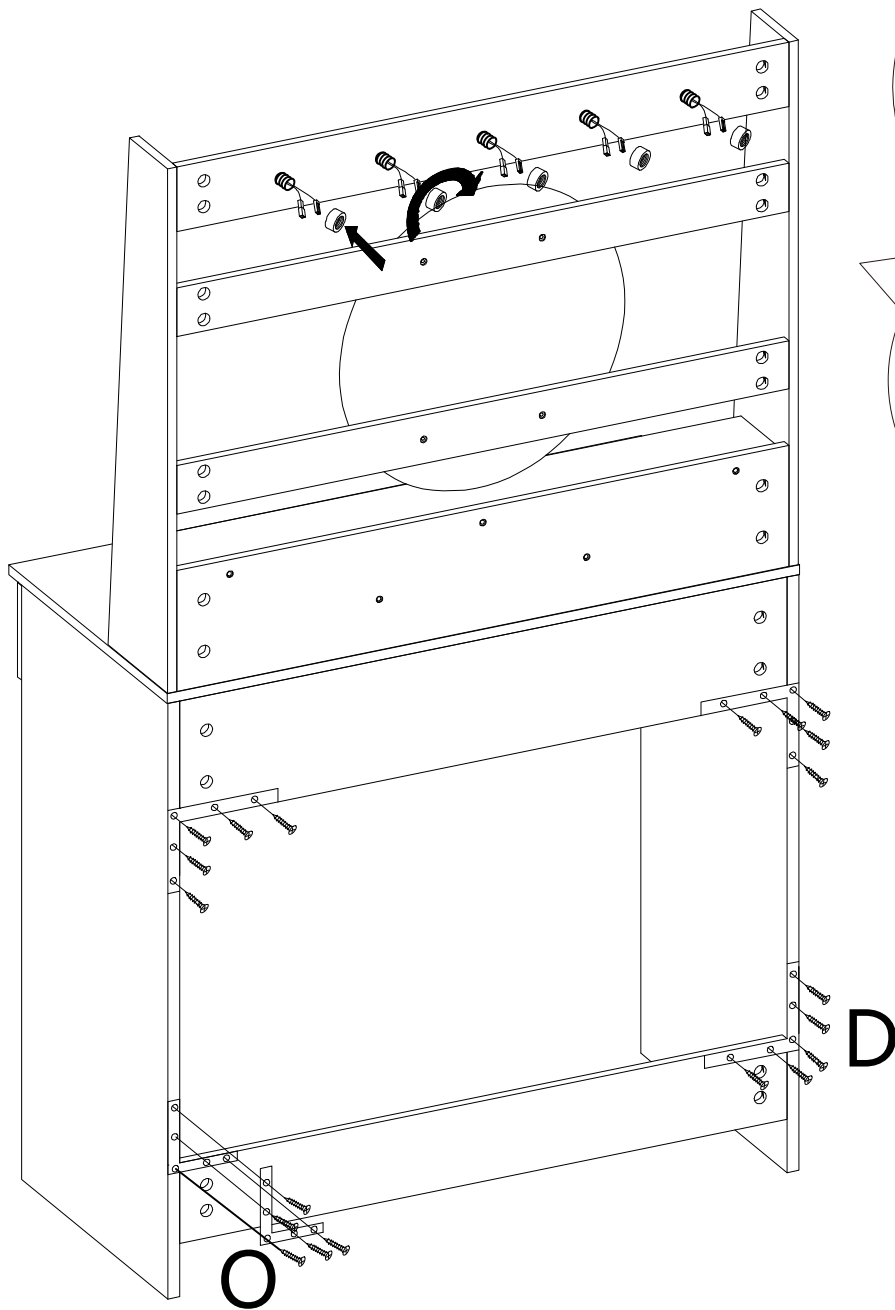

STEP 24

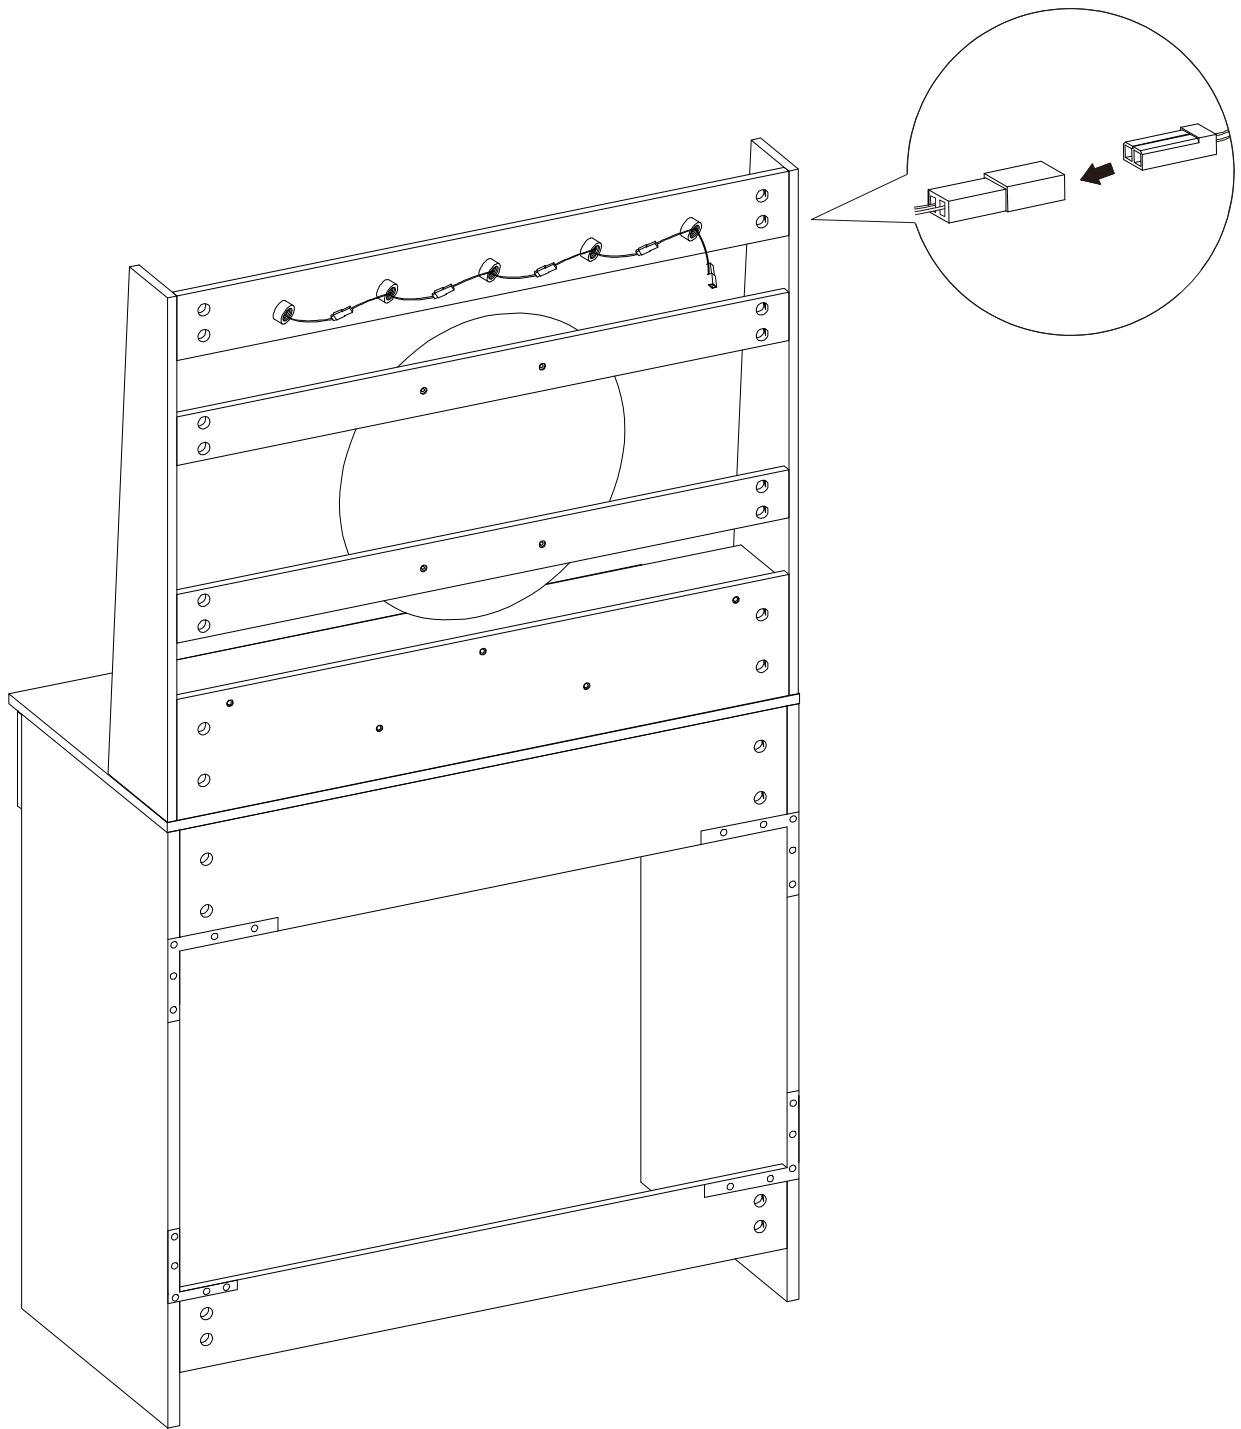

STEP 25

