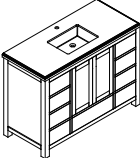








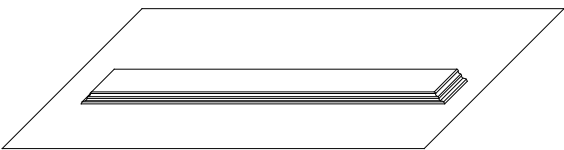
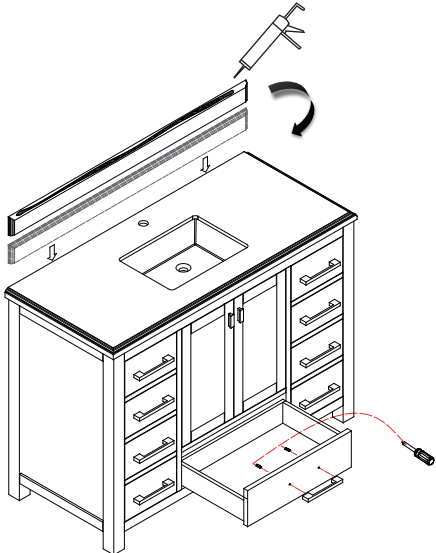
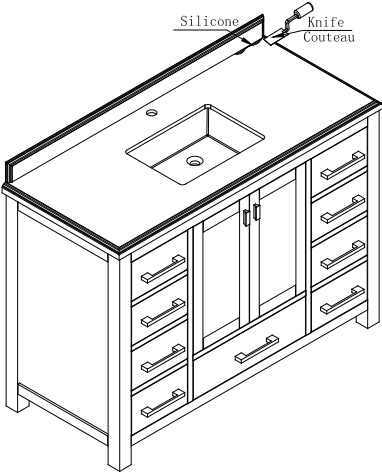
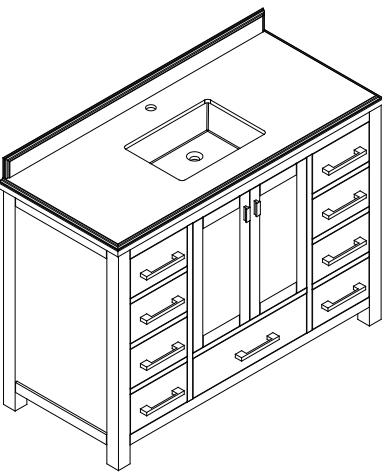



Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
 The vanity should be installed by a professional plumber.
 Drainer pipe and trap are not included.
 If you experience any difficulties with this product, do not return to the point of purchase.

Part List	A (cabinet)  x1	B (backsplash)  x1	C (screw)  x14	D (handle)  x2	D (handle)  x9
Tools required	 screwdriver(Phillips)	 silicone	 level	 tape measure	
<div data-bbox="134 875 272 925">Step 1</div> <div data-bbox="134 972 746 1167"> <p>CAUTION Handle the backsplash with extreme care! Stone backsplash are very fragile. Always handle gently and place them flat on a soft surface.</p> </div> <div data-bbox="156 1272 722 1420">  </div>					
<div data-bbox="791 875 930 925">Step 2</div> <div data-bbox="948 869 1385 1420">  </div>					
<div data-bbox="134 1514 272 1563">Step 3</div> <div data-bbox="220 1585 603 2056">  </div>					
<div data-bbox="791 1514 930 1563">Step 4</div> <div data-bbox="932 1585 1315 2056">  </div> <div data-bbox="1326 2002 1458 2092">  </div>					