


Assembly Instructions

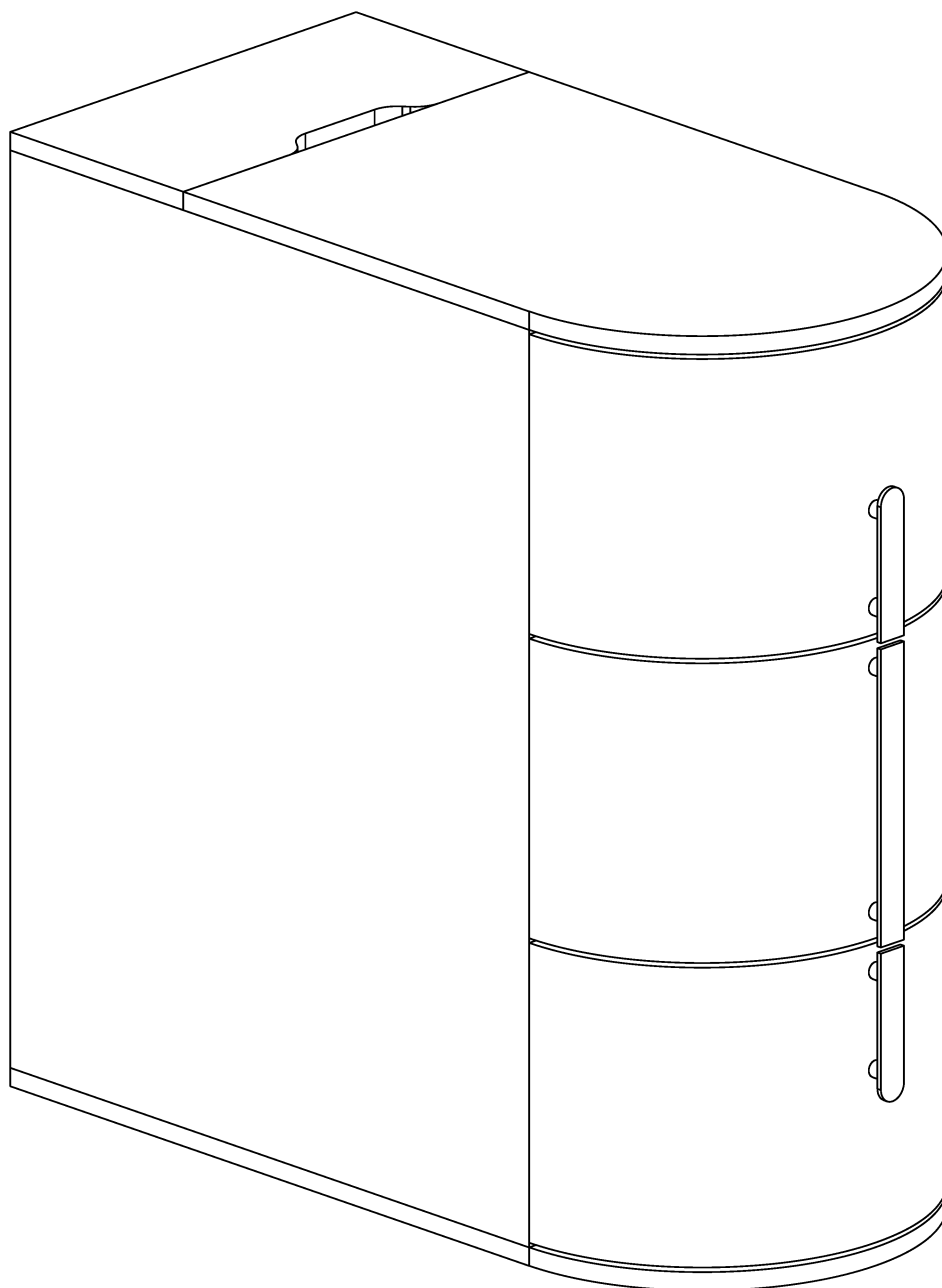


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

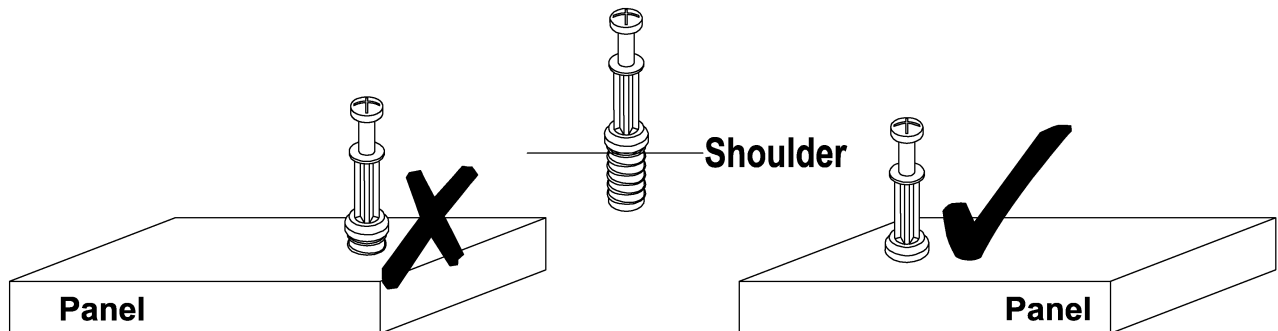

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

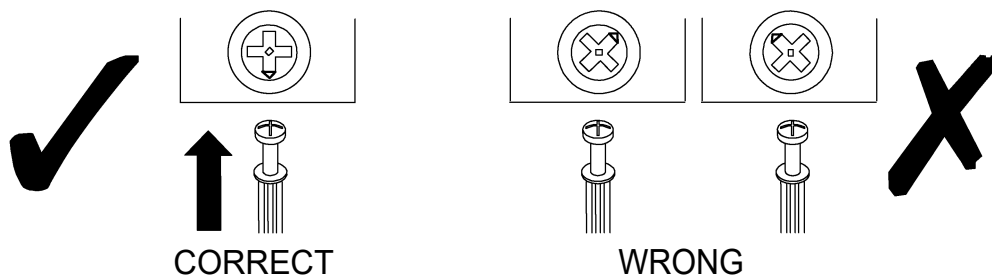

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUICKFIT












Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

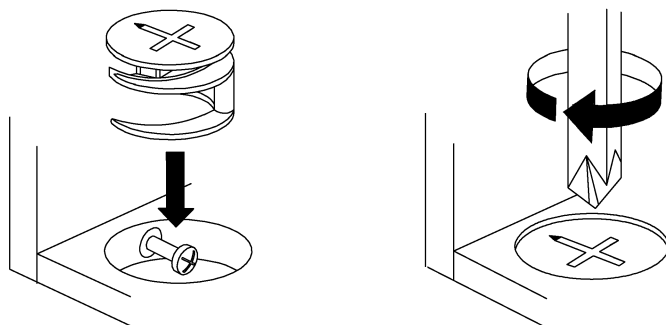


Turn cam lock clockwise to tighten.



Part List

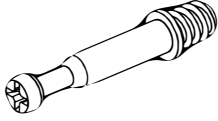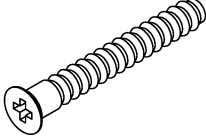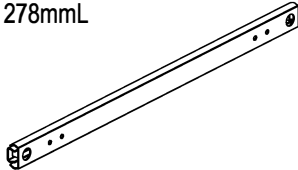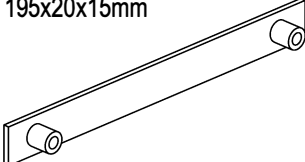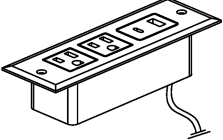No. A Quantity: 36+1 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 36+1 PCS Cam ø15x9.5mm 	No. C Quantity: 36+2 PCS Sticker ø20mm 	No. D Quantity: 28+2 PCS Dowel ø6x30mm 
No. E Quantity: 28+1 PCS Screw ø3.5x12mm 	No. F Quantity: 6+1 PCS Bolt M4x10mm 	No. G Quantity: 6+1 PCS Bolt M6x18mm 	No. H Quantity: 12+1 PCS Screw ø4x30mm 
No. I Quantity: 9+1 PCS Screw ø5x38mm 	No. J Quantity: 1 PCS Hex Key 4mm 	No. K Quantity: 6 PCS Slide Rail 278mmL 	No. L Quantity: 5+1 PCS Foot Pad 35x35mm 
No. M Quantity: 2 PCS Handle 99x20x15mm 	No. N Quantity: 1 PCS Handle 195x20x15mm 	No. O Quantity: 2 PCS Hinge 	No. P Quantity: 1 PCS Socket 2AC+1USB+1TPC 
No. Q Quantity: 2 PCS transparent mat ø10x2mm 			


Product structure

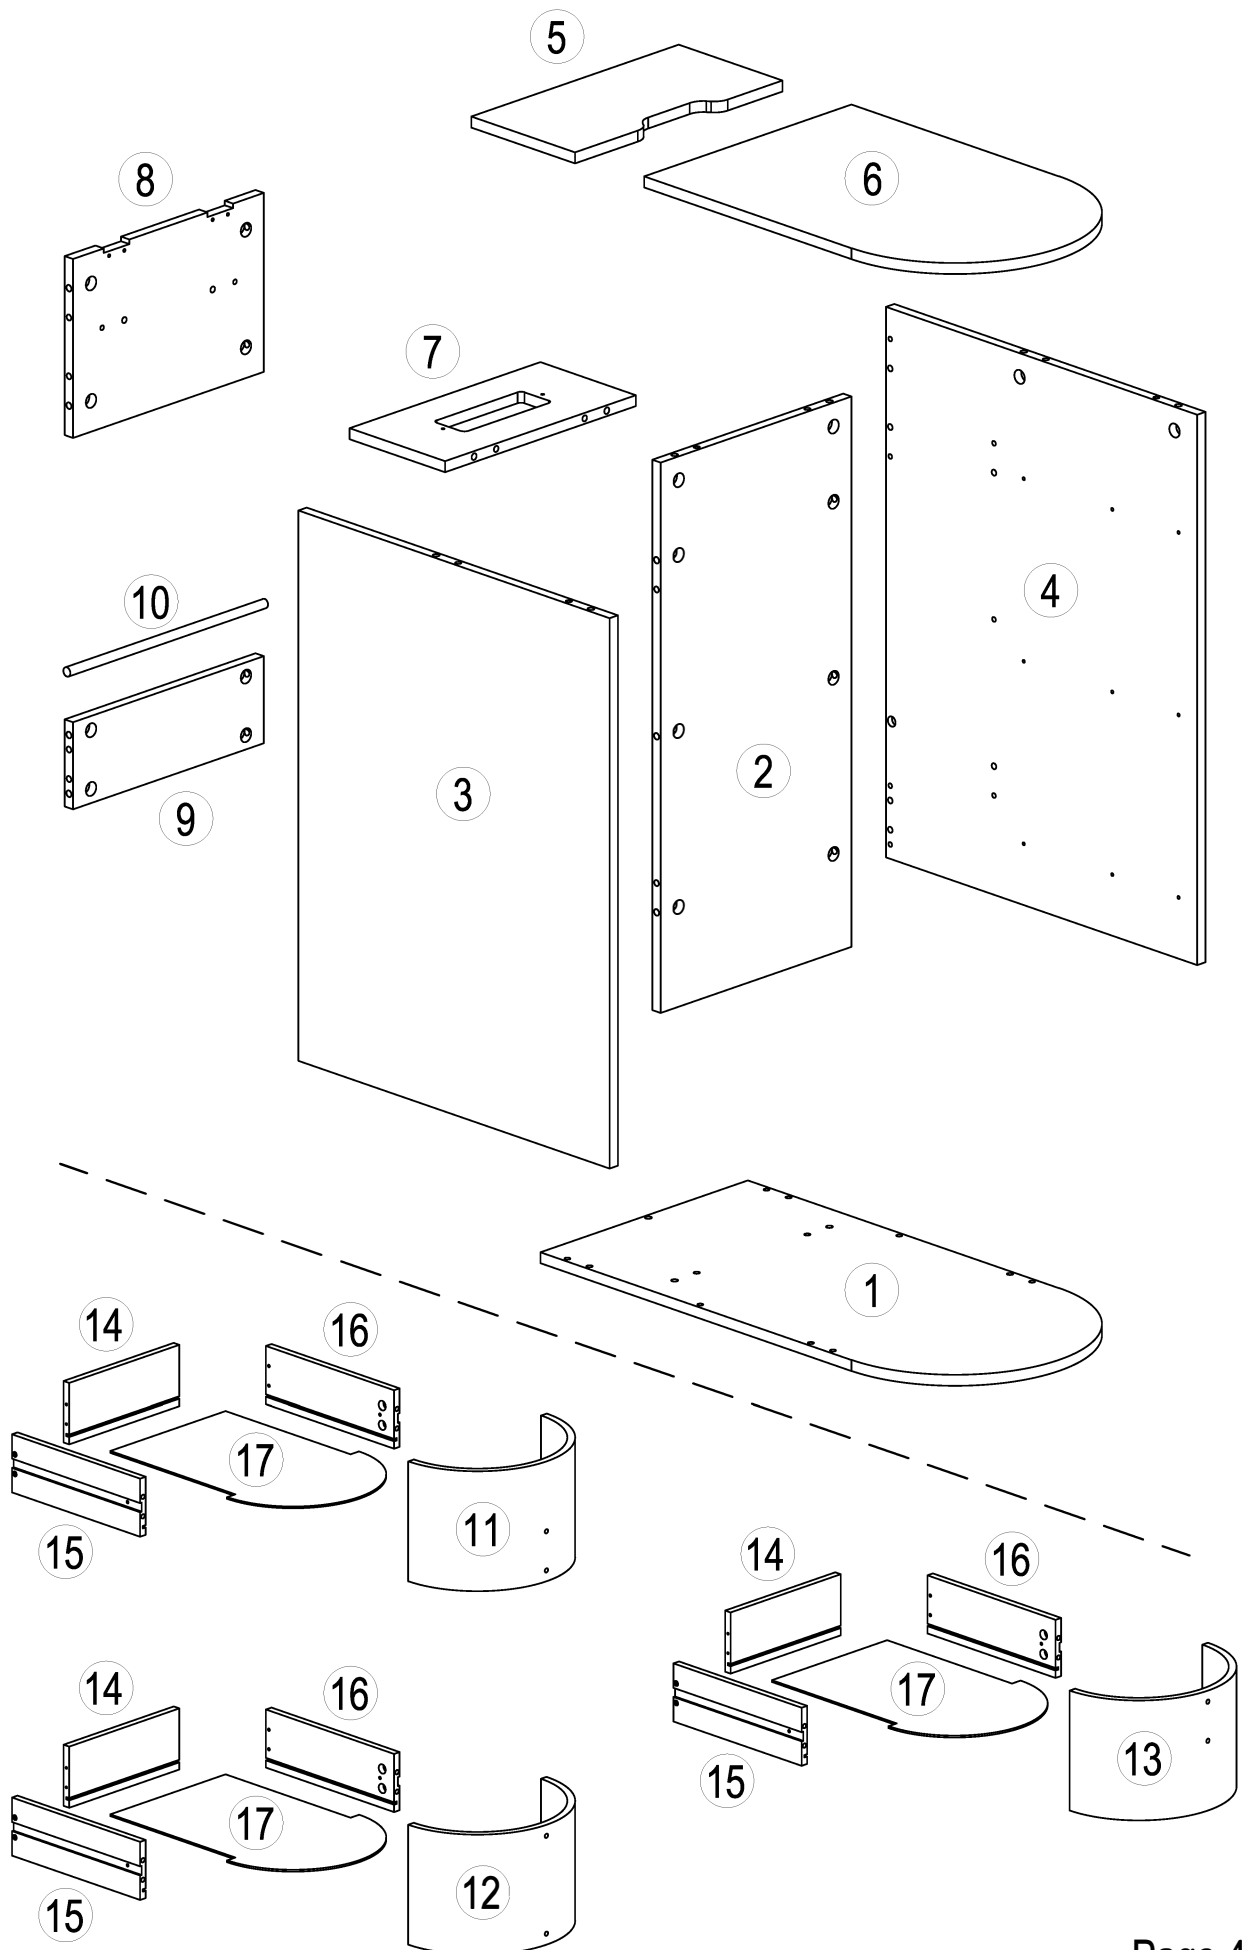

STEP 1

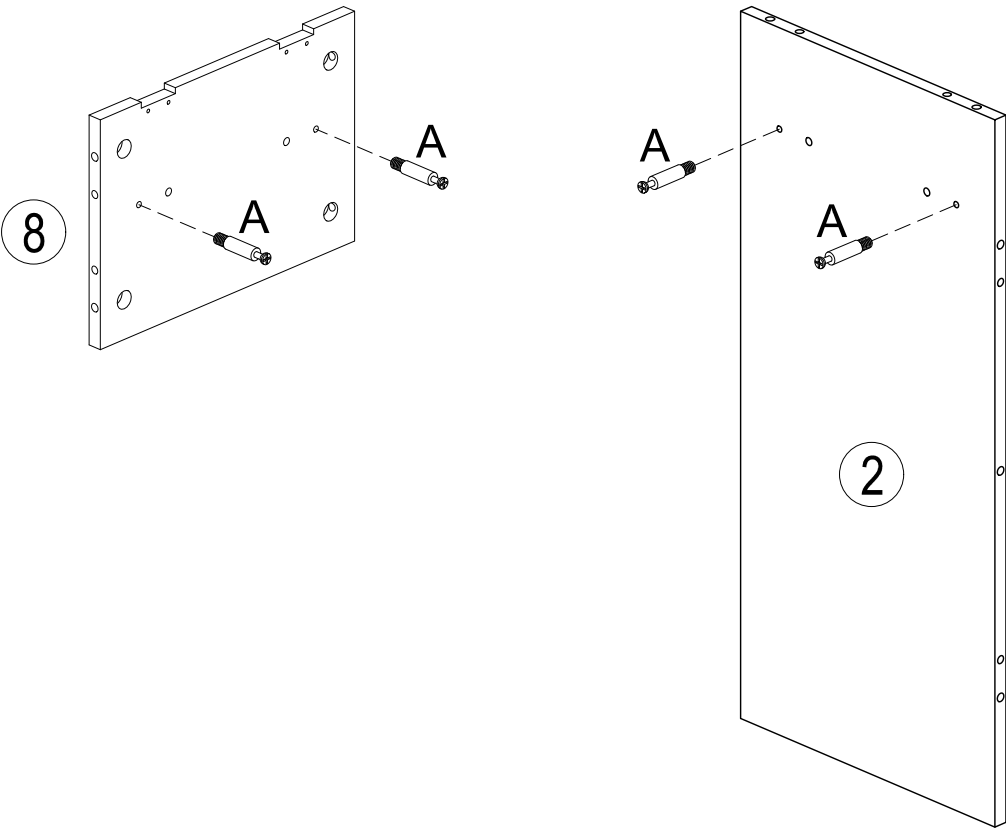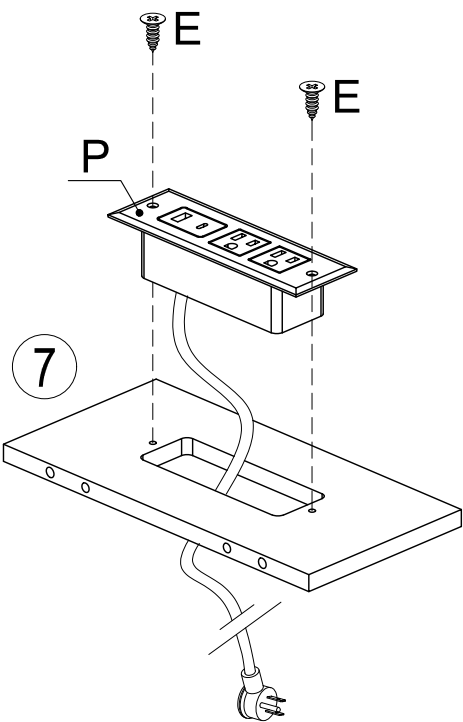


No. A
Quantity: 4 PCS
Cam Bolt
ø6x33.5mm




No. E
Quantity: 2 PCS
Screw
ø3.5x12mm




No. P
Quantity: 1 PCS
Socket
2AC+1USB+1TPC

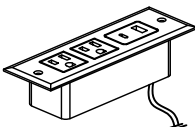

STEP 2

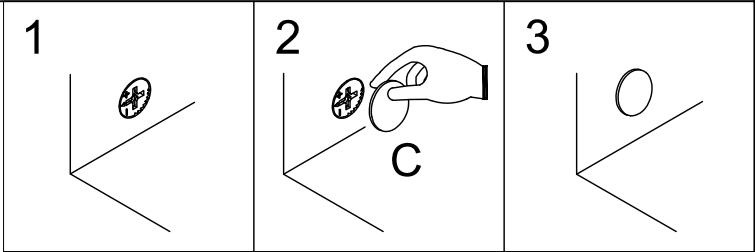

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

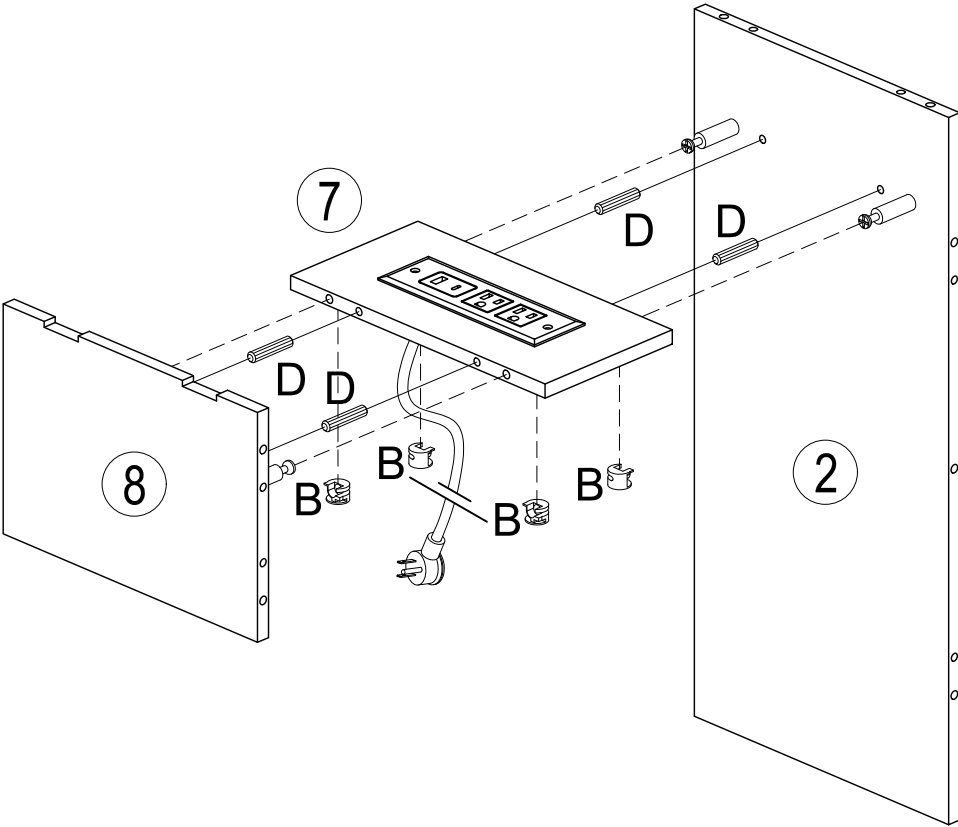

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C

Quantity: 4 PCS
Sticker
ø20mm




No. D

Quantity: 4 PCS
Dowel
ø6x30mm




STEP 3

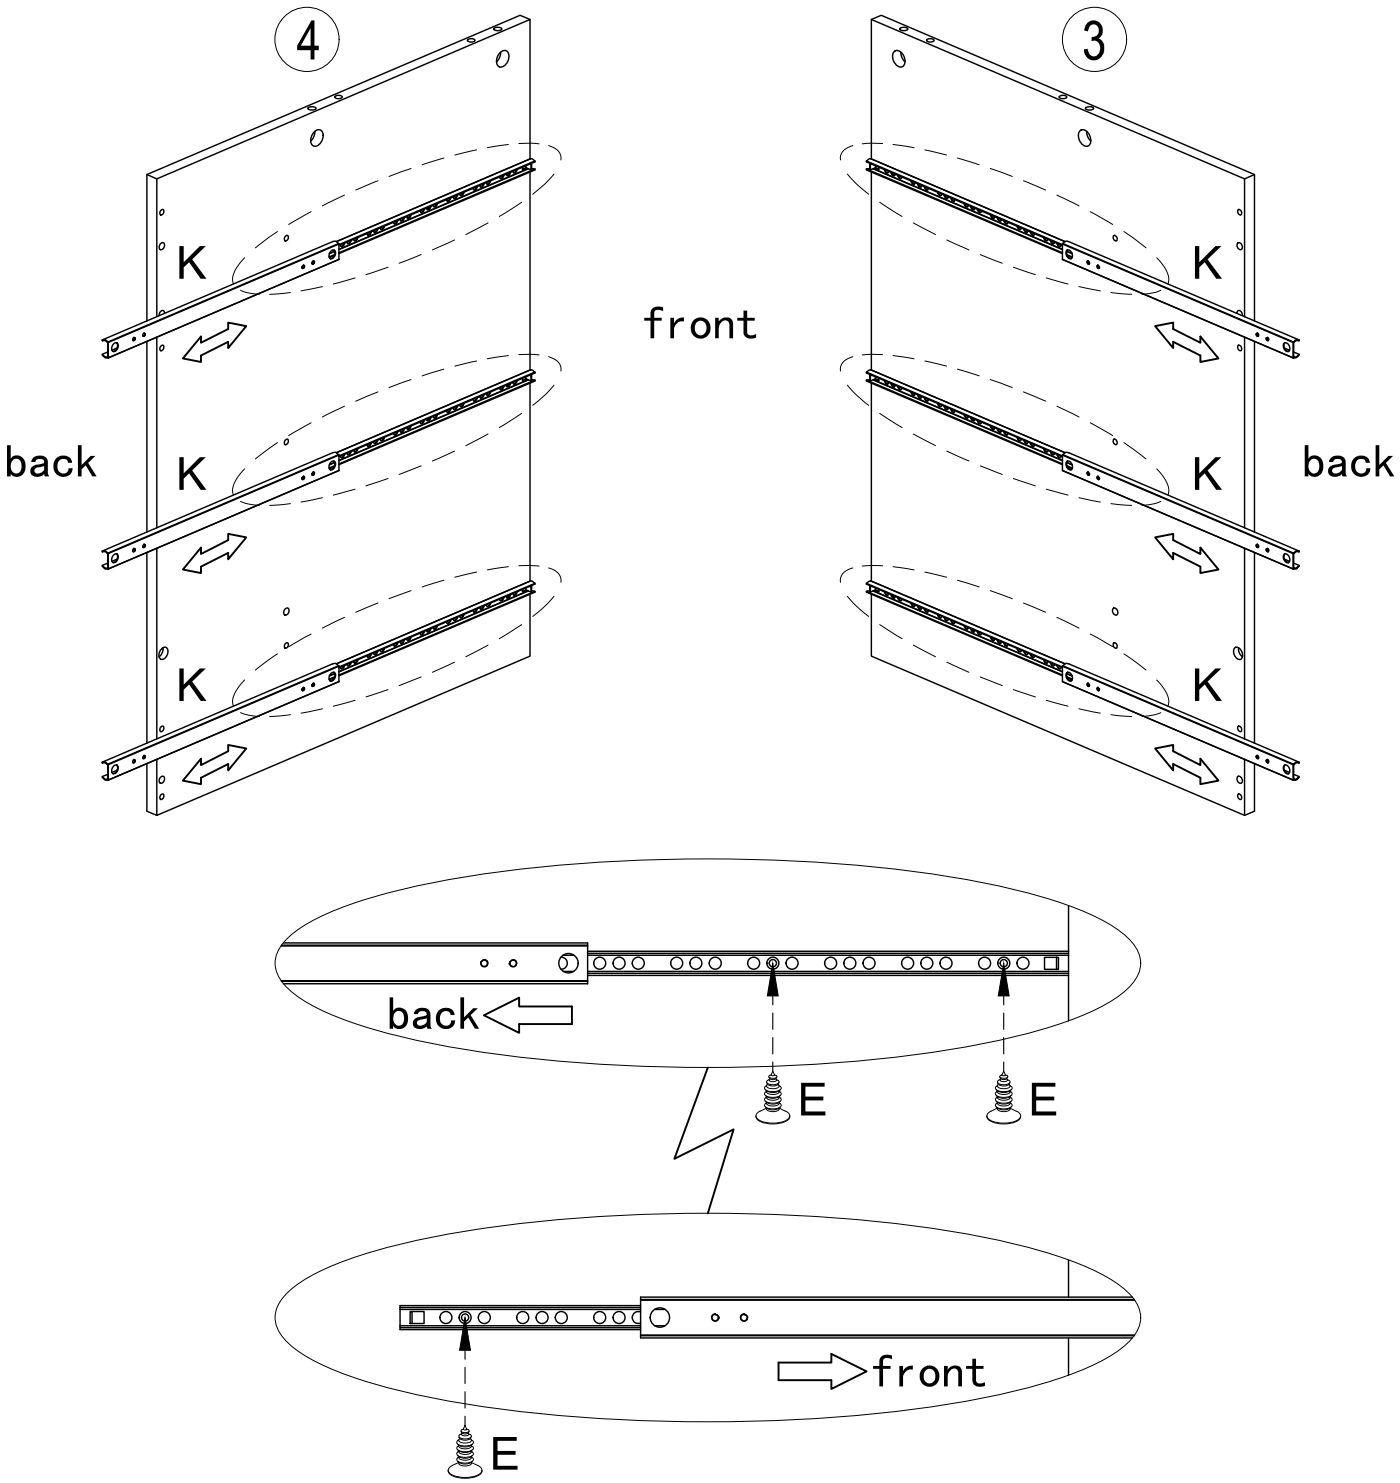



No. E
Quantity: 18 PCS
Screw
ø3.5x12mm




No. K
Quantity: 6 PCS
Slide Rail
278mmL

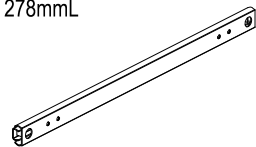


STEP 4

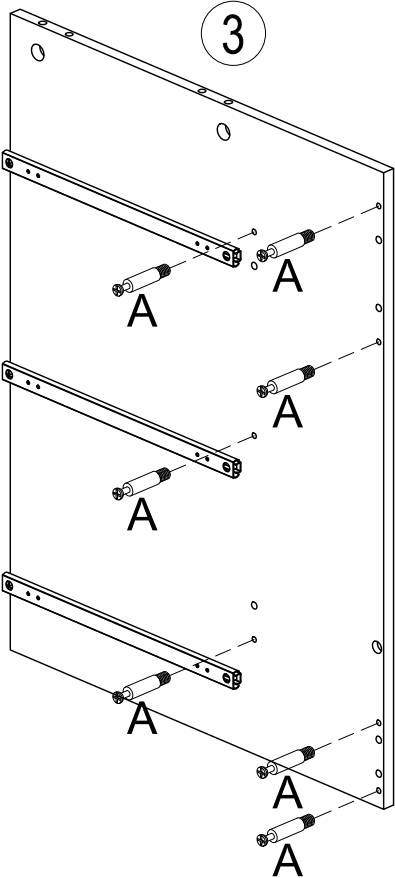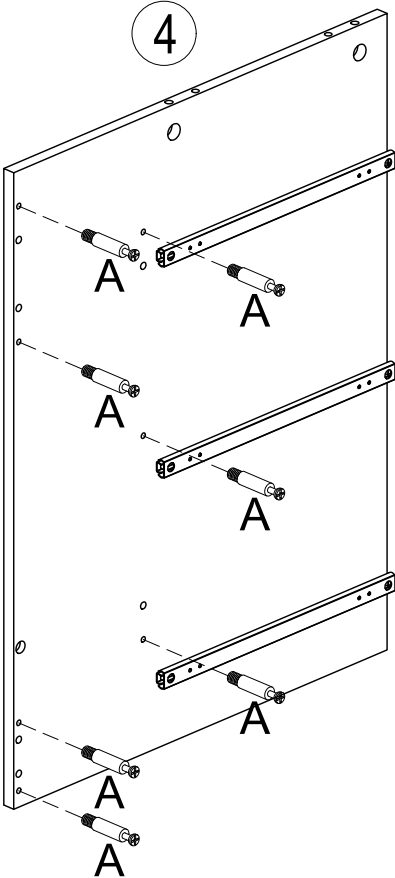


No. A
Quantity: 14 PCS
Cam Bolt
ø6x33.5mm



STEP 5

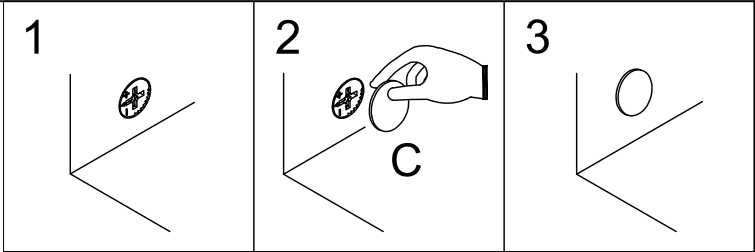

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

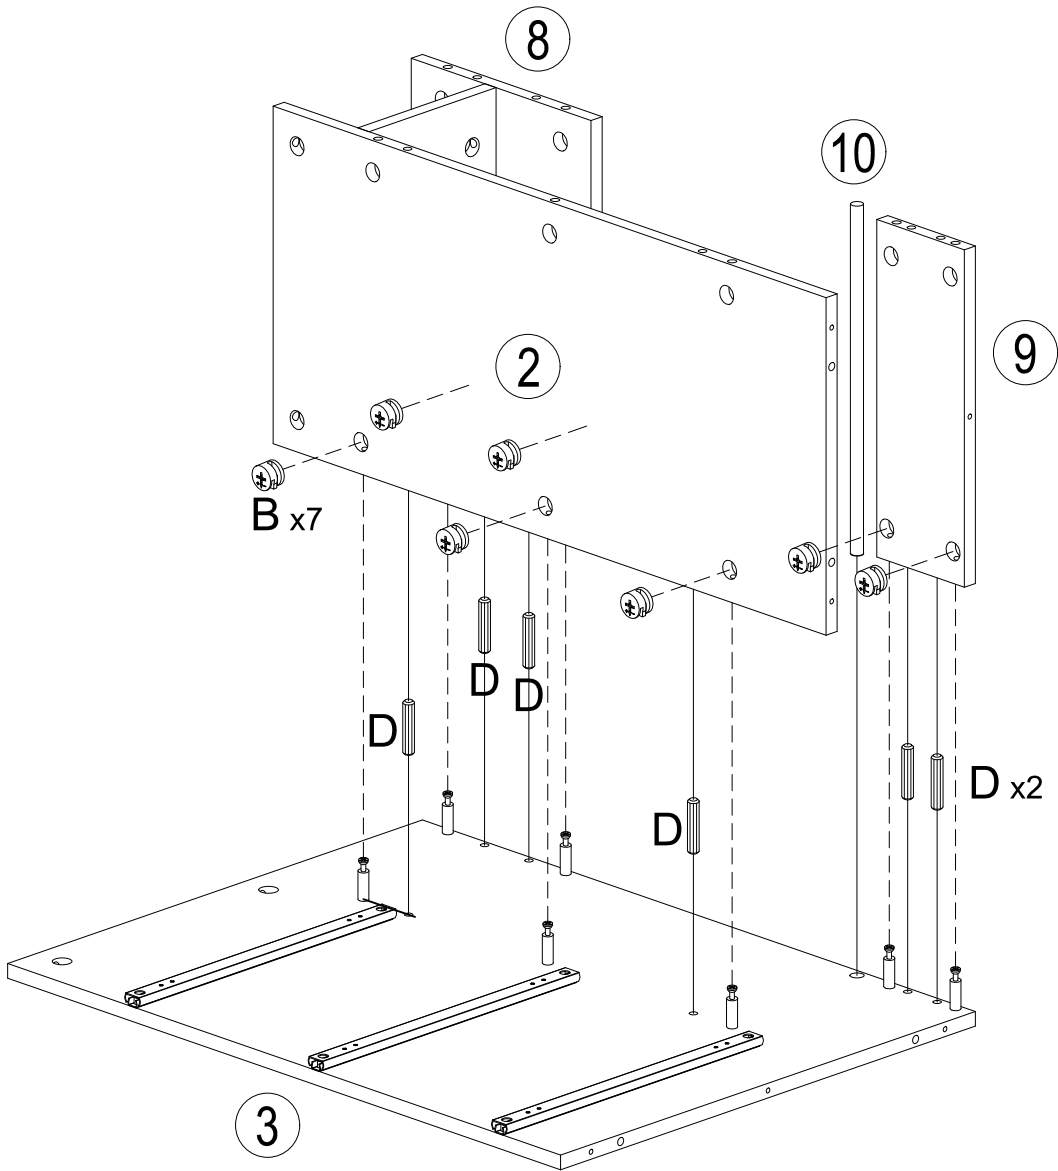


No. B
Quantity: 7 PCS
Cam
ø15x9.5mm




No. C
Quantity: 7 PCS
Sticker
ø20mm




No. D
Quantity: 6 PCS
Dowel
ø6x30mm



STEP 6

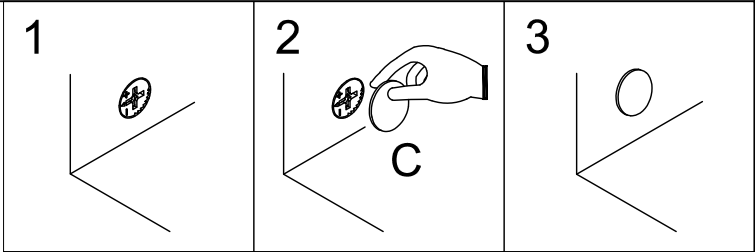

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

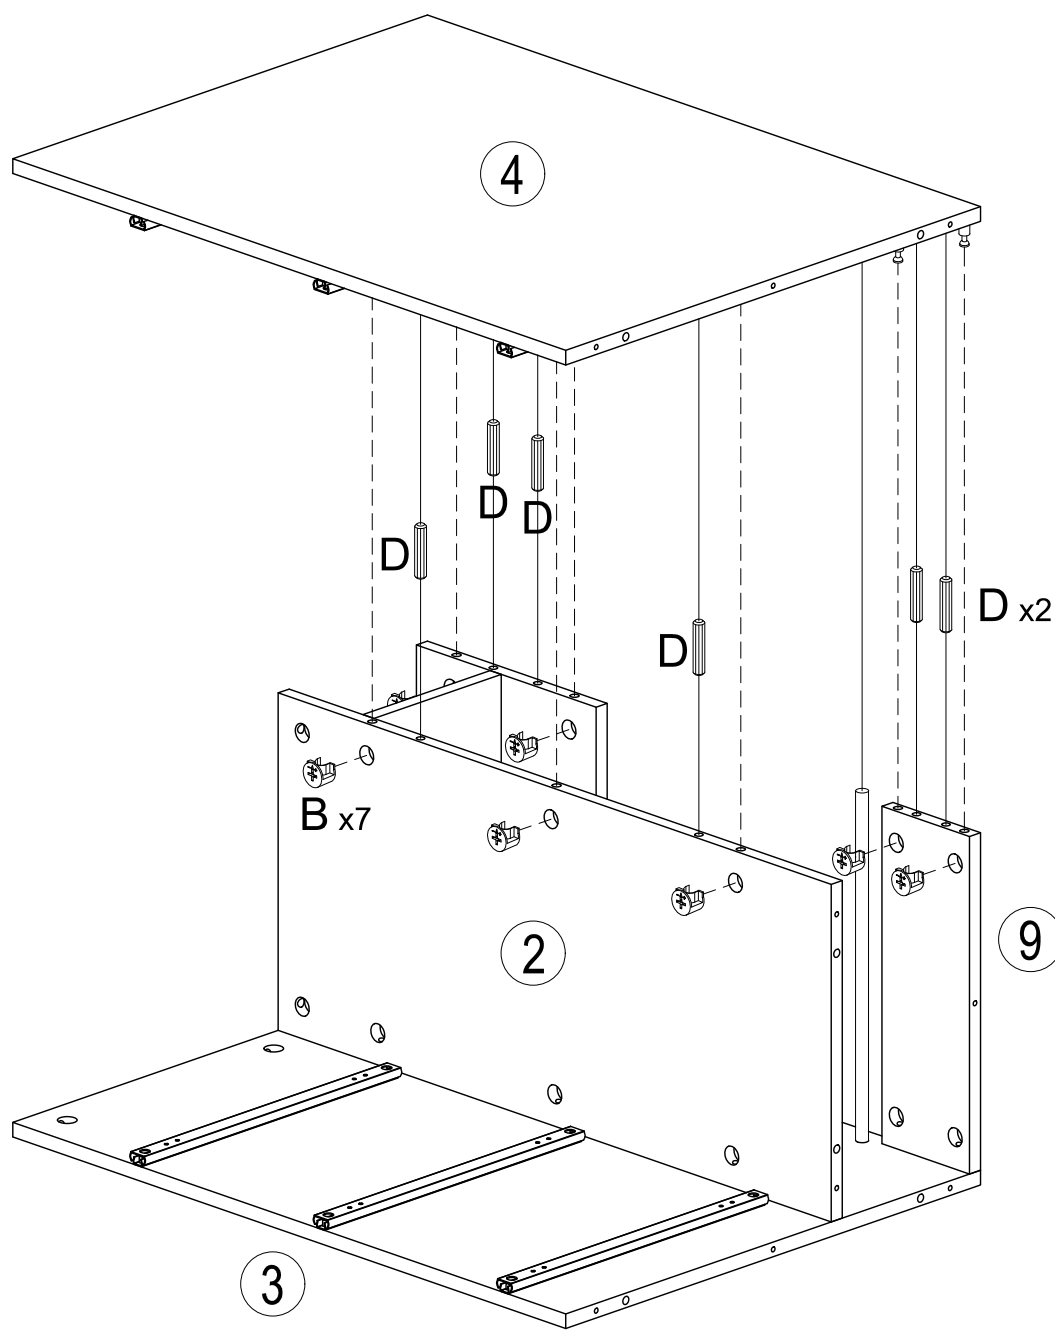

No. B

Quantity: 7 PCS
Cam
ø15x9.5mm




No. C

Quantity: 7 PCS
Sticker
ø20mm




No. D


Quantity: 6 PCS
Dowel
ø6x30mm




STEP 7

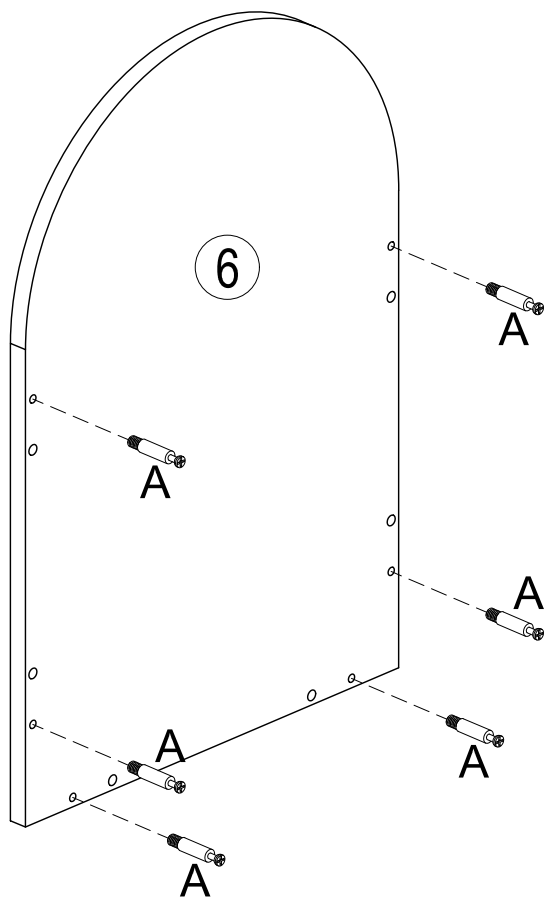


No. A
Quantity: 6 PCS
Cam Bolt
ø6x33.5mm



STEP 8

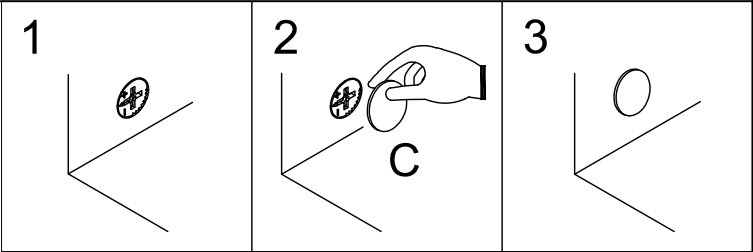

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

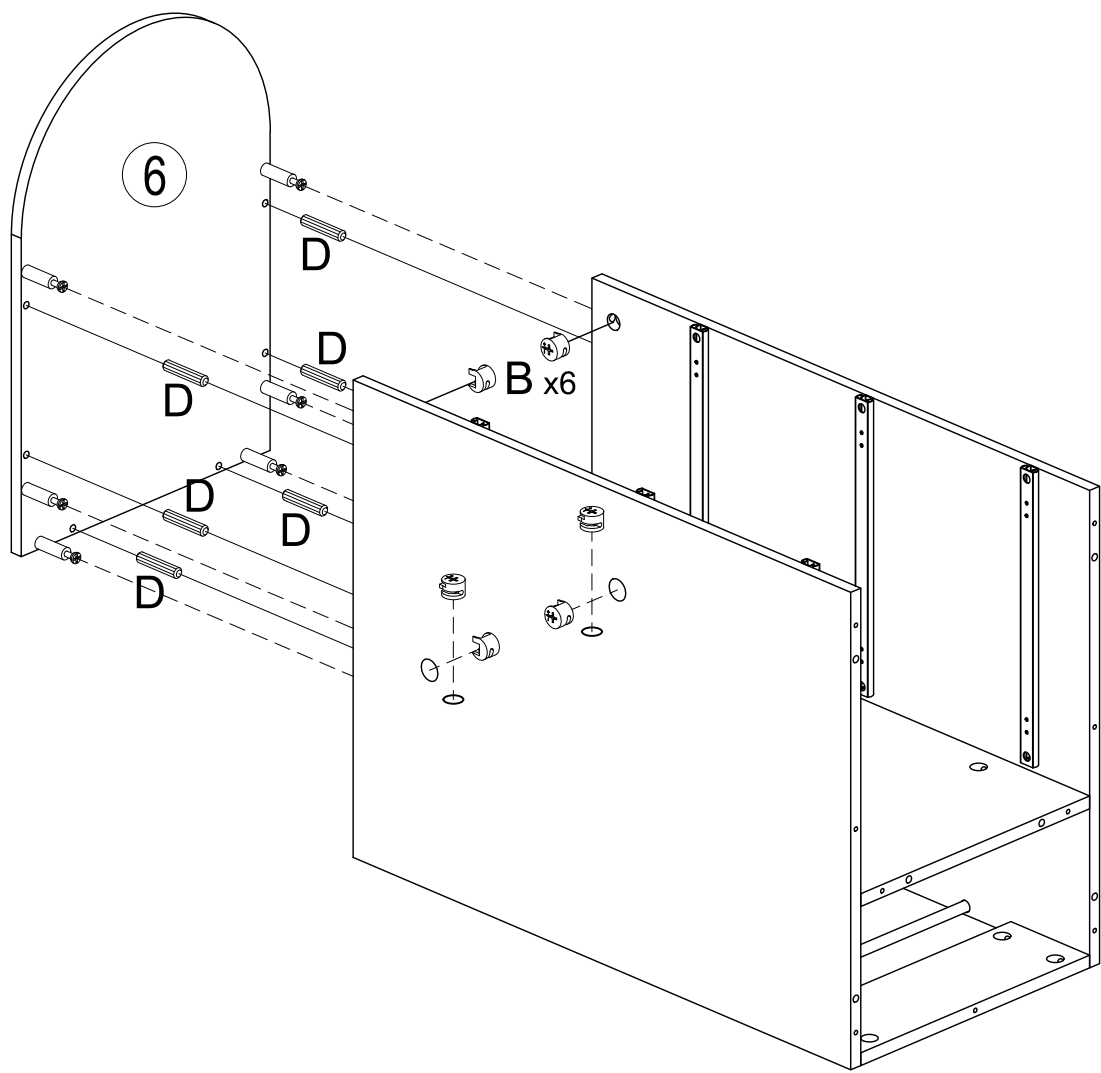

No. B

Quantity: 6 PCS
Cam
ø15x9.5mm




No. C

Quantity: 6 PCS
Sticker
ø20mm




No. D

Quantity: 6 PCS
Dowel
ø6x30mm




STEP 9

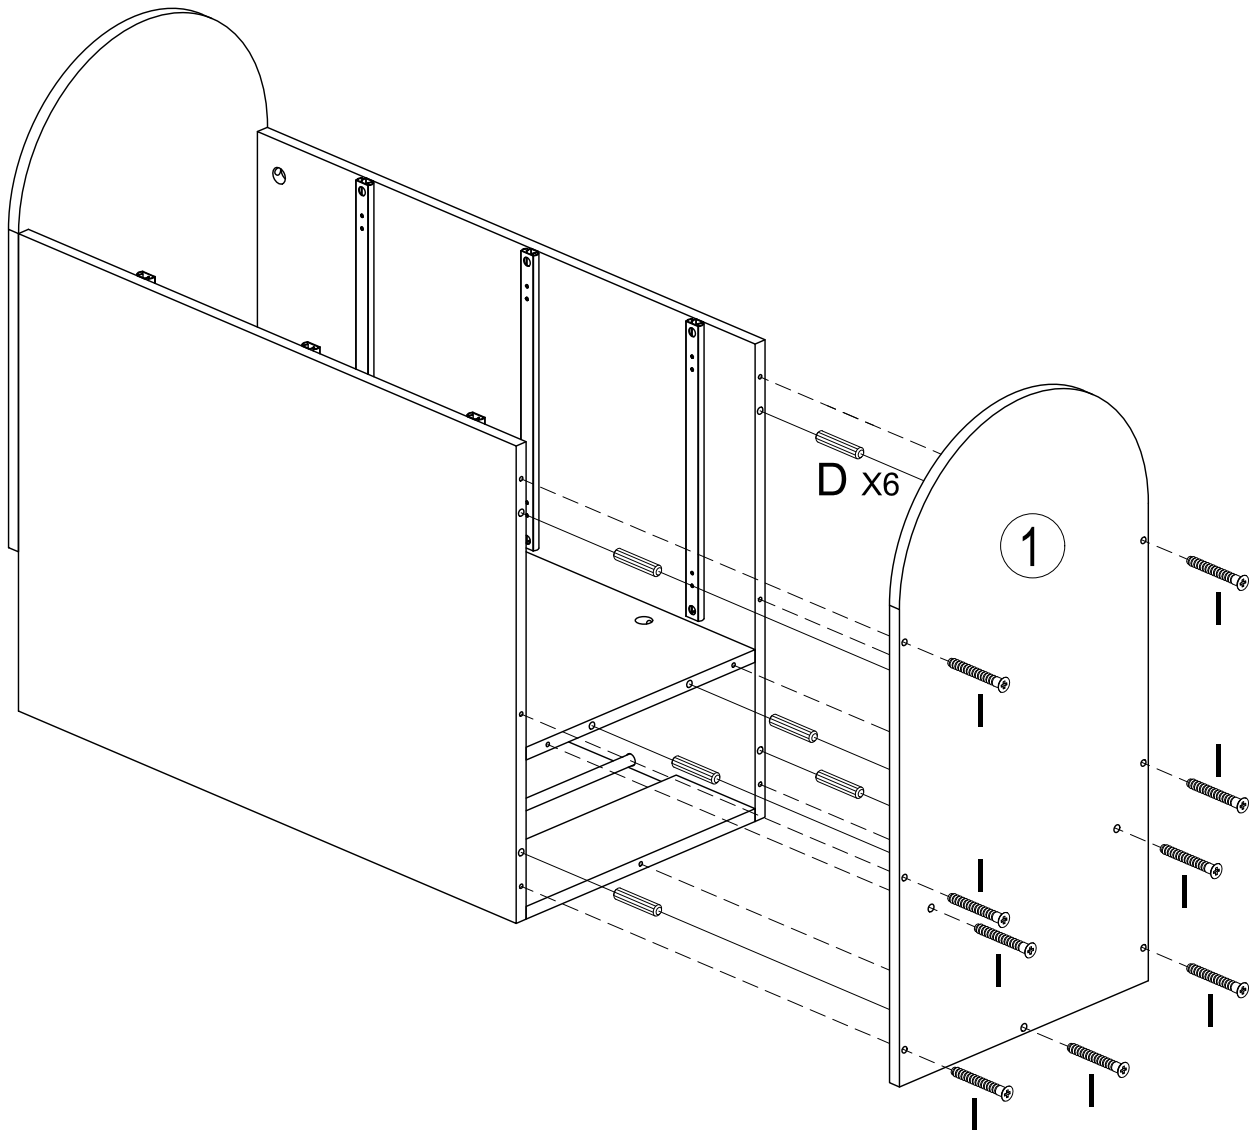


No. D

Quantity: 6 PCS
Dowel
ø6x30mm




No. I


Quantity: 9 PCS
Screw
ø5x38mm




STEP 10

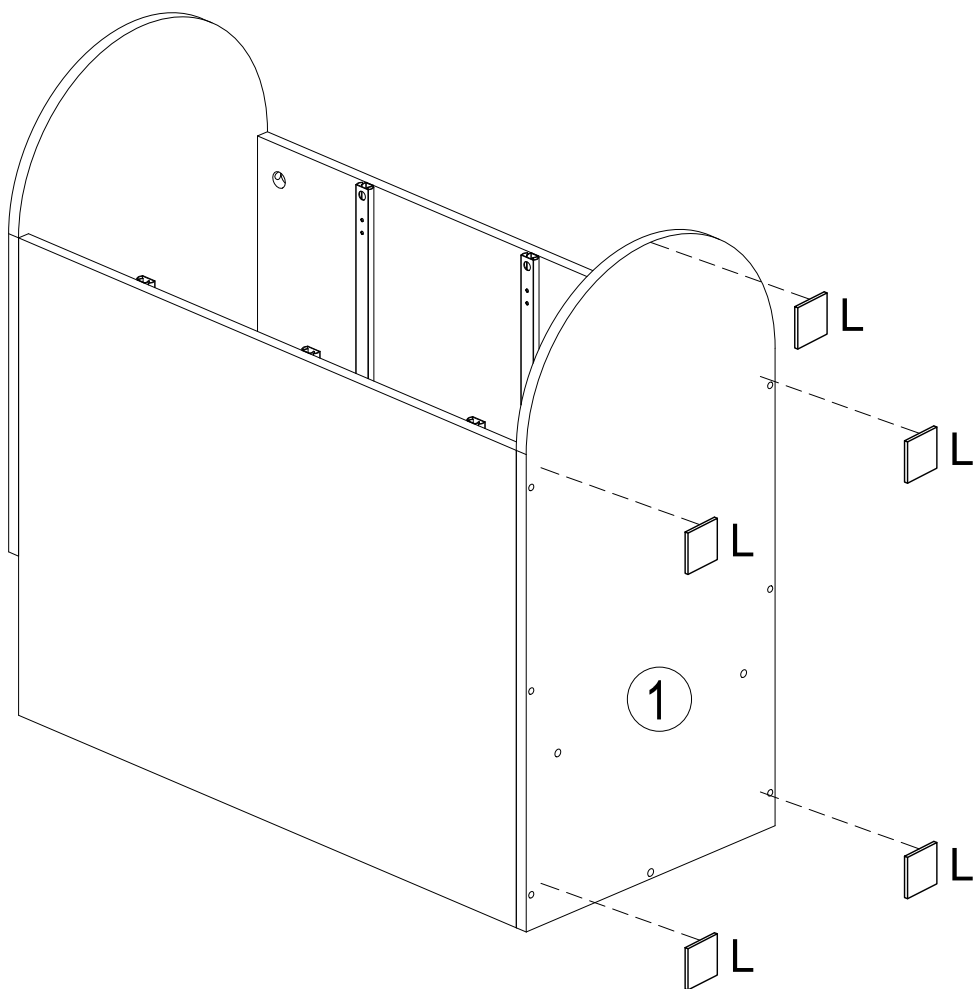

No. L
Quantity: 5 PCS
foot pad
35*35*3mm




STEP 11

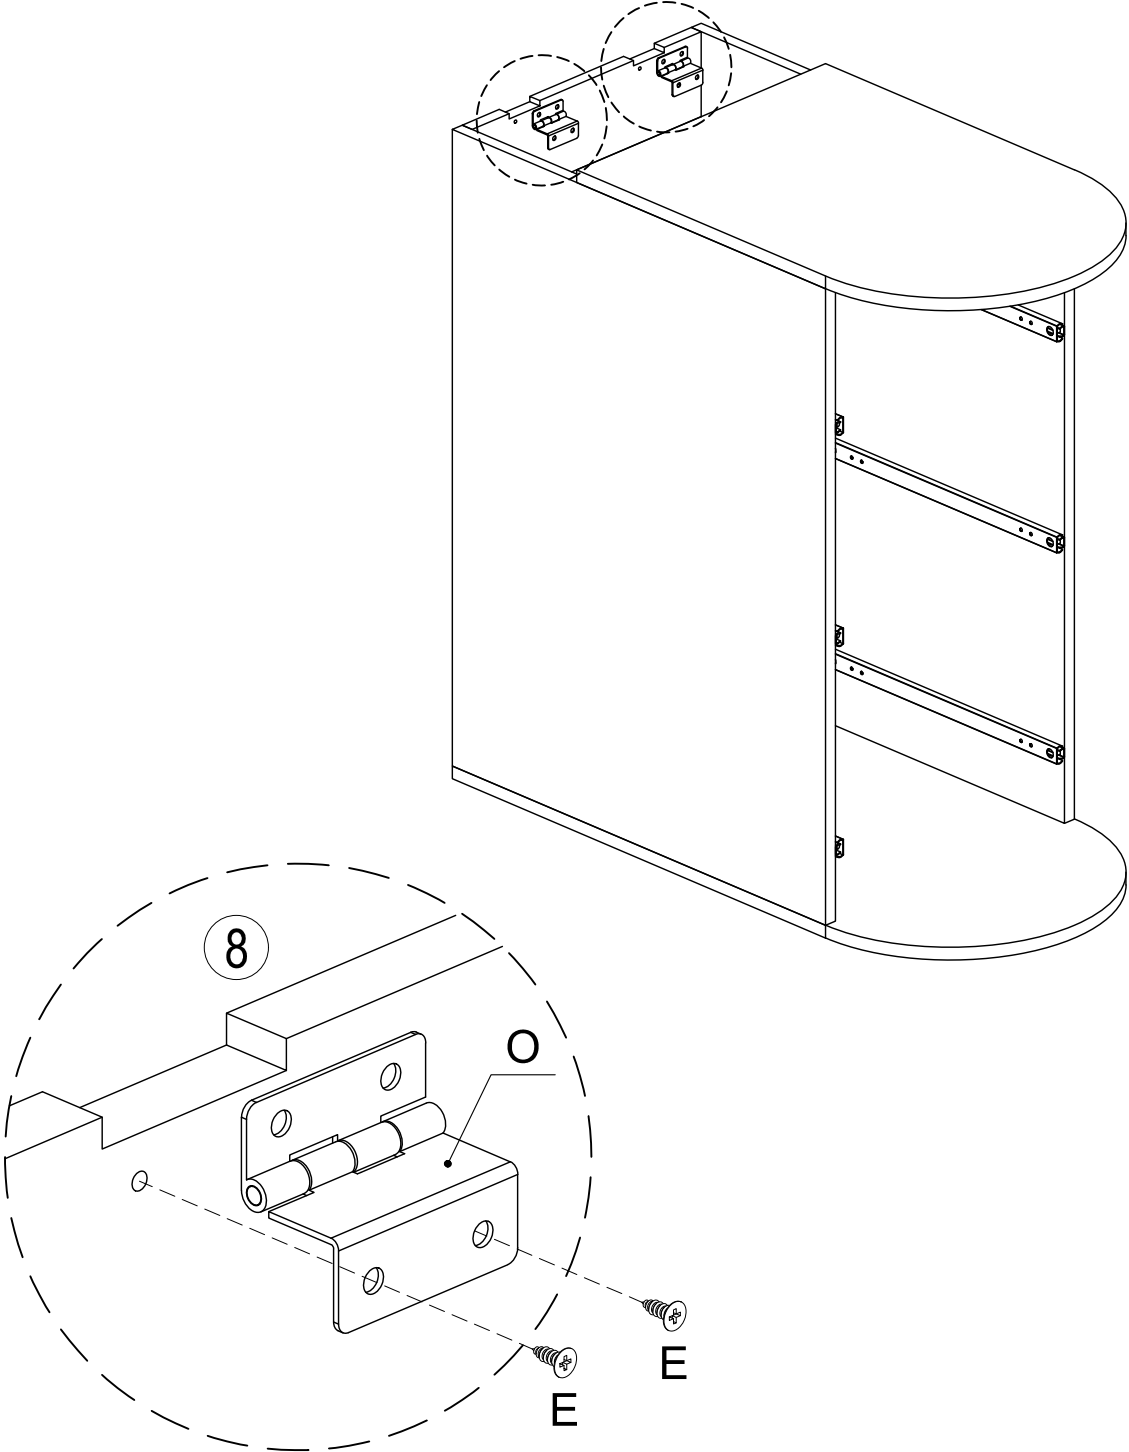


No. E
Quantity: 4 PCS
Screw
ø3.5x12mm



No. O
Quantity: 2 PCS
Hinge






STEP 12

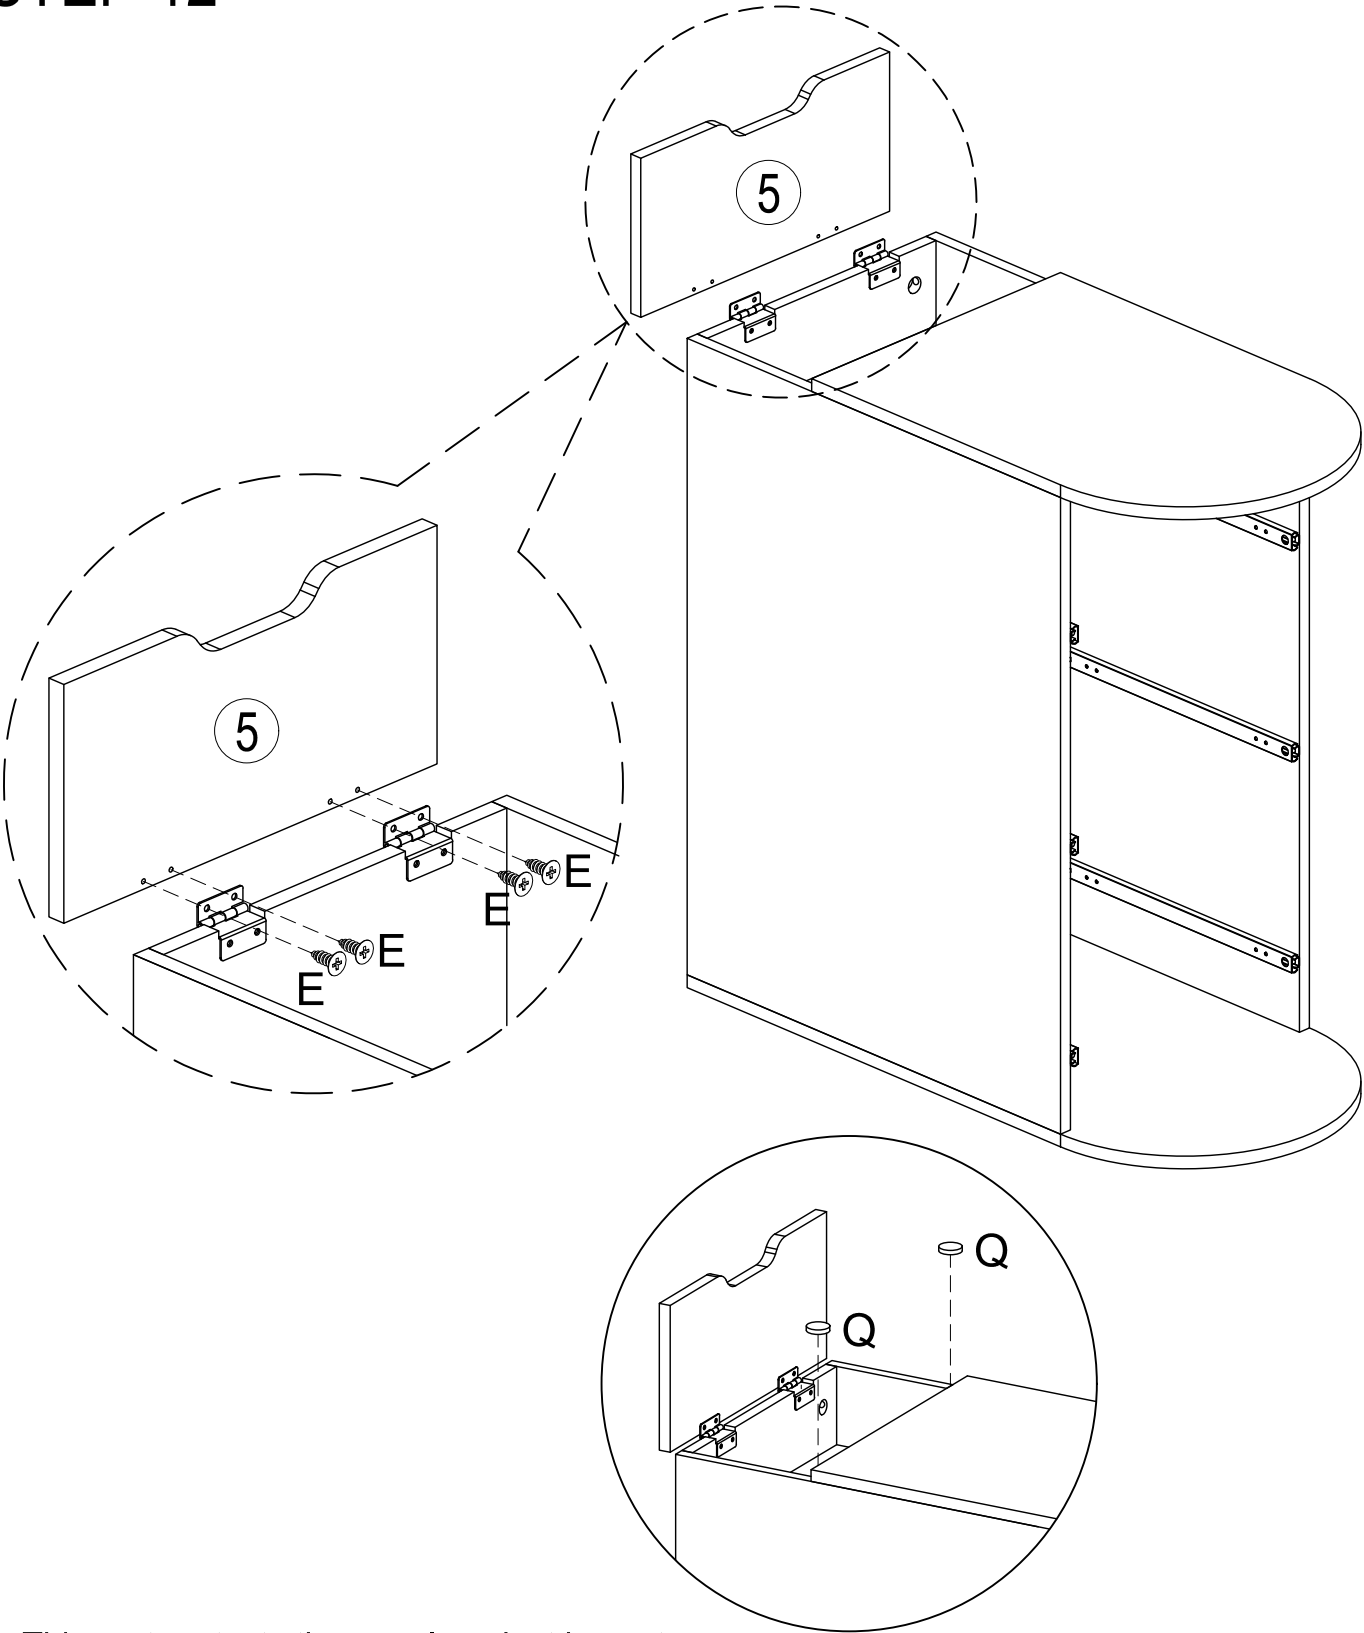


This part protects the panel against impact.
Please note that installation may cause the surface to become slightly uneven or bulged.
You may skip this step if this protection is not required.

No. E Quantity: 4 PCS Screw ø3.5x12mm 	No. Q Quantity: 2 PCS transparent mat ø10x2mm 
---	---


STEP 13

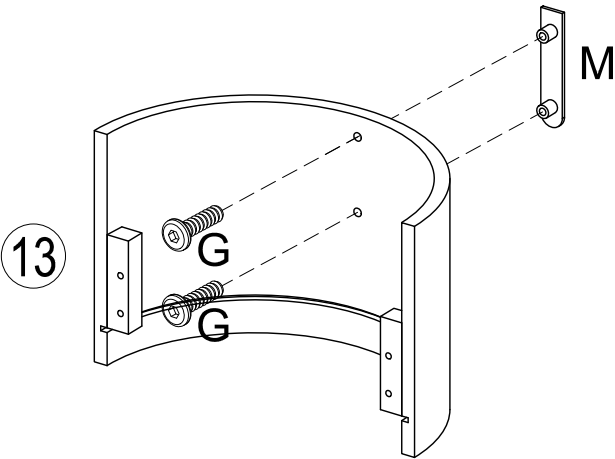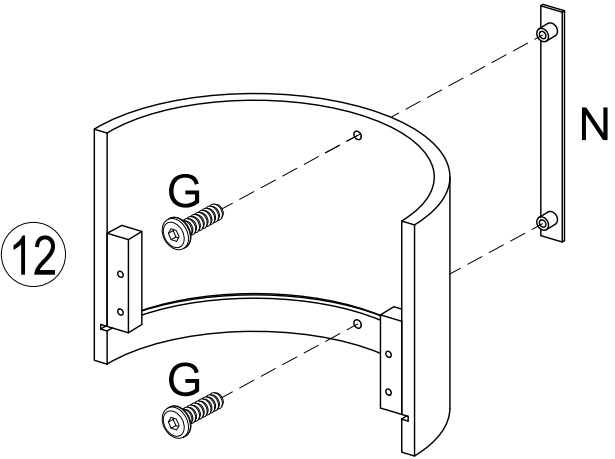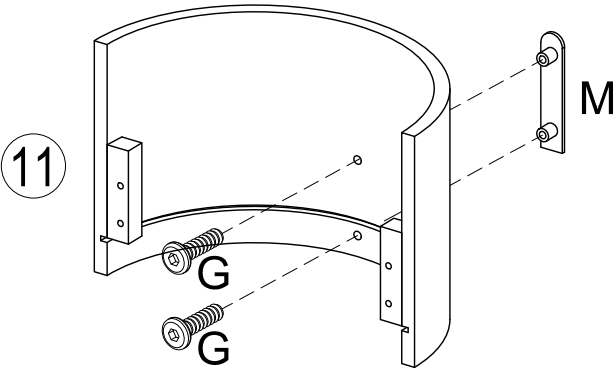


No. G
Quantity: 6 PCS
Bolt
M6x18mm




No. M
Quantity: 2 PCS
Handle
99x20x15mm




No. N
Quantity: 1 PCS
Handle
195x20x15mm

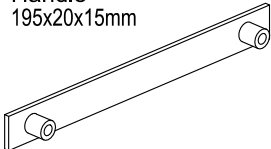


STEP 14

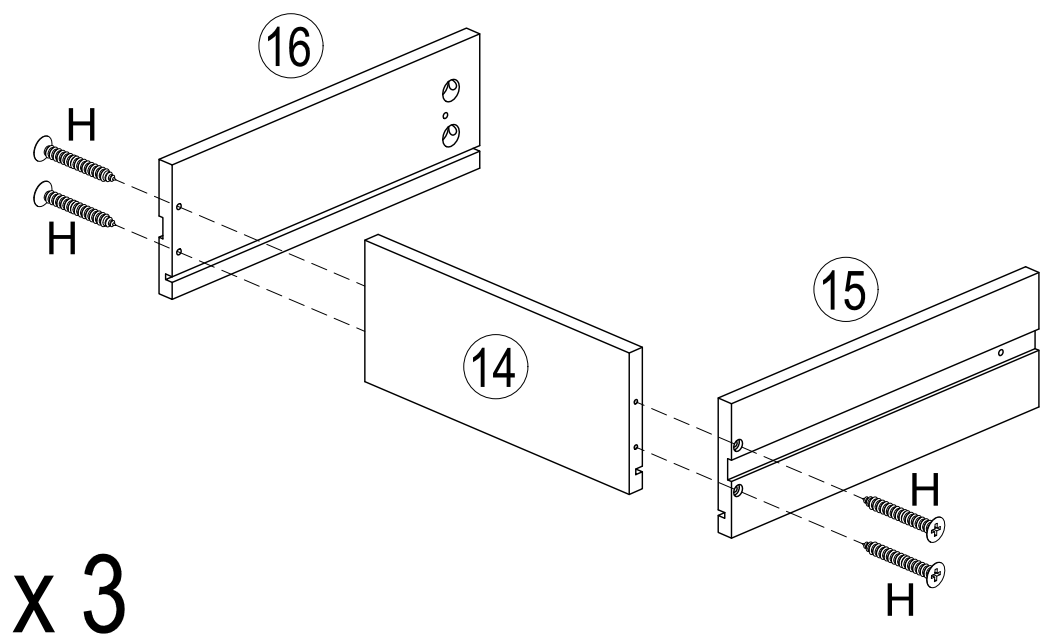




x 3

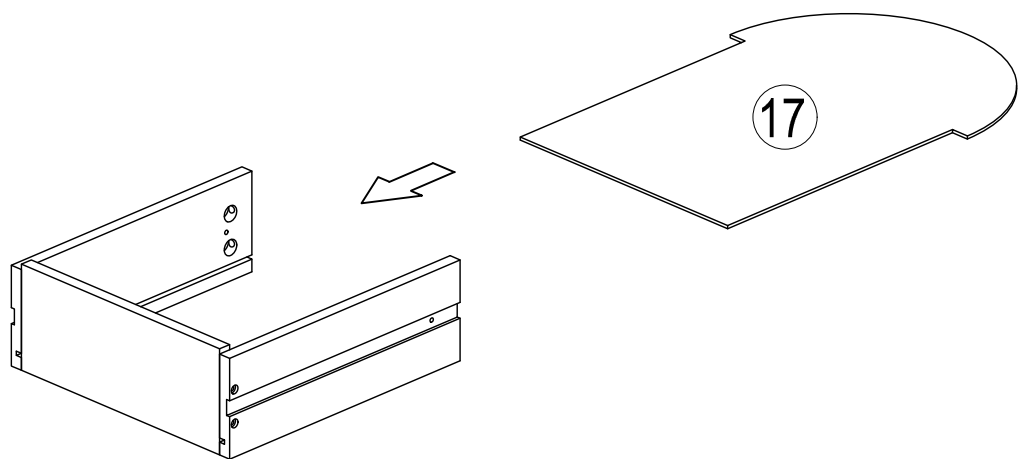


No. H
Quantity: 12 PCS
Screw
ø4x30mm




STEP 15

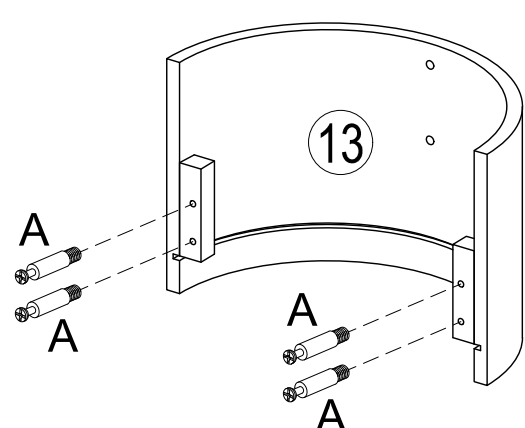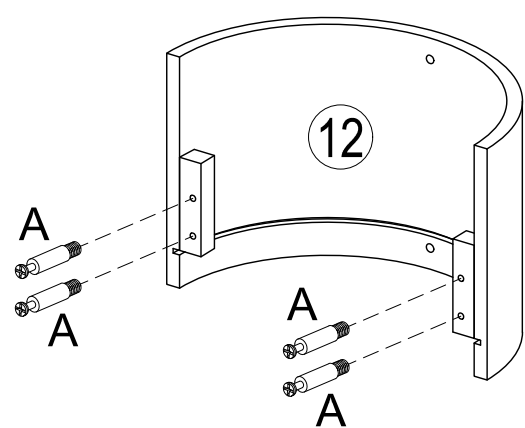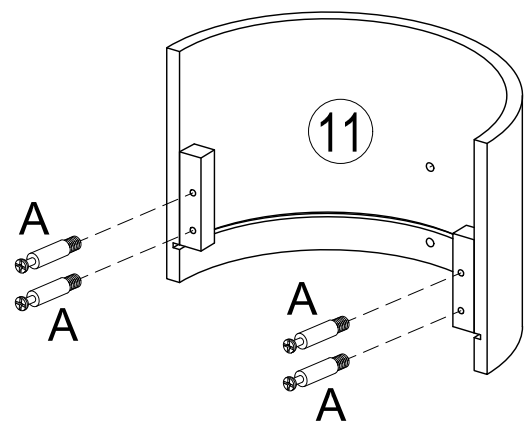


No. A
Quantity: 12 PCS
Cam Bolt
ø6x33.5mm



STEP 16

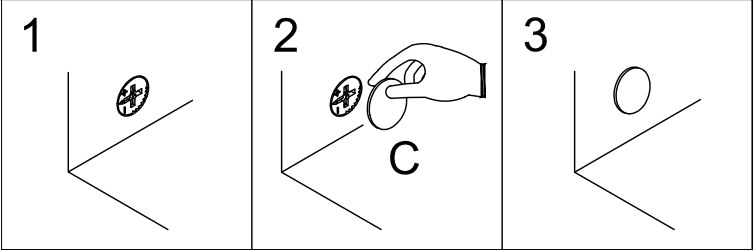

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

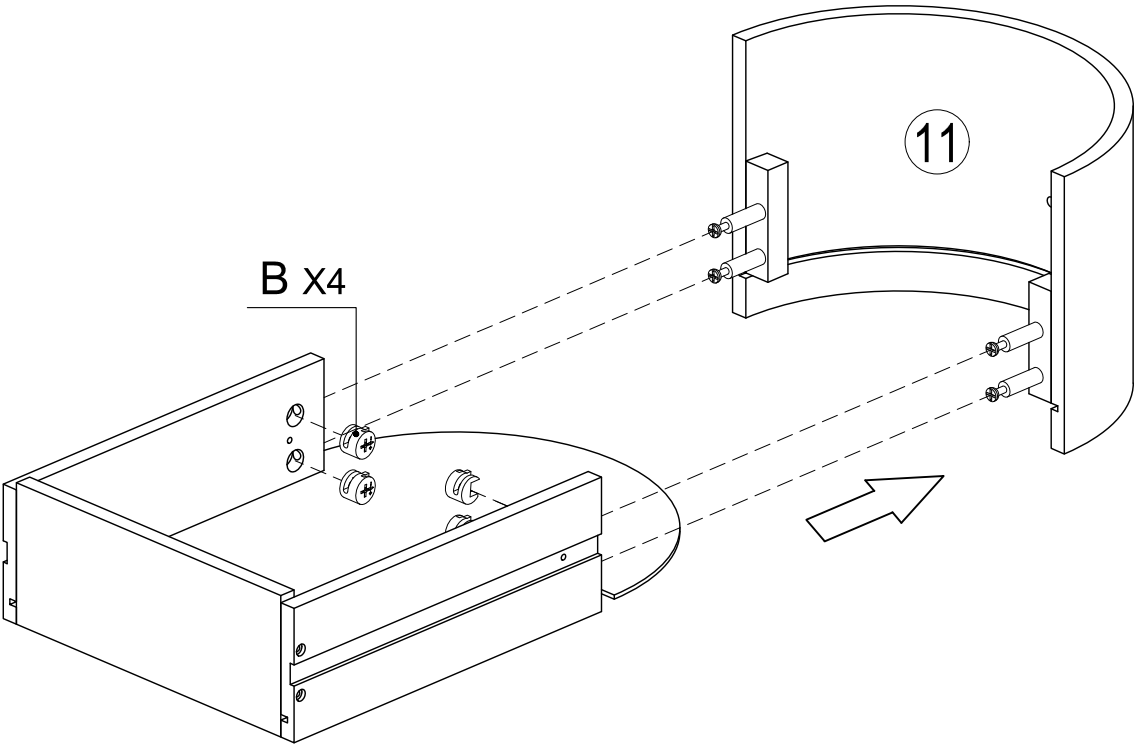


No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




No. C
Quantity: 4 PCS
Sticker
ø20mm



STEP 17

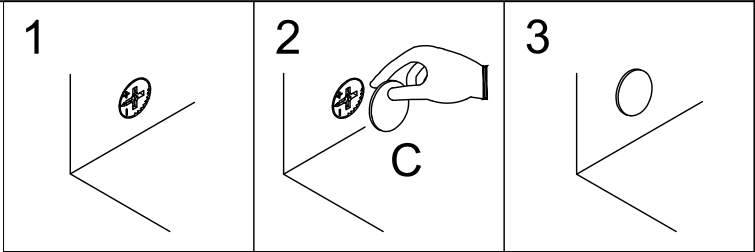

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

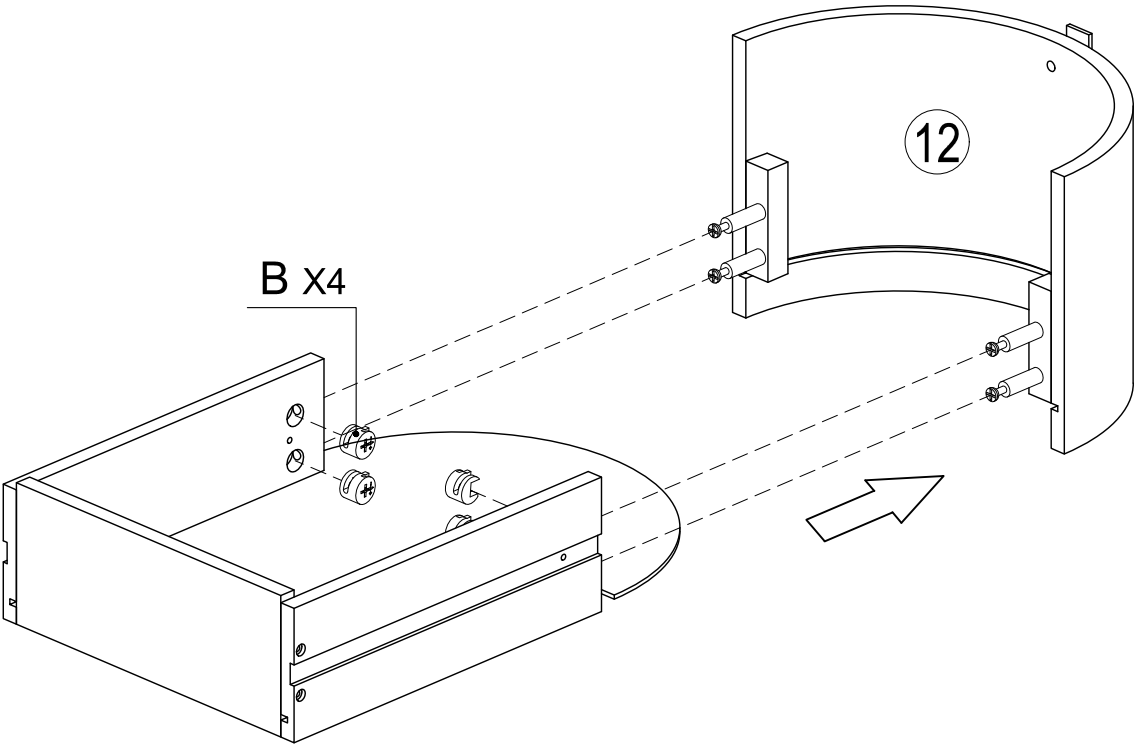

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C


Quantity: 4 PCS
Sticker
ø20mm



STEP 18

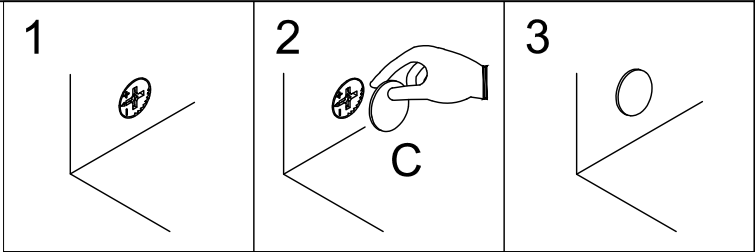

C is a cover, and B is a lock. Once B is installed, it will be very noticeable,so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

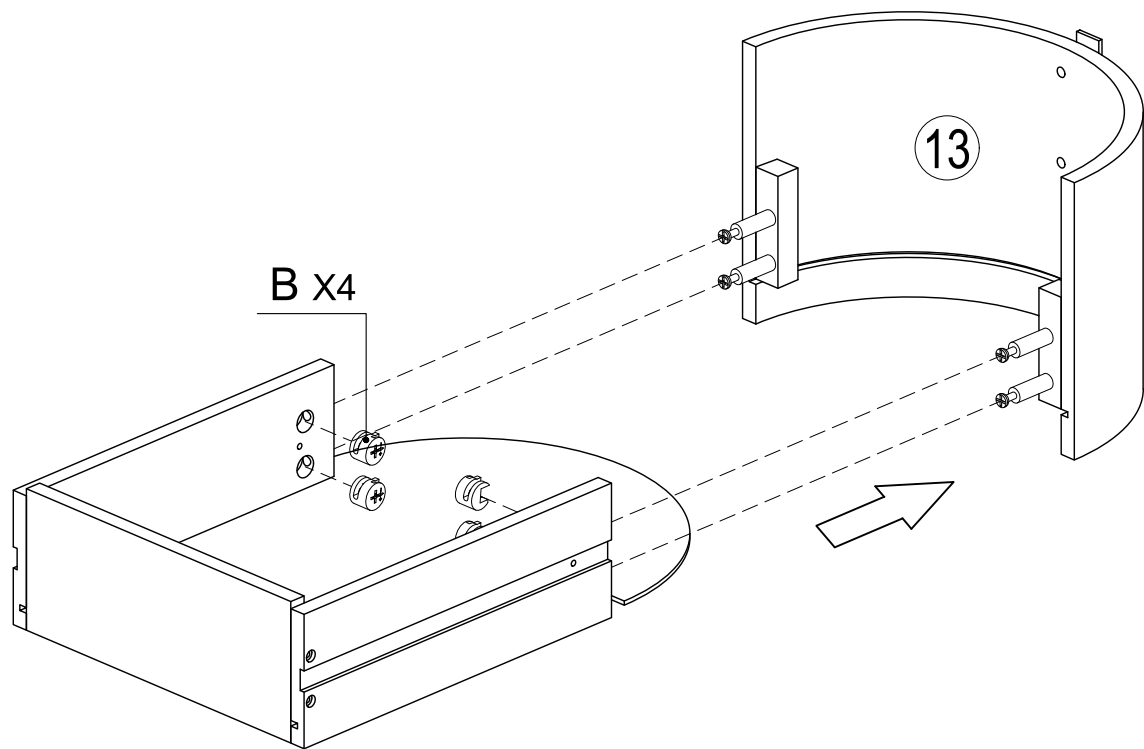

No. B

Quantity: 4 PCS
Cam
ø15x9.5mm




No. C



Quantity: 4 PCS
Sticker
ø20mm



STEP 19

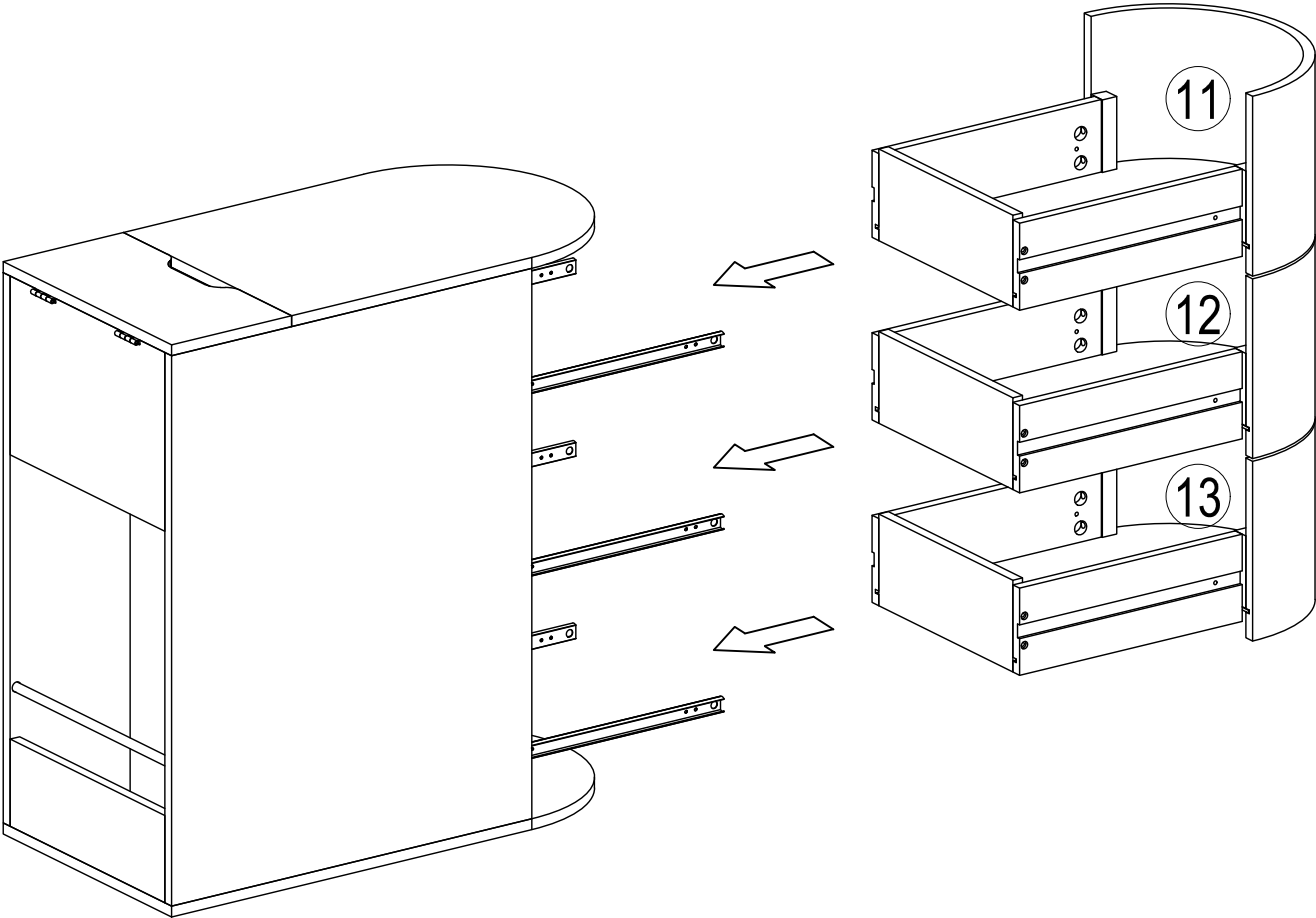

STEP 20

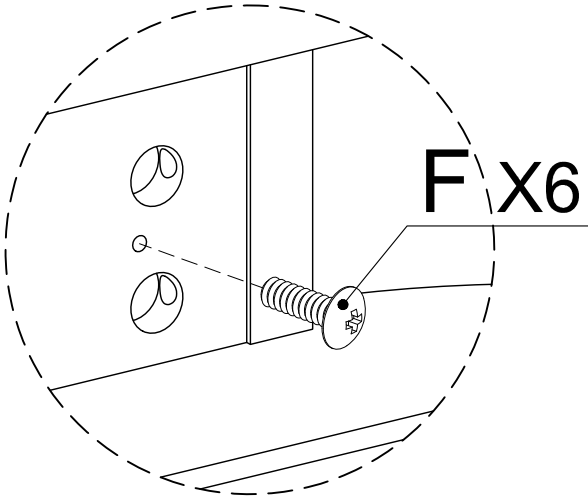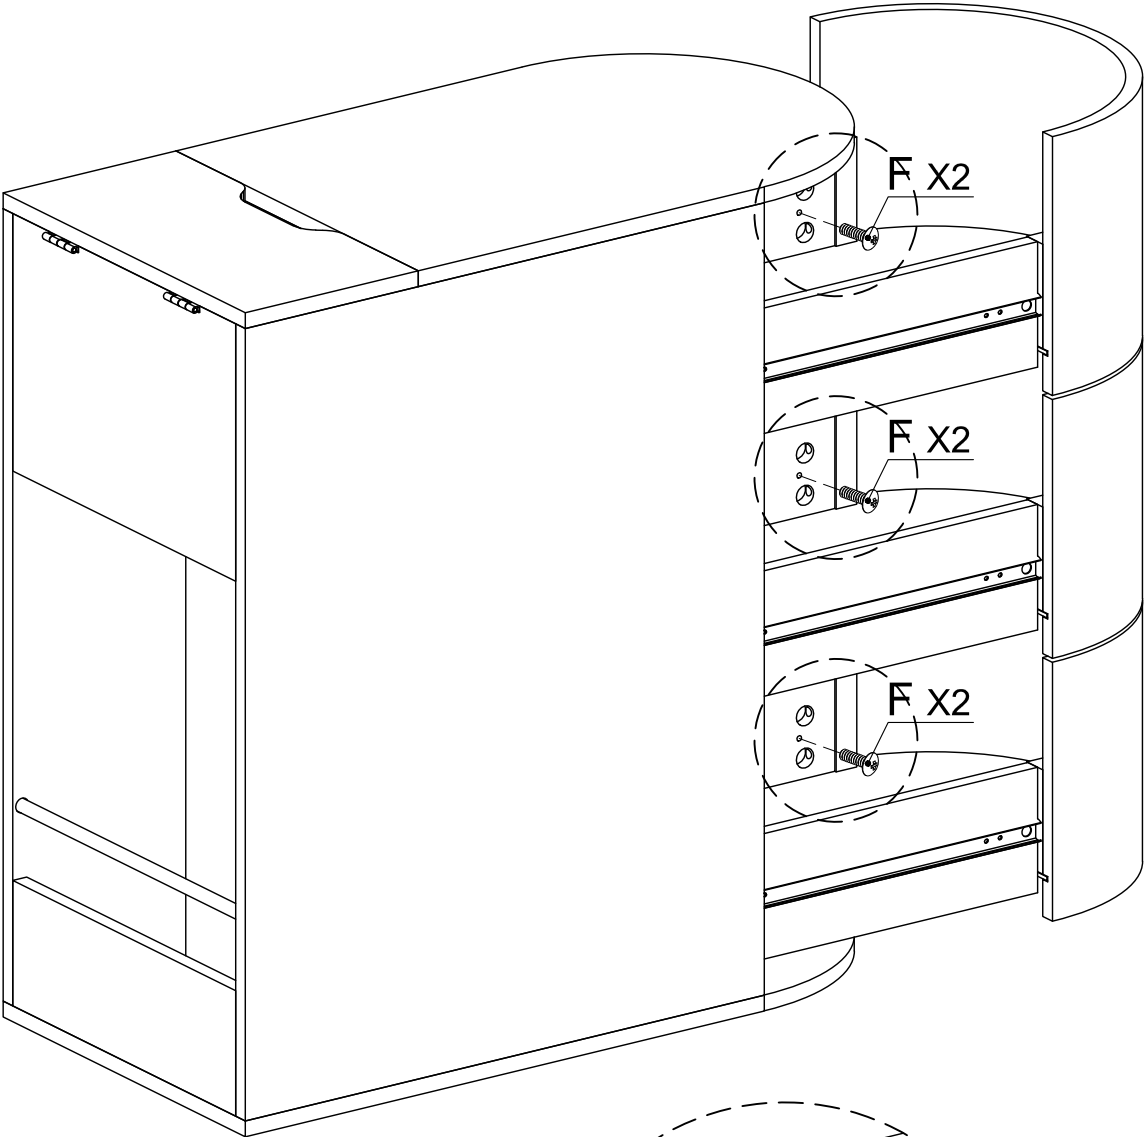

No. F

Quantity: 6 PCS

Bolt

M4x10mm

