


ASF007-SY

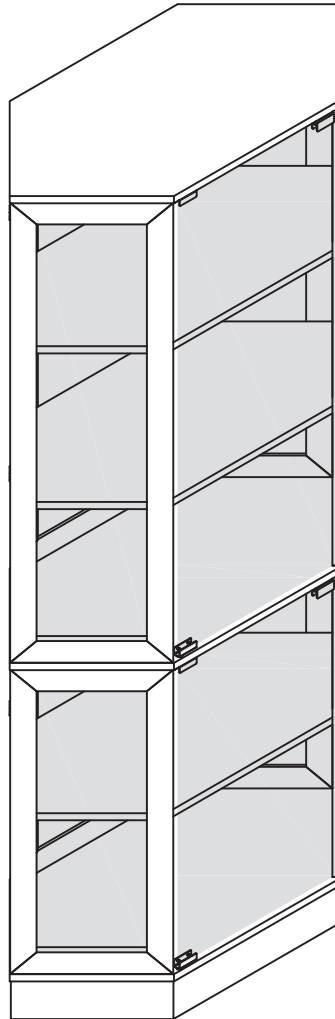

Please thoroughly review the installation instructions prior to commencing the installation process. Ensure that all tools are utilized appropriately and with due care. Should you encounter any questions regarding the product or the installation procedure, do not hesitate to contact us. We will make every effort to assist you in resolving any issues.

We aim to provide you with a distinctive experience.

Before You Start

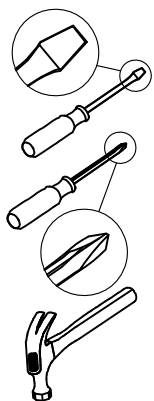

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

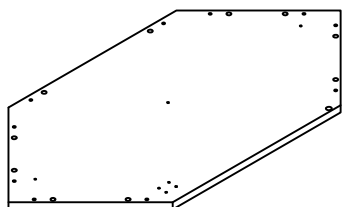


①
TOP
Qty:1

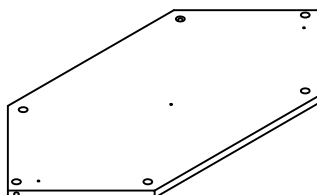


②
FIXED SHELF
Qty:3

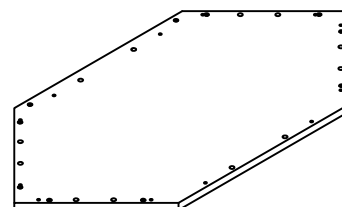


③
BOTTOM
Qty:1

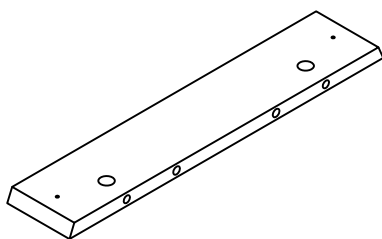


④
FRONT RAIL
Qty:1

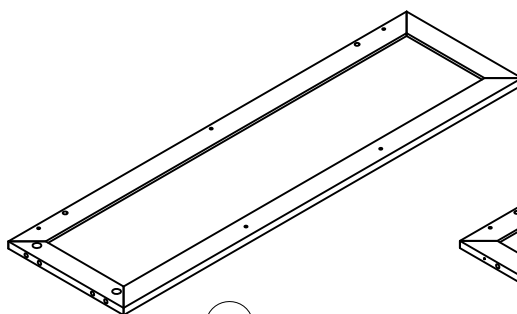


⑤
FRONT UPPER LEFT SIDE PANEL
Qty:1

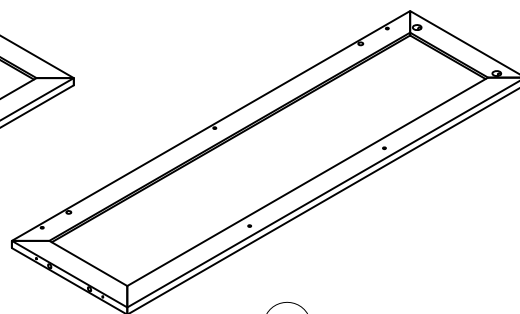


⑥
FRONT UPPER RIGHT SIDE PANEL
Qty:1

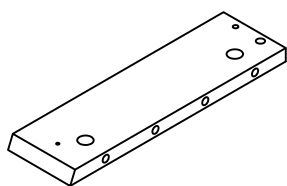


⑦
FRONT LEFT RAIL
Qty:1

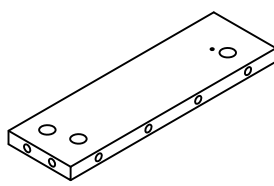


⑧
FRONT RIGHT RAIL
Qty:1

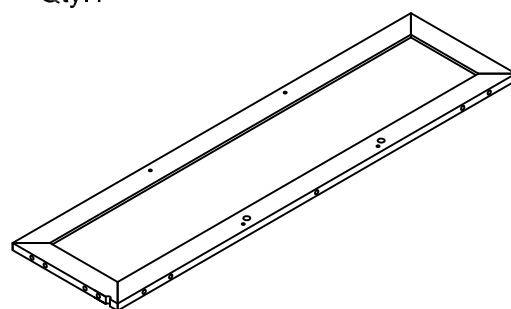


⑨
BACK UPPER LEFT SIDE PANEL
Qty:1

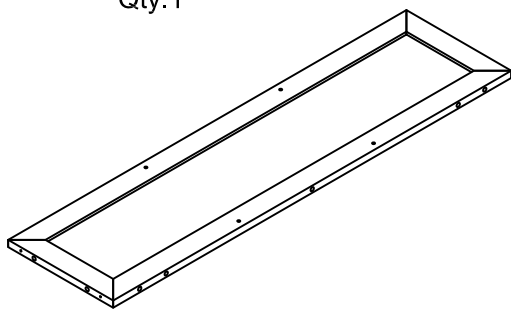

⑩
BACK UPPER RIGHT SIDE PANEL
Qty:1

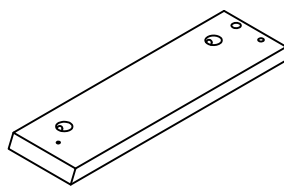


⑪
BACK LEFT RAIL
Qty:1

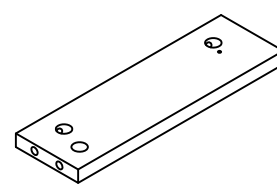

⑫
BACK RIGHT RAIL
Qty:1


Board Identification

Not actual size

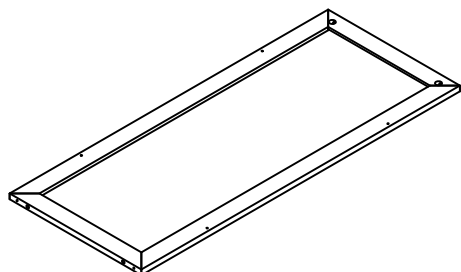


⑬

UPPER BACK PANEL
Qty:1

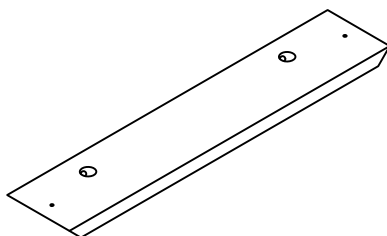


⑭

BACK RAIL
Qty:1

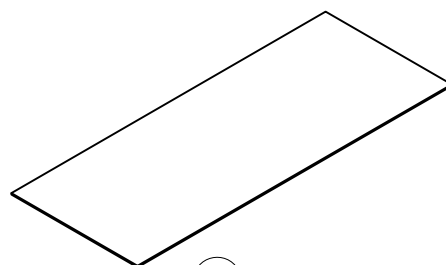


⑮

UPPER GLASS DOOR
Qty:1

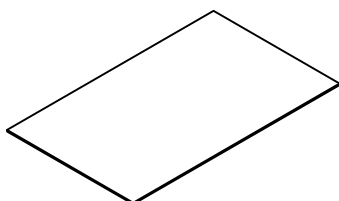


⑯

LOWER GLASS DOOR
Qty:1

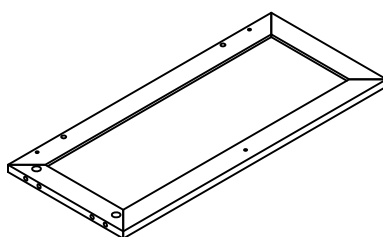


⑰

FRONT LOWER LEFT SIDE PANEL
Qty:1

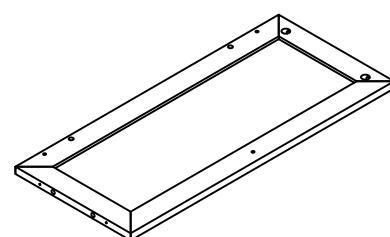


⑱

FRONT LOWER RIGHT SIDE PANEL
Qty:1

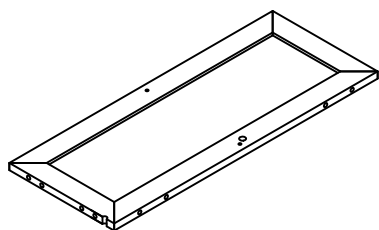


⑲

BACK LOWER LEFT SIDE PANEL
Qty:1

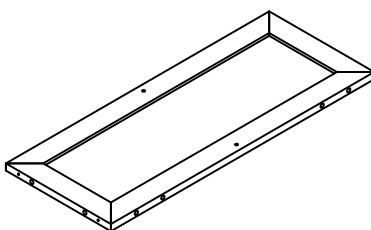


⑳

BACK LOWER RIGHT SIDE PANEL
Qty:1

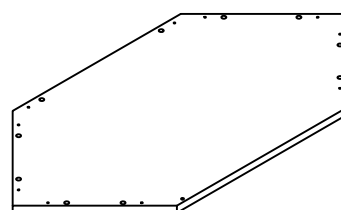

㉑


FIXED SHELF
Qty:1

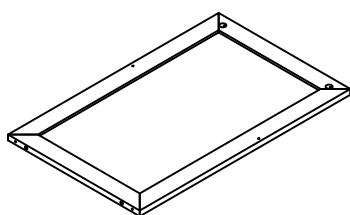


㉒

LOWER BACK PANEL
Qty:1


Part List

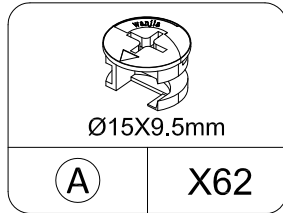


CAM LOCK
spare:2

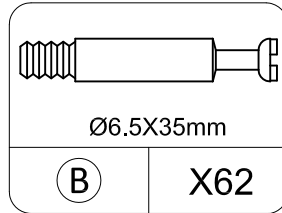


CAM BOLT
spare:2

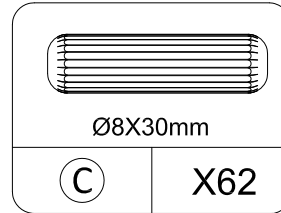


WOODEN DOWEL
spare:2

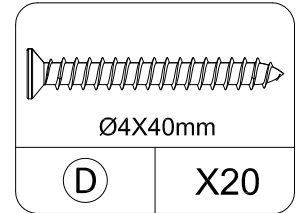


SCREW
spare:1

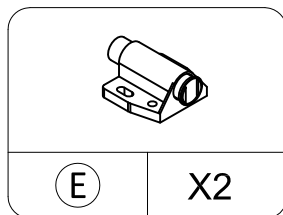


MAGNETIC DOOR STOP

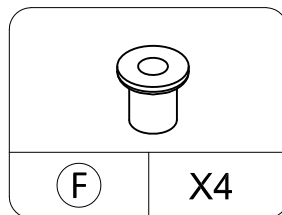


POSITIONING SLEEVE

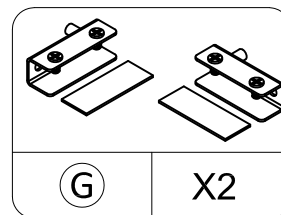


HINGE

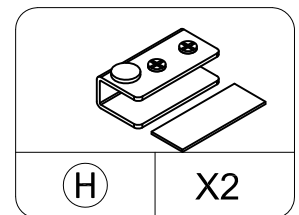


MAGNETIC DOOR STOP

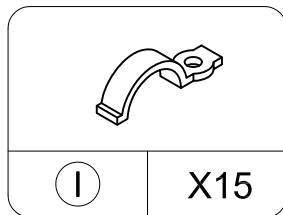


LIGHT STRIP CLIP
spare:2

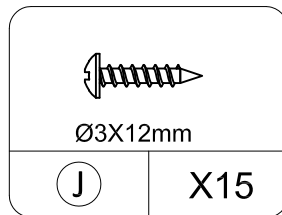


SCREW
spare:2

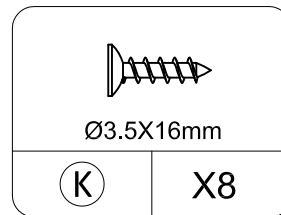


SCREW
spare:1

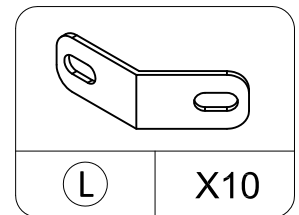


METAL CONNECTING PLATE
spare:1

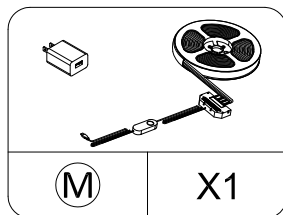

LIGHT STRIP

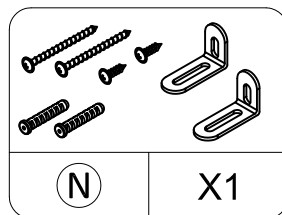

ANTI-TIPPING HARDWARE

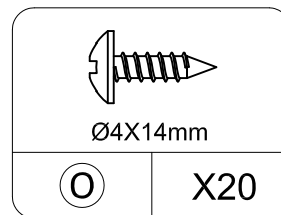


SCREW
spare:2

Part List


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.


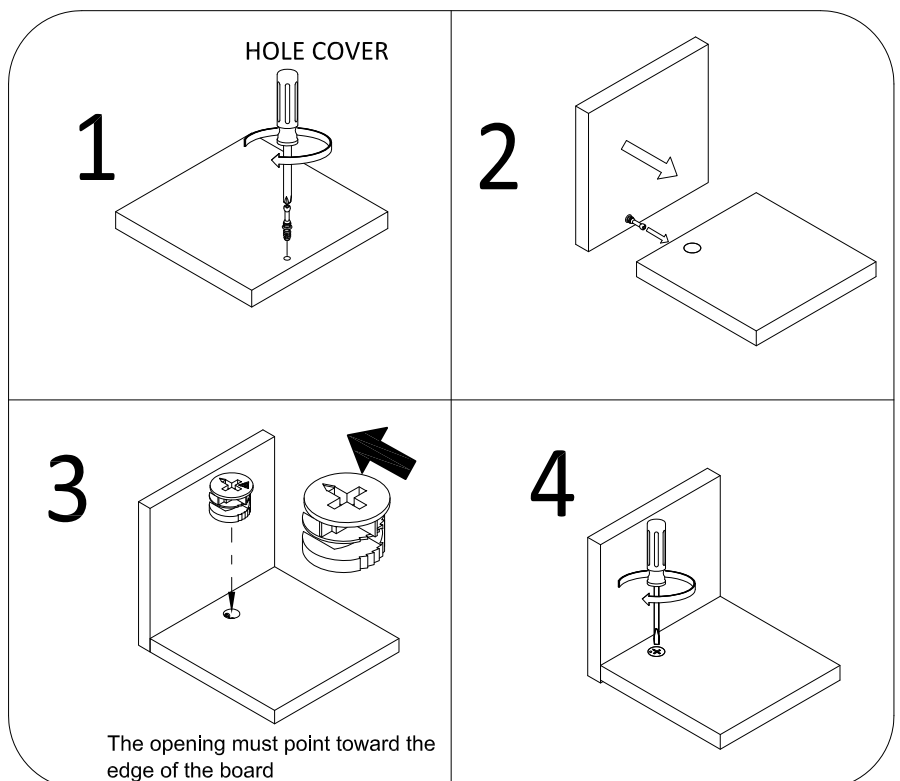


Board Identification







Not actual size

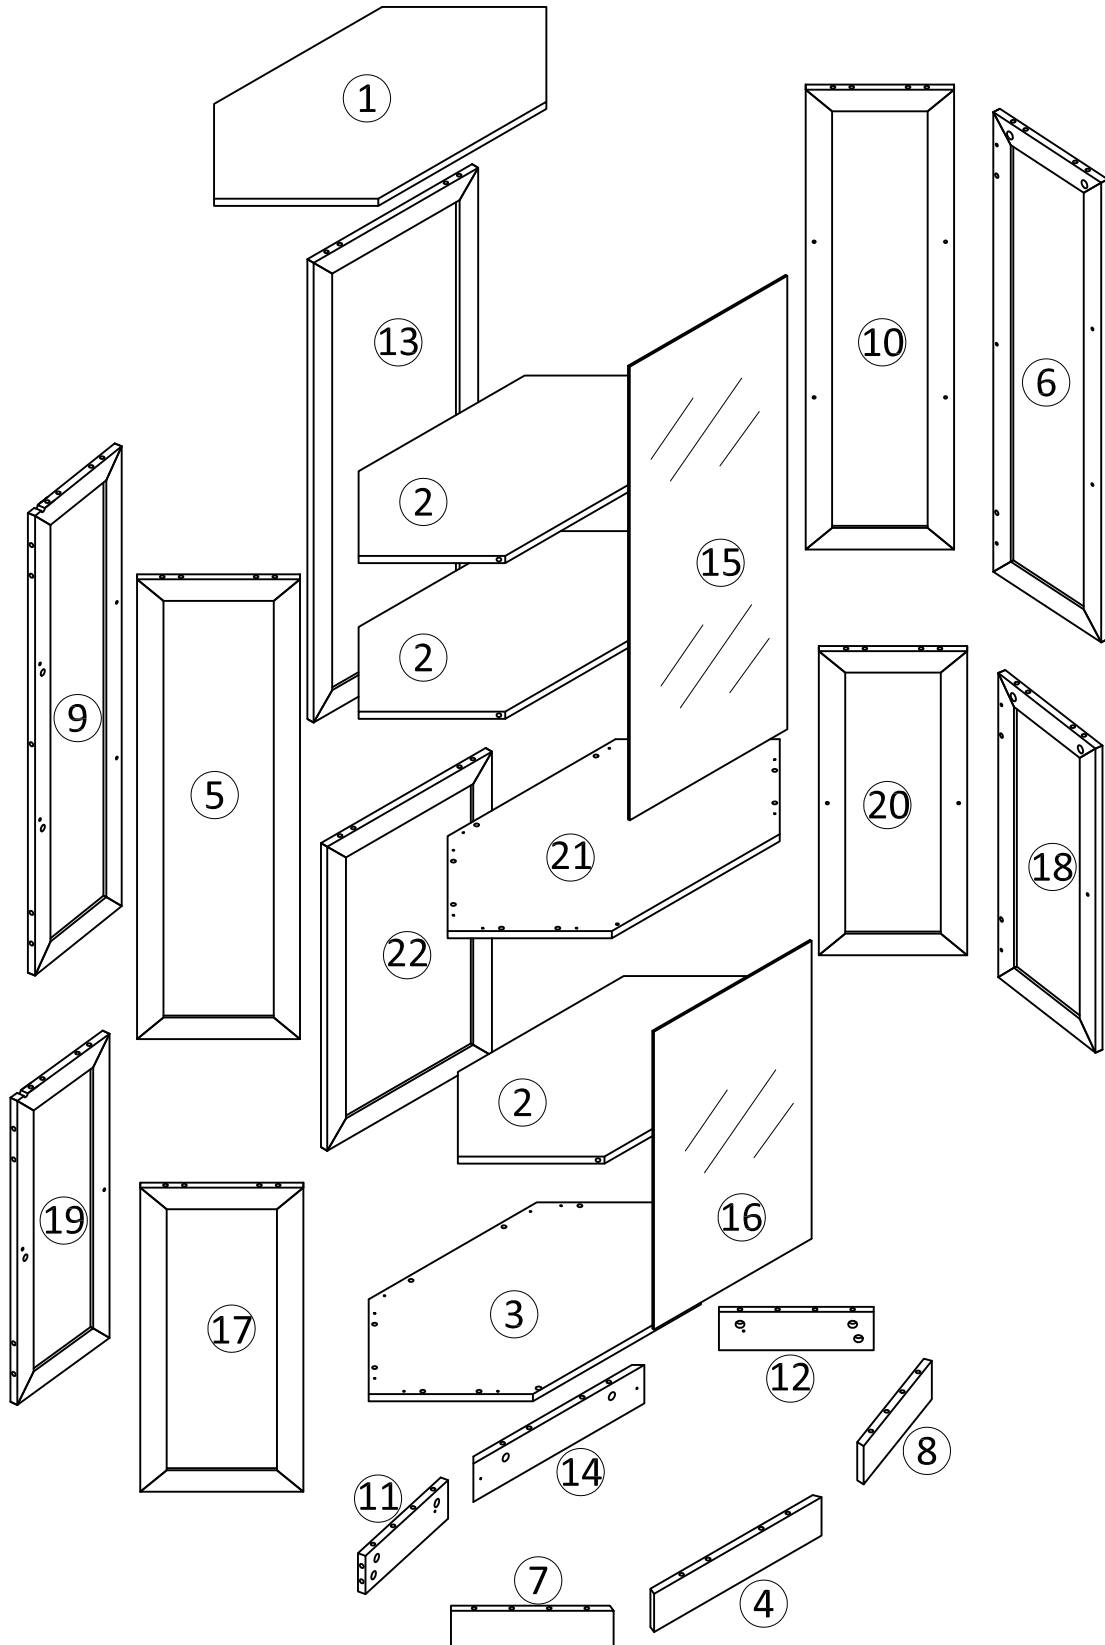


STEP1









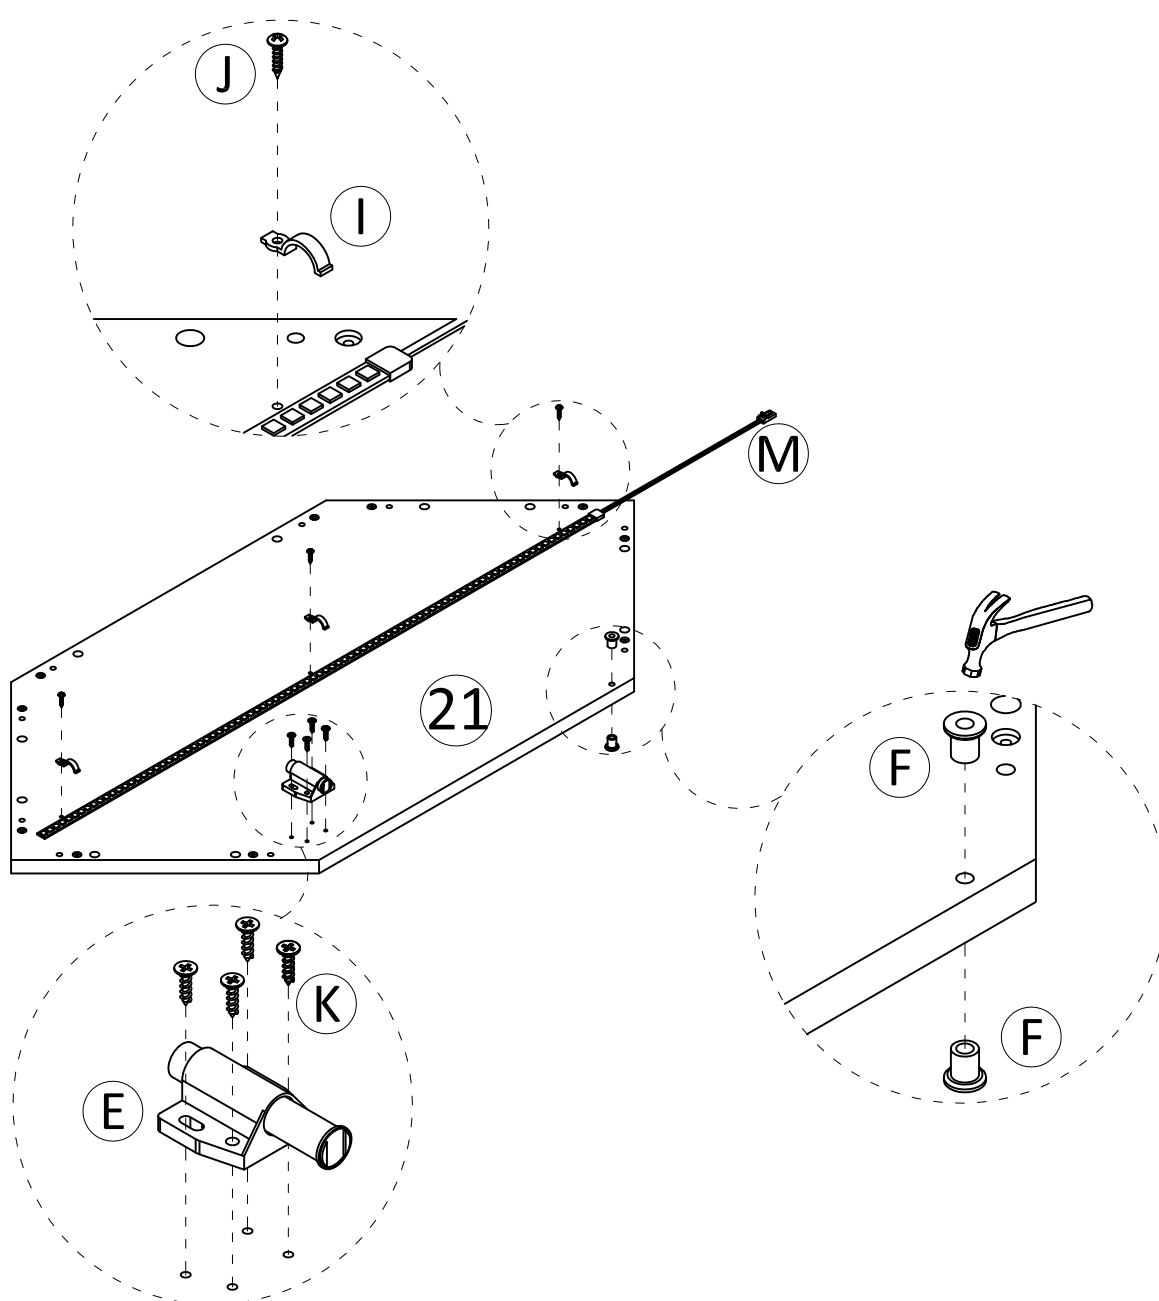
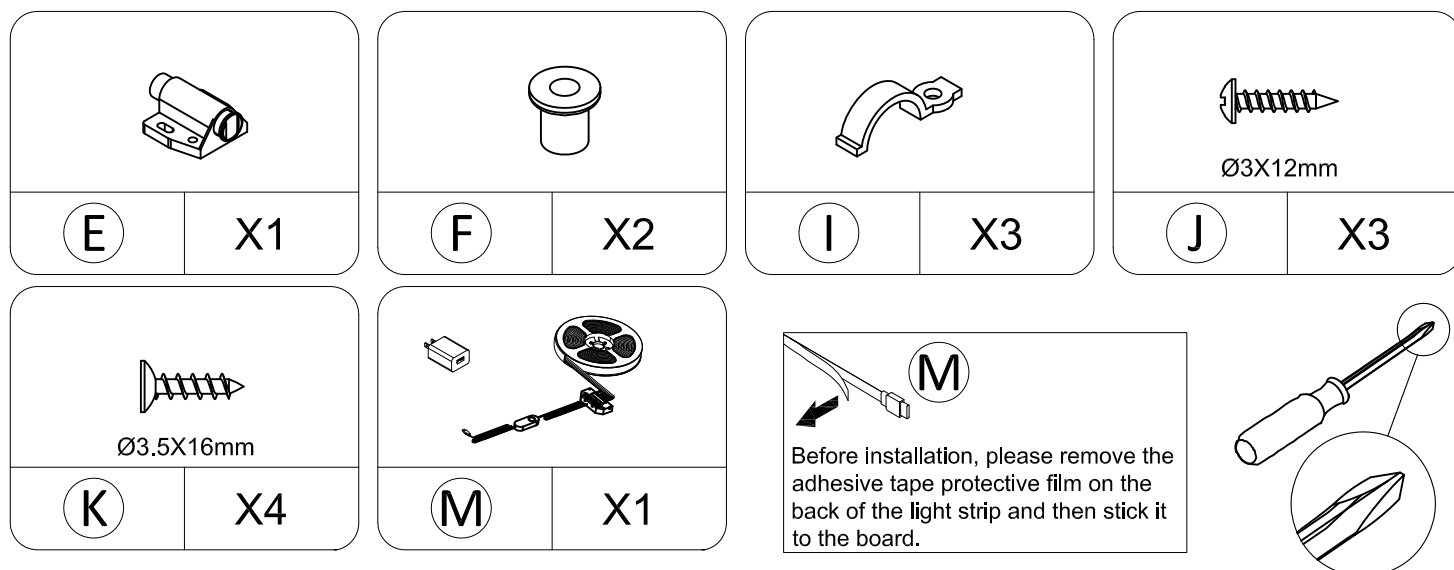


STEP2


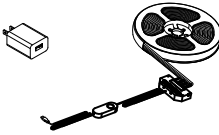
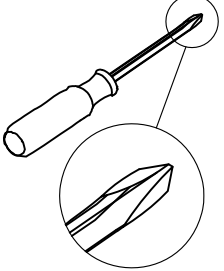
 $\varnothing 6.5 \times 35 \text{mm}$ (B) X10	 (E) X1	 (F) X1	 (I) X3
 $\varnothing 3 \times 12 \text{mm}$ (J) X3	 $\varnothing 3.5 \times 16 \text{mm}$ (K) X4	 (M) X1	

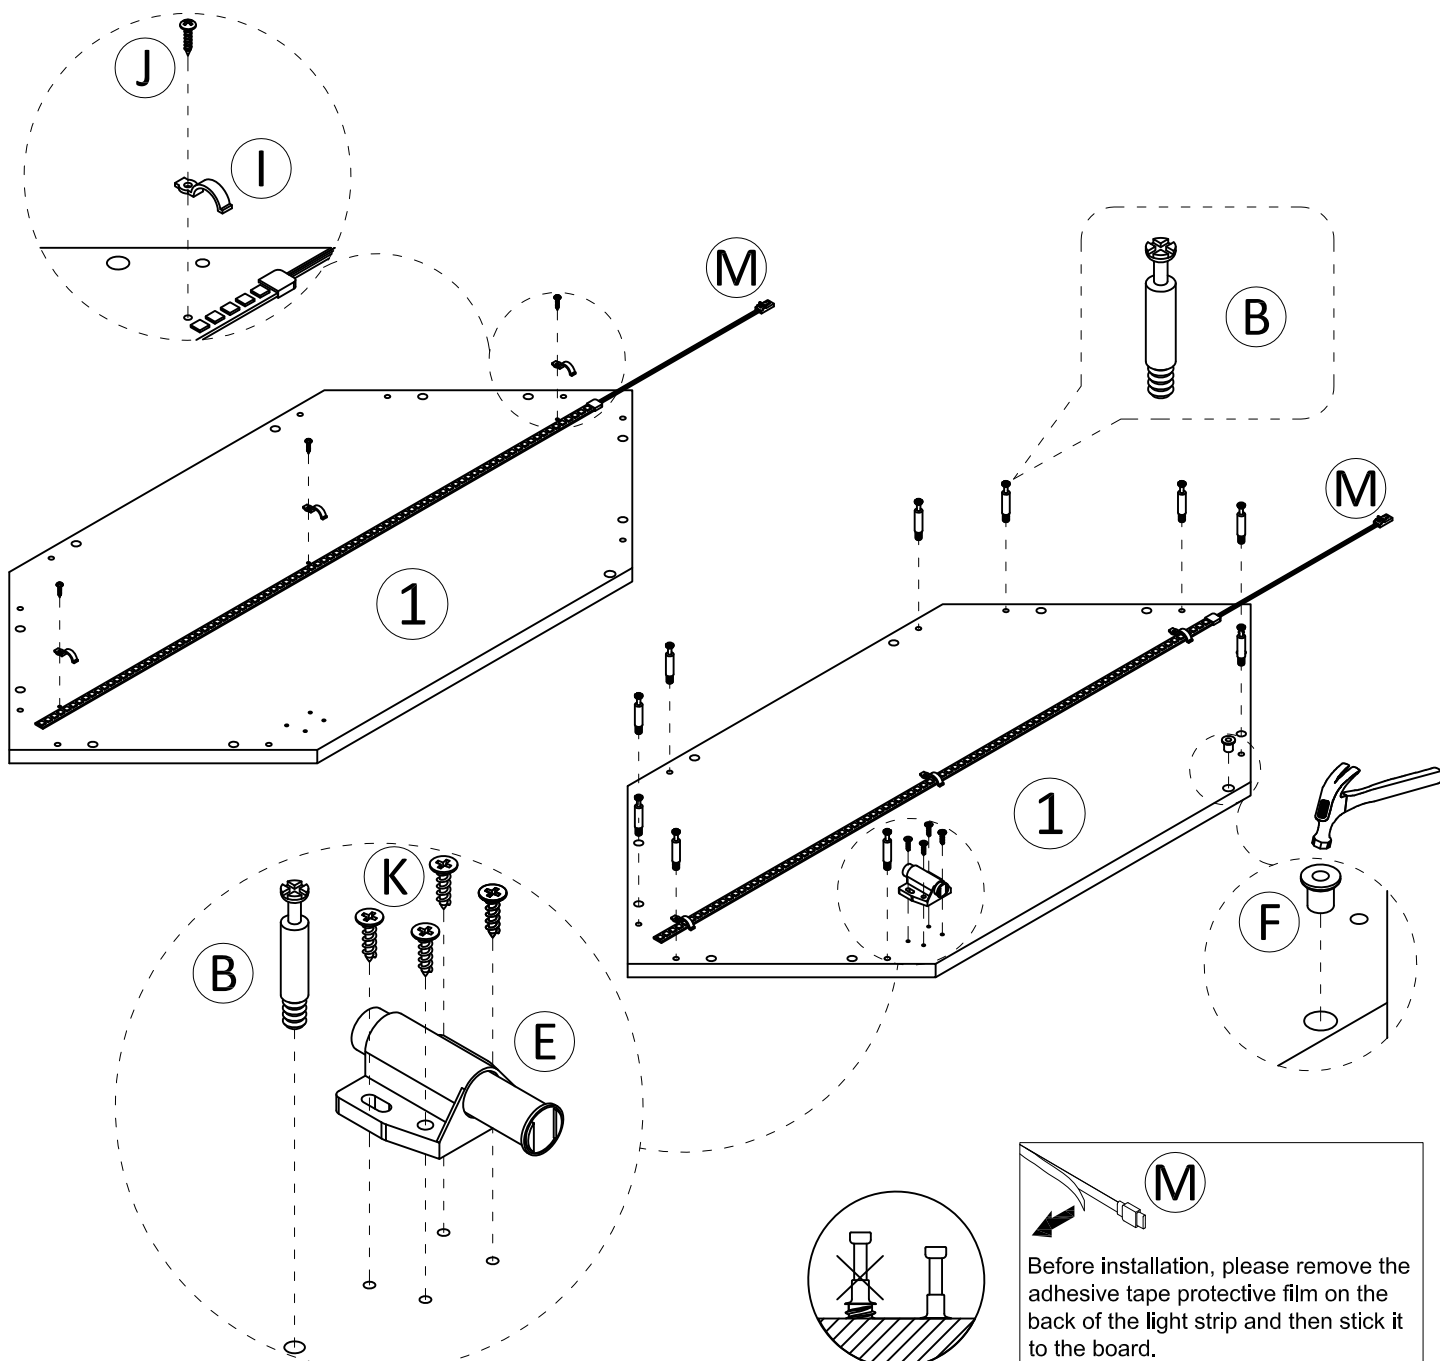

STEP3

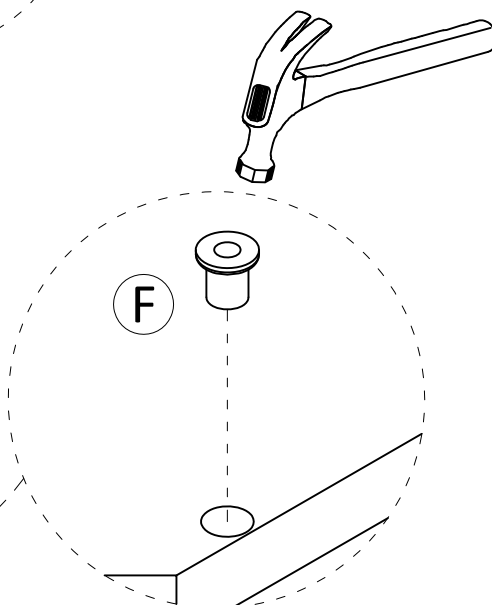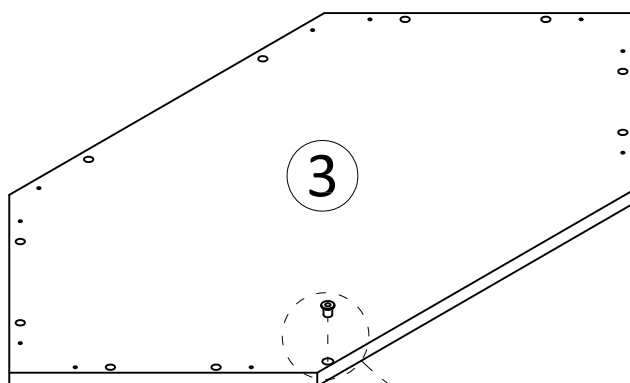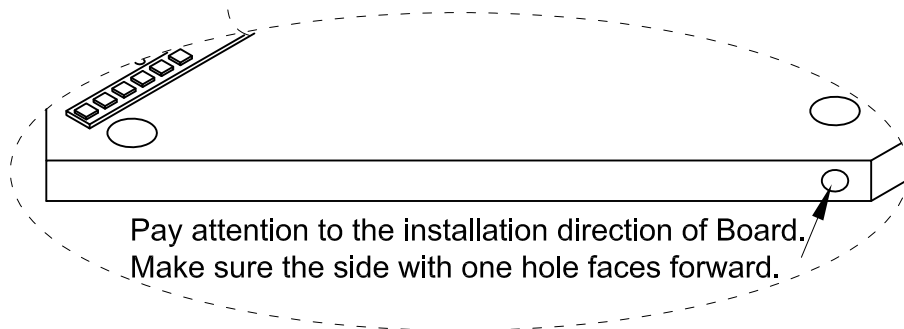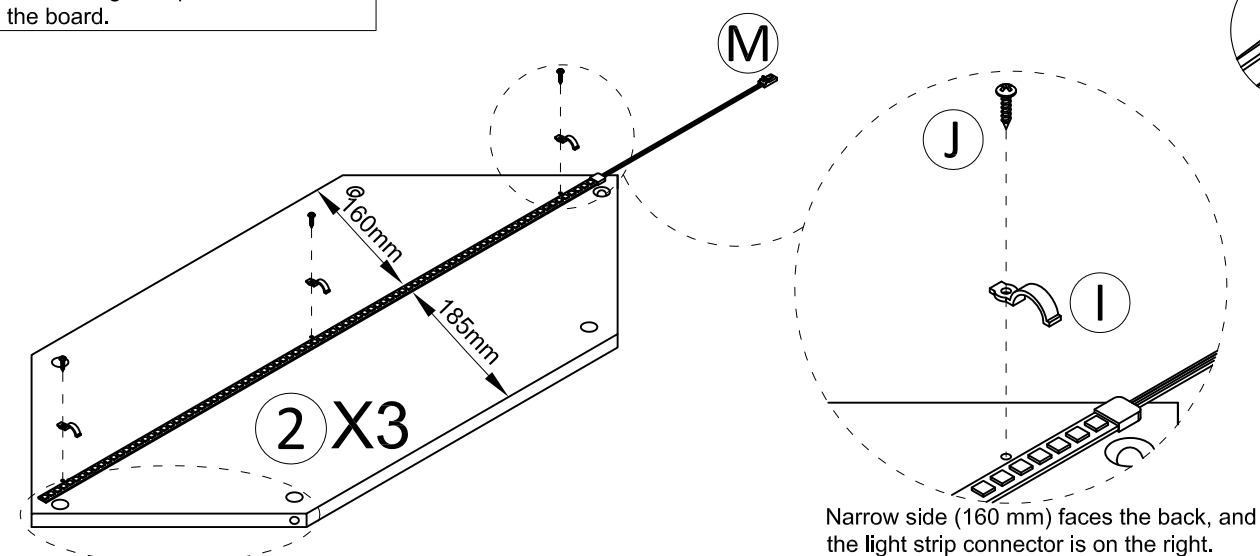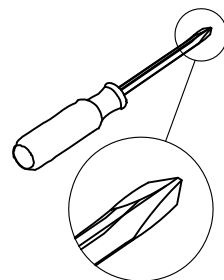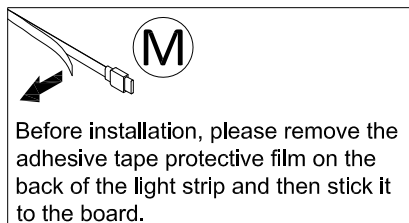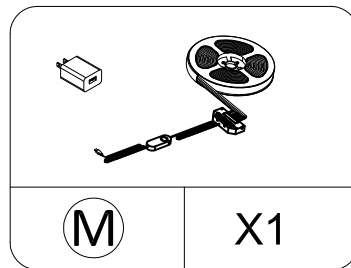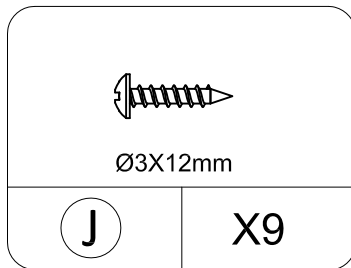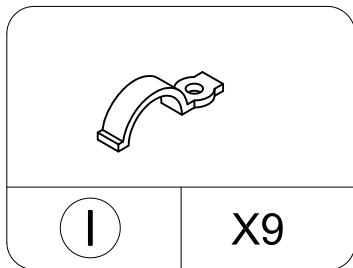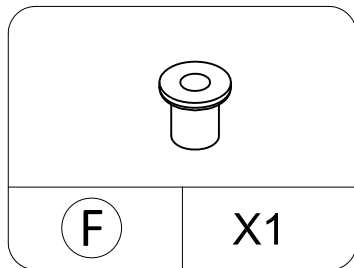

STEP4

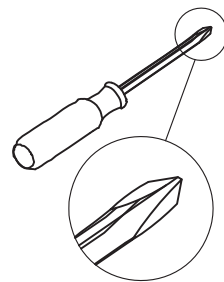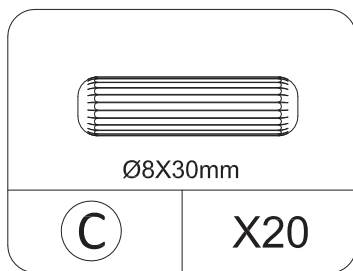
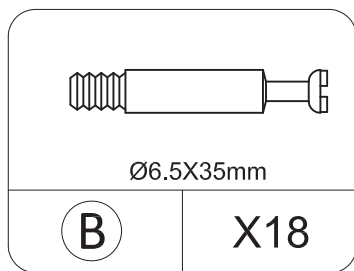


Before installation, remove the protective film from the acrylic panel.




The method for removing the protective film from this product is as follows:

STEP 1: Starting from the opening of the protective film, slowly lift up all four edges.

STEP 2: Then, continue slowly peeling from the edges toward the center of the film.

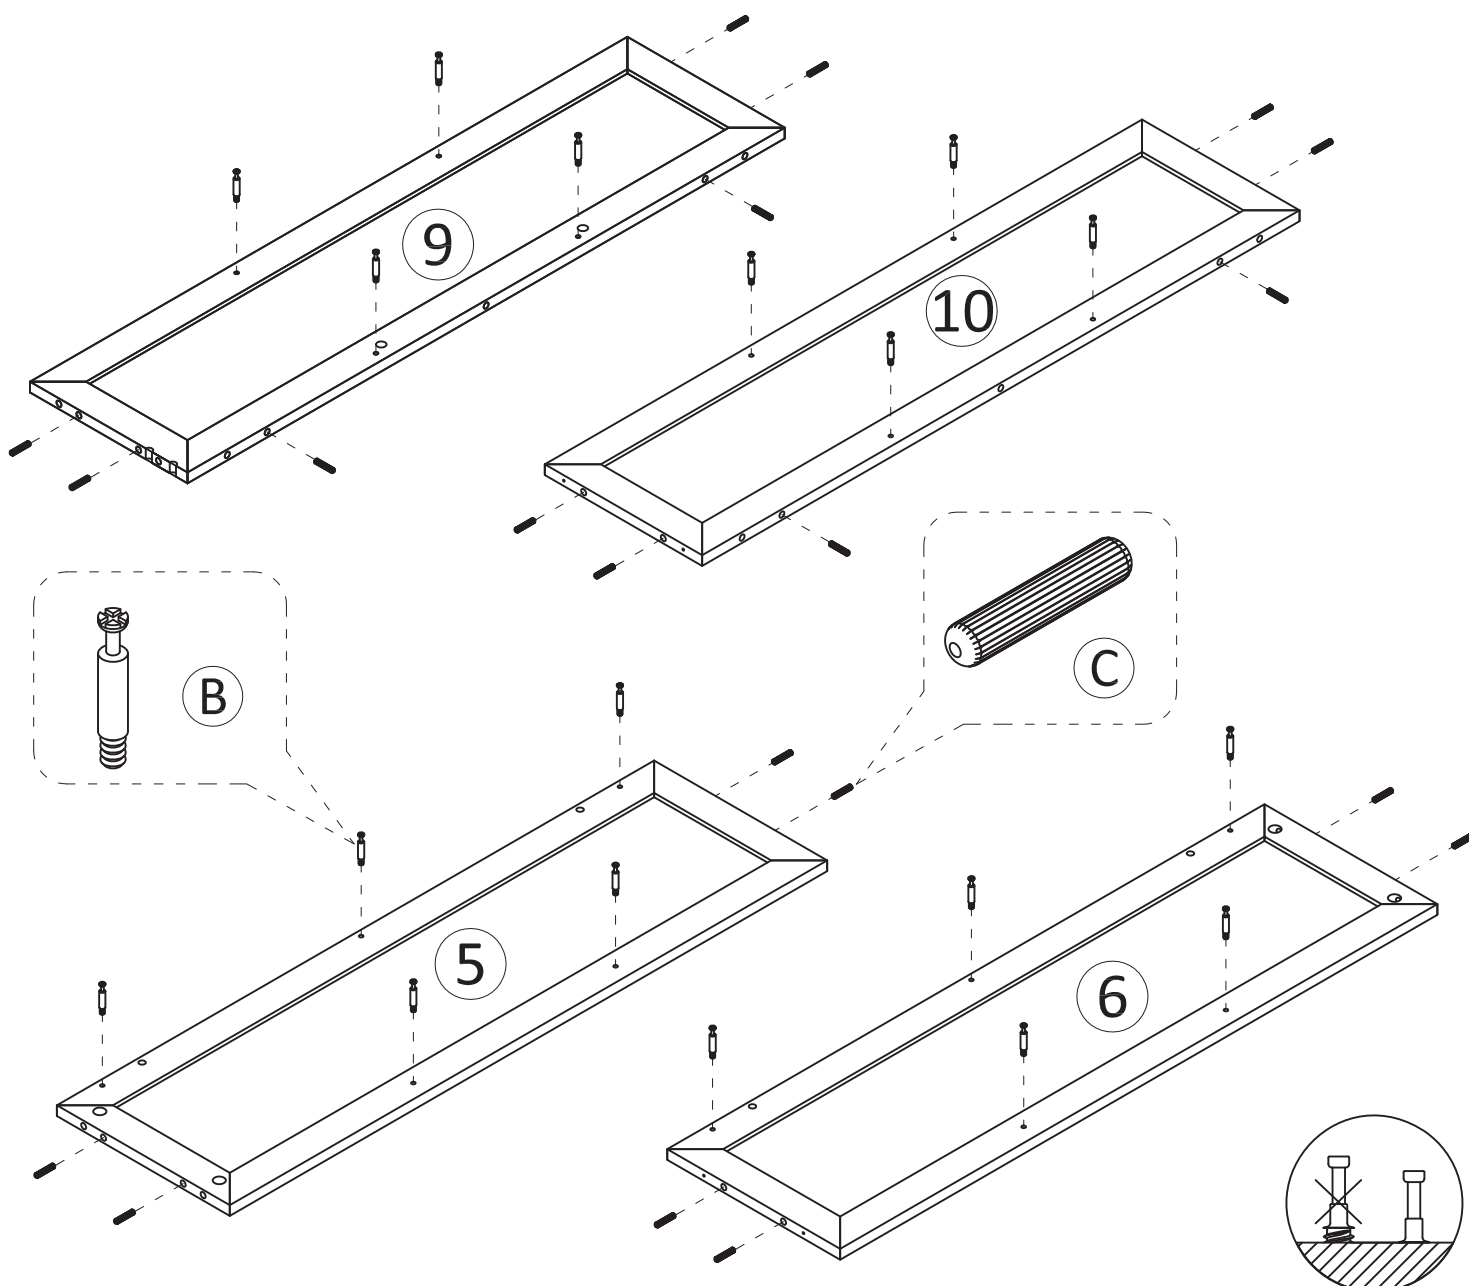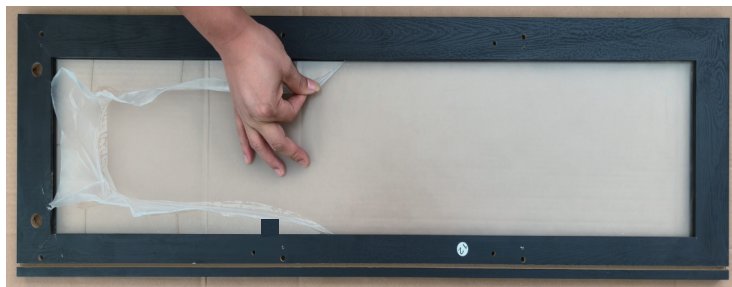

STEP5






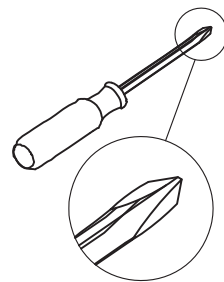
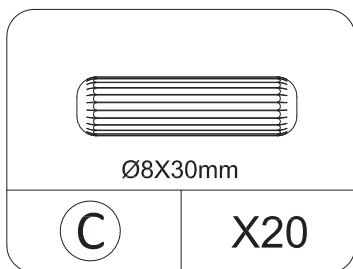
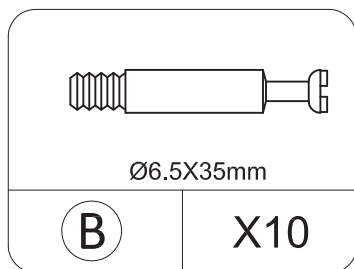


Before installation, remove the protective film from the acrylic panel.



The method for removing the protective film from this product is as follows:

STEP 1: Starting from the opening of the protective film, slowly lift up all four edges.




STEP 2: Then, continue slowly peeling from the edges toward the center of the film.

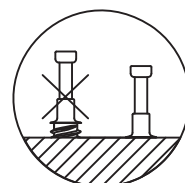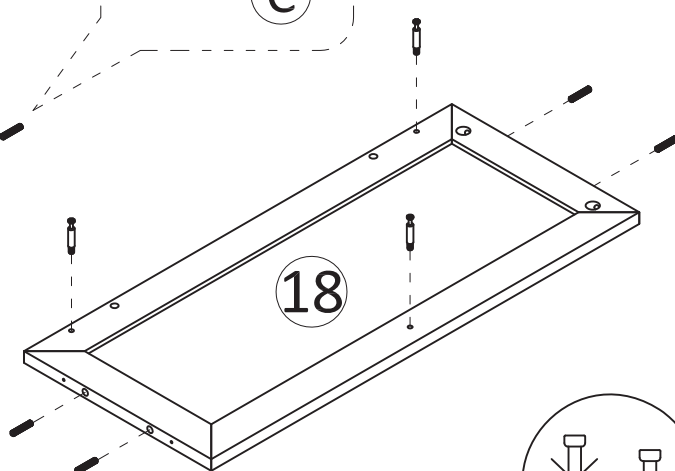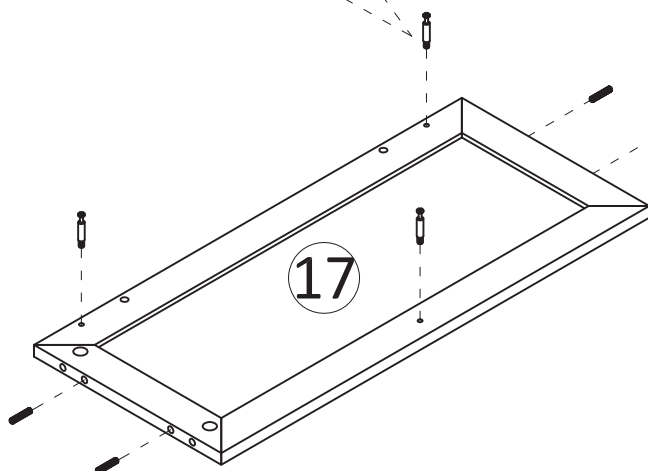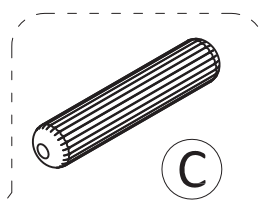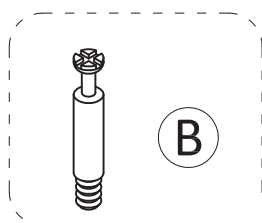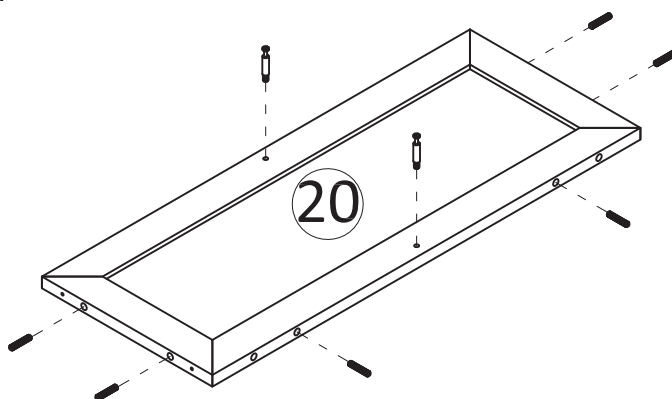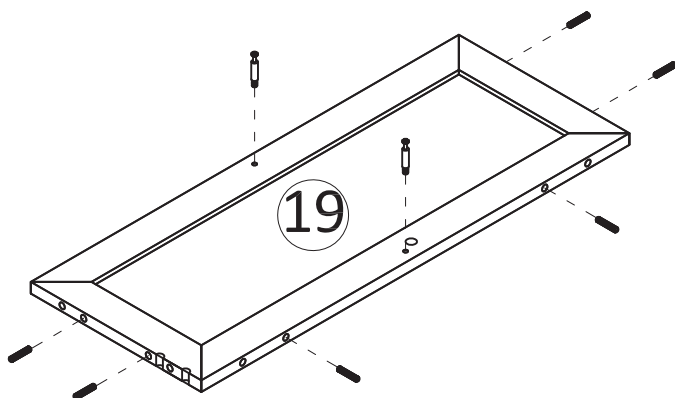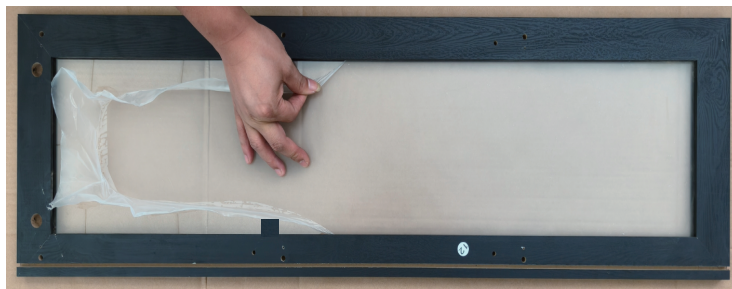

STEP6

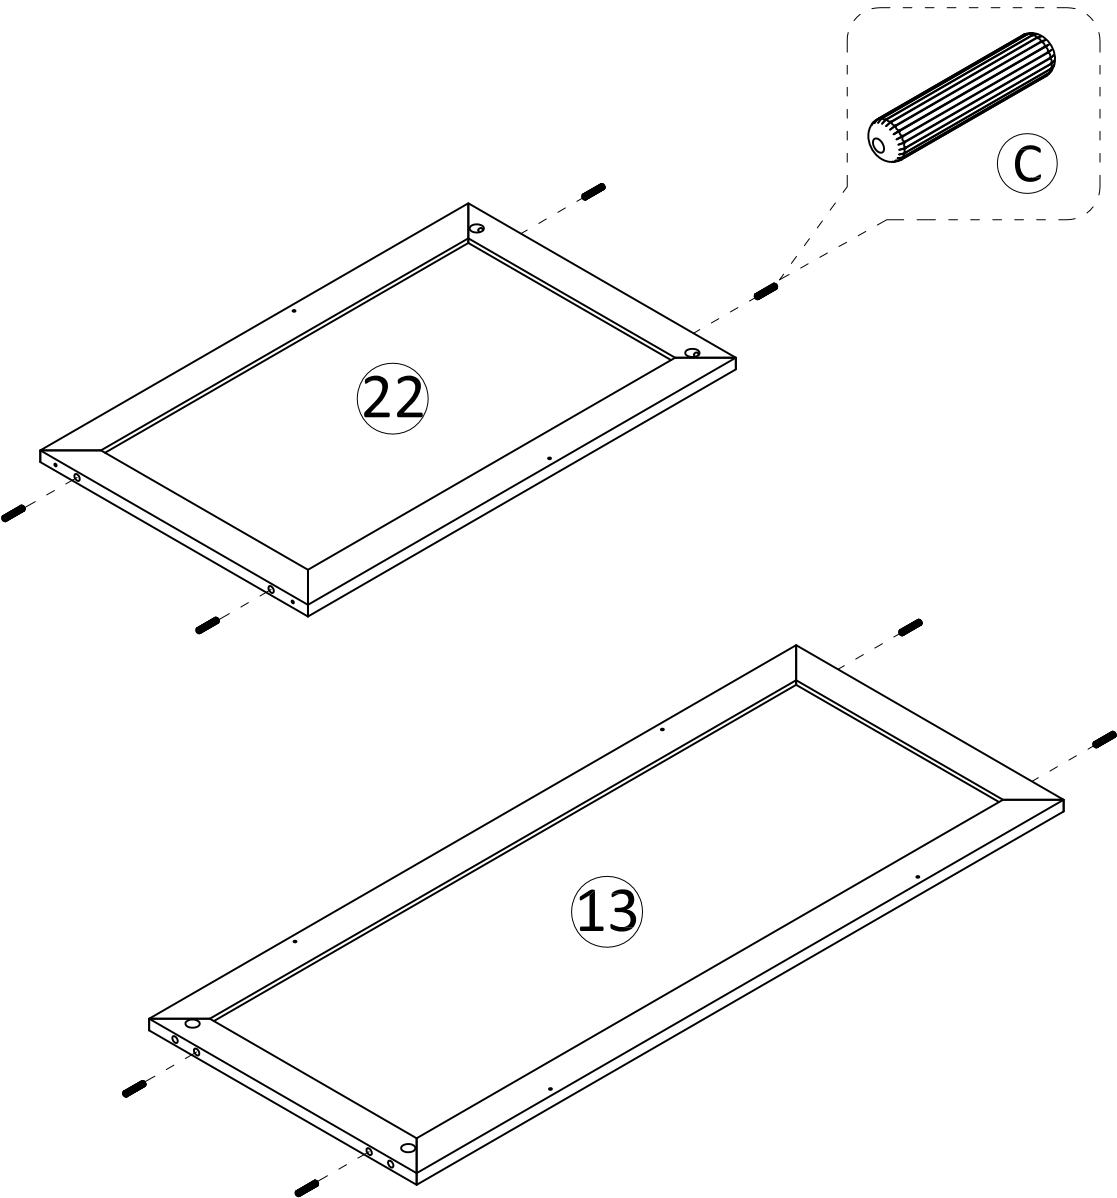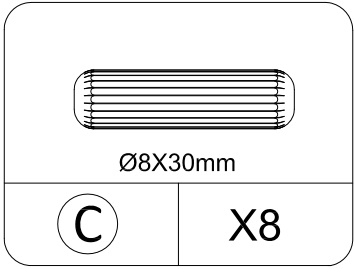


STEP7

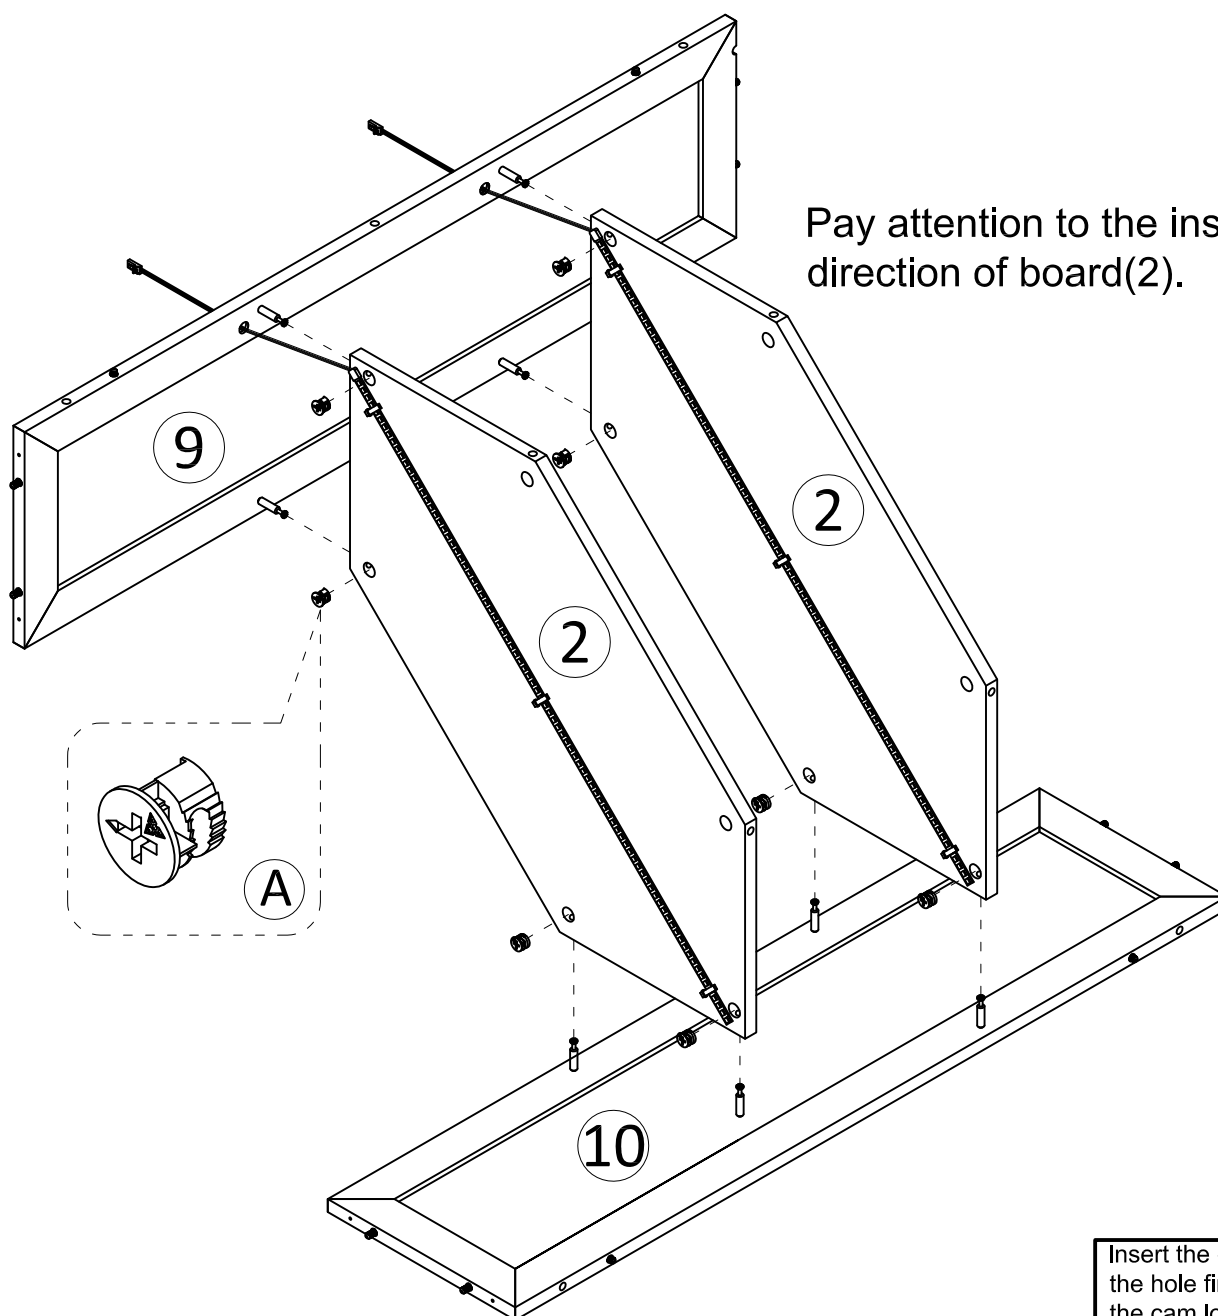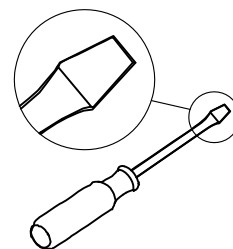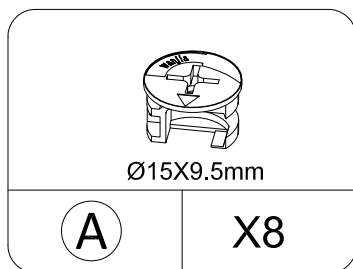

Pay attention to the installation direction of board(2).

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

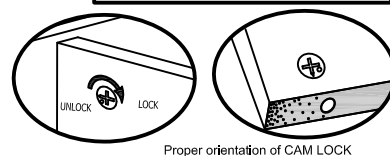

Proper orientation of CAM LOCK



STEP8




Ø15X9.5mm

A

X10


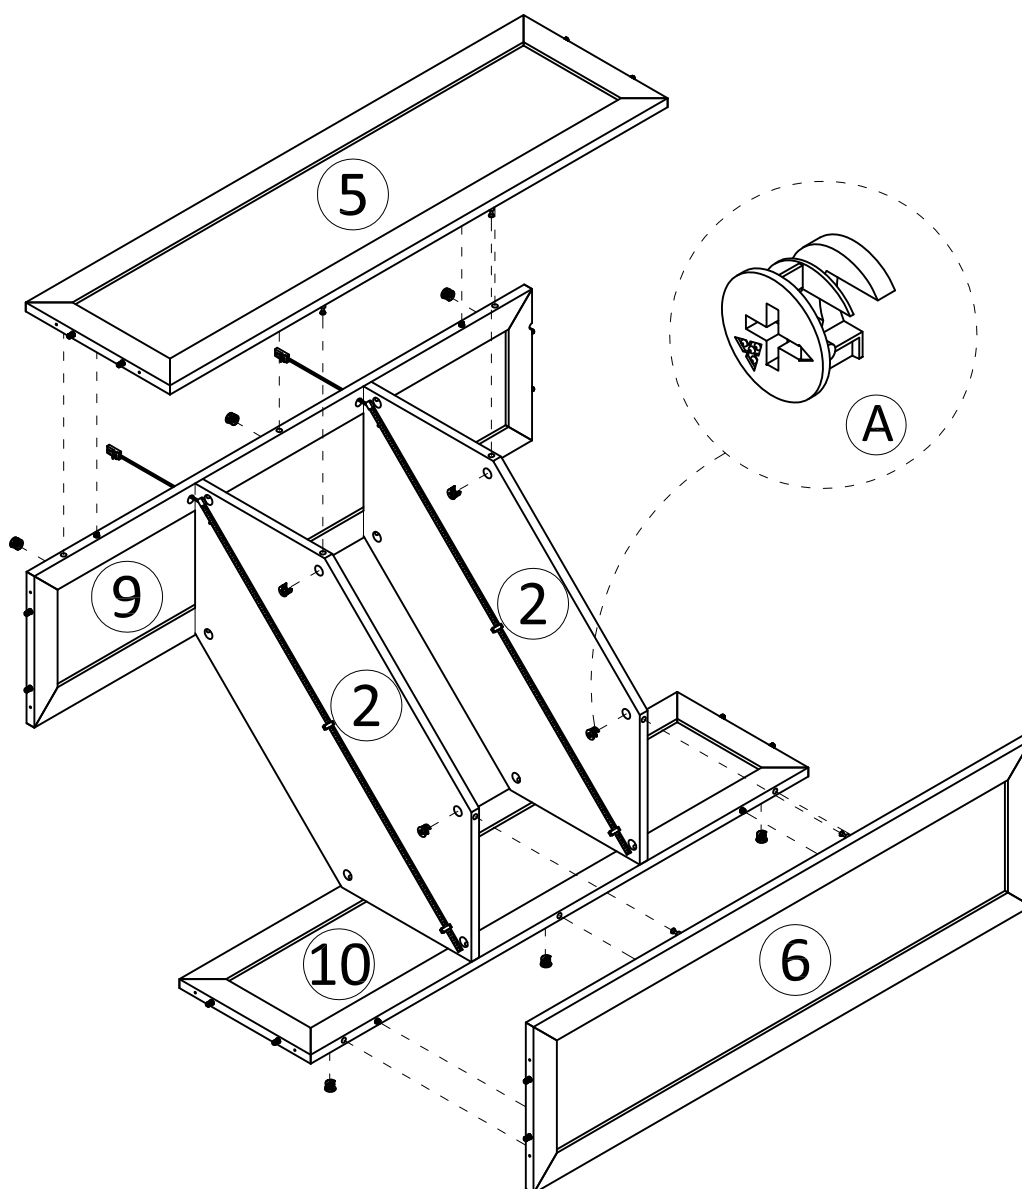
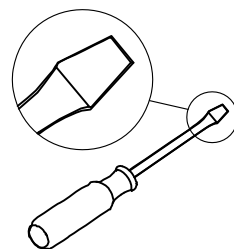


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

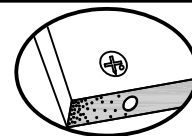


Proper orientation of CAM LOCK

STEP9




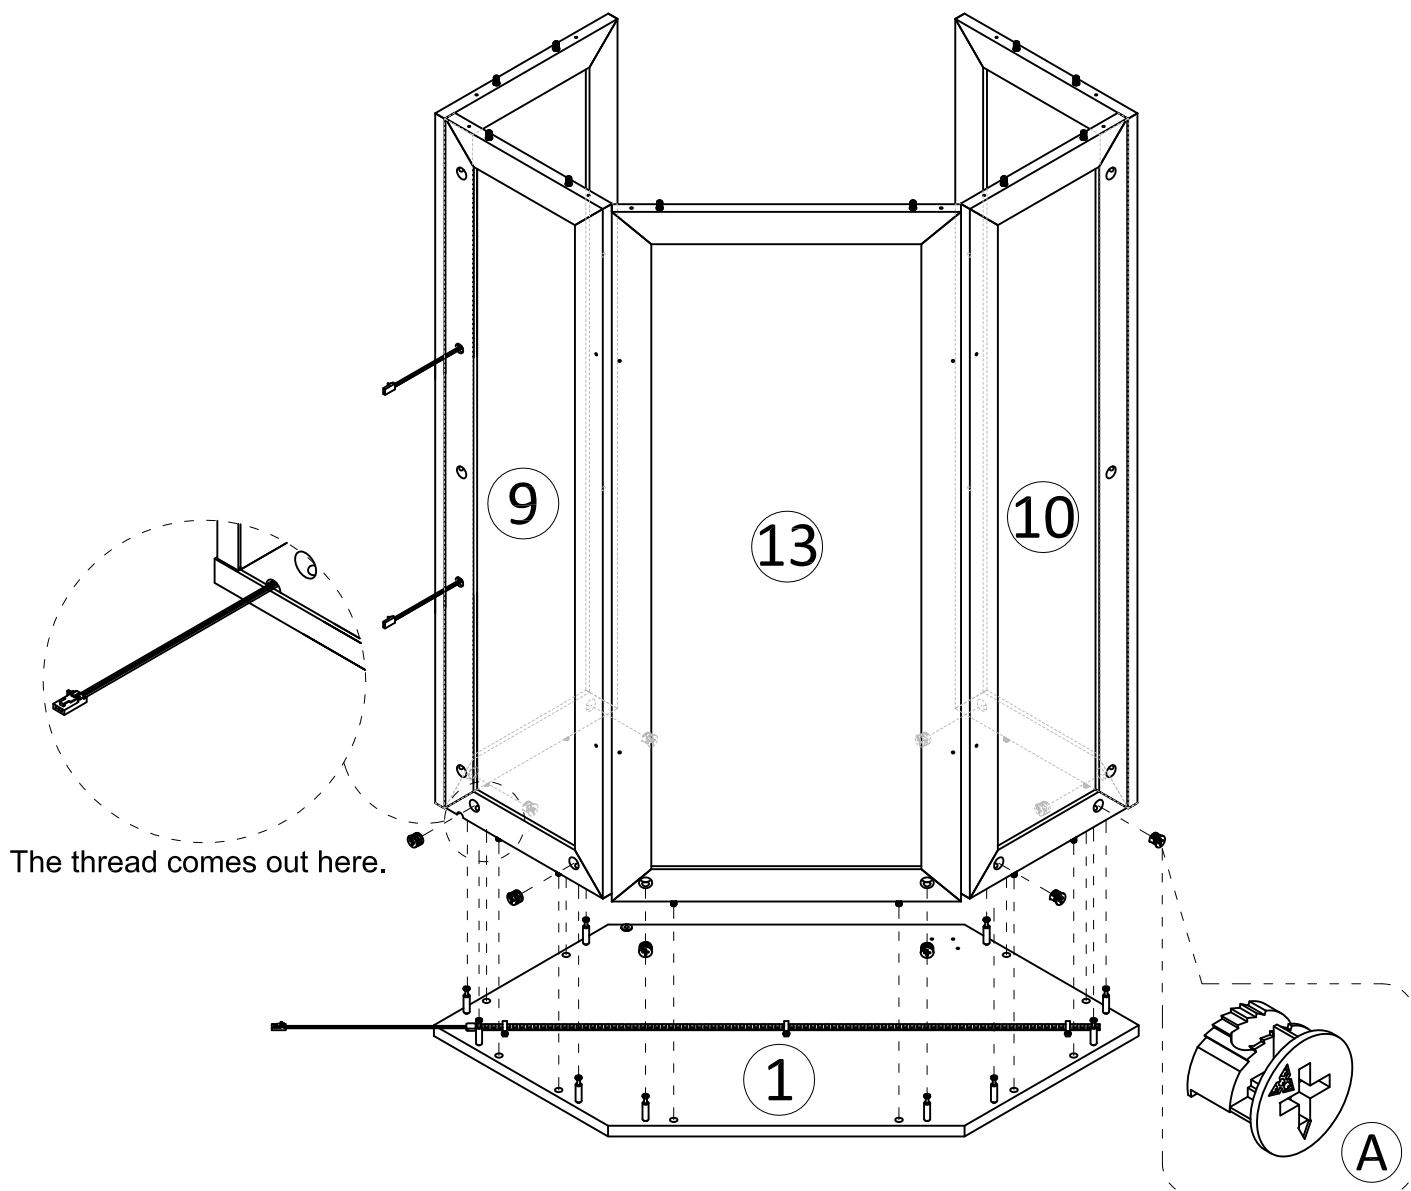
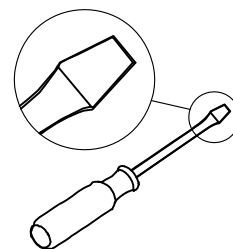
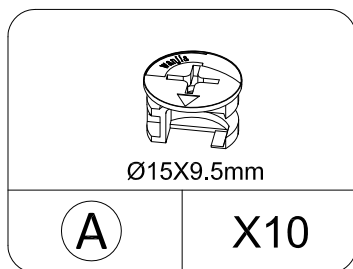


Insert the cam bolt into the hole first, then insert the cam lock and lock it.



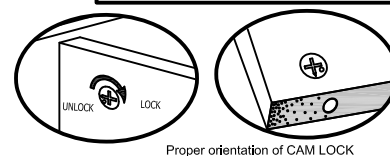


Proper orientation of CAM LOCK



STEP10

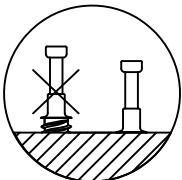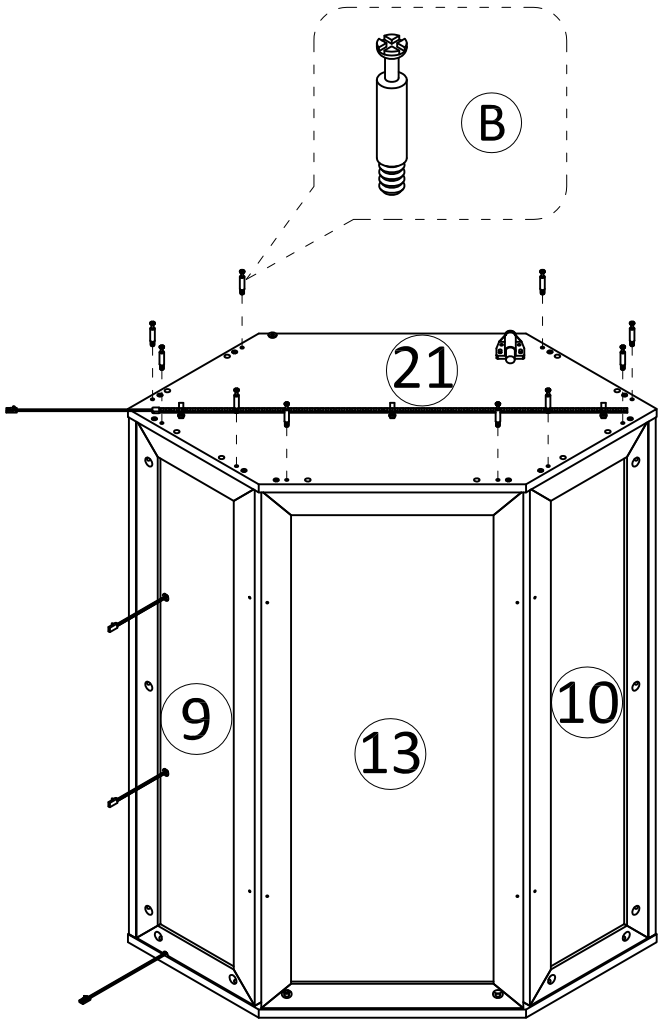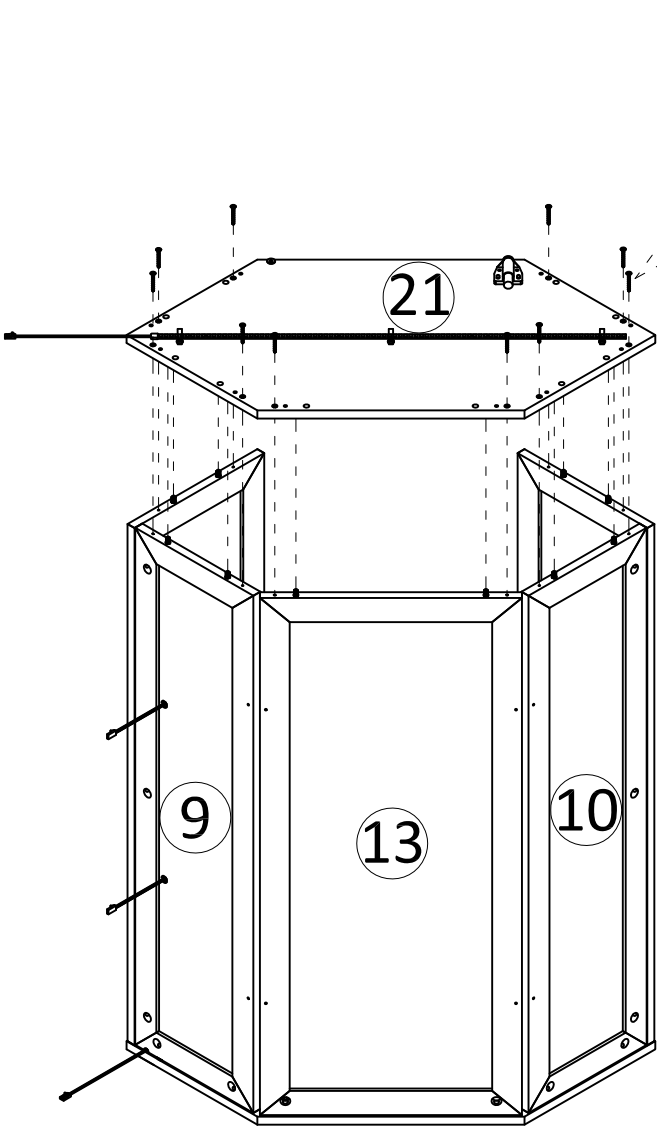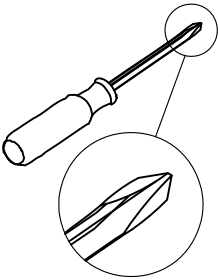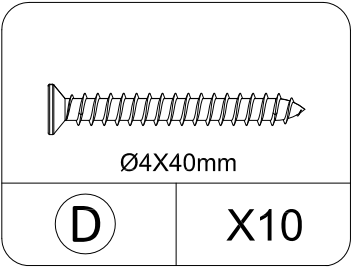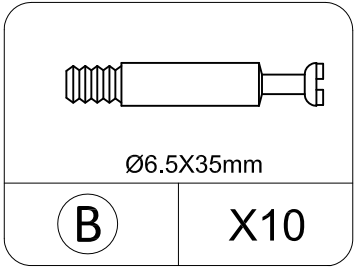


STEP11

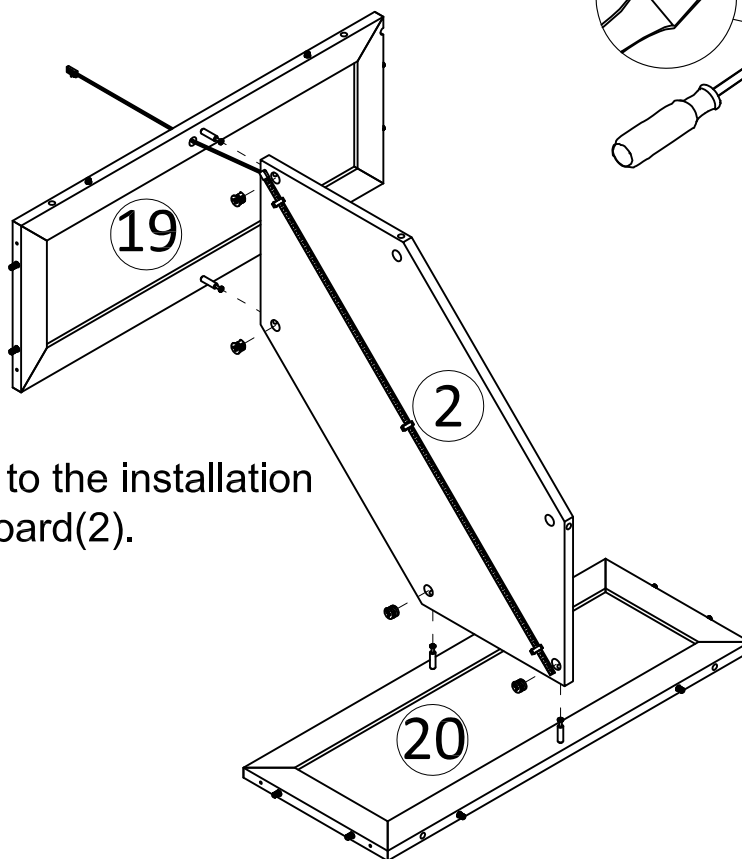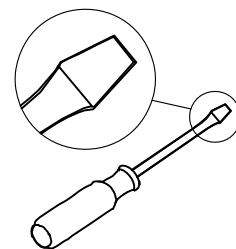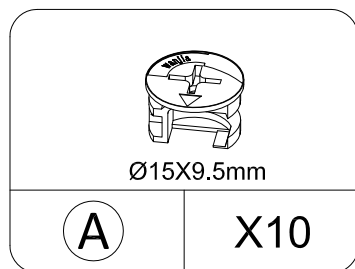

Pay attention to the installation direction of board(2).







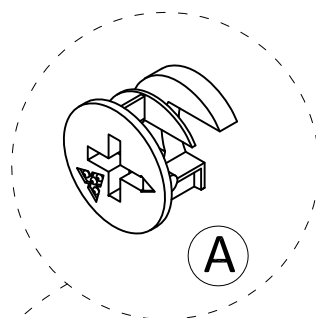
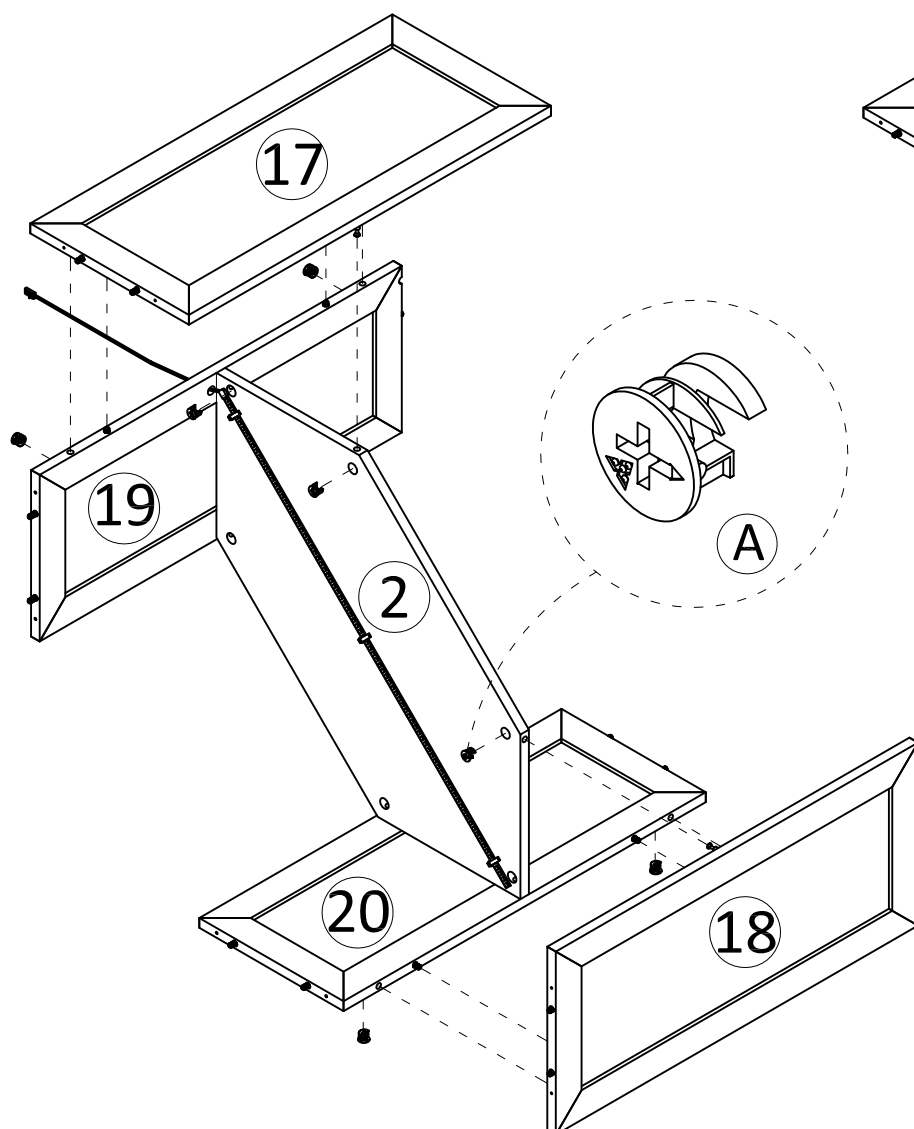


Insert the cam bolt into the hole first, then insert the cam lock and lock it.














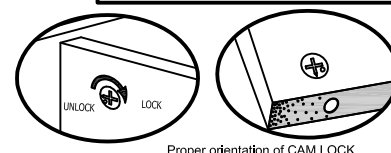


Proper orientation of CAM LOCK


STEP12

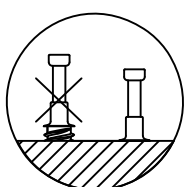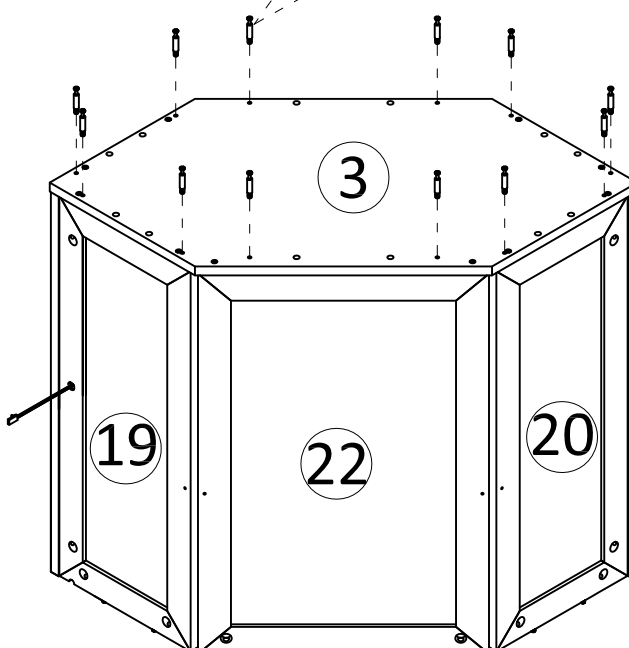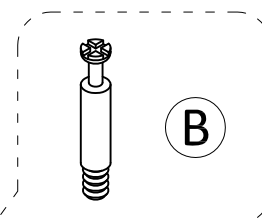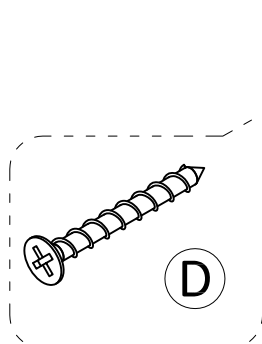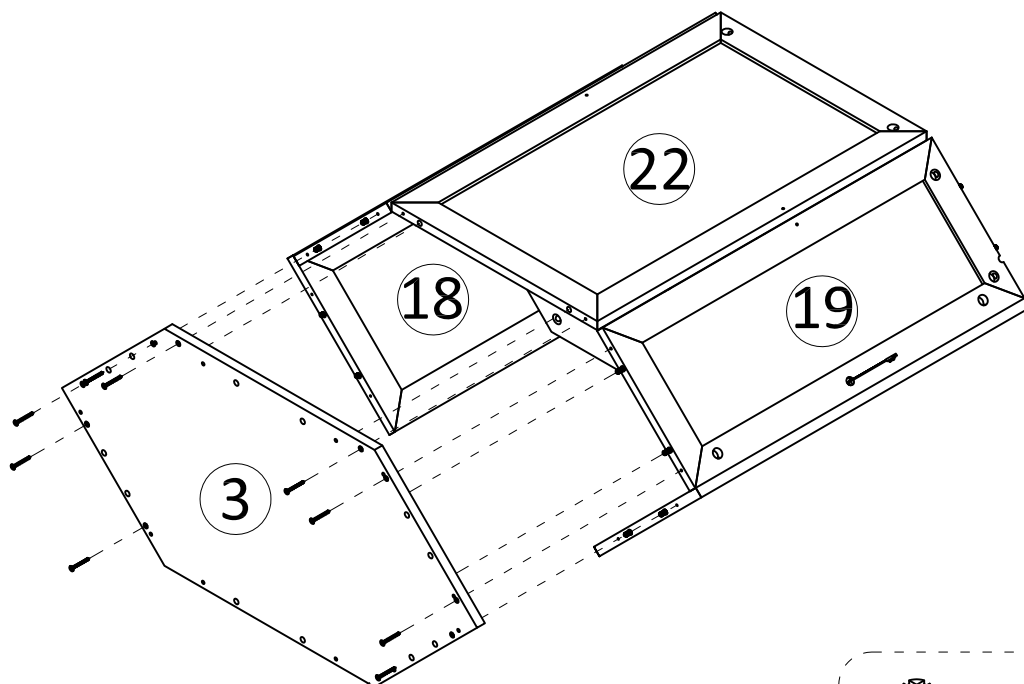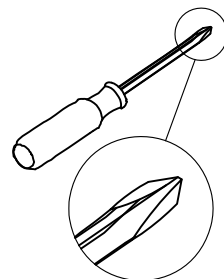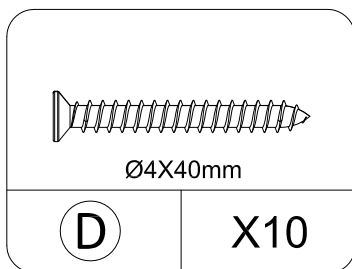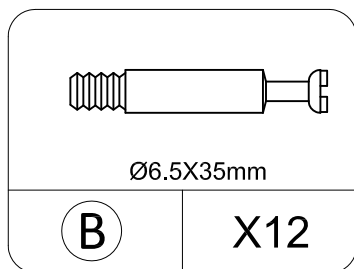



STEP13

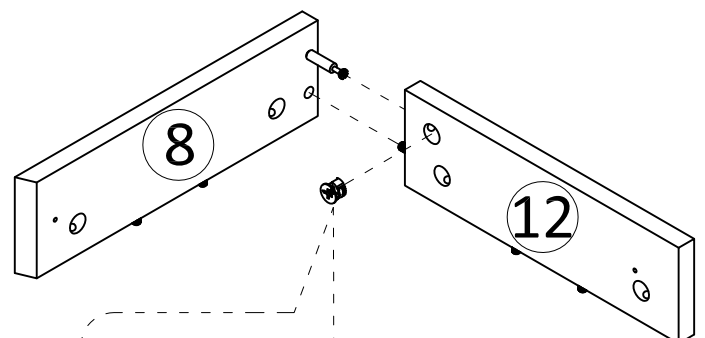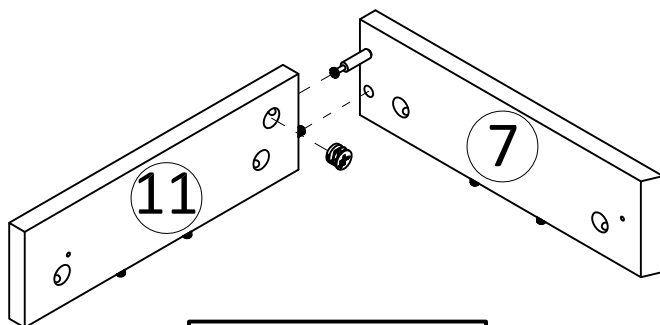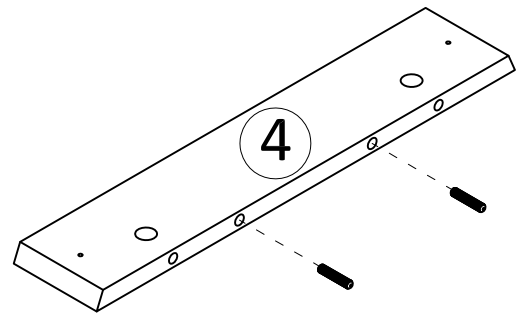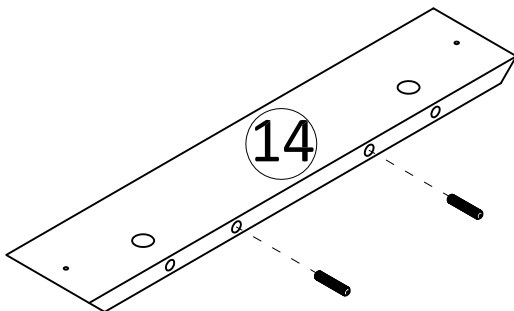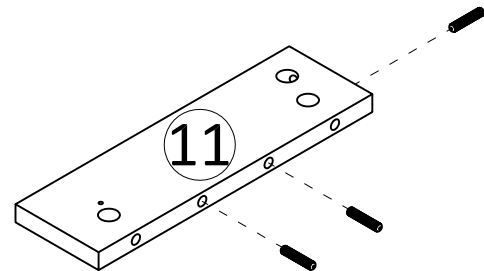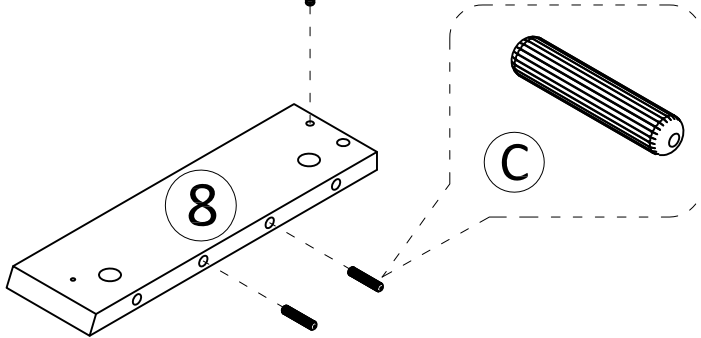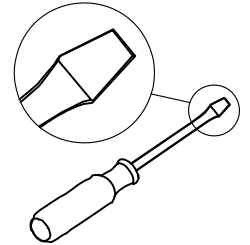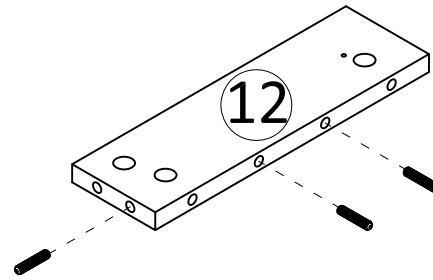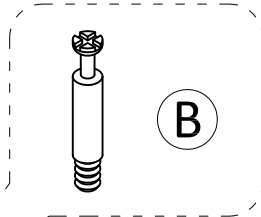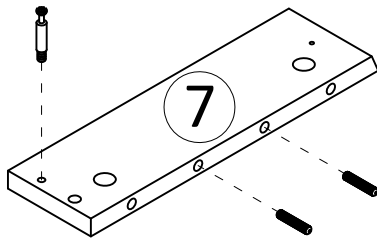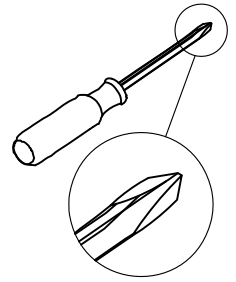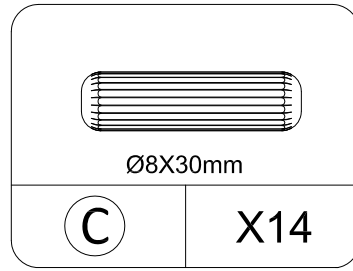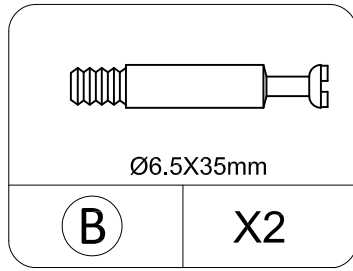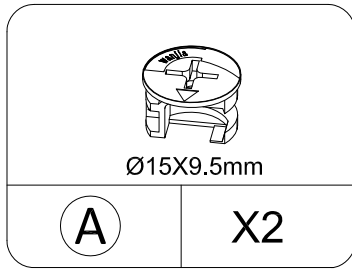





Insert the cam bolt into the hole first, then insert the cam lock and lock it.

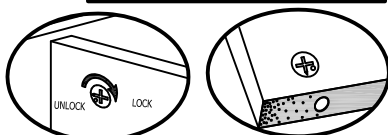


Proper orientation of CAM LOCK

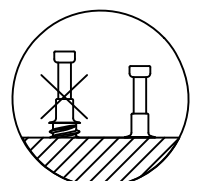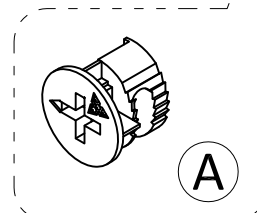

STEP14


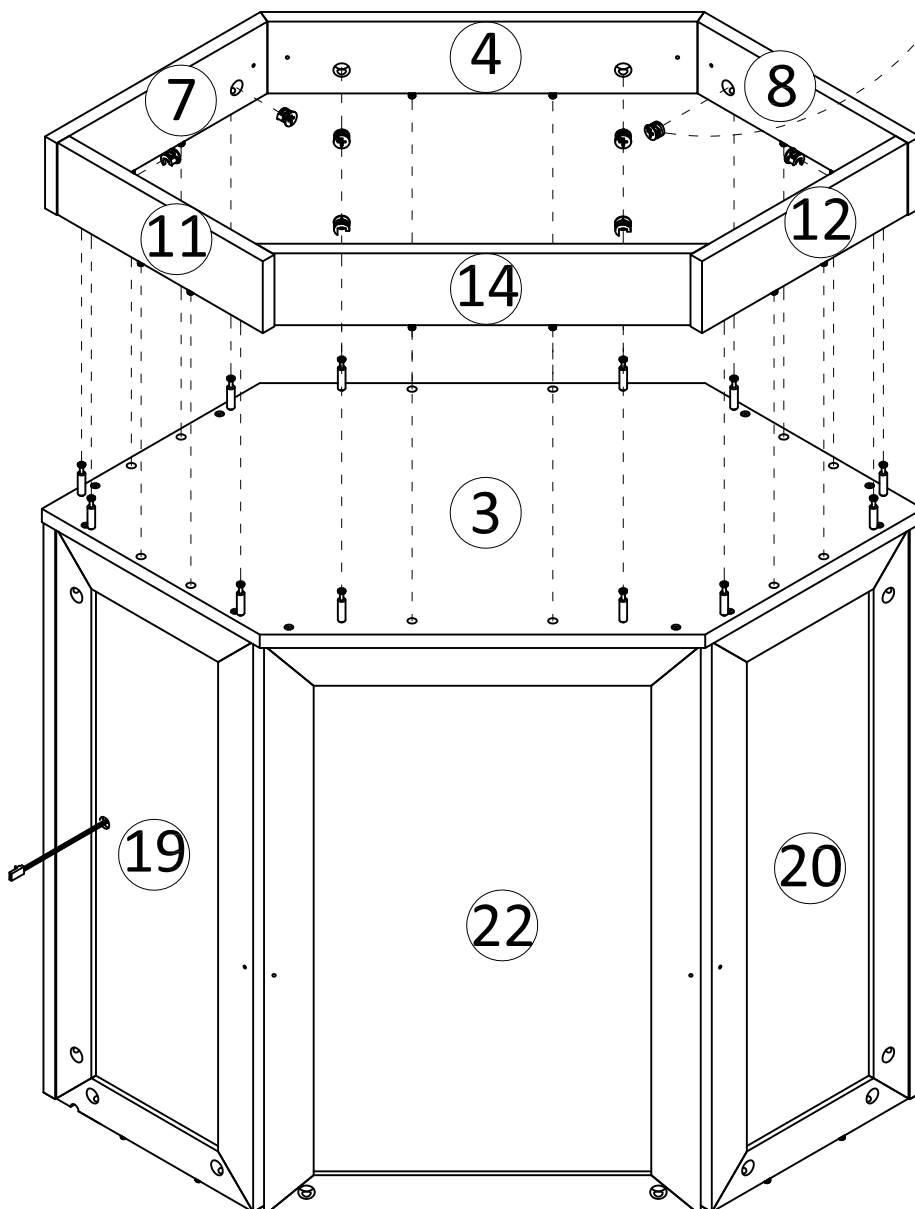
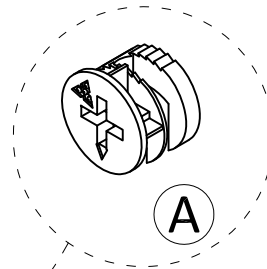
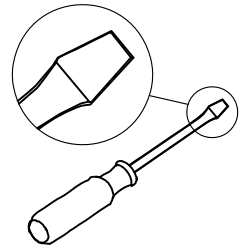
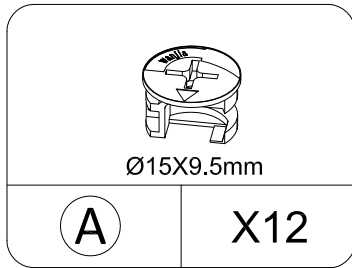


Insert the cam bolt into the hole first, then insert the cam lock and lock it.






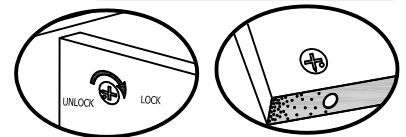


Proper orientation of CAM LOCK



STEP15

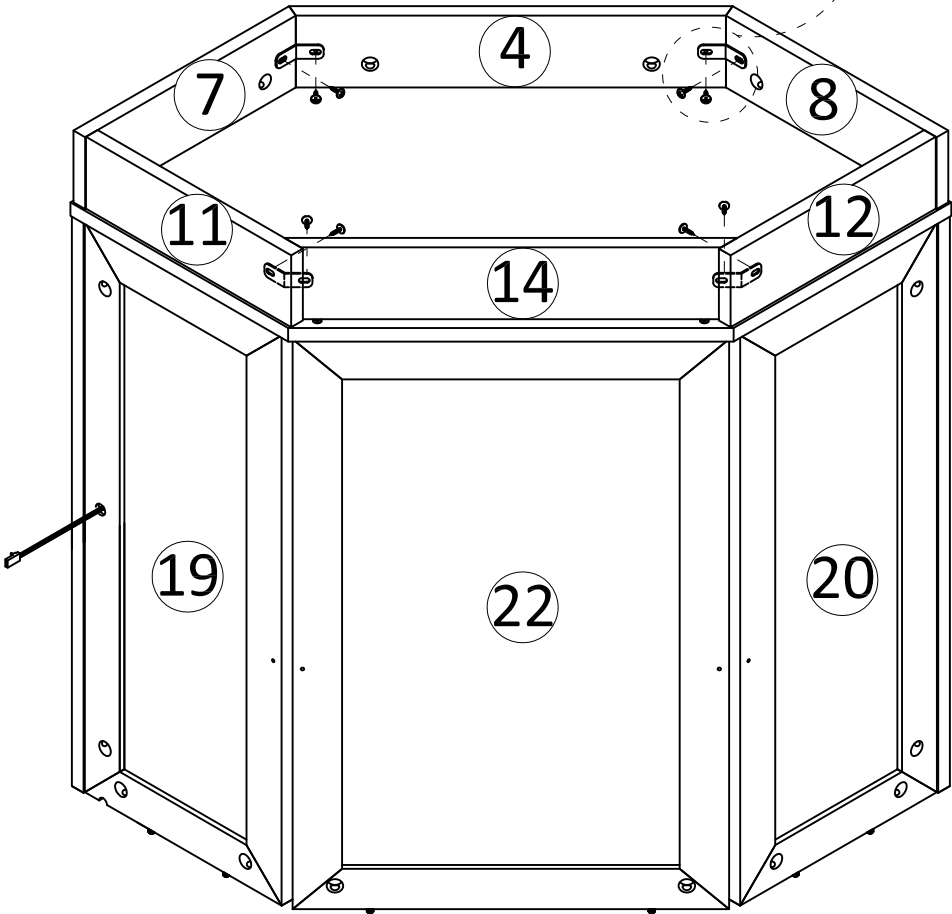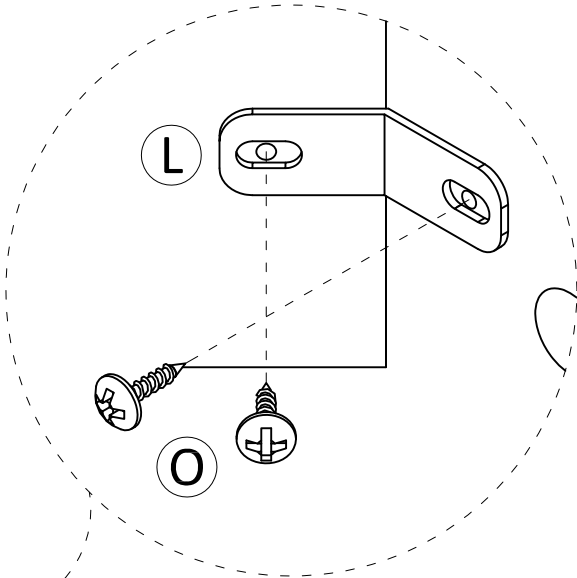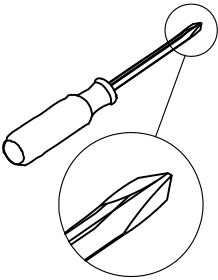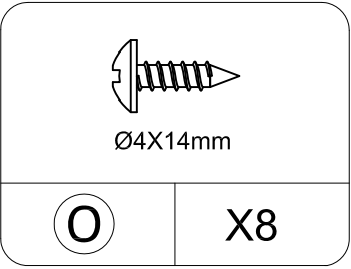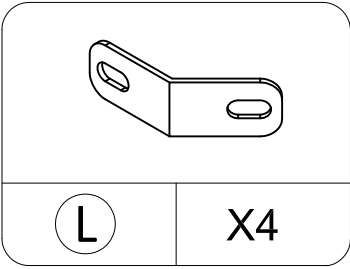


STEP16

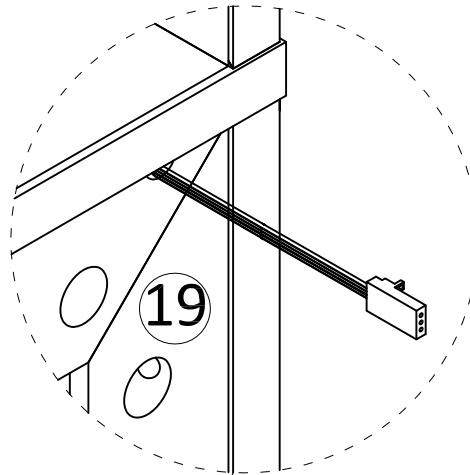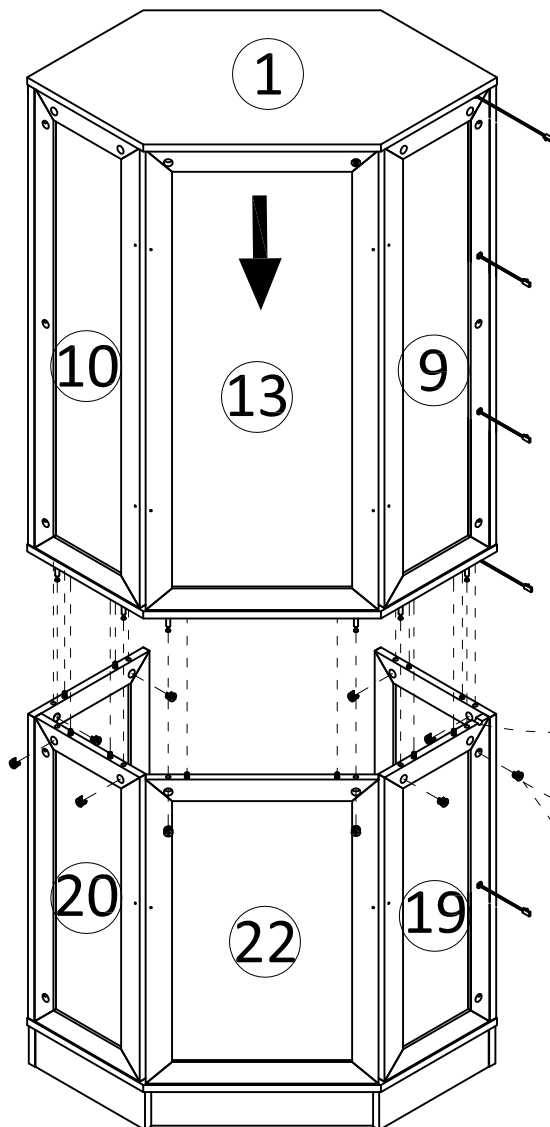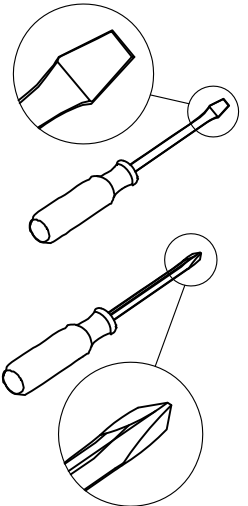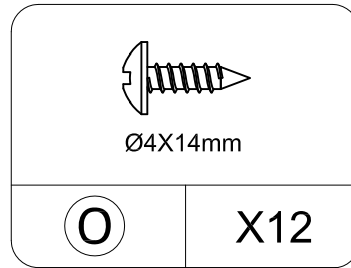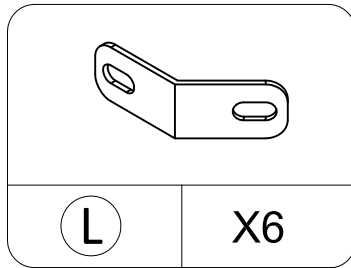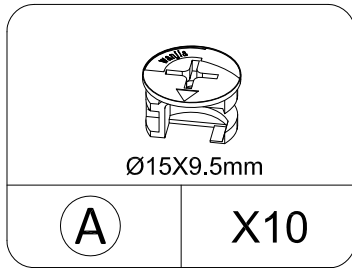

The thread comes out here.



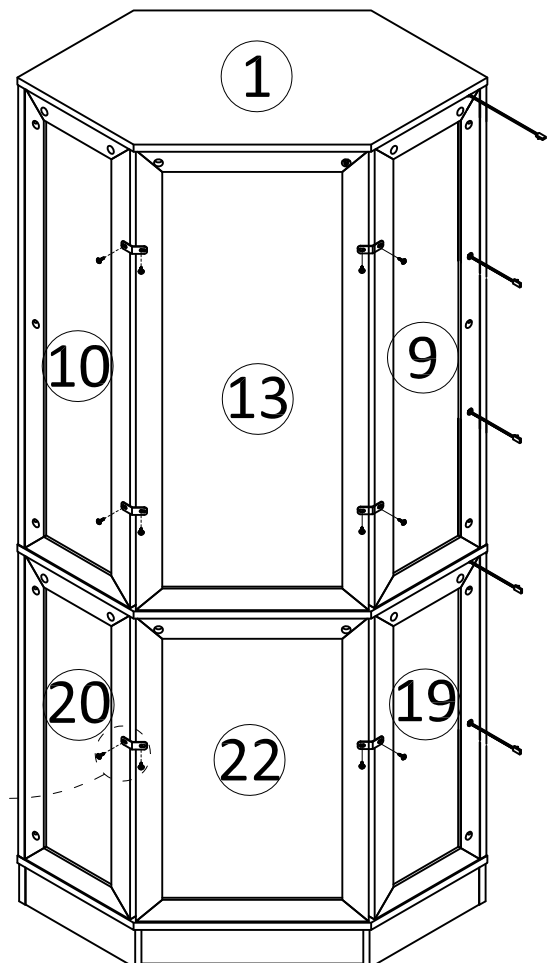
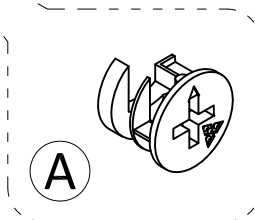


Insert the cam bolt into the hole first, then insert the cam lock and lock it.








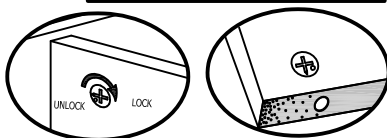


Proper orientation of CAM LOCK









STEP17

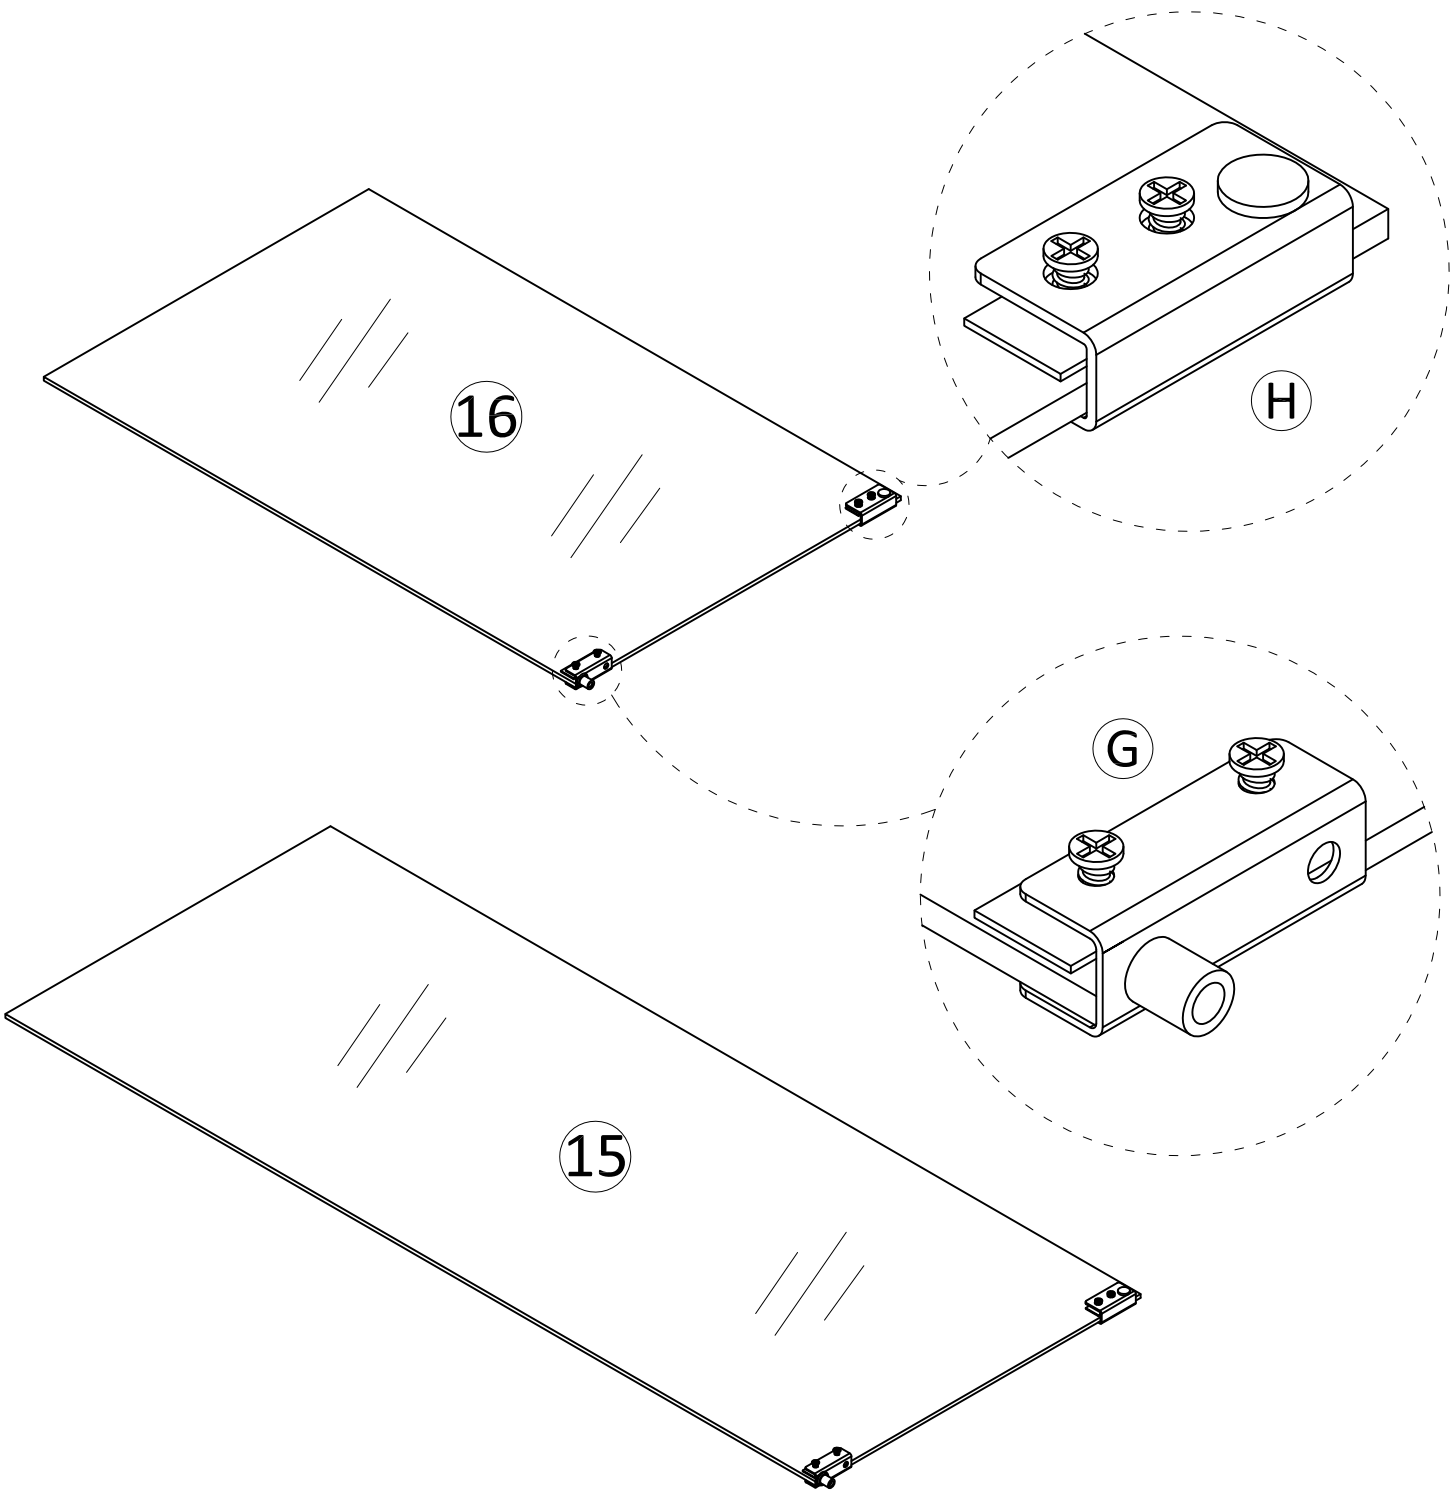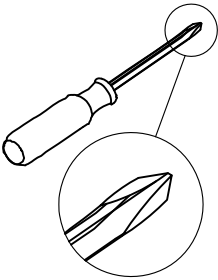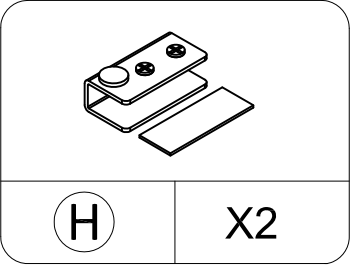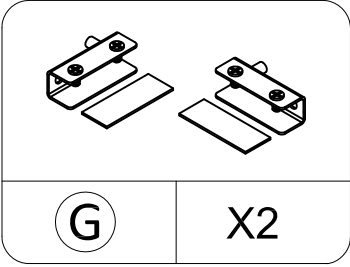






STEP18

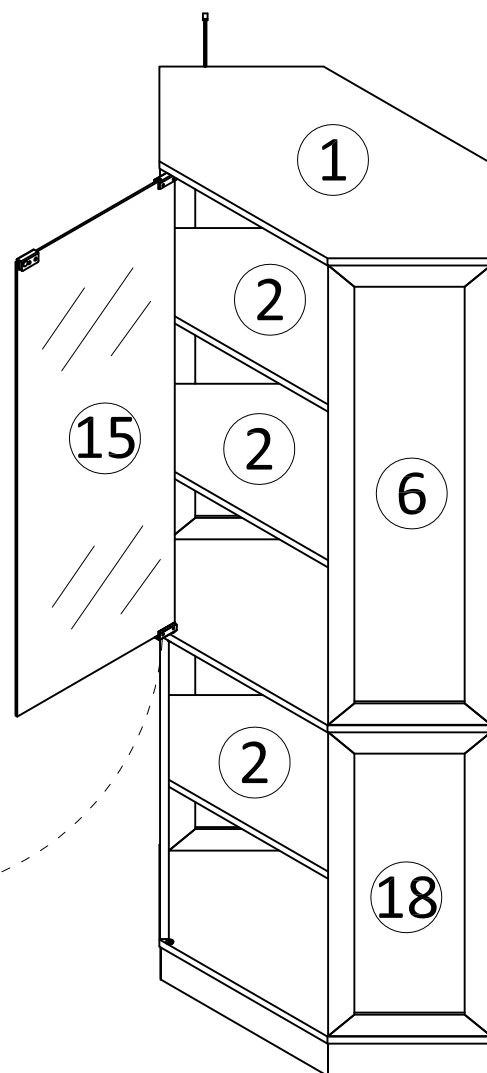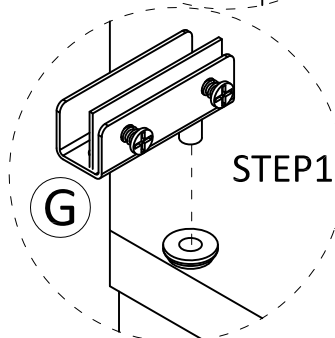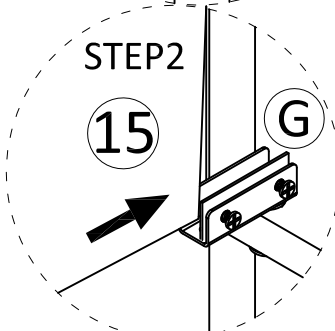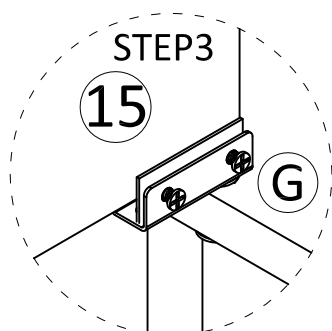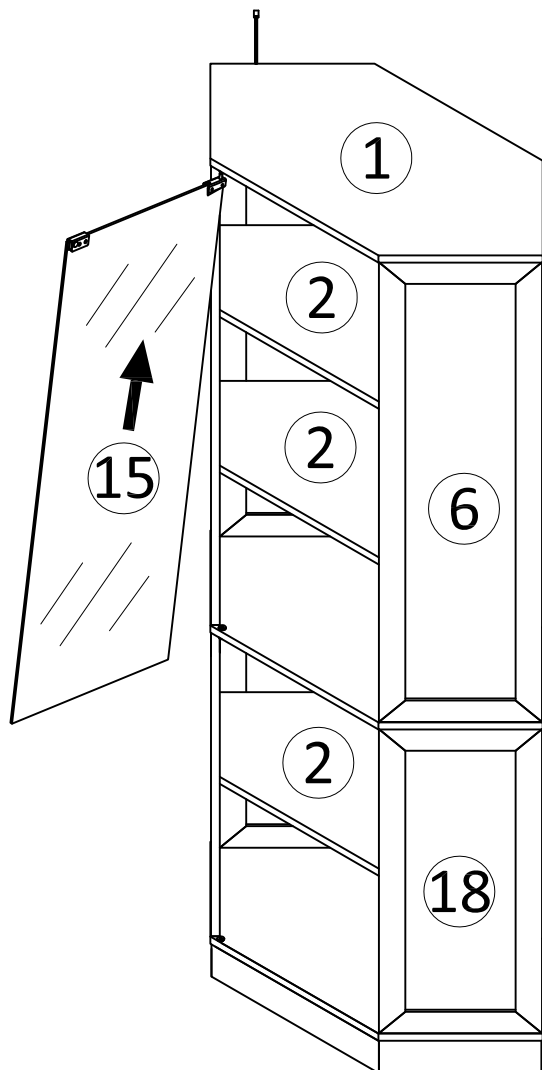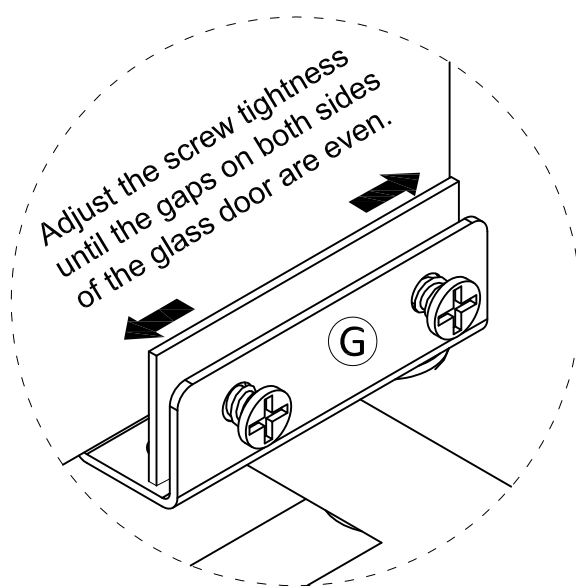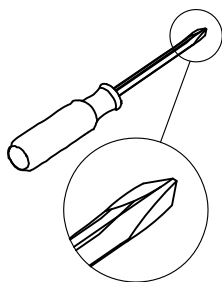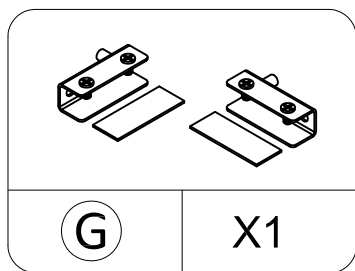


STEP19

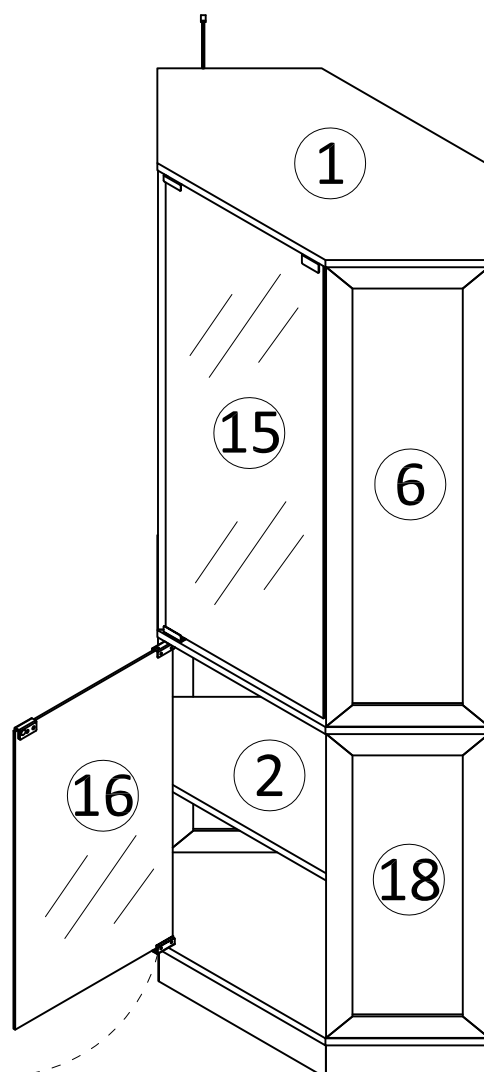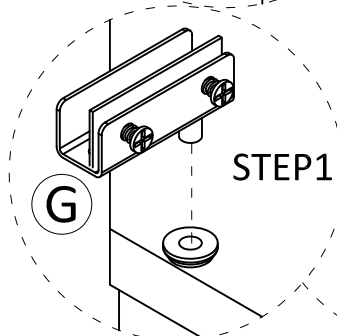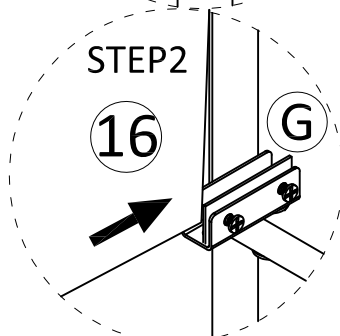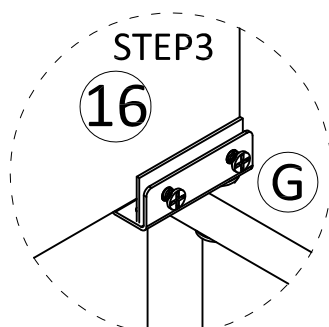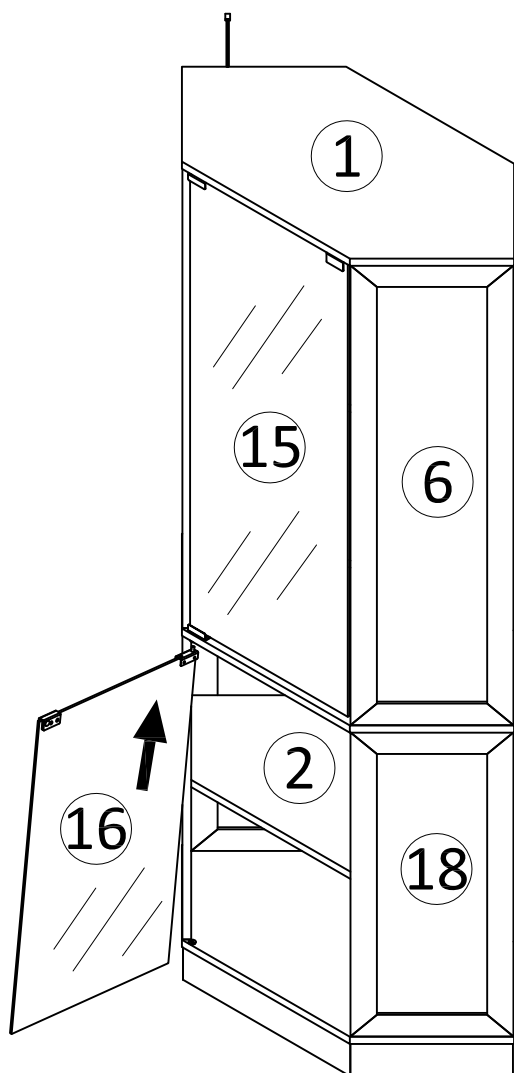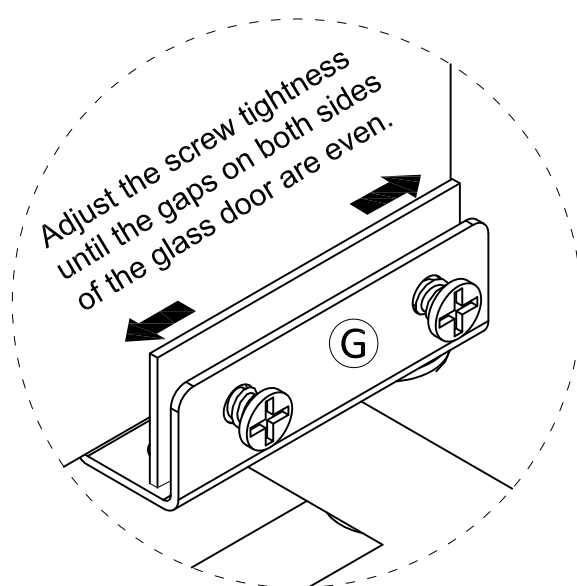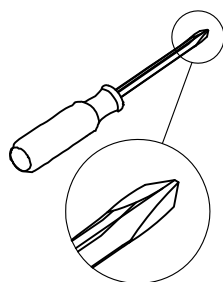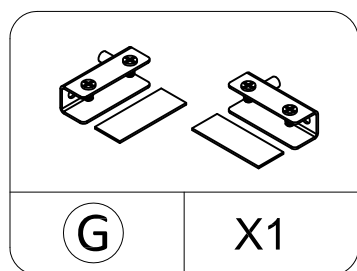

STEP20

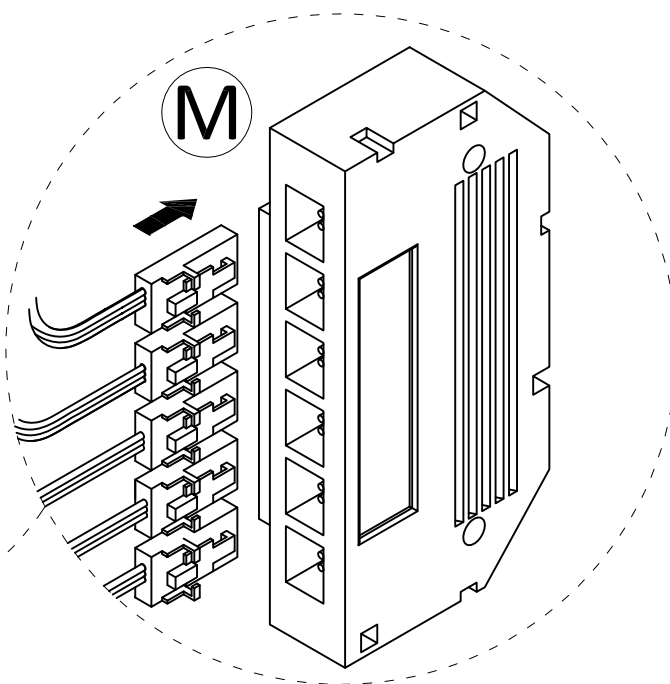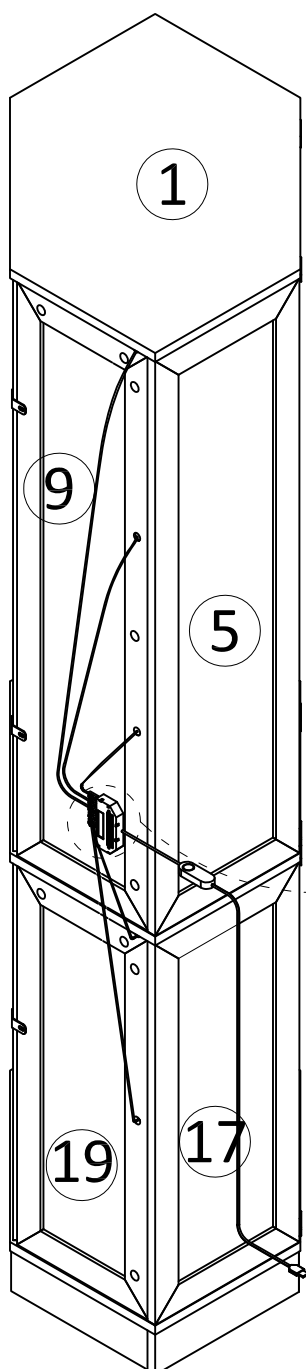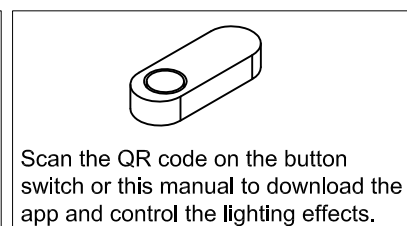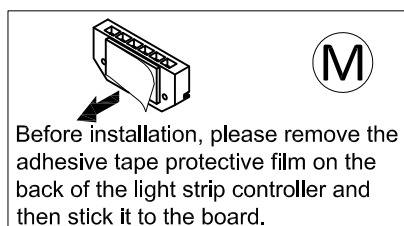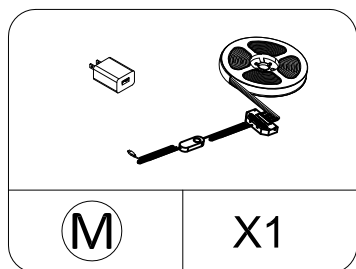

STEP21

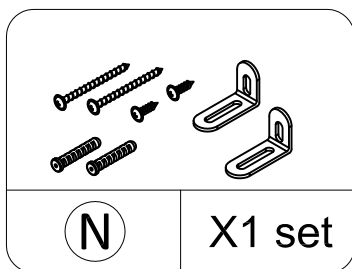


We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.




NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.

Install the tipping restraint hardware

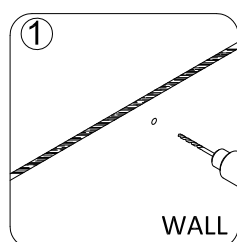

1.drill two Ø6 holes on the wall

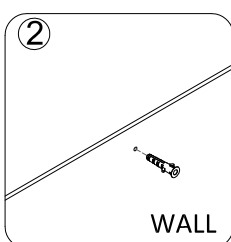

2.put two anchors in the holes

