





















ASSEMBLY INSTRUCTION

SKU NO. : LAELQR216
Console Table w/3 Drawers


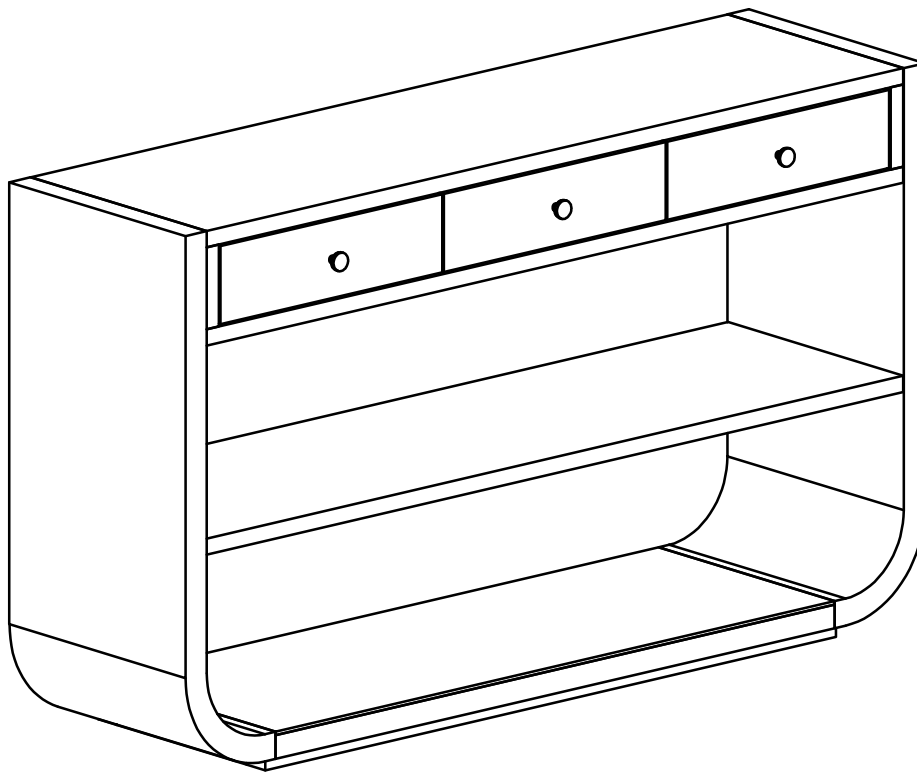


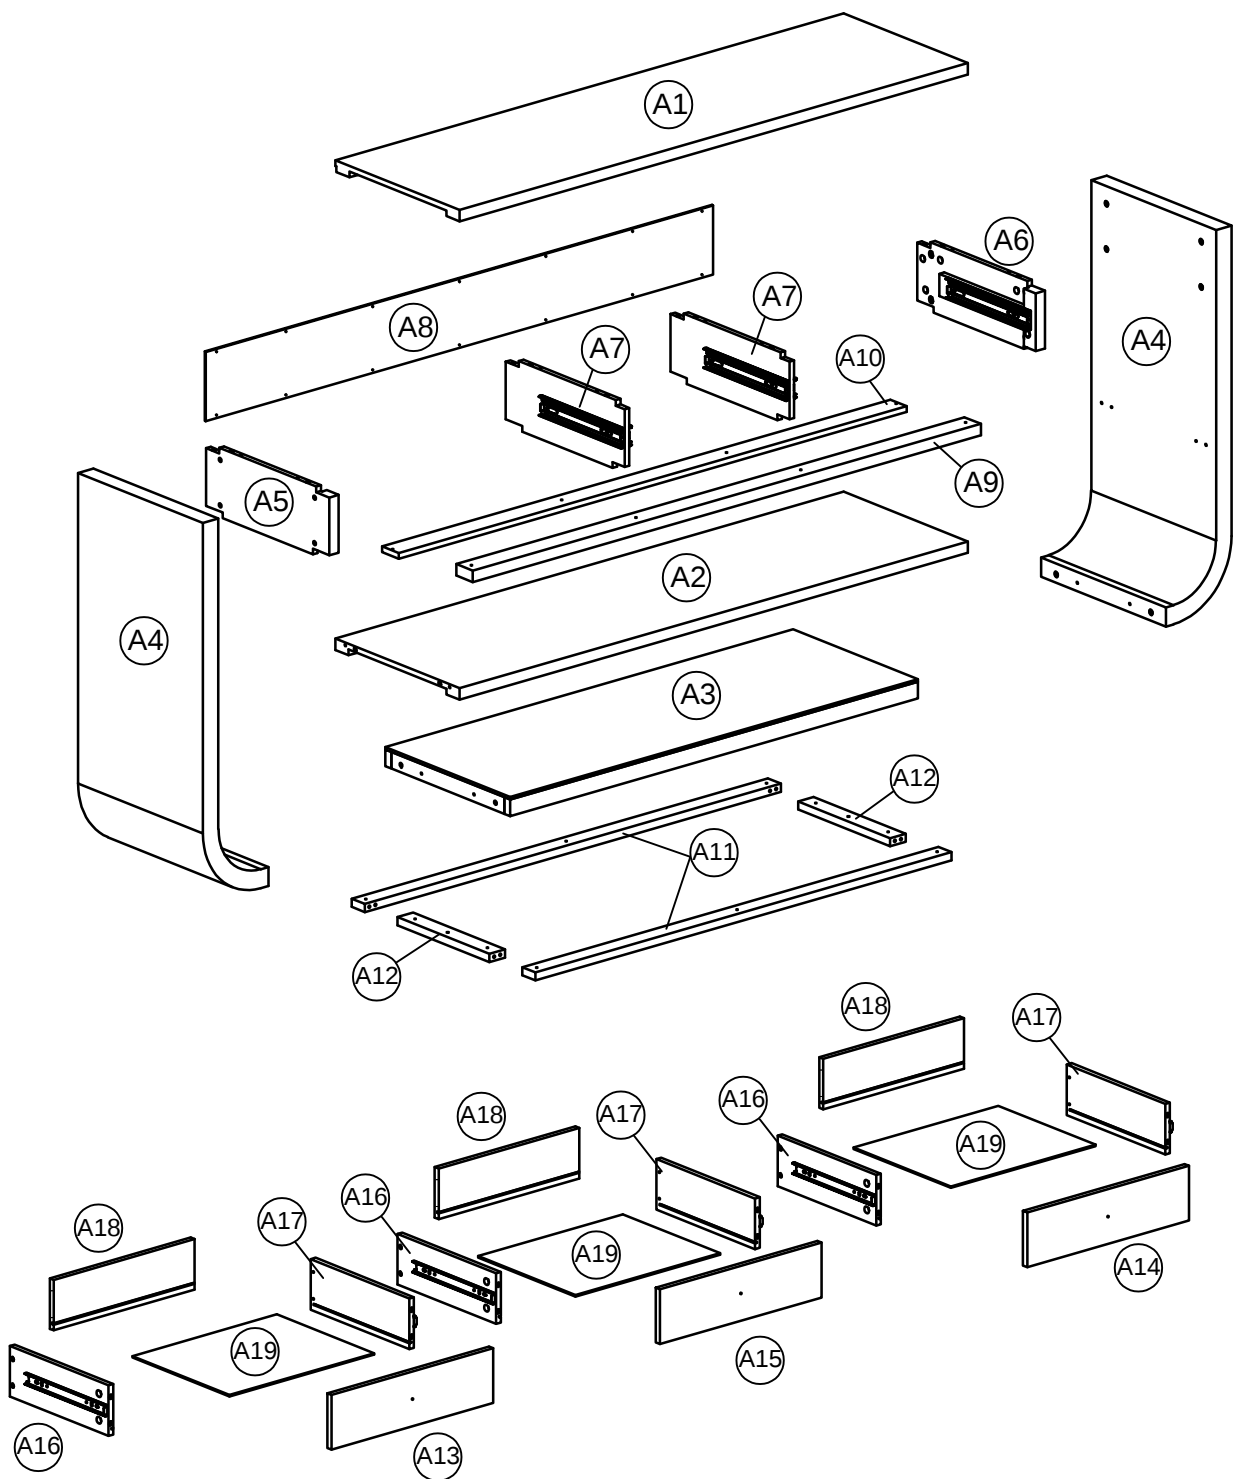


PART LIST

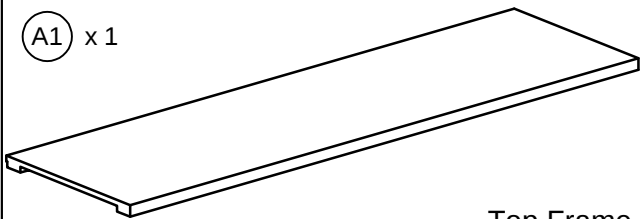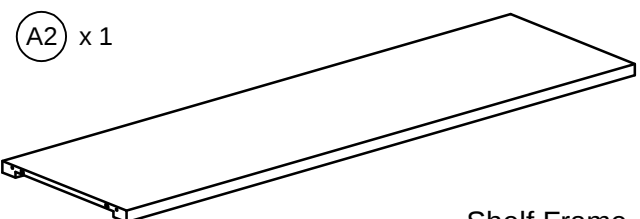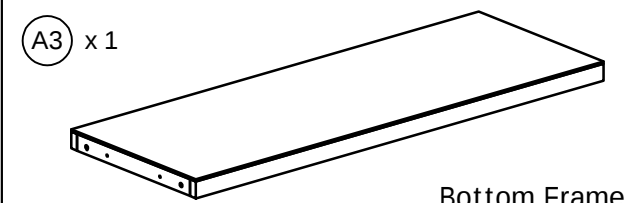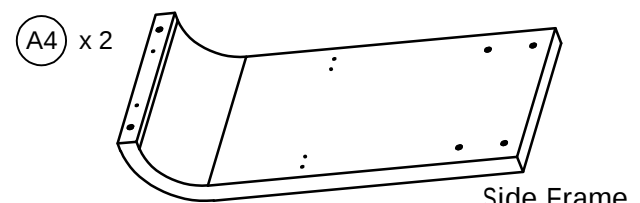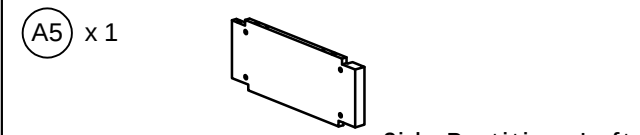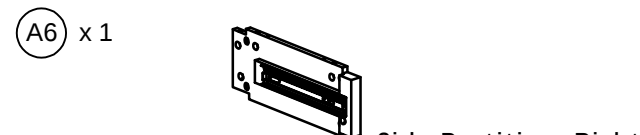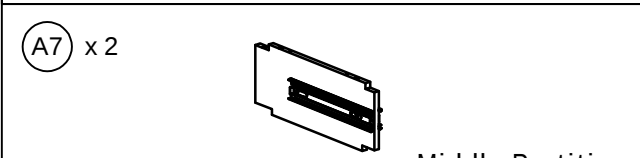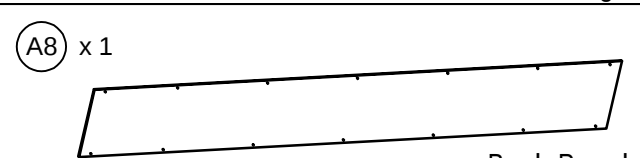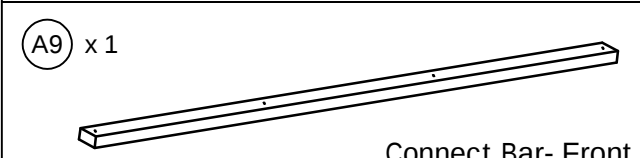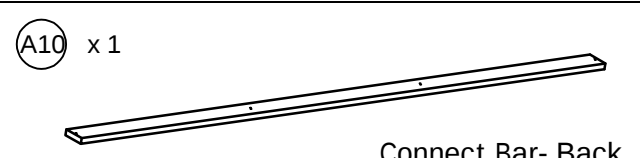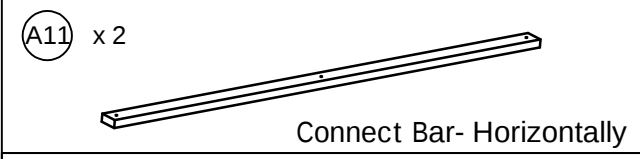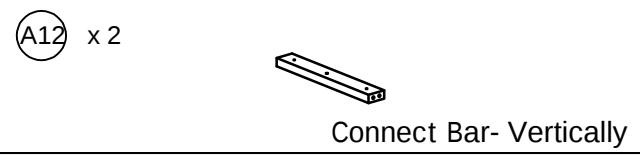(A1) x 1  Top Frame	(A2) x 1  Shelf Frame
(A3) x 1  Bottom Frame	(A4) x 2  Side Frame
(A5) x 1  Side Partition- Left	(A6) x 1  Side Partition- Right
(A7) x 2  Middle Partition	(A8) x 1  Back Panel
(A9) x 1  Connect Bar- Front	(A10) x 1  Connect Bar- Back
(A11) x 2  Connect Bar- Horizontally	(A12) x 2  Connect Bar- Vertically
(A13) x 1  L-Front Panel- Drawer	(A14) x 1  R-Front Panel- Drawer
(A15) x 1  M-Front Panel- Drawer	(A16) x 3  L- Side Panel- Drawer
(A17) x 3  R- Side Panel- Drawer	(A18) x 3  Back Panel- Drawer
(A19) x 3  Bottom Panel- Drawer	

HARDWARE LIST

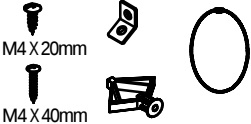
A  M4x30mm Wood Screw 11pcs	B  M4x25mm Wood Screw 13pcs	C  M3x15mm Wood Screw 15pcs
D  Ø15x9mm Cam Head 37pcs	E  Ø6x35mm Cam Bridge 37pcs	F  Ø6 x 30 mm Wood dowel 27pcs
G  M6 x 35 mm Bolt 13pcs	H  Ø16/Ø6 mm Flat Washer 5pcs	I  Allen key 1pcs
J  Wood Handle 3pcs	K  M4 x 20 mm Bolt 4pcs	L  M4 x 20mm M4 x 40mm Anti-tip 2 set

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



STEP 1: Following below illustration


-Using hardware #E assembly into A1, A4, A9 and A10

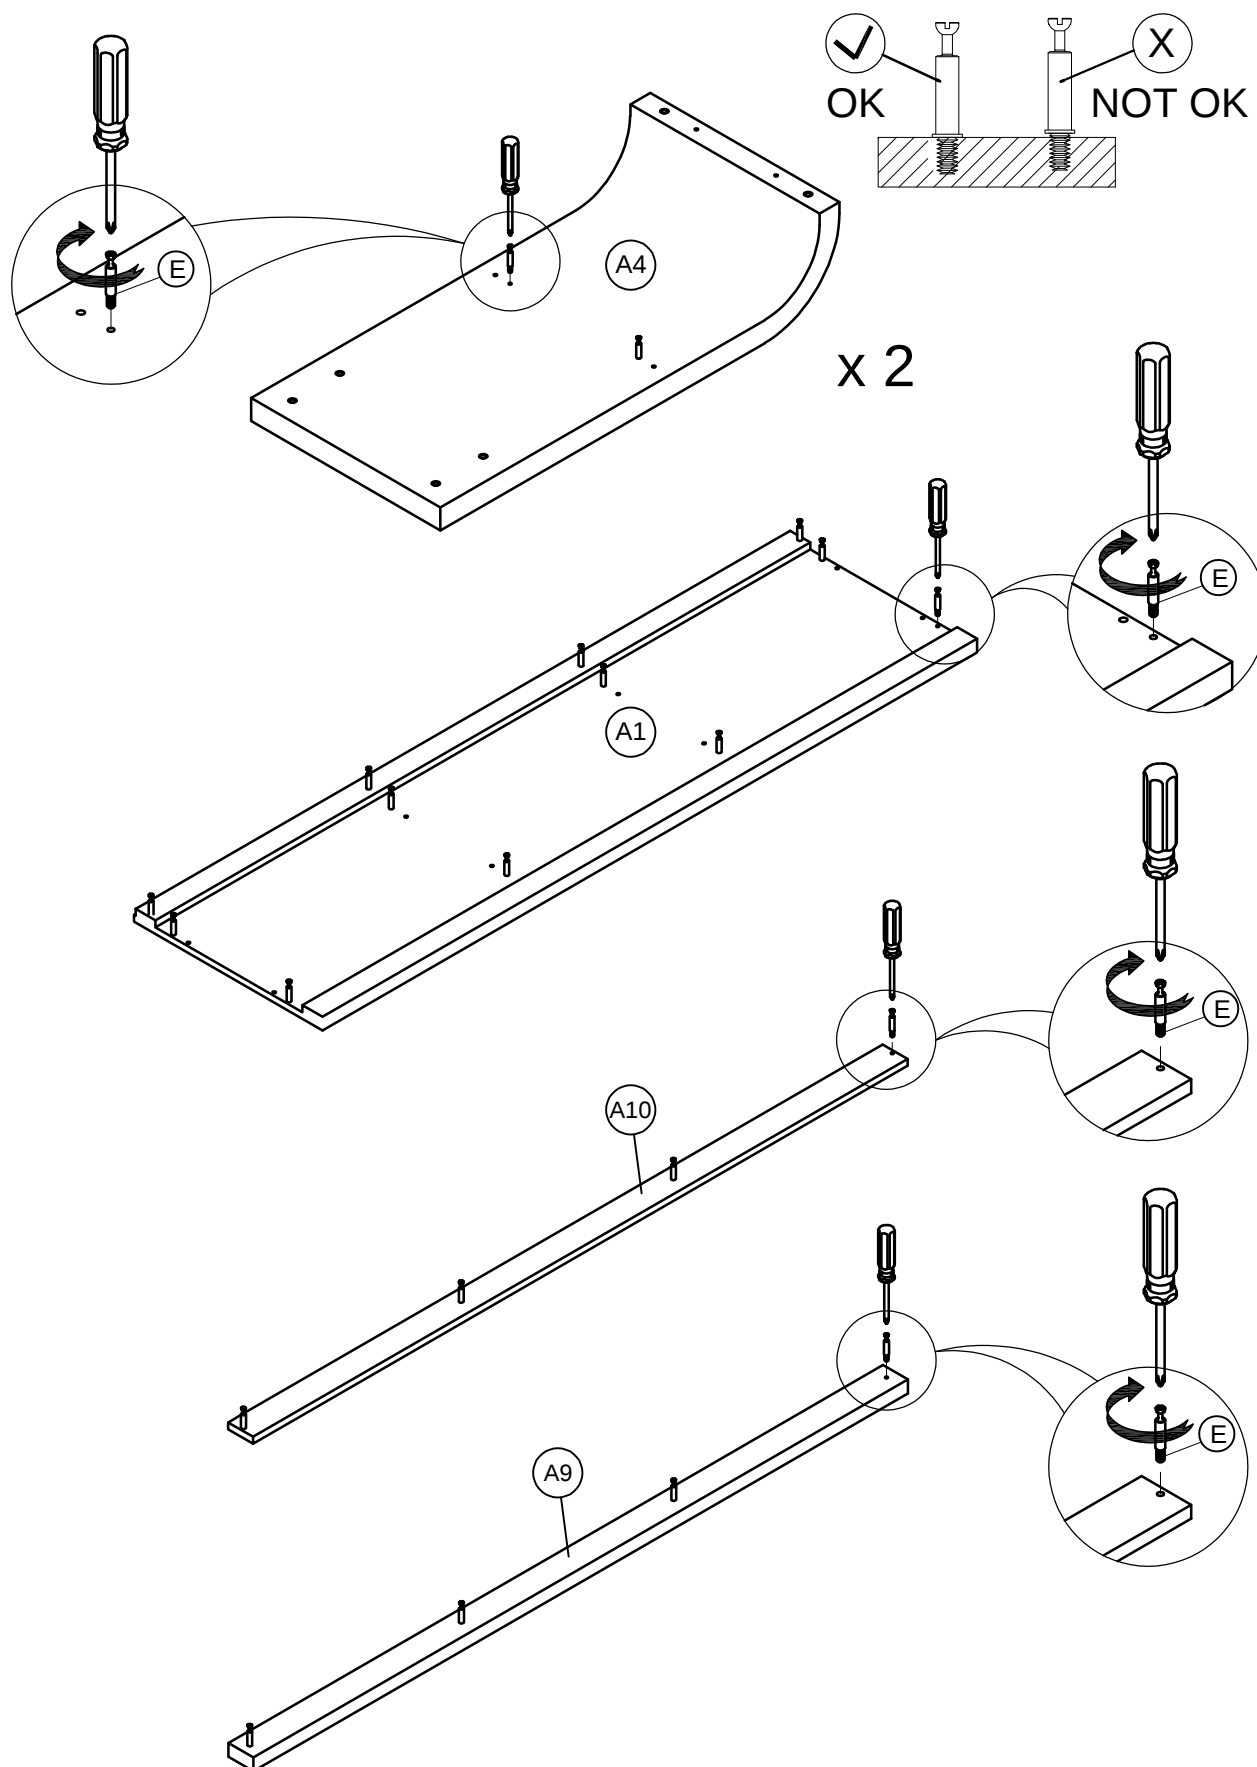

STEP 2: Following below illustration

-Using hardware #G connect A6 with A4 assembly step 1


G		4
I		1

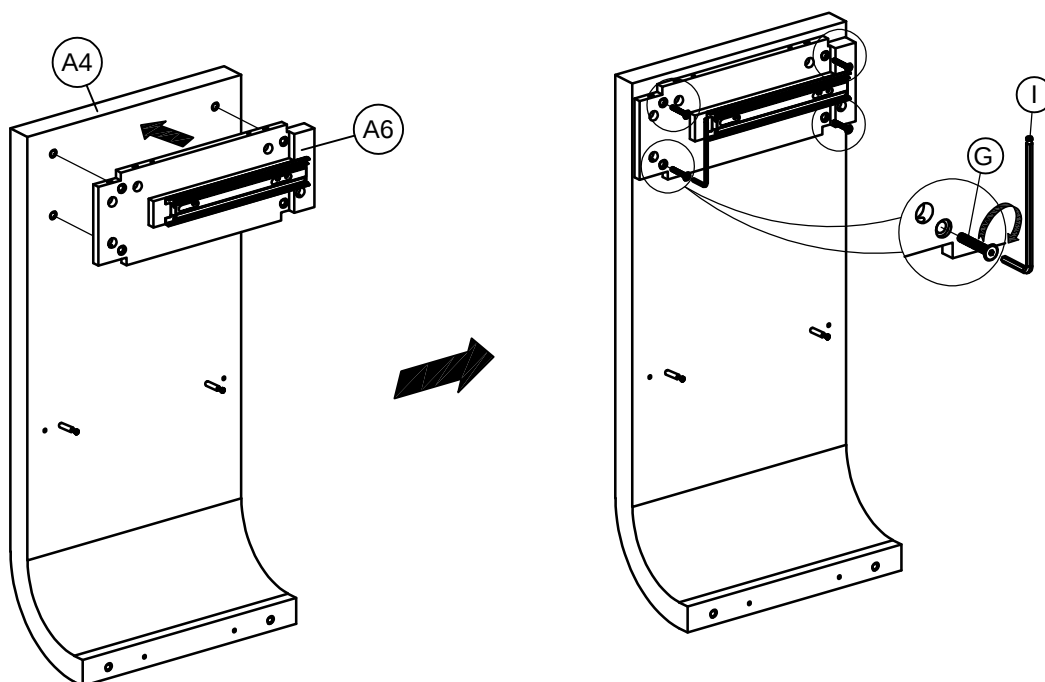

STEP 3: Following below illustration

-Using hardware #G connect A5 with A4 assembly step 1


G		4
I		1

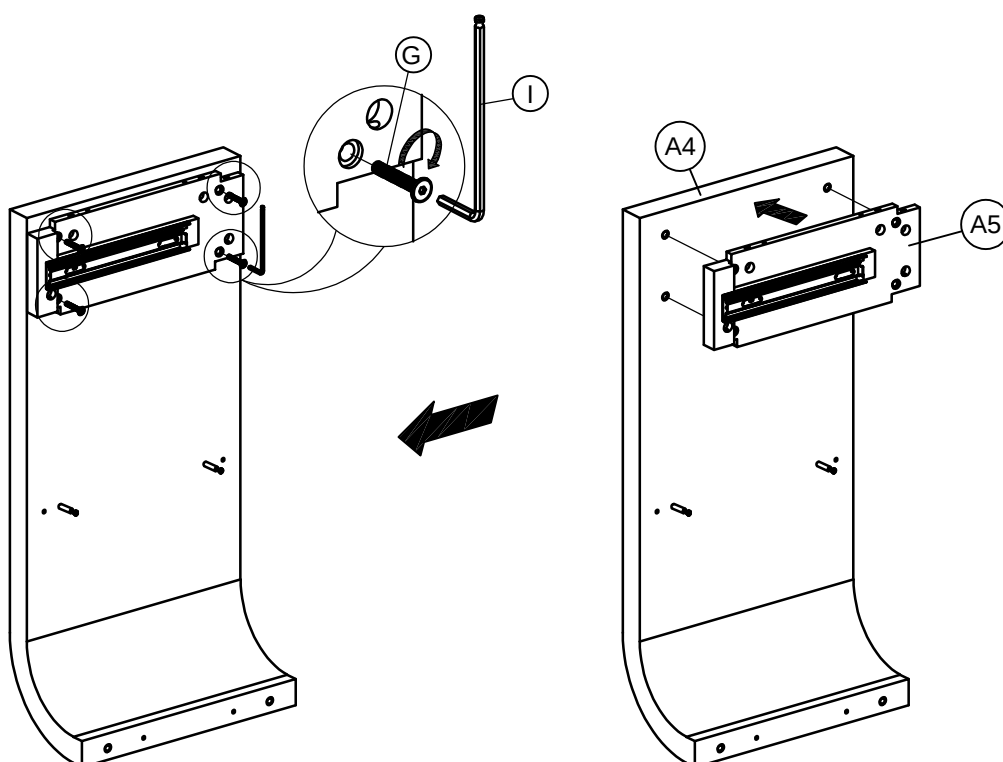

STEP 4: Following below illustration

-Using hardware #A and #F connect A3 with A12


A		4
F		2

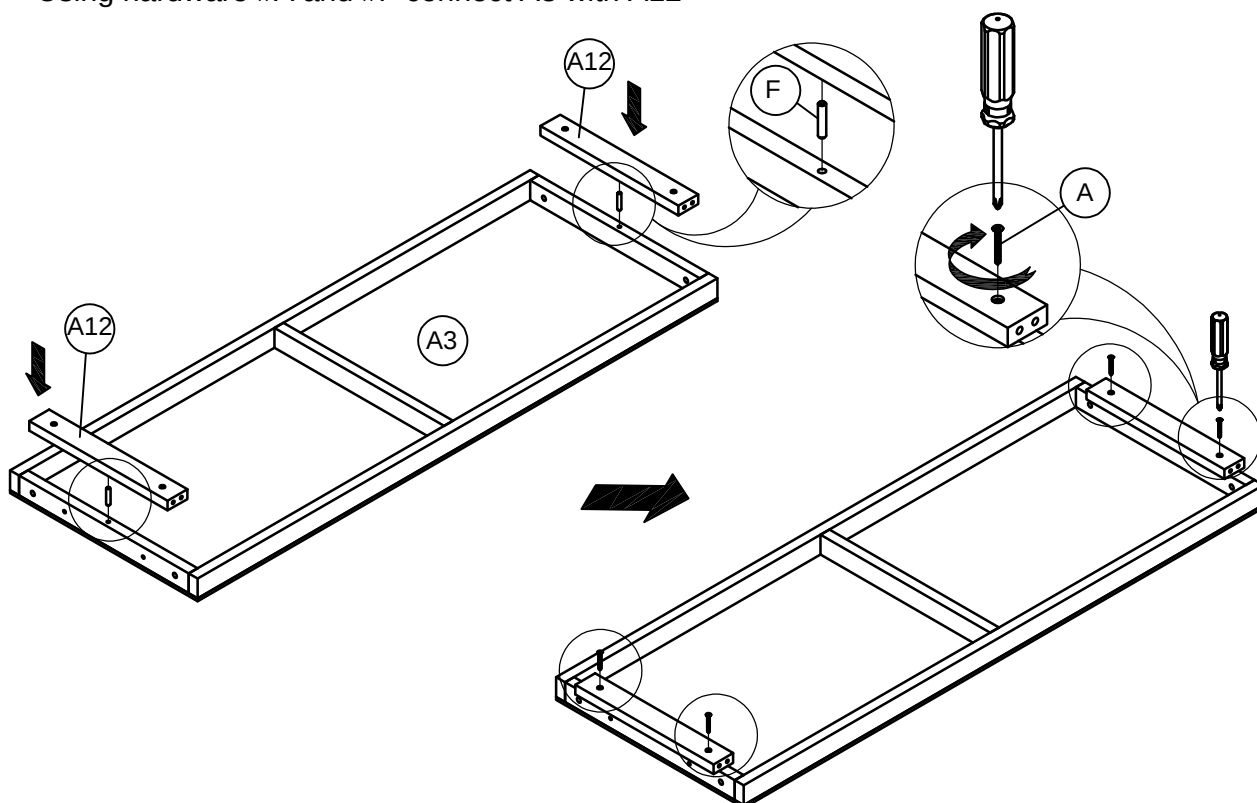

STEP 5: Following below illustration

-Using hardware #A and #F connect A11 with A12 assembly step 4


A		6
F		8

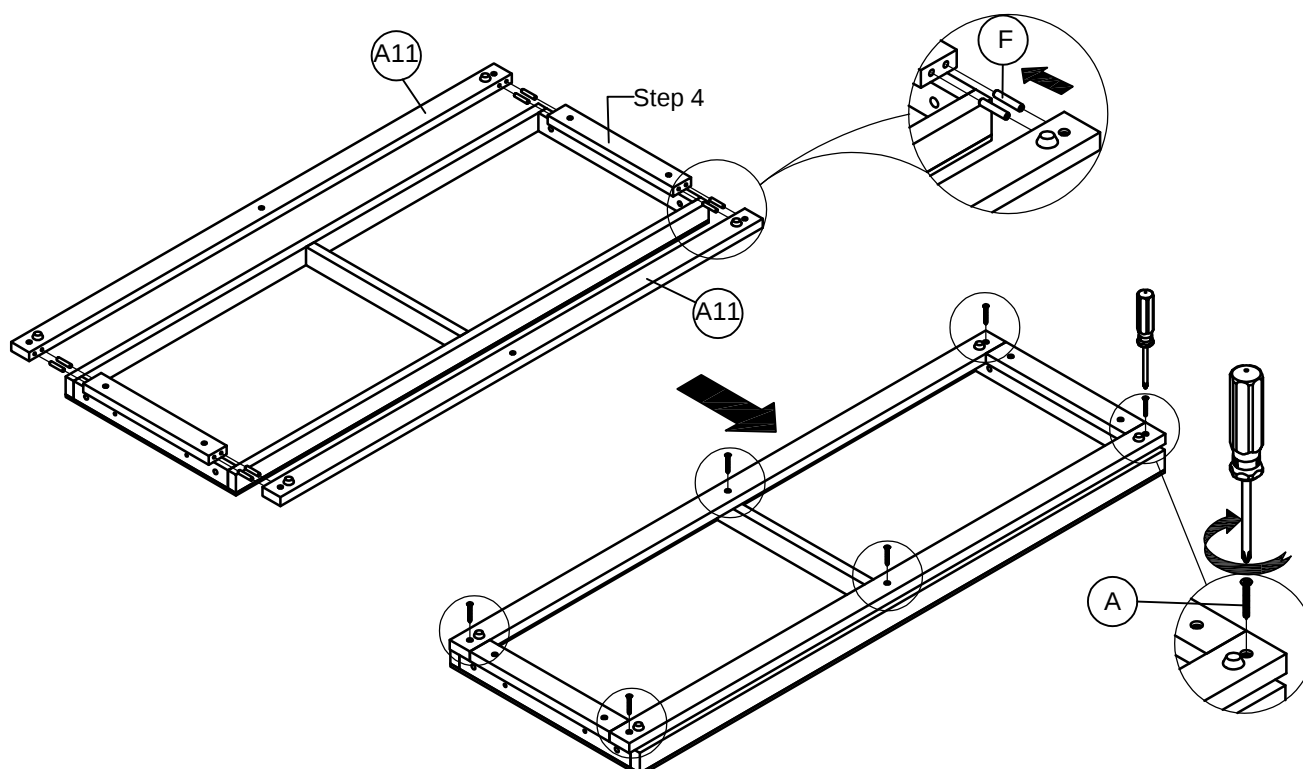

STEP 6: Following below illustration

-Using hardware #D, #F, #G and #H connect step 2 and step 3 with A2 and step 5

D		4
F		8
G		4
H		4
I		1

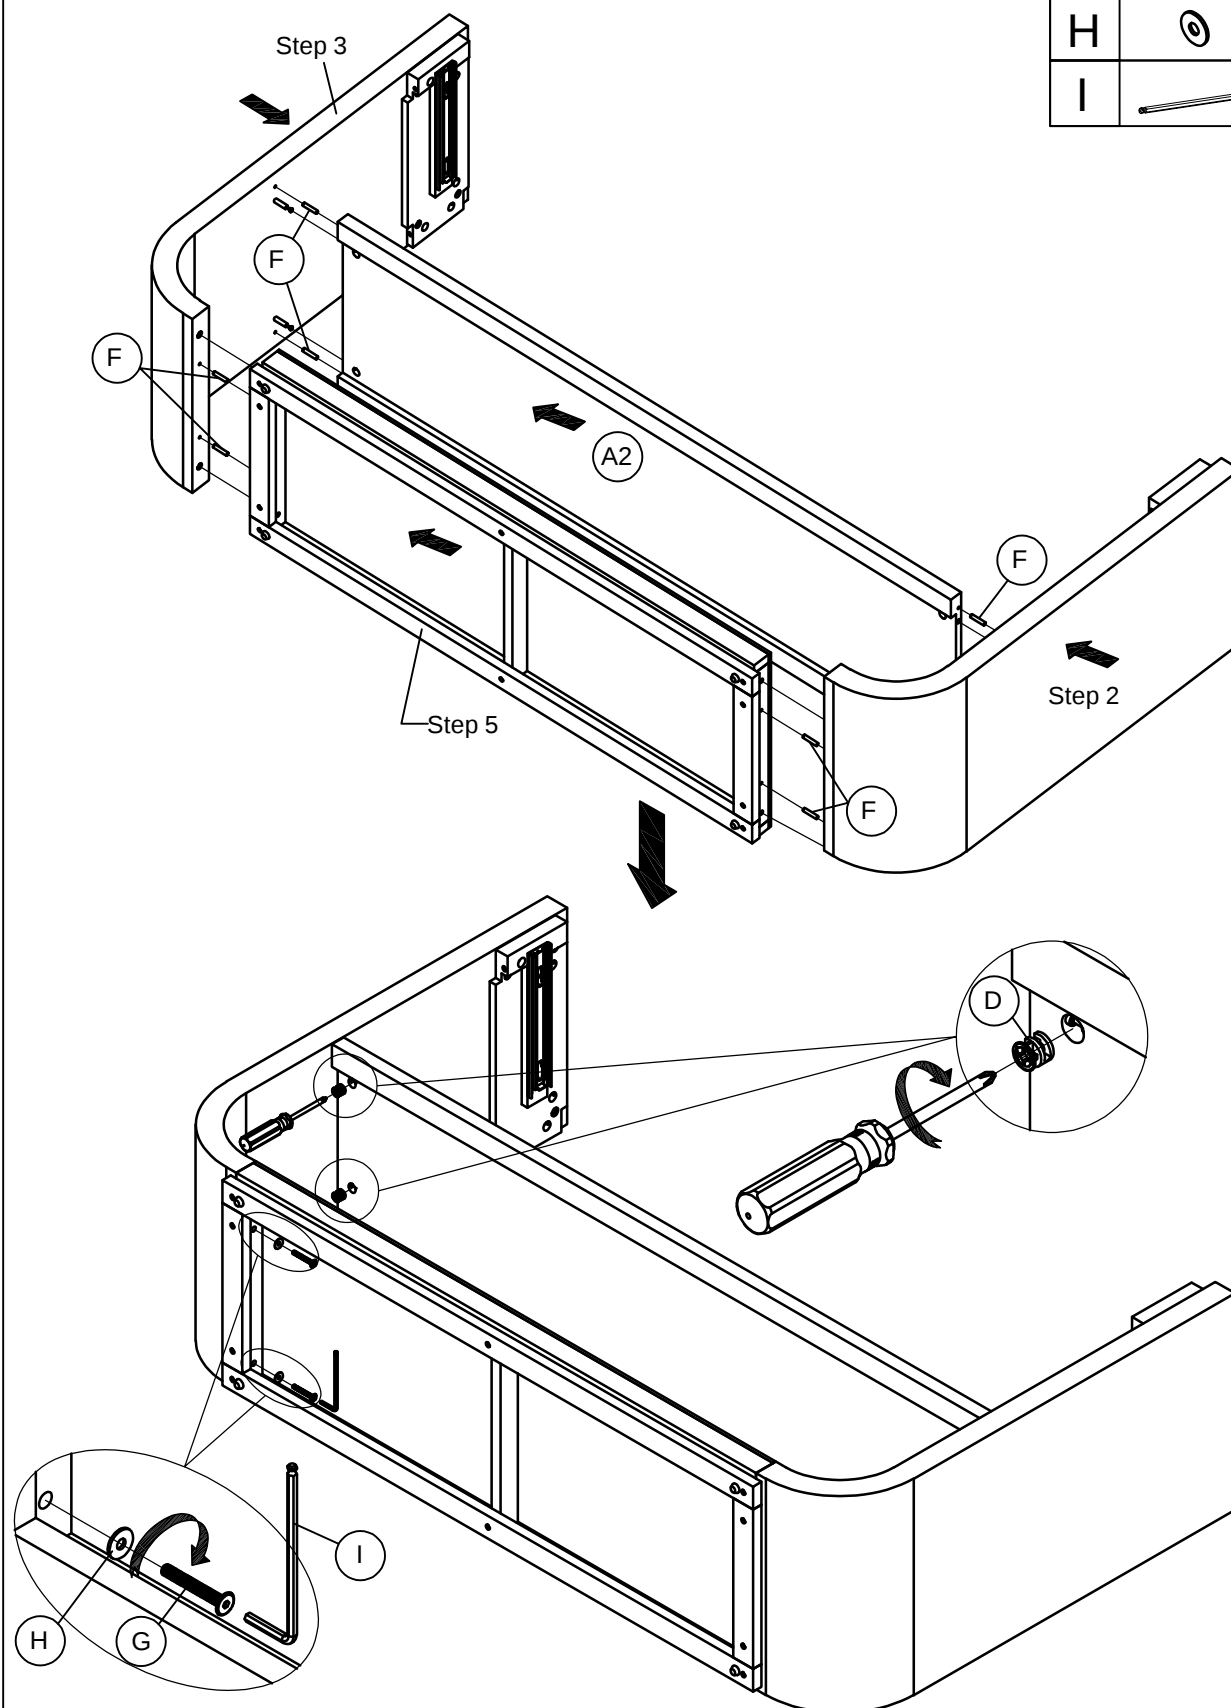


D



4

STEP 7: Following below illustration

-Using hardware #D connect A9, and A10 with A4 assembly step 6

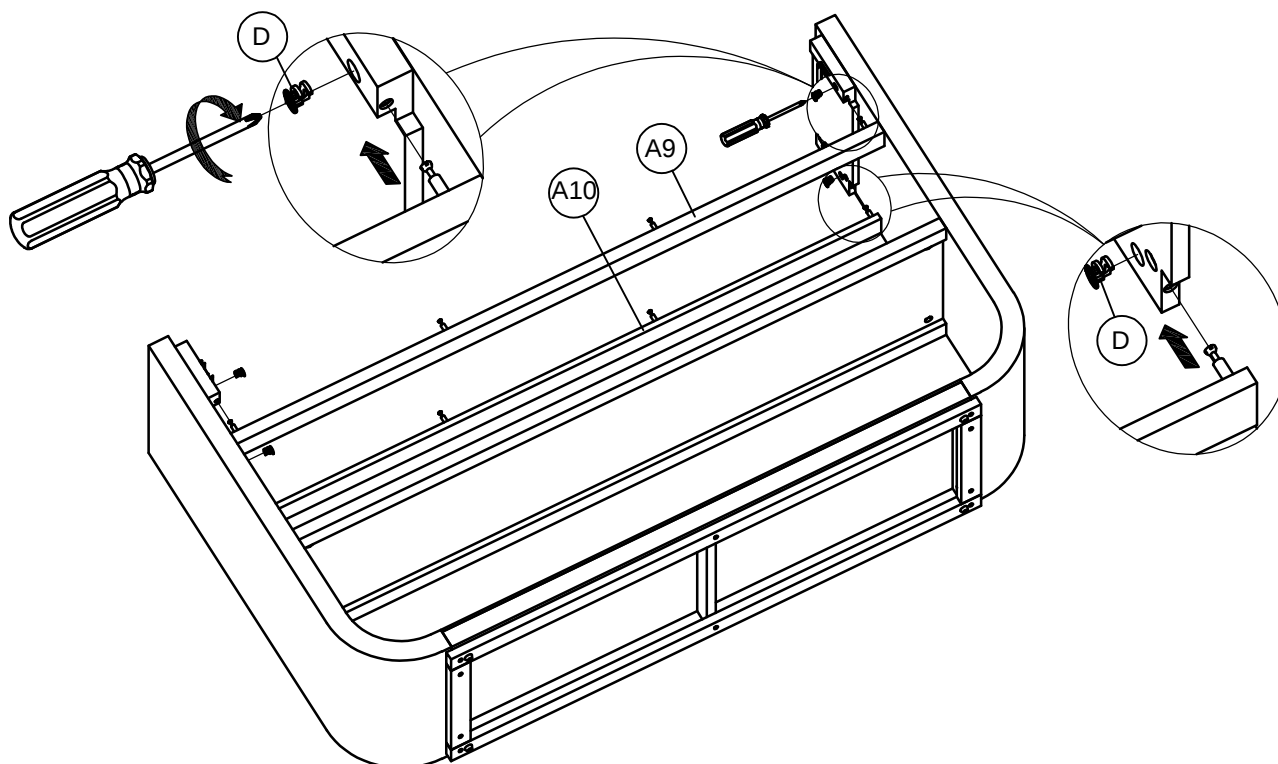

STEP 8: Following below illustration

-Using hardware #D and #F connect A1, A7 with step 7

D




16

F



8

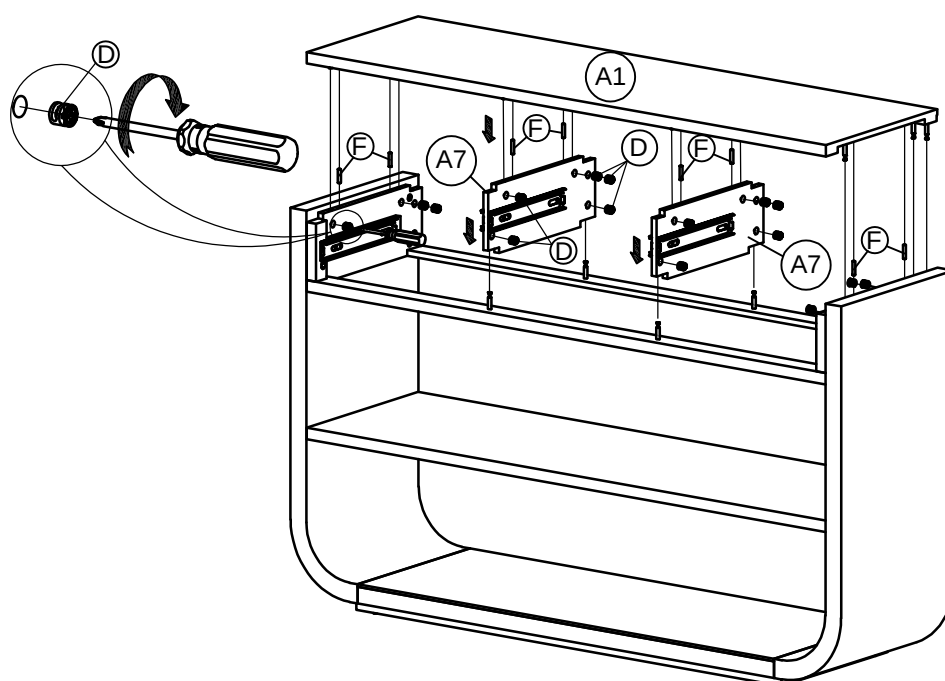

C




14

STEP 9:

Following below illustration

-Using hardware #C connect A8 with step 8

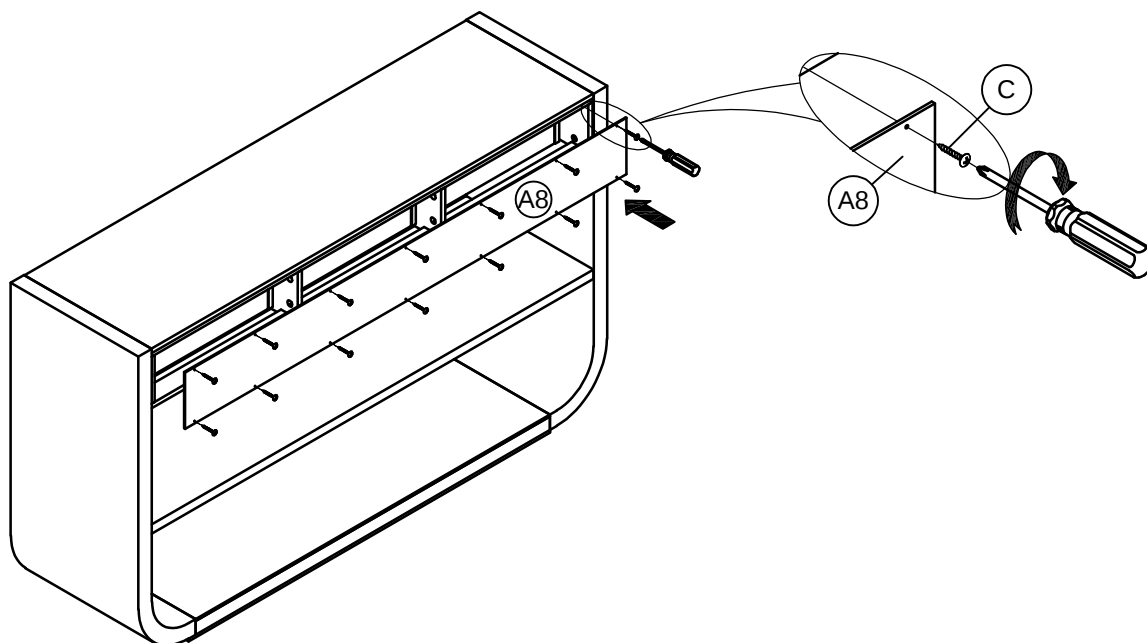

STEP 10:






Following below illustration

-Using hardware #E assembly into A13, A14 and A15

E







12

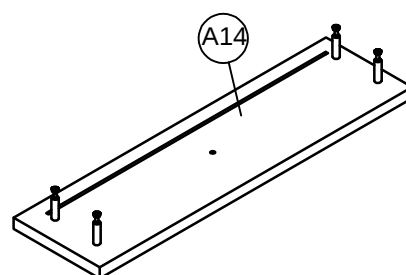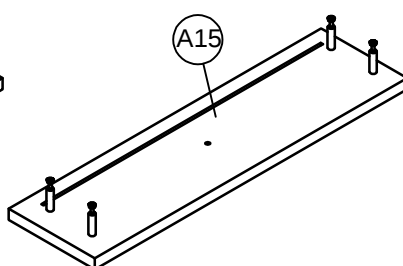
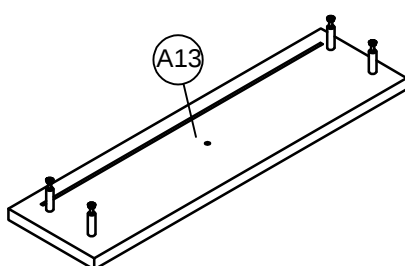
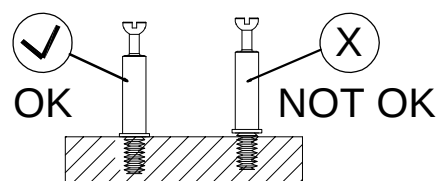
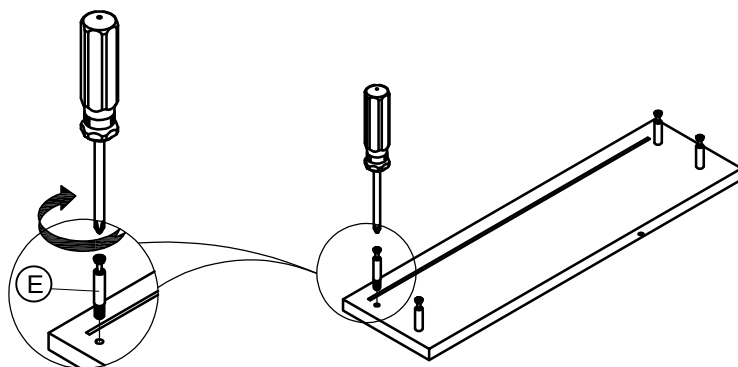


STEP 11: Following below illustration

-Using hardware #D connect A16, and A17 with A13, A14 and A15 assembly step 10

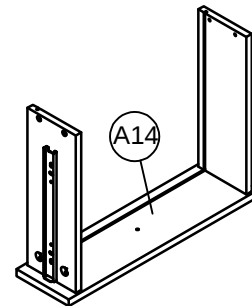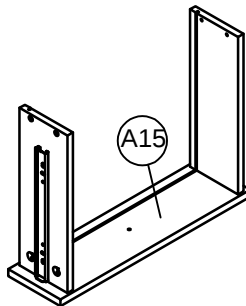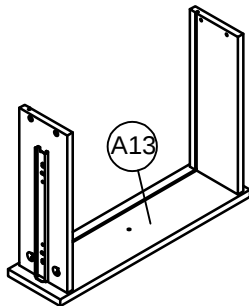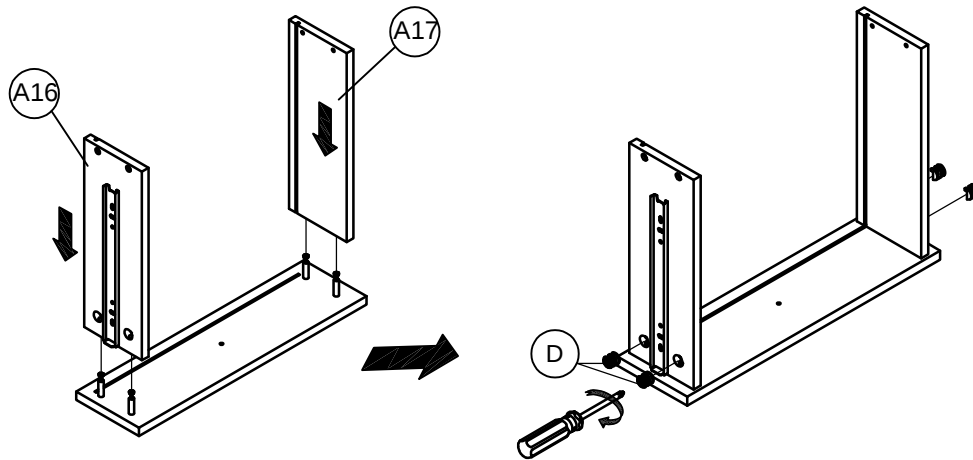**STEP 12:** Following below illustration





-Using hardware #B connect A18, and A19 with A16 and A17 assembly step 11

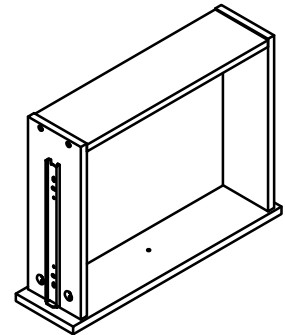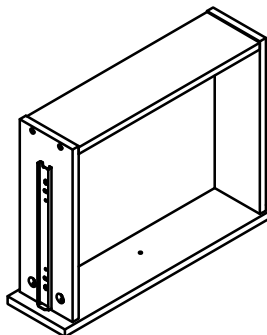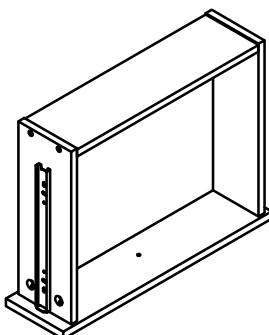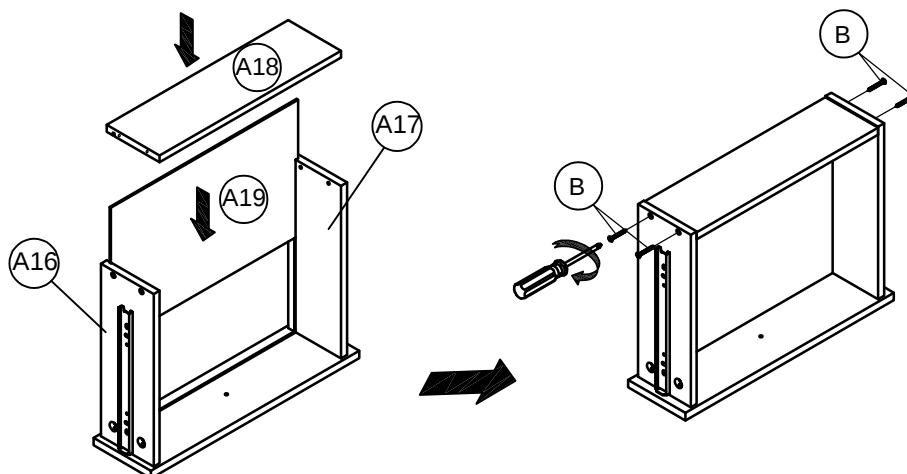


STEP 13: Following below illustration

-Using hardware #J,#K assembly into A13, A14 and A15 assembly step 12

J		3
K		3

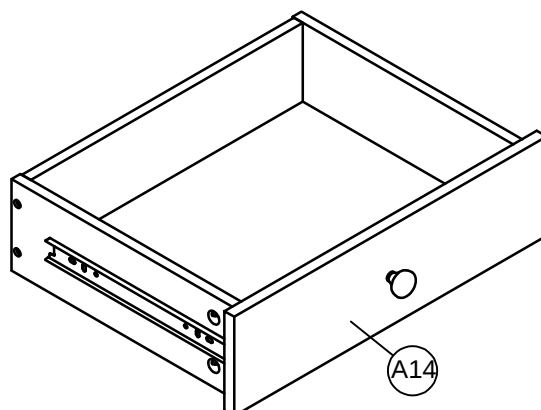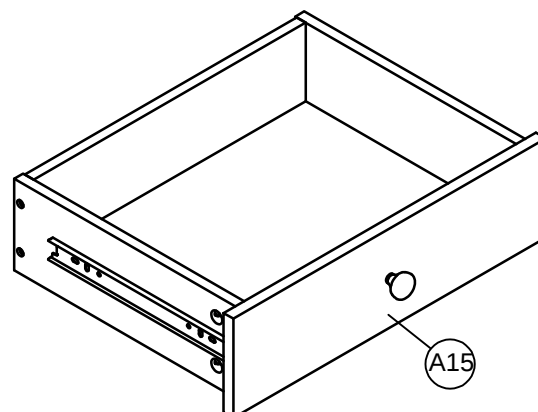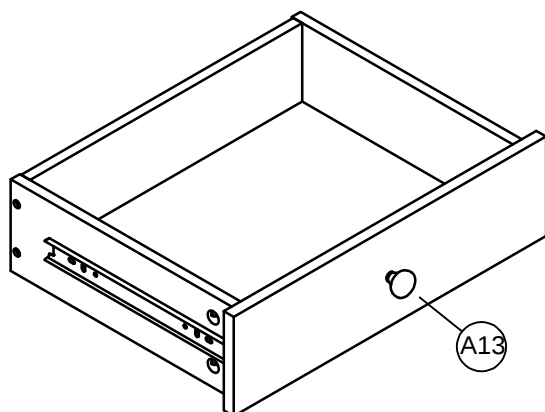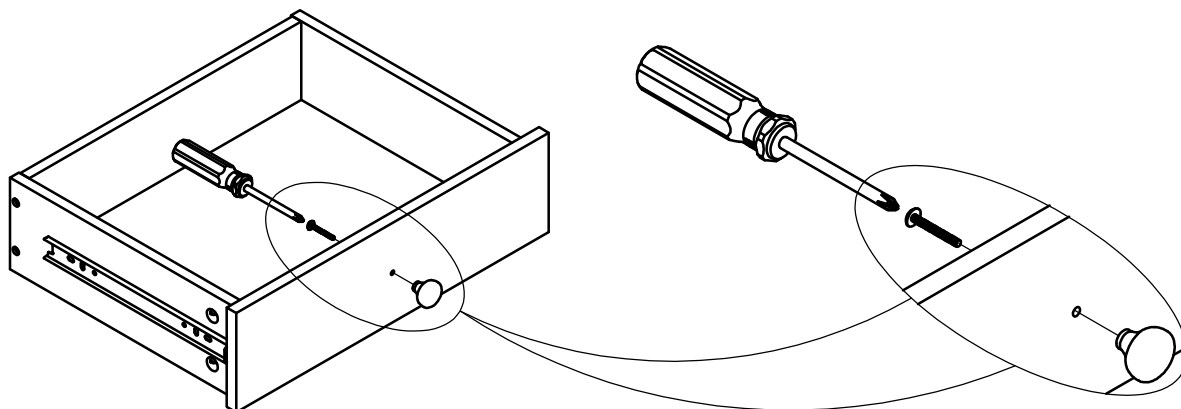


STEP 14: Following below illustration

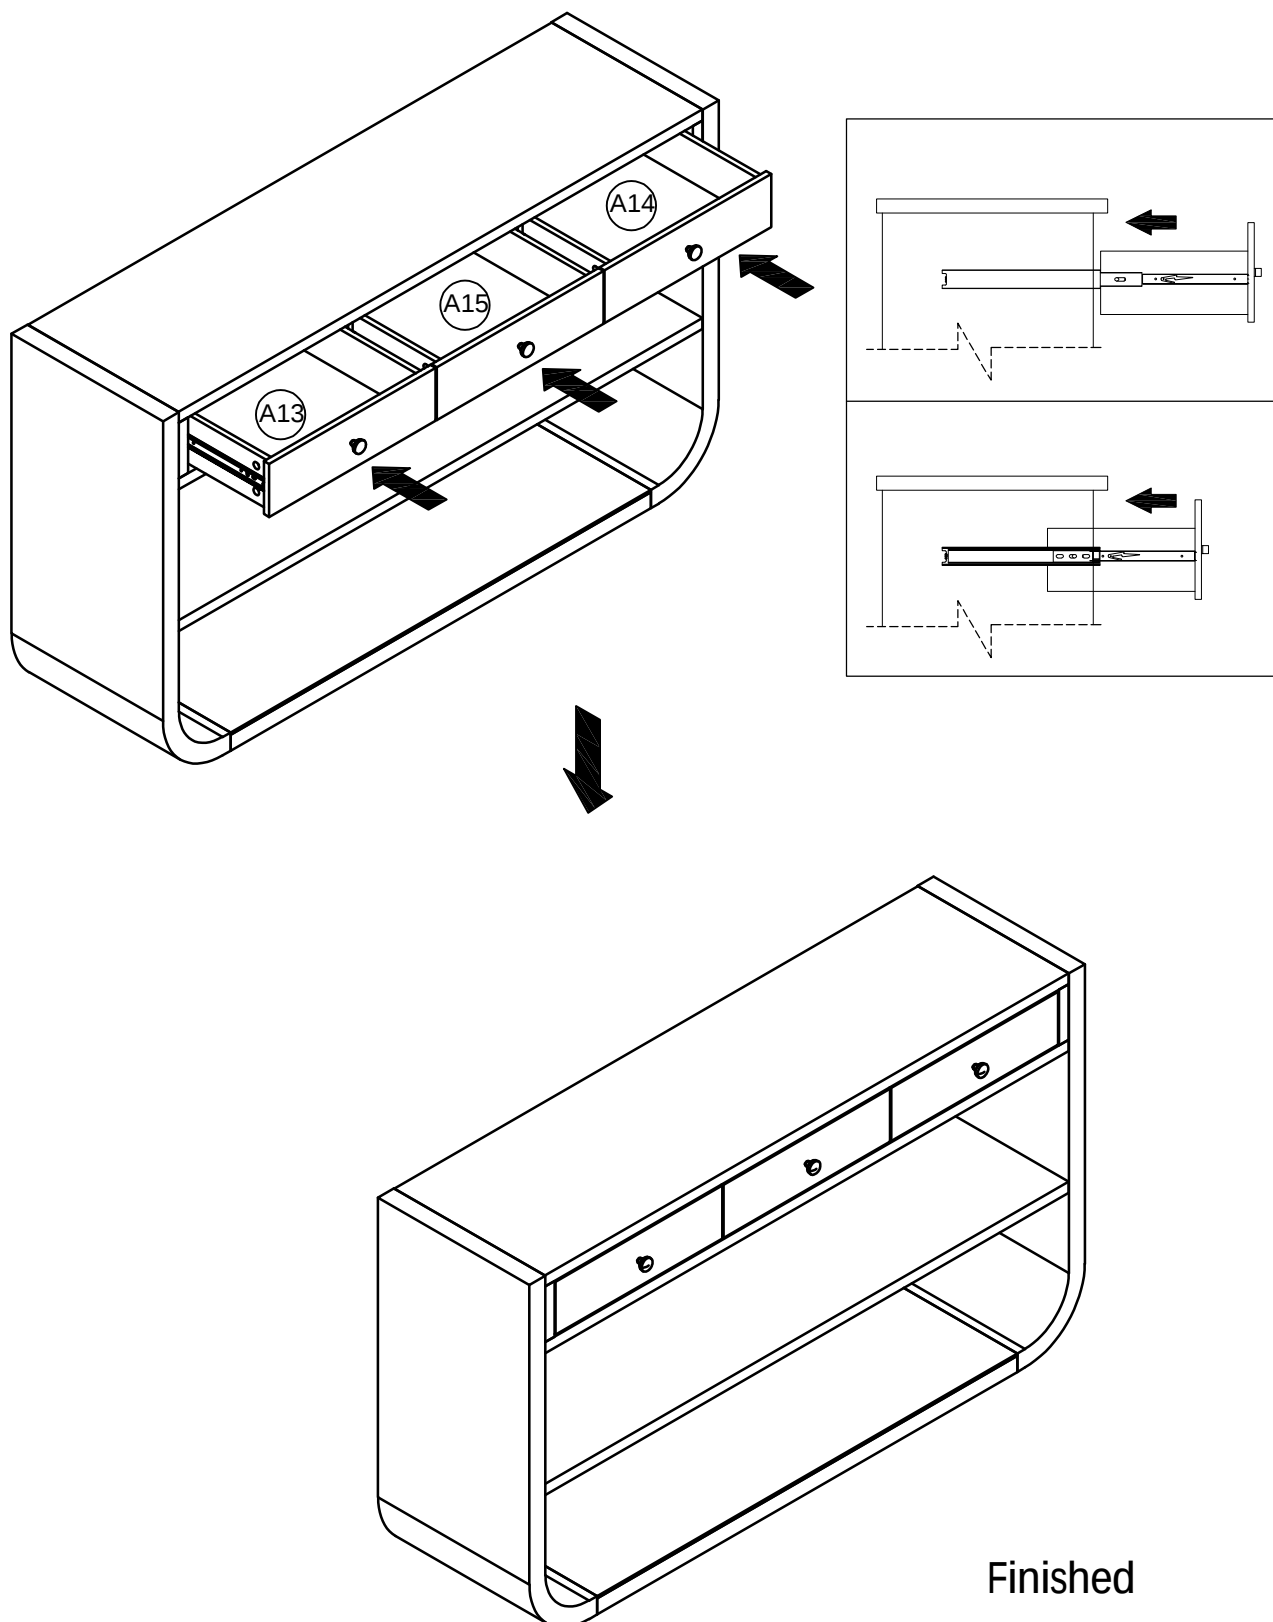




WARNING

Serious or fatal crushing injuries can occur from furniture tip-over.
If the furniture tip over restraint kit is not in the box, please contact our customer service department in order to obtain another kit before using the furniture.

L1		4	L4		2
L2	 M4 X 20mm	2			
L3	 M4 X 40mm	2	L5		2



NOTE: The screwdriver is not included in the hardware pack.

It can be attached with a wall plug or not, depending on the wall's hardness.

