

7835 Metal X-Leg Table

If you have any questions about the 7835 Metal X-Leg Table, please feel free to contact us.

Customer Service Email: Service@alaulm.com



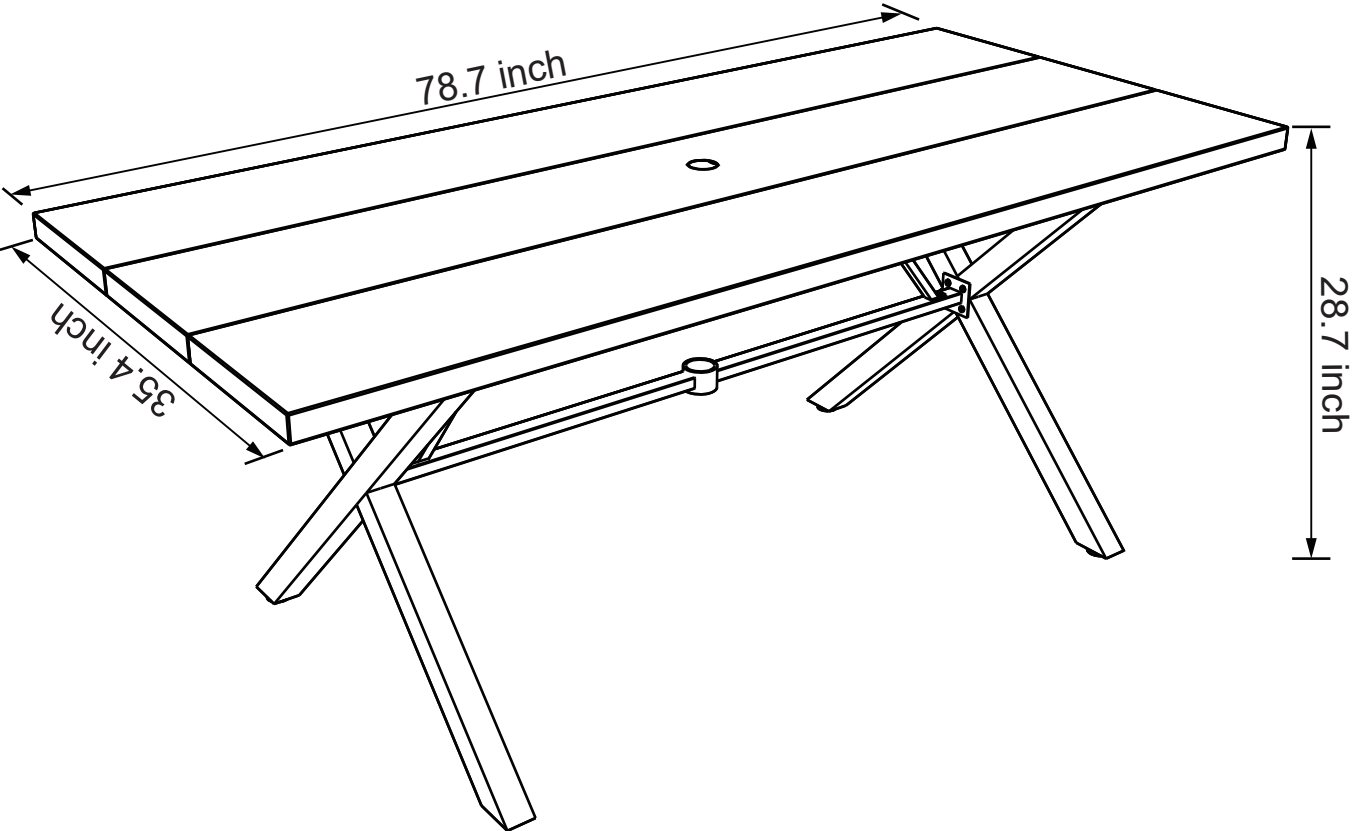
P25021-D1

IMPORTANT

PLEASE READ BEFORE YOU COMMENCE ASSEMBLY

Follow the guidelines in this user guide to ensure correct assembly and care for this product.

7835 Metal X-Leg Table



Catalog

Specifications.....01

Catalog.....02

Notice03

Exploded Views.....04

Part List And Screw Set List..... 05

How to Assemble The 7835 Metal X-Leg Table 06

Before You Begin

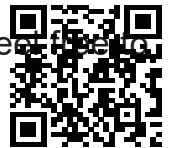
Instructions are supplied in this manual and contain all appropriate information for your product.

Review all instructions before you begin and during assembly, follow the step sequence carefully for correct results.

1. Please separate and identify all the parts, making sure you have all of the parts listed.
2. To avoid any scratch during assembly, please assemble on a soft mat or similar.
3. Please assemble step by step and follow the instruction.
4. Please install and secure all screws and panels correctly according to the fastening method described below.
5. Failure to locate parts in accordance with these diagrams, or failure to use special parts provided with this equipment, may result in property damage or personal injury.
6. If you have an electric screwdriver, you can use it instead of the screwdriver we provide. An electric screwdriver can help you reduce assembly time.

If you have any questions about the **White Wall Bathroom Cabinet**, please feel free to contact us.

Customer Service Email: Service@alaulm.com



www.alaulm.com


WARNING

Pay attention to the iron dining table and chairs installation precautions, please read the text below carefully.


Note: When installing dining table and chair products, both tables and chairs, do not install them directly on the ground, as gravel and sand on the ground can cause irreversible scratches, as well as pits and paint loss on the table top and other areas.

Suggestion: install this product on a carpet with softness, or you can put a layer of cloth or other soft material on the floor before installing it.
















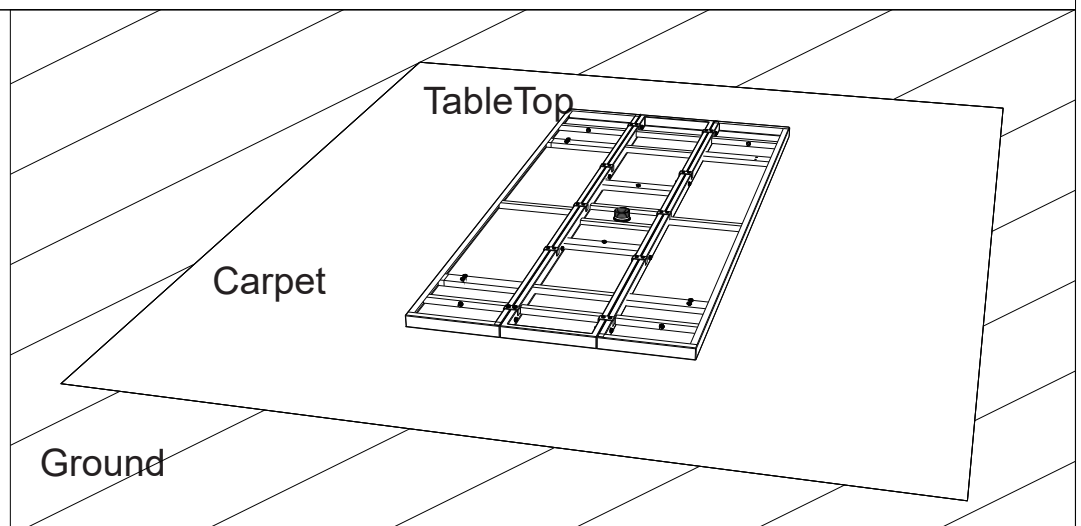
Illustration
of correct
installation



Explode Views

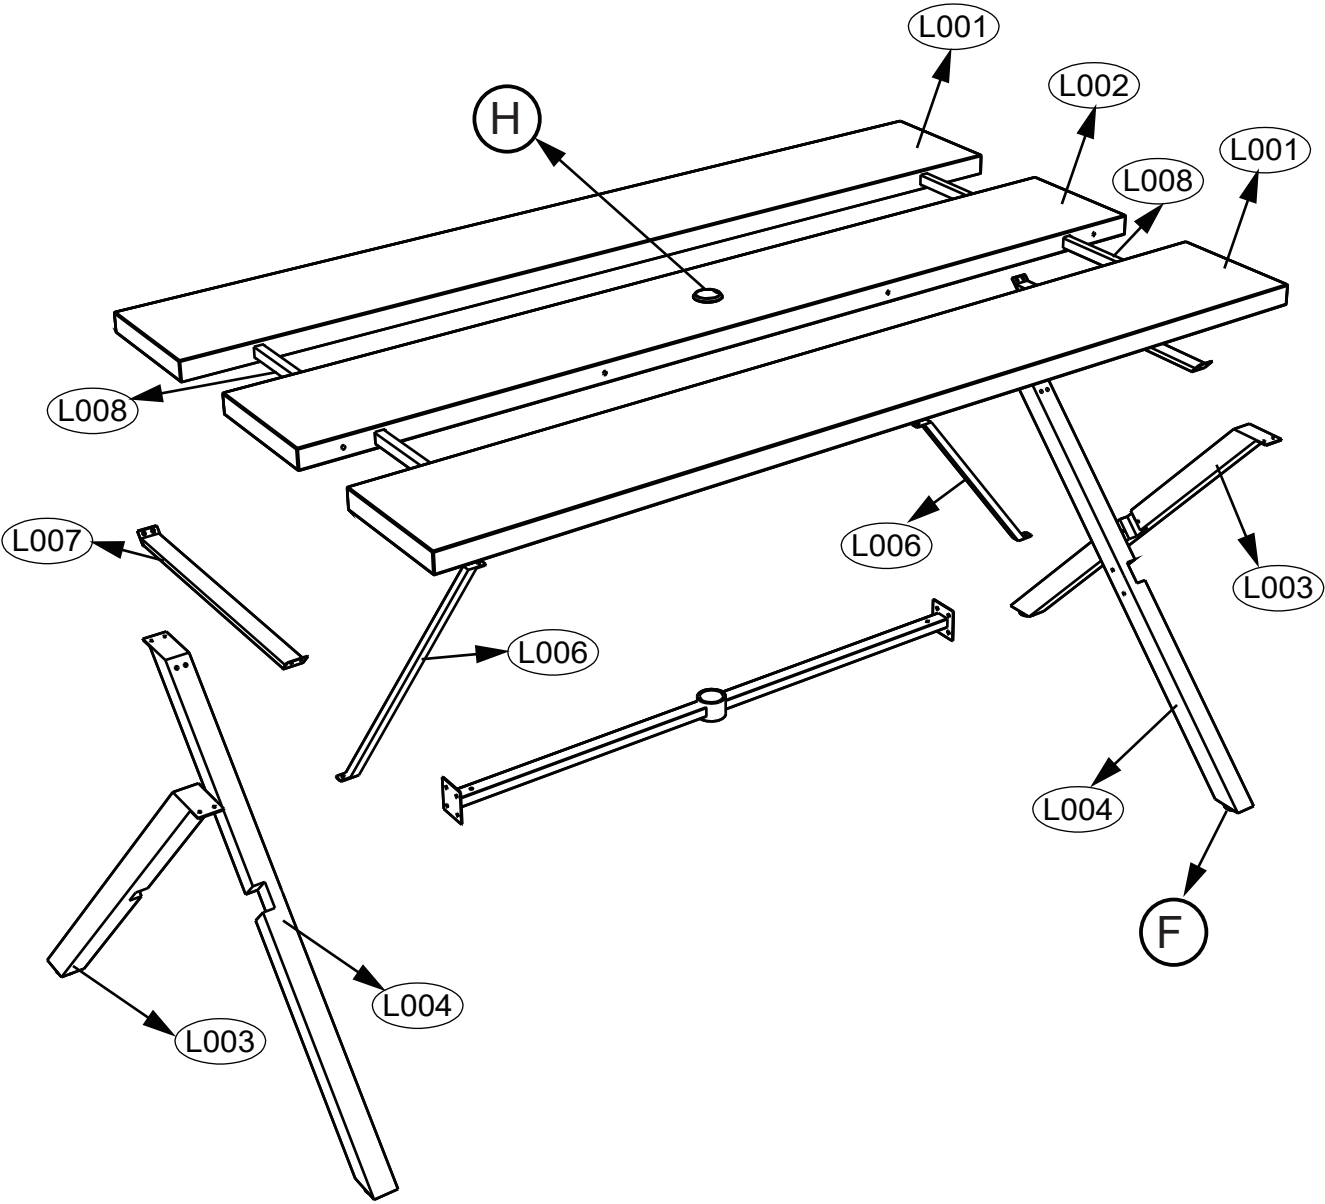

PART LIST

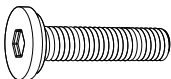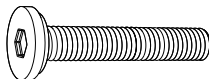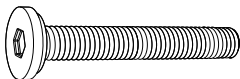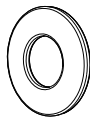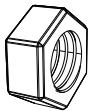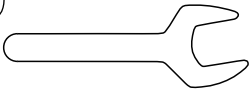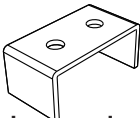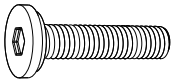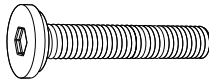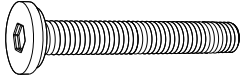
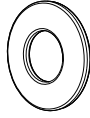
Part List			
L001  Table top 1 2PCS	L002  Table top 2 1PC	L003  Outer table legs 2PCS	L004  Inner table legs 2PCS
L005  Connecting crossbar 1PC	L006  Tilt brace 2PCS	L007  Tabletop support bar 2PCS	L008  Inner sleeve square tube 2PCS
Screw Set			
A  Bolt M6 × 20 48PCS	B  Bolt M6 × 30 4PCS	C  Bolt M6 × 45 8PCS	D  M6 Gaskets 60PCS
E  Jam Nuts M6 12PCS	G  Bolt Cap 60PCS	H  Umbrella Cover 1PC	I  Wrench 1PC
J  Allen Wrench M6 1PC	K  U shaped part 10PCS		
Extra (Screw Set)			
A  Bolt M6 × 20 5PCS	B  Bolt M6 × 30 1PC	C  Bolt M6 × 45 1PC	F  M6 Gaskets 7PCS
G  Bolt Cap 7PCS			

Installation steps

How To Assemble The White Wall Bathroom Cabinet



Step 1

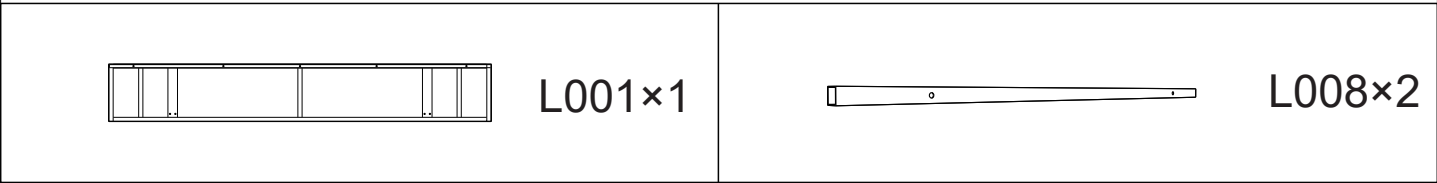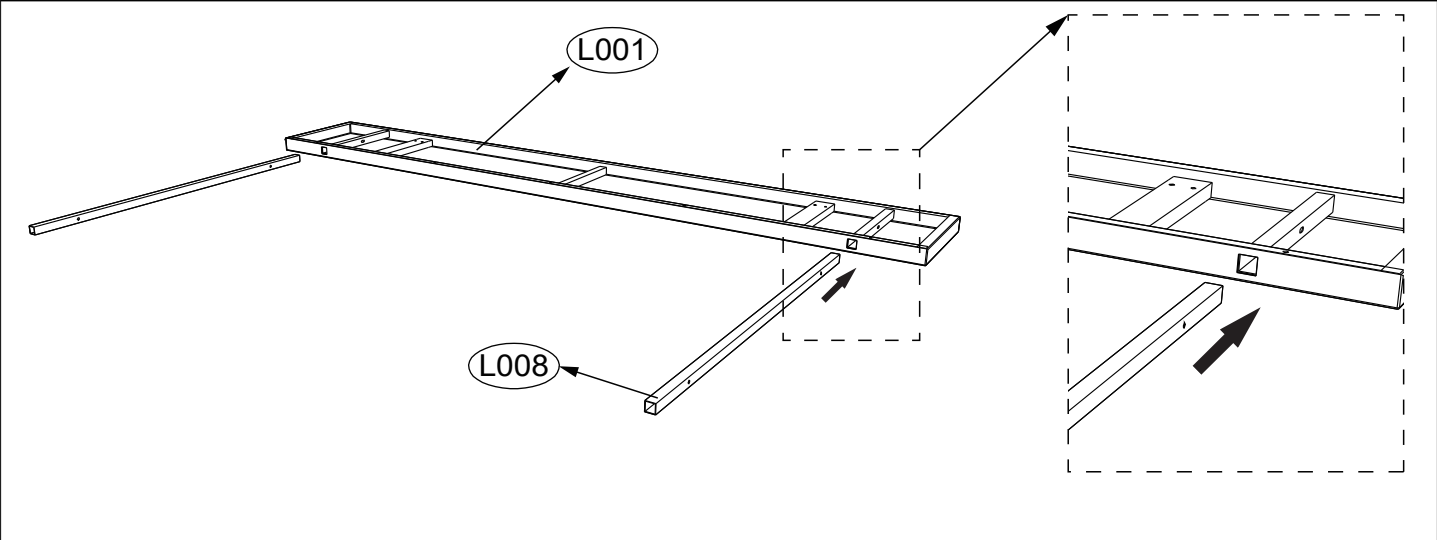Insert the Inner sleeve square tube (L008) into the holes on either side of the inside of Table top 1 (L001).



Step 2

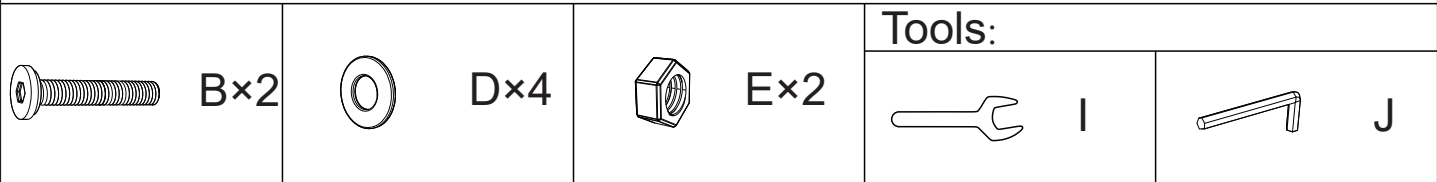
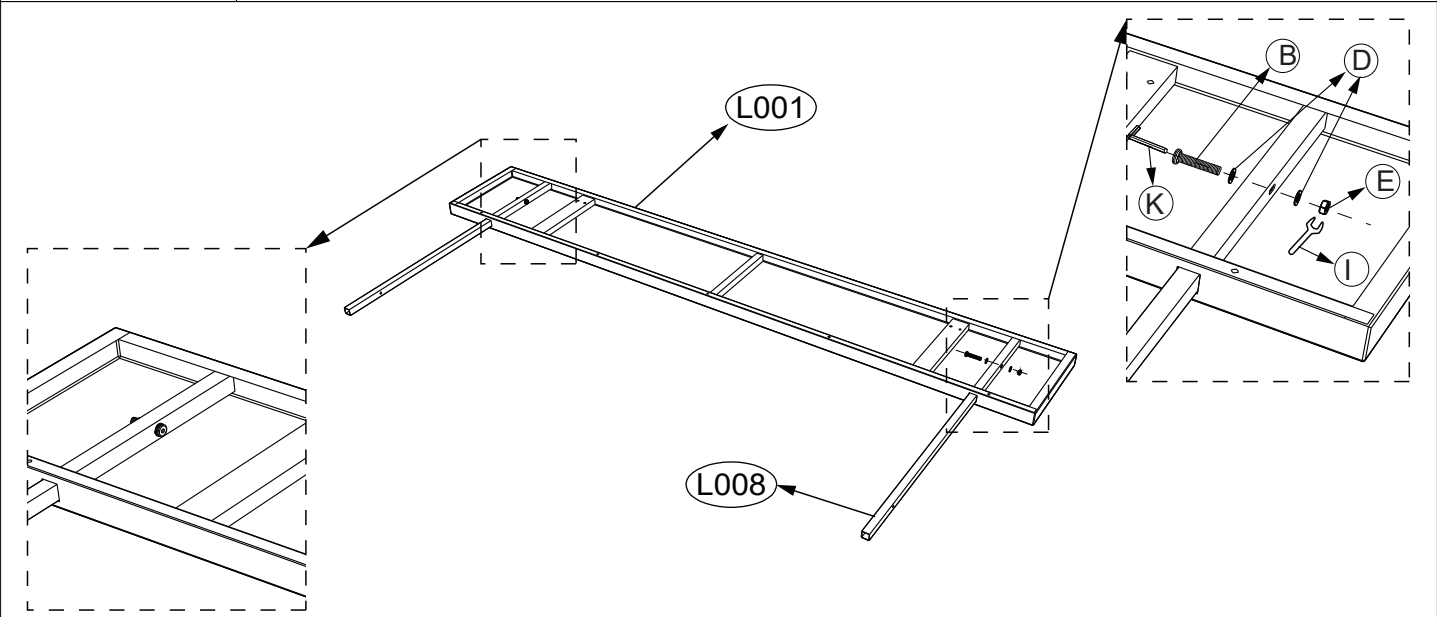
Line up the holes in one end of the Inner sleeve square tube (L007) with the holes in Table top 1 and use a Bolt (B) to go through the Gaskets (D) and the holes, then the other end to slip over the Gaskets (D) and tighten using Jam Nuts (E).



Installation steps

Step 3

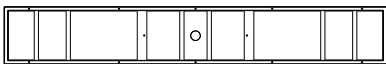
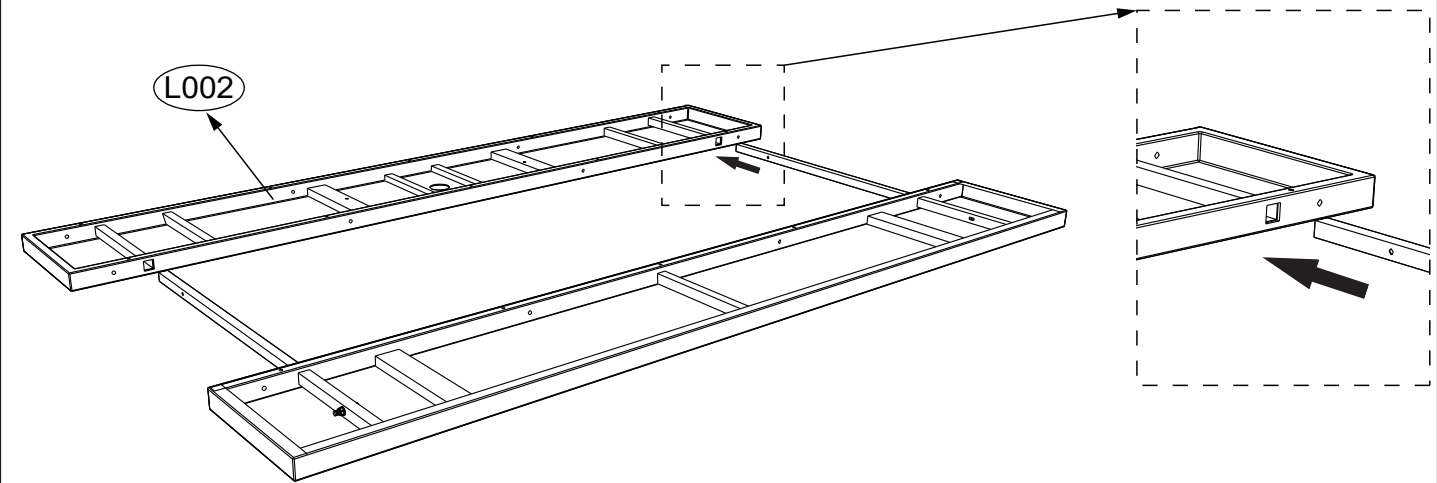
Slip Table top 2 (L002) into the already installed Inner sleeve square tube (L008), taking care to align the holes as shown.



L002×1

Step 4

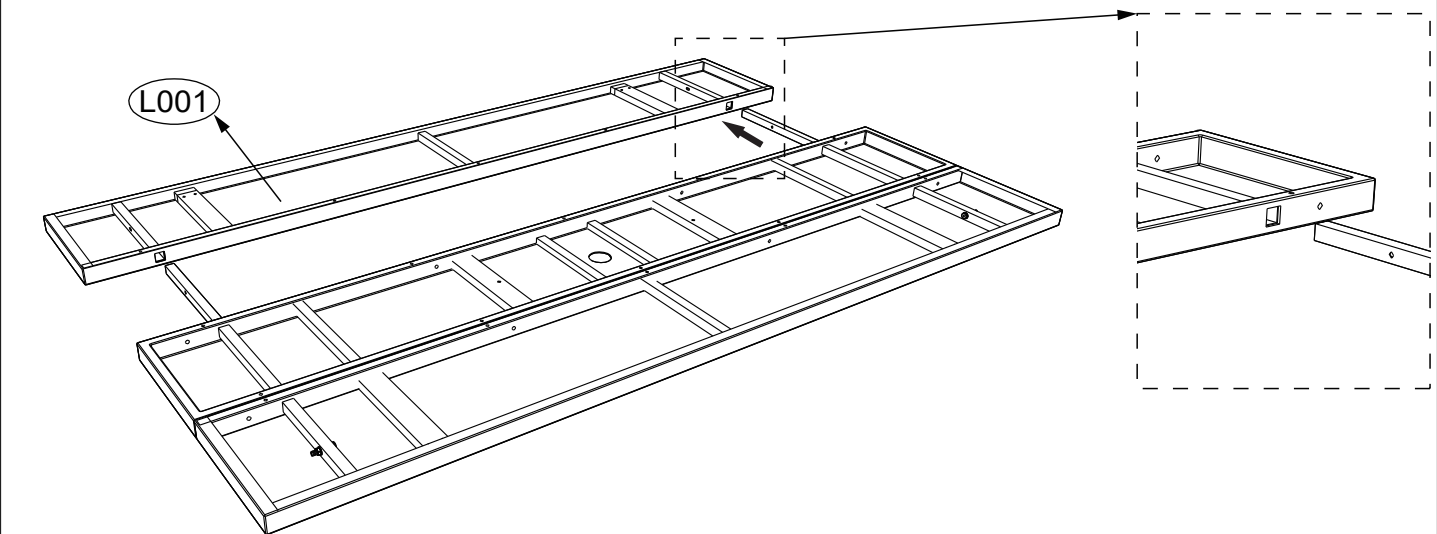
Slip the remaining Table top 1 (L001) into the already installed Inner sleeve square tube (L008), taking care to align the holes as shown.





L001×1


Installation steps




Step 5	Repeat step 2 to install the Inner sleeve square tube (L008) with the last installed Table top 1 (L001) using screws.
---------------	---

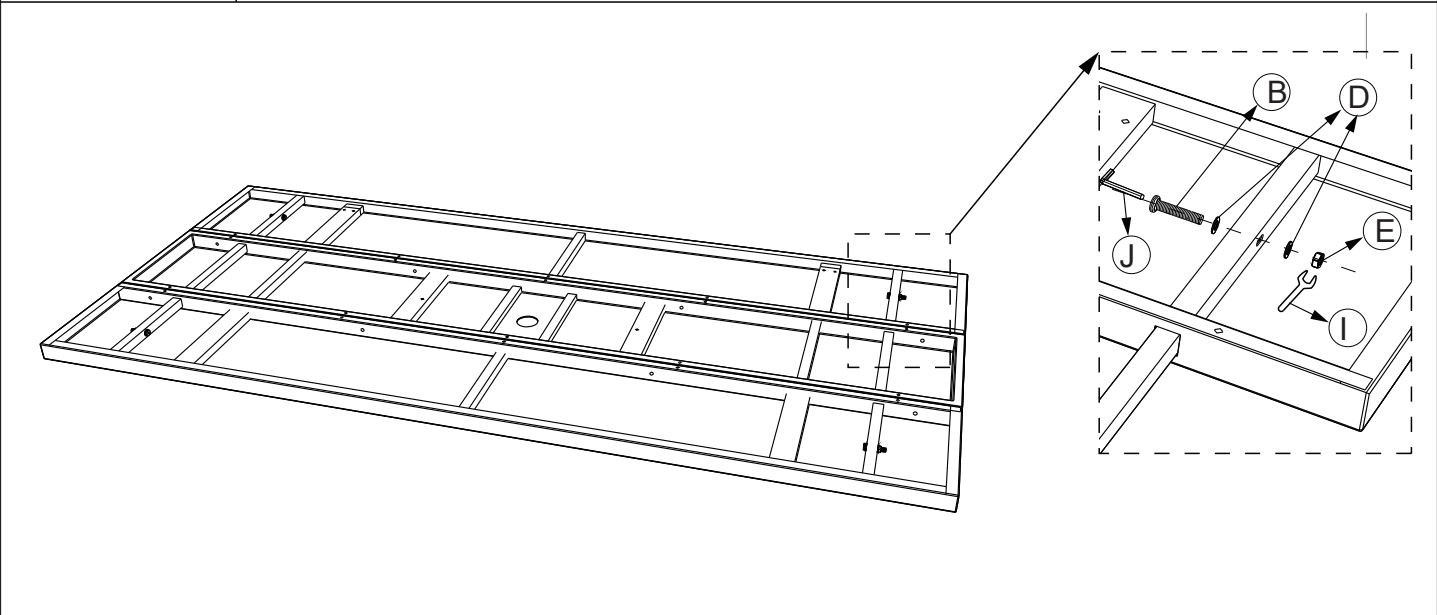

 B×2	 D×4	 E×2	Tools:	
			 I	 J

Step 6	Snap the U-piece into the table frame joint by aligning the holes and secure the bolts (A) into the spacers (D) in the aligned holes.
---------------	---

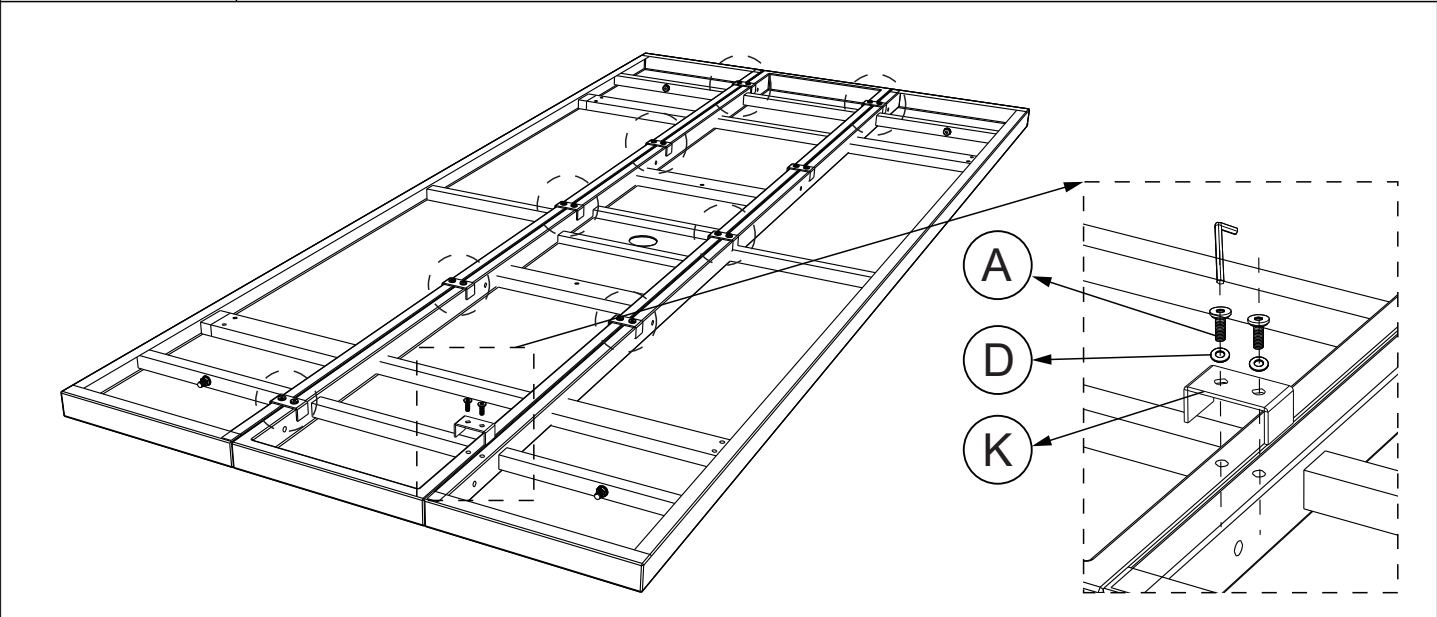

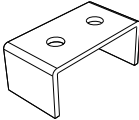
 A×20	 D×20	 K×10	Tools:	
			 J	



Installation steps

Step 7

Slip the bolts (C) into the spacers (D) and then through the through holes on each side of the table plate, slip the spacers (D) on the other side and secure with the jam nuts (E) and install as shown.

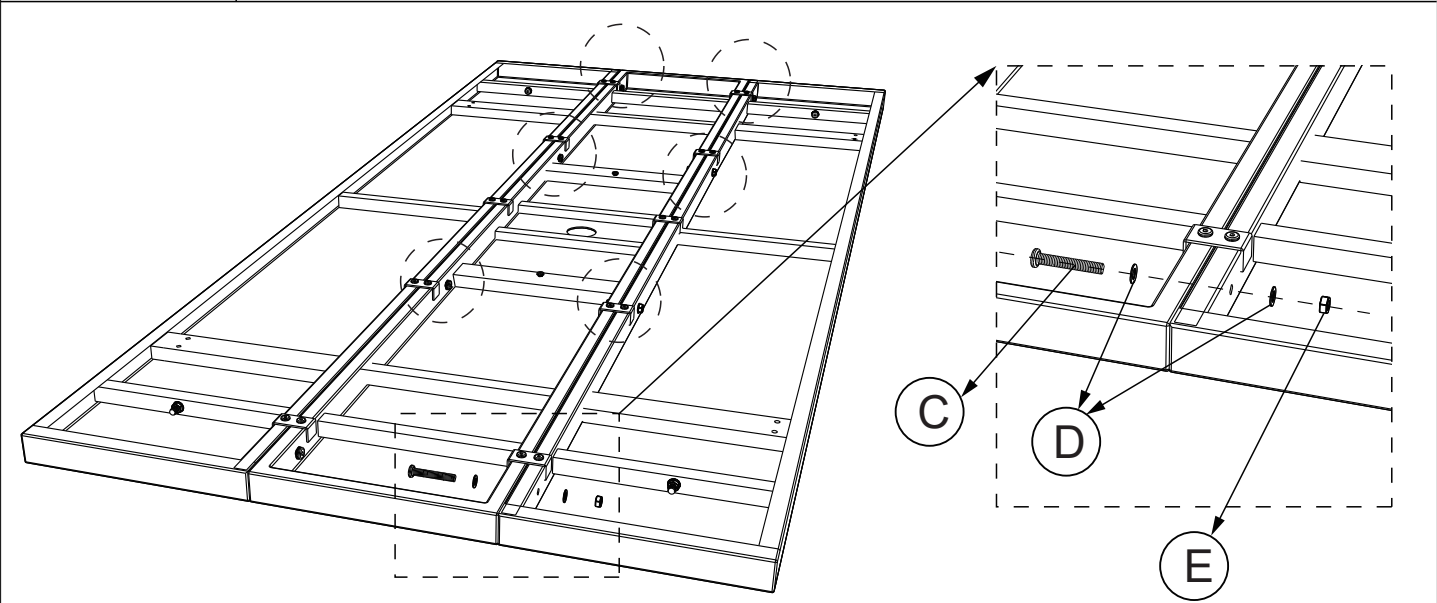
NOTE: Tighten all bolts on the table top.



 C×8	 D×16	 E×8	Tools:	
			 I	 J

Step 8

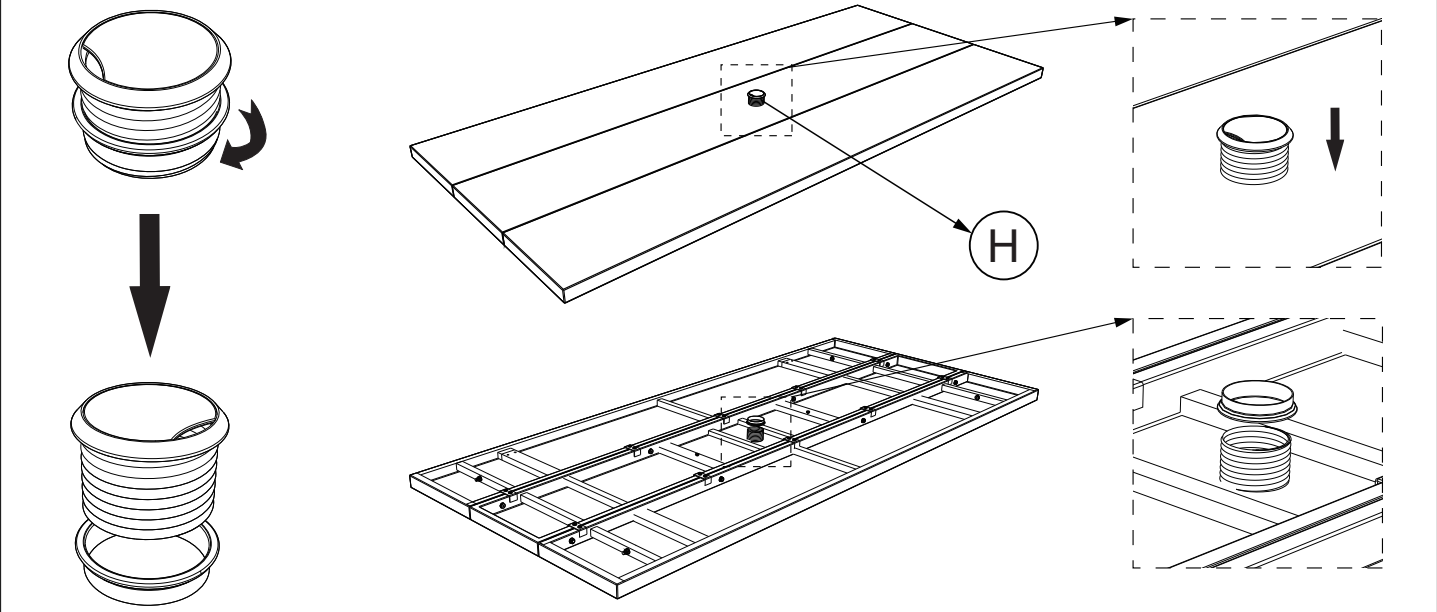Rotate the lower side portion of the umbrella cover(H) down and cut it in half. Place the upper side threaded part from the top of the table top, and the lower part from the bottom of the table top back into the top part of the umbrella cover and rotate to secure.





 H×1


Installation steps

Step 9

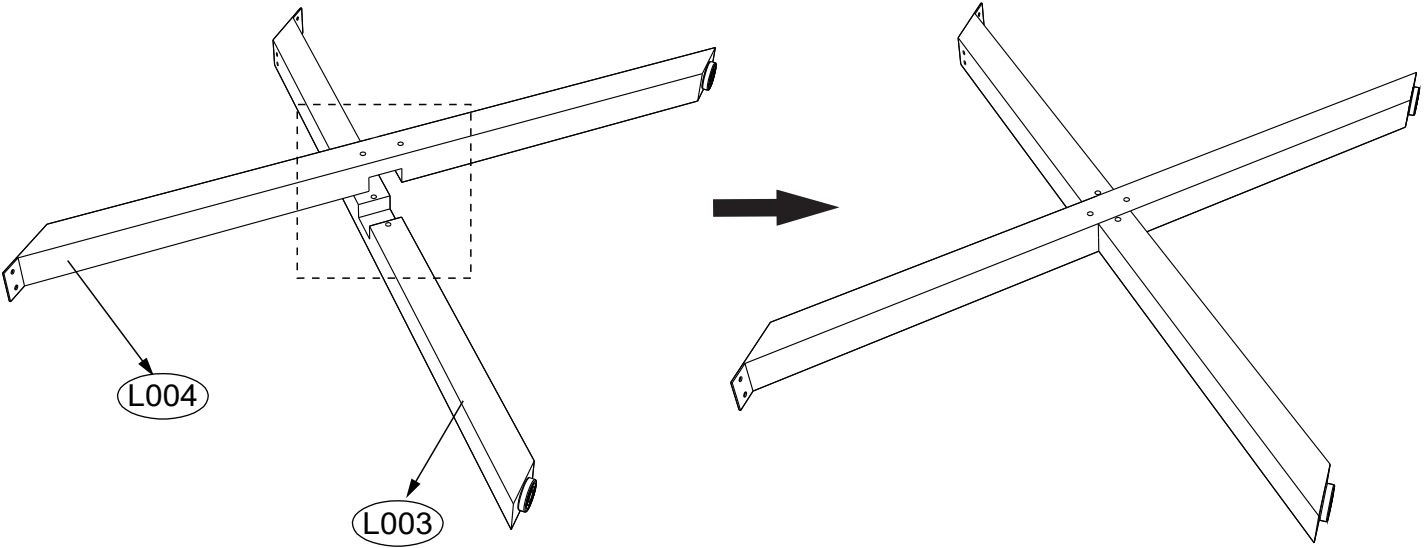Snap Outer table legs (L003) and Inner table legs (L004), into each other in the center groove section, note that the holes are all on one side, and the feet are all on the same side, and that there are four threaded holes on one side of the card when it is aligned and one side has no holes.





L003×1


L004×1

Step 10

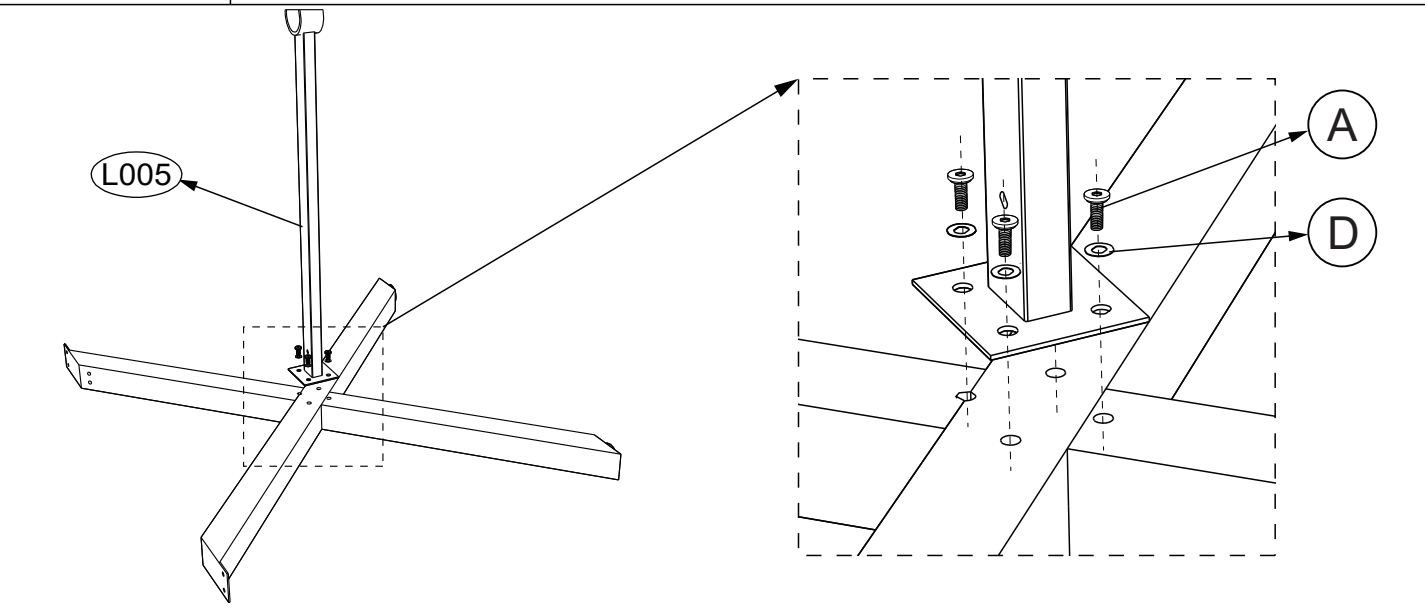Align the Connecting crossbar (D) into the four holes on the leg side of the table and lock the bolt (H) into the four holes by slipping it into the spacer (K).
Note: When installed, the Connecting crossbar (D) has one side with two holes in the center, and this side is parallel to the table leg holes.



L005×1

A×4

D×4

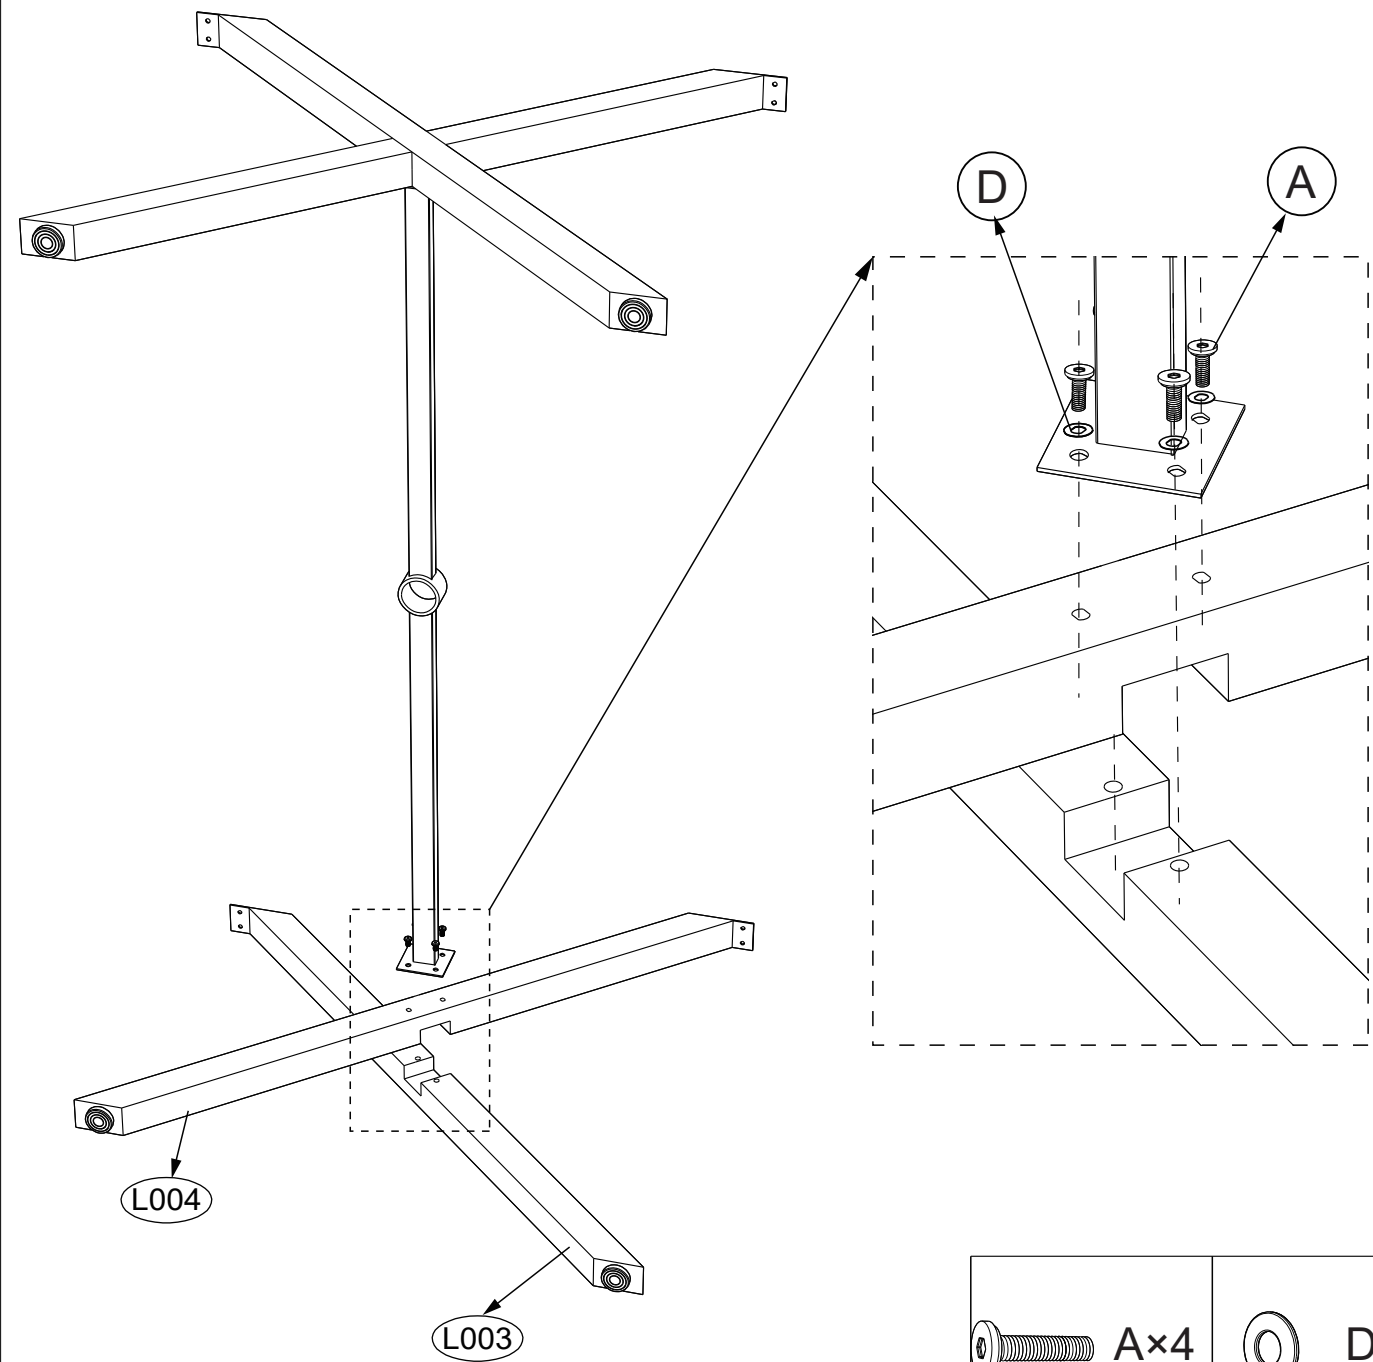
Tools:


J



Installation steps

Step 11

Place the remaining two table legs as in step 9 and lock the other side of the Connecting crossbar (L005) into the threaded holes of the remaining two legs in the same steps as in step 10.



 A×4	 D×4
---	---

 L003×1	 L004×1	Tools:  J
--	---	---

Installation steps

Step 12

Place the Desktop support bar (L007) into position on the upper side of the table leg as shown below and tighten it on both sides of the leg with bolts (A) snapped into spacers (D).

			Tools:
L007×2	A×8	D×8	J

Step 13



Install the Tilt brace (L006) in the holes on both sides above (L005) using the bolts (A) and spacers (D) in the direction shown.
Note: Do not tighten the bolts.

			Tools:
L006×2	A×2	D×2	J

Installation steps

Step 14

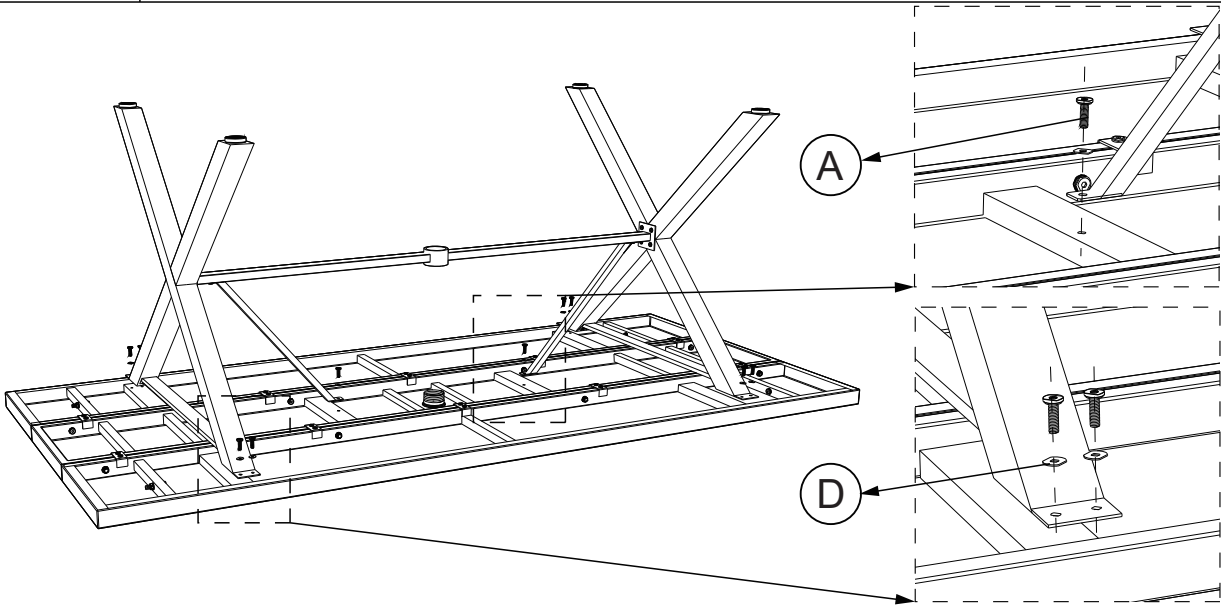Align the holes in the installed leg section with the holes on both sides of the tabletop, then align the top side of the Tilt brace (L006) with the holes in the tabletop (L002) and install using the bolts (A) with spacers (D).
NOTE: Tighten all remaining bolts at this time.



A×10



D×10

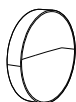
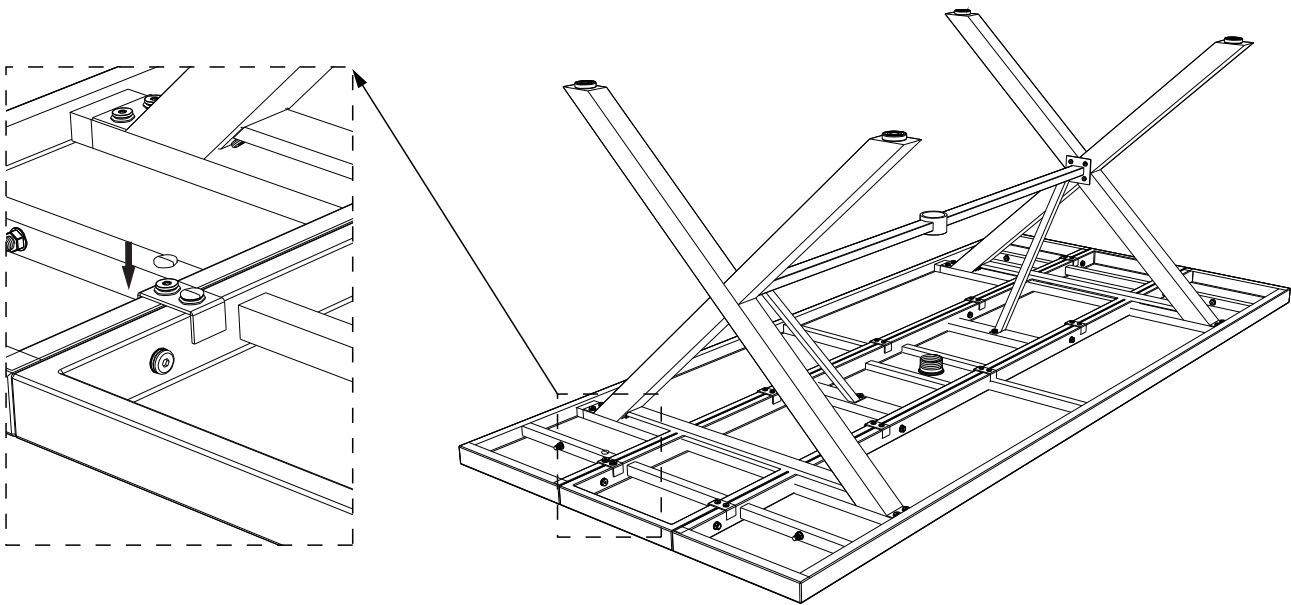
Tools:




J

Step 15

Place all bolt caps (G) over the bolts.



G×60

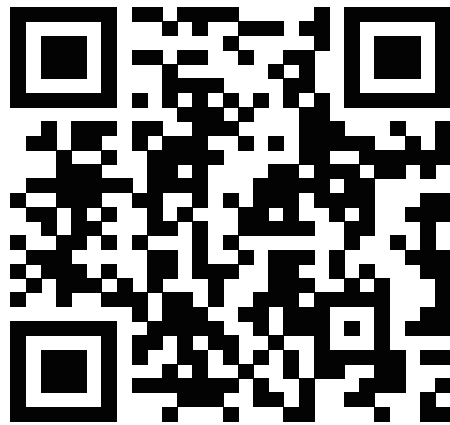

www.alaulm.com

Make your life much better.