



Installation & Assembly

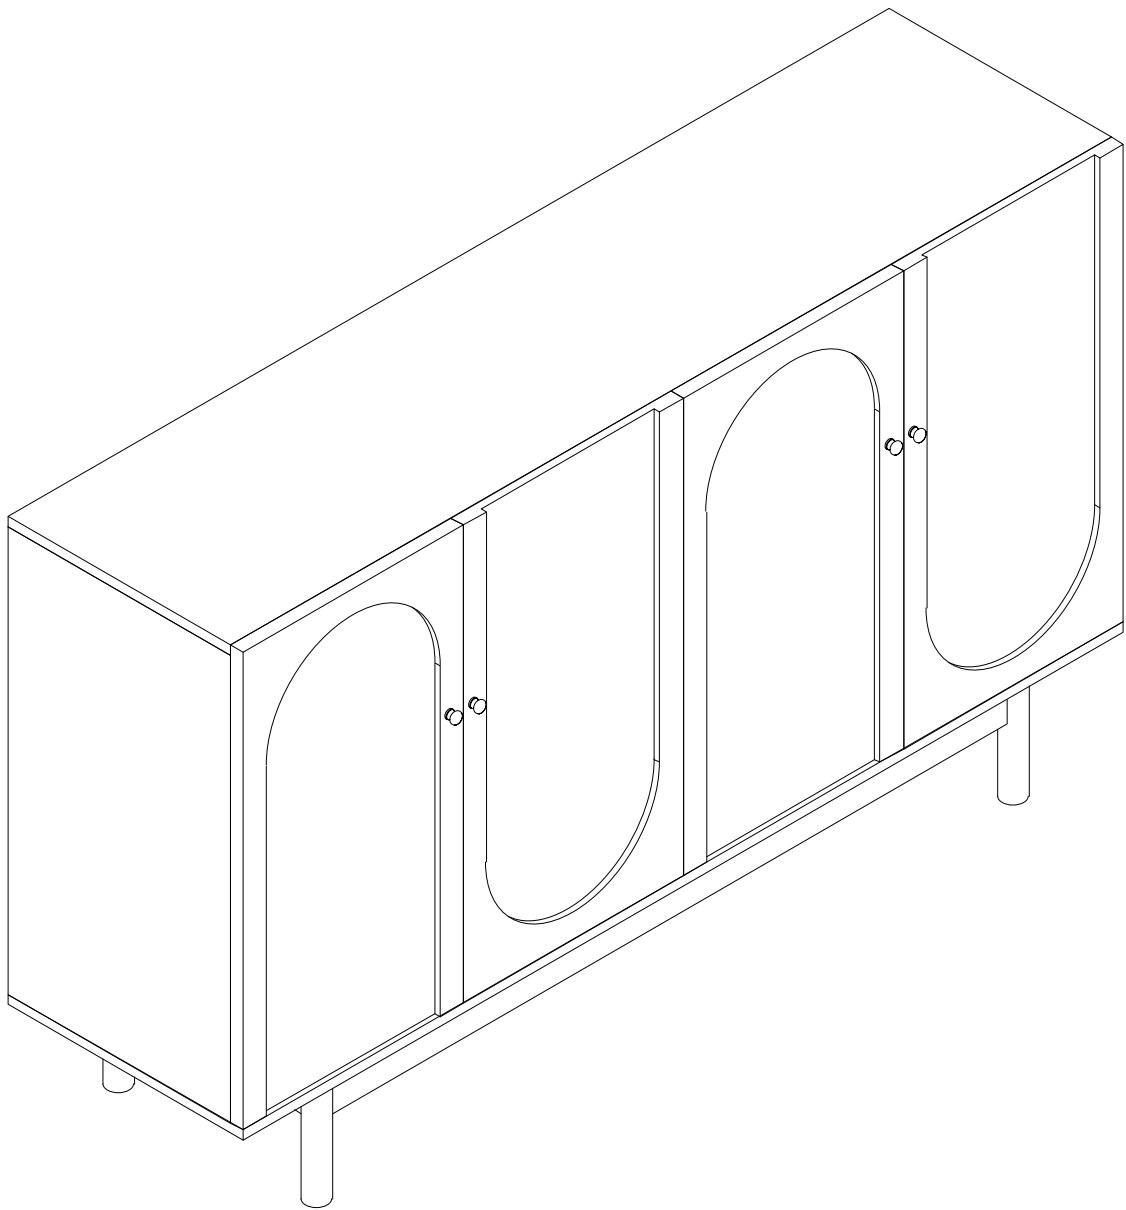


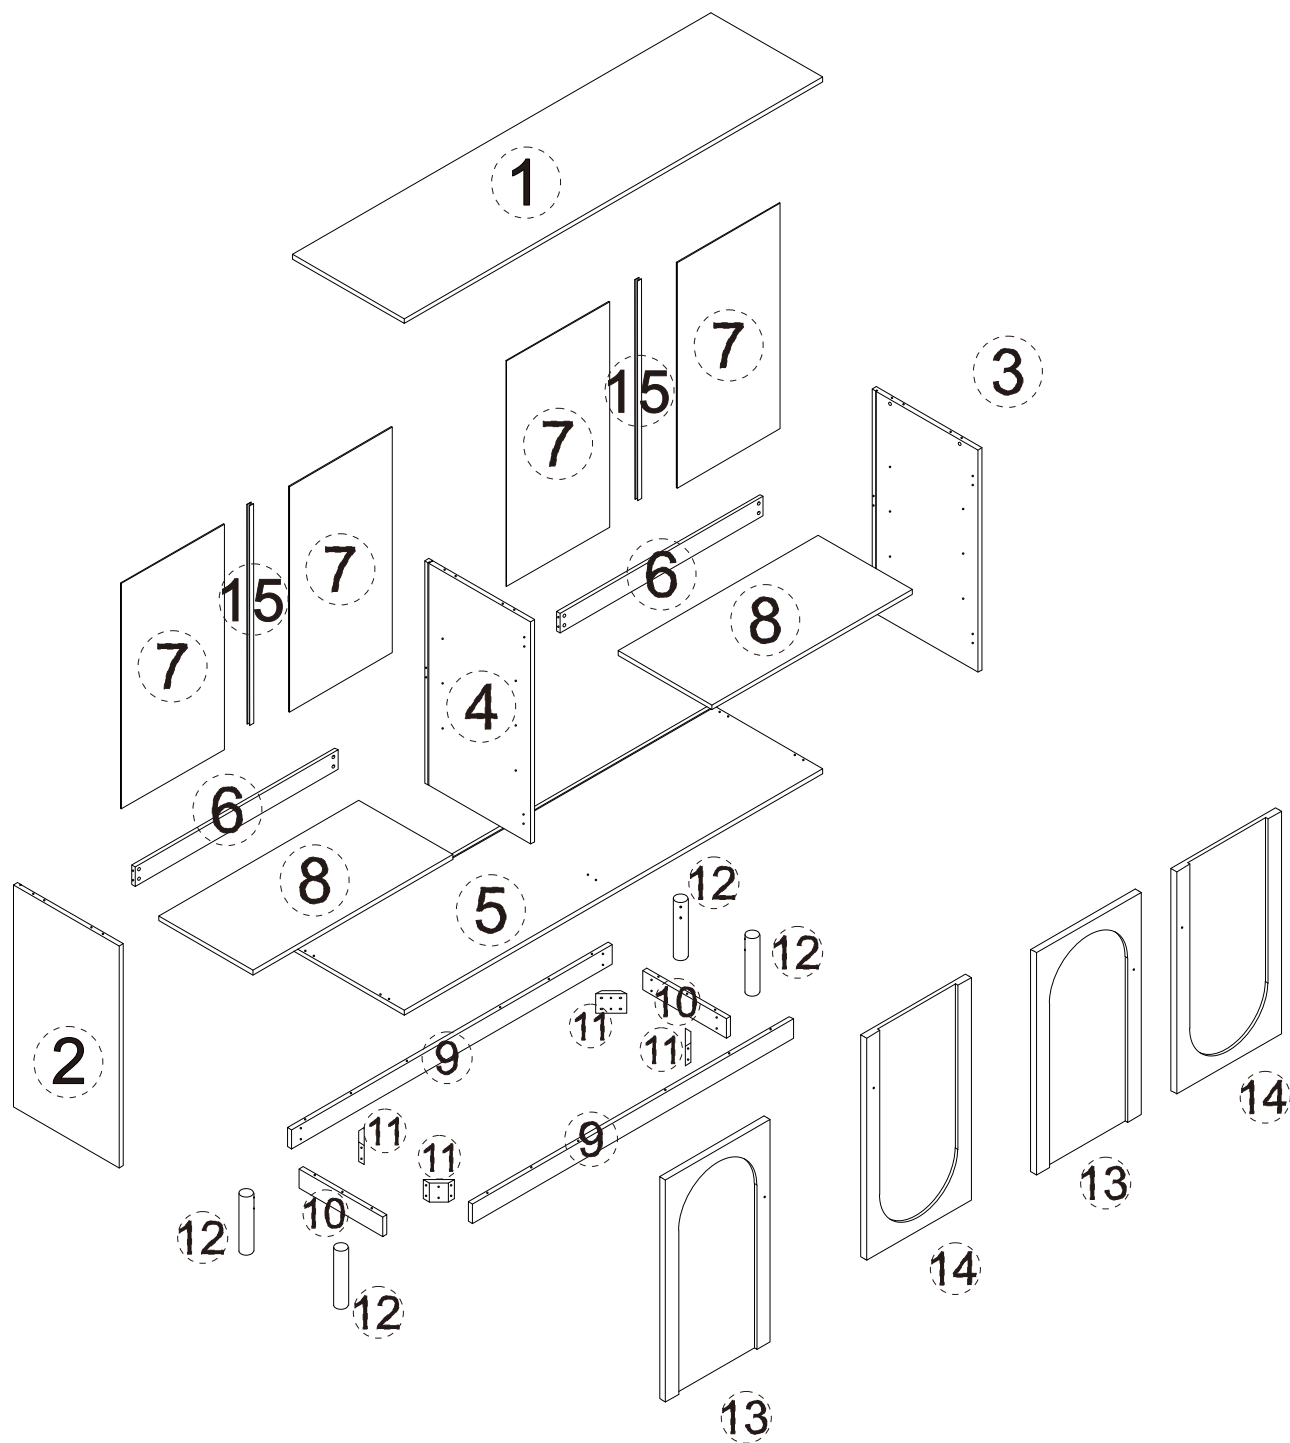


SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

CAM-LOCK




**WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE**

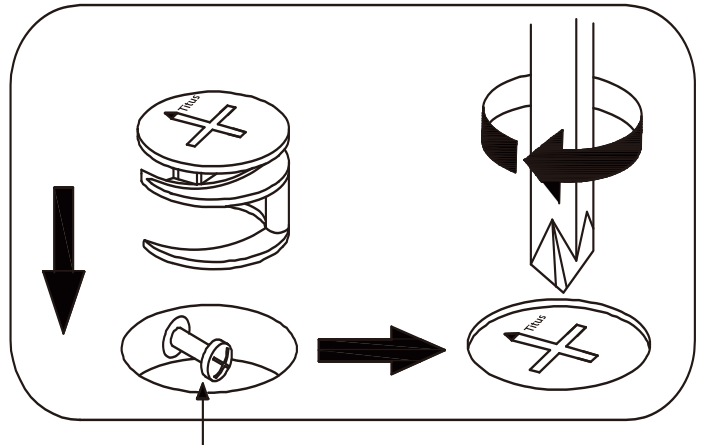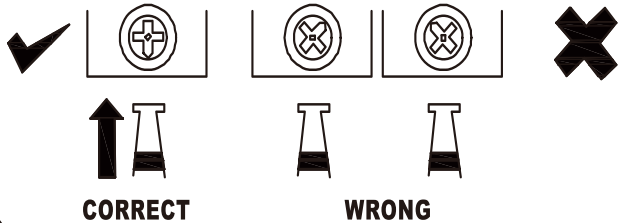

Quickfit head needs to be in centre

QUICKFIT

**Tighten until shoulder is flush
with panel. DO not overtighten
or undertighten (see example
below)**

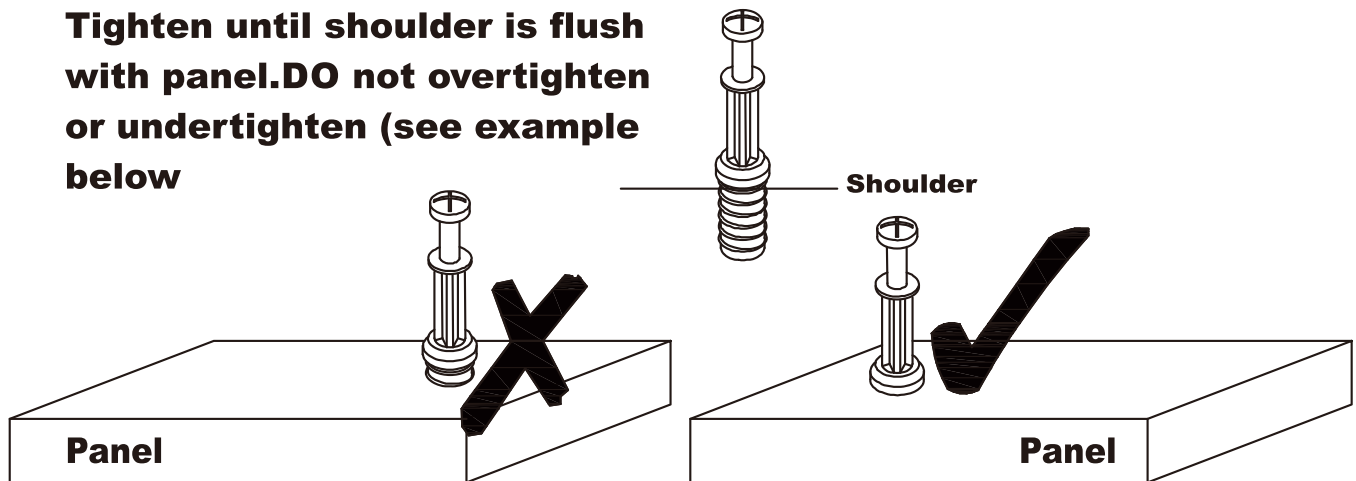


Assembly Steps

HOW TO ADJUST THE HINGES TO
ALIGN THE DOORS IF NEEDED.


STEP 1

Open the door.

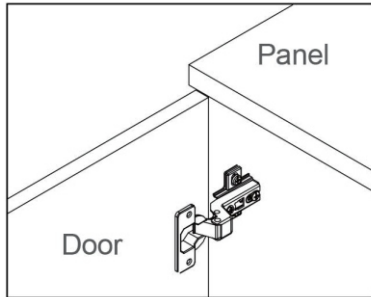


STEP 2

Adjust the door panel upward or downward

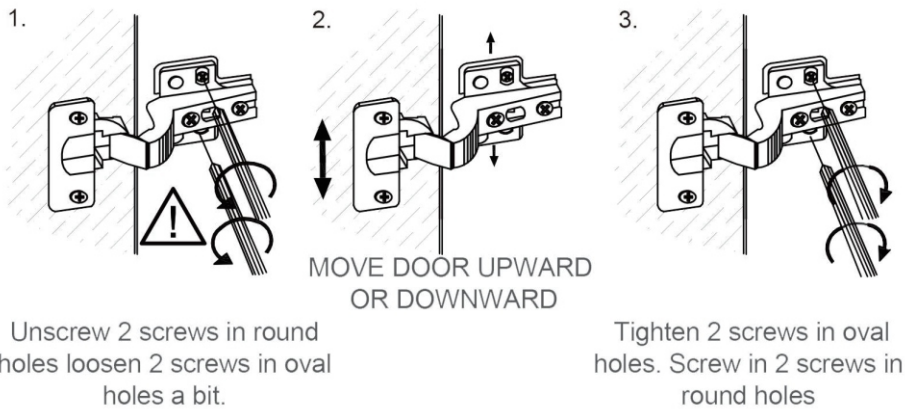


STEP 3

Adjust the flush between door panel and side panel

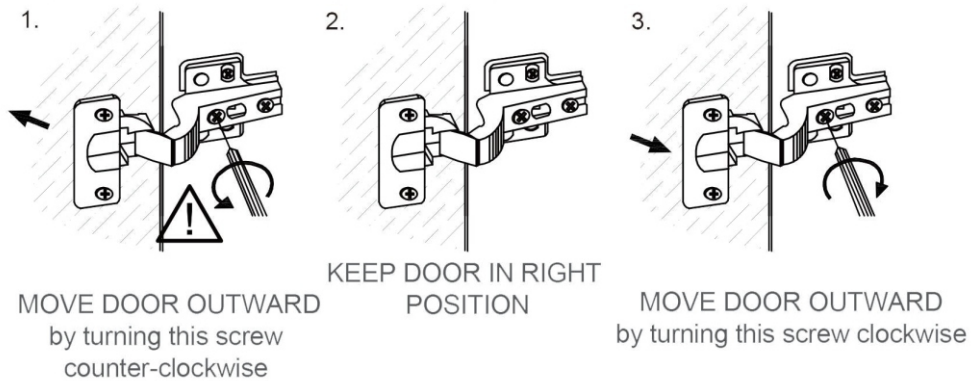


STEP 4

Adjust the Gap between door
panel and side panel

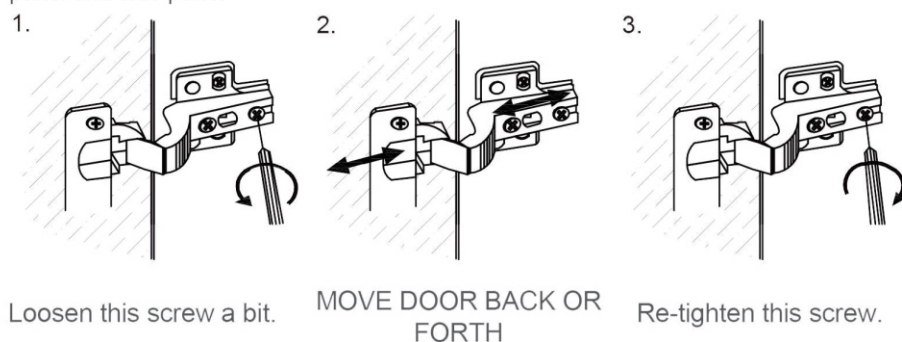

1

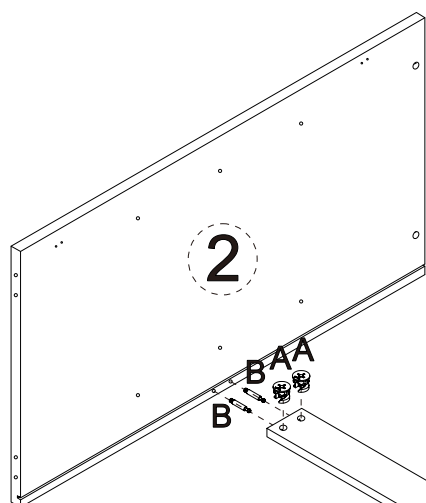

Connect part 2/4 to part 6 with hardware A/B.

6

A A

B

B

4




Ax4



Bx4

2

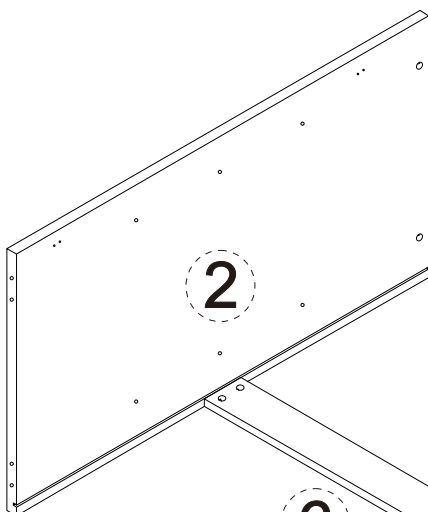

2

6

4

B

B

A A

6




Ax2



Bx2


Connect part 6 to part 4 with hardware A/B.

3

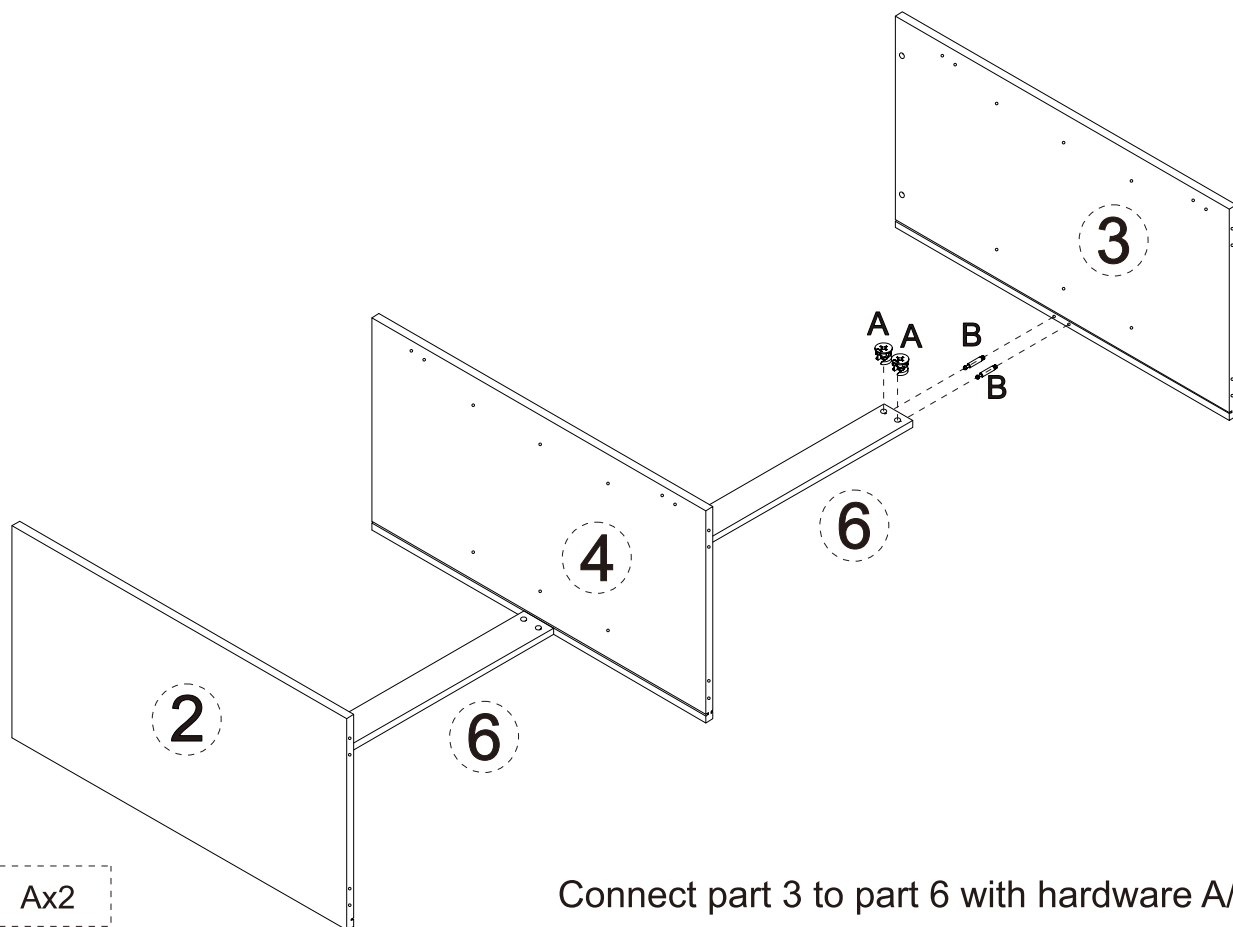

Connect part 3 to part 6 with hardware A/B.


4

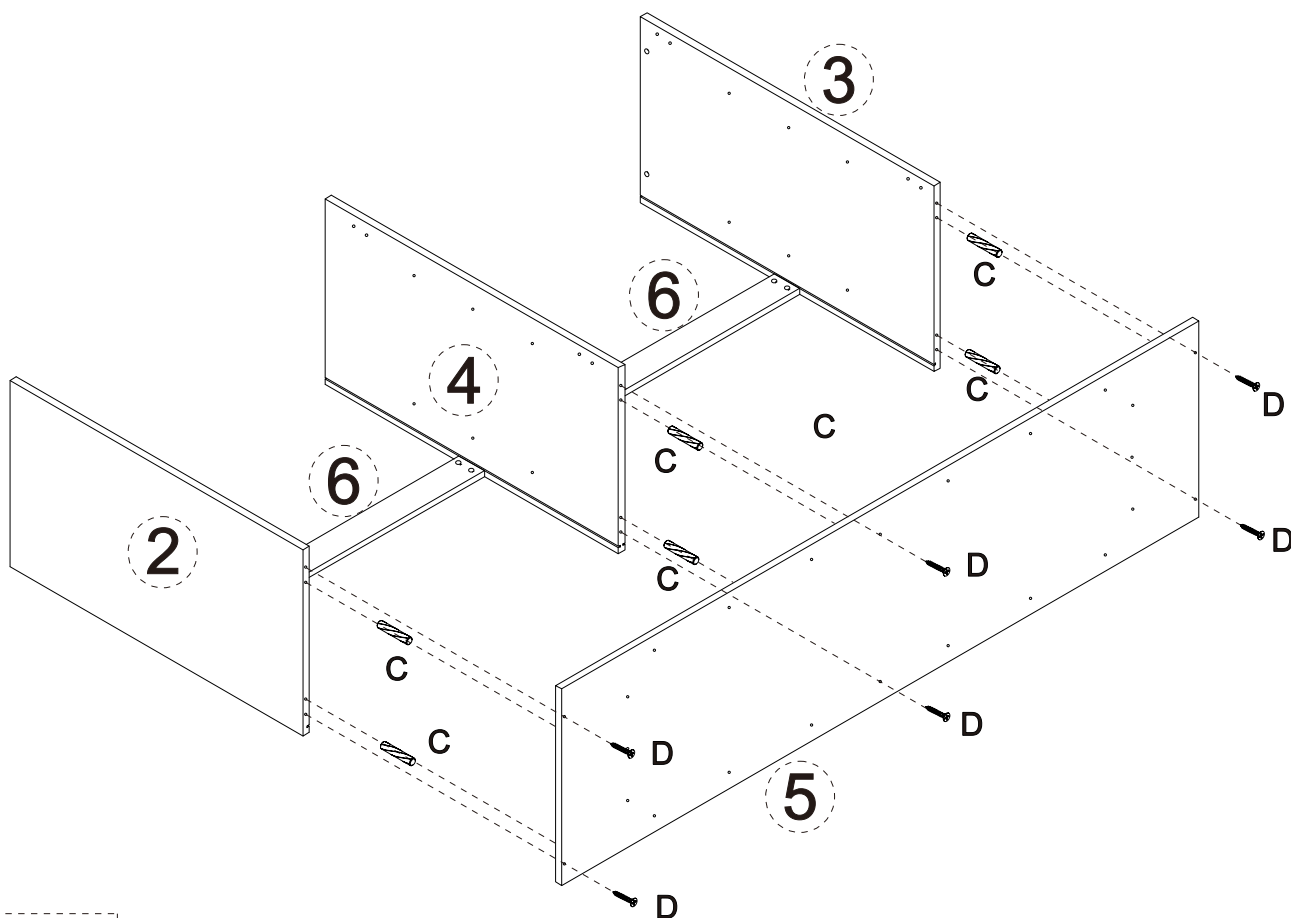

Connect part 5 to part 2/3/4 with hardware C/D.


5

Connect part 11 to part 9/10 with screw E.

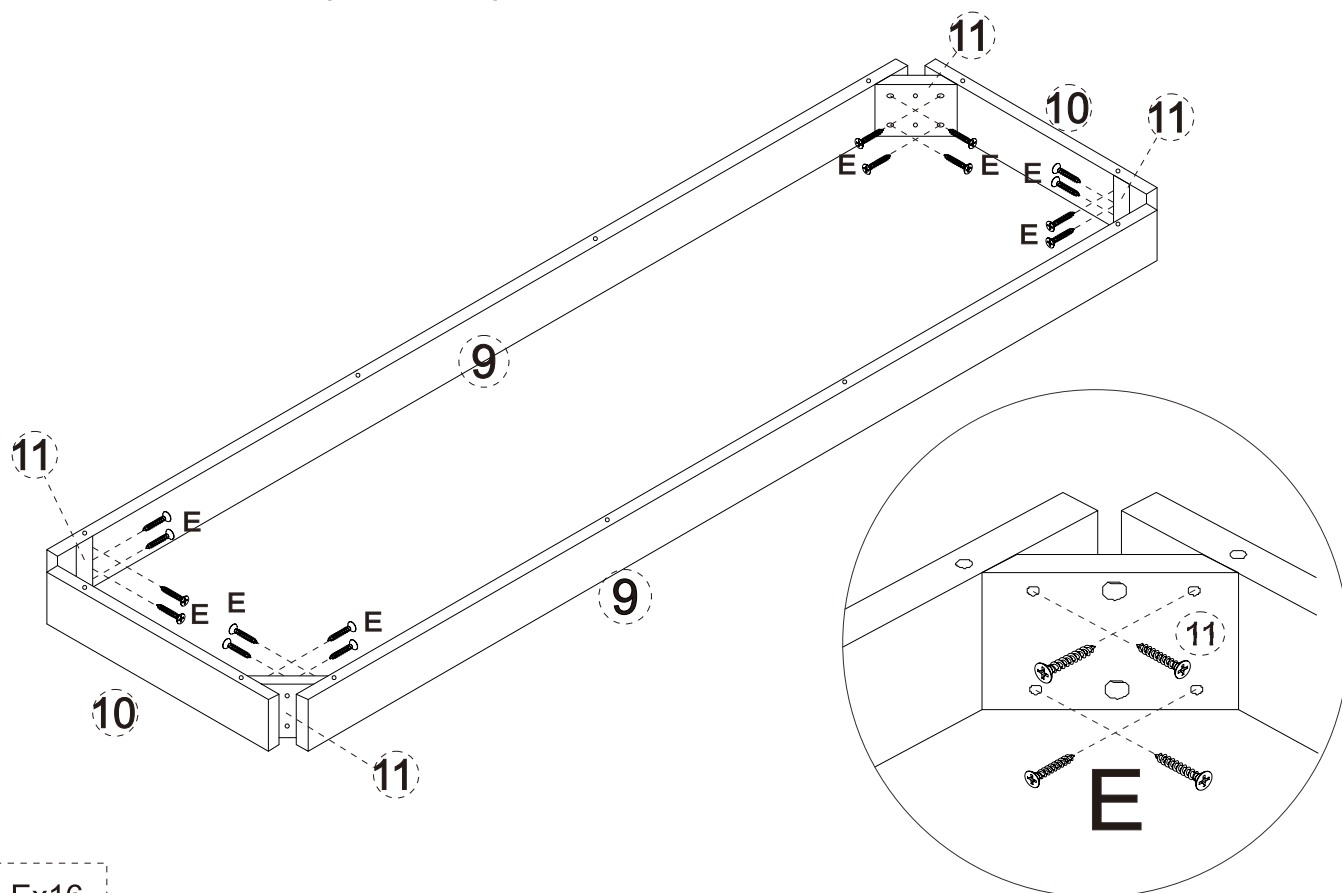

Ex16

6

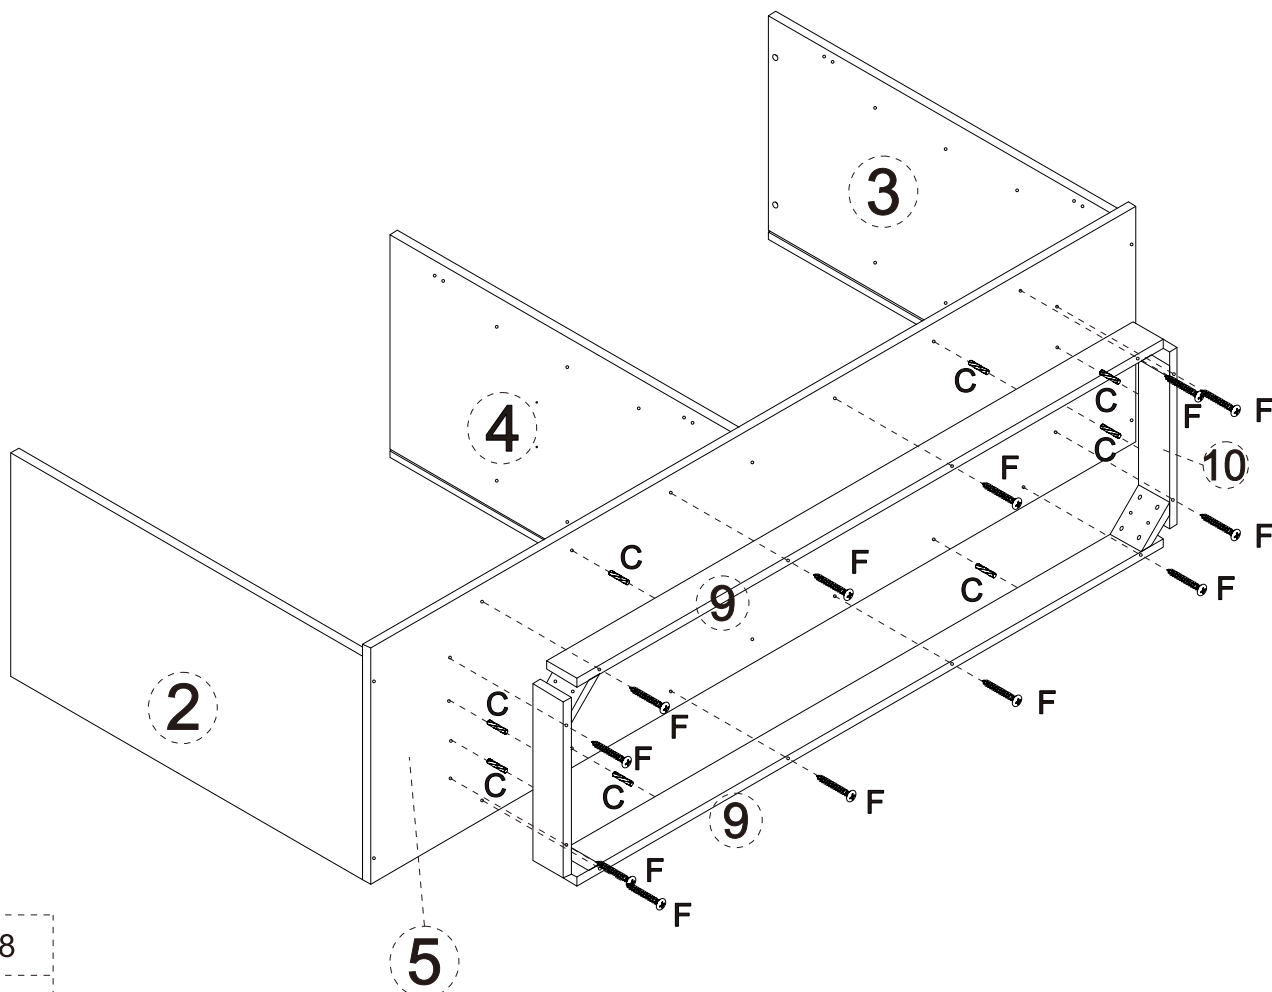

Cx8




Fx12


Connect part 9/10 to part 5 with hardware C/F.

7

Connect part 12 to part 9/10 with hardware G/H.

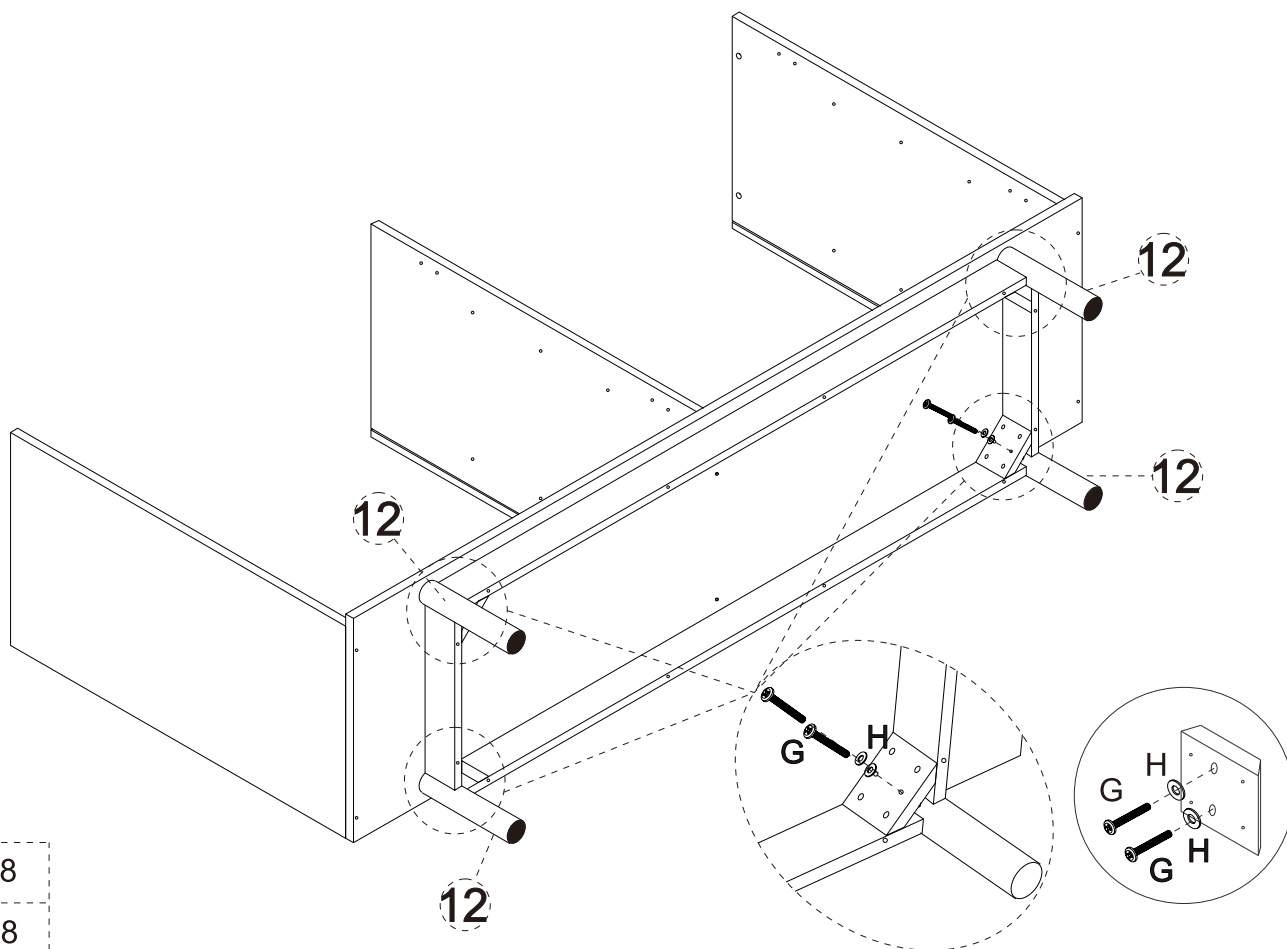


8

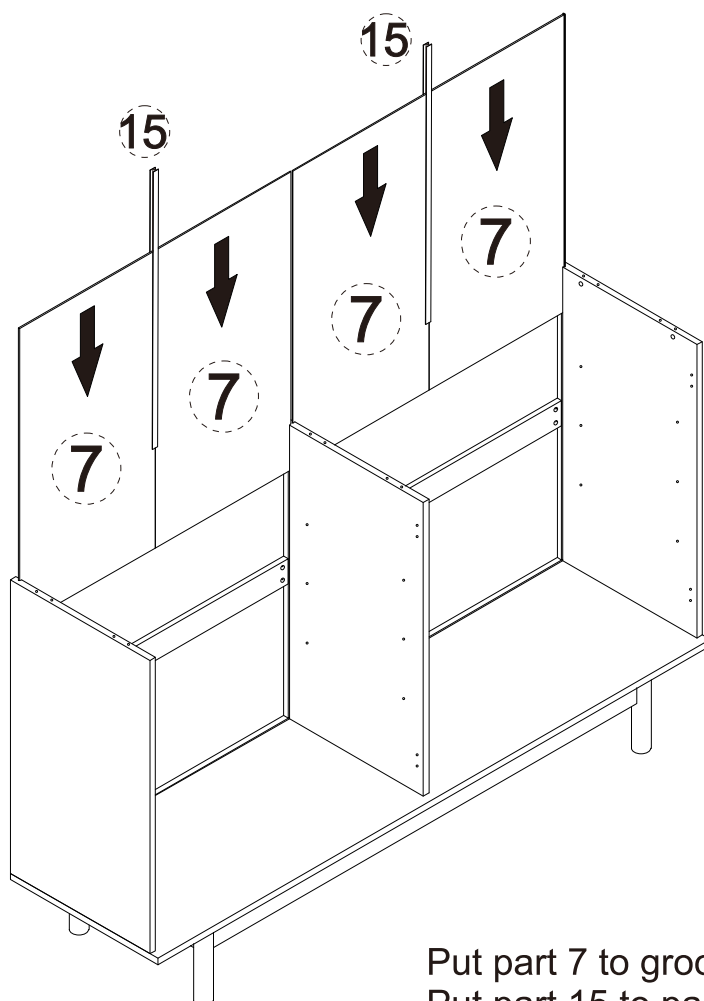

Put part 7 to grooves of part 2/3/4/5,
Put part 15 to part 7.

9

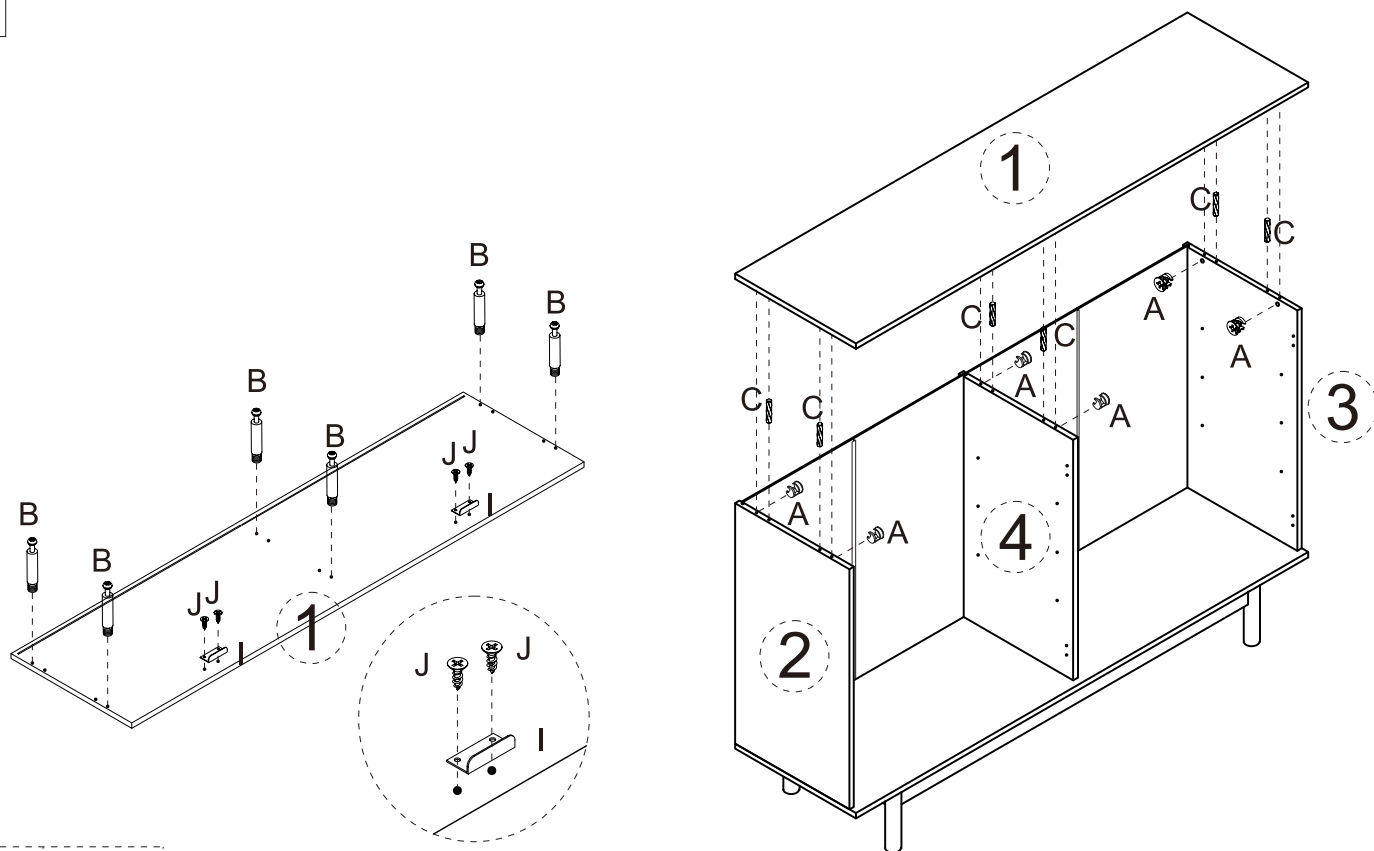

Ax6



Bx6



Cx6




Ix2



Jx4

Connect part I to part 1 with screw J. Screw hardware B to part 1.
Connect part 1 to part 2/3/4 with hardware C/A.

10

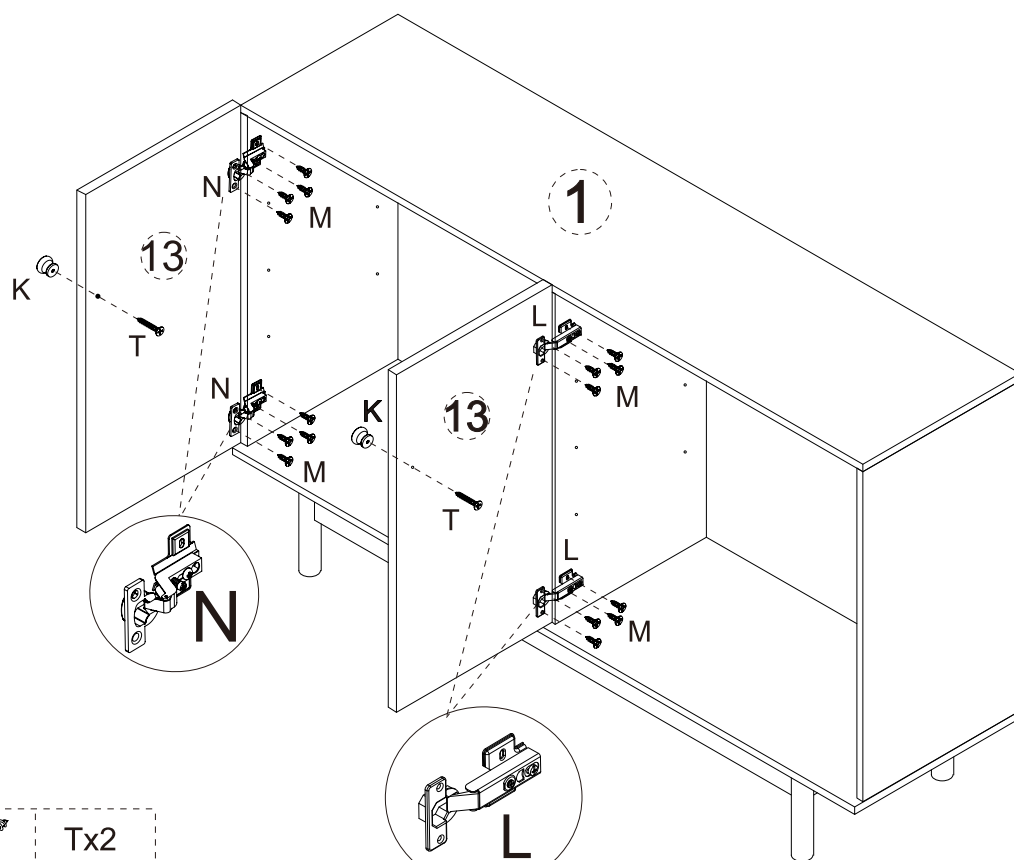

Tx2



Kx2



Mx16







Nx2



Lx2


Connect part K to part 13 with screw T. Connect hardware N to part 13/2 with screw M

Connect hardware L to part 13/4 with screw M.

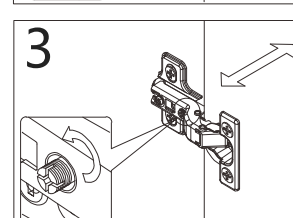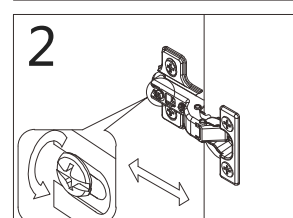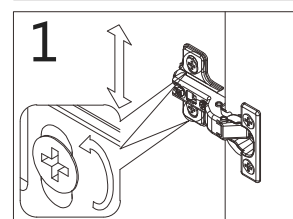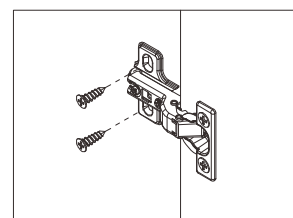


11

Connect part K to part 14 with screw T .
 Connect hardware N to part 14/3 with screw M
 Connect hardware L to part 14/4 with screw M.

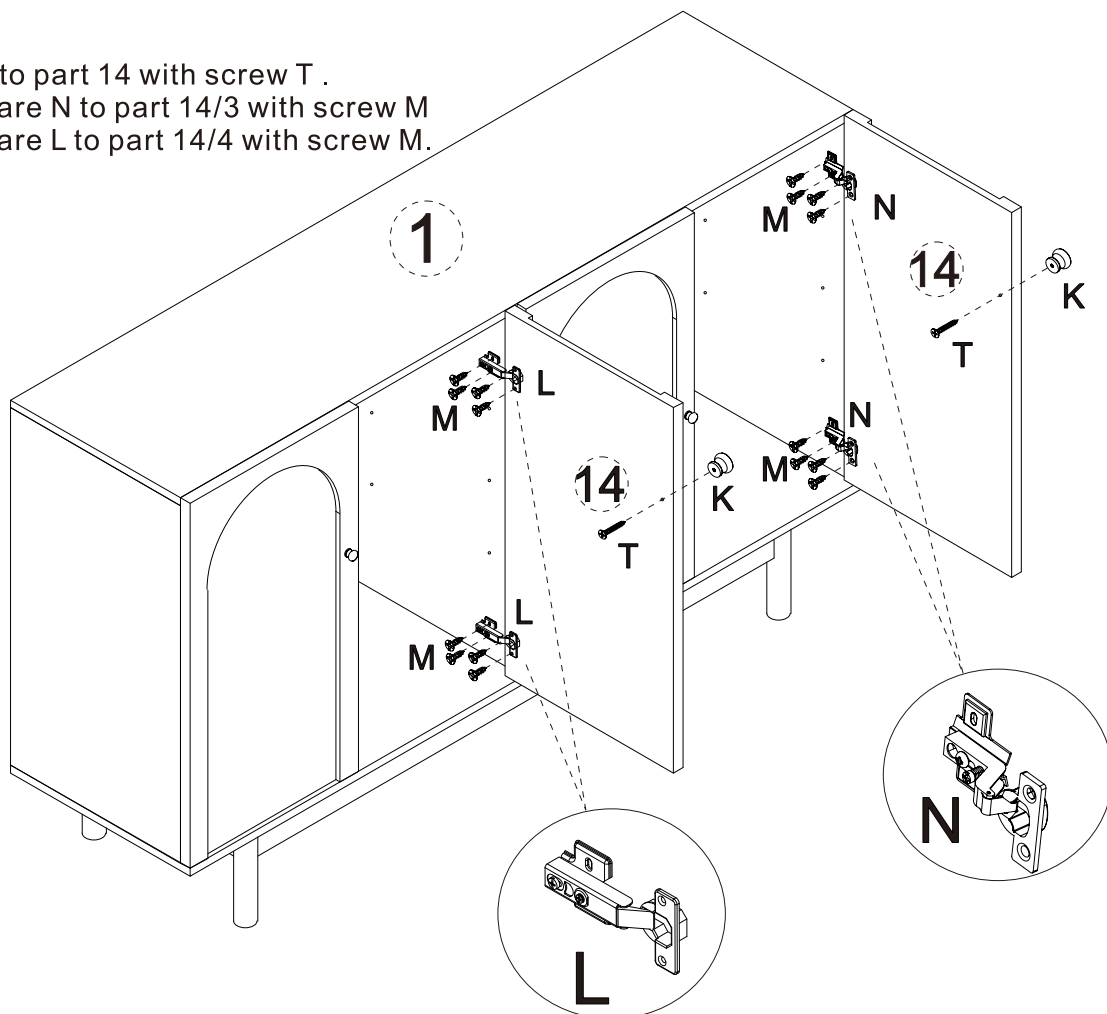

	Tx2
	Kx2
	Mx16
	Nx2
	Lx2




12

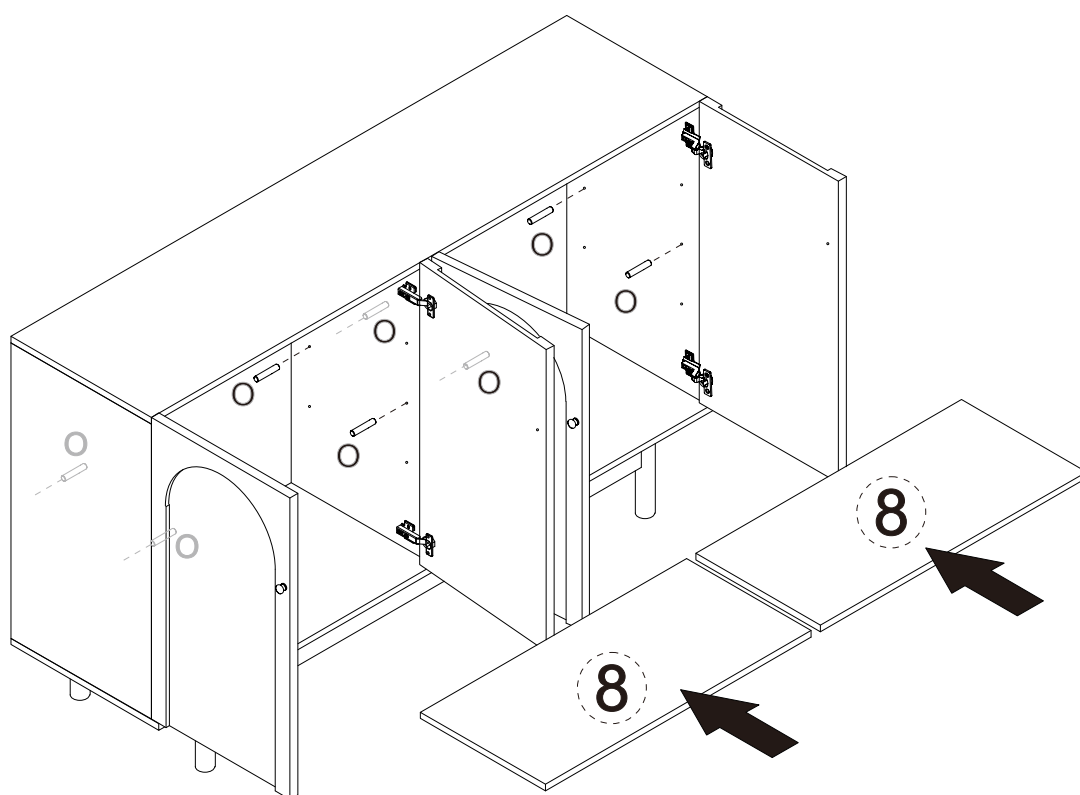

Put hardware O to part 2/3/4 .Put part 8 on hardware O.



	Ox8
--	-----

13

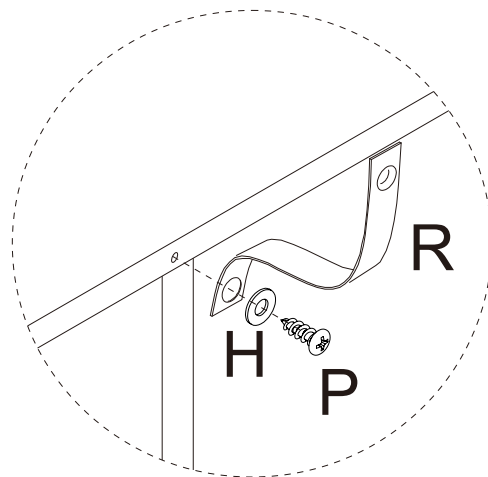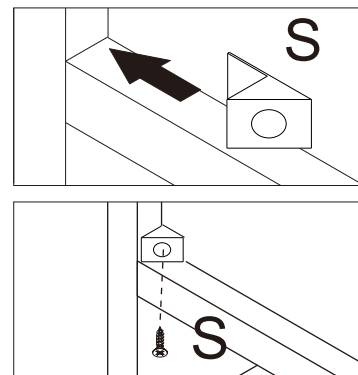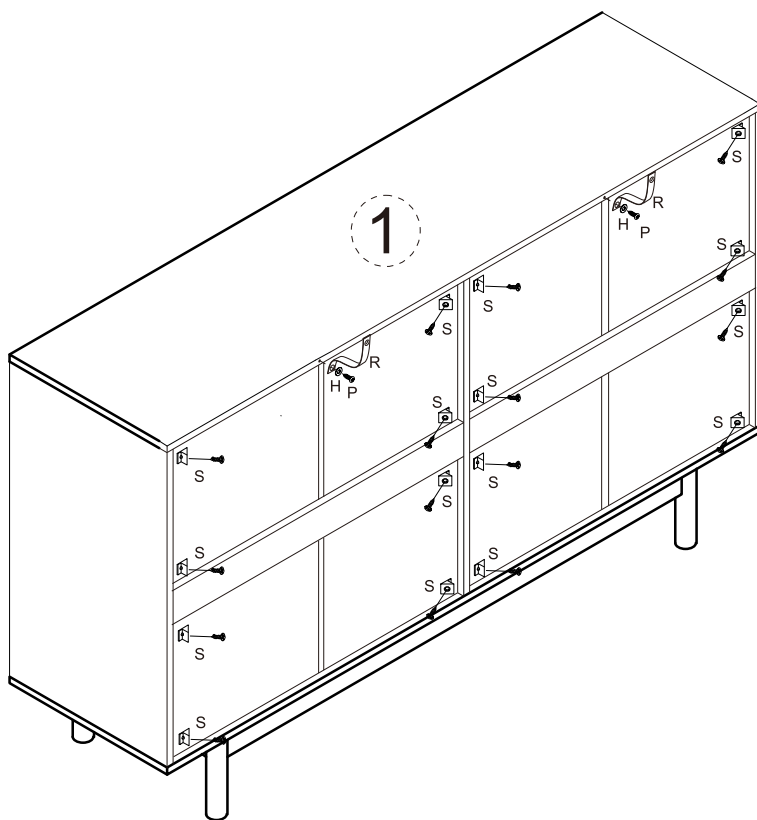

	Px2	Connect hardware S to back of cabinet with matched screw. Connect hardware H/R to cabinet with screw P.
	Hx2	
	Rx2	
	Sx16	

14

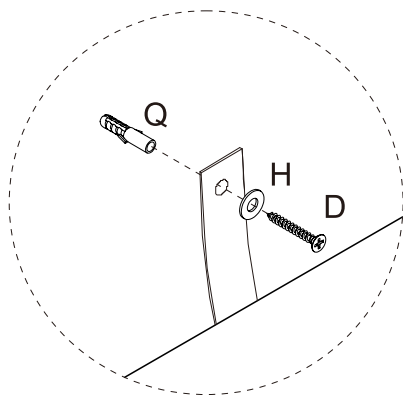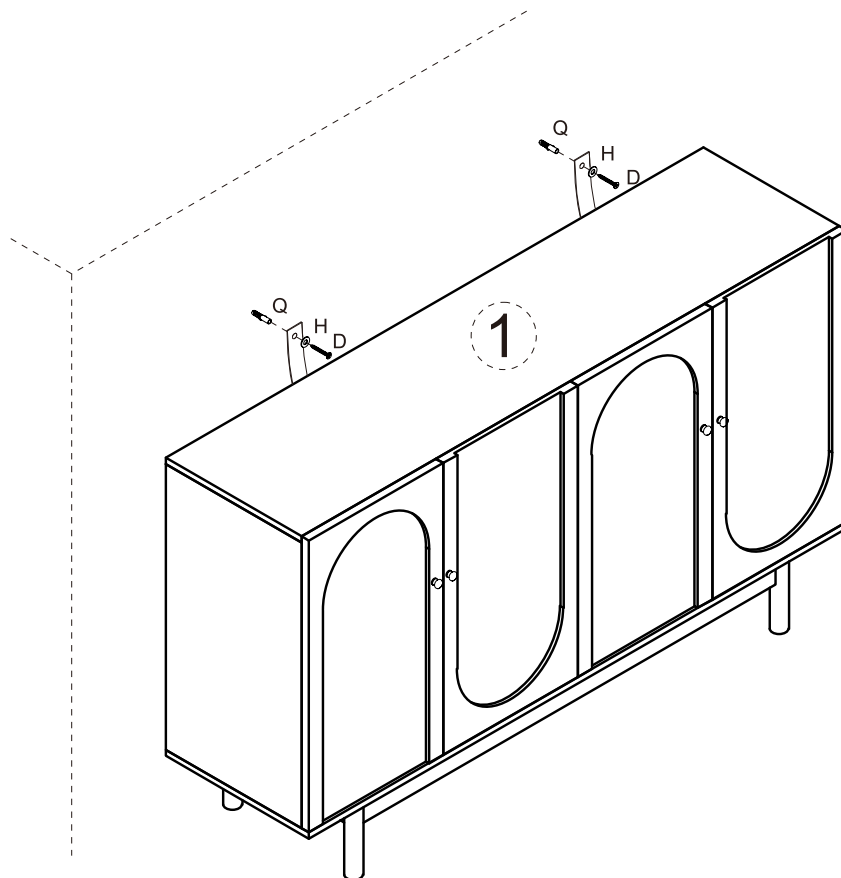

	Dx2	Connect hardware R to wall with hardware Q/H/D. Congratulations on your successful installation of this product!
	Hx2	
	Qx2	