



Arched top bookcase















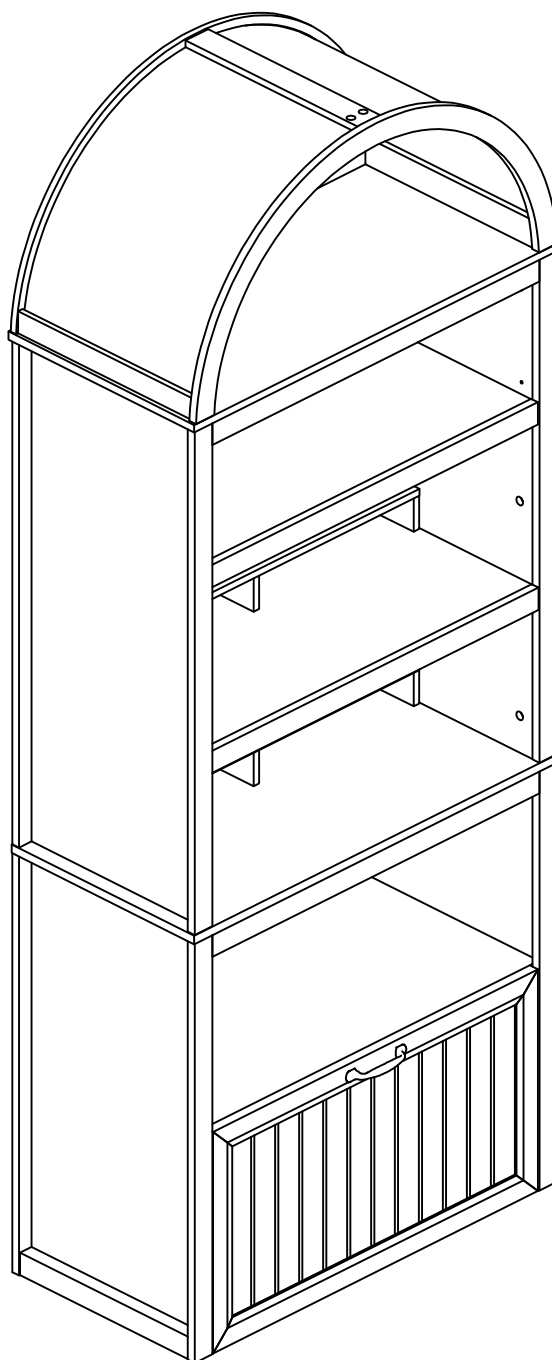


AJ-DJ505079
version: 2.0


ASSEMBLY INSTRUCTIONS

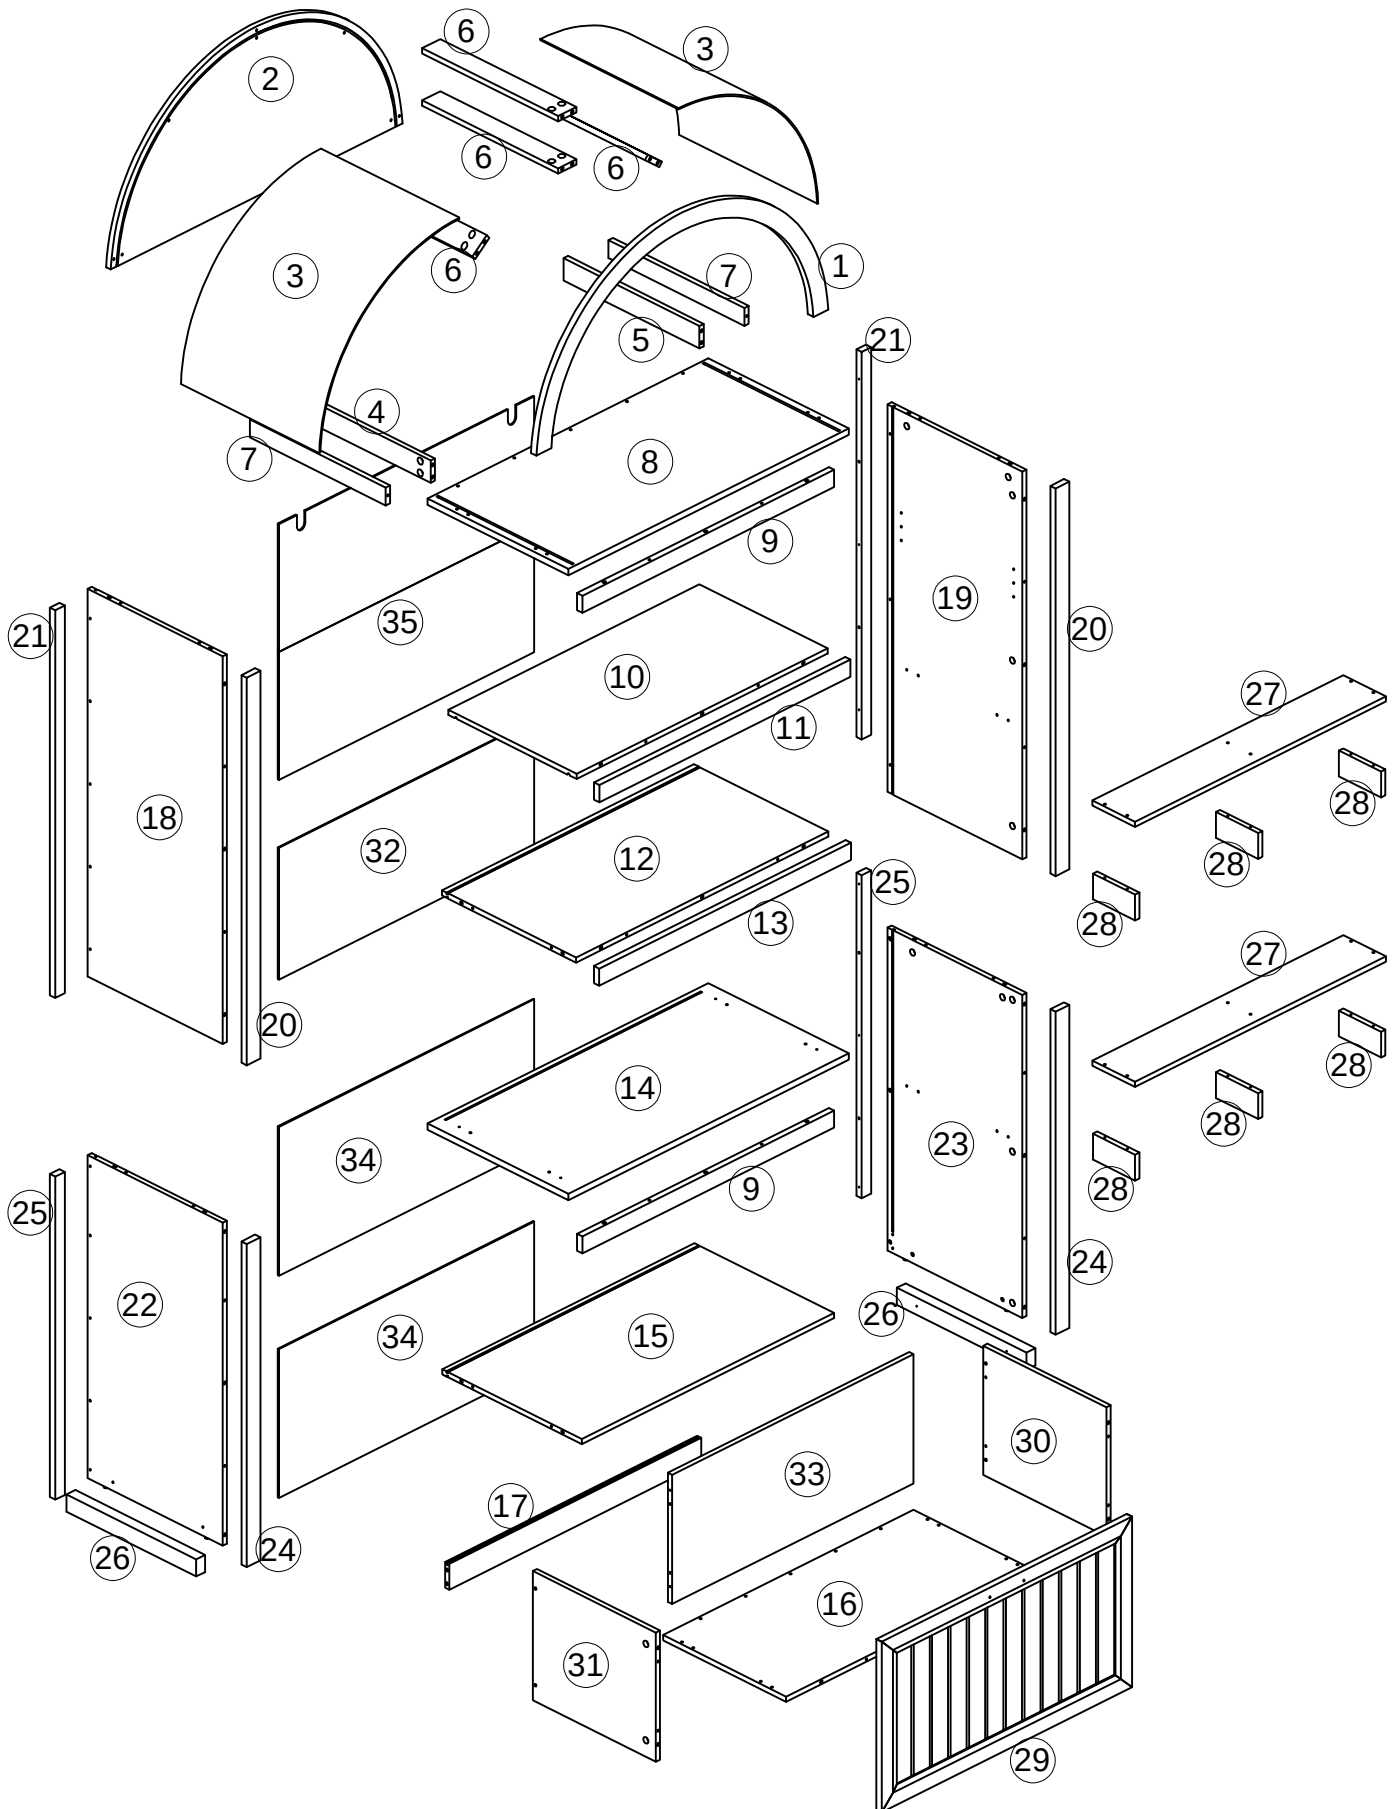


ASSEMBLY INSTRUCTIONS

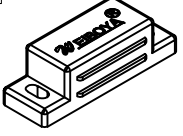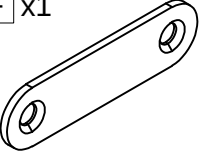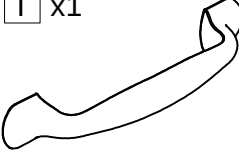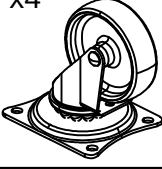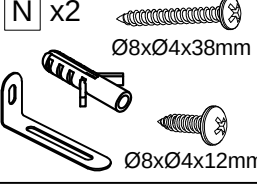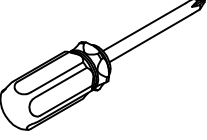A x68+4  Ø6x30mm	B x63+3  Ø6x35mm	C x63+3  Ø15x10mm	D x42+2  Ø5x38mm	E x1 
F x1 	G x4+1 	H x16+2  Ø8xØ4x30mm	I x1 	J x2  M4x18mm
K x4 	L x2+1  Ø6xØ3x14mm	M 18+2  Ø6xØ3x12mm	N x2  Ø8xØ4x38mm Ø8xØ4x12mm	O x25+2  Ø6xØ3x16mm
P x63+3 	Q x1  3mm			


ASSEMBLY INSTRUCTIONS

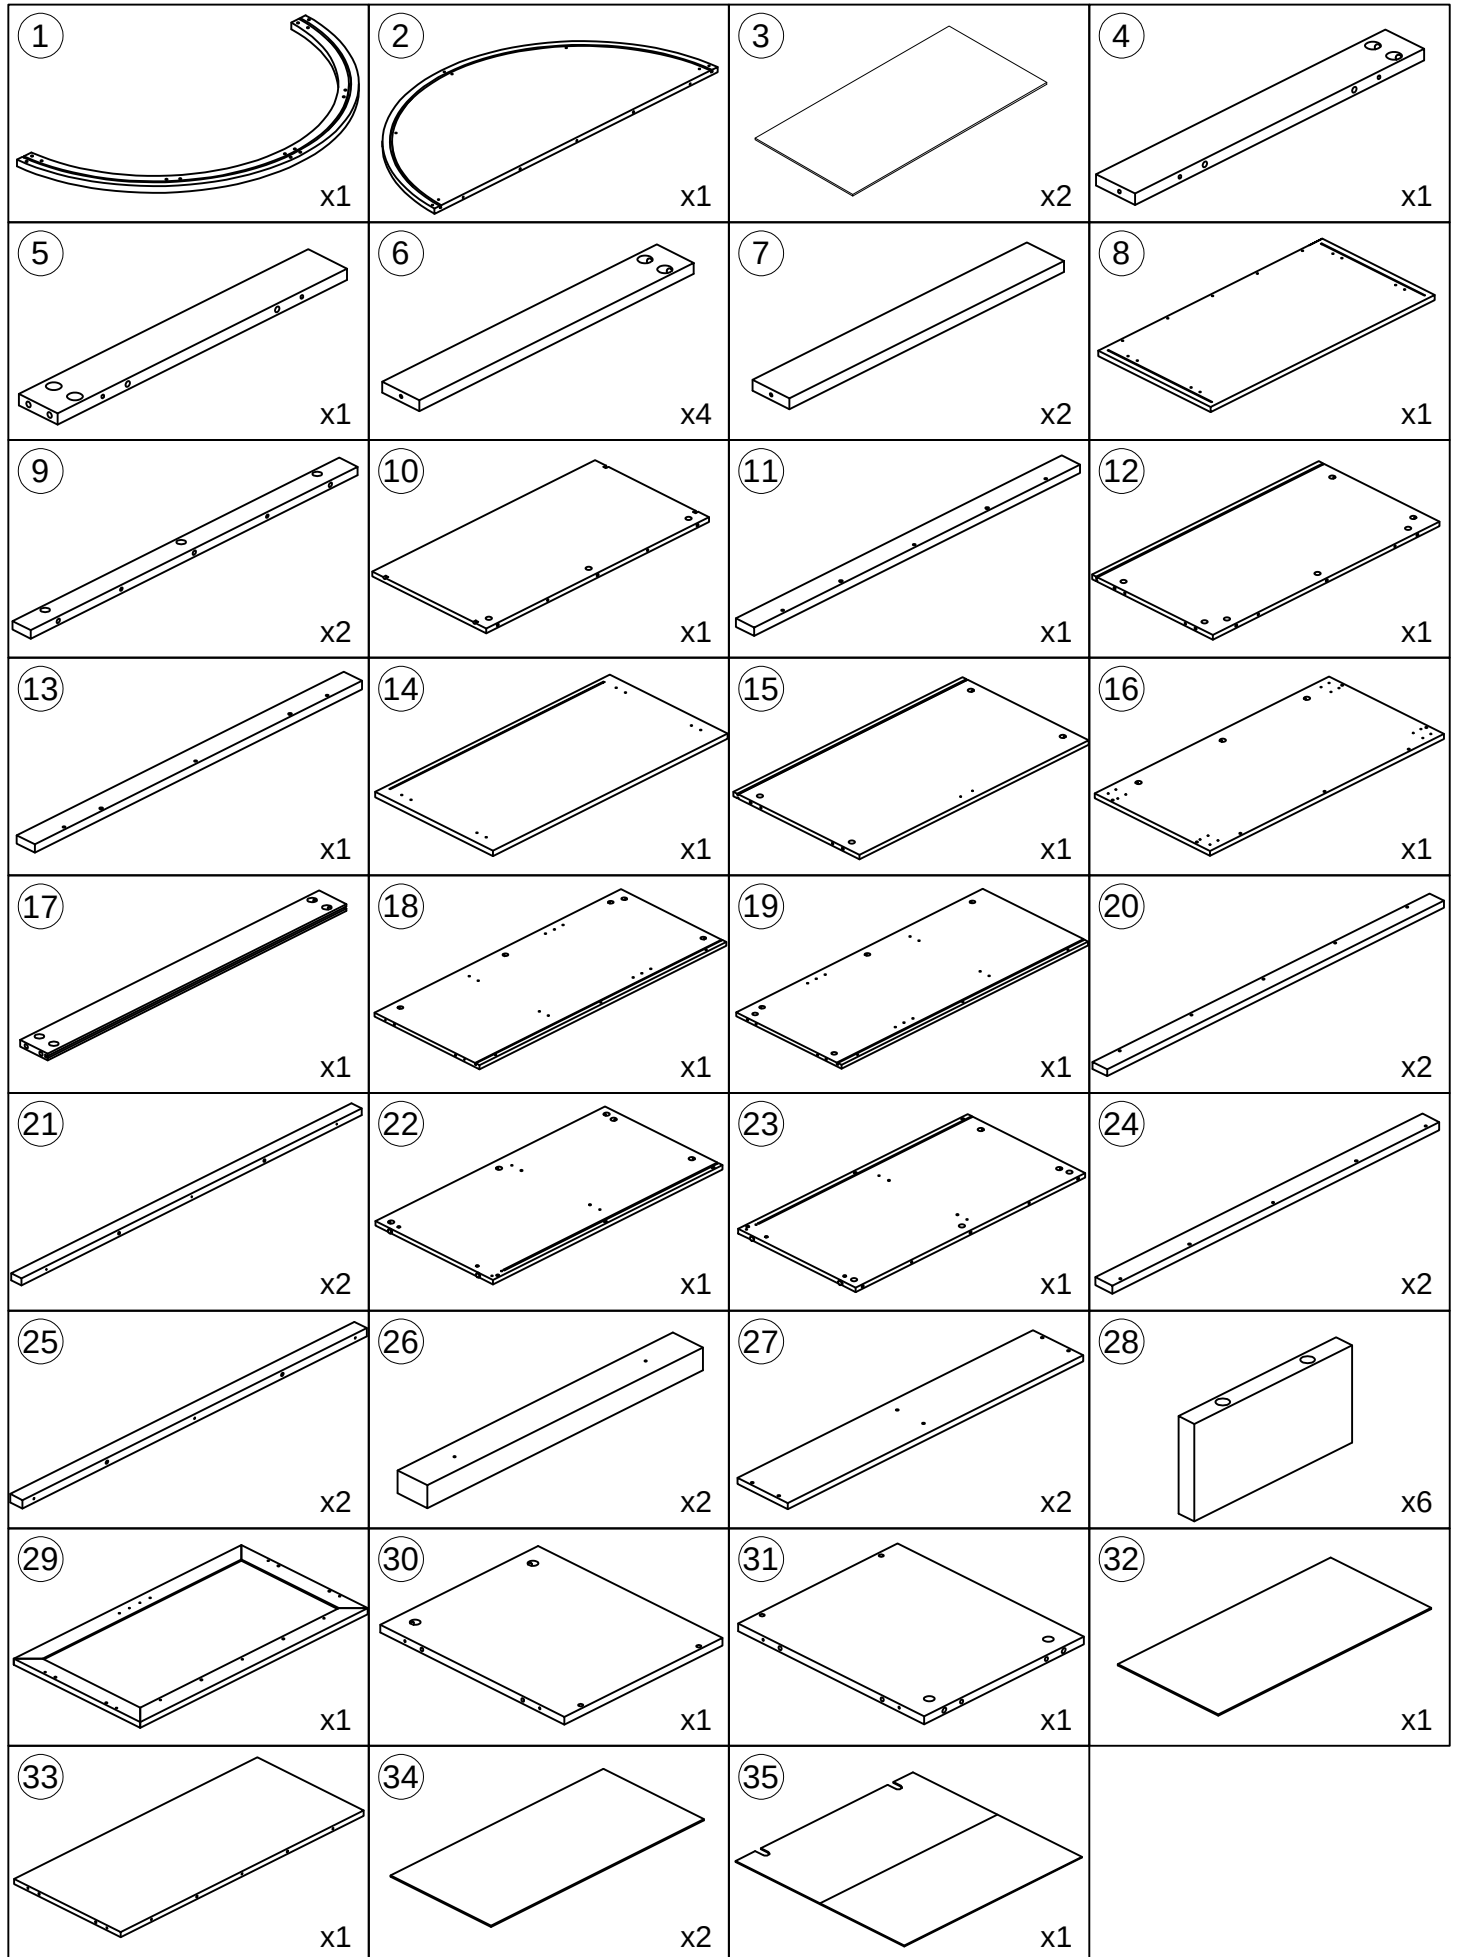

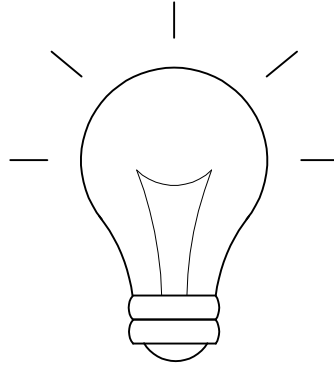


friendly reminder


To avoid errors and confusion during the installation of accessories, use the type and quantity of hardware accessories according to the installation procedure described in the instructions. First, unroll the accessories bag and lay out the hardware accessories, cut holes in the side, and take out the hardware accessories

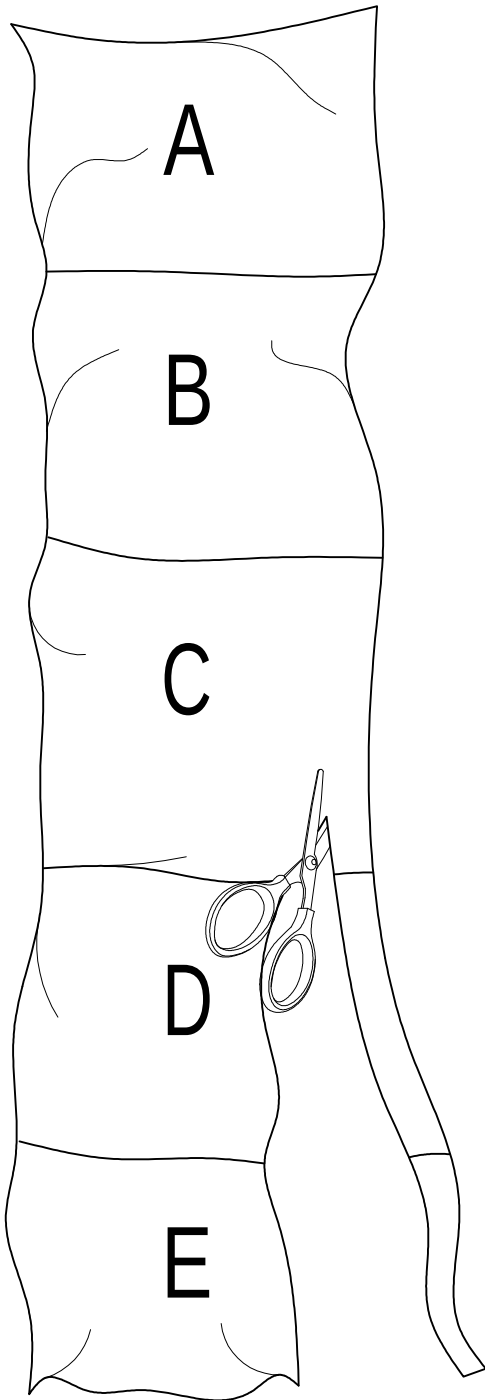

1

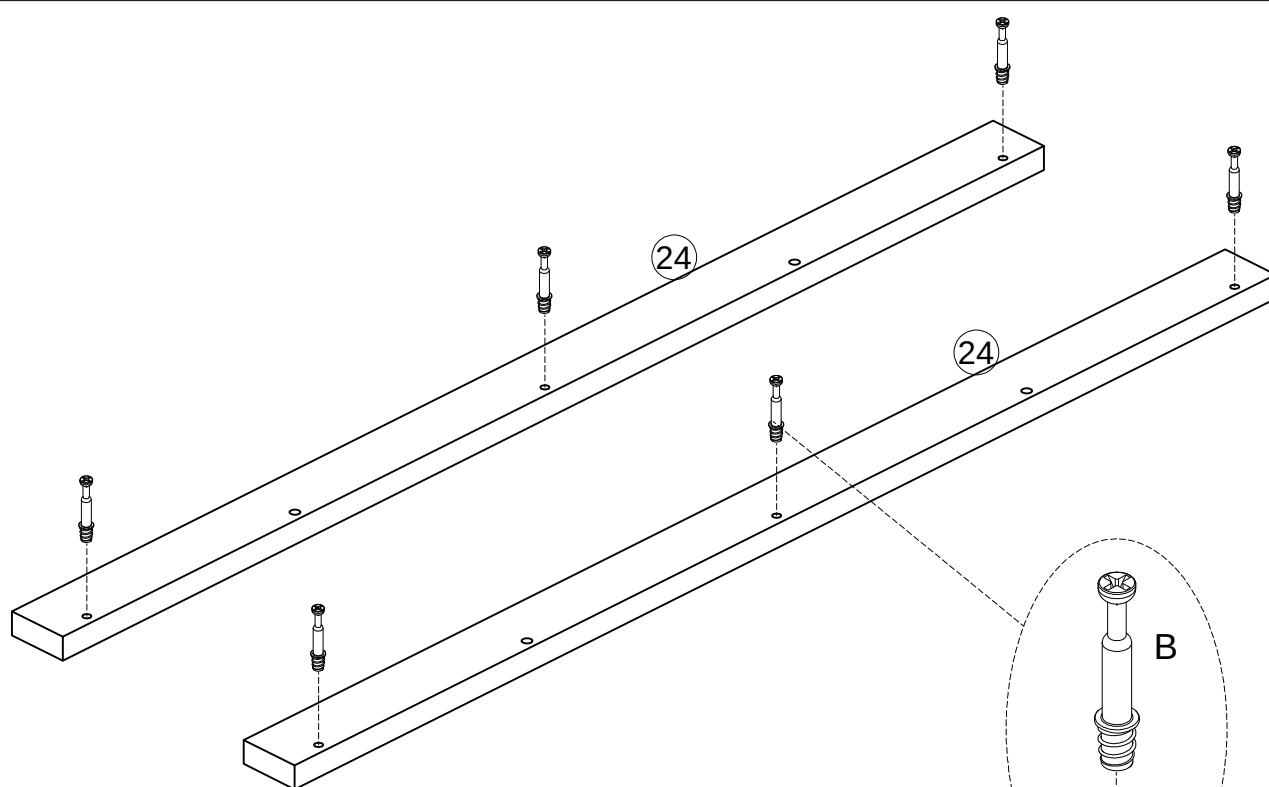


B x6




Ø6x35mm

2


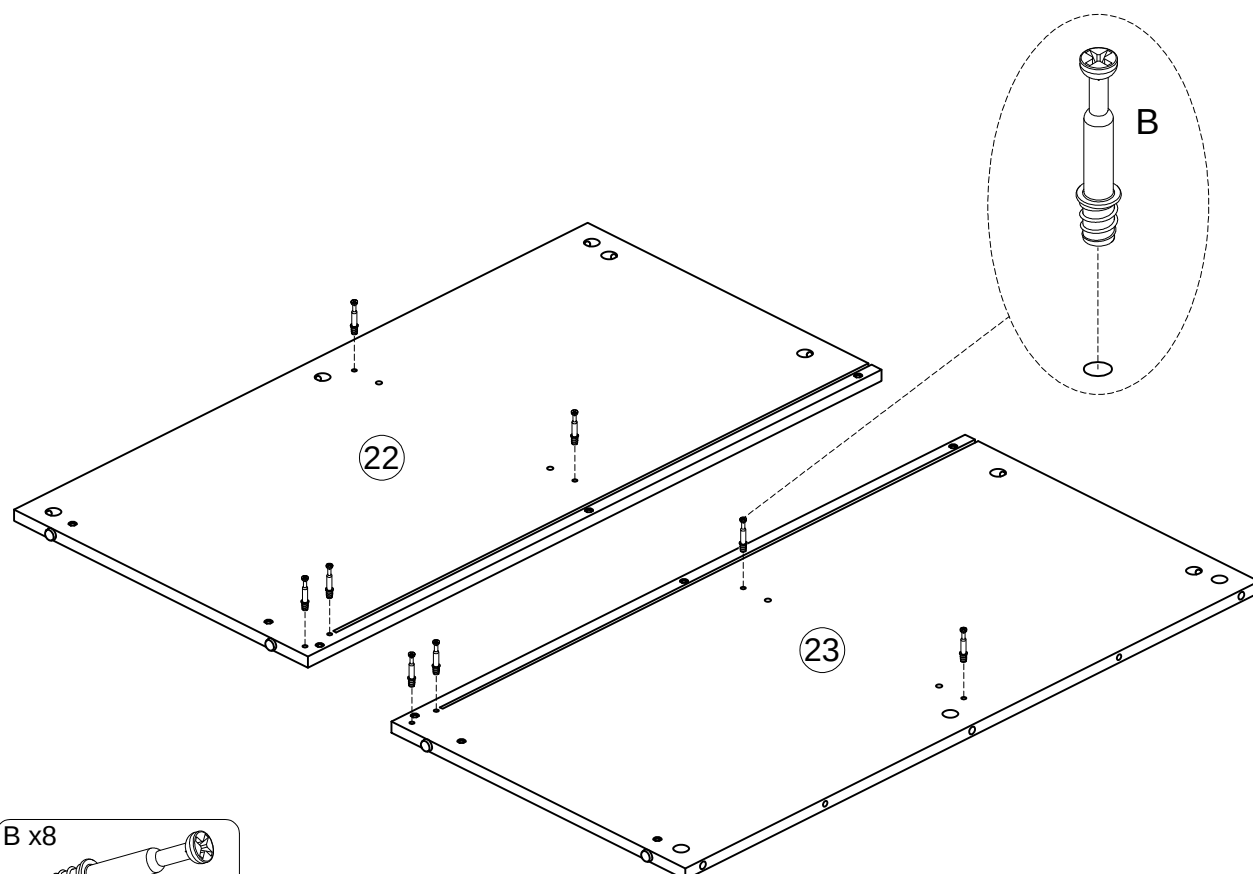


B x8




Ø6x35mm

INSTALLATION INSTRUCTION

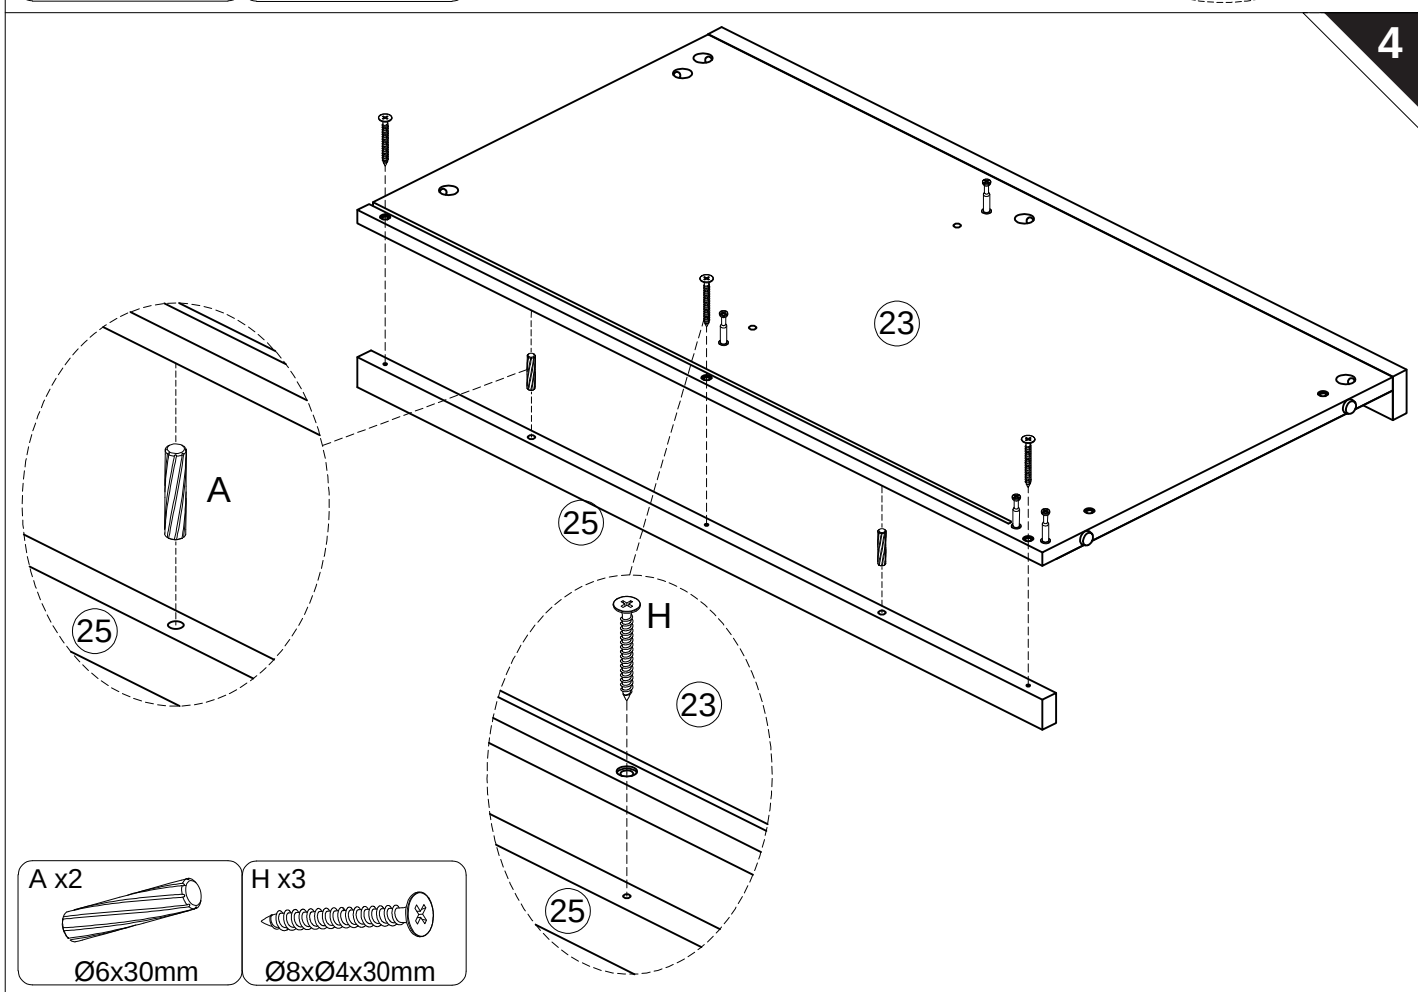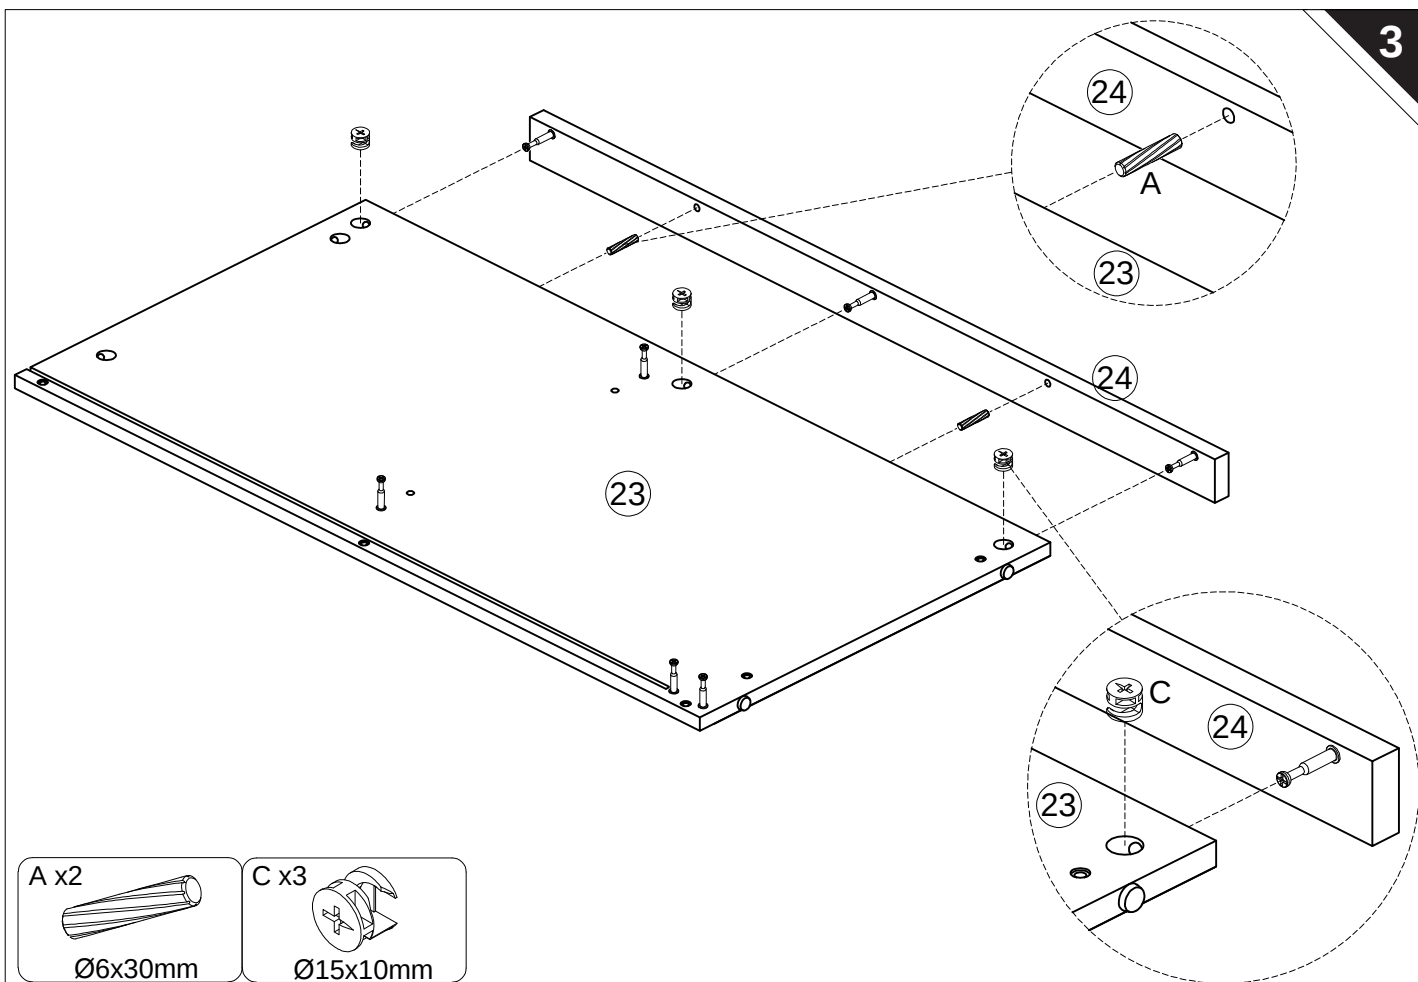


INSTALLATION INSTRUCTION

5

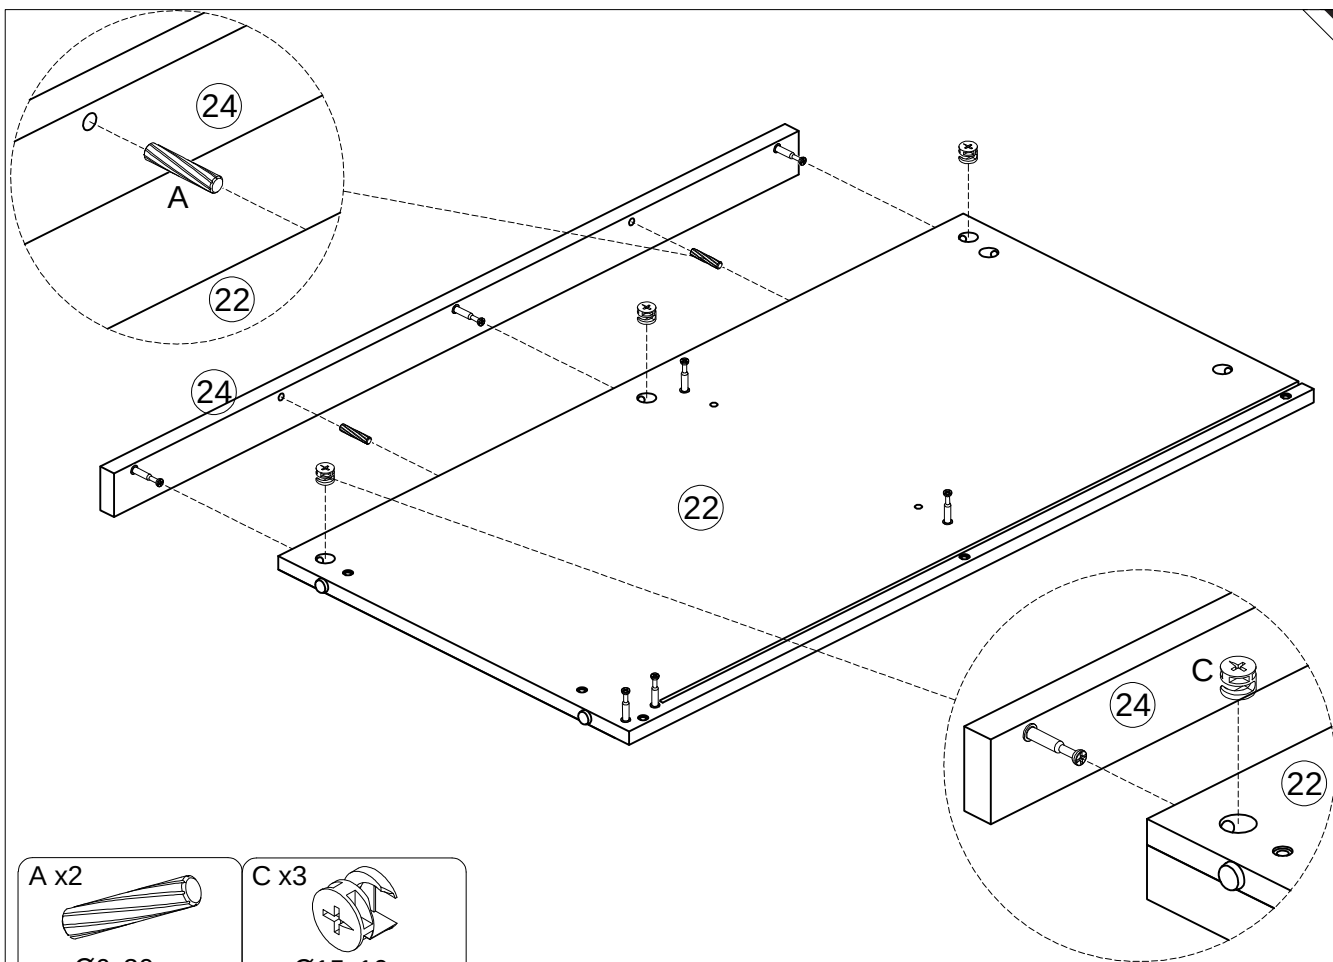


6

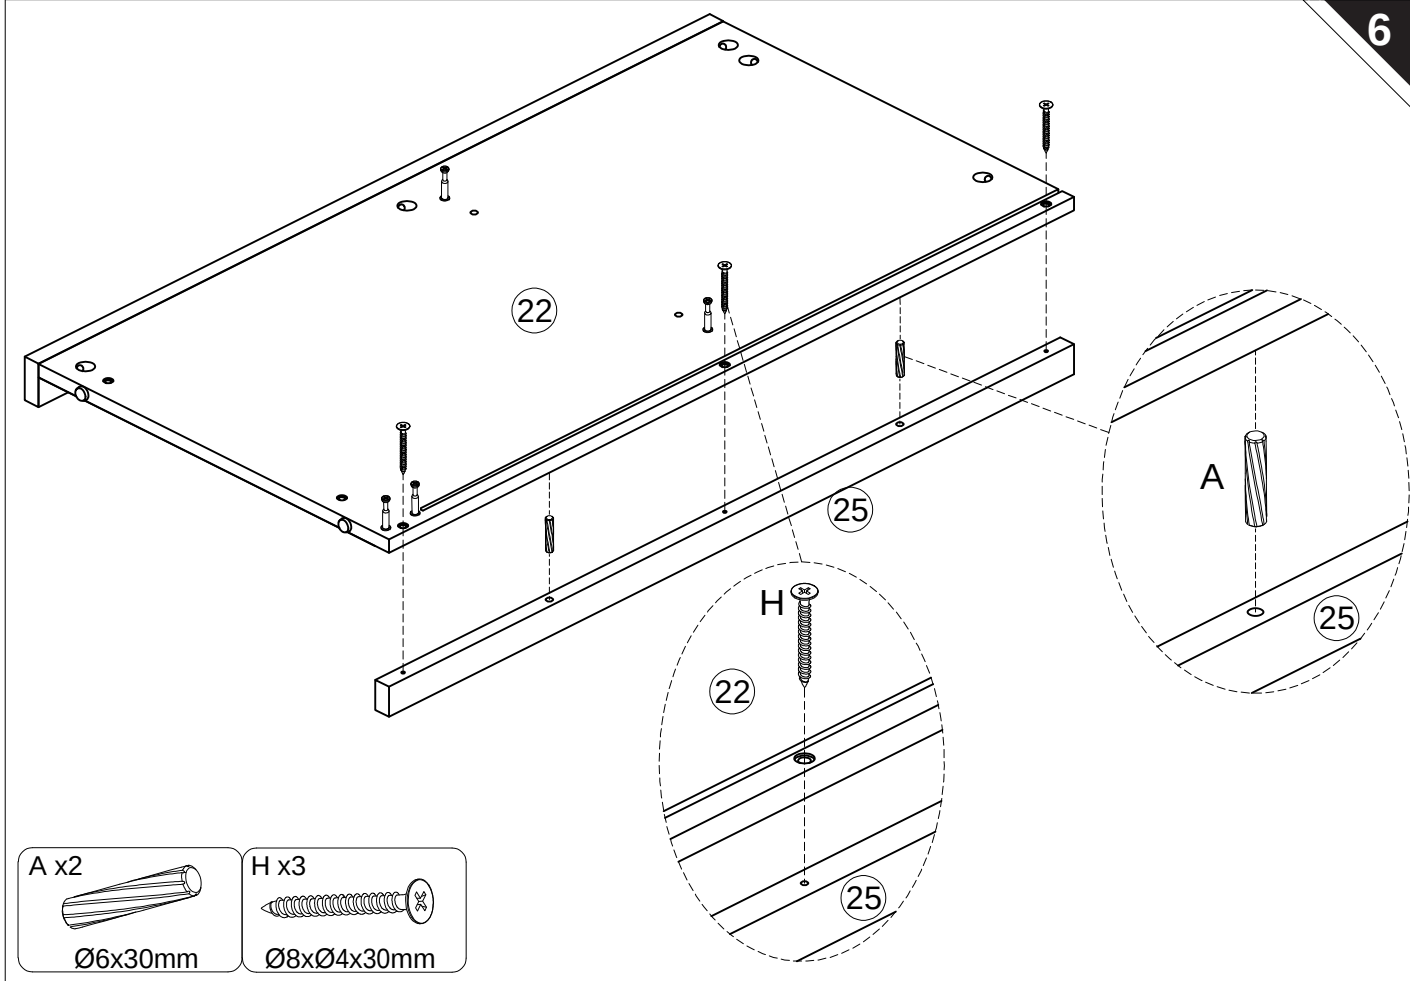


INSTALLATION INSTRUCTION



7

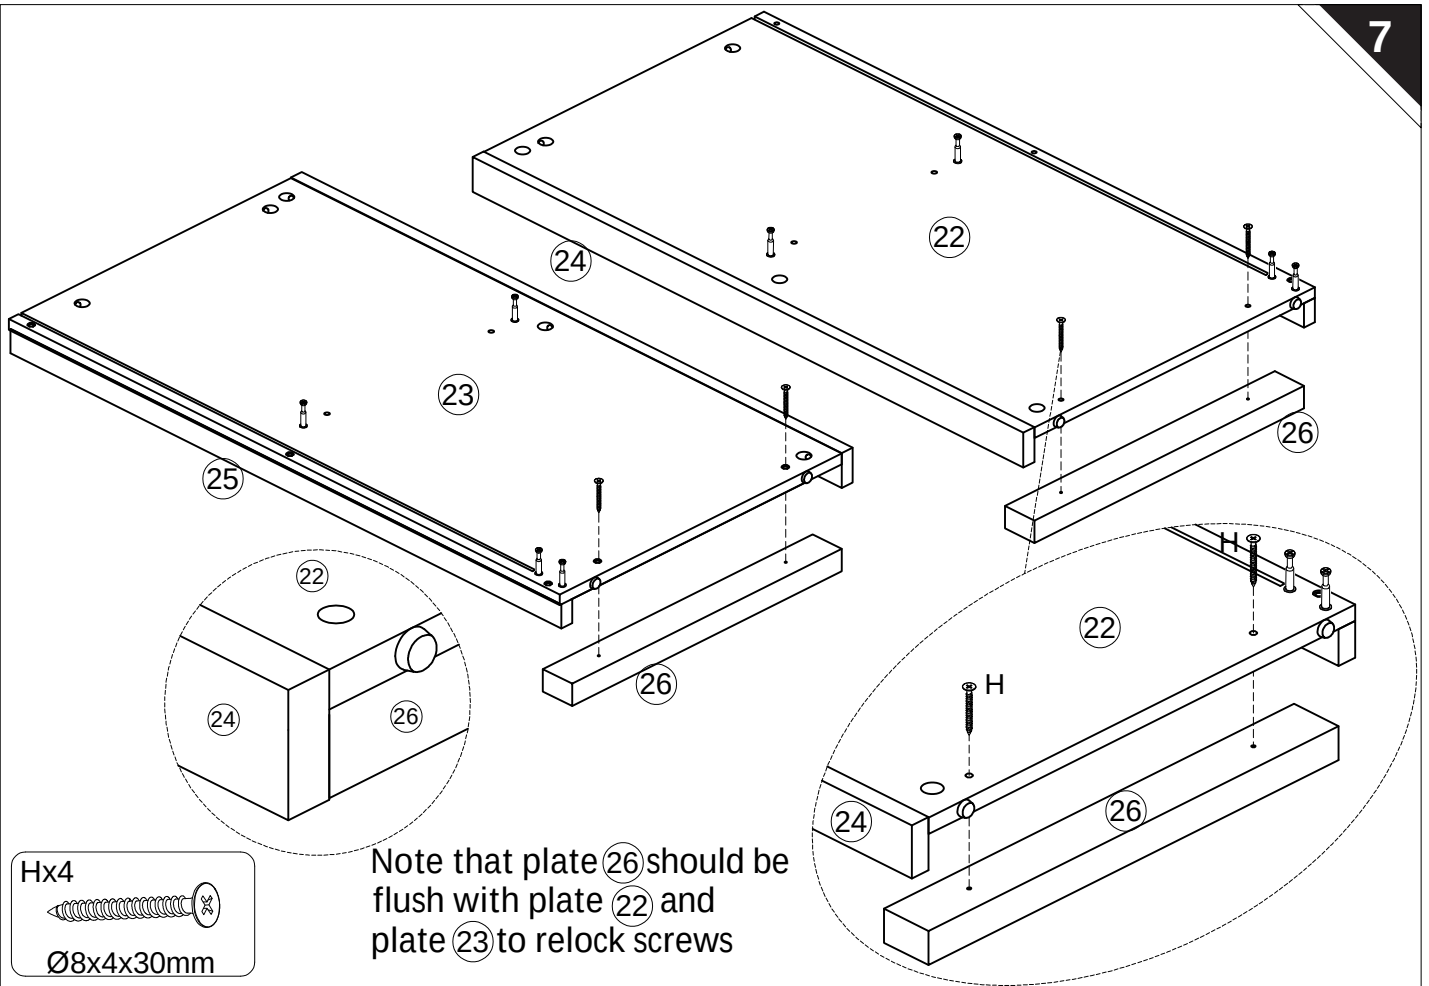

Hx4




8

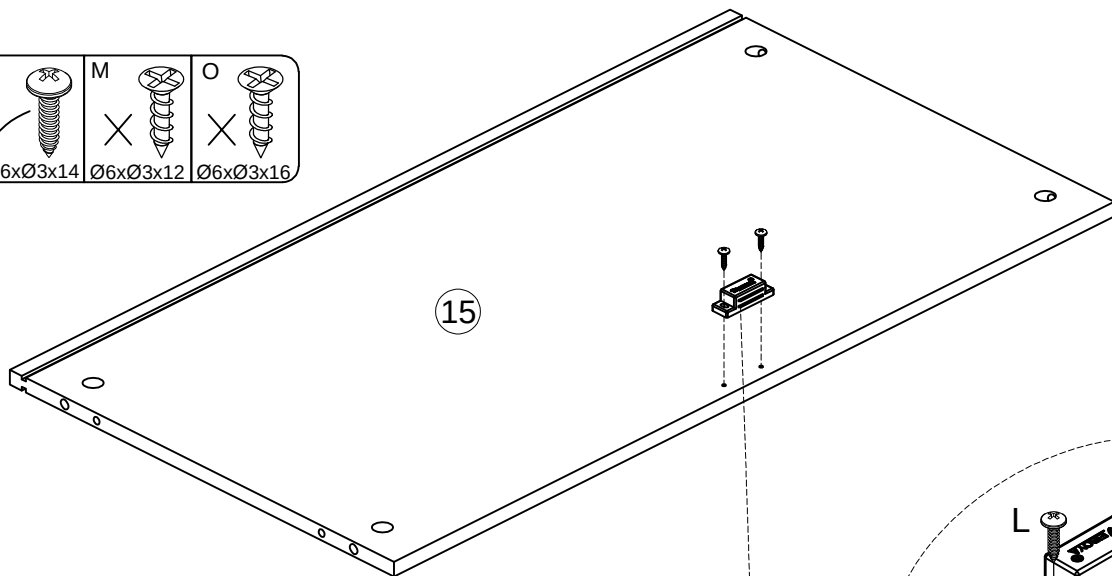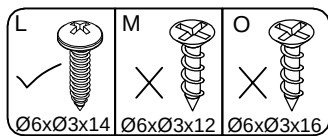


When installing the accessory (E X1), do not tighten the screw (L X2) too tightly. Just tighten it to 80% of its maximum capacity. Then, in step 50, tighten it to 100%.

E x1




L x2

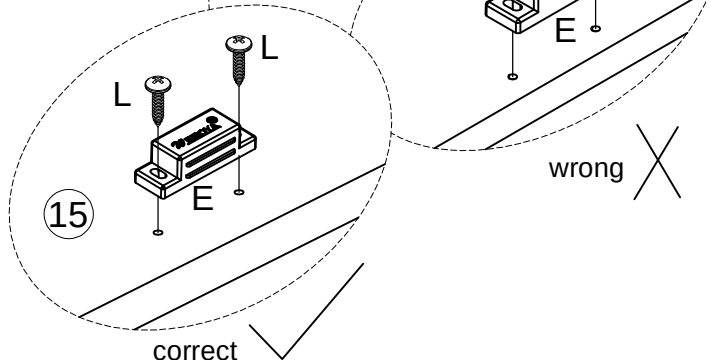


INSTALLATION INSTRUCTION

9

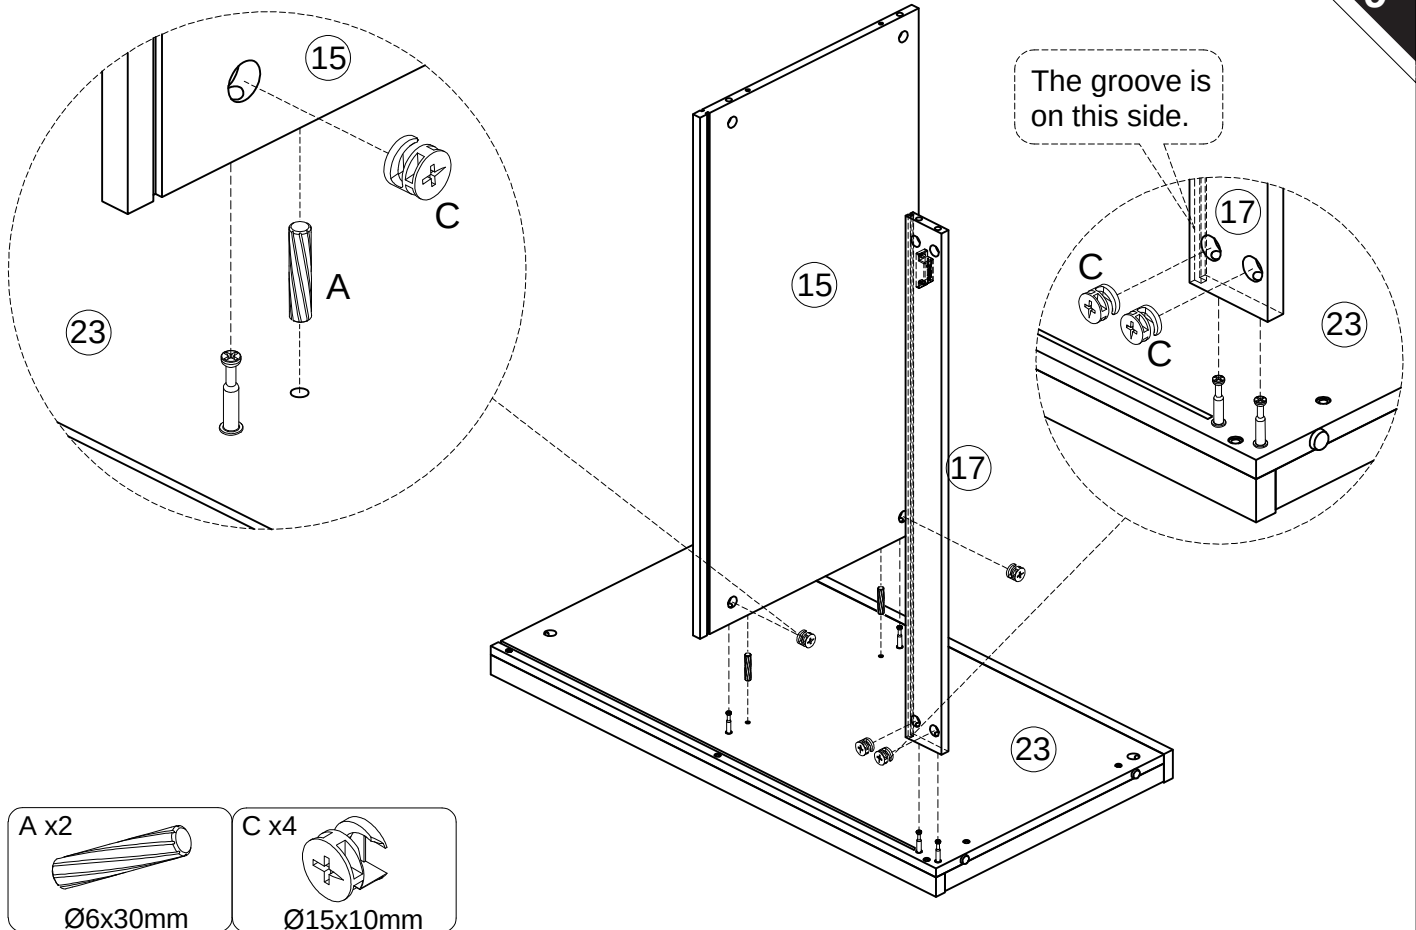


10

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

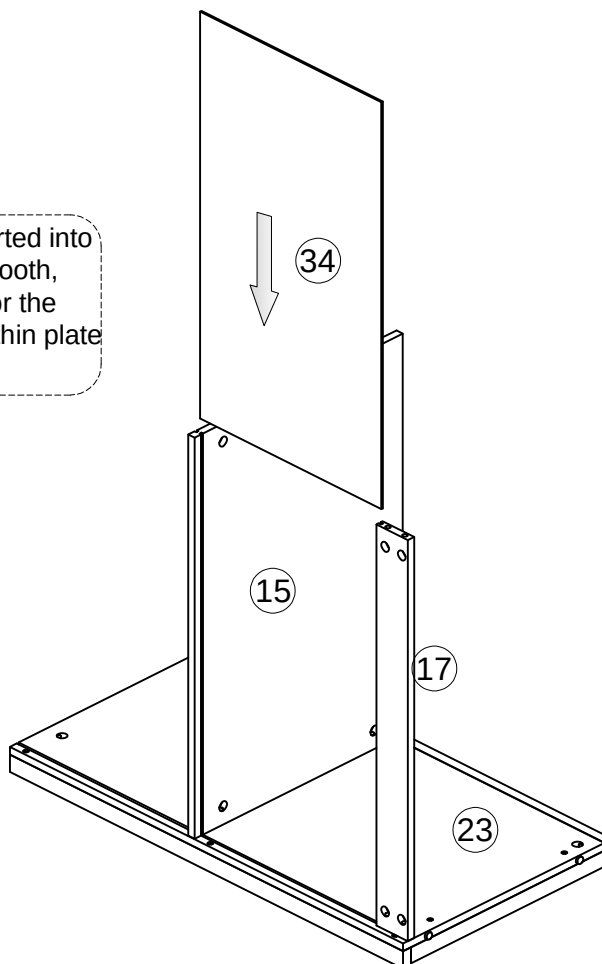


INSTALLATION INSTRUCTION

11

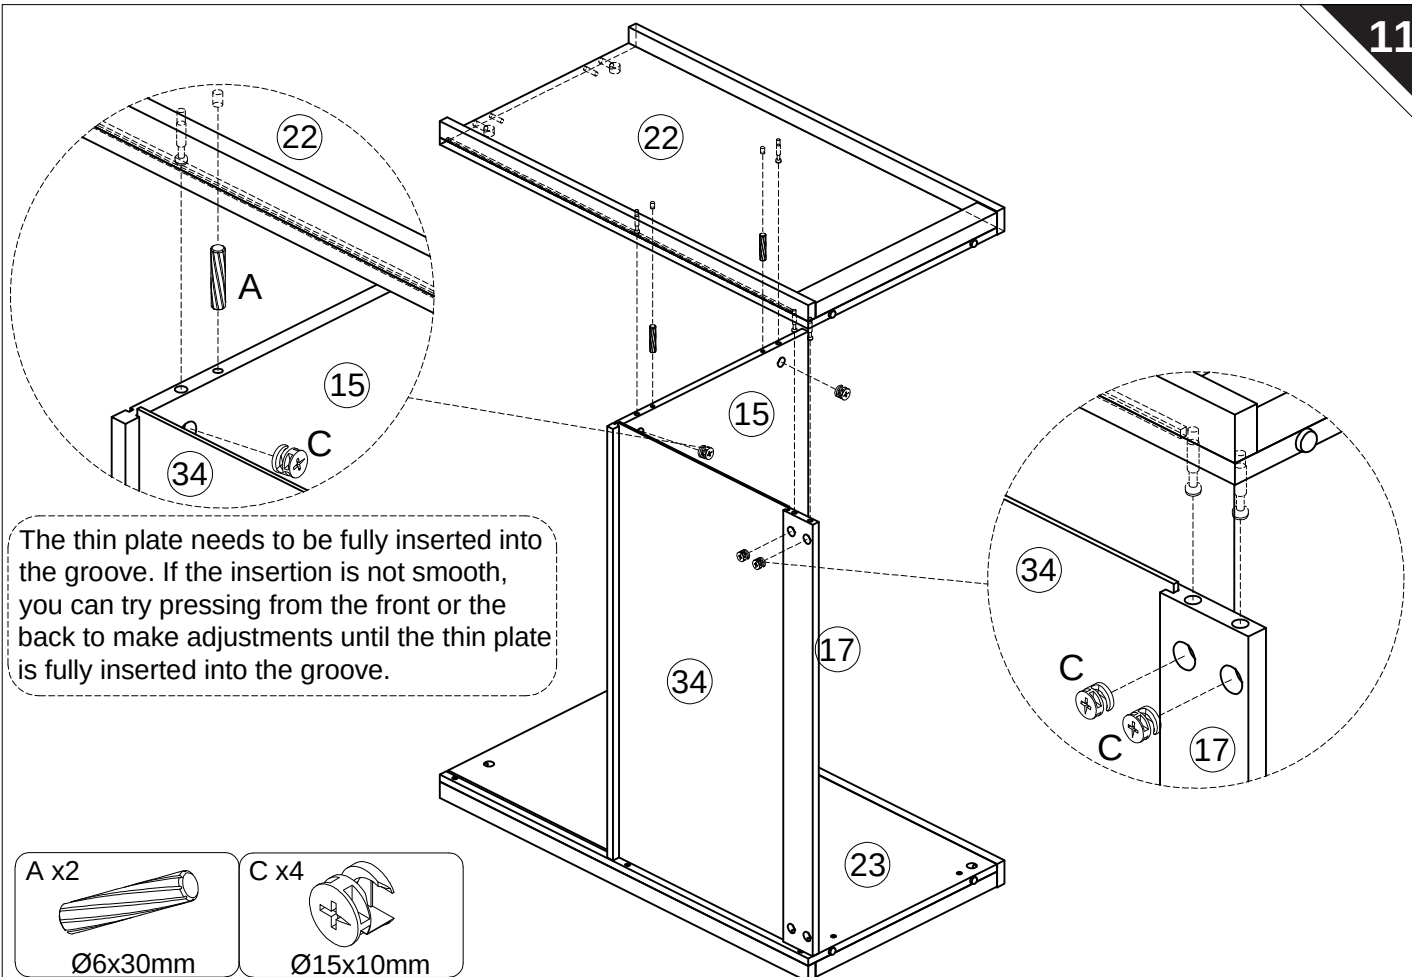


12

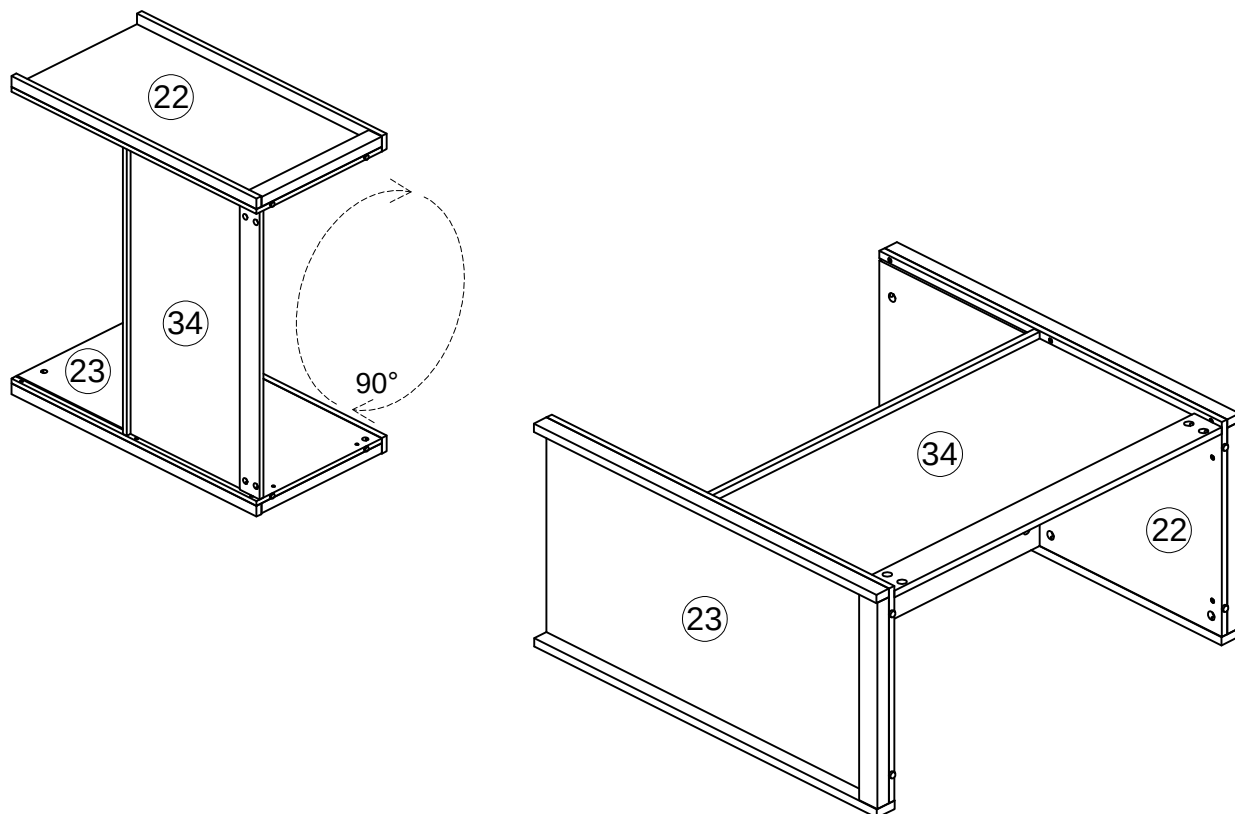


INSTALLATION INSTRUCTION


13

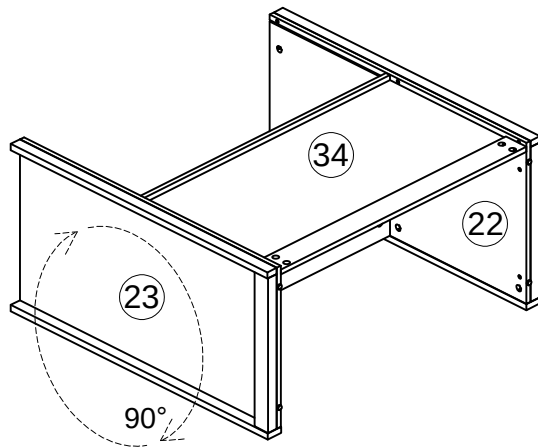


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

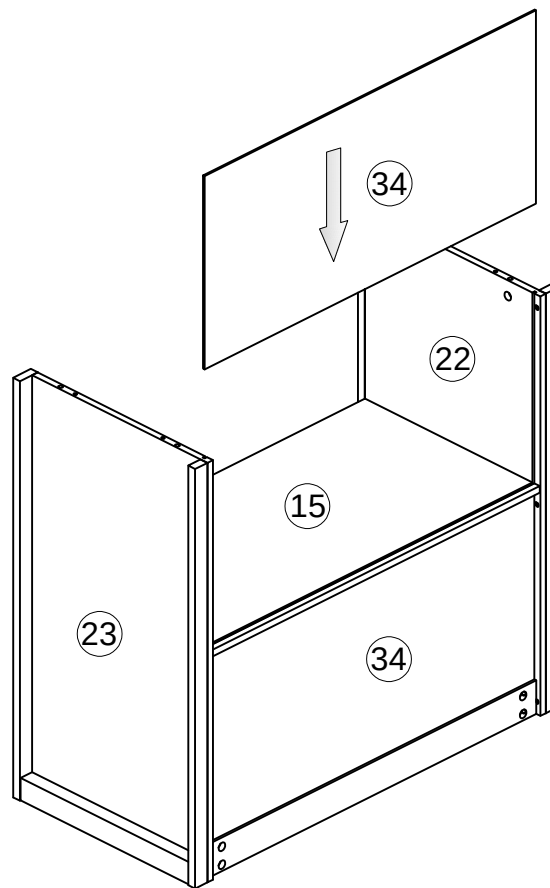

14

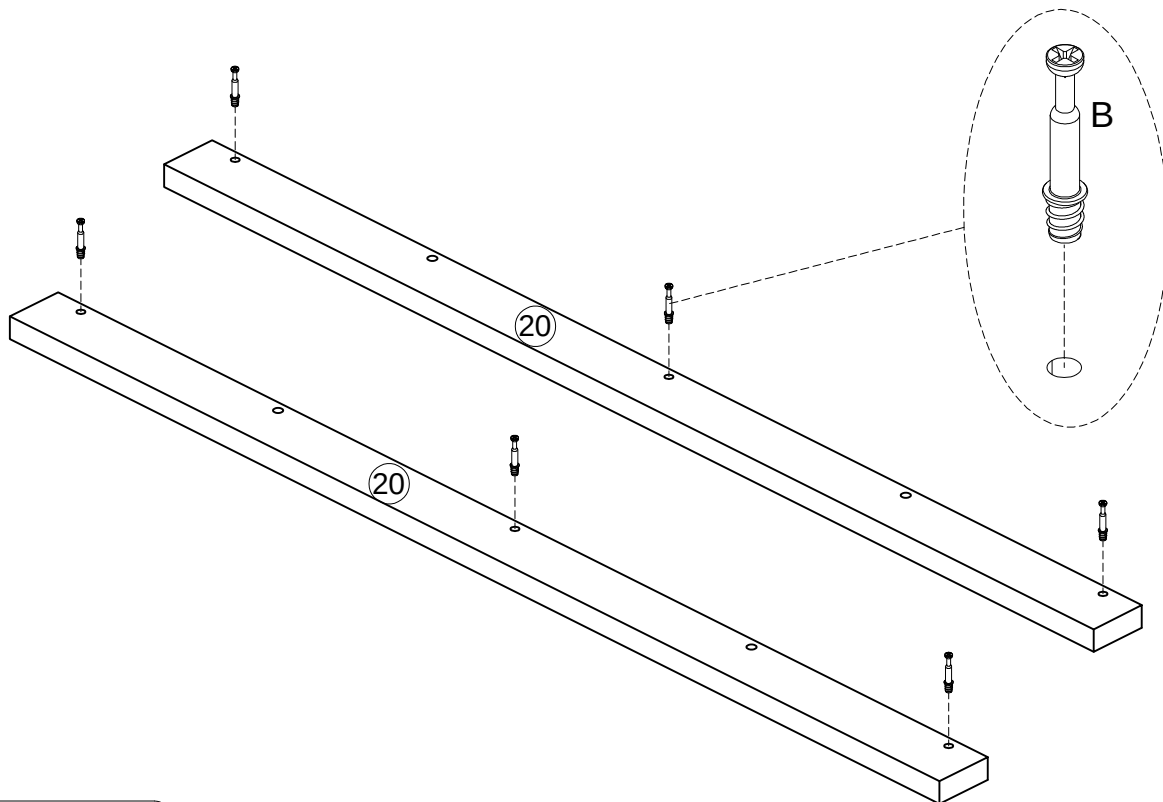



Bx6




Ø6x35mm

INSTALLATION INSTRUCTION

15

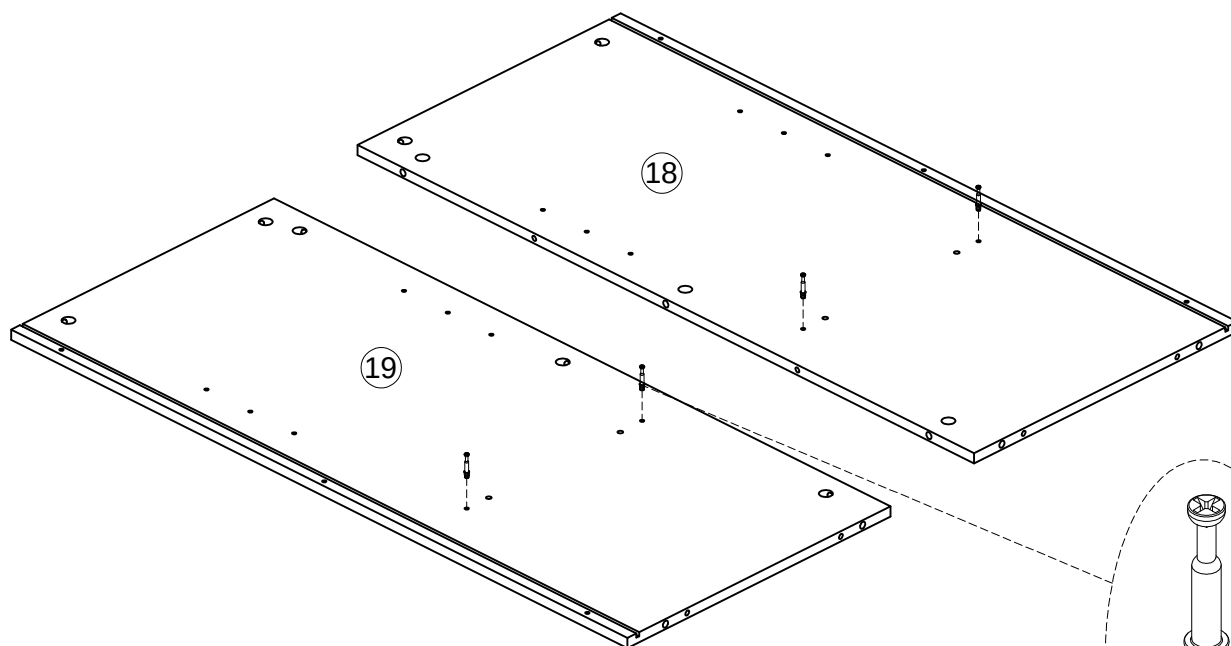


Bx4



Ø6x35mm

16

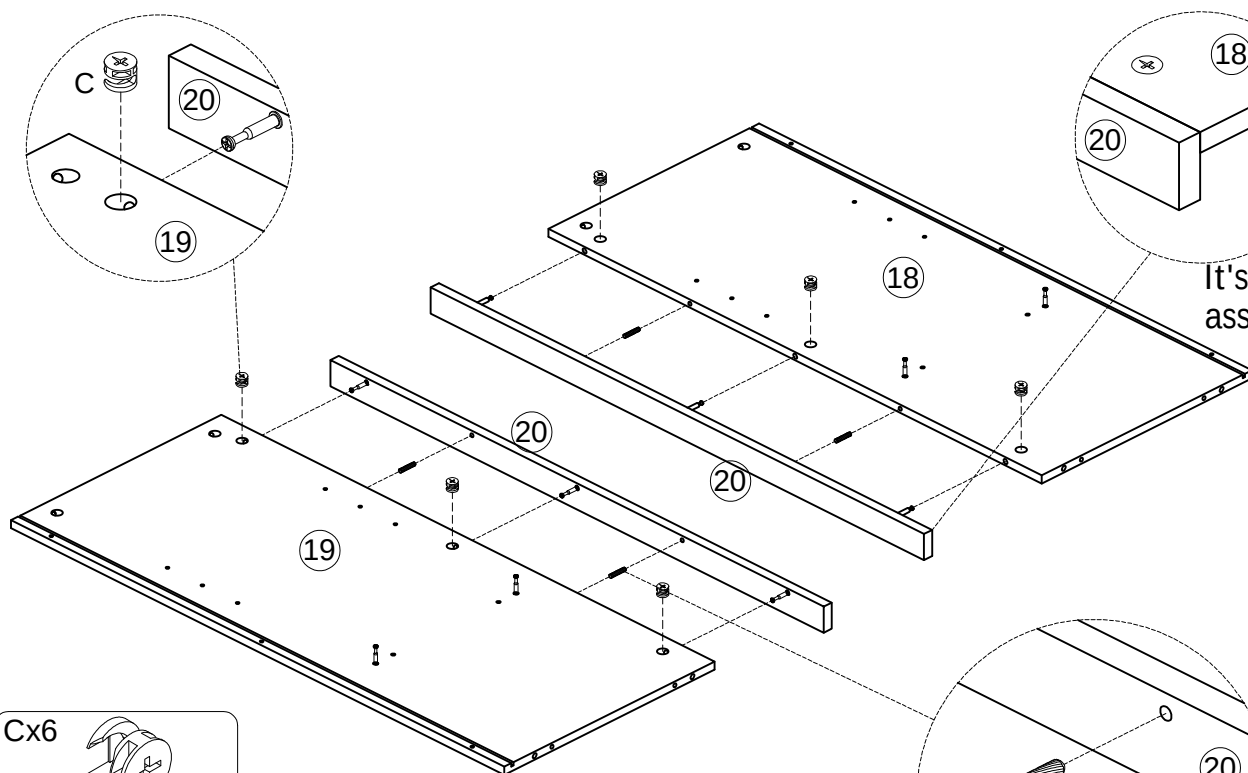

It's flat when assembled

Cx6



Ø15x10mm


Ax4




Ø6x30mm

INSTALLATION INSTRUCTION

17


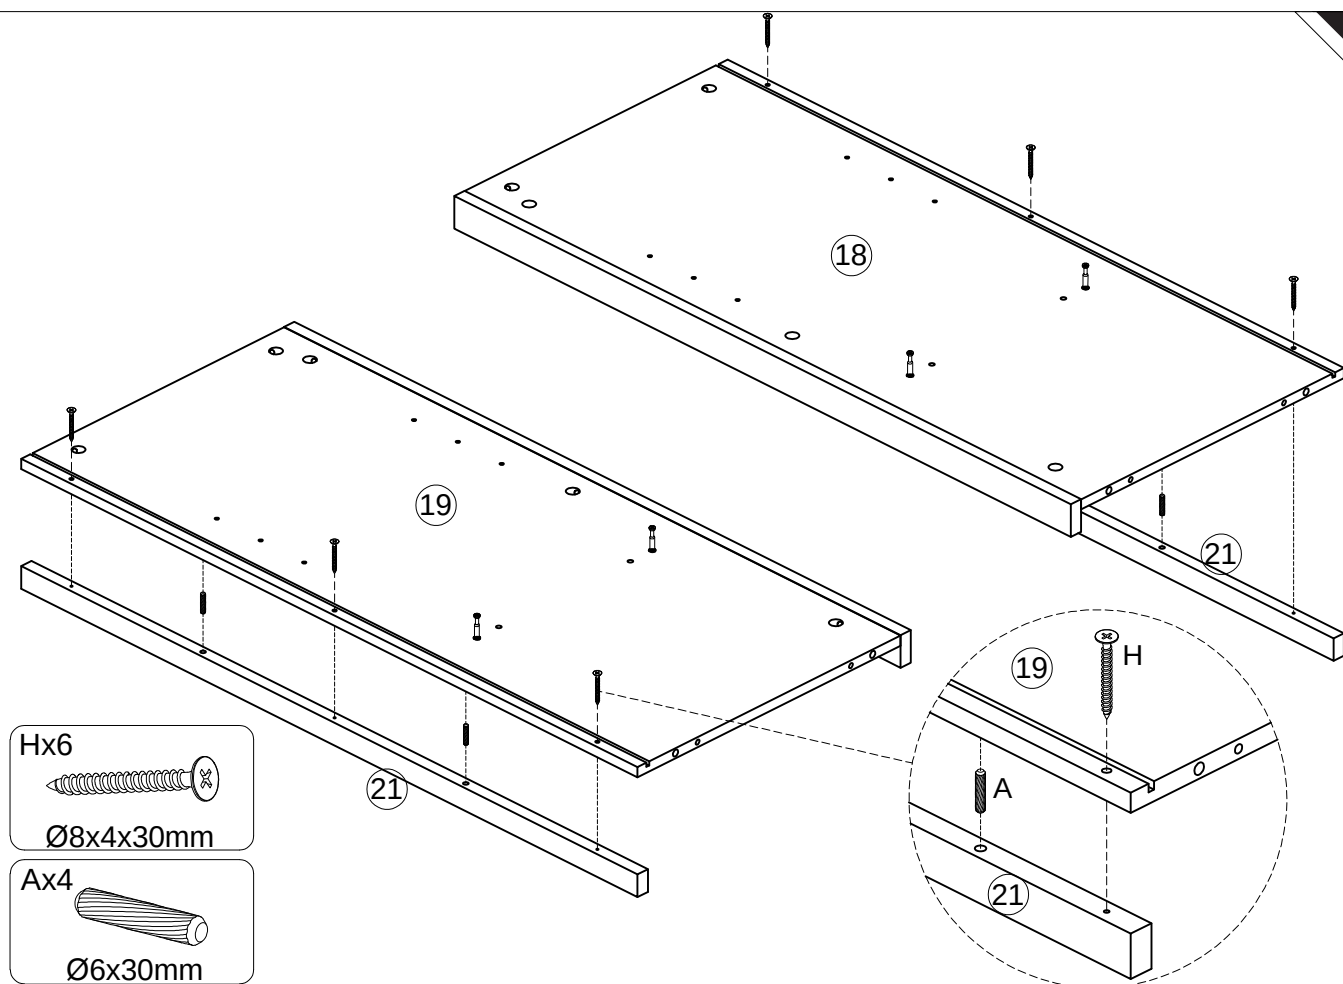


18


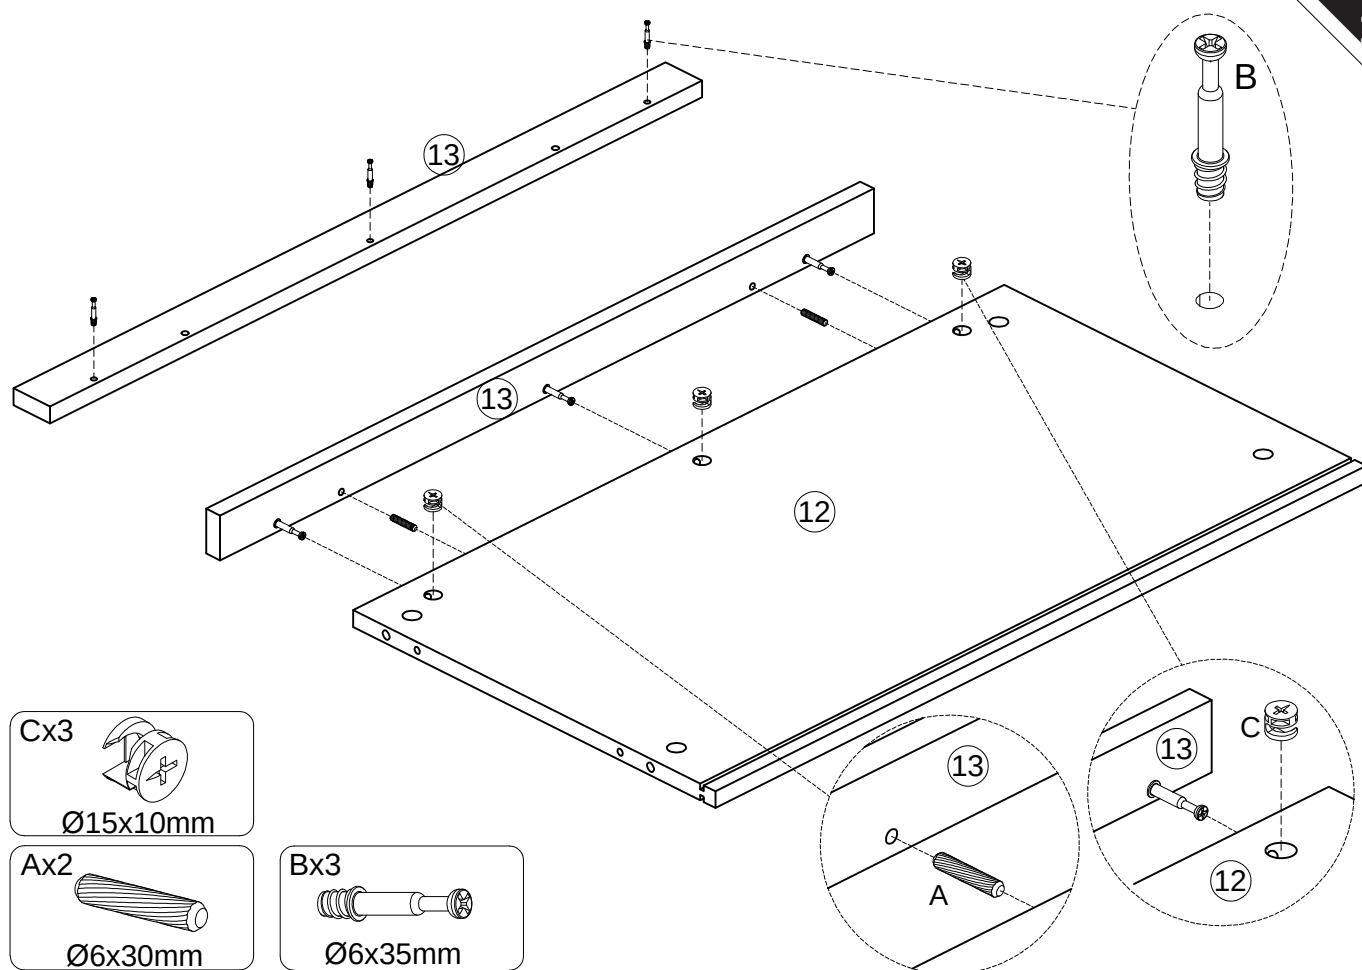


INSTALLATION INSTRUCTION

19

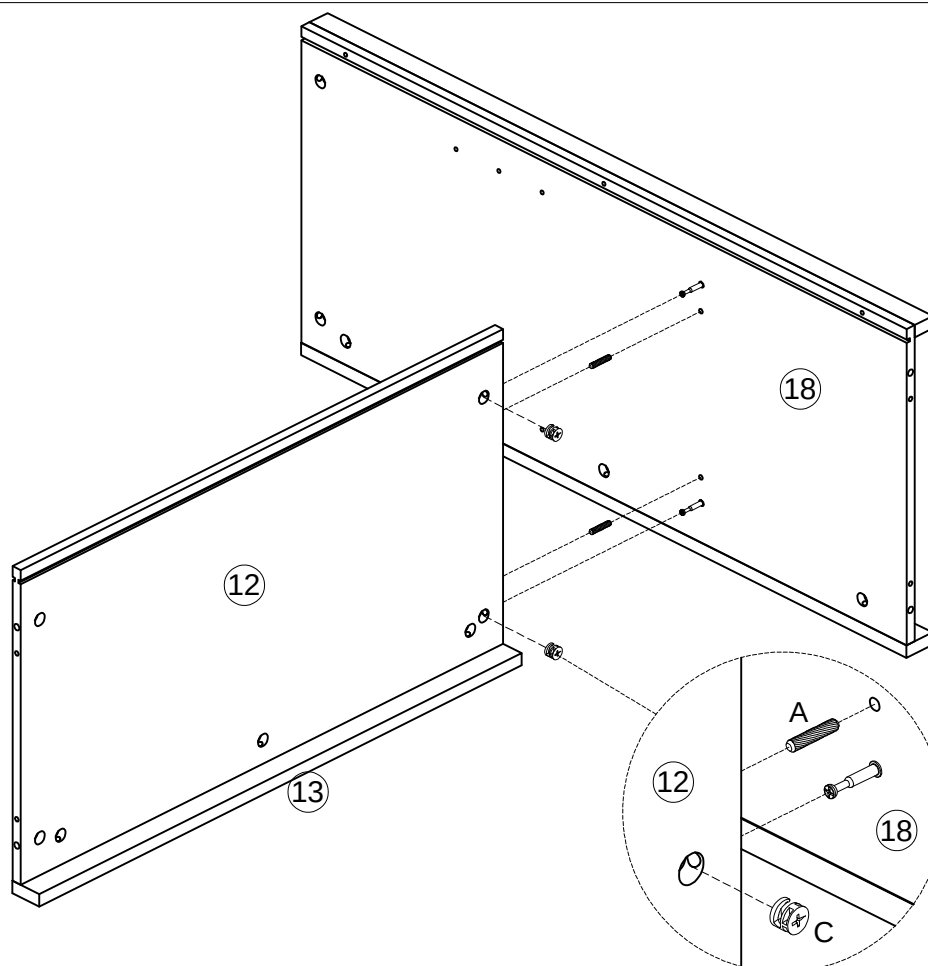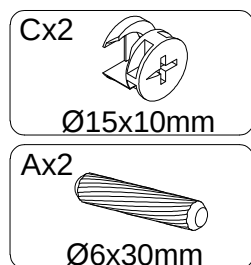


20

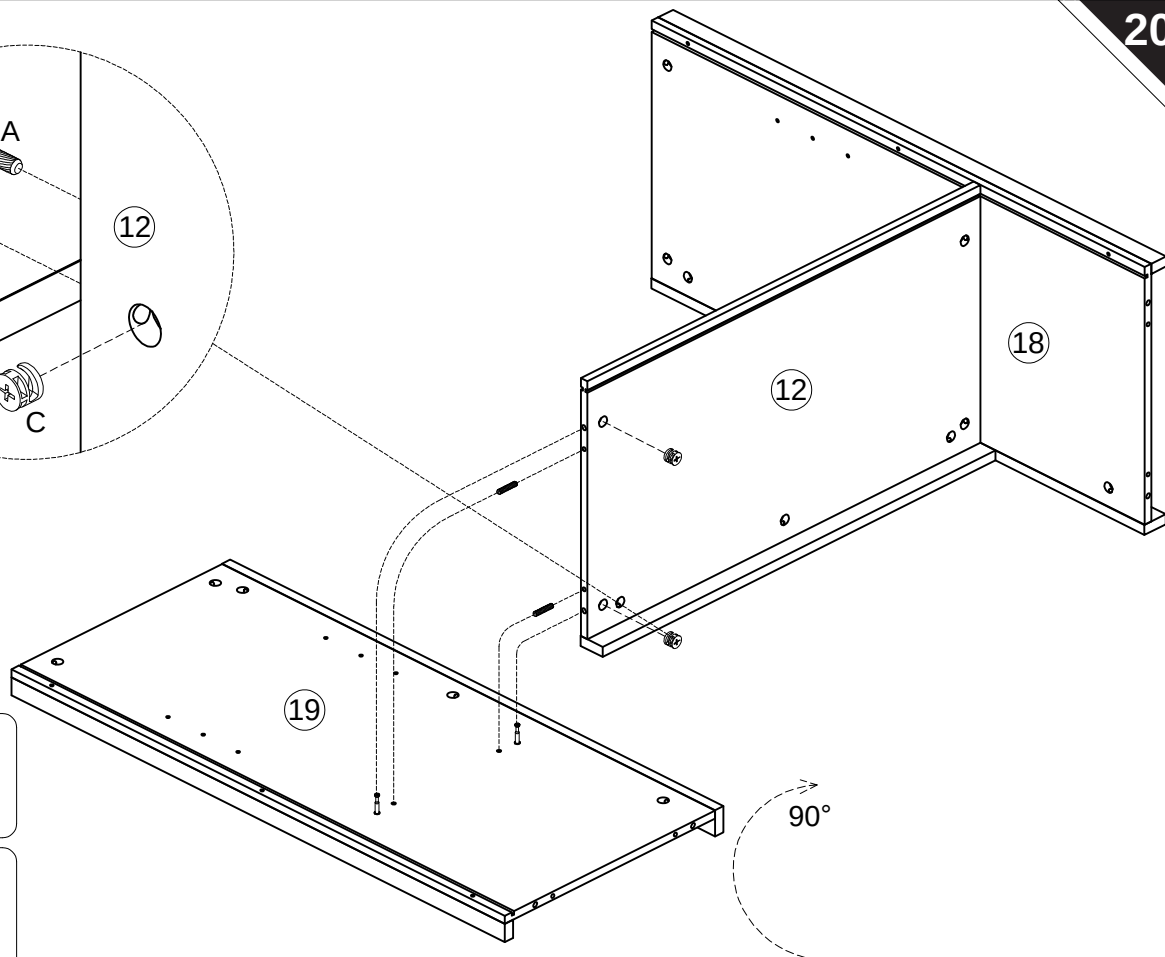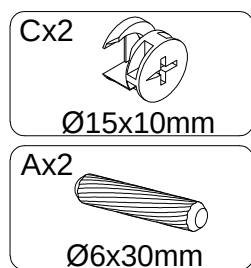


INSTALLATION INSTRUCTION


21

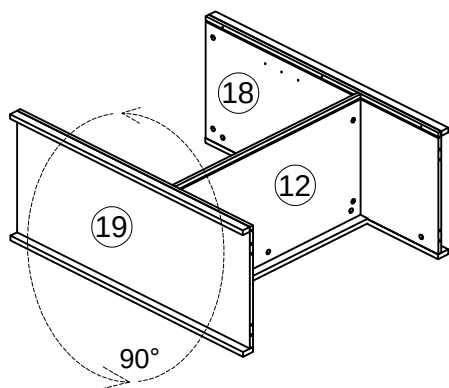


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

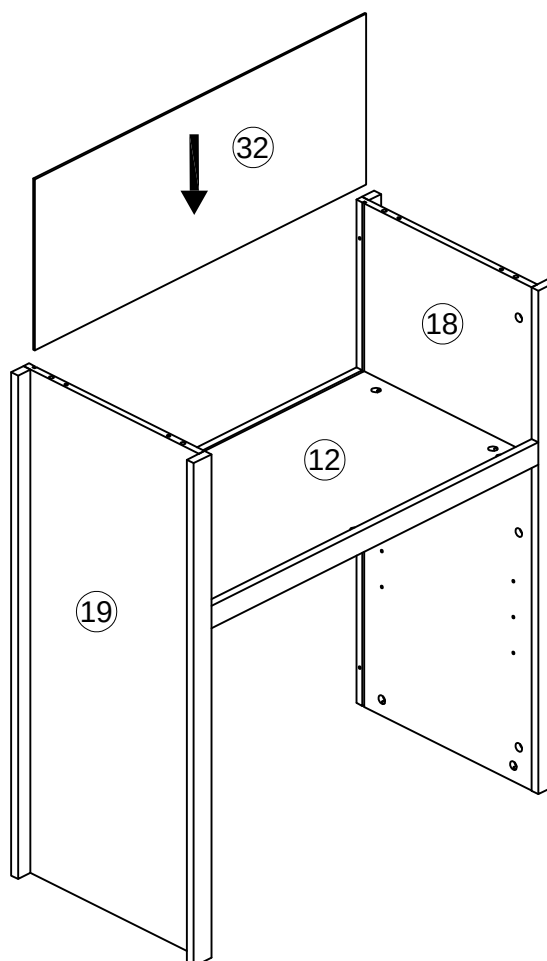

22

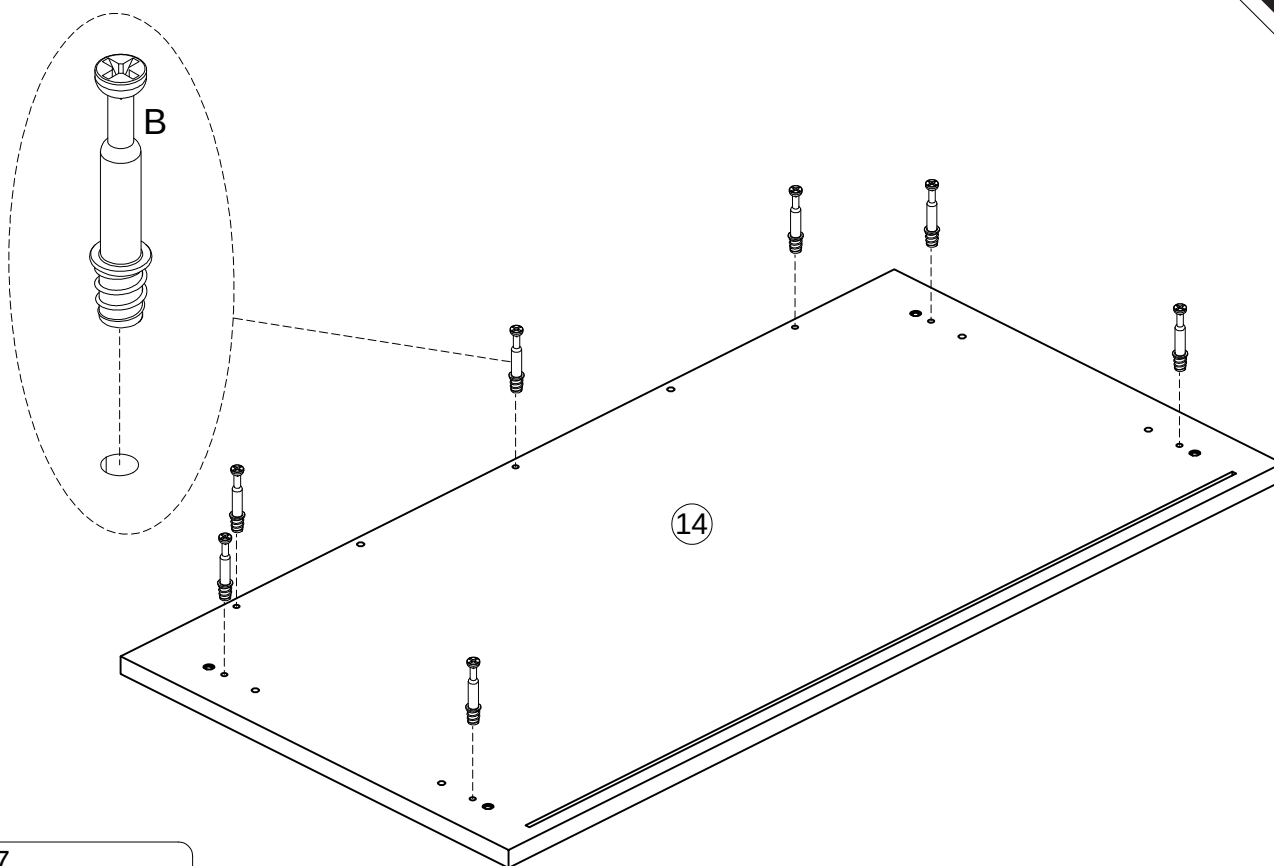


Bx7



Ø6x35mm

INSTALLATION INSTRUCTION

23

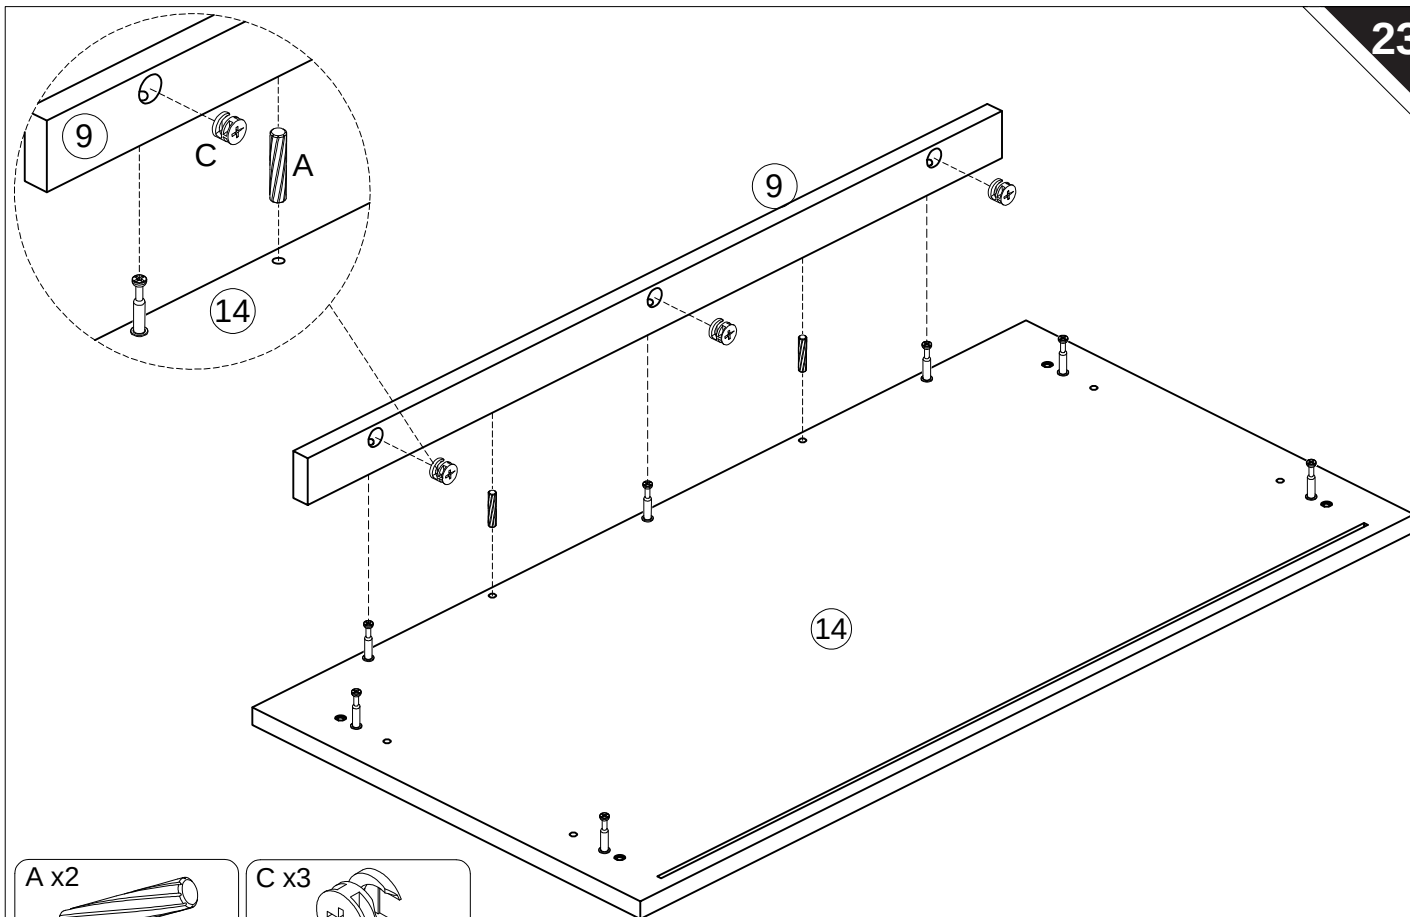

A x2




Ø6x30mm

C x3




Ø15x10mm

24

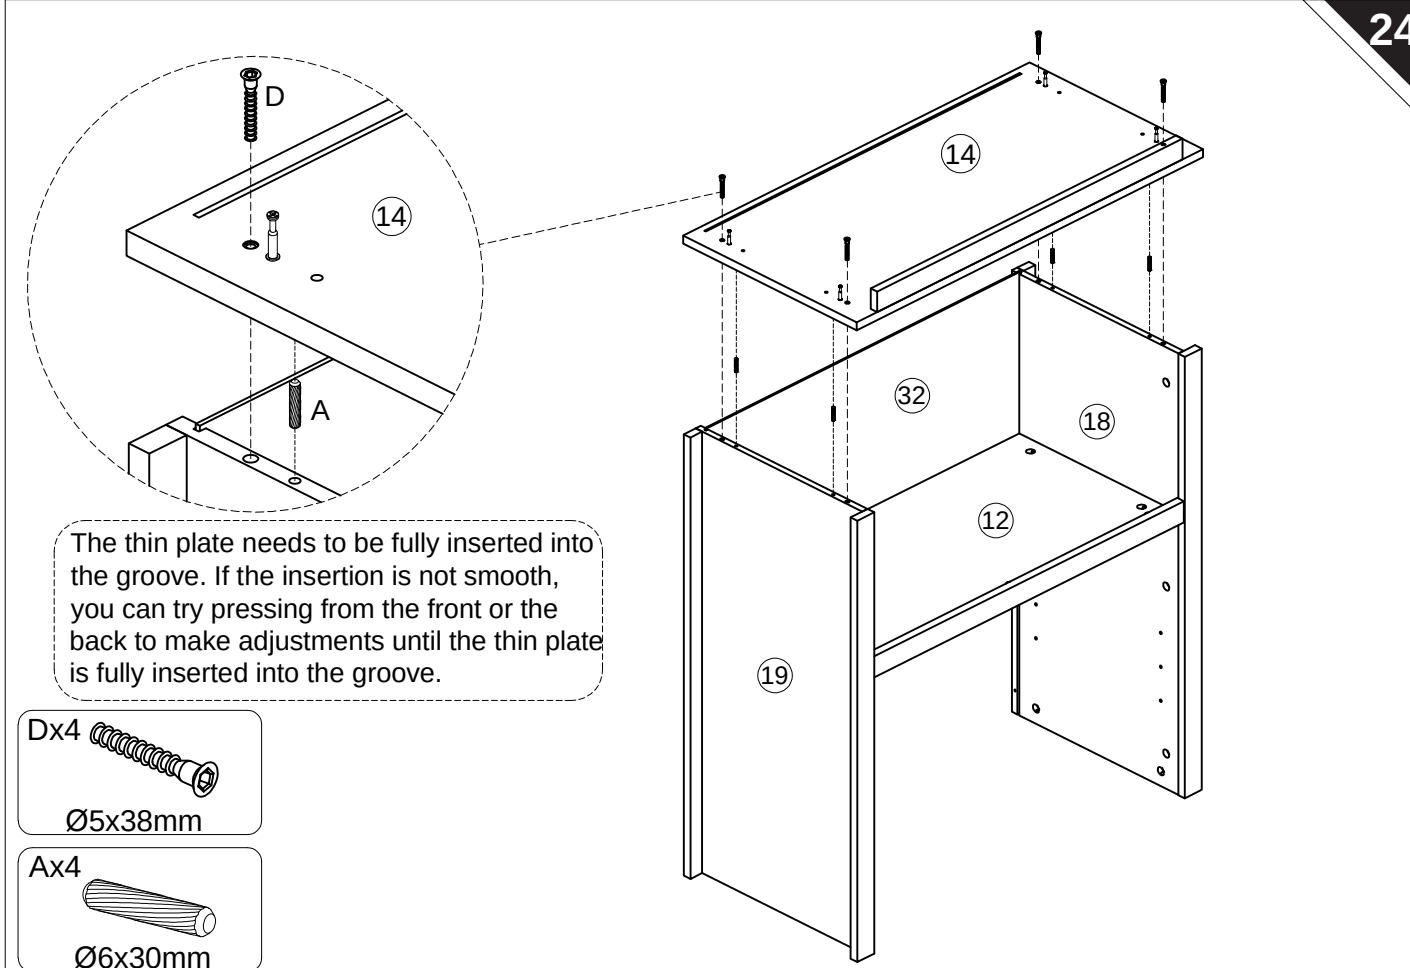

The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

Dx4



Ø5x38mm



Ax4






Ø6x30mm

INSTALLATION INSTRUCTION

25

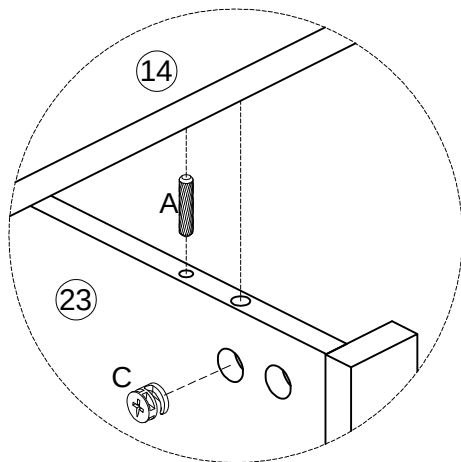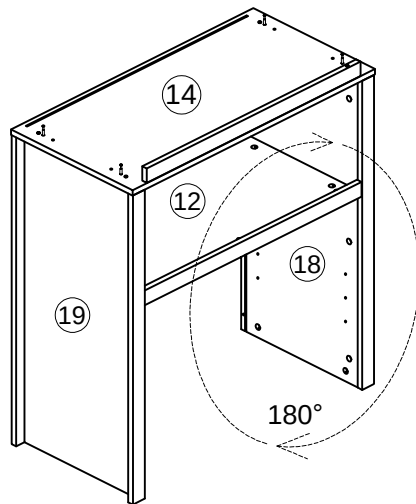


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

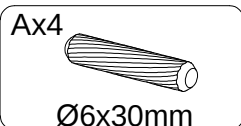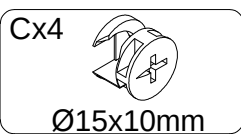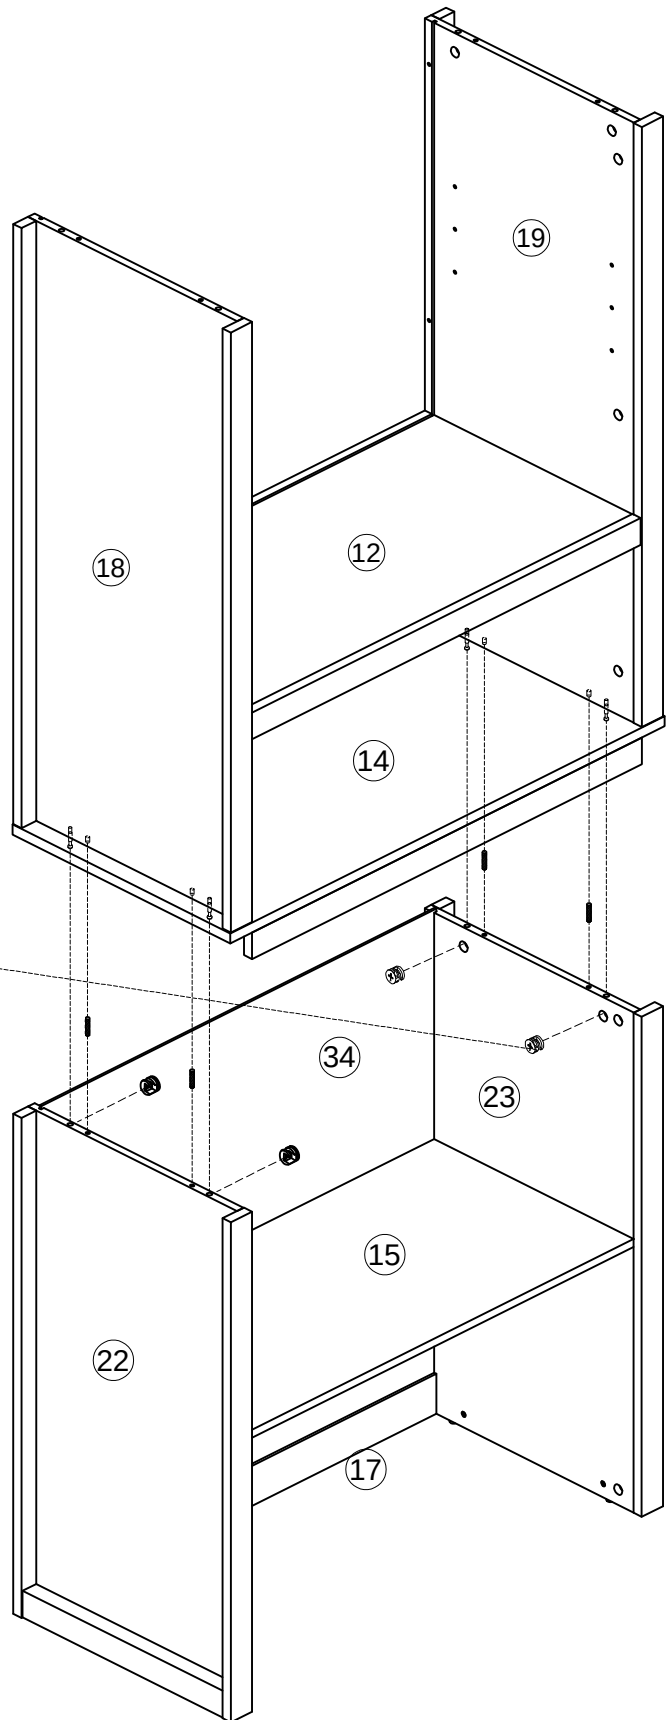

This installation step takes two people to complete

INSTALLATION INSTRUCTION


26

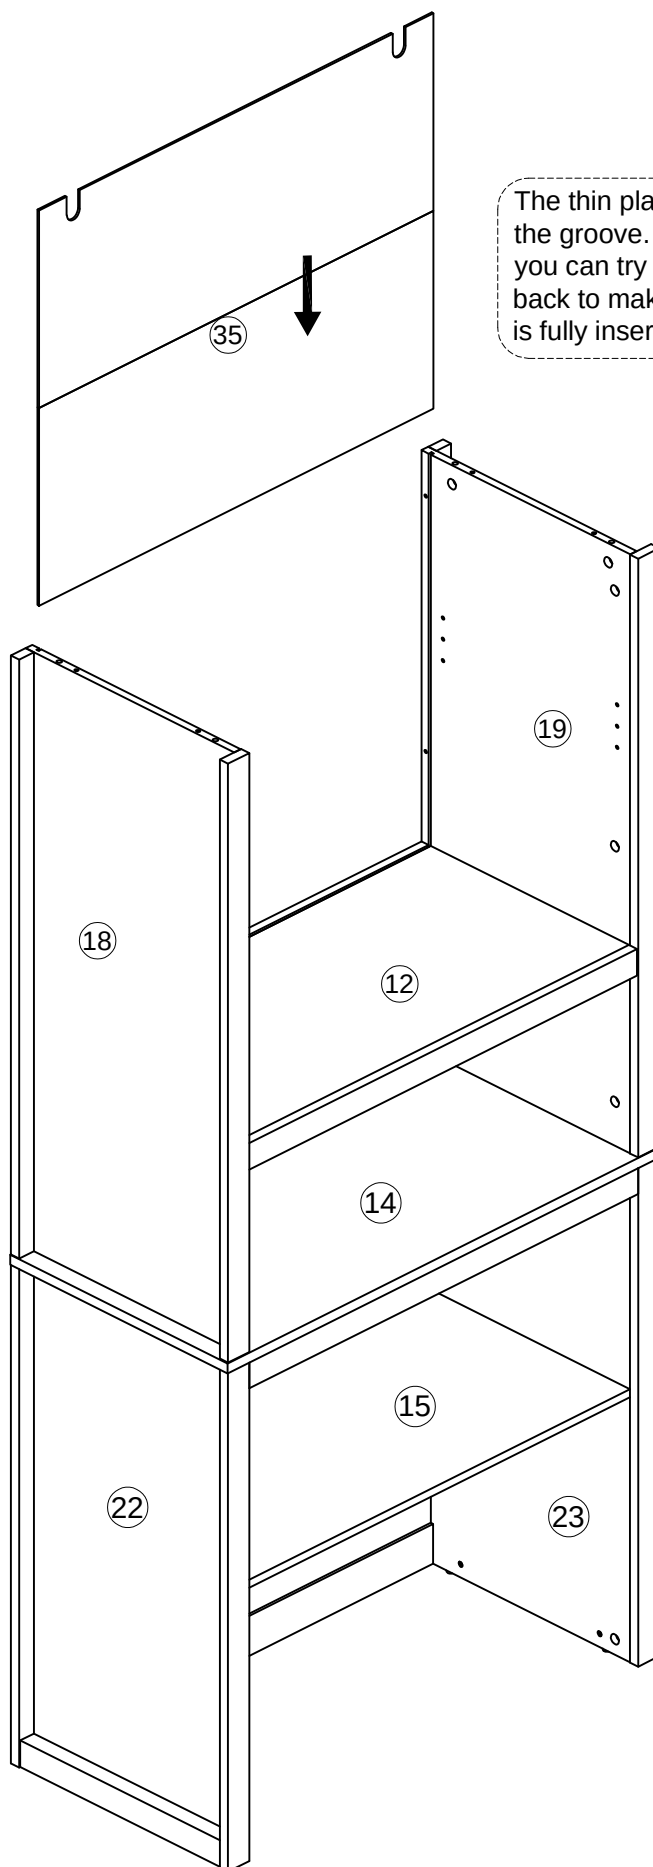


The thin plate needs to be fully inserted into the groove. If the insertion is not smooth, you can try pressing from the front or the back to make adjustments until the thin plate is fully inserted into the groove.

INSTALLATION INSTRUCTION

27

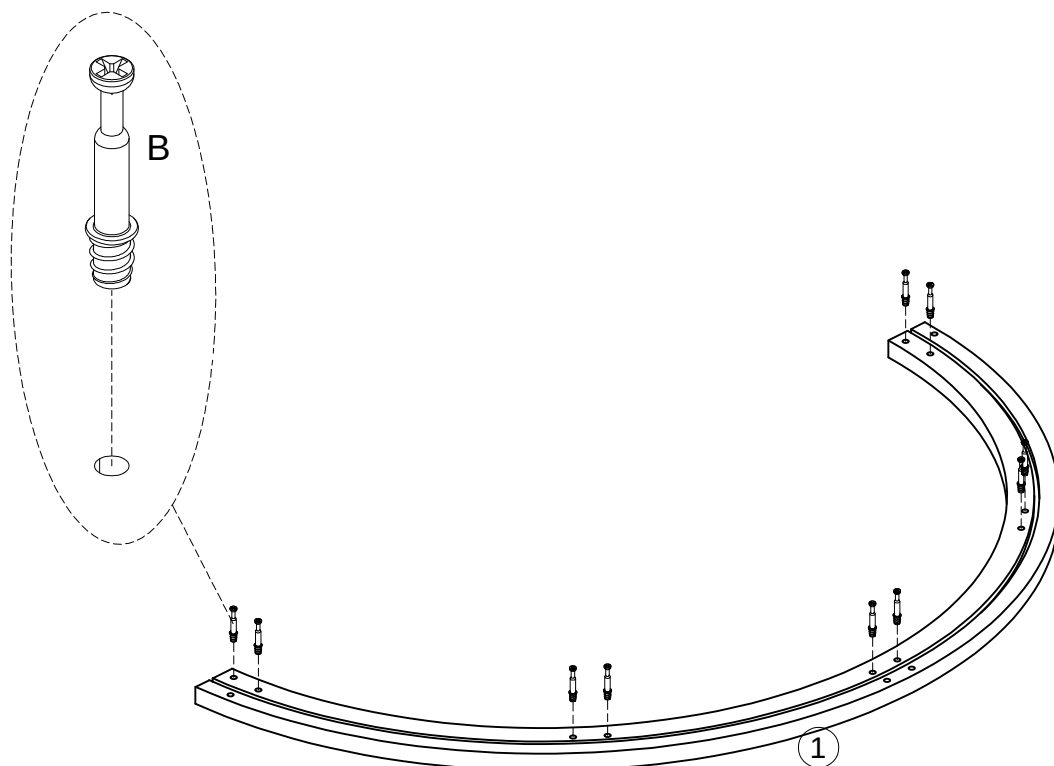


Bx10



Ø6x35mm

28

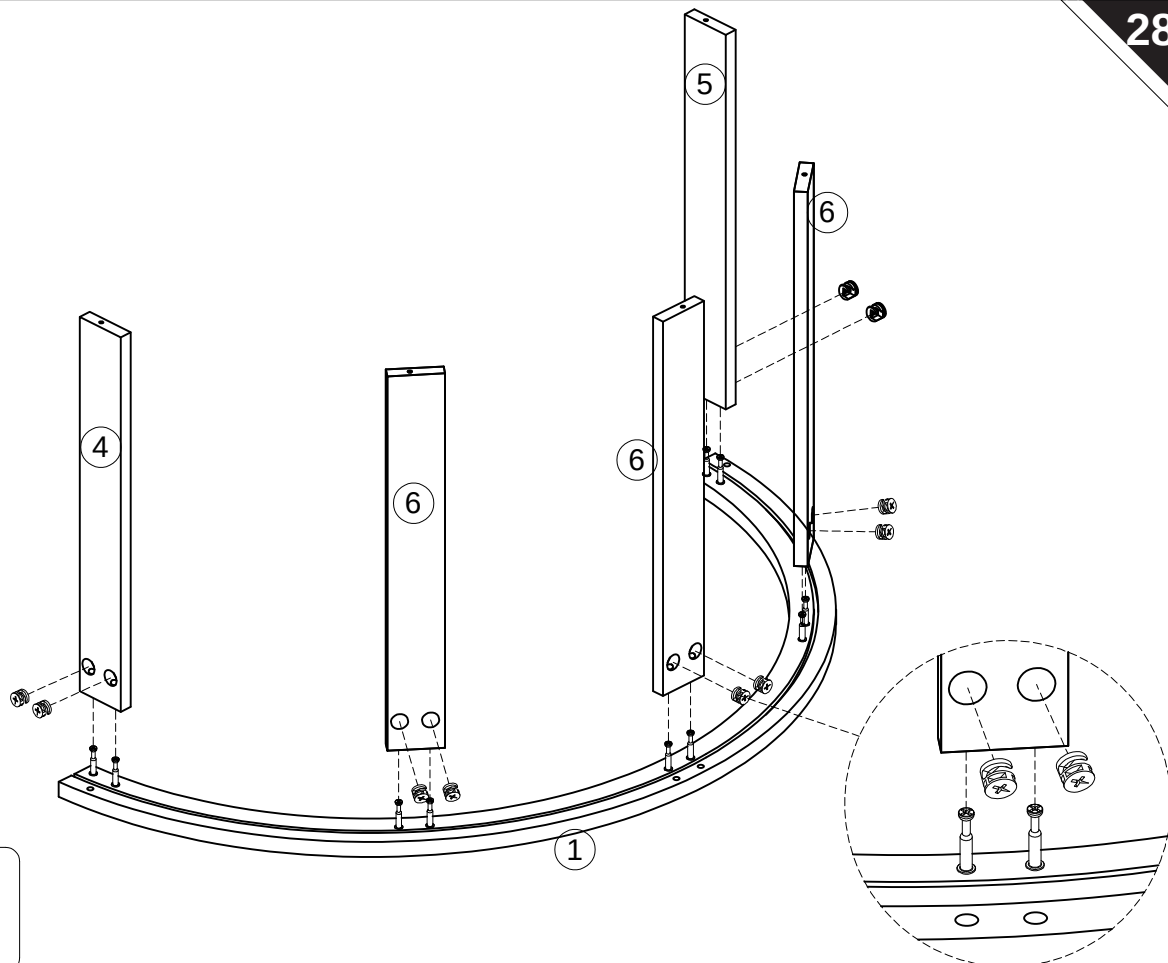


Cx10




Ø15x10mm

INSTALLATION INSTRUCTION

29

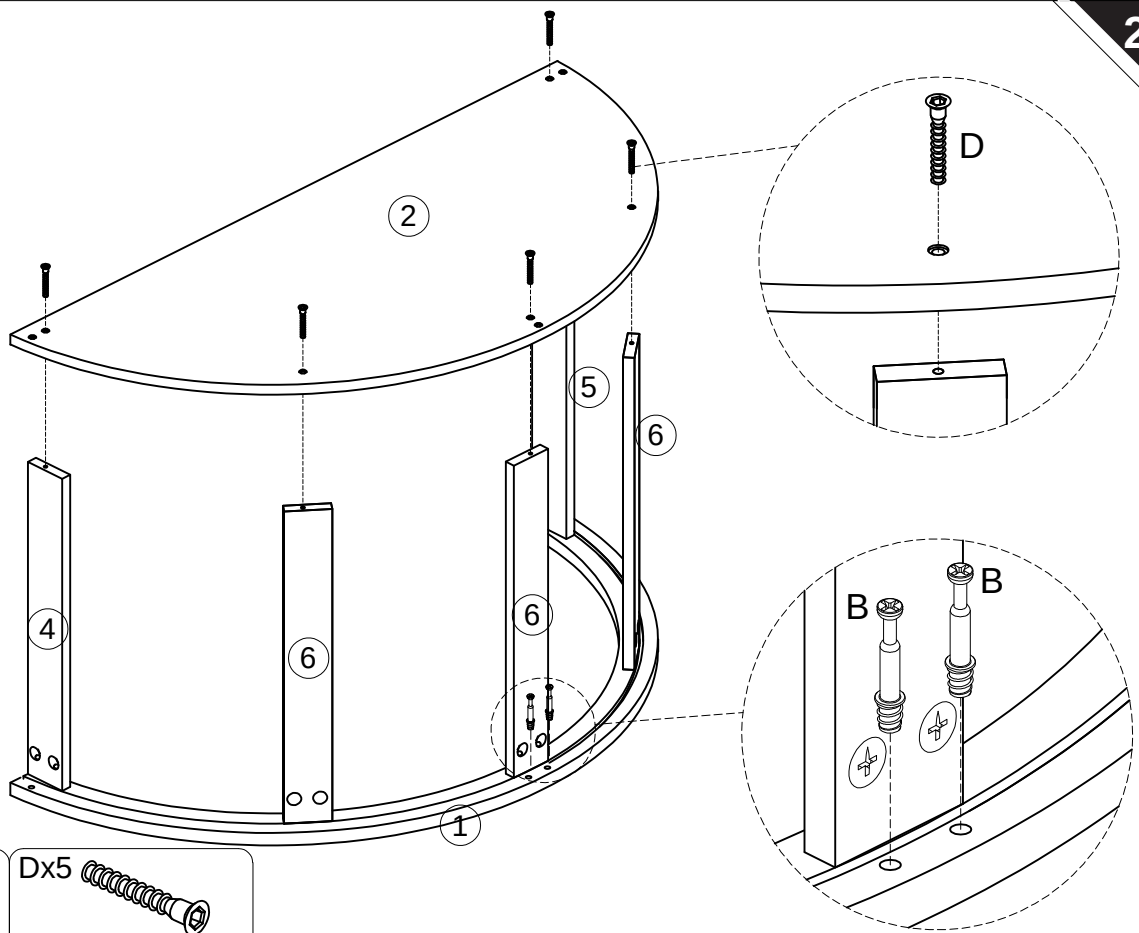

Bx2




Ø6x35mm

Dx5



Ø5x38mm

30

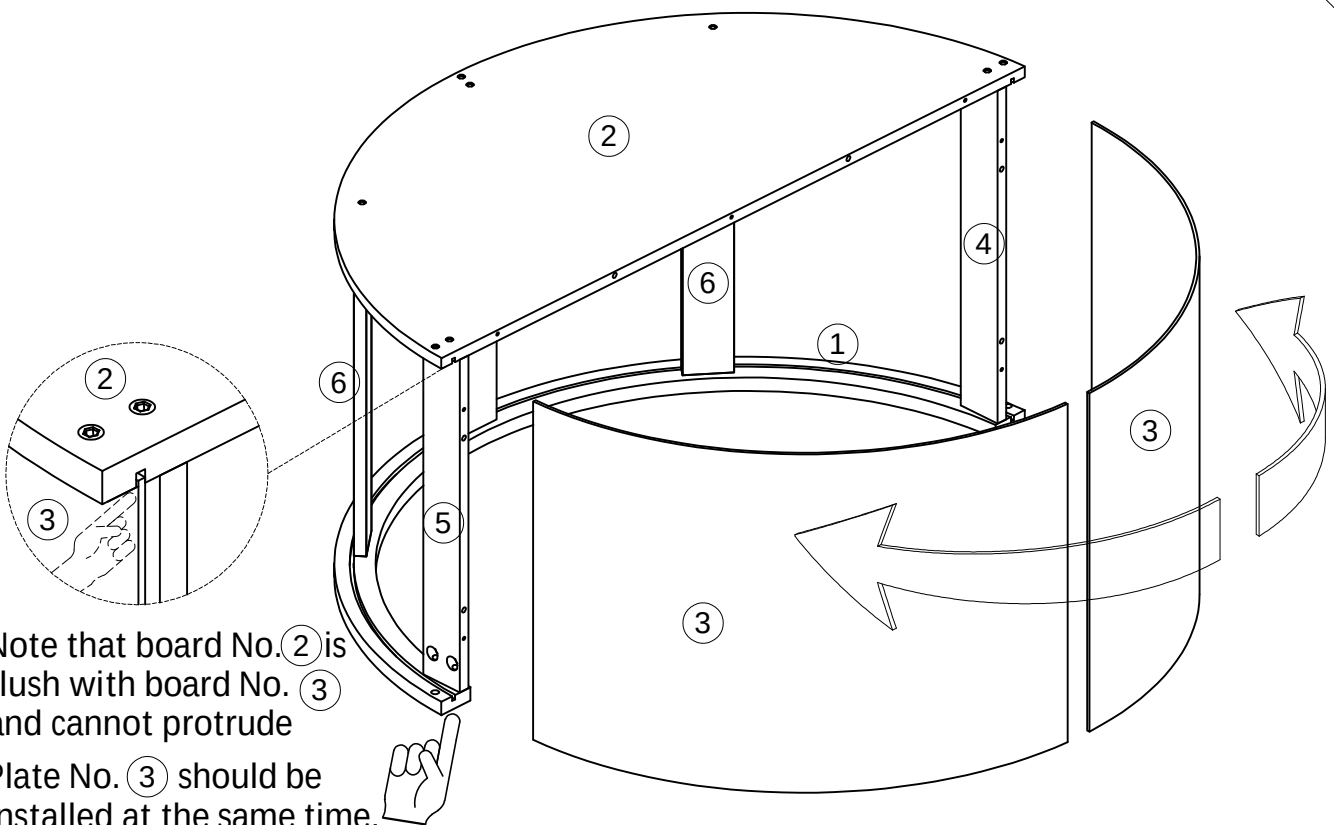


Note that board No. ② is flush with board No. ③ and cannot protrude


Plate No. ③ should be installed at the same time, can not tilt

INSTALLATION INSTRUCTION

31

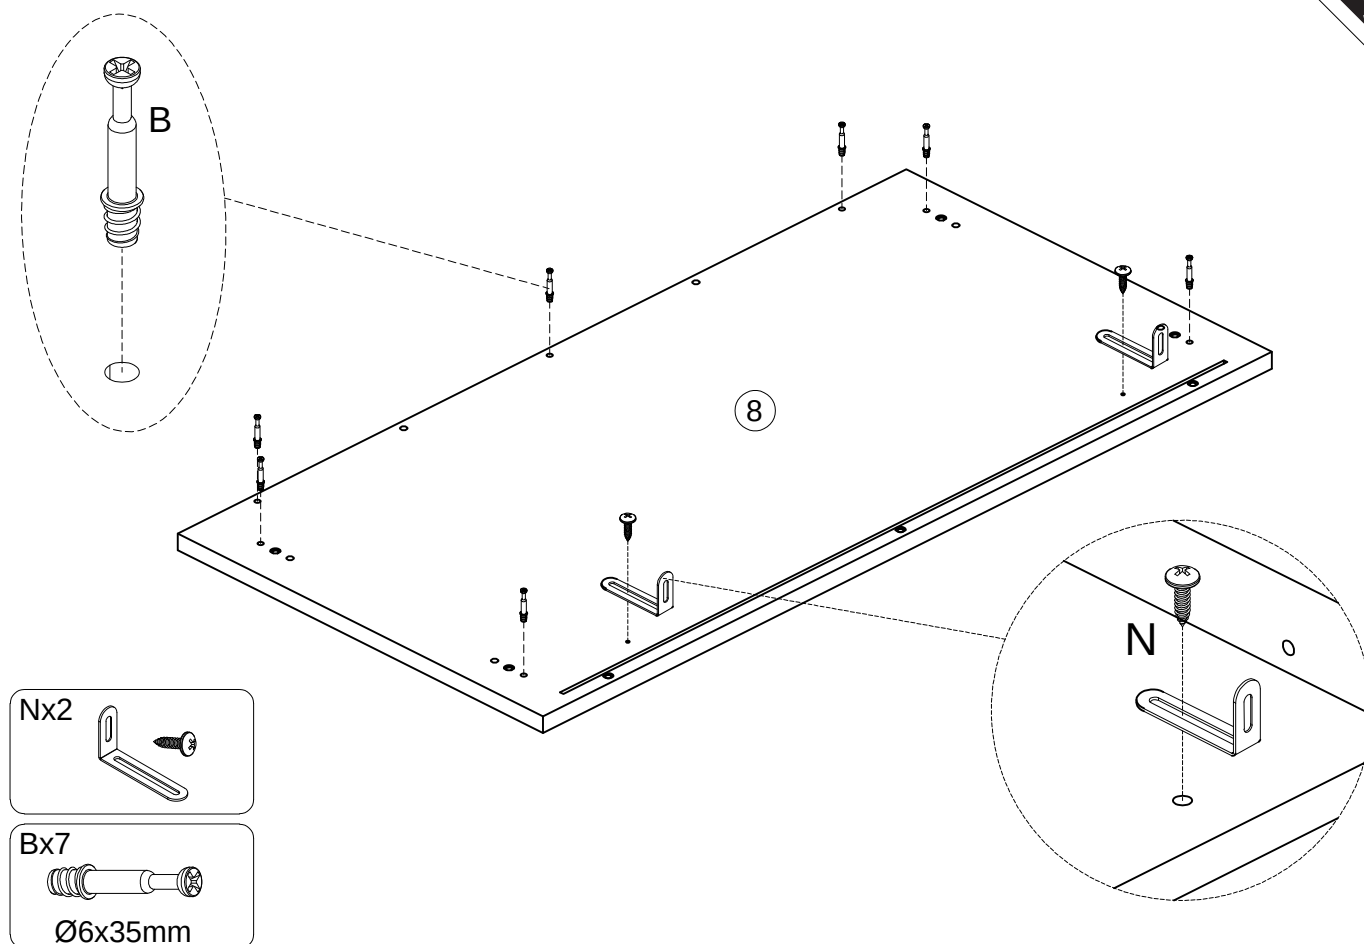


32

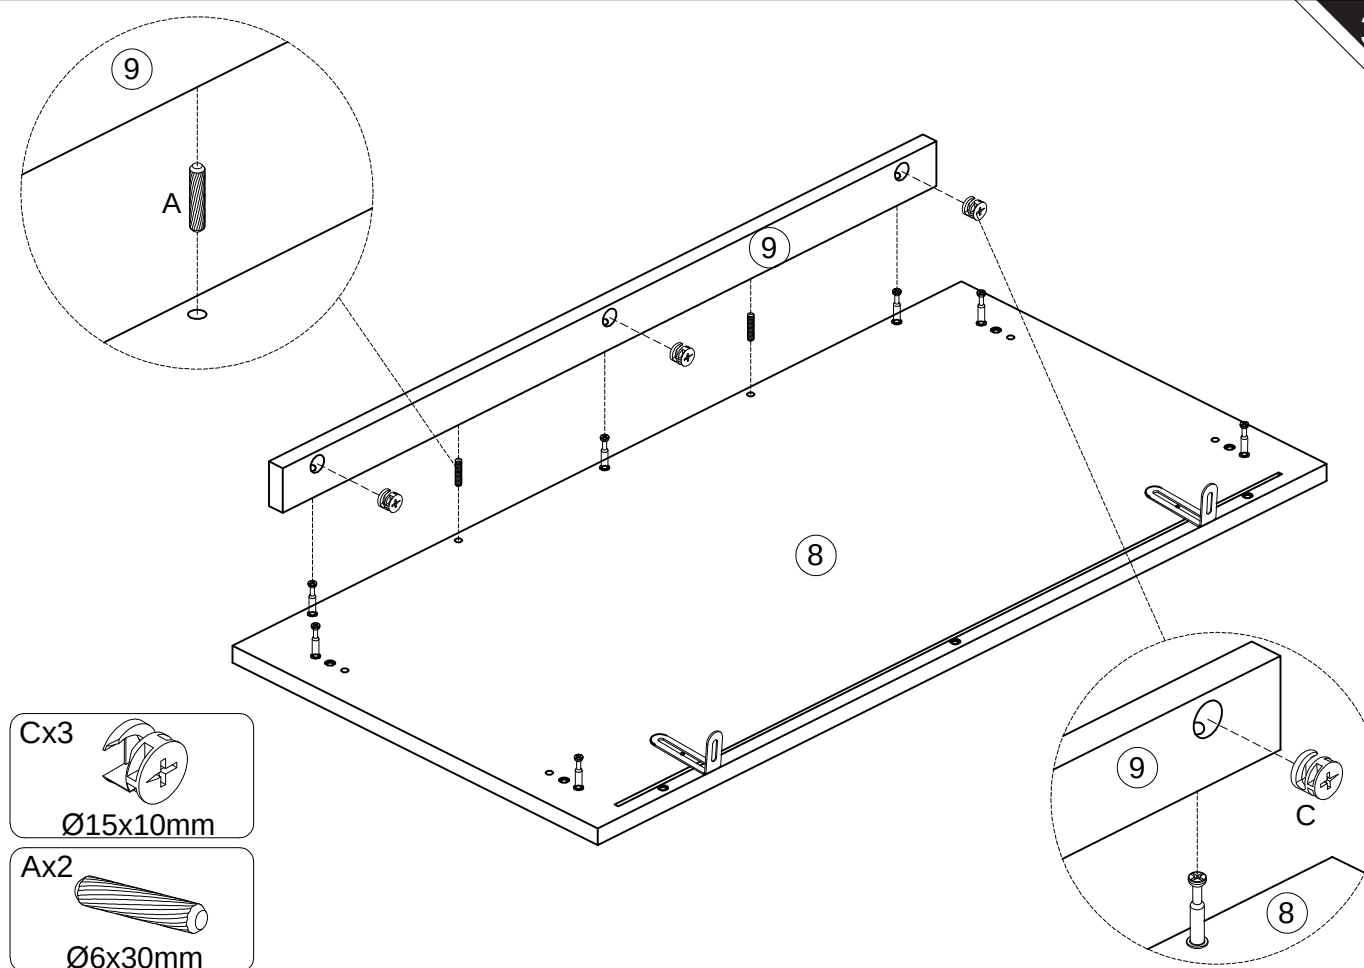


INSTALLATION INSTRUCTION

33

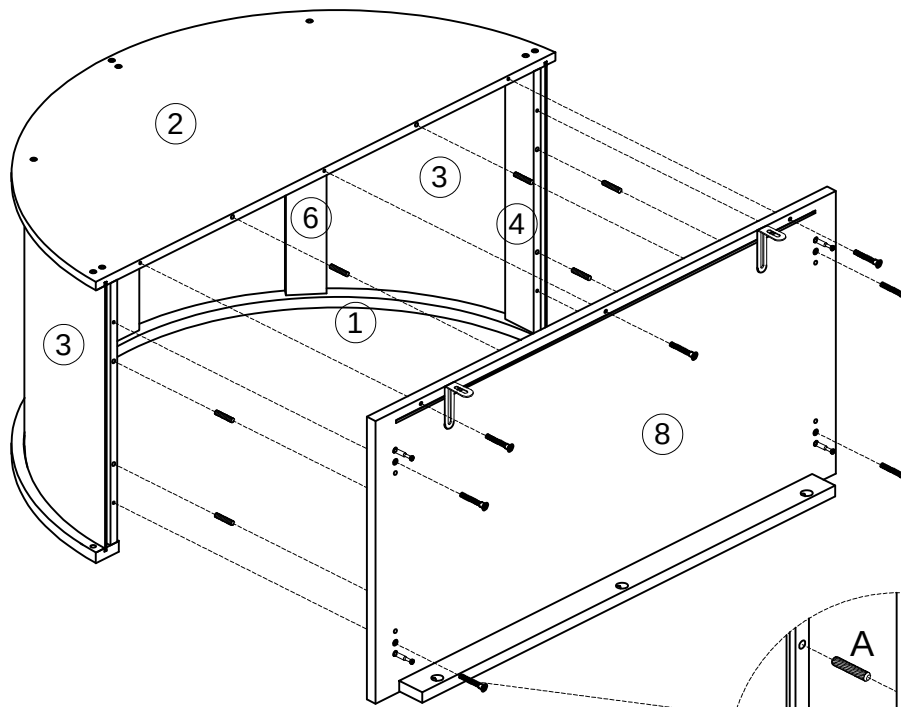


Ax6




Ø6x30mm

Dx7




Ø5x38mm

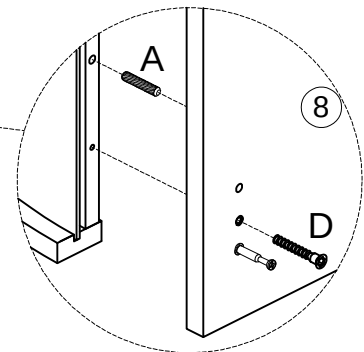






34

For this step, two people need to work together, one with both hands to push the No③ board inward, the other person to pile the No③ board forward, so that the No③ board is stuck in the slot of the No⑧ board





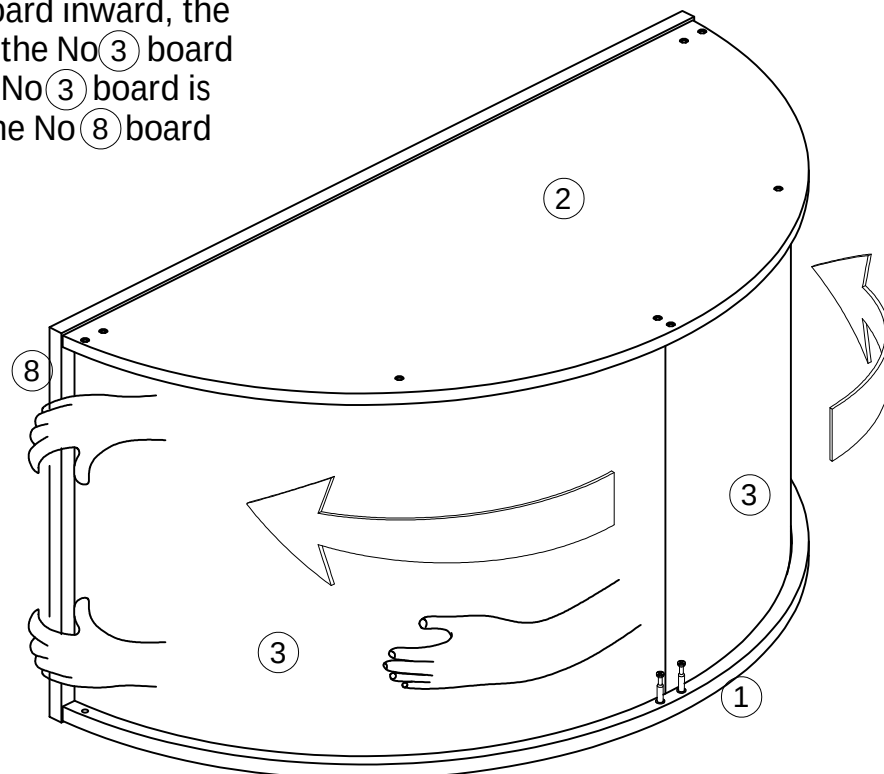


INSTALLATION INSTRUCTION

35

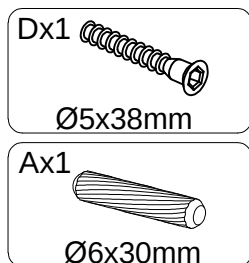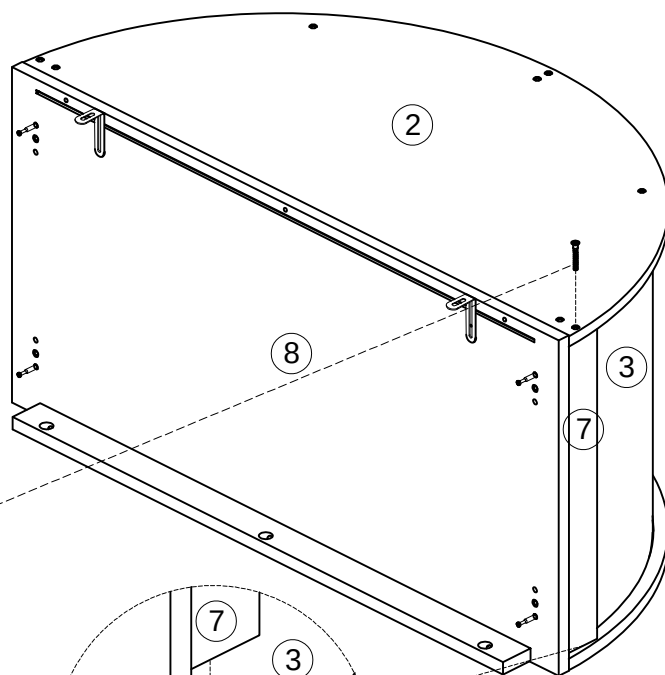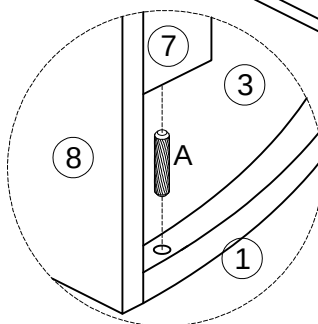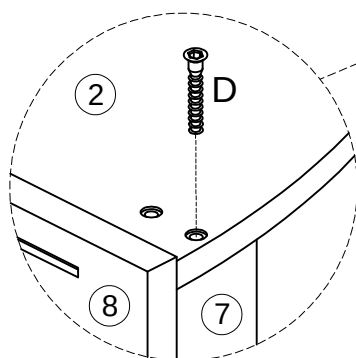
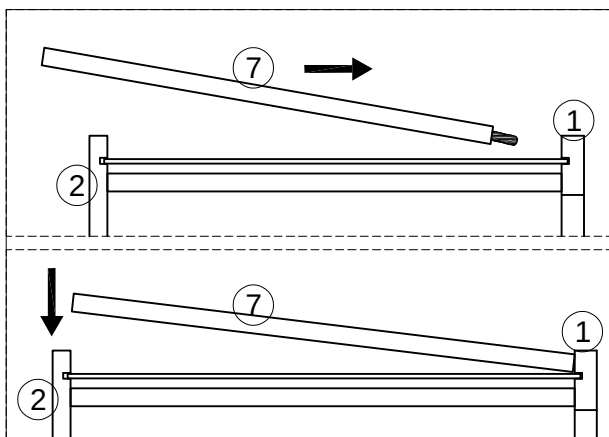


36

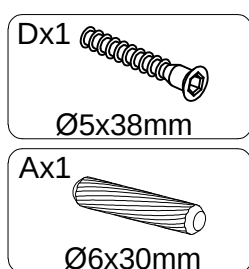
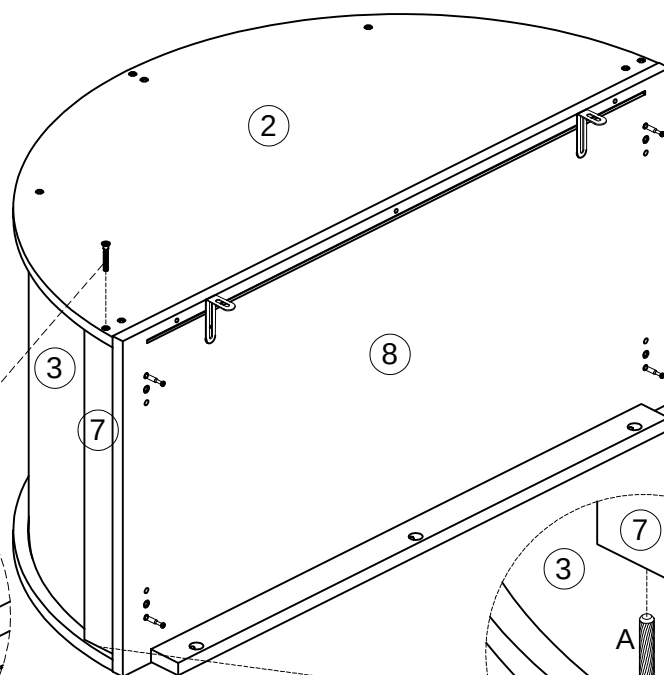
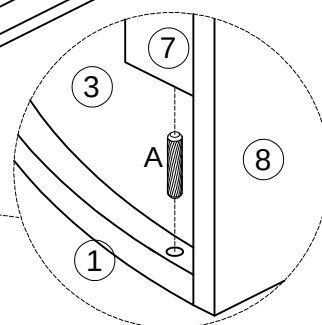
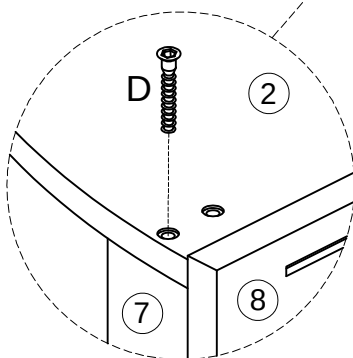
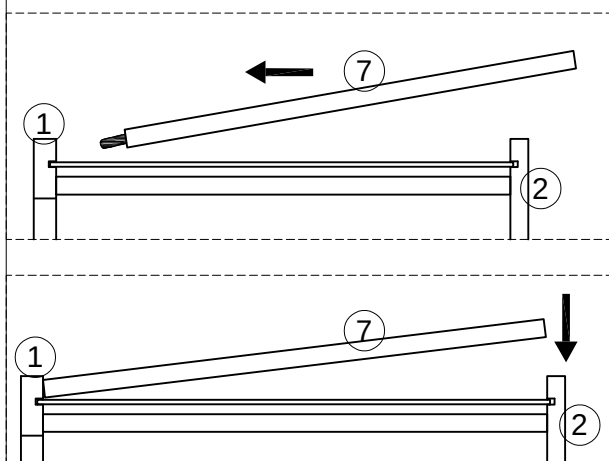



INSTALLATION INSTRUCTION

37

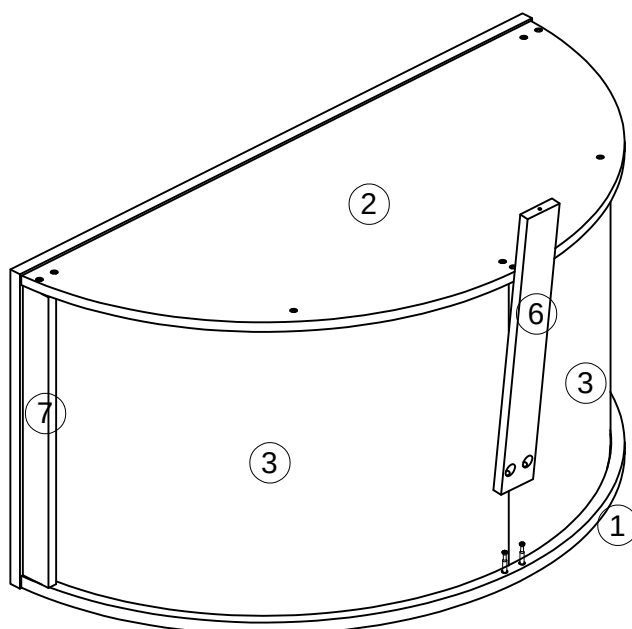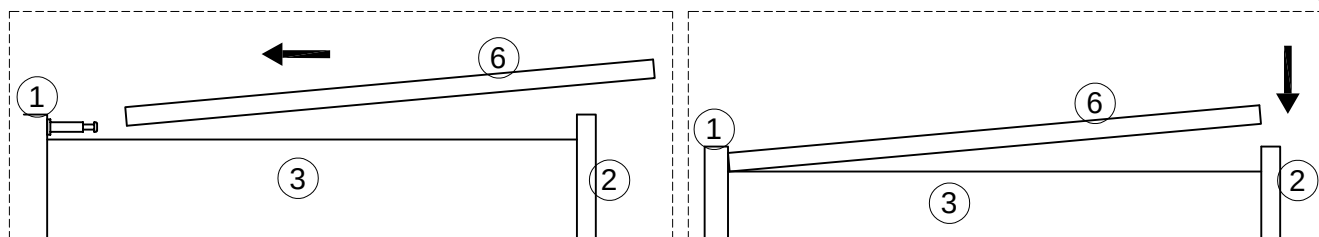


38

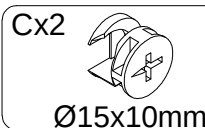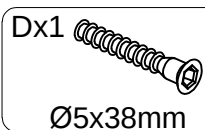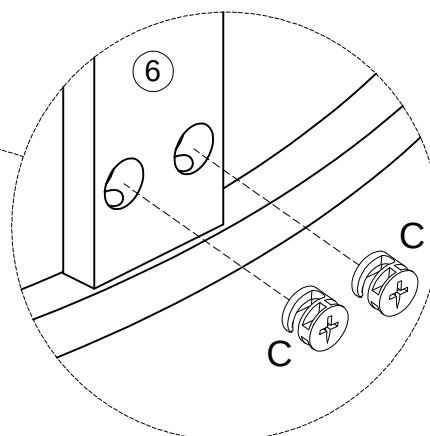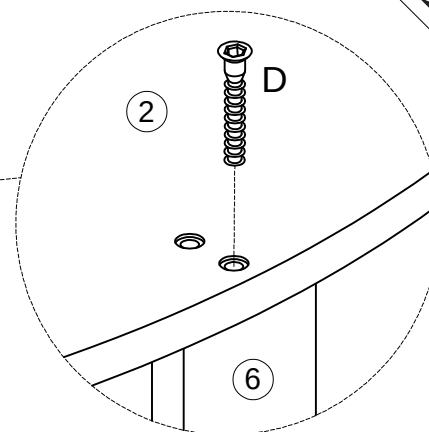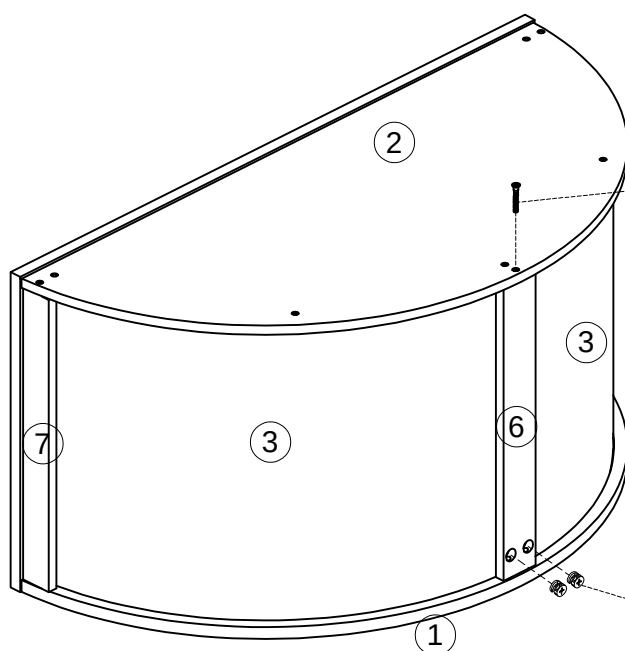

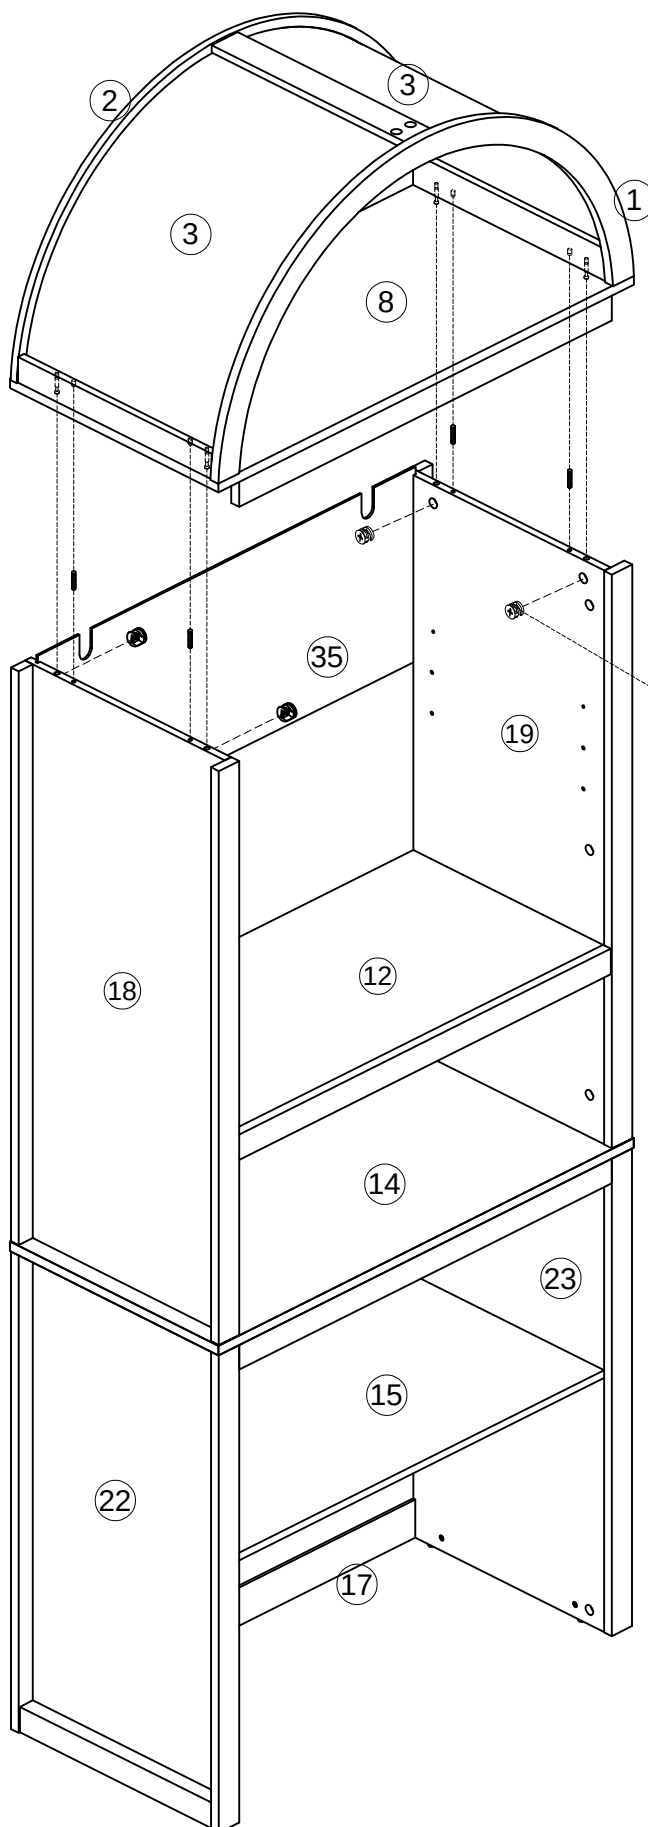

This installation step takes two people to complete

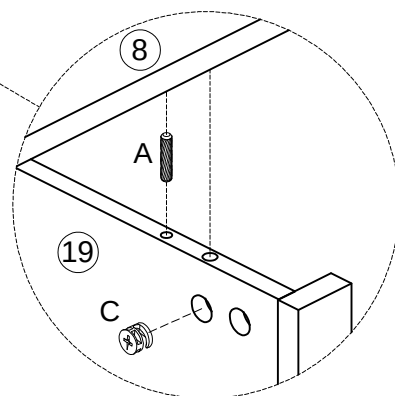

Cx4






Ø15x10mm


Ax4



Ø6x30mm

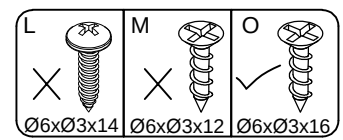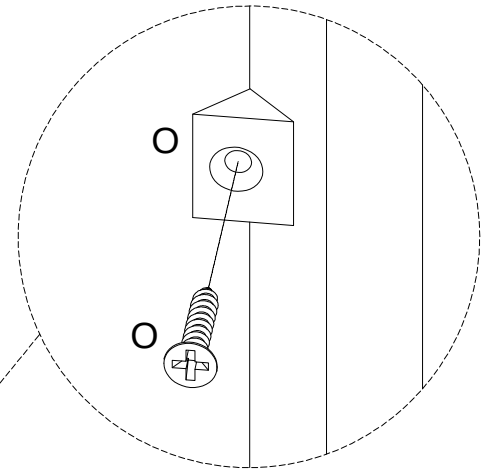
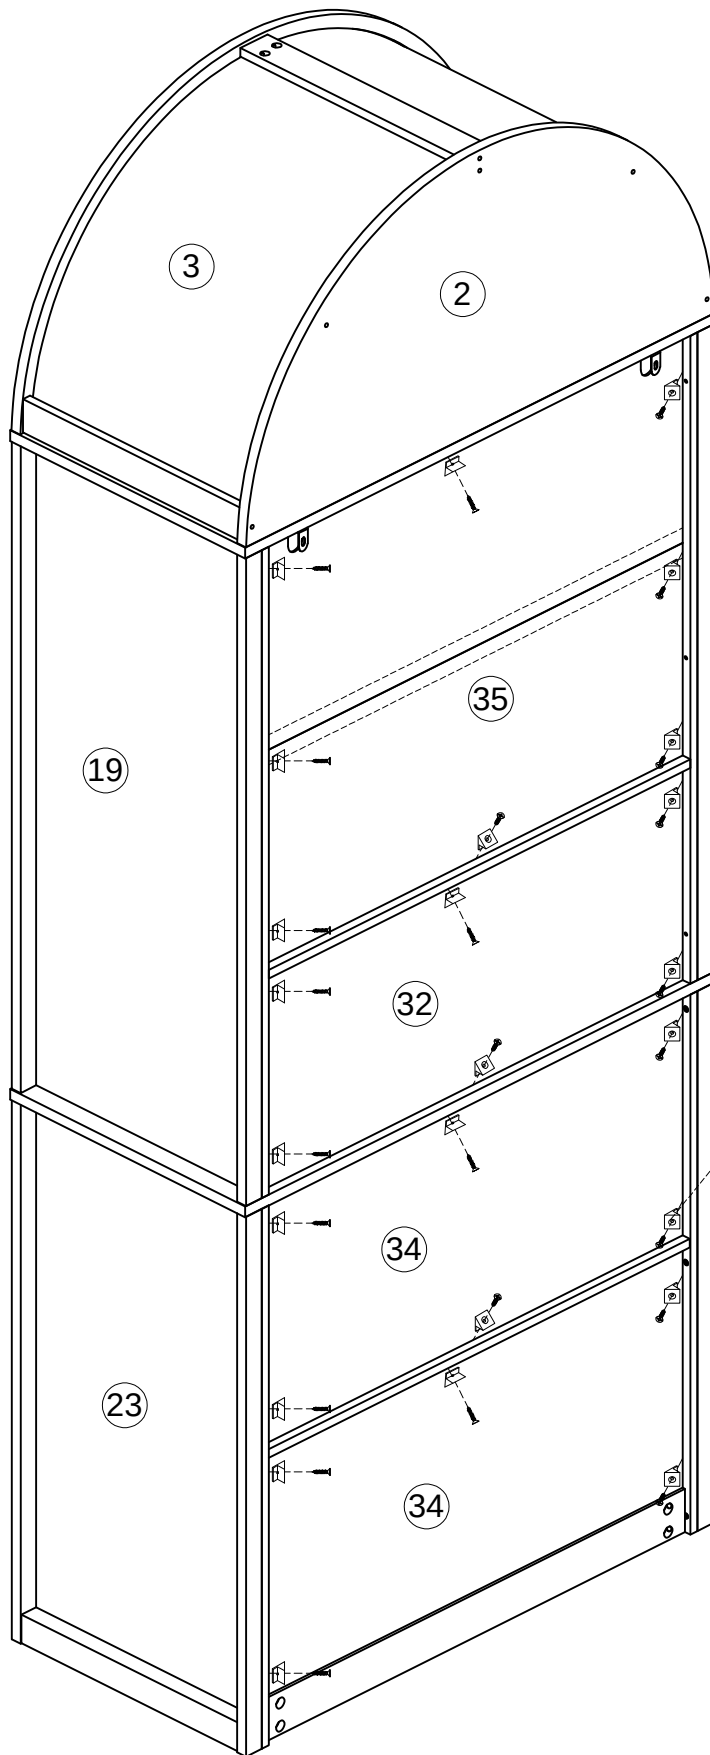


O x25






INSTALLATION INSTRUCTION

41


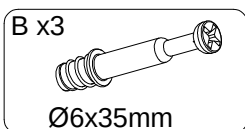
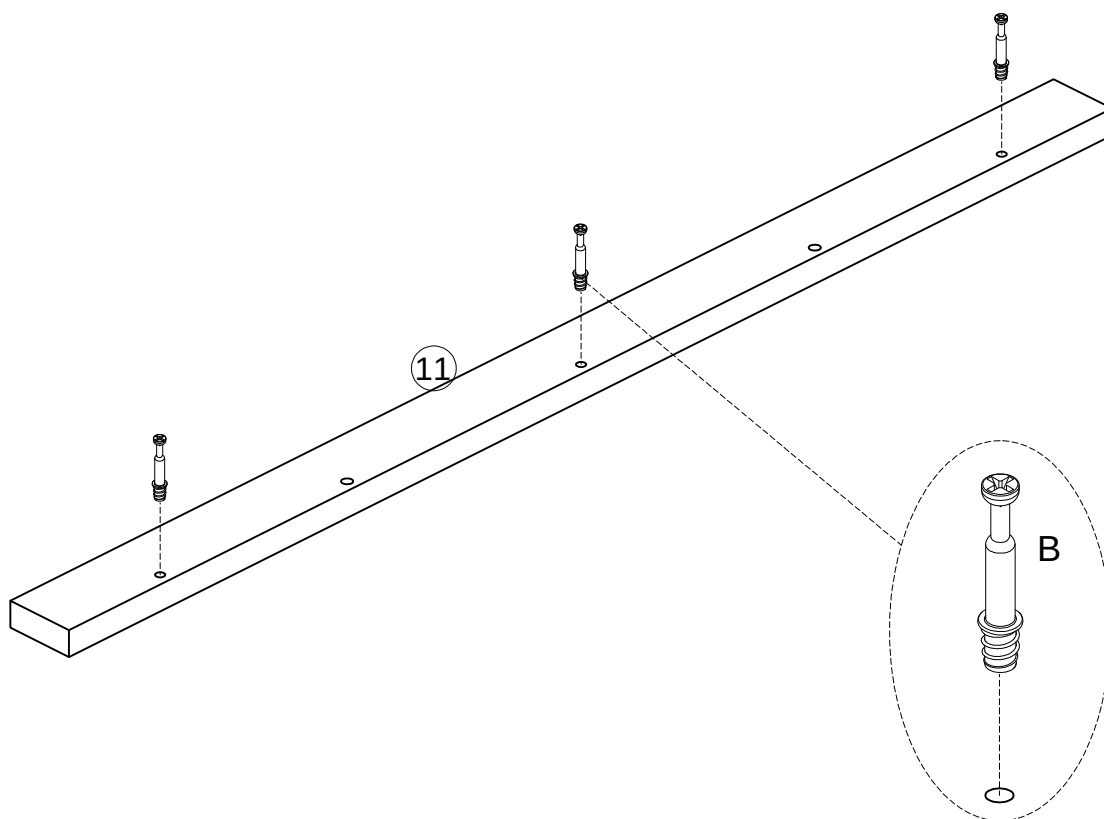


42

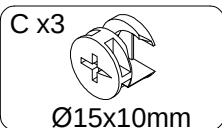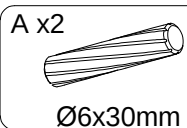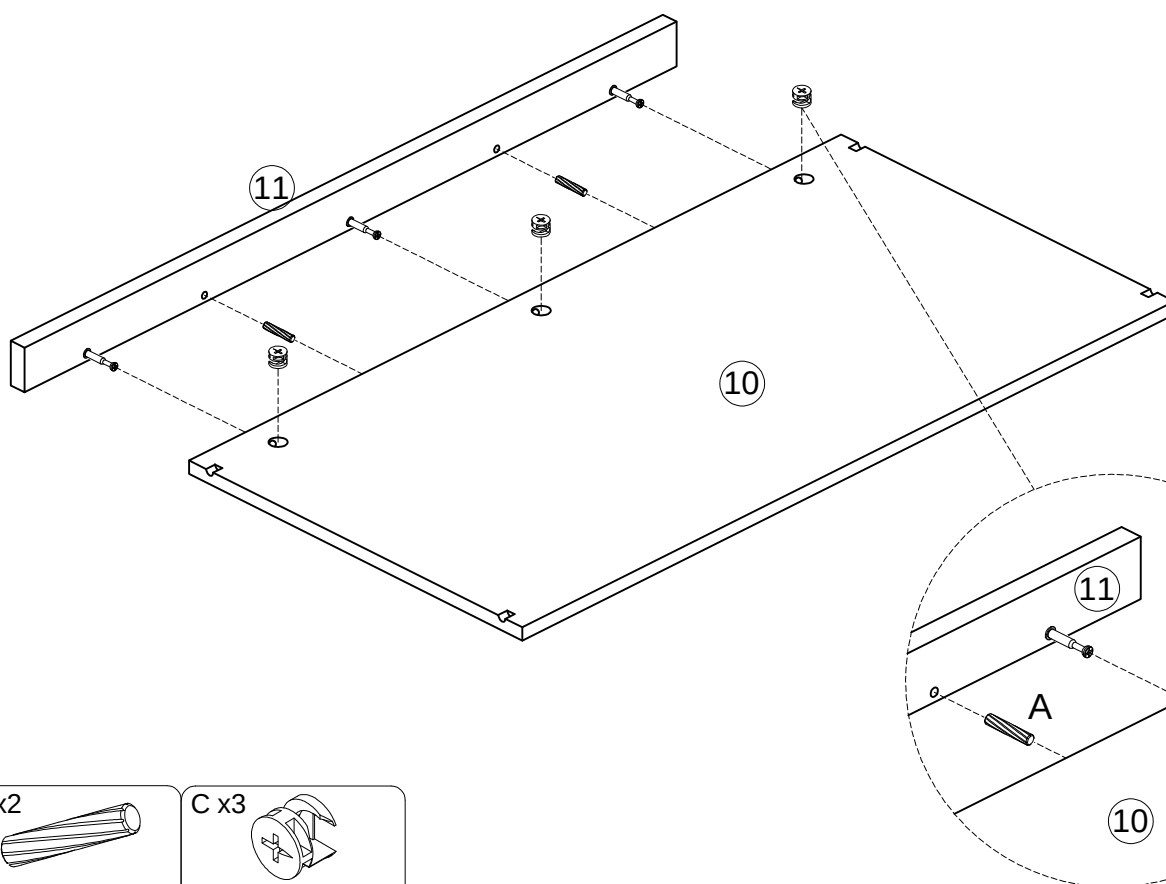


INSTALLATION INSTRUCTION

43

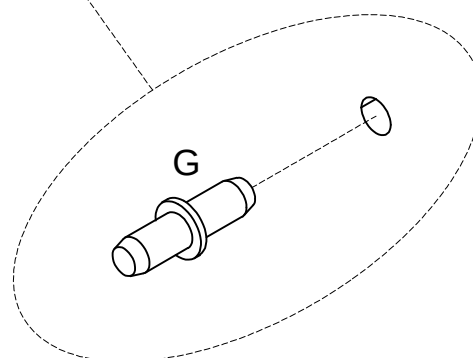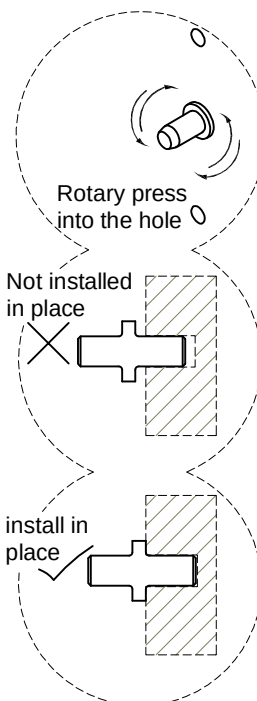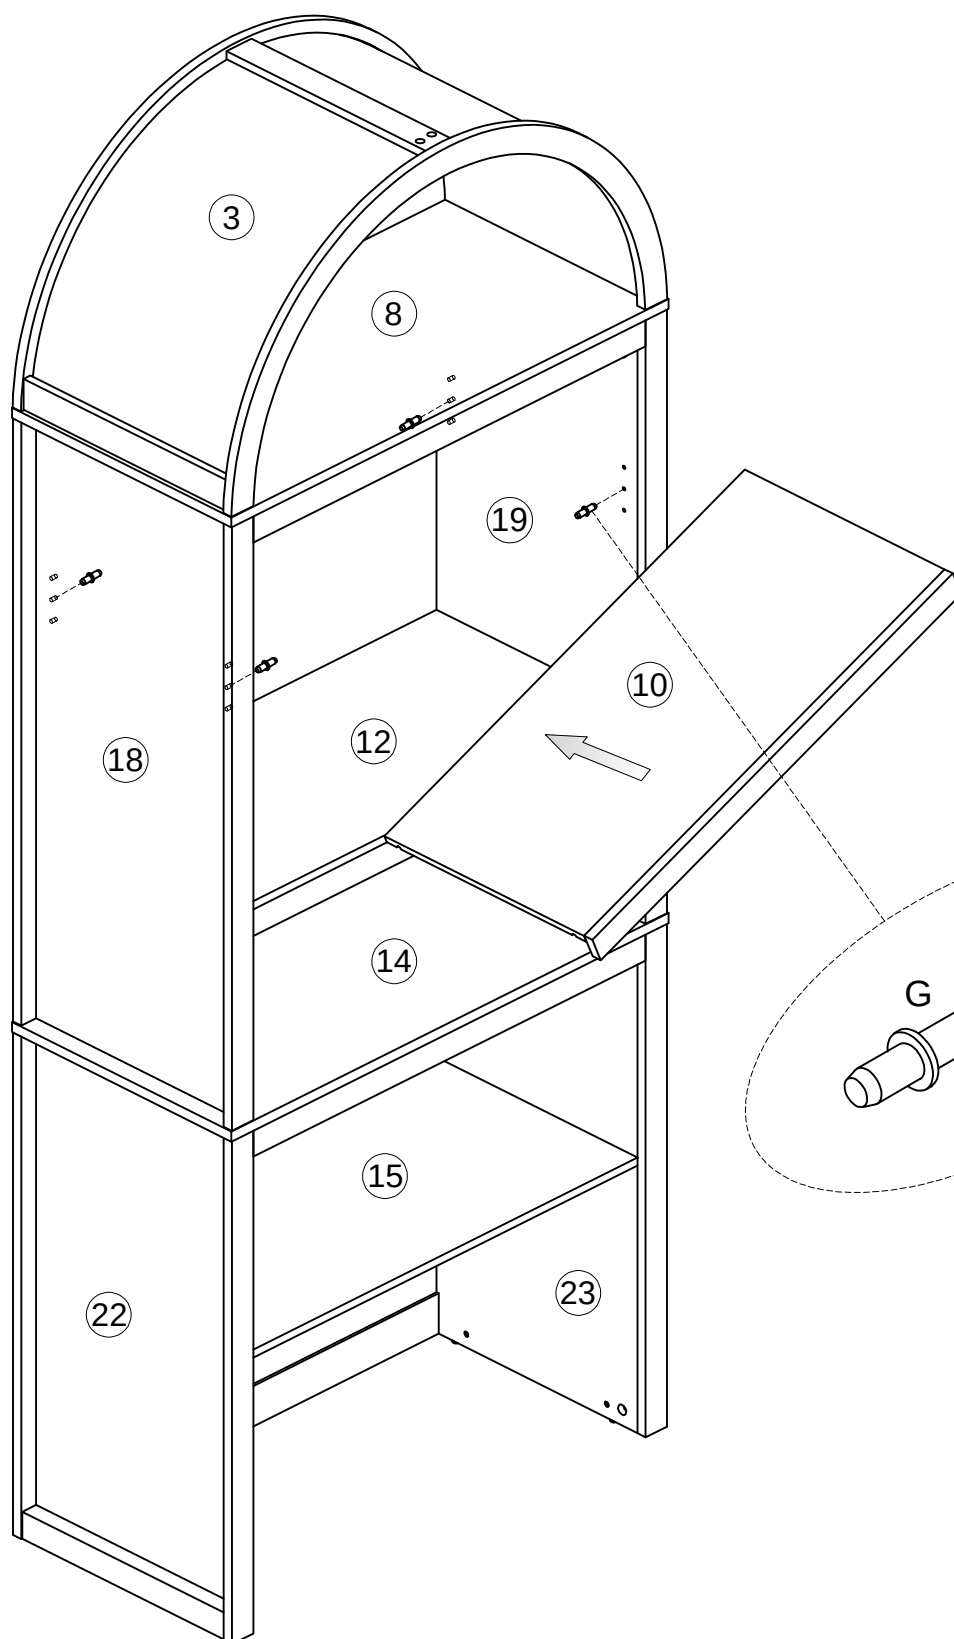


G x4




INSTALLATION INSTRUCTION

44

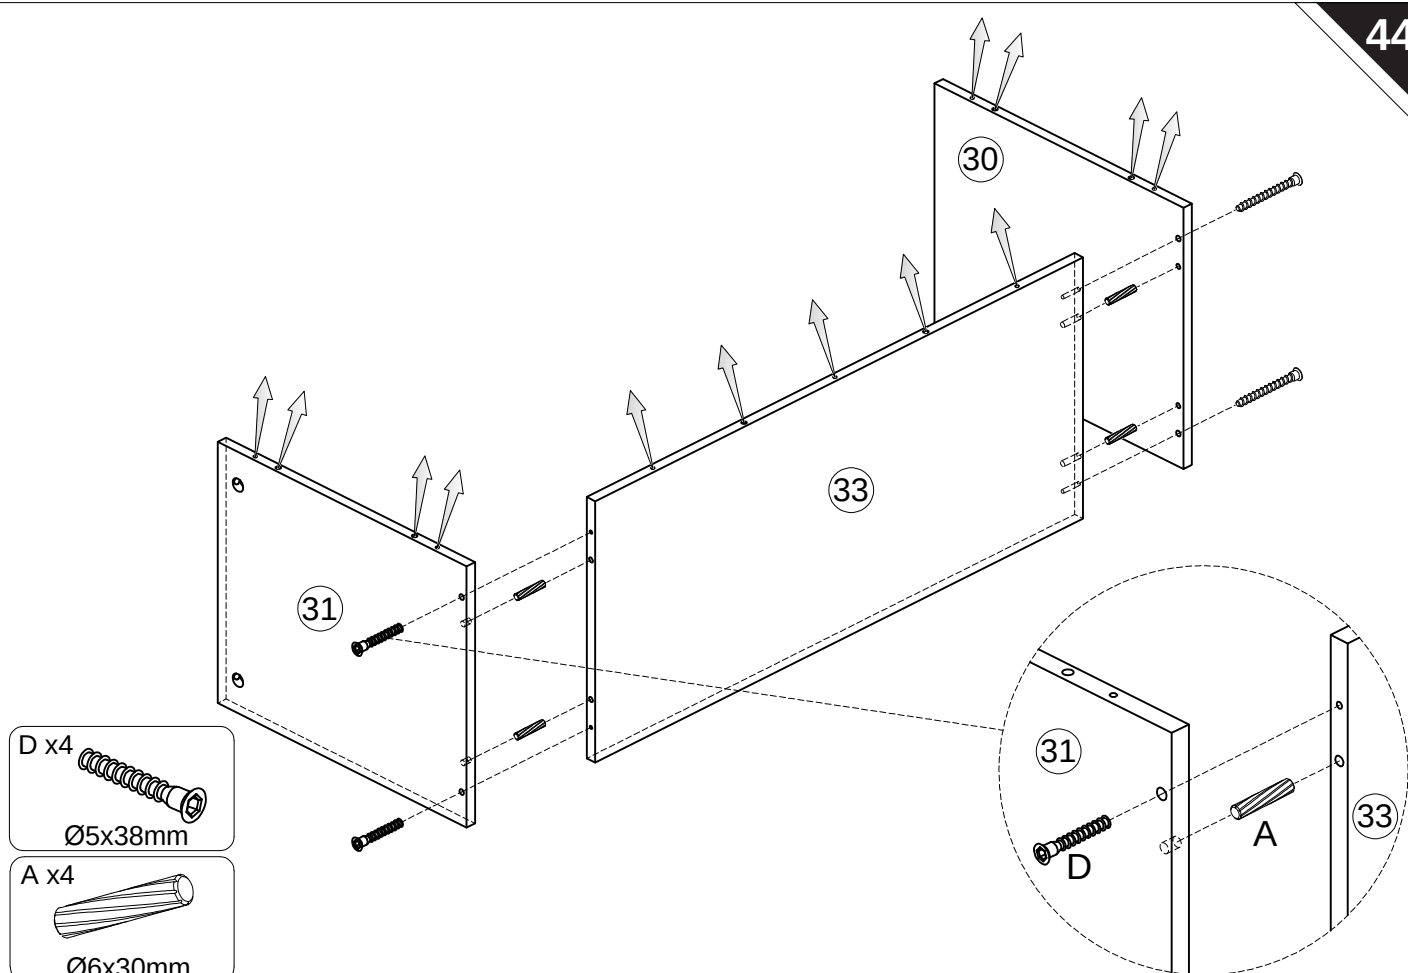


45

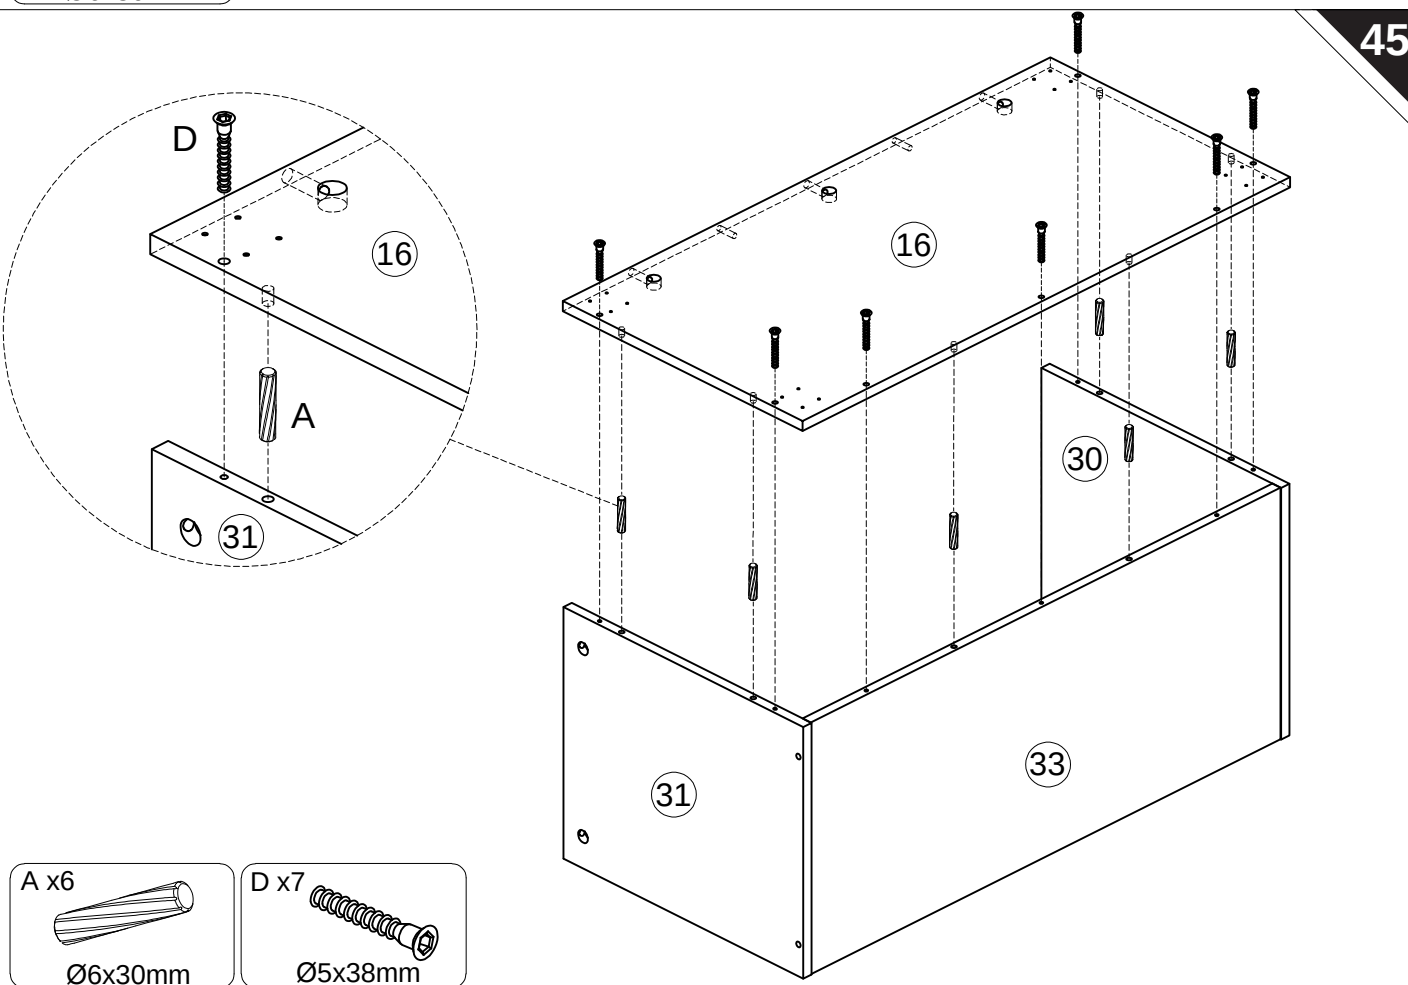


INSTALLATION INSTRUCTION

46

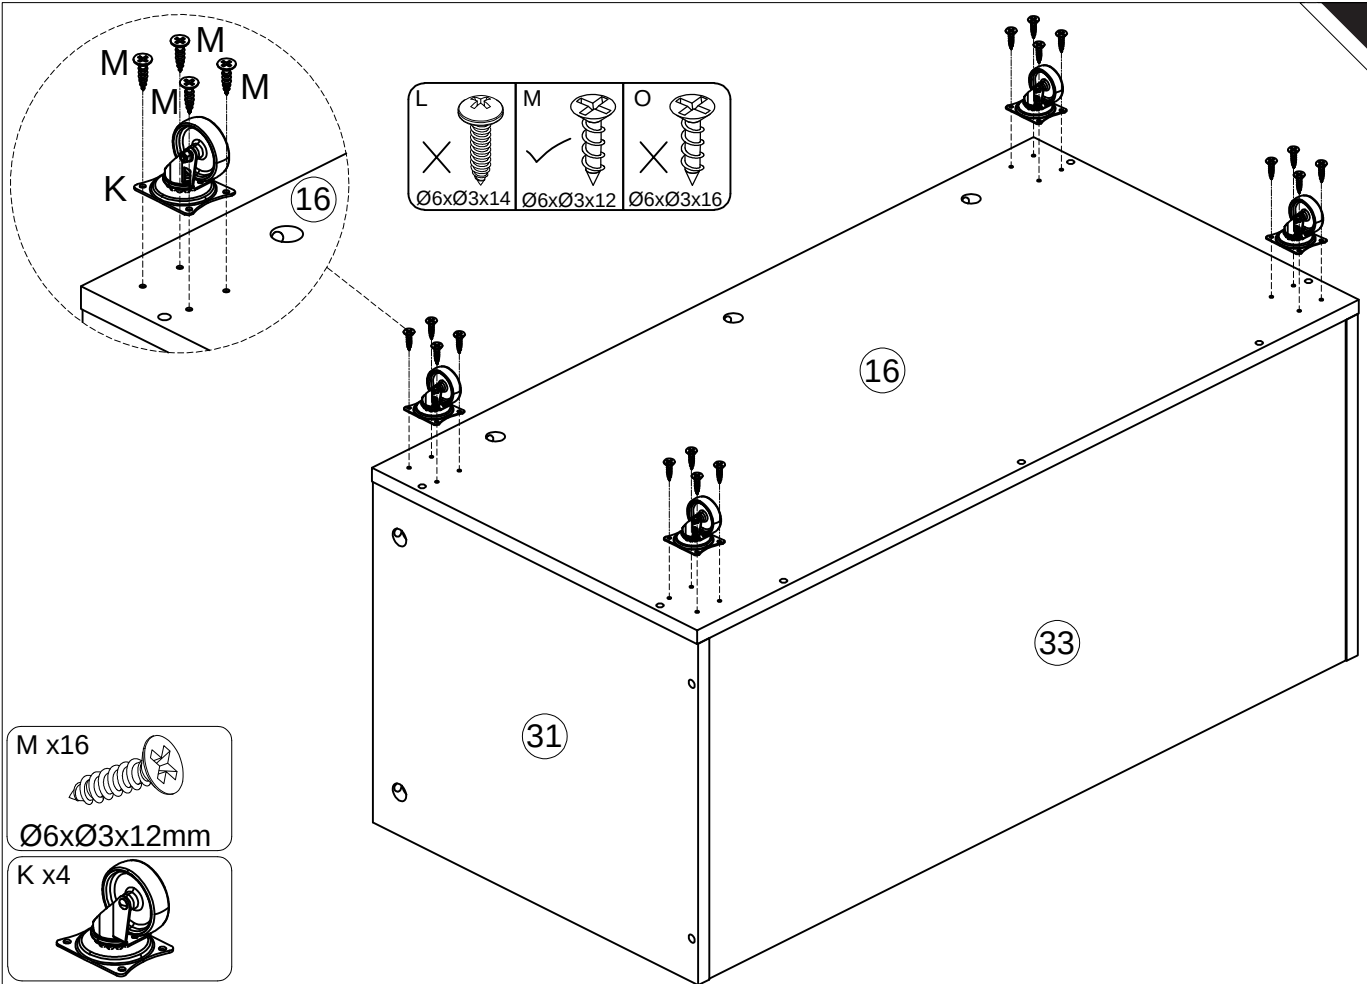


47

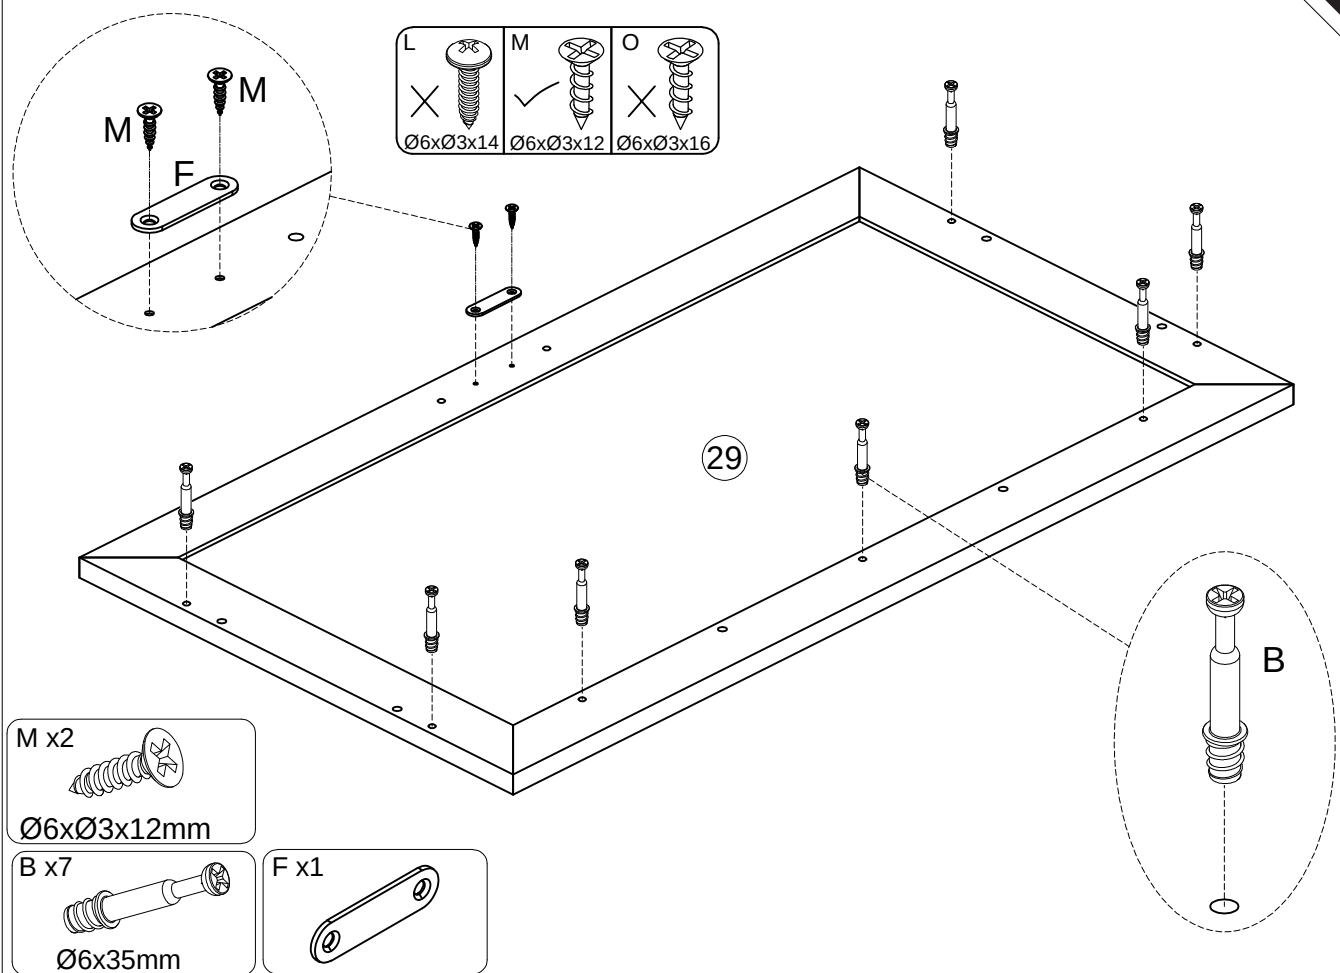




INSTALLATION INSTRUCTION

48

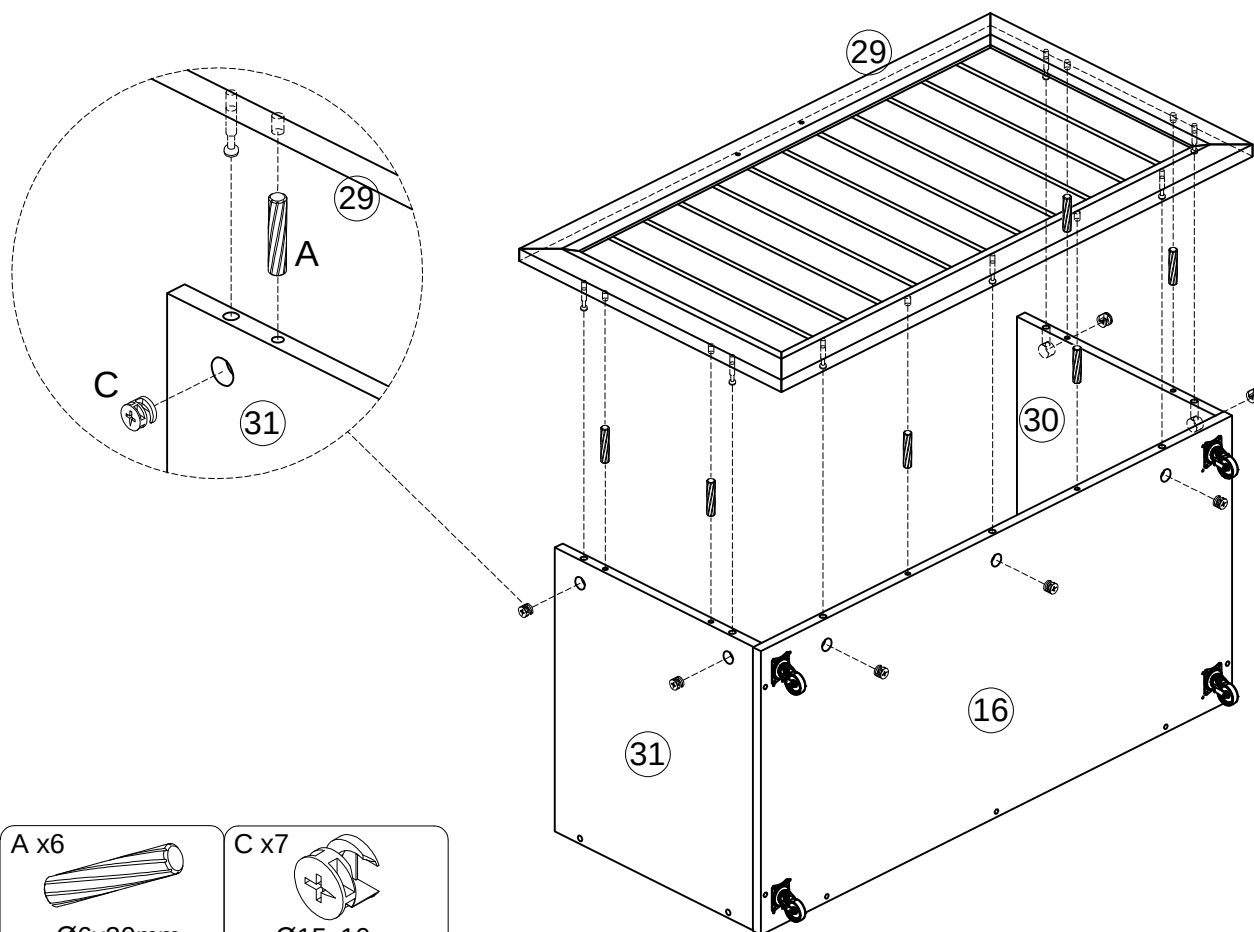



49

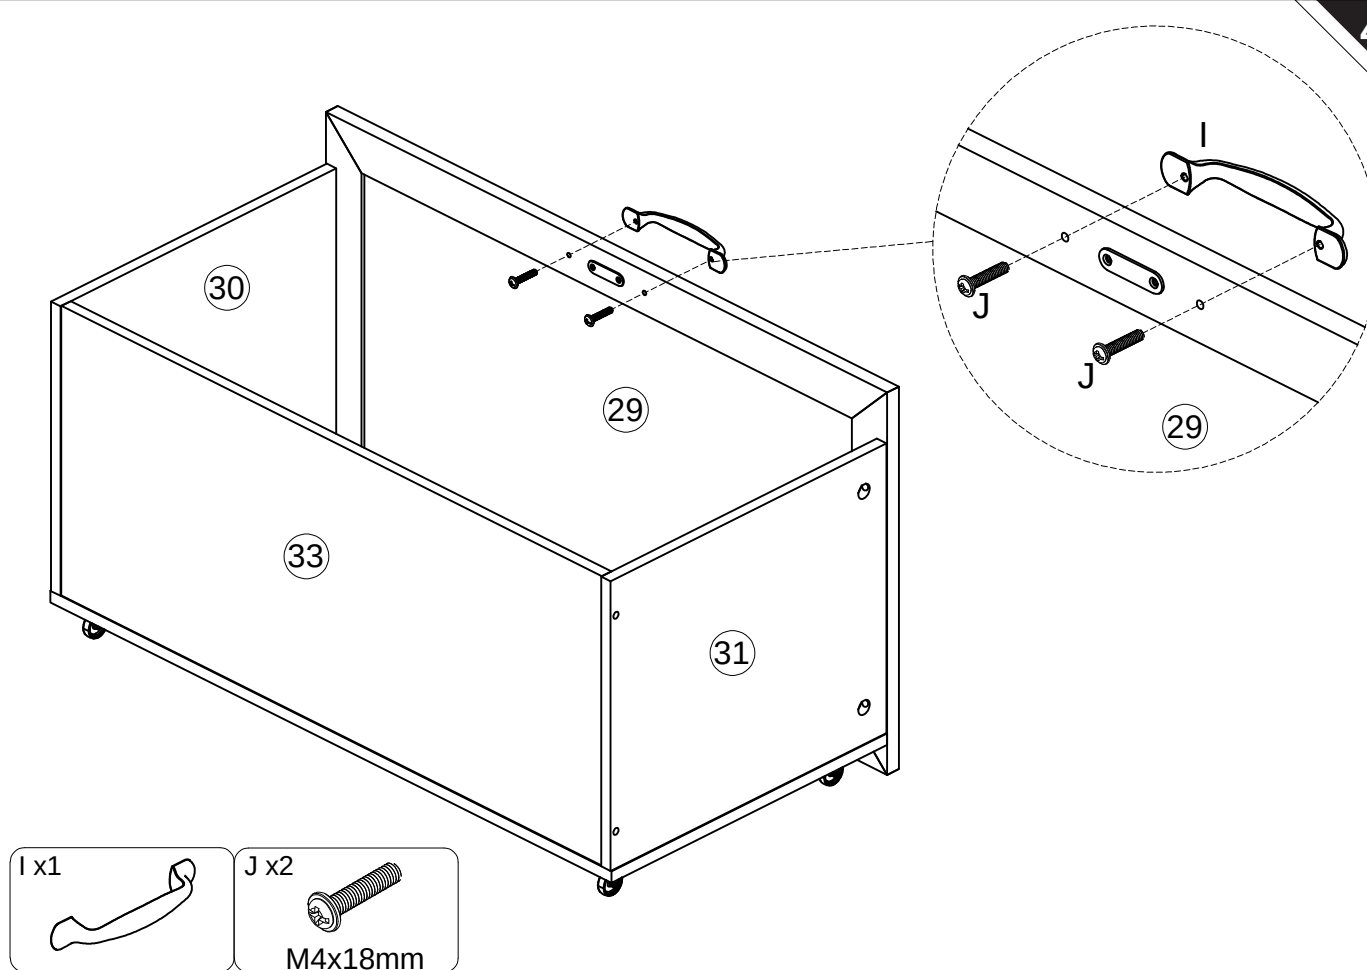

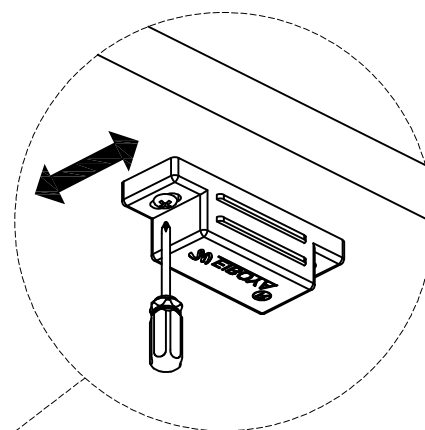
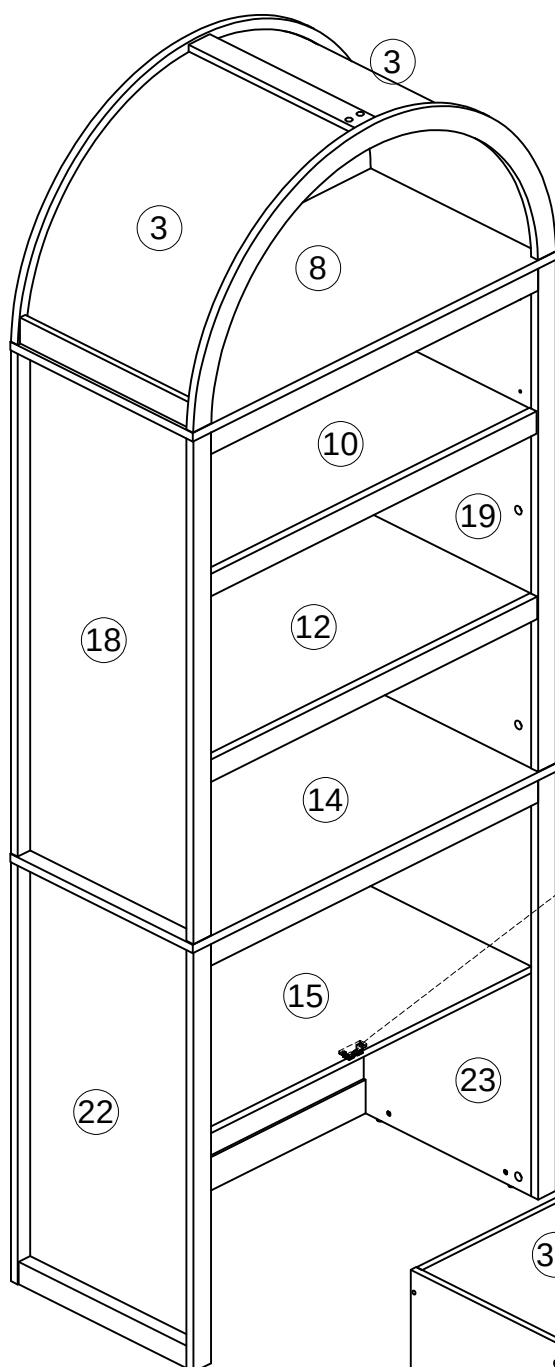



Loosening this screw allows you to adjust the position of the door in the front and back. After adjusting the position, tighten the screw.


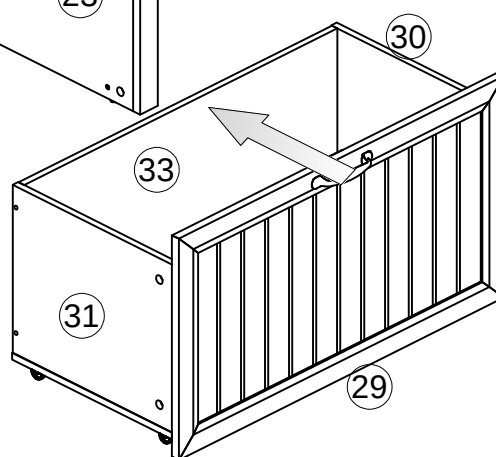


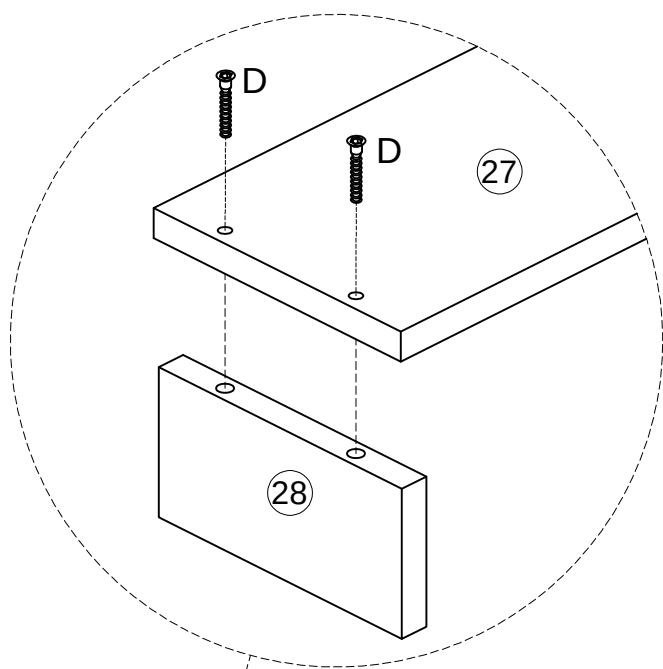


X 2

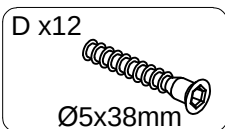
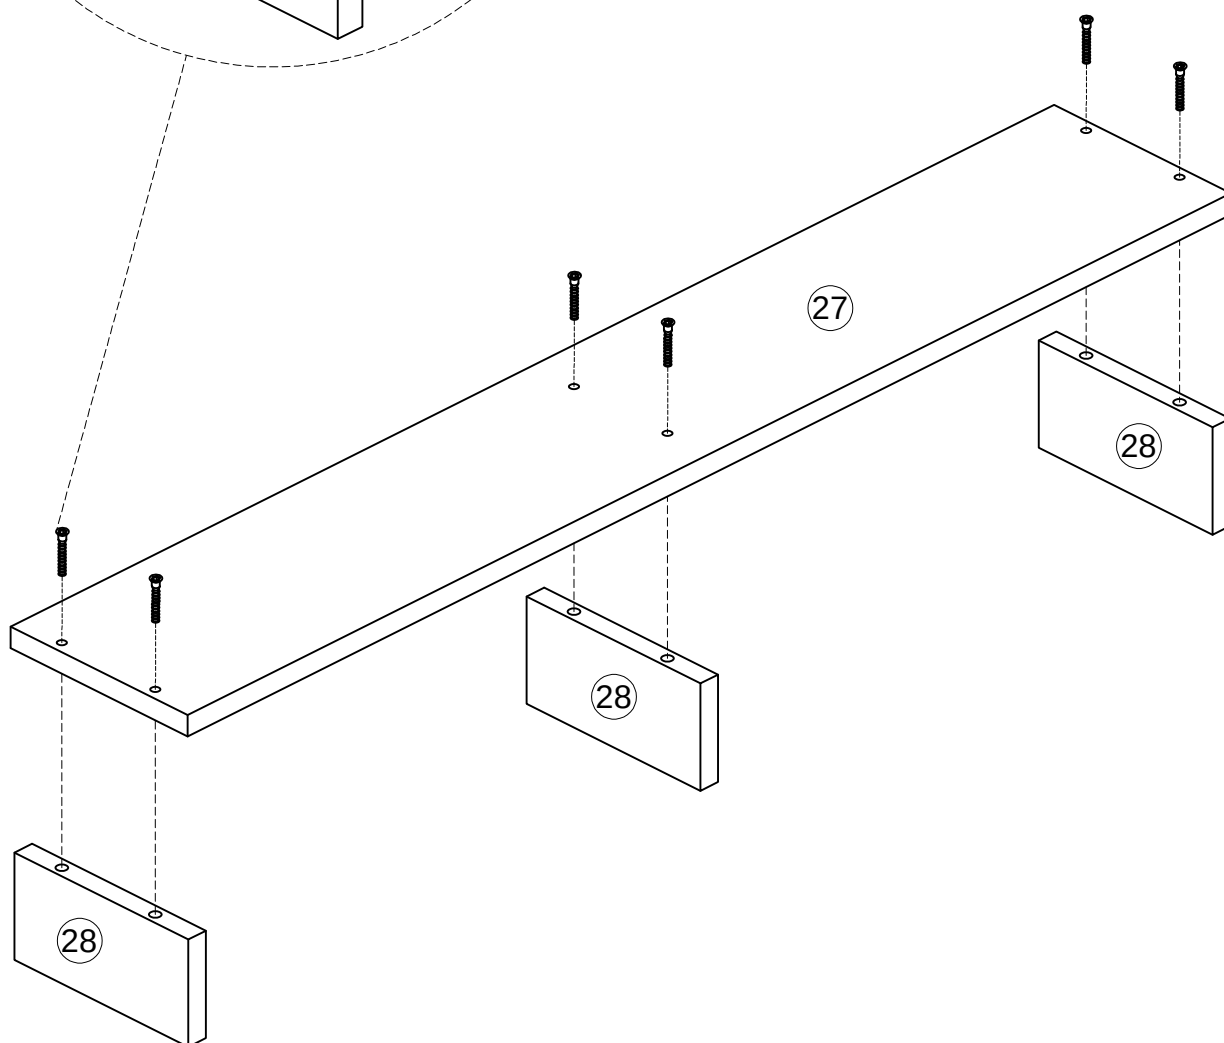


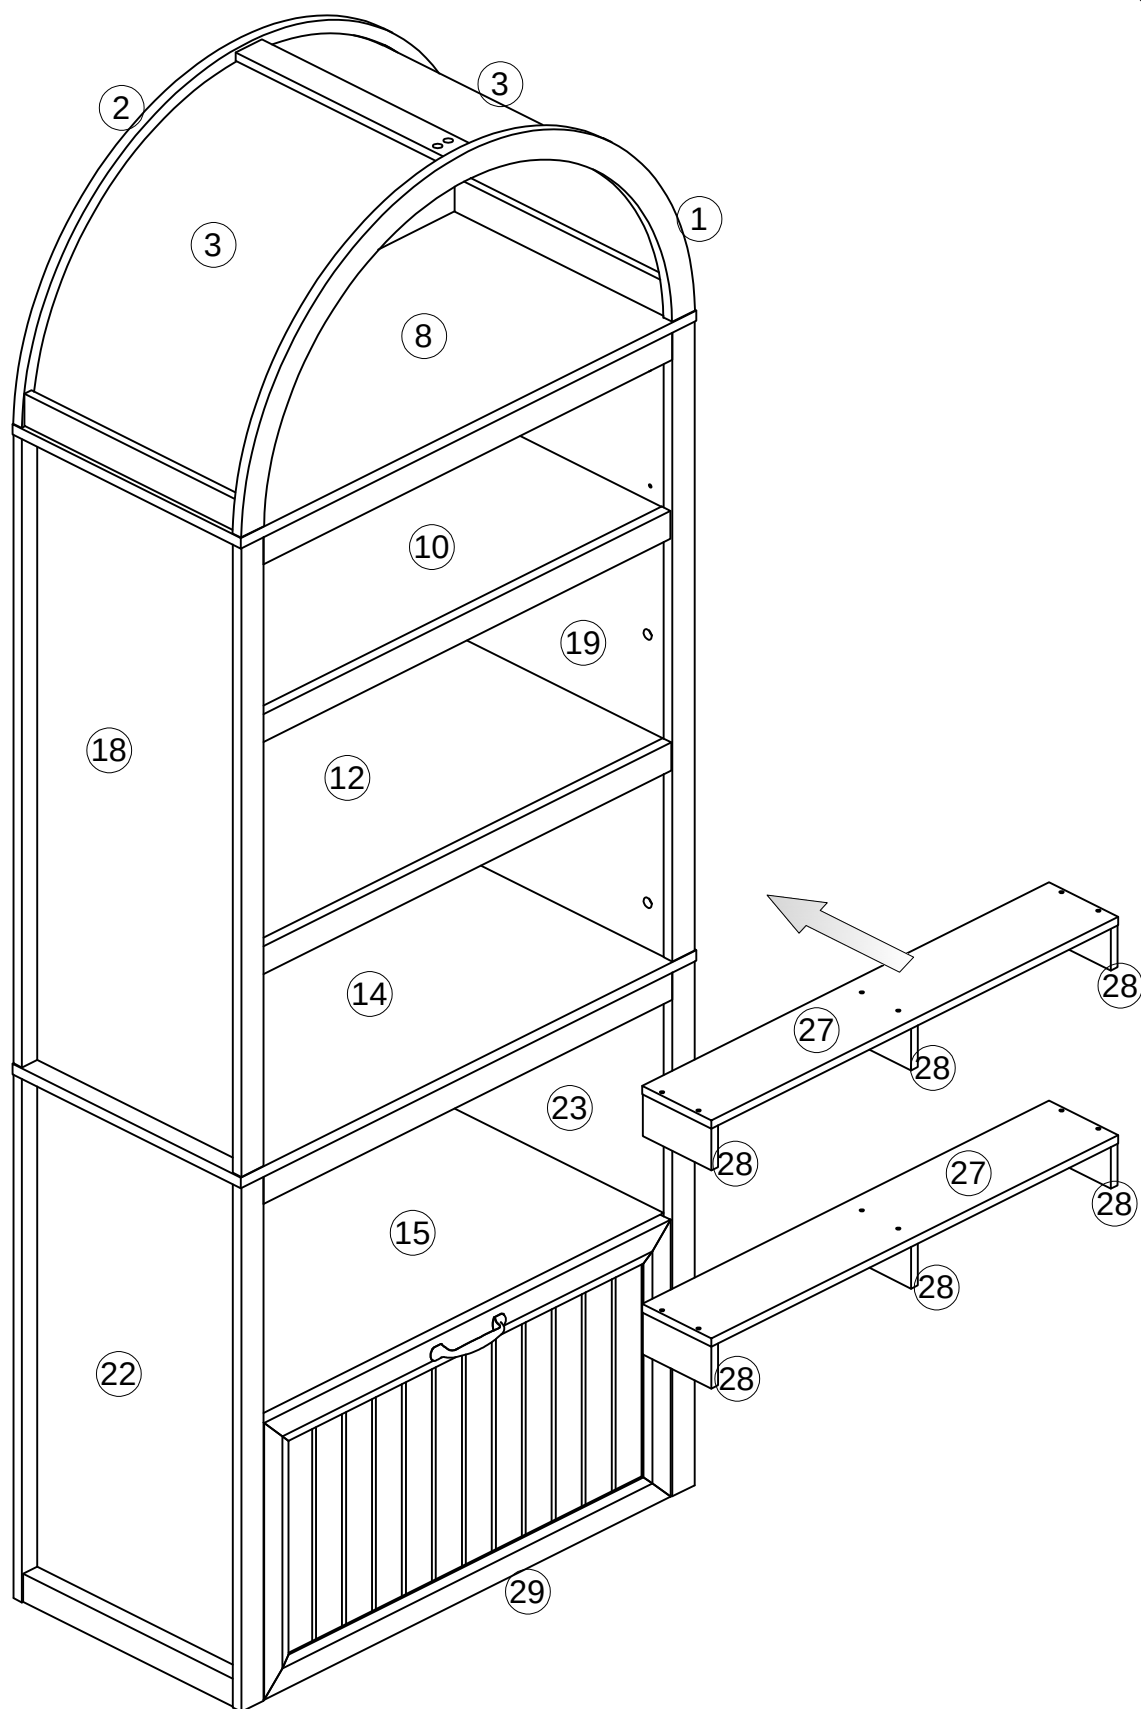

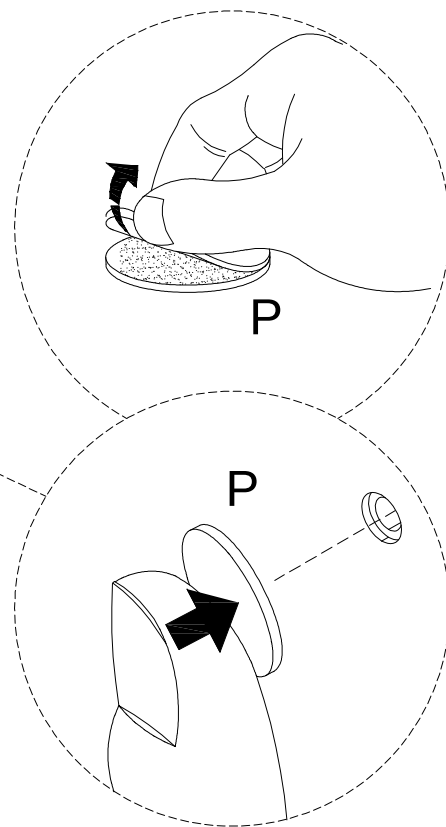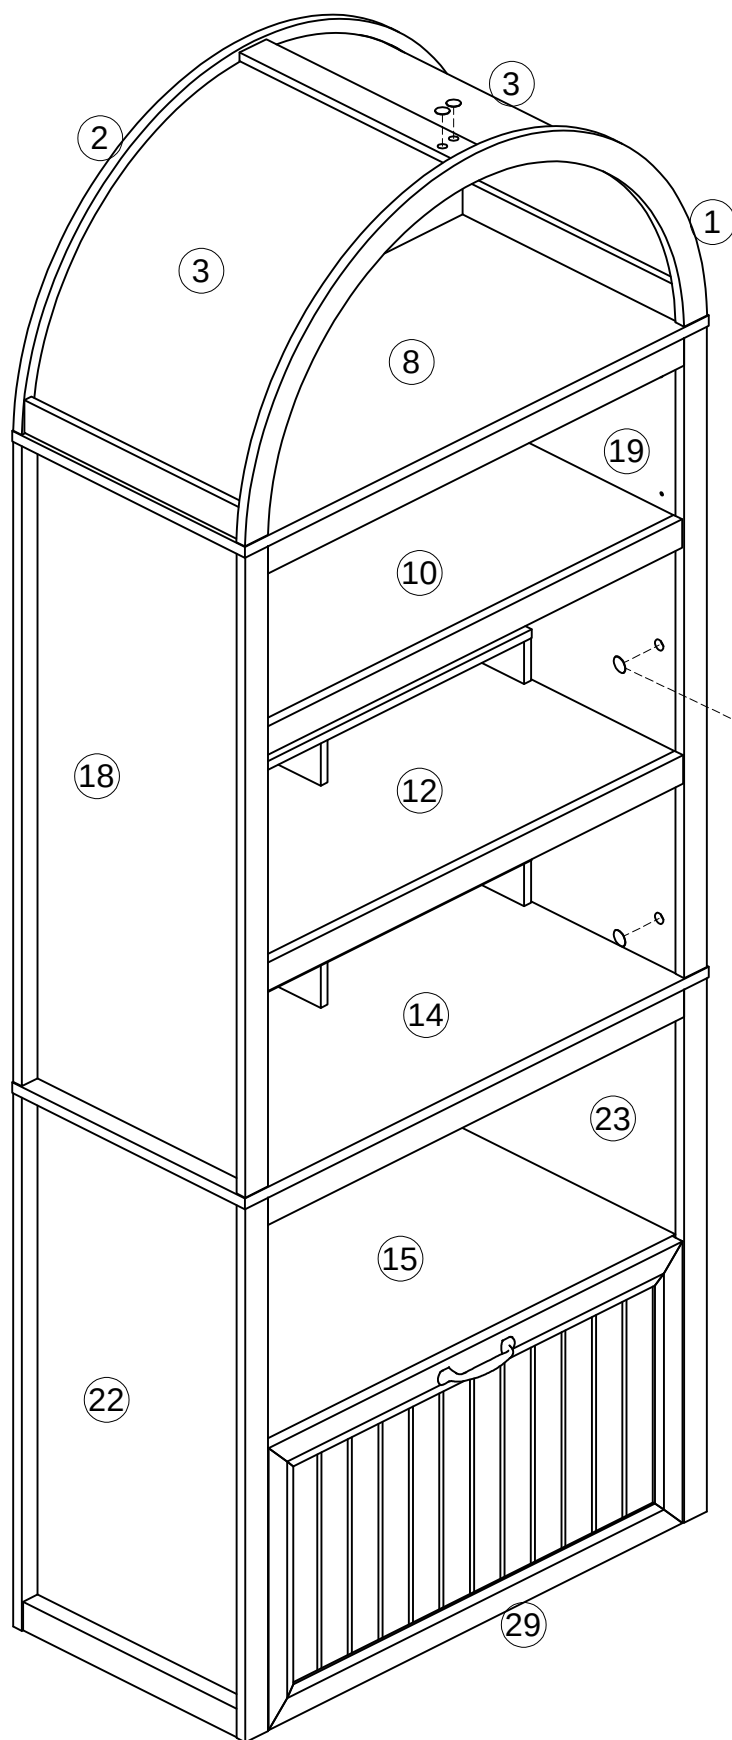

Cover the visible hole with a cap

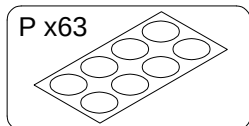

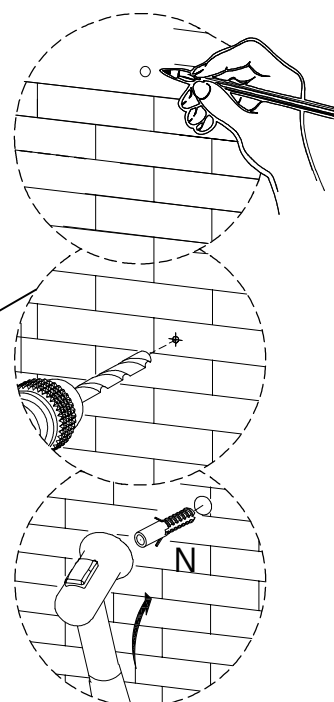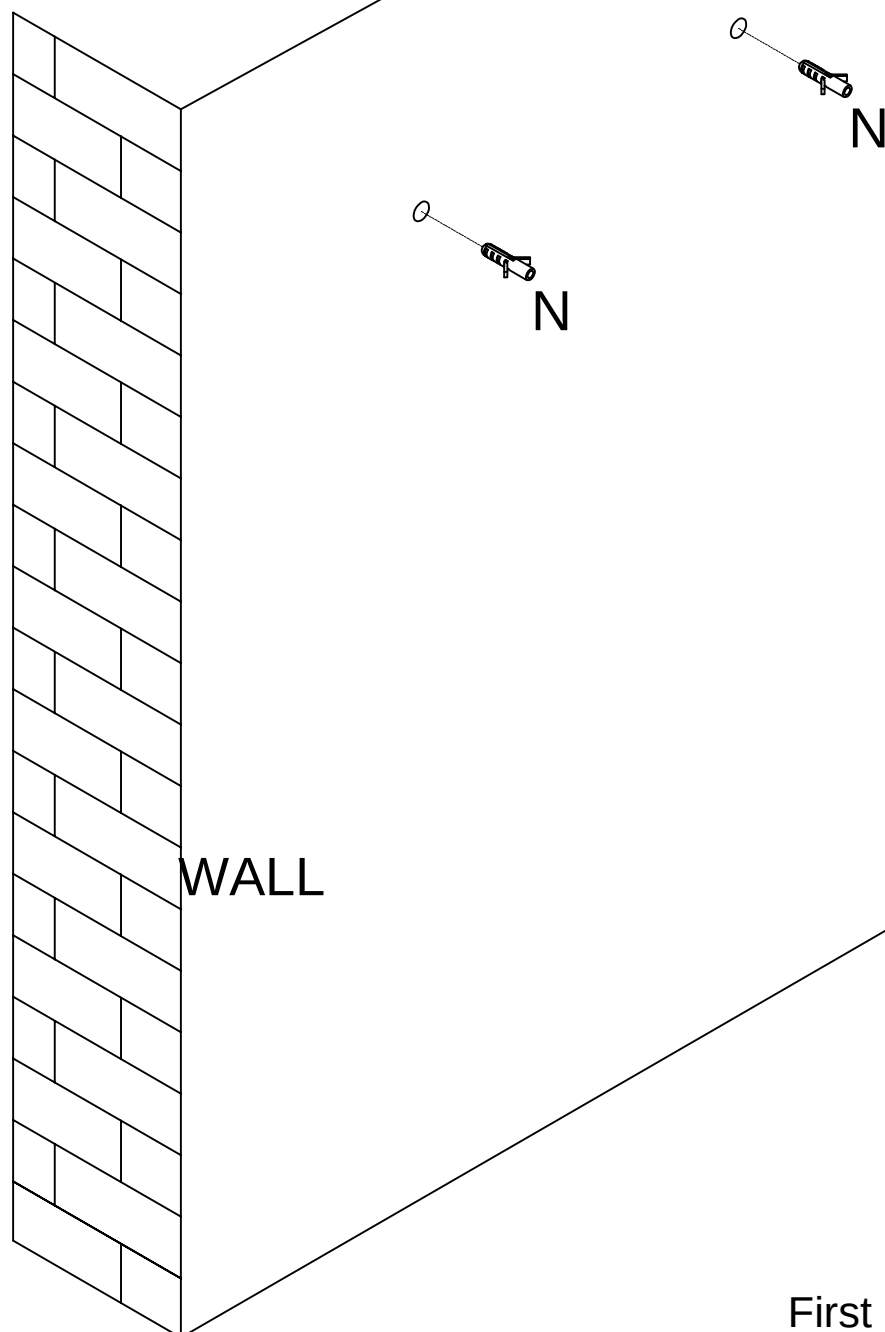

First mark the wall with a pencil, drill the hole to a depth of about 30mm, and knock in the accessory (N)



N x2



INSTALLATION INSTRUCTION


55

WALL

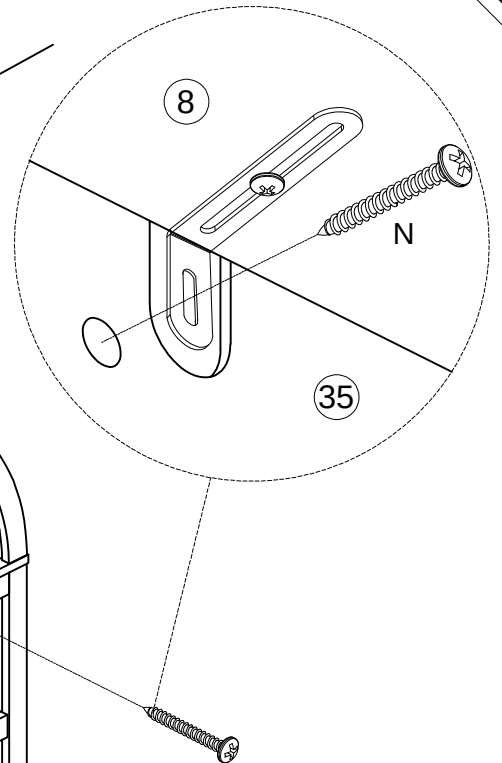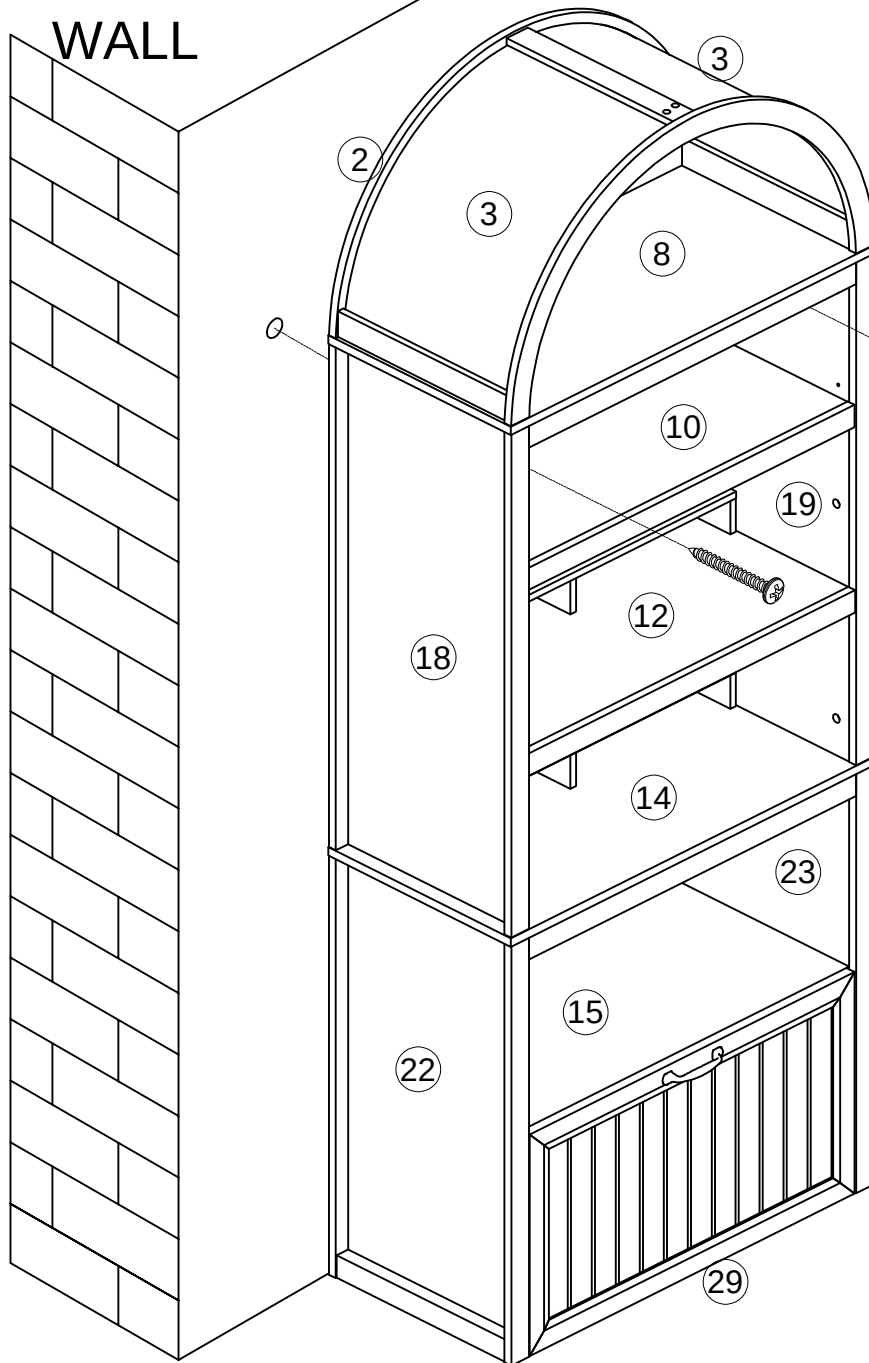

Note: Adjust the L-shaped metal plate #8 to the appropriate position according to the distance between the cabinet and the wall, and then tighten all the screw on L-shaped metal plate #8.

N x2



Ø8xØ4x38mm