

ASSEMBLY INSTRUCTIONS

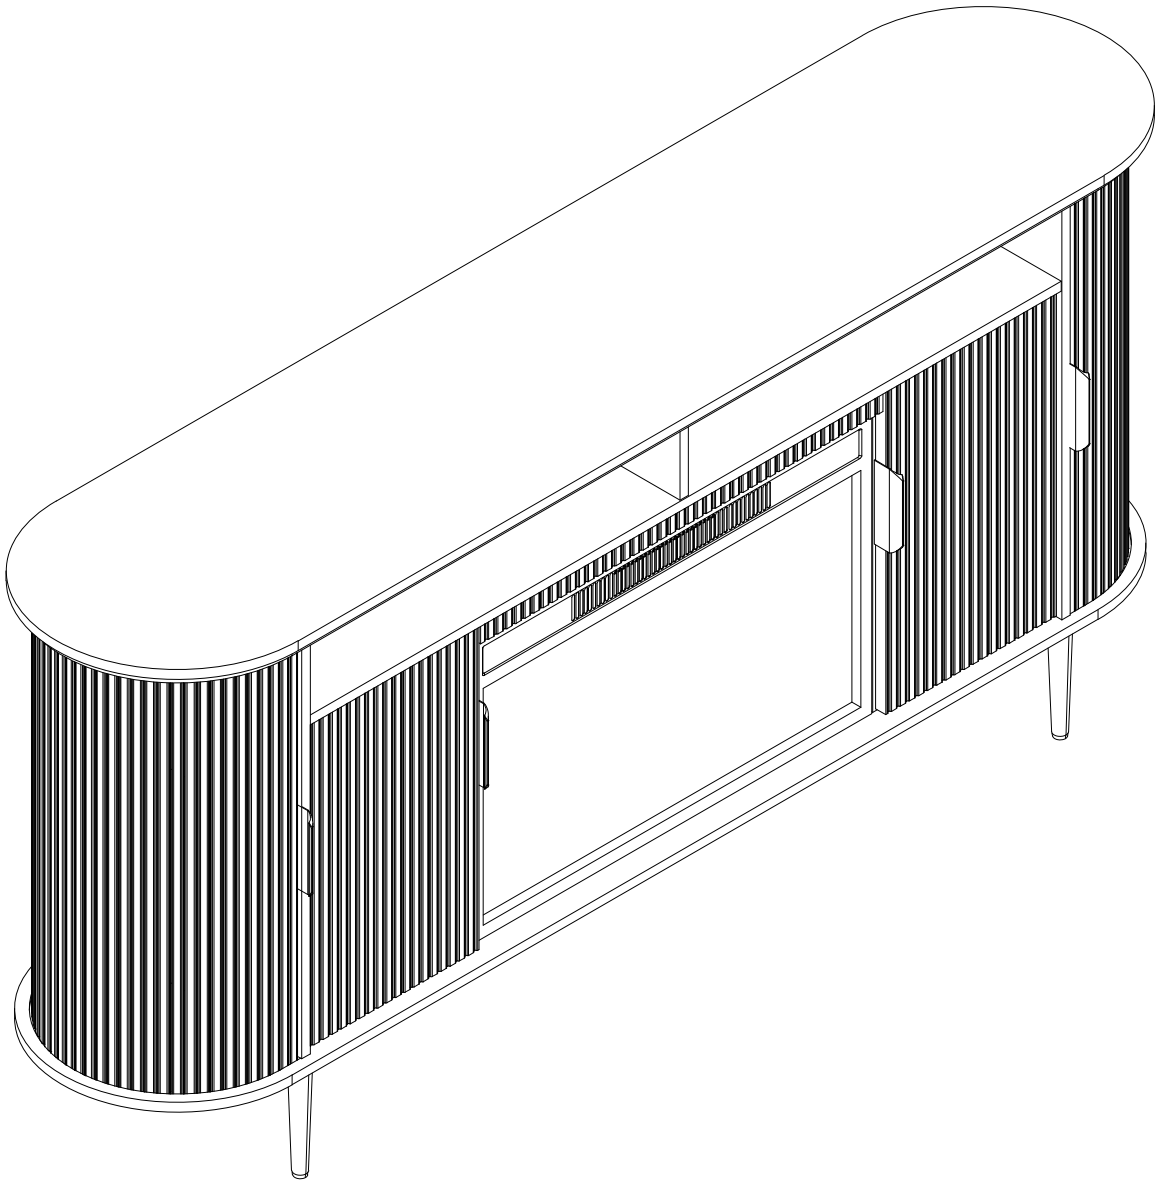


WARNING !

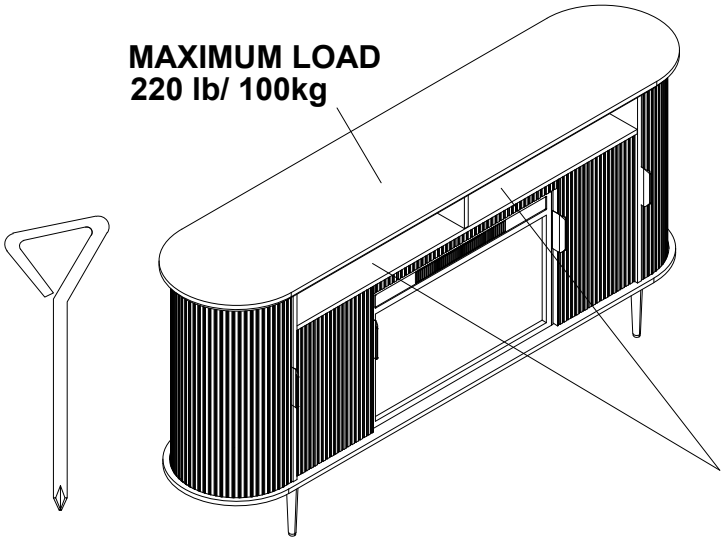


Estimated Time for Assembly

90 mins

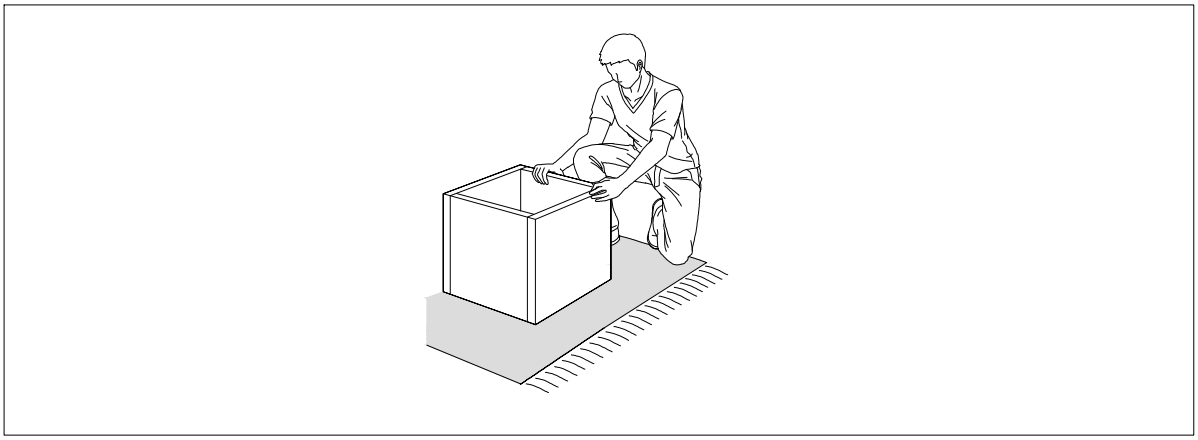

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

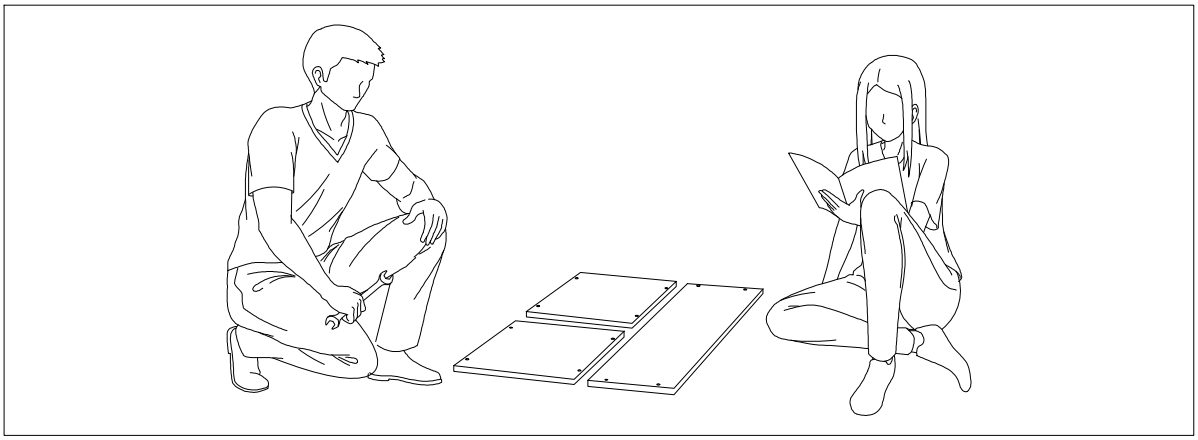


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.


Board Identification

Not actual size

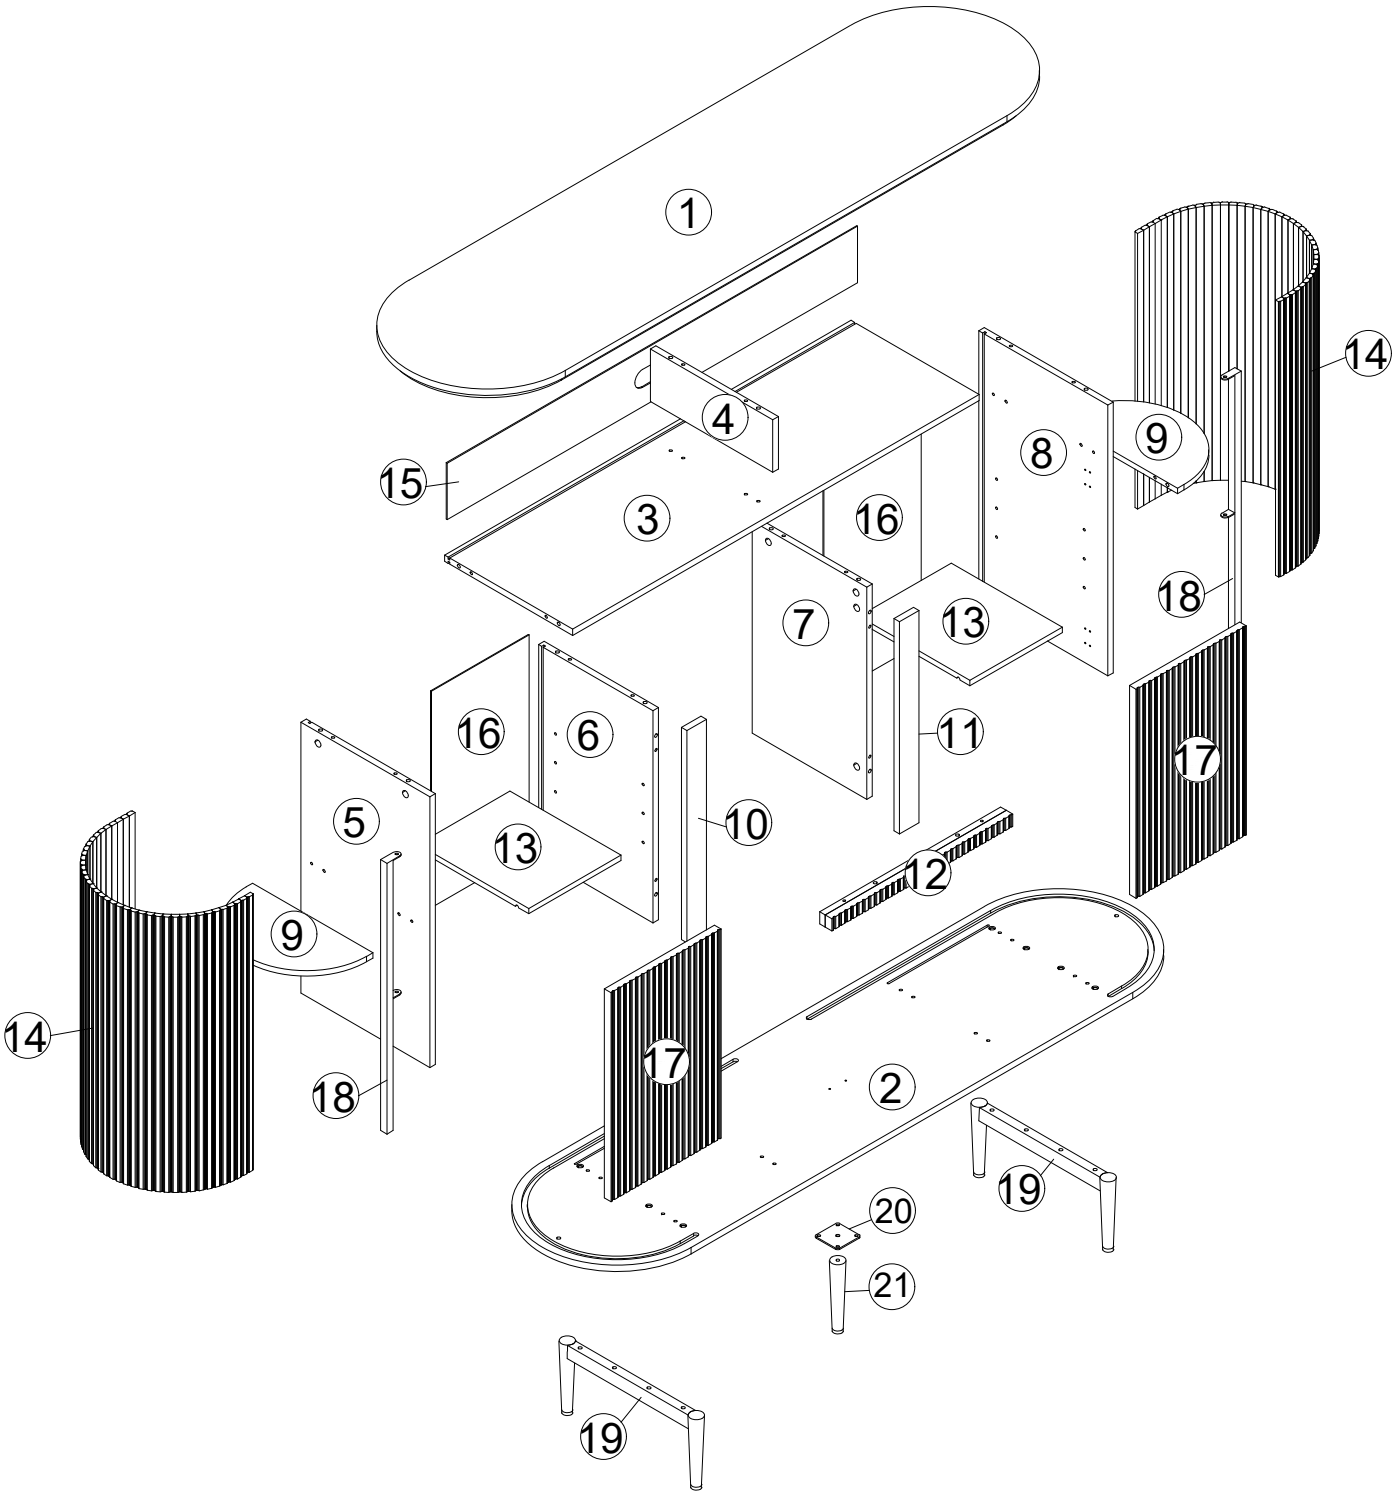


BOARD IDENTIFICATION


Not actual size

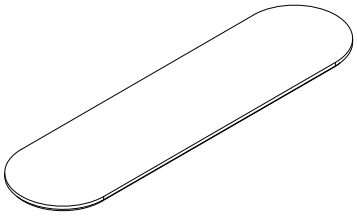


① x1

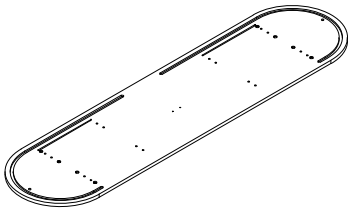


② x1

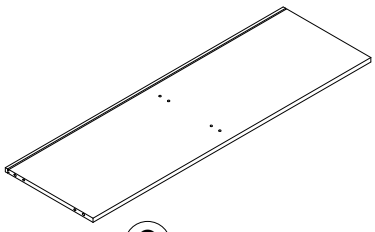


③ x1

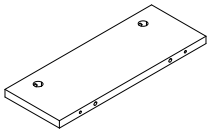


④ x1

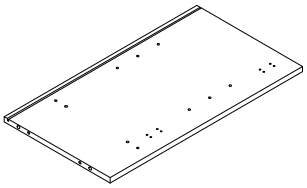


⑤ x1

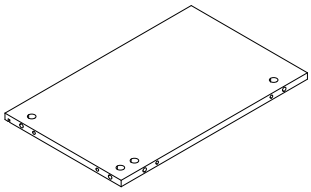


⑥ x1

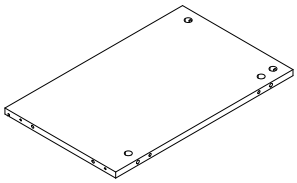


⑦ x1

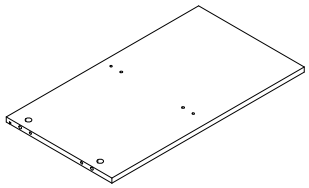


⑧ x1

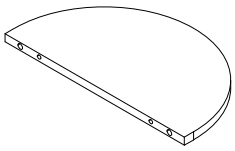


⑨ x2

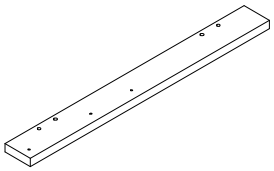


⑩ x1

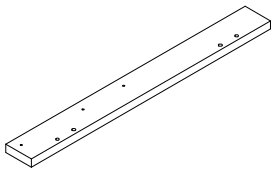


⑪ x1

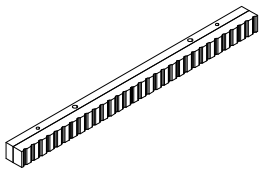


⑫ x1

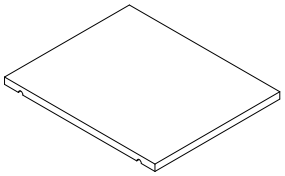

⑬ x2

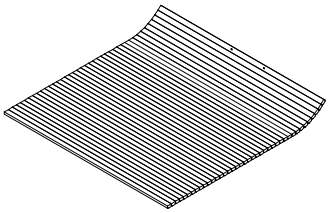


⑭ x2

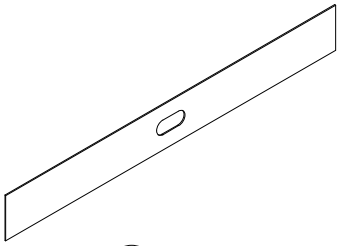


⑮ x1




⑯ x2

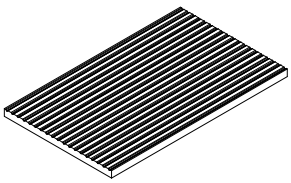


⑰ x2

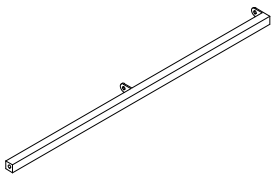


⑱ x2

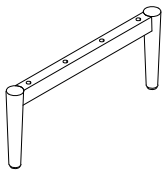











⑲ x2




⑳ x1

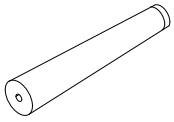

㉑ x1

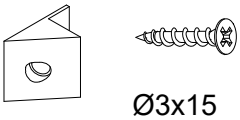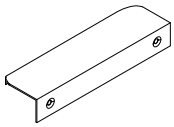
 A x22+2	 Ø15x9.5mm B x22+2	 Ø6x30mm C x34+3	 Ø5x38mm D x10+1
 Ø4x35mm E x4+1	 Ø3.5x10mm F x12+1	 G x2	 1/4"x40 H x11+1
 Ø5x12mm I x6+1	 J x8	 K x4	 Ø4*14mm L x24+2
 Ø3x15 M x8+1	 N1x2 140*19mm  N2x4 Ø16xØ6.5x1mm  N3x2 Ø4x16mm N		 Ø6x30mm O x2
 P x1	 Q x4	 Ø4x25mm R x2	

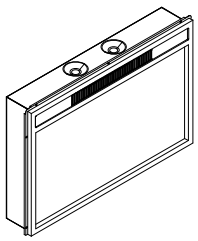


The fireplace and fitting parts are packed in another carton.


Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

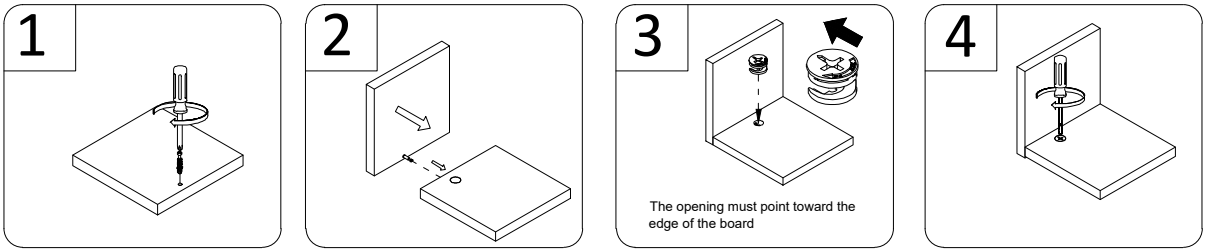


STEP 1

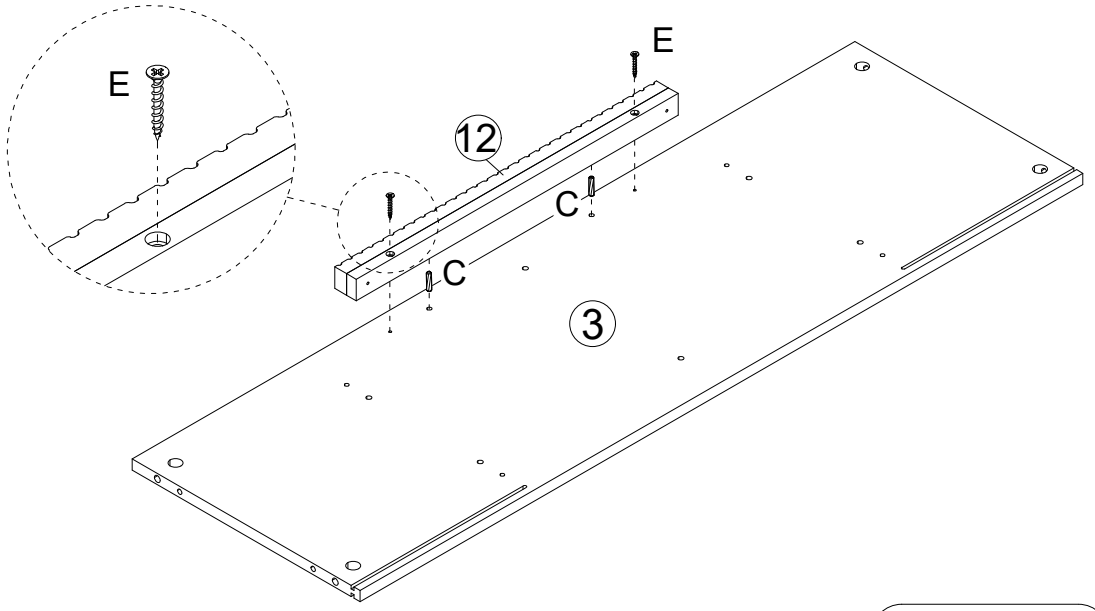


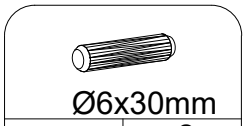


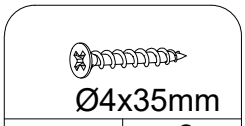



STEP 2

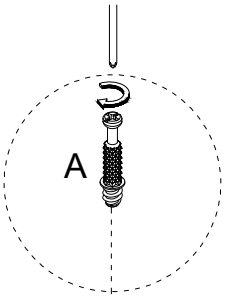


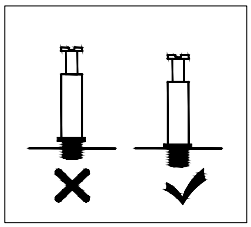

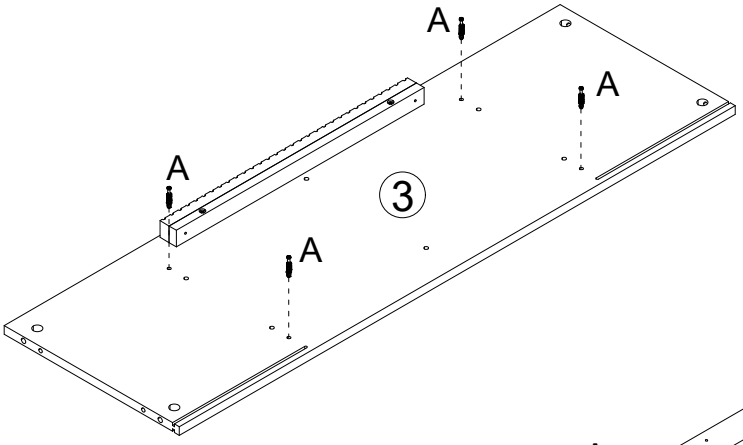


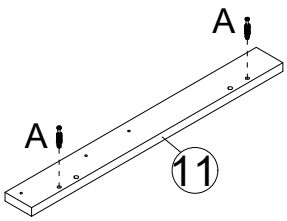


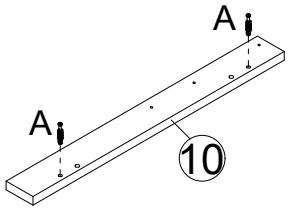


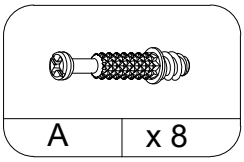



STEP 3

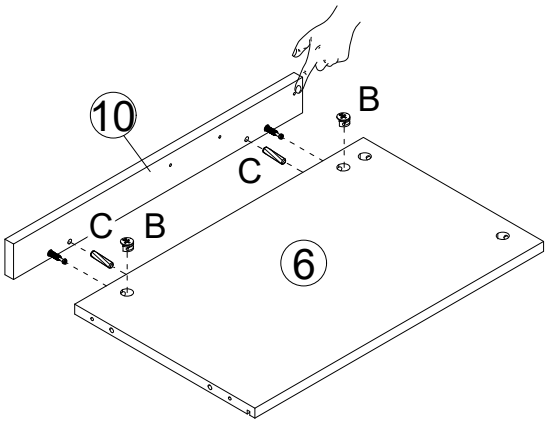
10
B
C
C
B
6

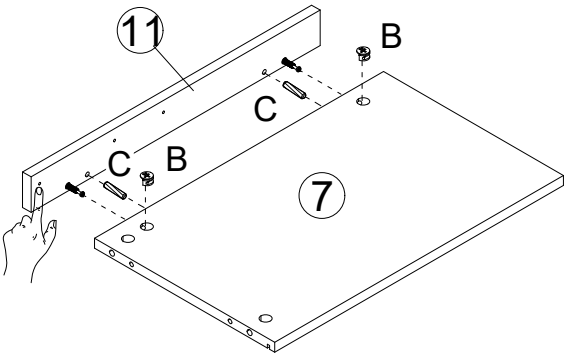

11
B
C
C
B
7

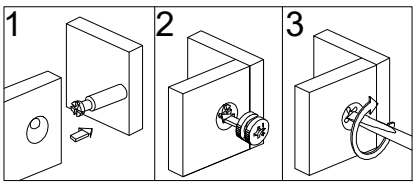

1
2
3



Ø6x30mm
C
x 4



Ø15x9.5mm
B
x 4

STEP 4

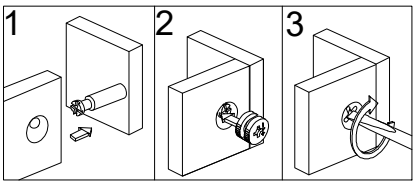

1
2
3

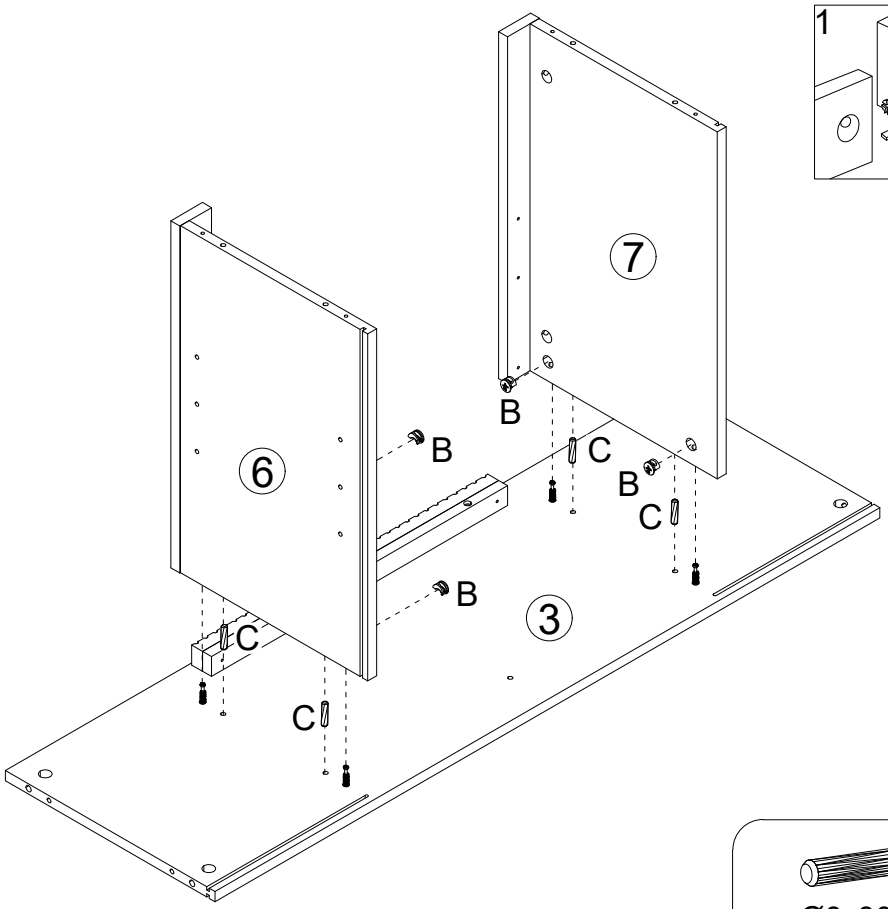
7
B
6
B
C
B
C
B
3
C
C

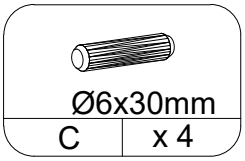
Ø6x30mm
C
x 4

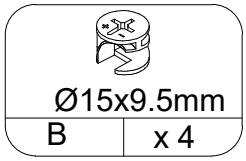
Ø15x9.5mm
B
x 4


STEP 5

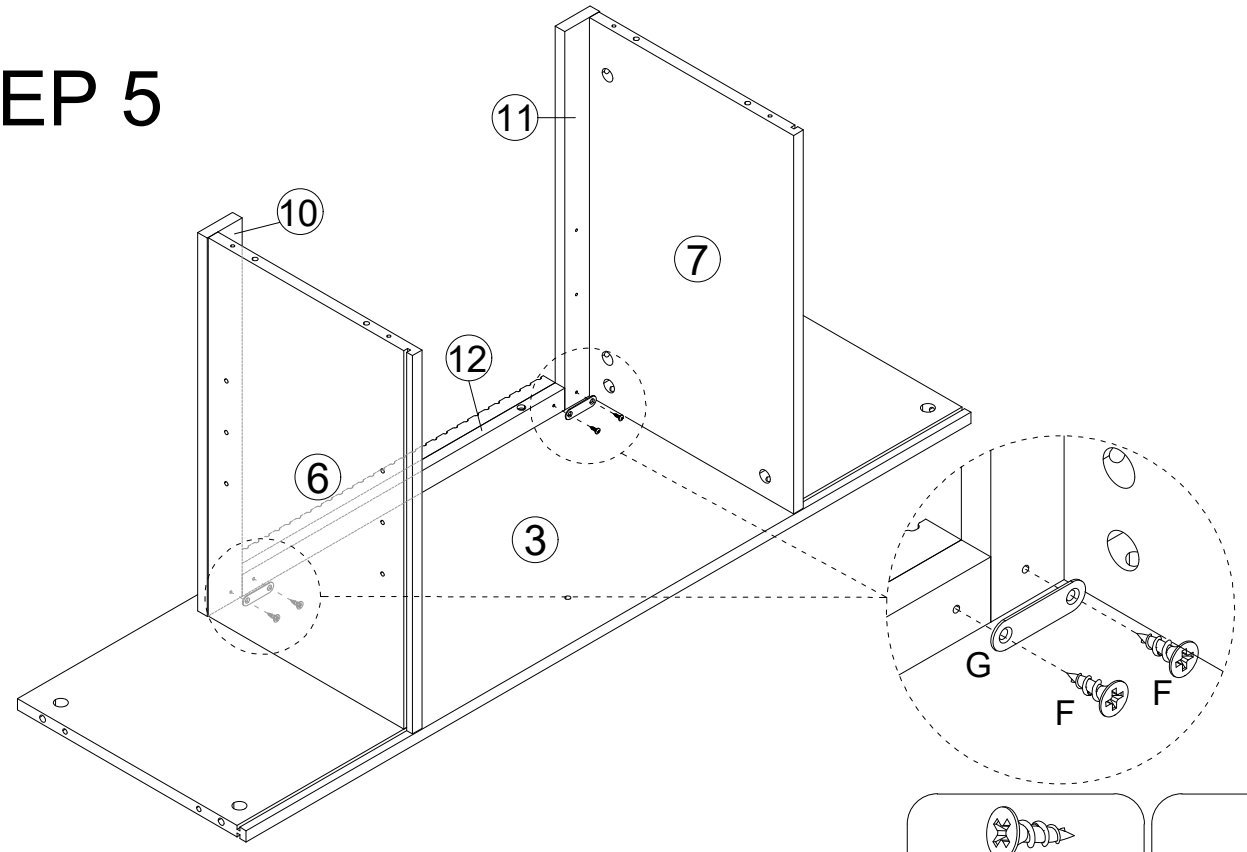

Ø3.5x10mm	
F	x 4
G	x 2


flip 90°


STEP 6

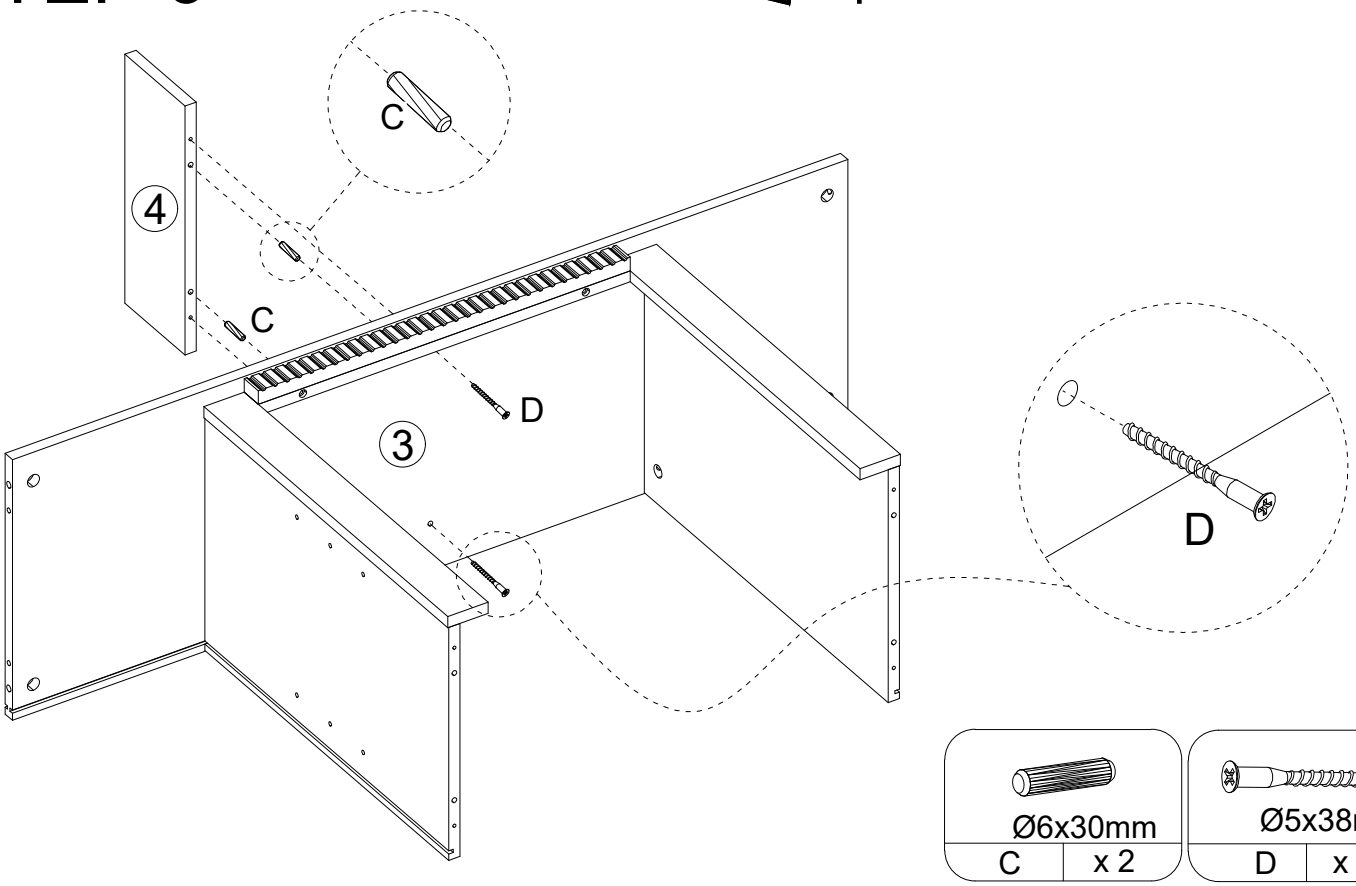



Ø6x30mm	Ø5x38mm
C x 2	D x 2

STEP 7

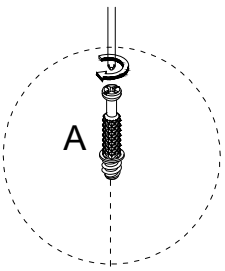


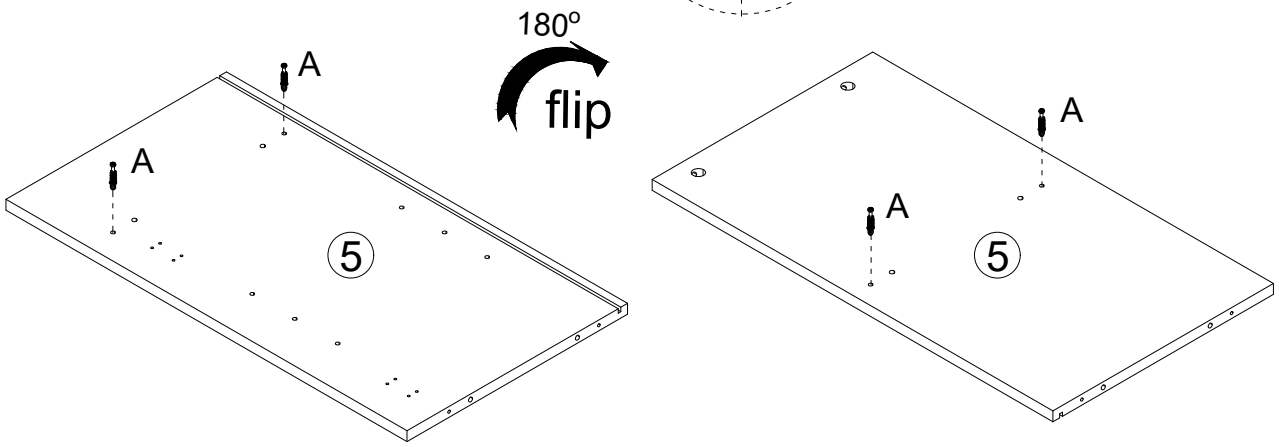


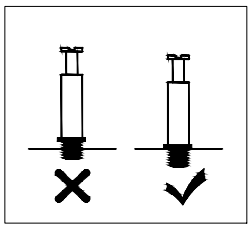


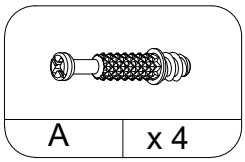


STEP 8

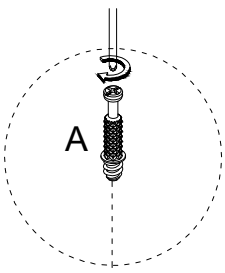


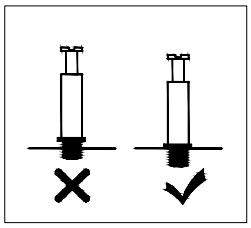


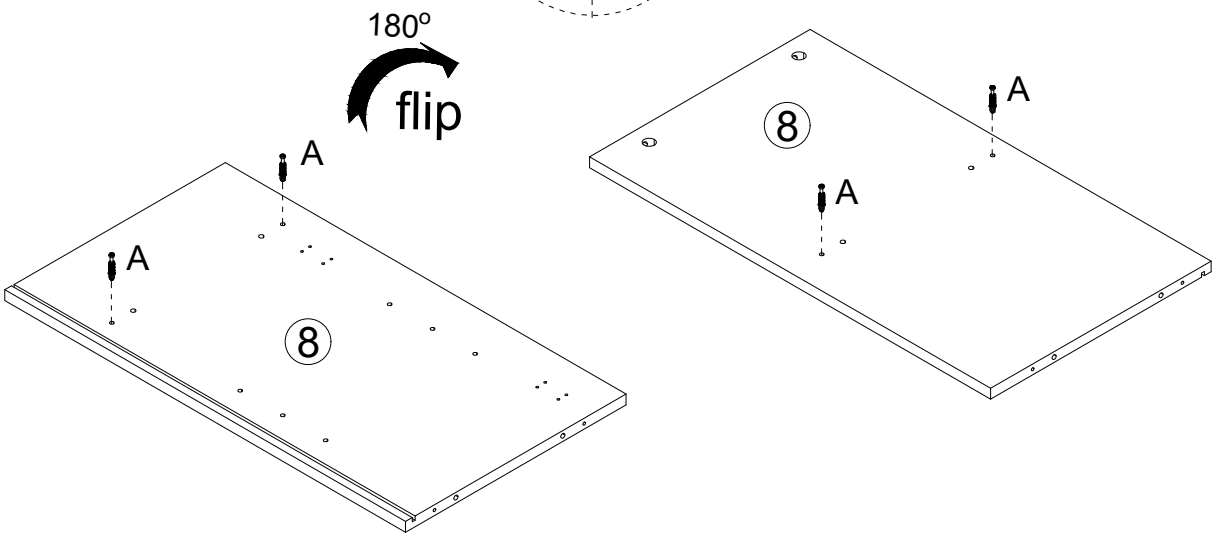

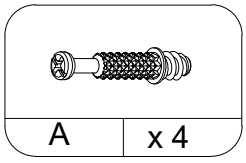



STEP 9

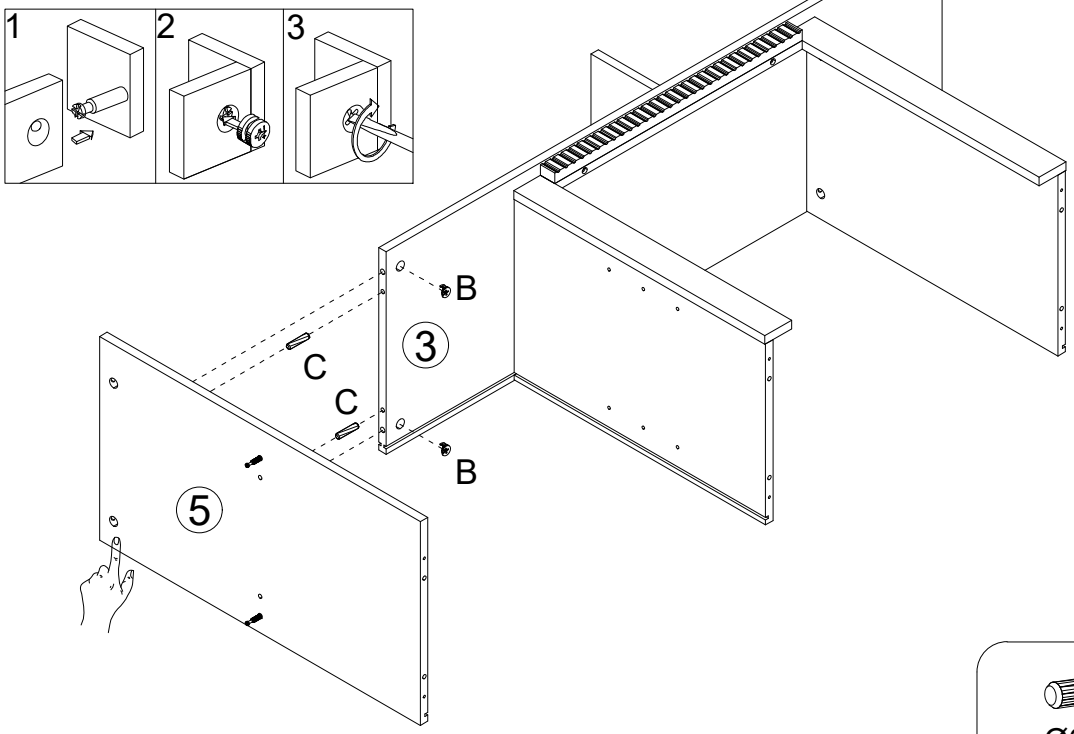


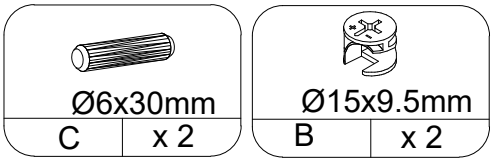


STEP 10

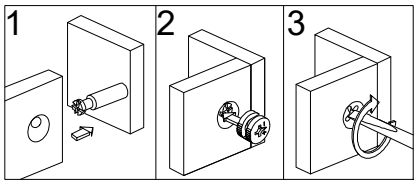


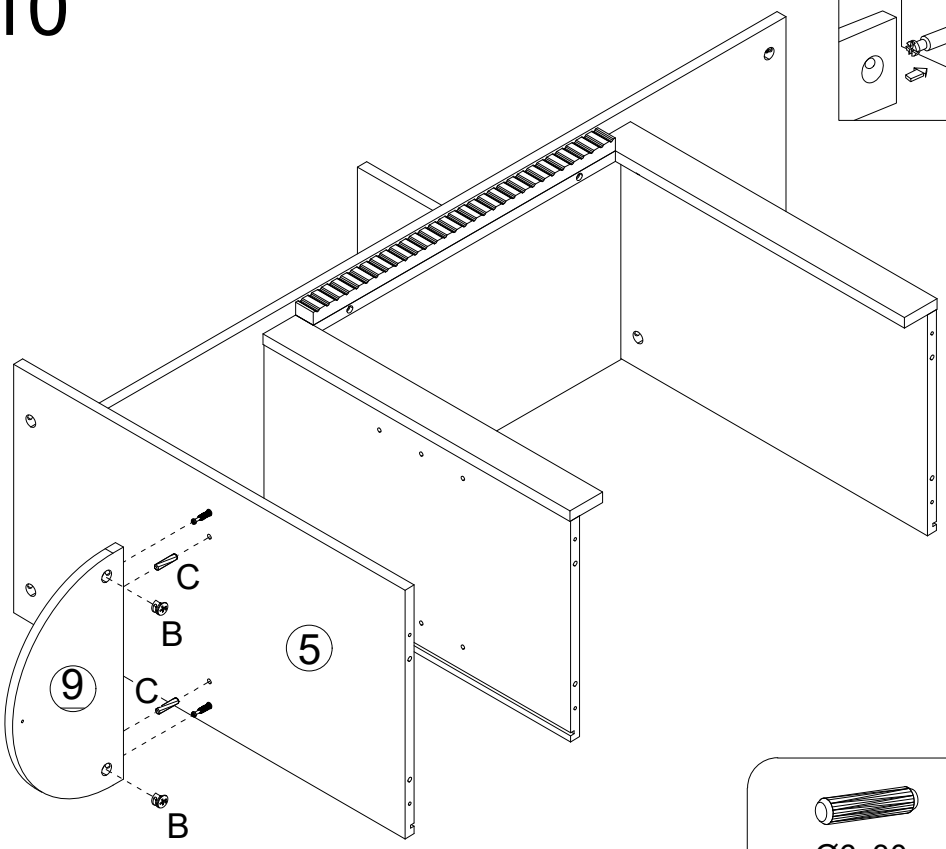

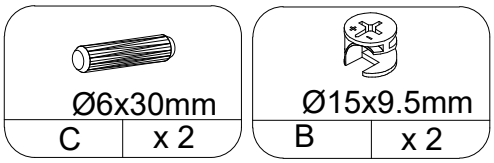

STEP 11

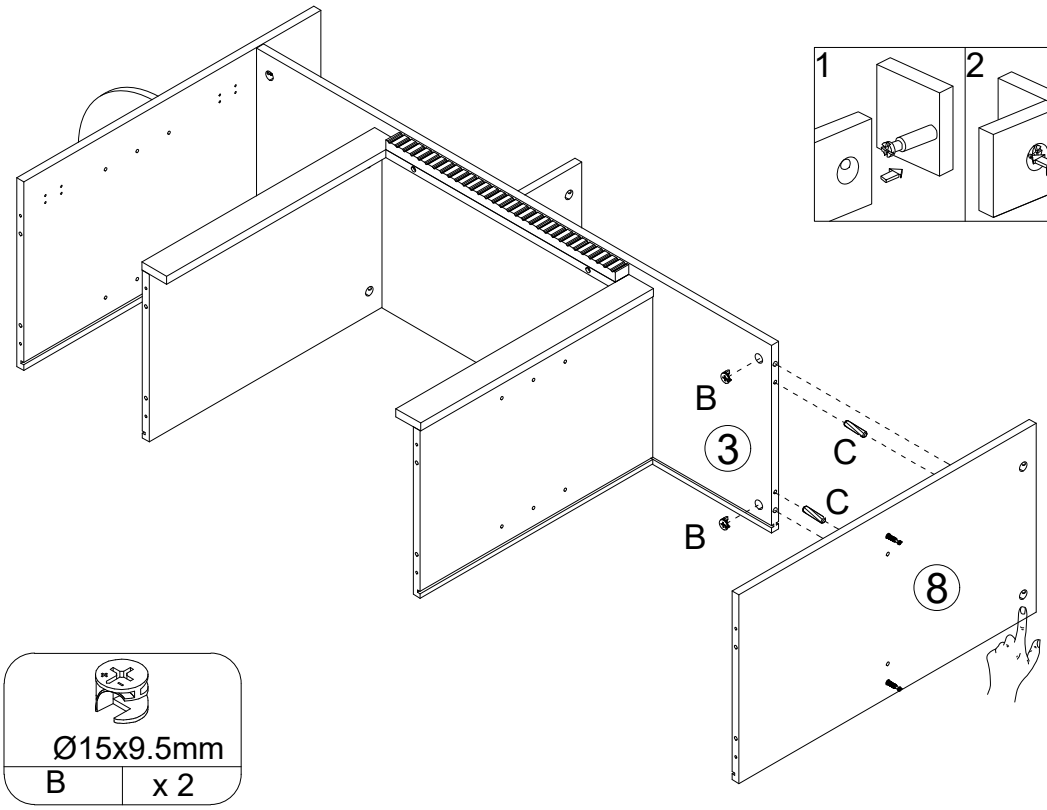




Ø6x30mm


C x 2

Ø15x9.5mm


B x 2

STEP 12

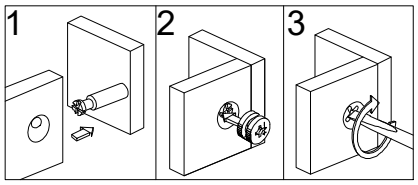

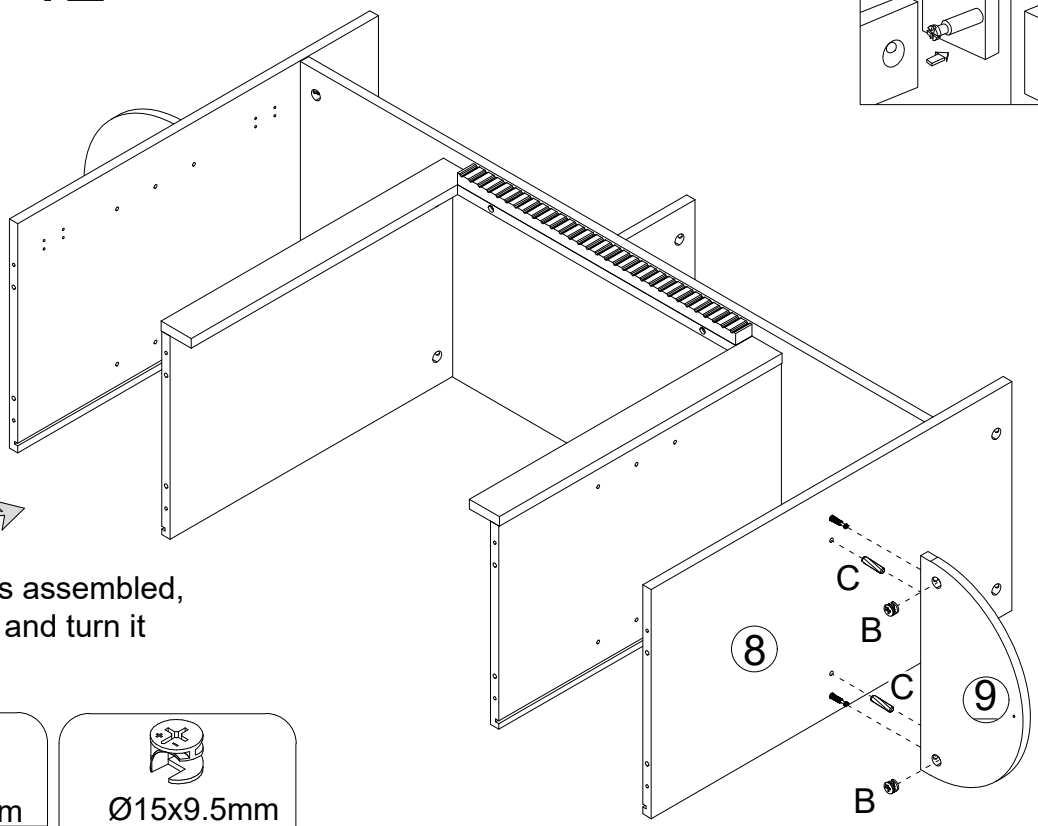

After this step is assembled, flip 90 degrees and turn it (to next step)




Ø6x30mm

C x 2


Ø15x9.5mm

B x 2


STEP 13

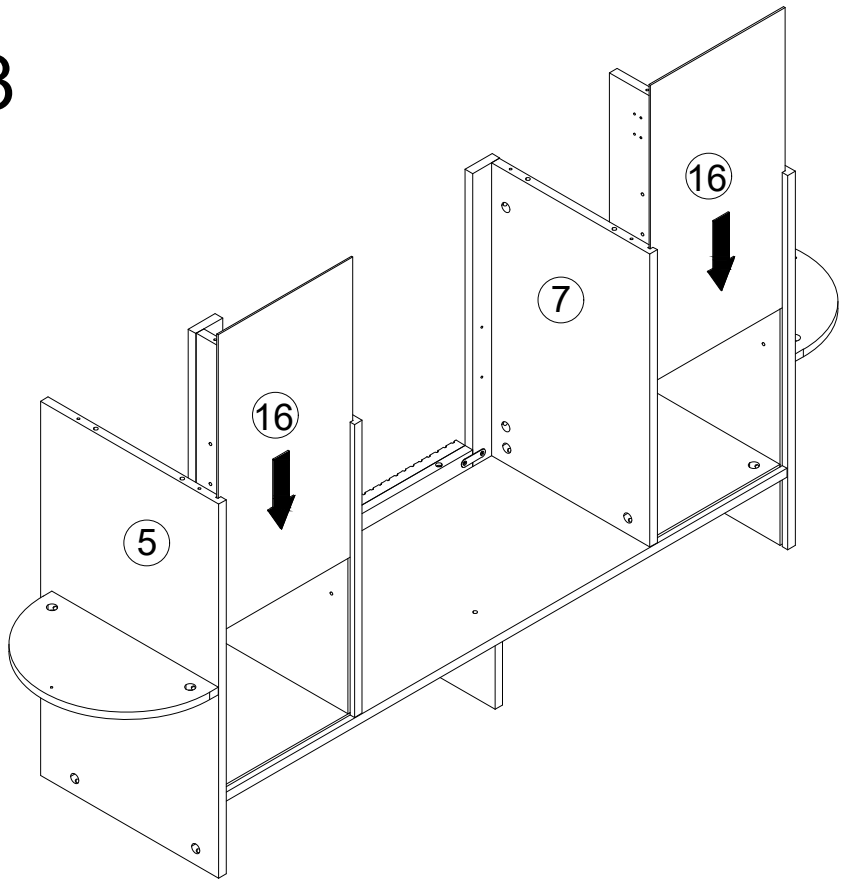



STEP 14

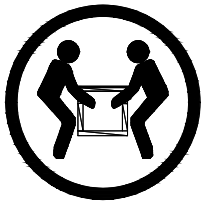


CAUTION: Heavy! You may need assistance with this step

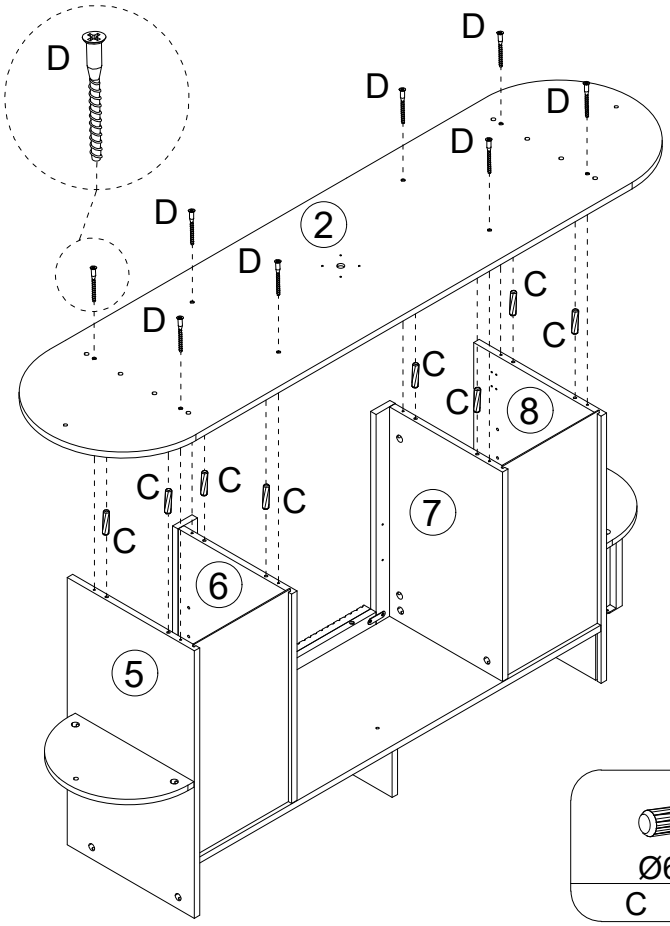

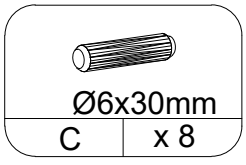

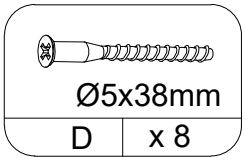


STEP 15

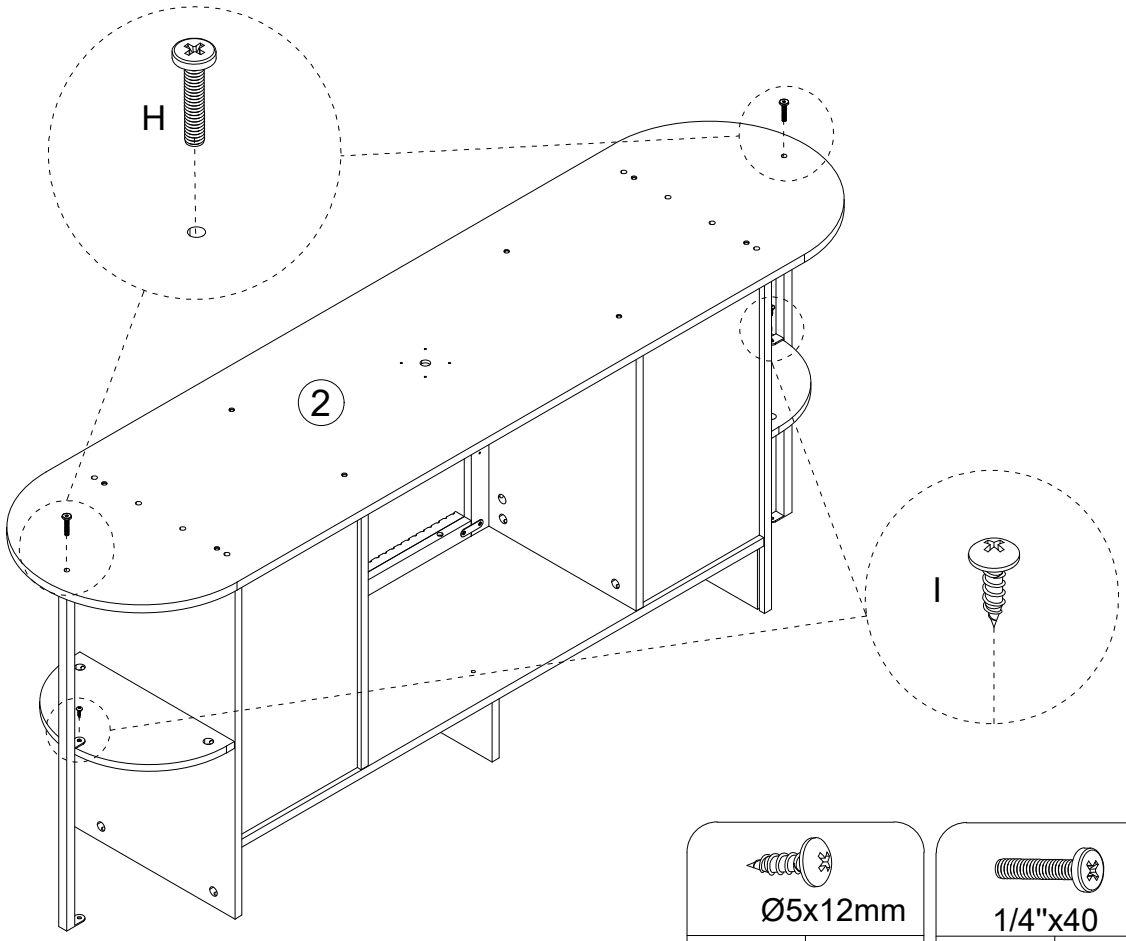

Ø5x12mm	
I	x 2

1/4"x40	
H	x2

STEP 16

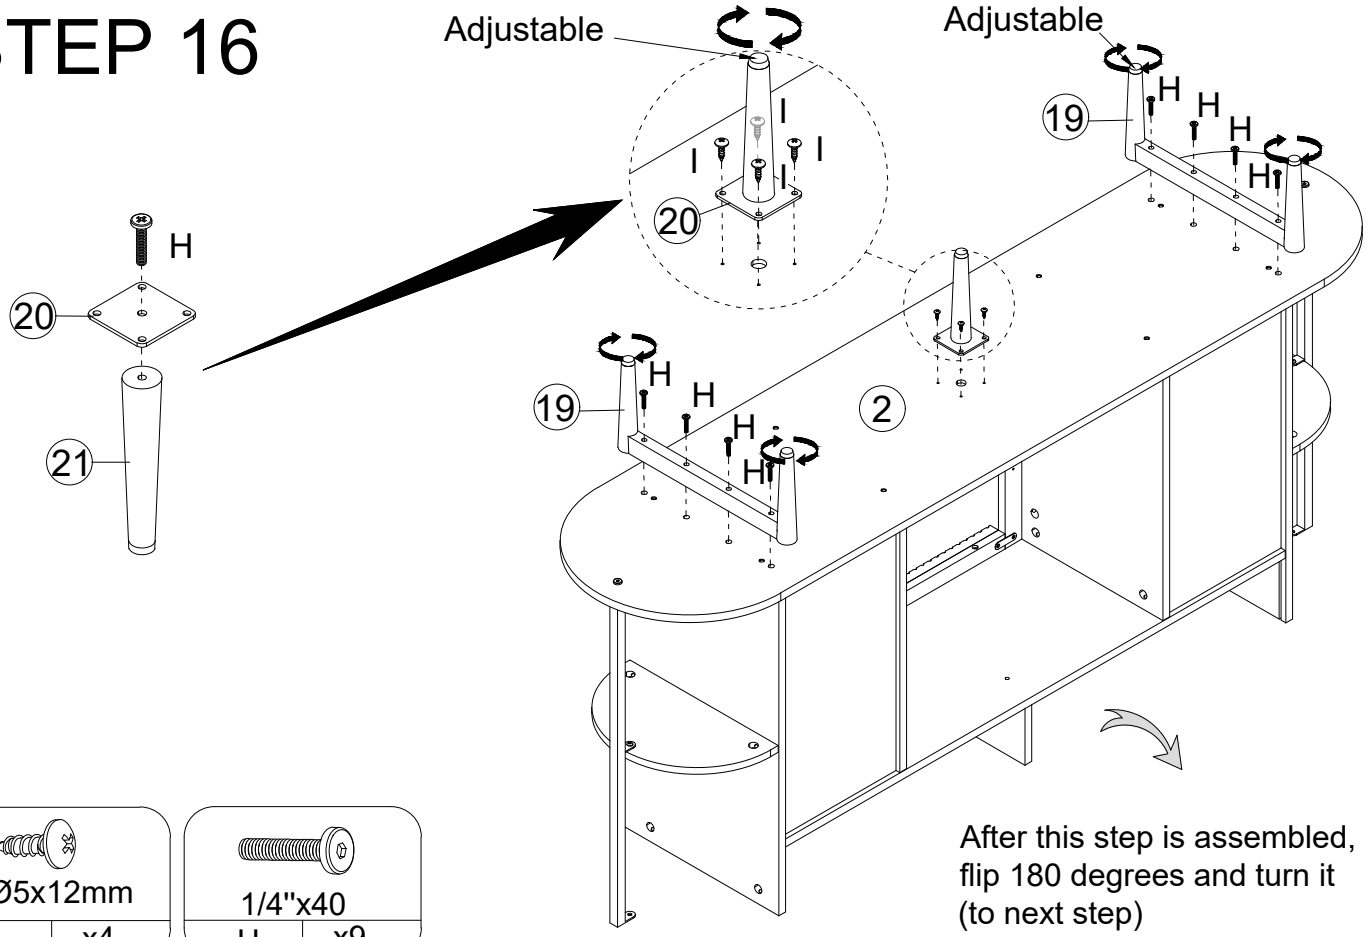


Ø5x12mm	
I	x4


1/4"x40	
H	x9

After this step is assembled, flip 180 degrees and turn it (to next step)

STEP 17

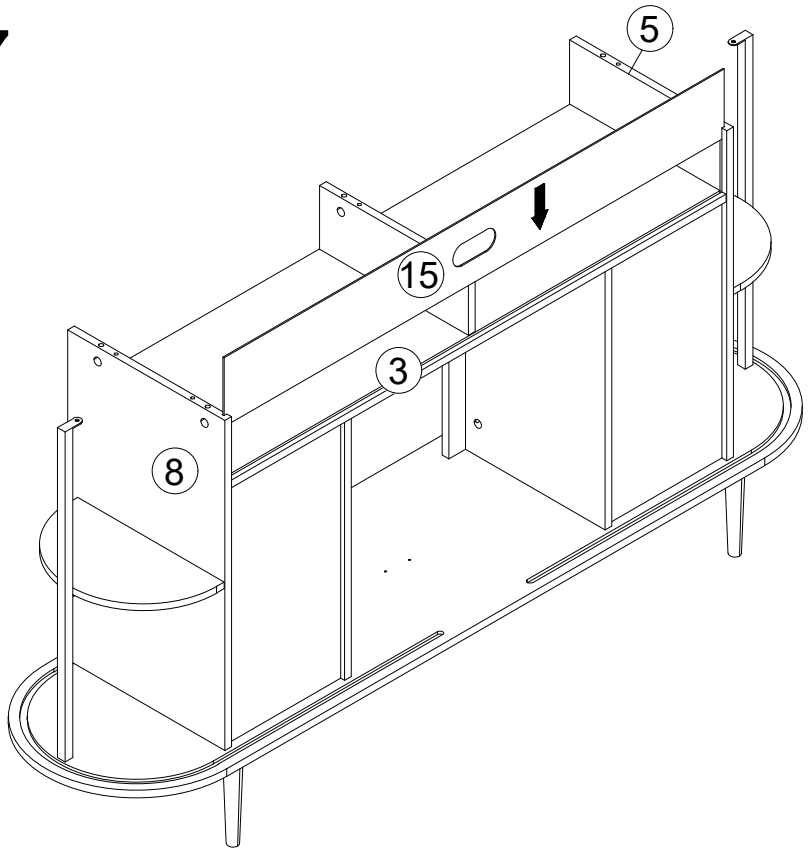

STEP 18

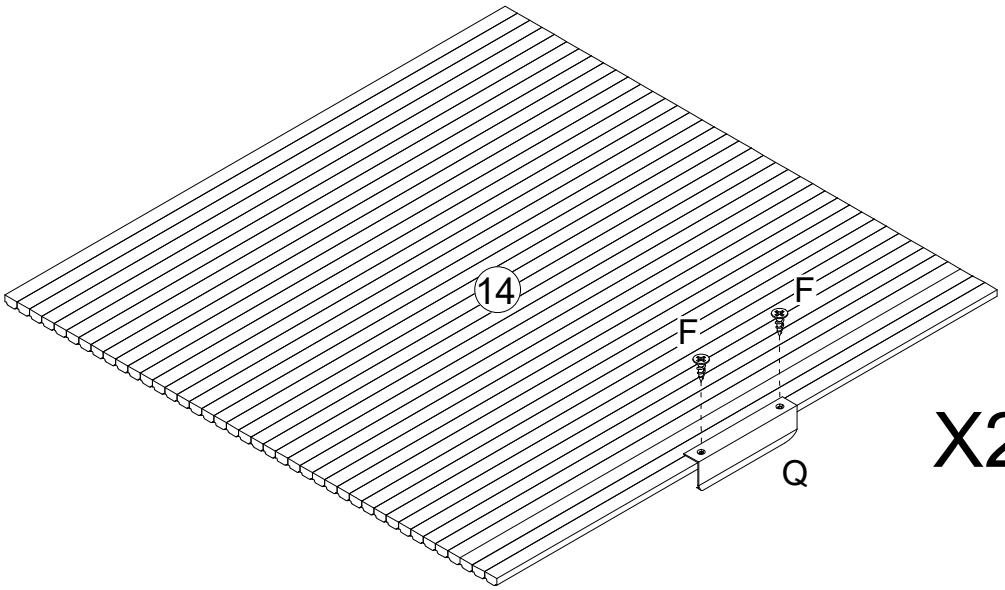


X2




Ø3.5*10mm

F	x 4




Q	x 2


STEP 19

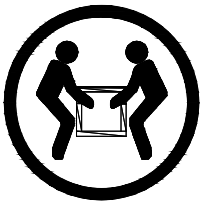



CAUTION: Heavy! You may need assistance with this step

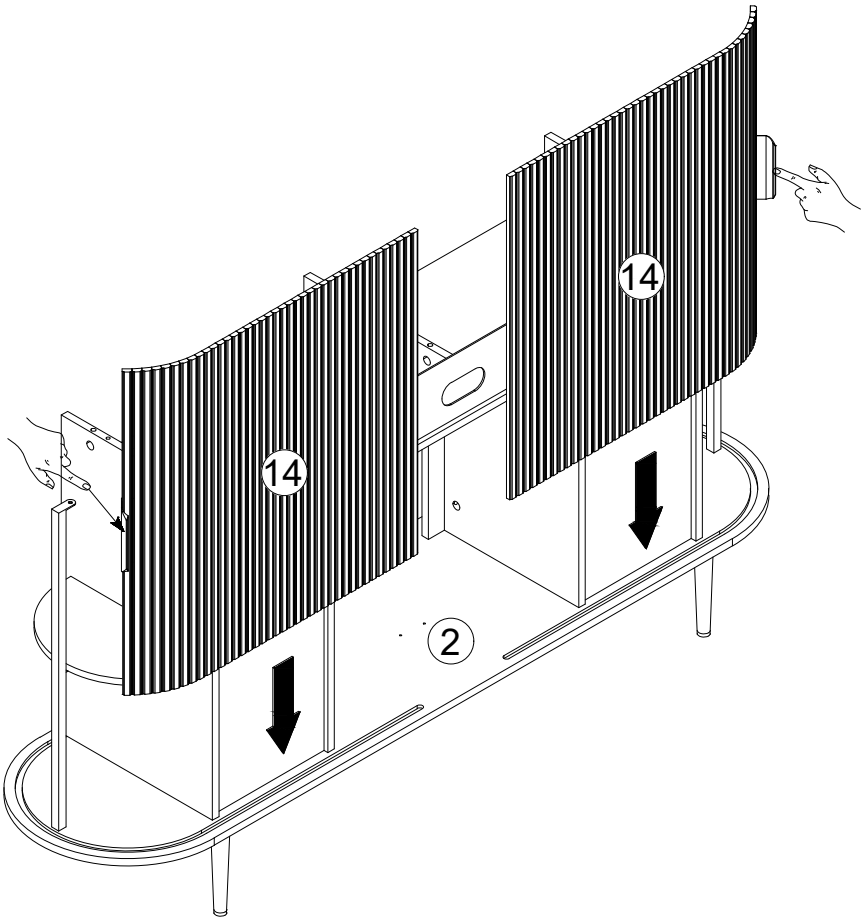


STEP 20

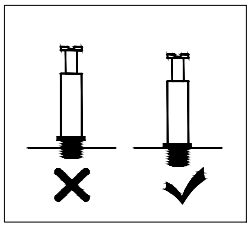


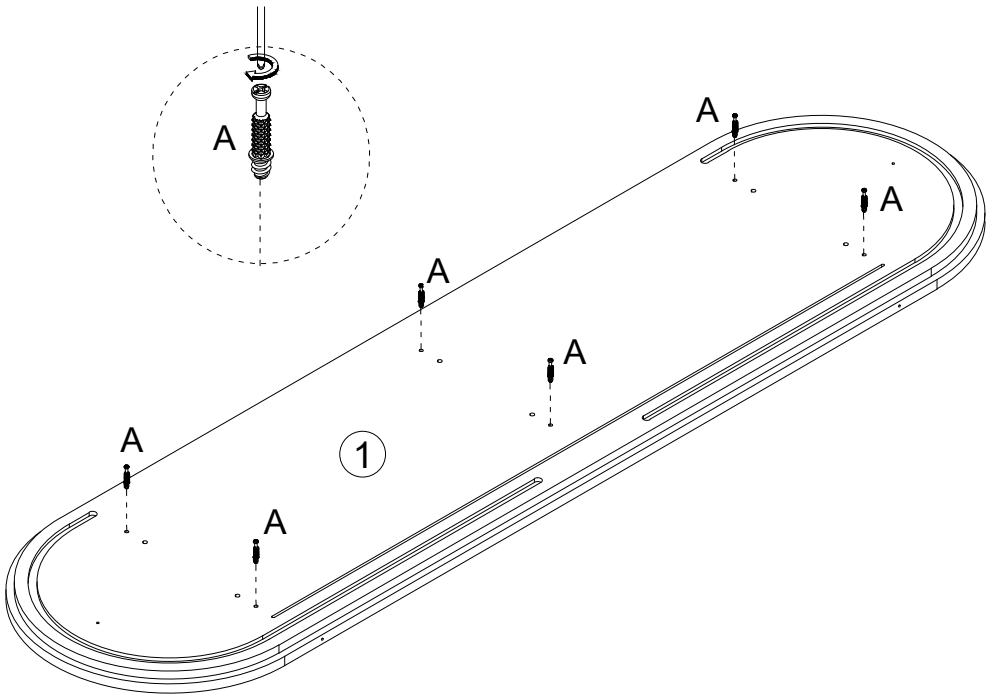


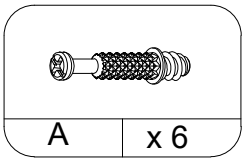


STEP 21

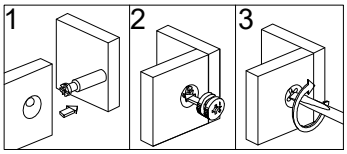

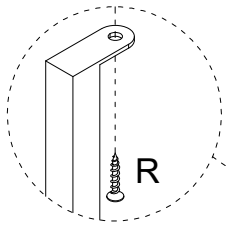

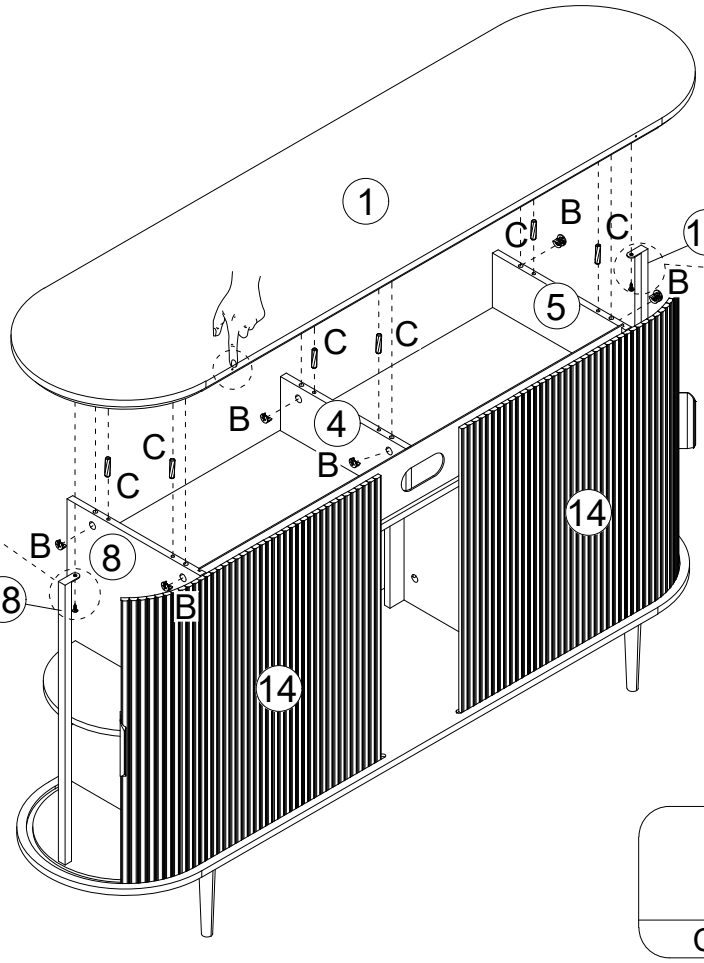

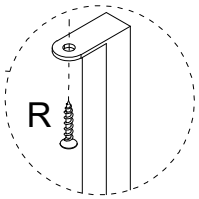


CAUTION: Heavy! You may need assistance with this step


Ø4x25mm	
R	x 2

Ø6x30mm	
C	x 6

Ø15x9.5mm	
B	x 6


STEP 22

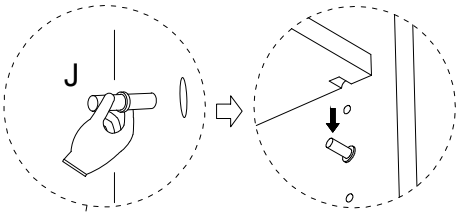

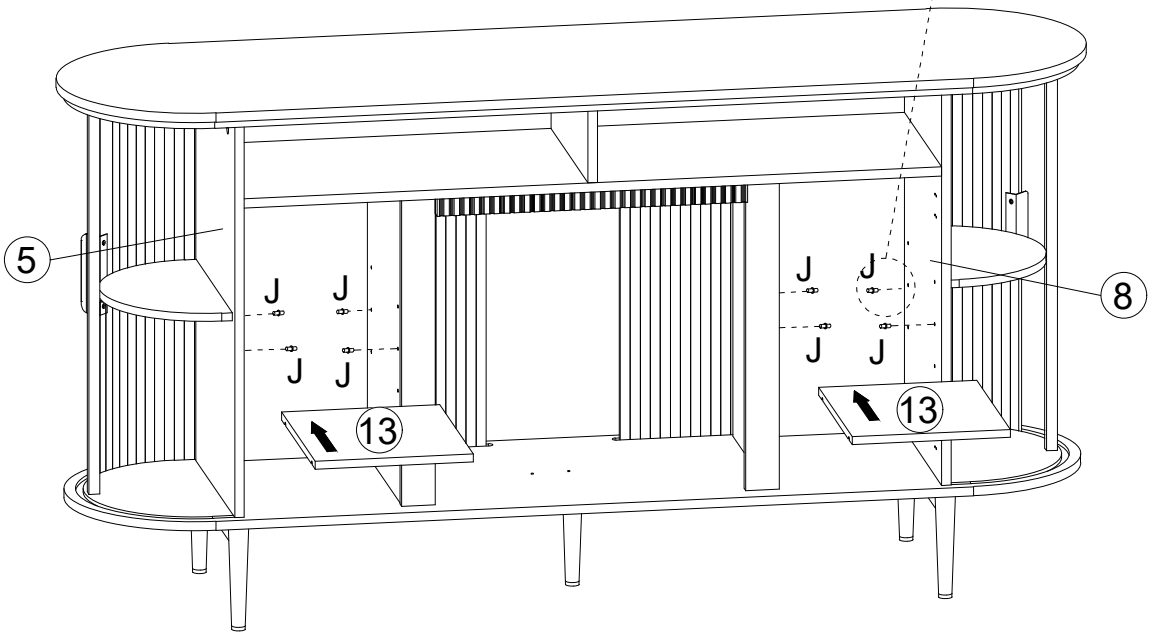

J	x 8


STEP 23

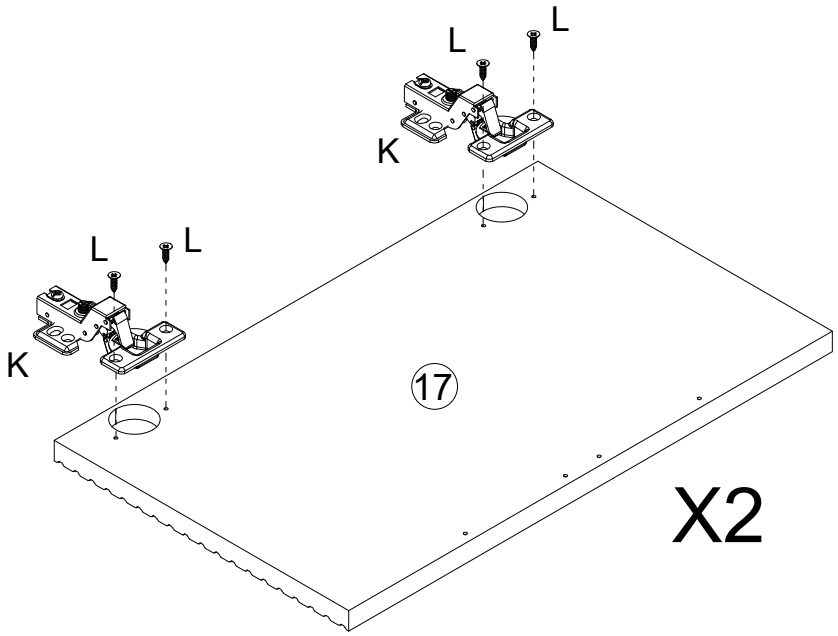

Ø4*14mm	
L	x 8

K	x 4

STEP 24

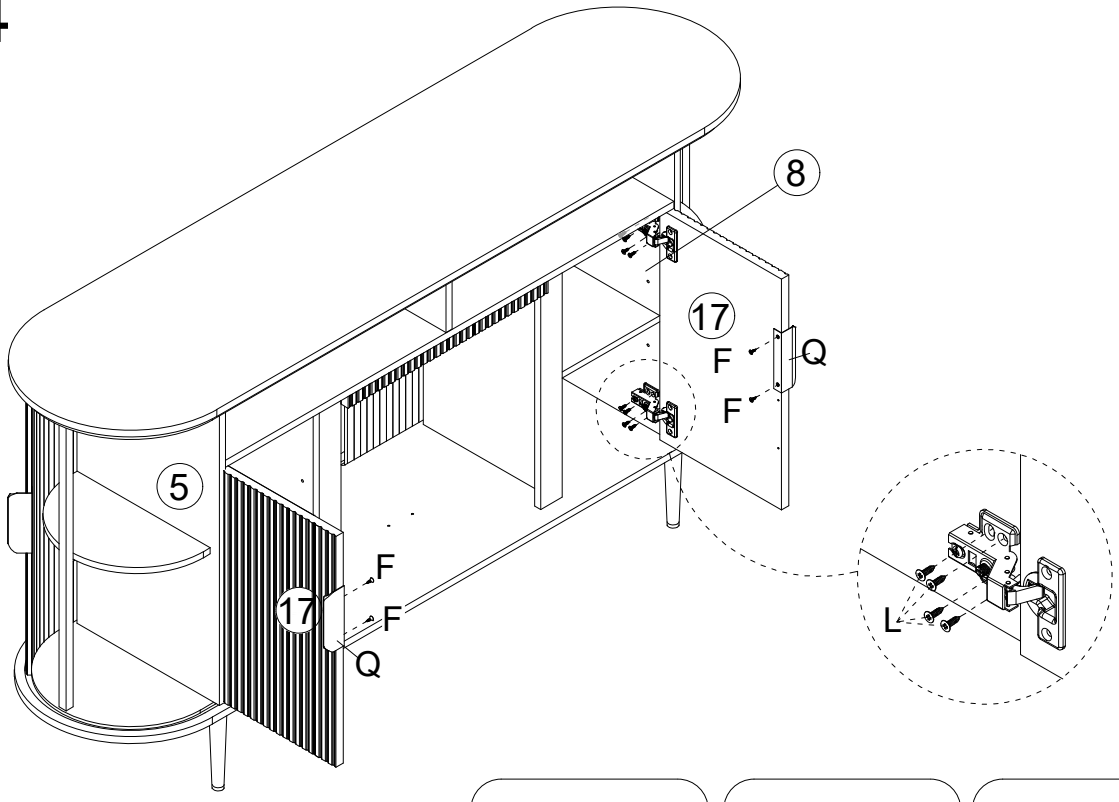



Ø3.5*10mm	
F	x 4

Q	x 2

Ø4*14mm	
L	x 16


STEP 25

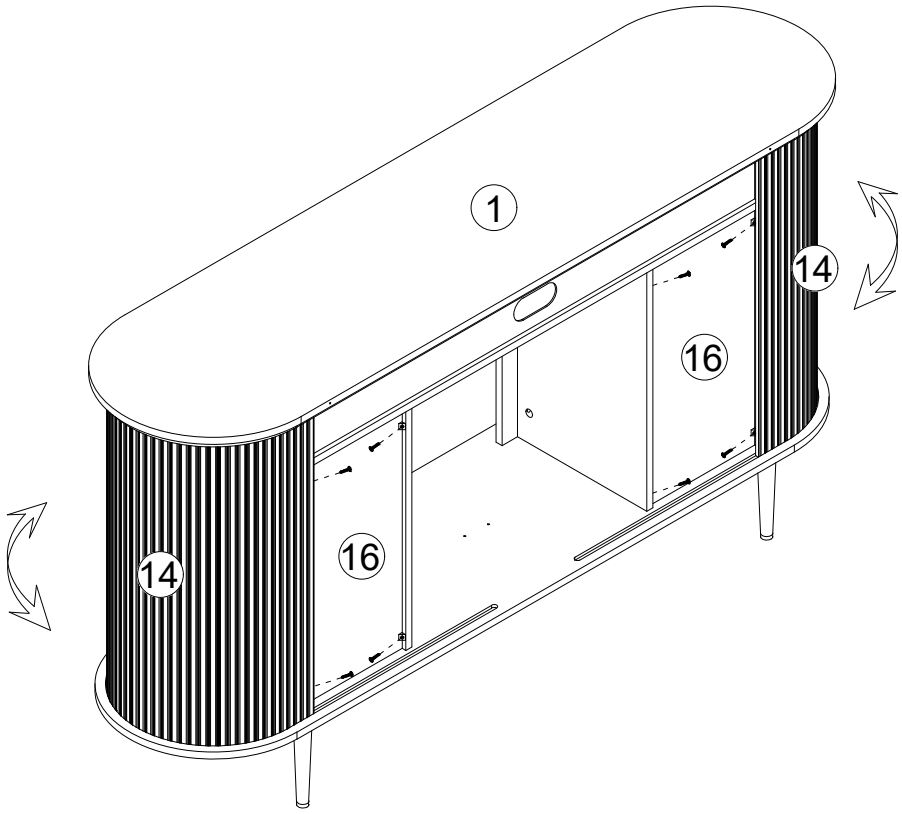


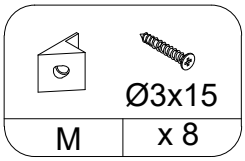



STEP 26


This step install according to the instruction manual

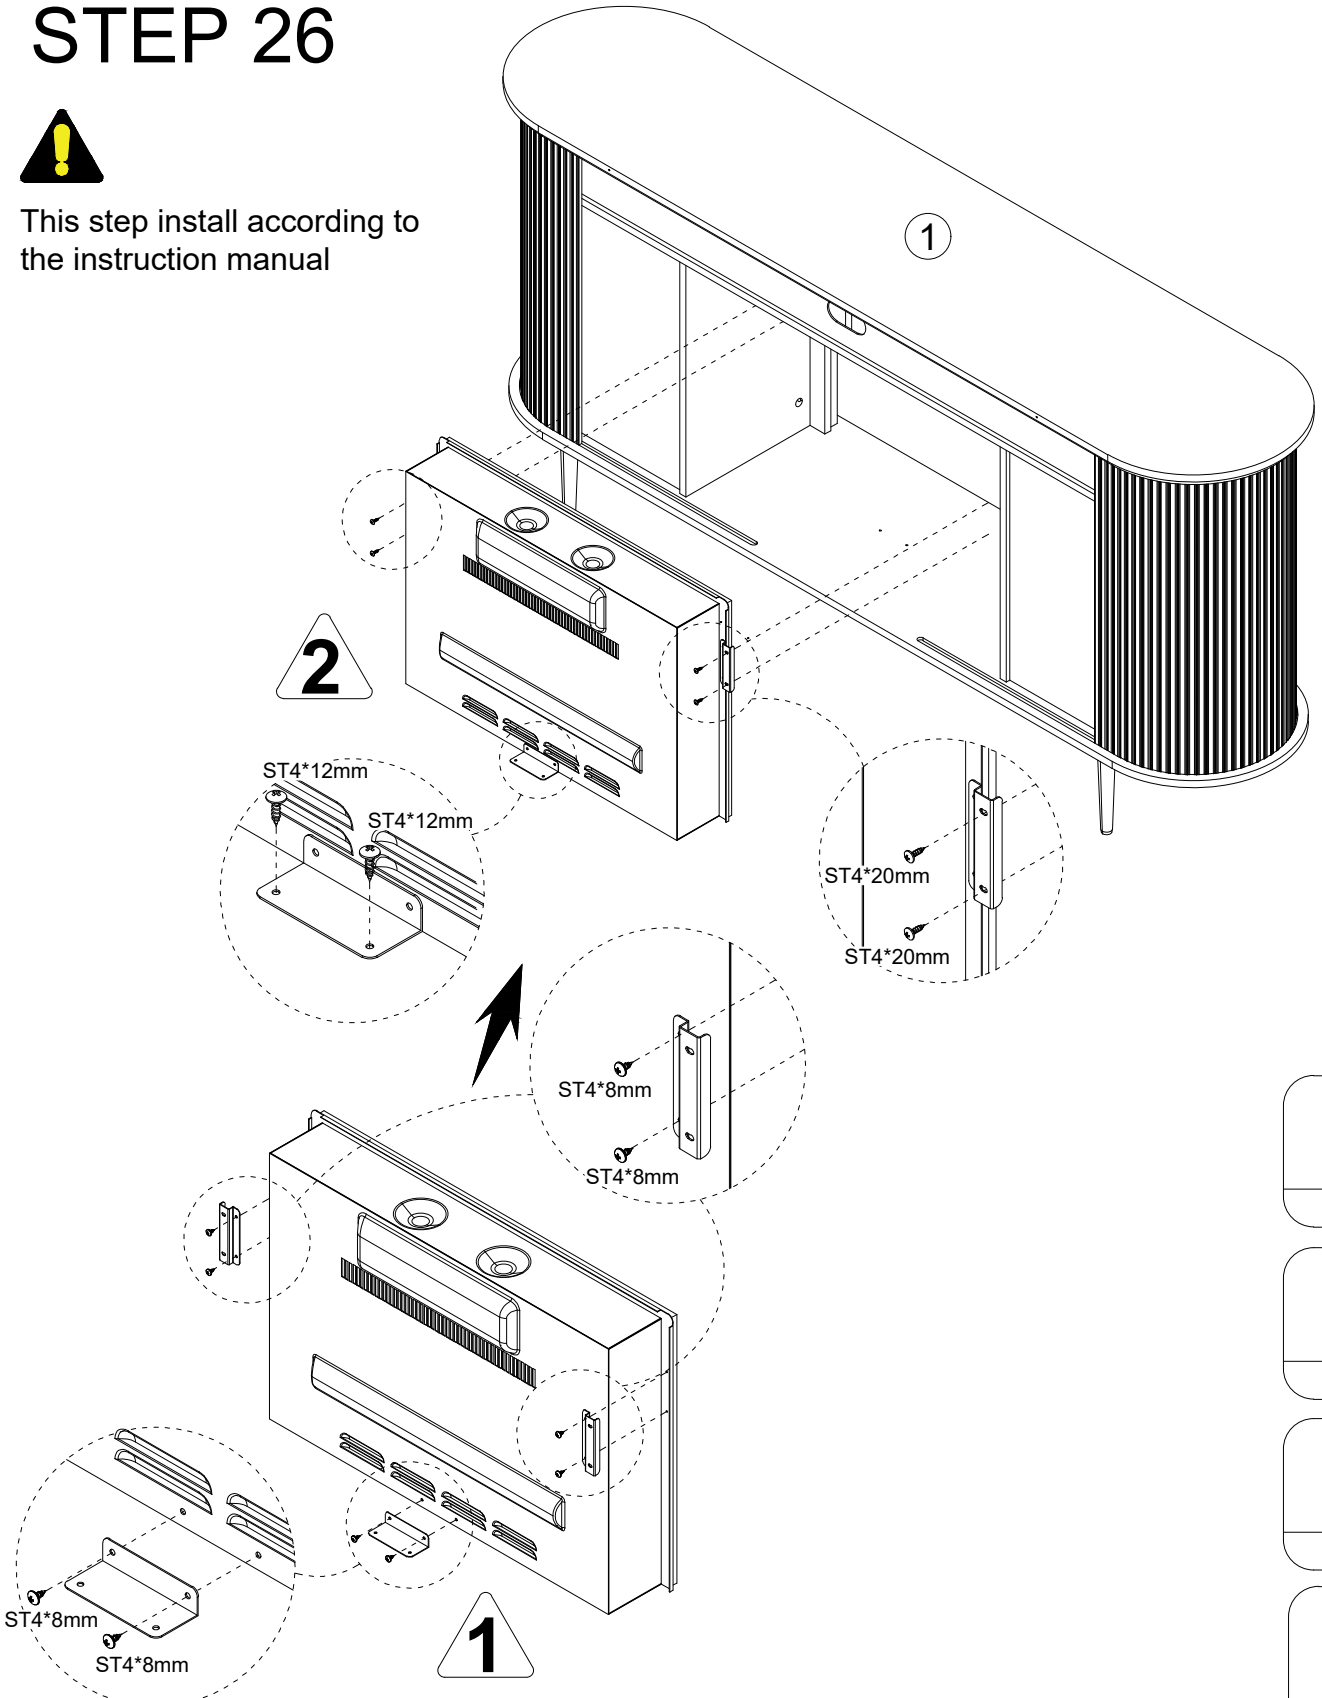

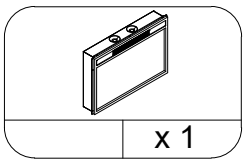

x 1

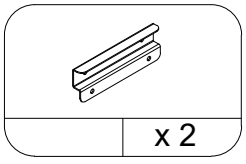

x 2

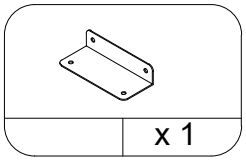
x 1

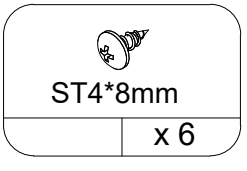

ST4*8mm
x 6

The fireplace is connected to the ion sheet using screws provided with the fireplace case.

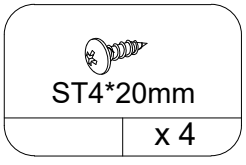
ST4*20mm
x 4

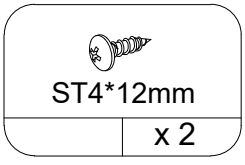
ST4*12mm
x 2


STEP 27

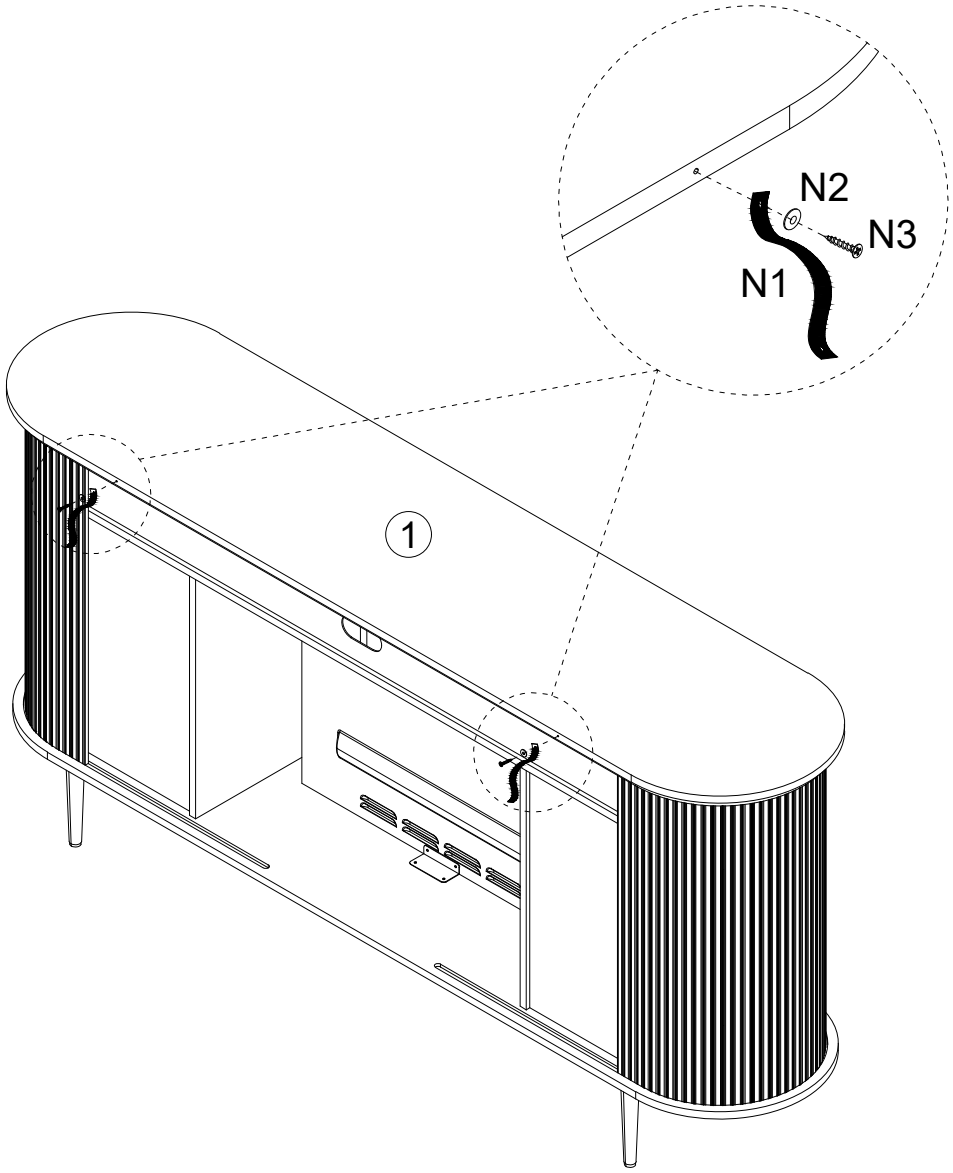

Use screw (N3) and washer (N2) to fix the strap (N1) follow position of holes on the peice 1.

N1. x2PCS
N2. x2PCS
N3. x2PCS

STEP 28

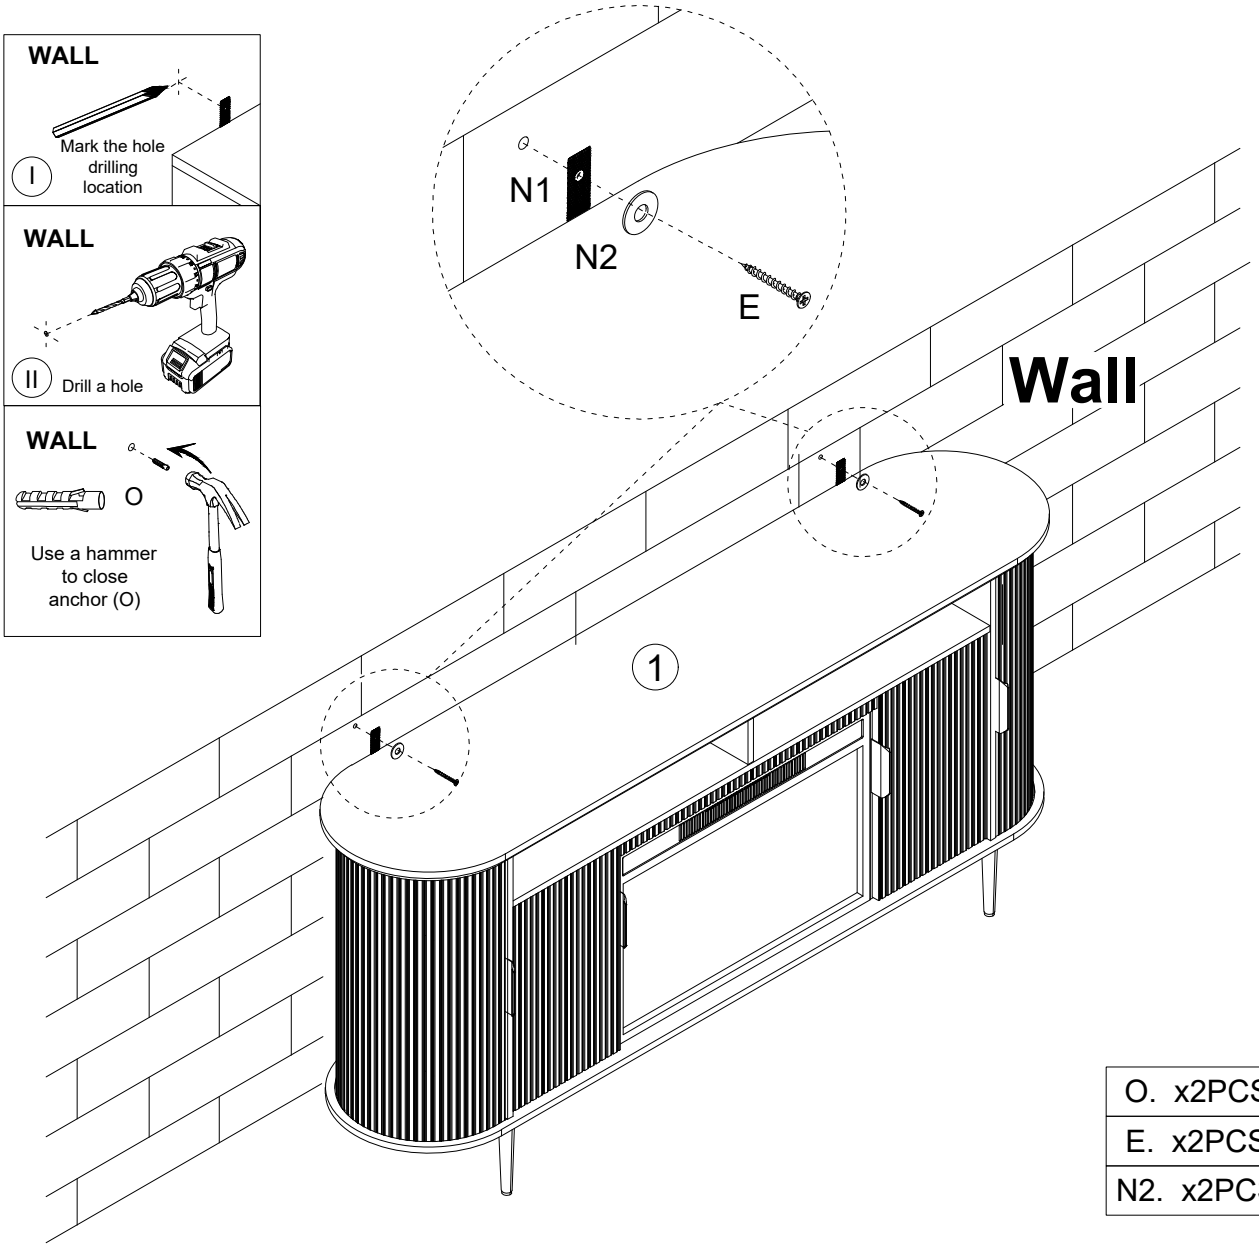

O. x2PCS
E. x2PCS
N2. x2PCS

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: drill the hole and then fixed the anchor (O) on the wall.
Step 3: use screw (E) to fix the strap (N1), (N2) on the wall .

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

· Tighten all bolts and screws again within the first 2 weeks of assembly
· Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

· Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
· Small amount of mild soap can be used if necessary
- **Dry the surface immediately after cleaning.**

⚠ DO NOT use bleach or alcohol detergent to clean the surface.
⚠ DO NOT apply wood treatment on parts made with MDF and PB.
Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.
Make sure to dry the furniture immediately after cleaning