


ASSEMBLY INSTRUCTIONS FOR ISTANBUL PENDANT

CAUTION: RISK OF FIRE OR SHOCK. DISCONNECT ALL POWER FROM OUTLET BOX BEFORE INSTALLATION

ELECTRICAL INSTALLATION:

- 1) This fixture is factory supplied with the canopy and crossbar assembly already installed on the decorative electrical wire. We recommend that you do not remove the crossbar/tube assembly, because you will find it difficult to reinstall later. Instead, carefully pull the electrical wire up through the metal tube until the desired height is achieved. (Take care not to stretch or damage the decorative rayon outer cover of the electrical wire.)
- 2) Once the height is set, tighten the plastic setscrew located on the crossbar. Note that the actual shade itself will hang another 8" or more below the socket.
- 3) Attach crossbar to ceiling. Make the electrical connections within the outlet box. Attach ground wire to supply ground connection. Secure all electrical connections with wire nuts.
- 4) Slide the canopy up the wire and tighten the lateral setscrew to the metal tube. (Do not tighten the metal screw onto the electrical wire)

HANGING THE GLASS LAMP SHADE:

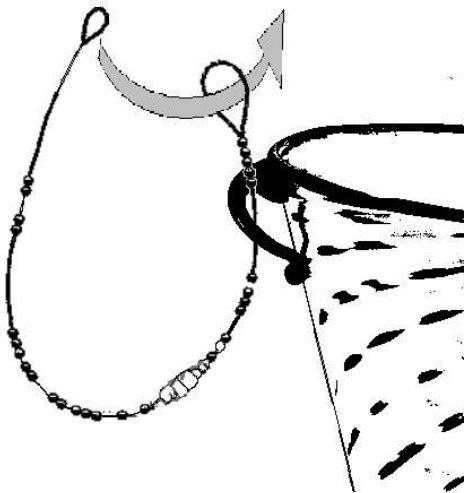

- 5) Hook the bead string to the glass shade's handles. The bead strings have a loop at each end. The larger loop is passed through the arm handle. Then the other end through that same loop. Repeat this procedure for all three bead strings.
- 6) Hook the open end of the three bead strings onto the open chain link. Be careful not to overlap or create twists or knots.
- 7) Carefully, hook the open chain link to the ring attached to the wire. Be sure you are holding the glass shade securely and do not allow the lamp socket assembly to hit the sides of the glass shade.

- 8) Close the link. Recommended tool "chain opening pliers".

Exercise care when using pliers to ensure that the beads will not be broken. [Alternatively you can use three chain links, each attached to a bead string and all connected to the ring.]

- 9) **Warning.** The ring on the electrical wire has been factory set to position the bulb at the correct height inside the shade. It is strongly recommended **not** to unscrew the set screw to reposition the bulb at a different height inside the shade. If you do this, make sure that the set screw is tightened firmly and that the rayon cover is not stretched or damaged.

- 10) Verify the lamp shade is level. First, check the bead strings on each arm handle to make sure they are straight. If necessary, raise the height at the arm handle by moving the loop up the bead string. Position the loop in between (not on top of) any two of the 5 to 7 larger beads near the end of the bead string. Repeat this procedure with the next bead string until the glass lamp shade is level.

- 11) Attach the decorative beaded lower finial.

- 12) Carefully lift the lamp socket up from the center of the glass

