


INSTALLATION MANUAL

CHANDELIER

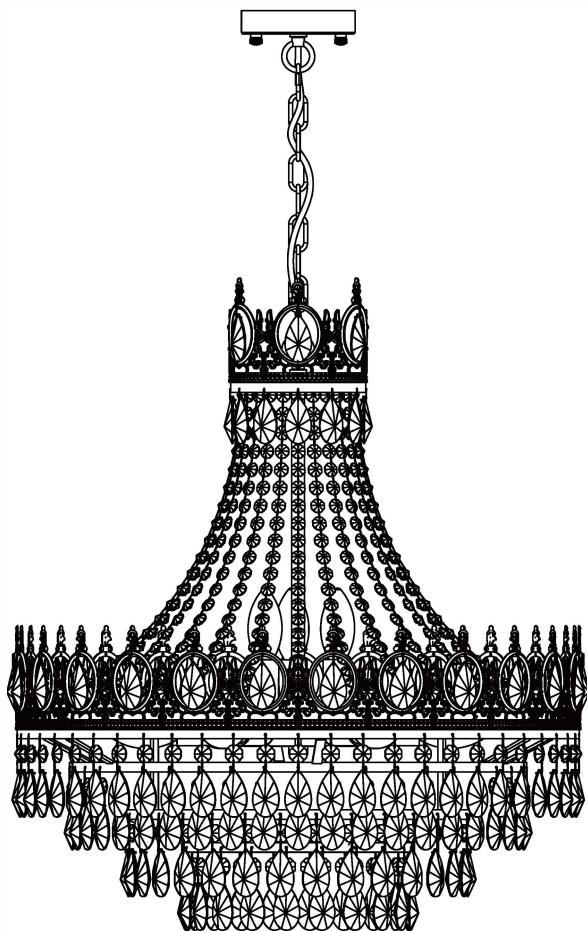

TOOLS REQUIRED



Ladder



Pliers




Wire
Strippers



Screwdrivers

PACKING LIST

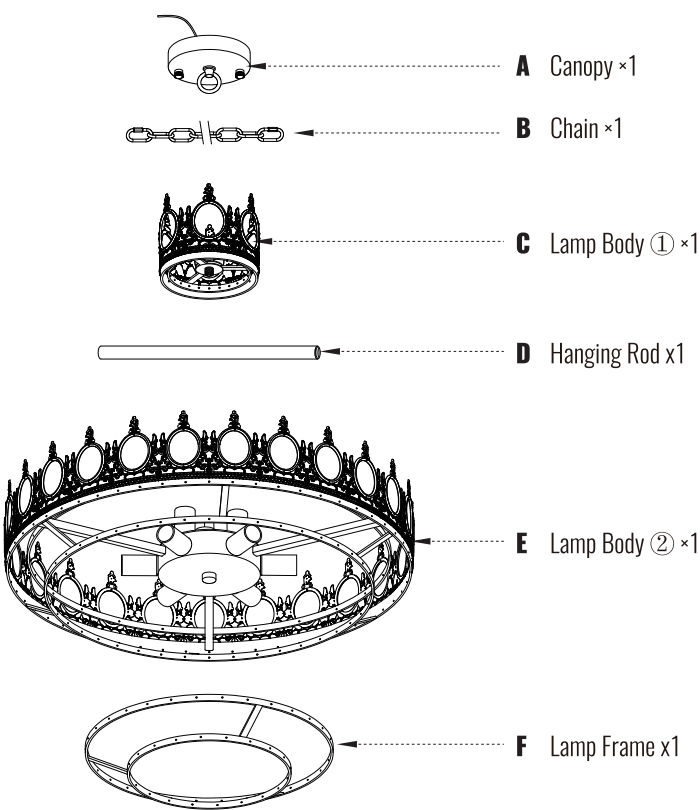



INSTALLATION KIT

AA  Mounting Bracket 1×	BB  Outlet Box Screw 2×	CC  Cap Nut 2×
DD  Ground Screw 1×	EE  Wire Nut 3×	FF  M5 Screw 3×
GG  M3 Screw 3×	HH  Rod 3×	II  Octagon Crystal Strand 25×
JJ  Pear Shaped Crystal 44×	KK  Pear Shaped Crystal Strand 148×	LL  Gloves 1×

- NOTE:**
- 1. AA/CC/DD has already been pre-installed with Canopy (A).
 - 2. FF/GG has already been pre-installed together with HH.
 - 3. II/JJ has one spare part, and KK has two spare parts.

MOUNTING AND WIRE

1. Install the Mounting Bracket

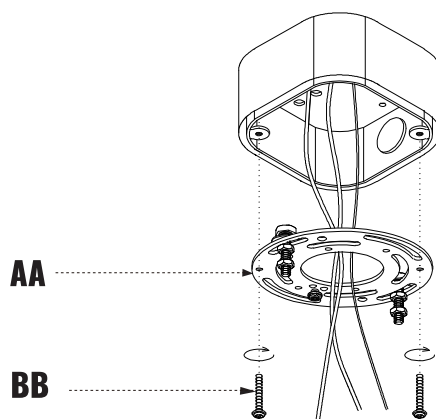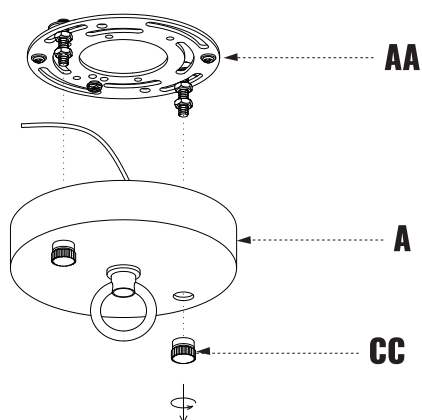


STEP 1: Loosen the Cap Nut (CC) from Canopy (A), and take out the Mounting Bracket (AA).

STEP 2: Take off the screws from the outlet box, and secure the Mounting Bracket (AA) onto the box with the screws taken off or Outlet Box Screw (BB).


FIXTURE ASSEMBLY

1. Install the Lamp body


(1)

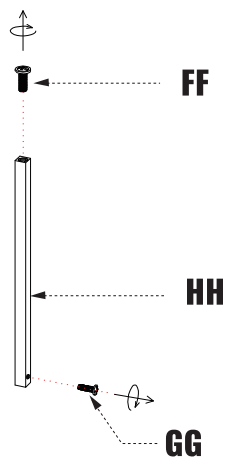

(2)

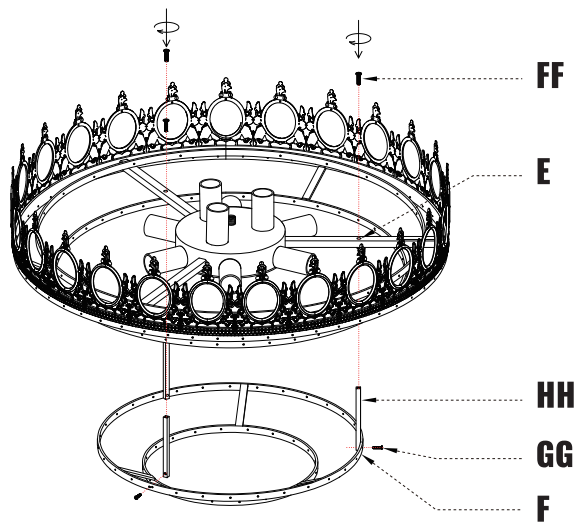

(3)

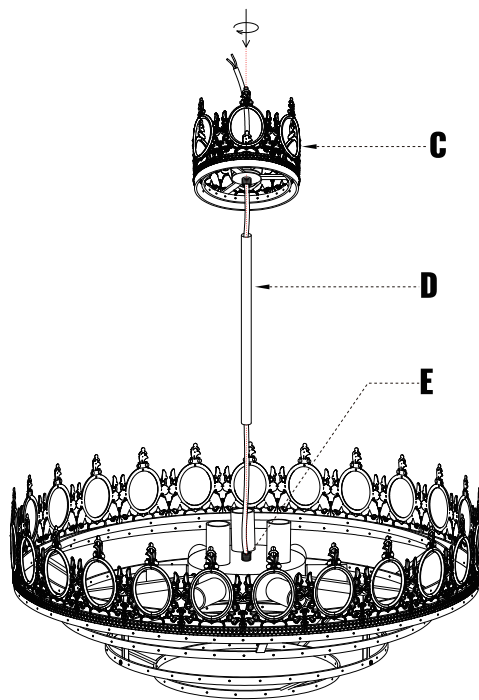


STEP 1: Loosen the FF/GG from HH, use the Rod (HH) to install the Lamp Frame (F) on Lamp Body (E), and fix it with M5 Screw (FF) and M3 Screw (GG).

STEP 2: Pass the power cord of the Lamp Body ② (E) through the Hanging Rod (D), Lamp Body ① (C) as shown.

STEP 3: Tighten Lamp Body ① (C) and Lamp Body ② (E) to Hanging Rod (D).


2. Pass the Wire

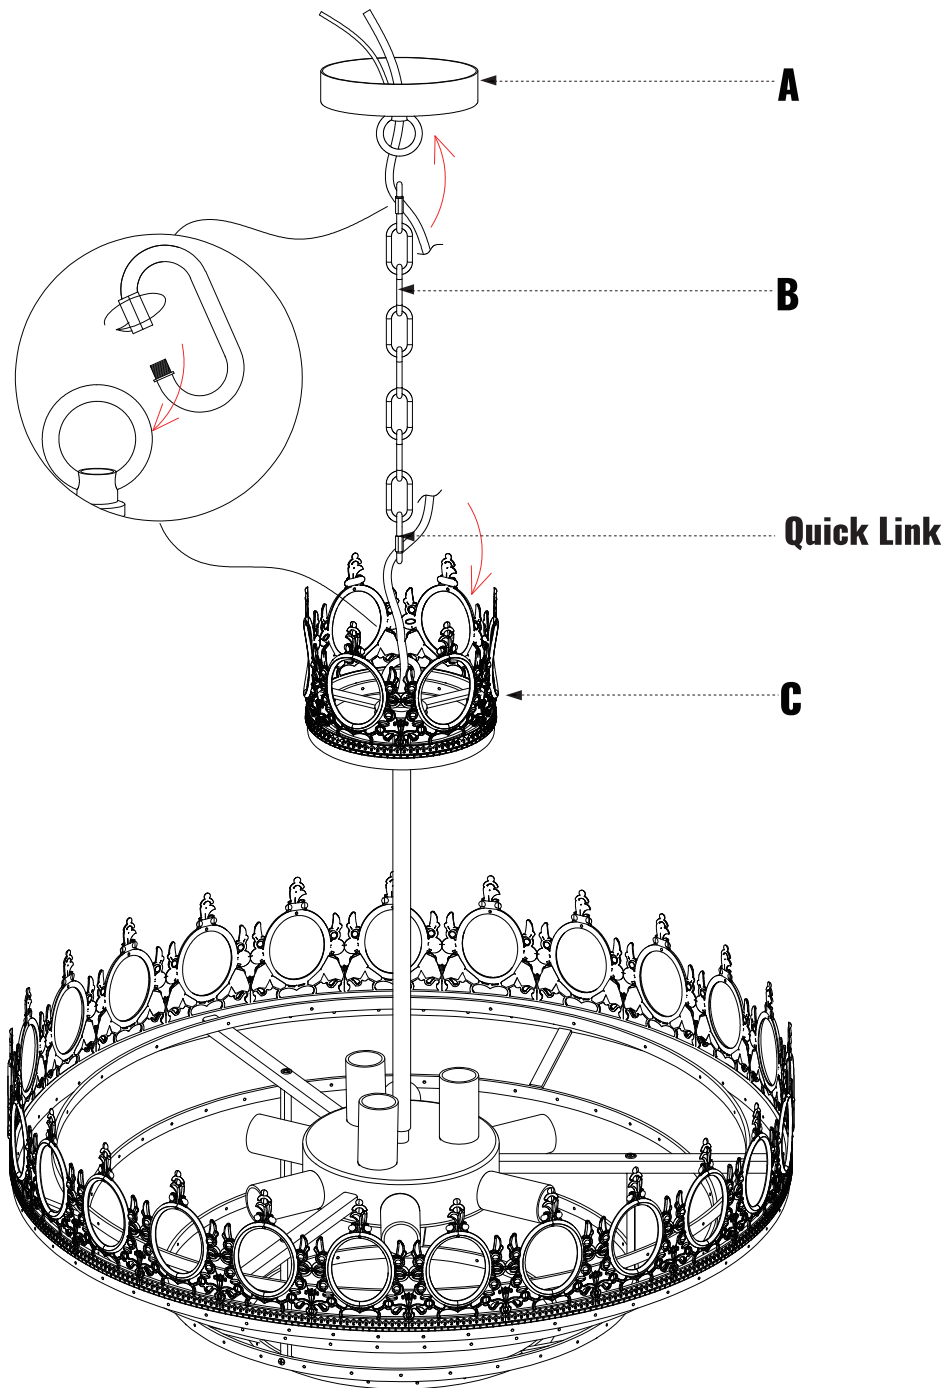

STEP 1: Pass the power cord through the Chain (B) and Canopy (A).

STEP 2: Open the Quick Link on Chain (B), then connect the Quick Link on both ends of Chain (B) to the Canopy (A) and Lamp Body ① (C), and finally lock the Quick Link tightly.

3. Connect the Wires

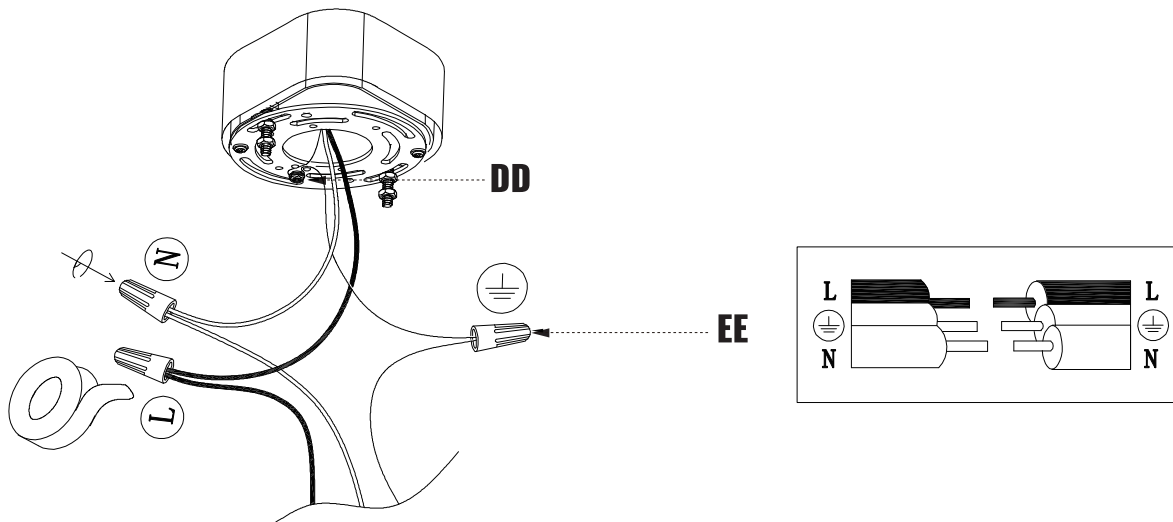


STEP 1: Wrap the ground wire from the outlet box around the Ground Screw (DD) on the Mounting Bracket (AA), and then connect the ground wire from the fixture to the ground wire from the outlet box.

STEP 2: Connect the wires from the fixture to the house supply wires, neutral wire (white) to neutral wire, and hot wire (black) to hot wire.







STEP 3: Spread apart the wires so that the hot wires are on one side of the outlet box and the neutral wires are on the other side.

4. Fix the Canopy

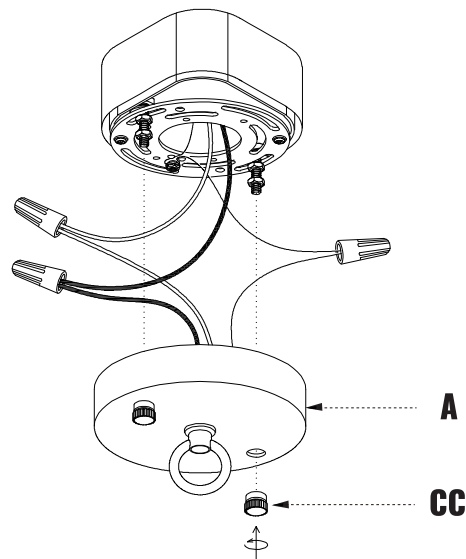

Fix the Canopy (A) onto the Mounting Bracket (AA) with Cap Nuts (CC).

INSTALL CRYSTAL AND BULBS

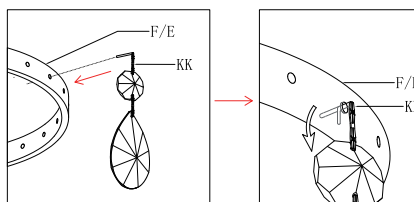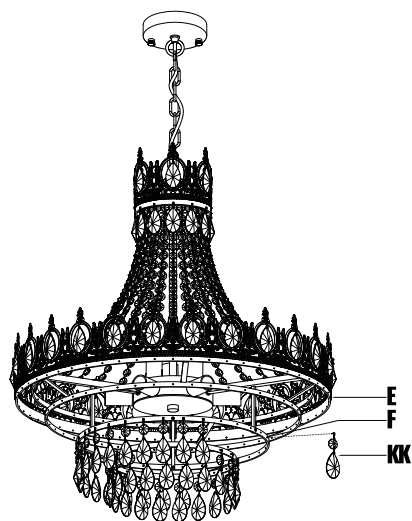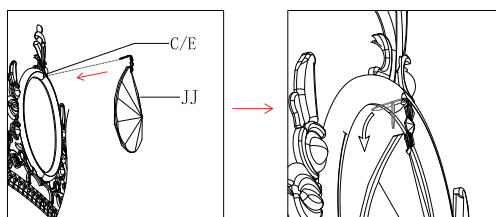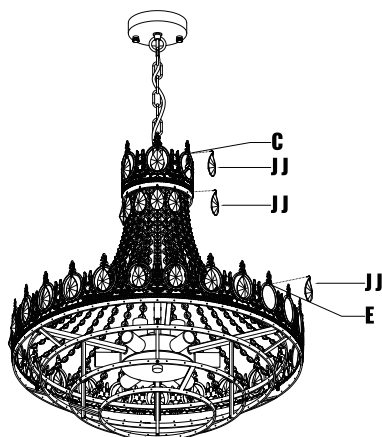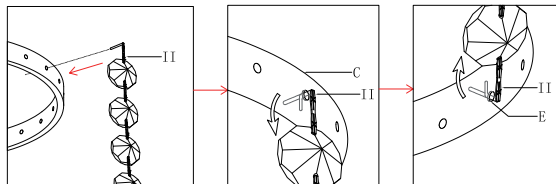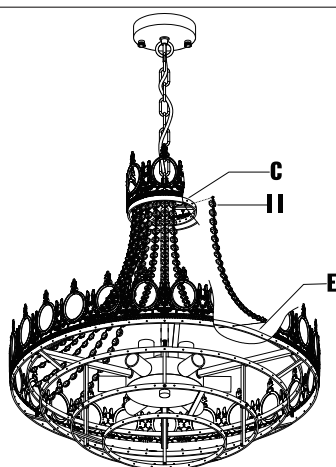

STEP 1: Insert the Butterfly Clips at both ends of the Octagon Crystal Strand (II) into the inner ring holes of Lamp Body ① (C) and Lamp Body ② (E) and secure them as shown.


STEP 2: Fix the Pear Shaped Crystal (JJ) on Lamp Body ① (C) and Lamp Body ② (E) in the same way.

STEP 3: Insert the Pear Shaped Crystal Strand (KK) into the holes of the Lamp Body ② (E) / Lamp Frame (F) and fix it.

NOTE:

Insert the crystal strands from the bottom layer to the top layer.

INSTALL BULBS

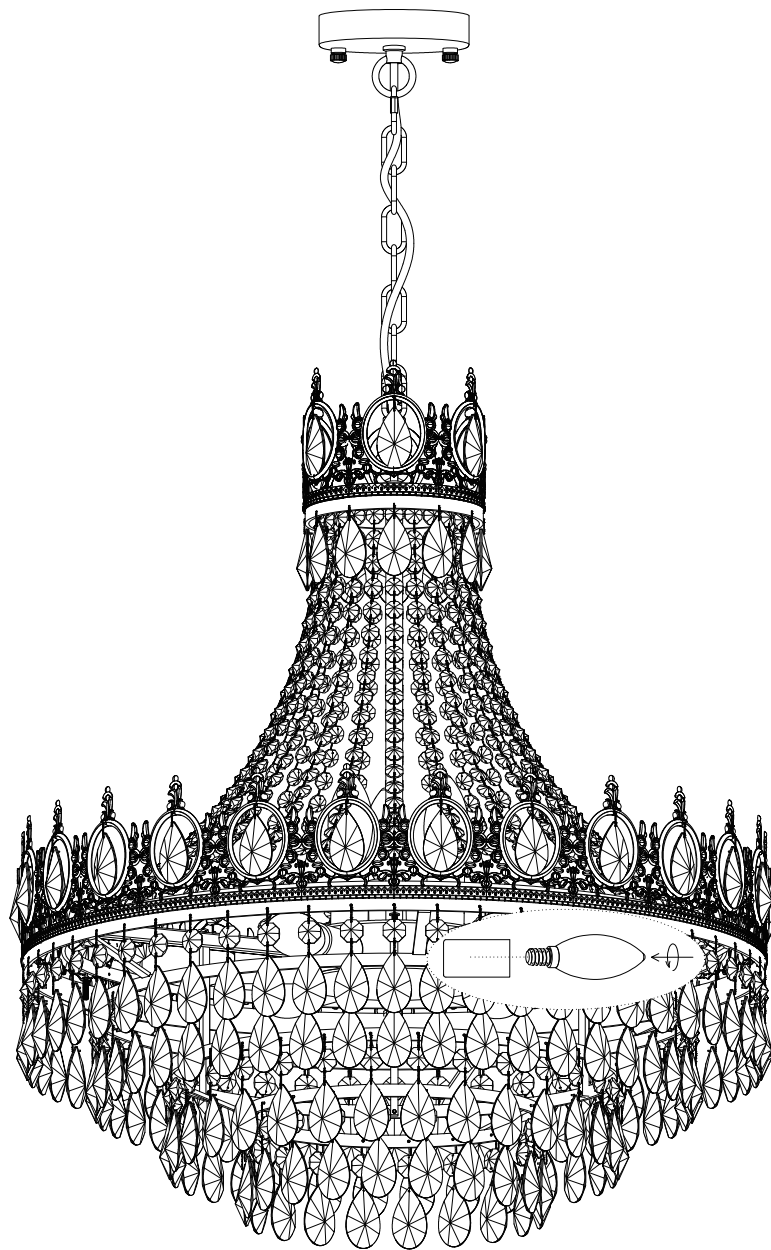

E12 Bulbs X 9
(Max 40W each, not included)

NOTE:

This lamp uses E12 bulbs up to 40W. Fully dimmable when used with dimmable bulbs and compatible dimming switches (not included).