
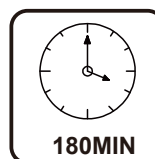
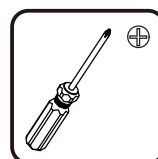


HLG034

Version: 1.0

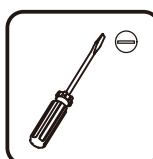

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---

Scan the QR code to contact us!



If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.

For any damaged or missing components, we're happy to provide FREE replacement parts.




WhatsApp

Email: service@furnlog.com


WANT TO CONTACT US THROUGH AMAZON?

- ▶ Log in to your Amazon account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

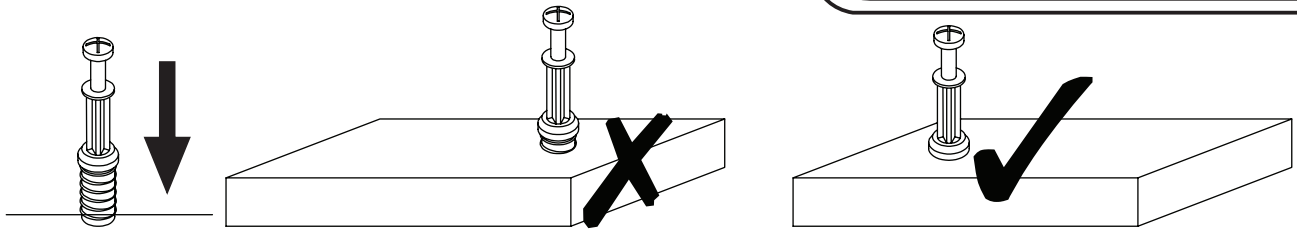


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

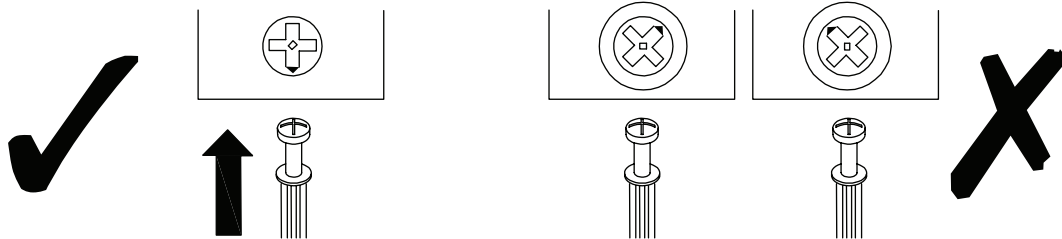










EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










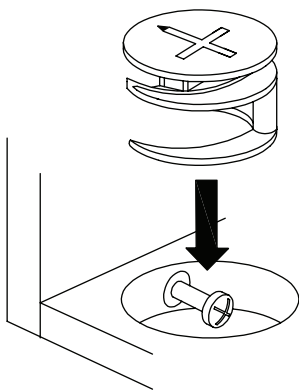




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

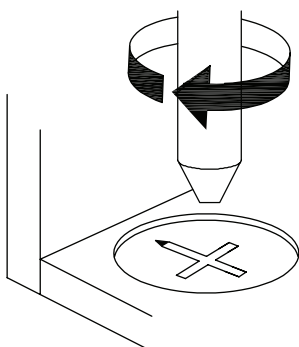

EN_Turn cam lock clockwise to tighten.

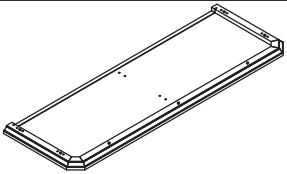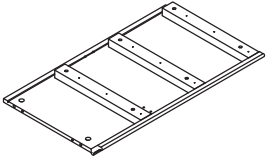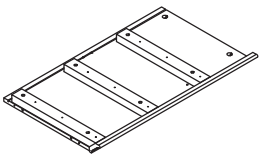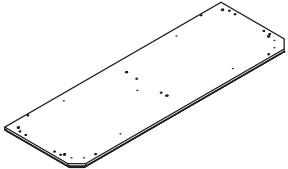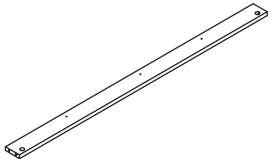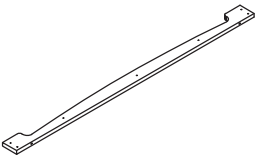NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x2	
⑩		x2	

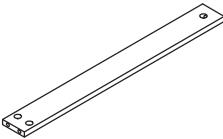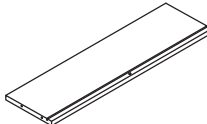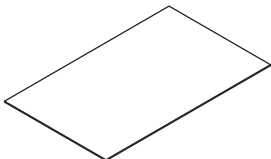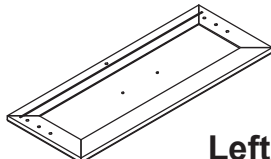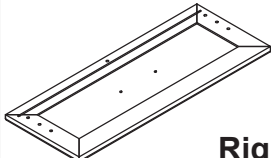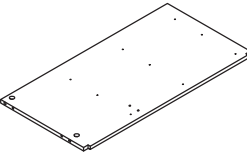
NO.	PARTS	QTY	SPARE
⑪		x2	
⑫		x6	
⑬		x6	
⑭		x6	
⑮		x6	
⑯		x6	
⑰	 Left	x3	
⑱	 Right	x3	
⑲		x1	
⑳		x1	

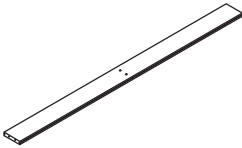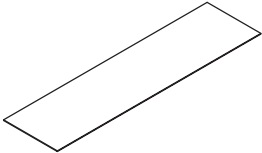NO.	PARTS	QTY	SPARE
②1		x1	
②2		x2	
	 Hardware Kit		

NO.	PARTS	QTY	SPARE









Note: When removing the product packaging box, please place the removed packaging accessories and foam plate beside the installation, and do not throw them away.
We will use a 25mm thick foam plate to pad the floor when installing later! thank you.

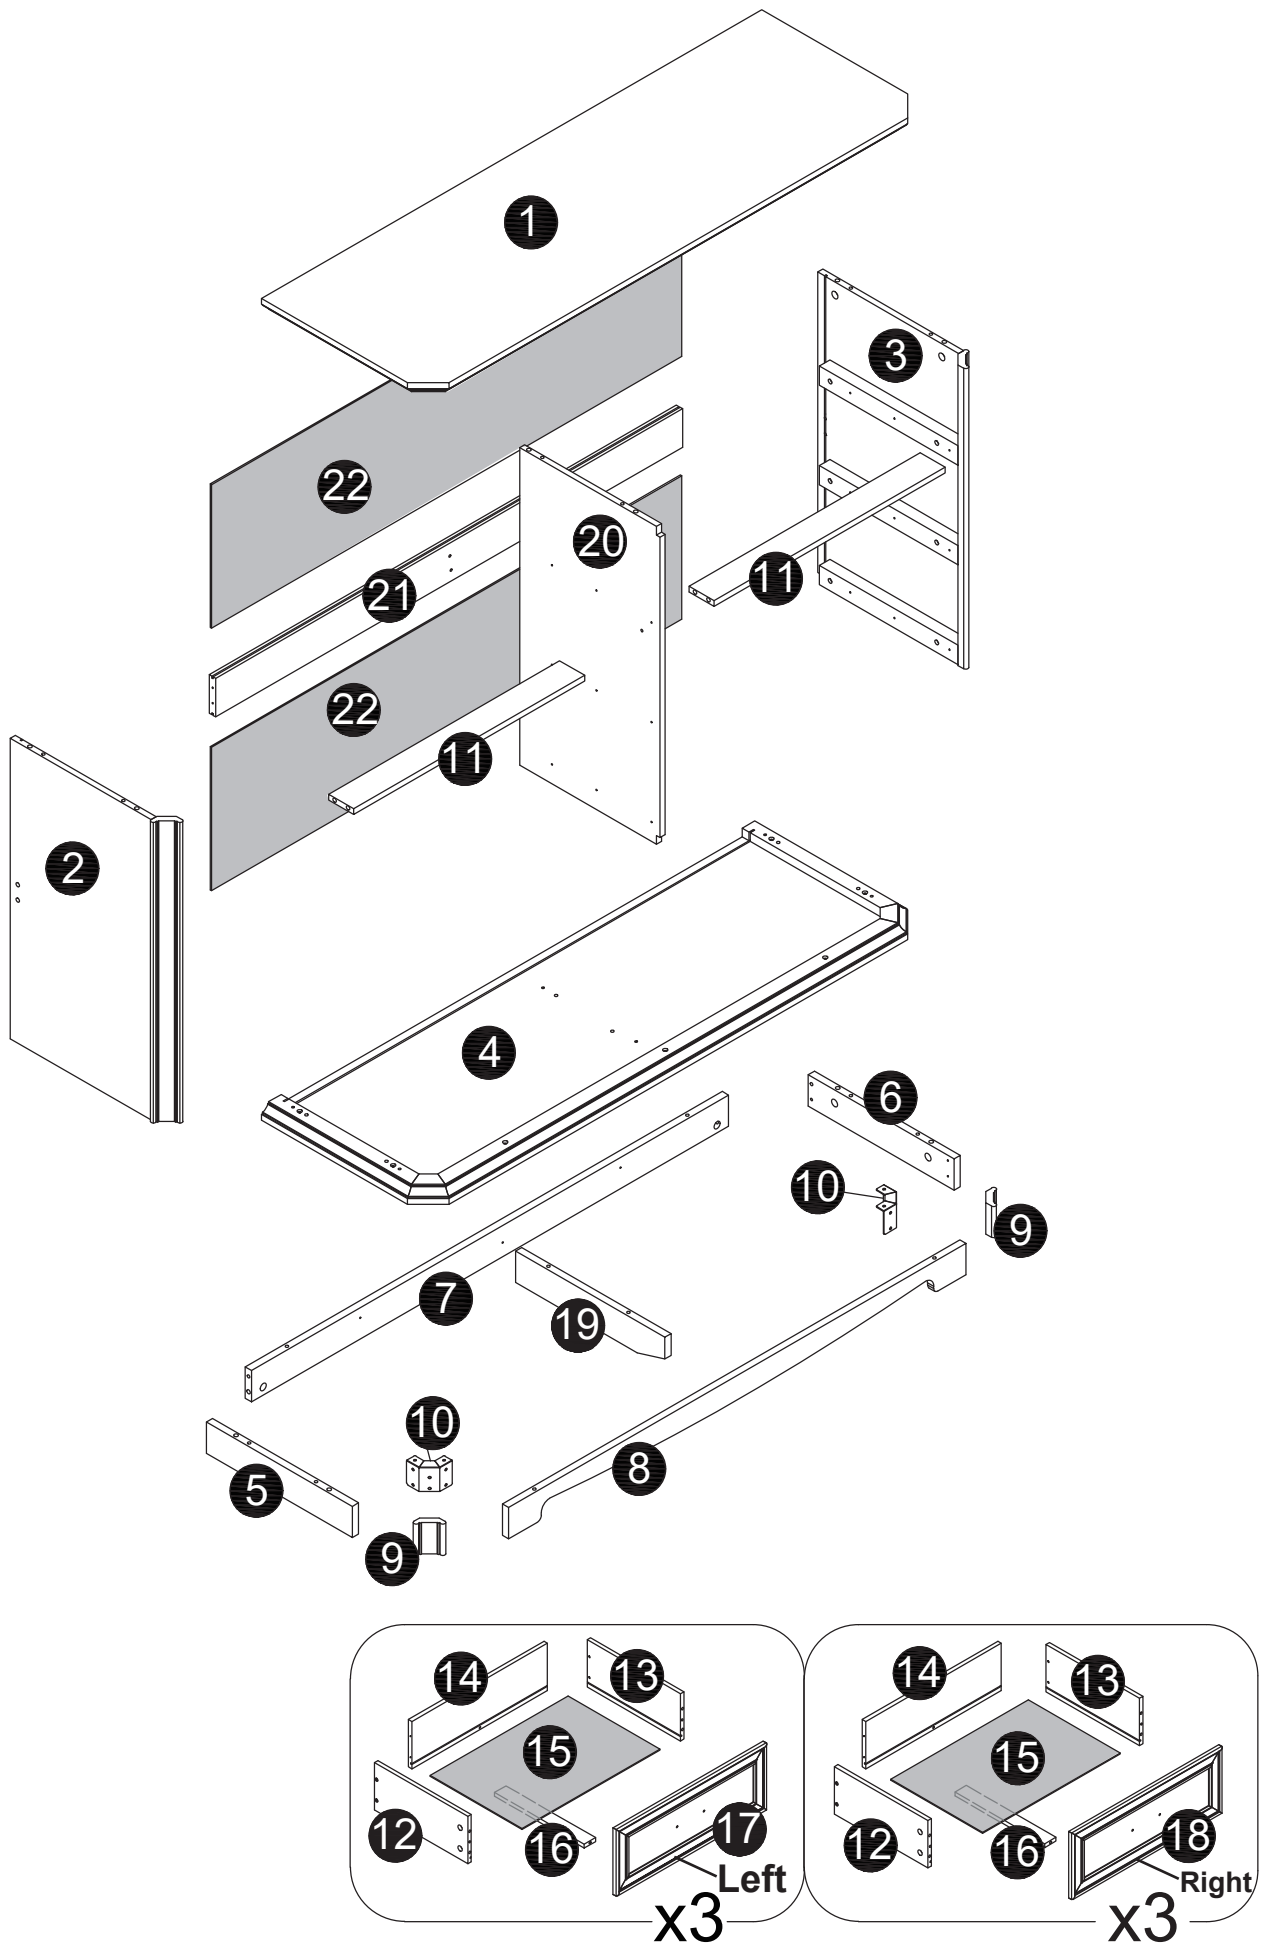

A x48 Ø6x35mm +3(spare)	B x48 Ø15x10mm +3(spare)	C x36 Ø6x30mm +2(spare)	D x34 Ø4x35mm +2(spare)	E x86 Ø3.5x12mm +6(spare)	F x6 F1 F2
G x12	H x18 Ø3x16mm +1(spare) H1 H2	I x2 Ø6x30mm	J x18 Ø4x14mm +2(spare)	K x4 Ø5x50mm	L x4 Ø15mm
M x6 Ø5x40mm	N x7	O x2	CL x6 L300mm	CR x6 L300mm	DL x6 L300mm
DR x6 L300mm					

A x30	B x30	C x12	D x30
--------------	--------------	--------------	--------------

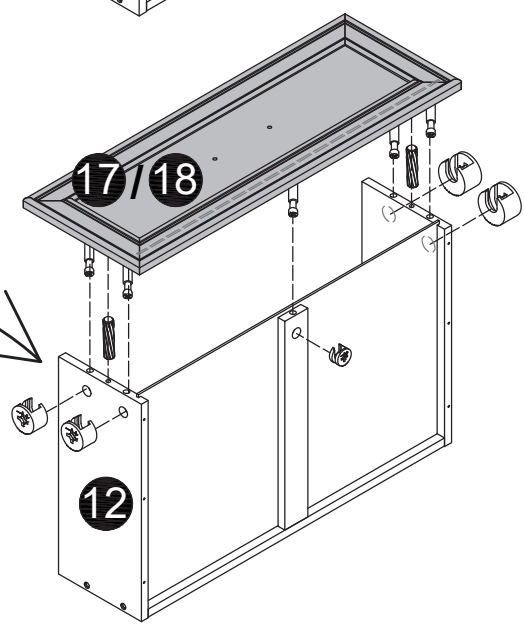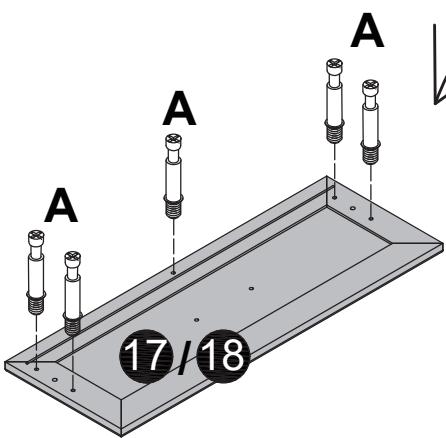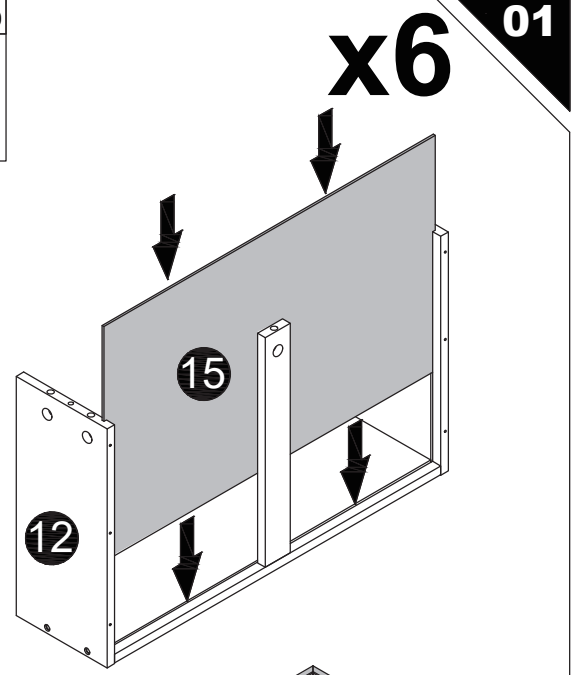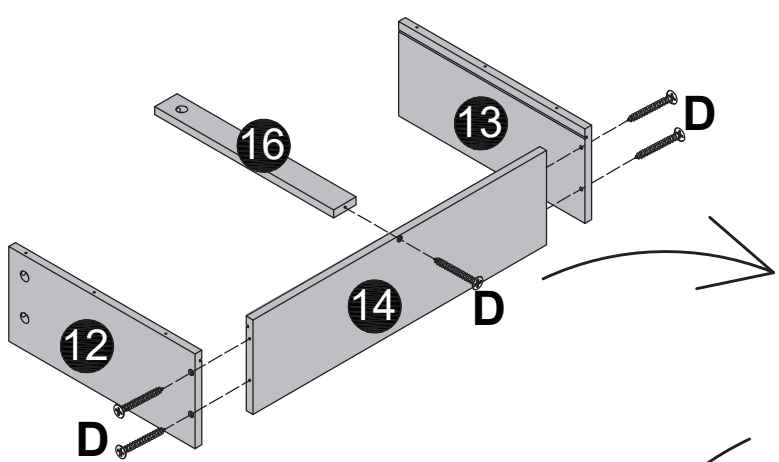


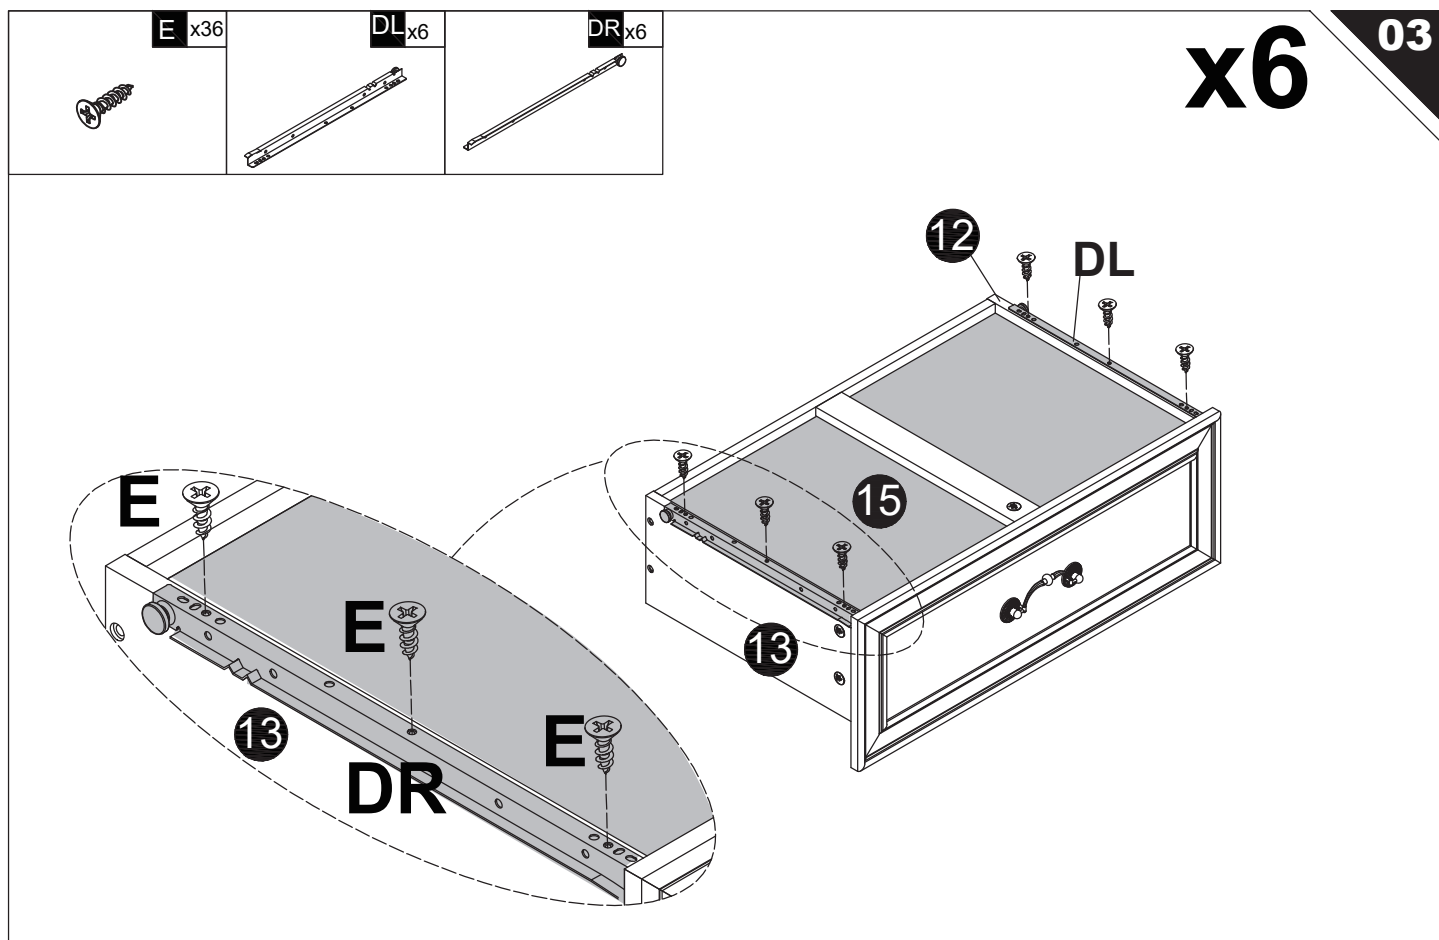
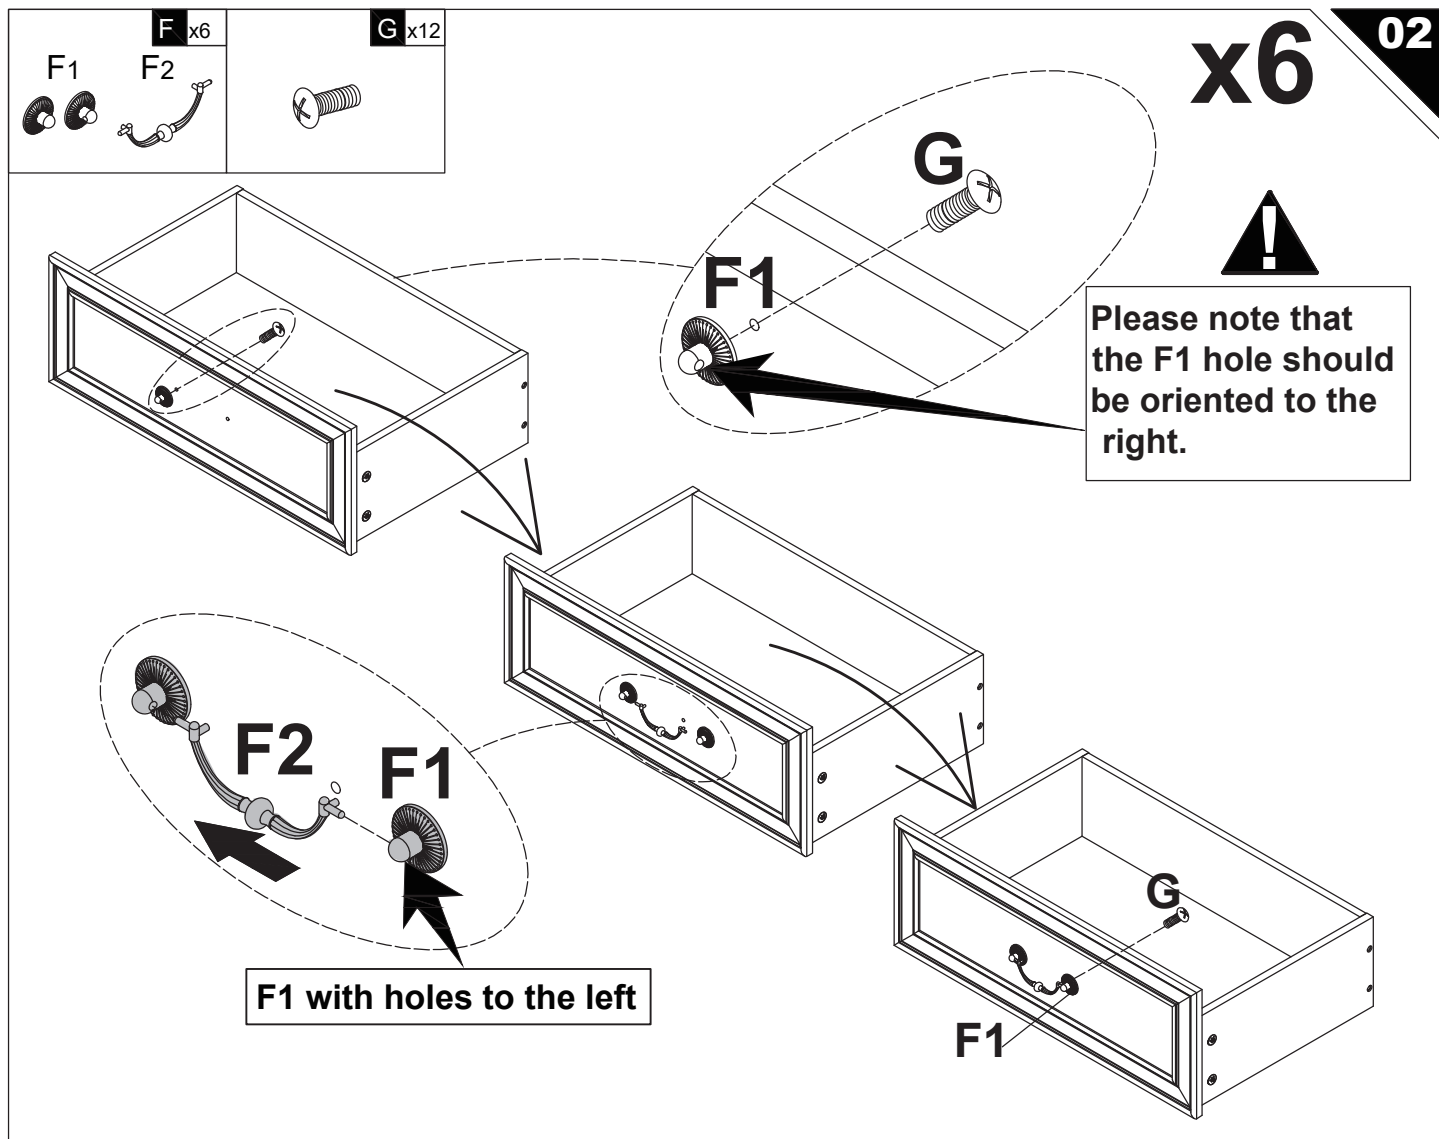


E x18

CL x3



CR x3

04

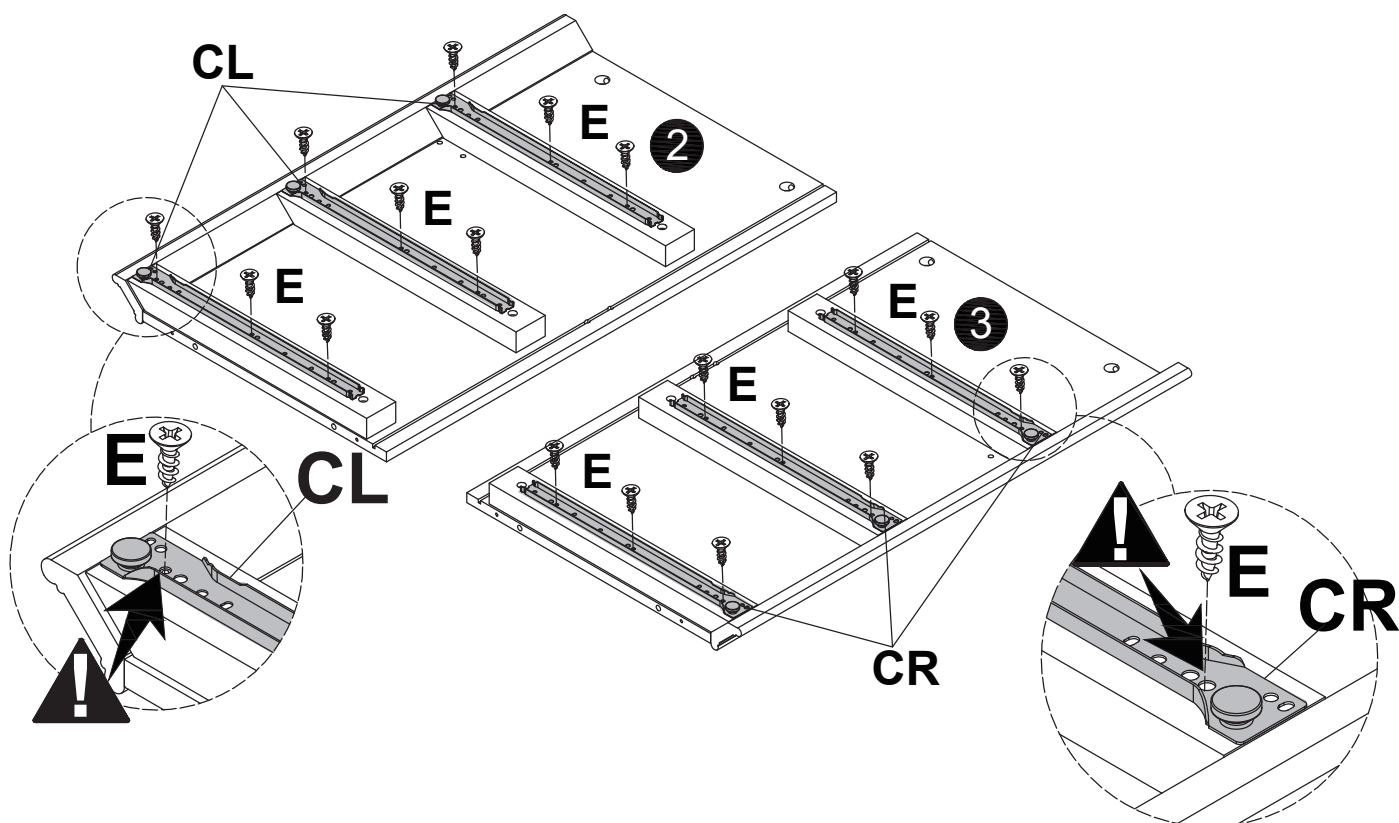

A x3

05

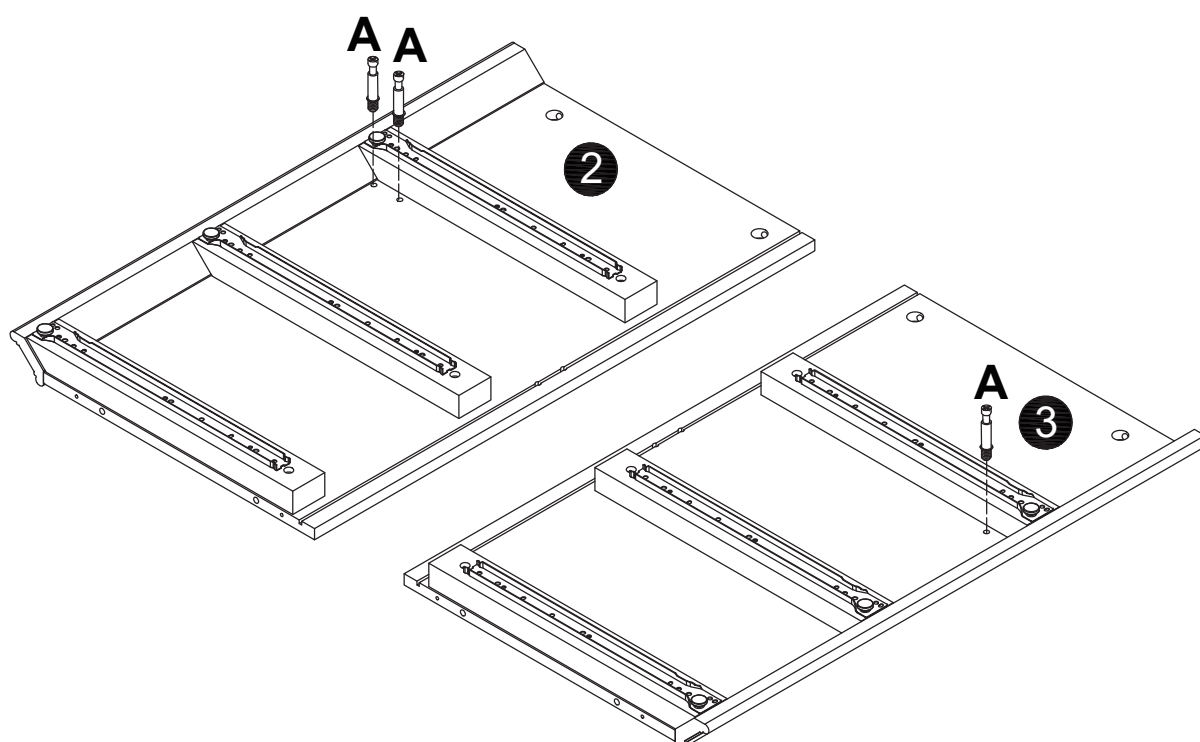


E x18

CL x3


CR x3

06

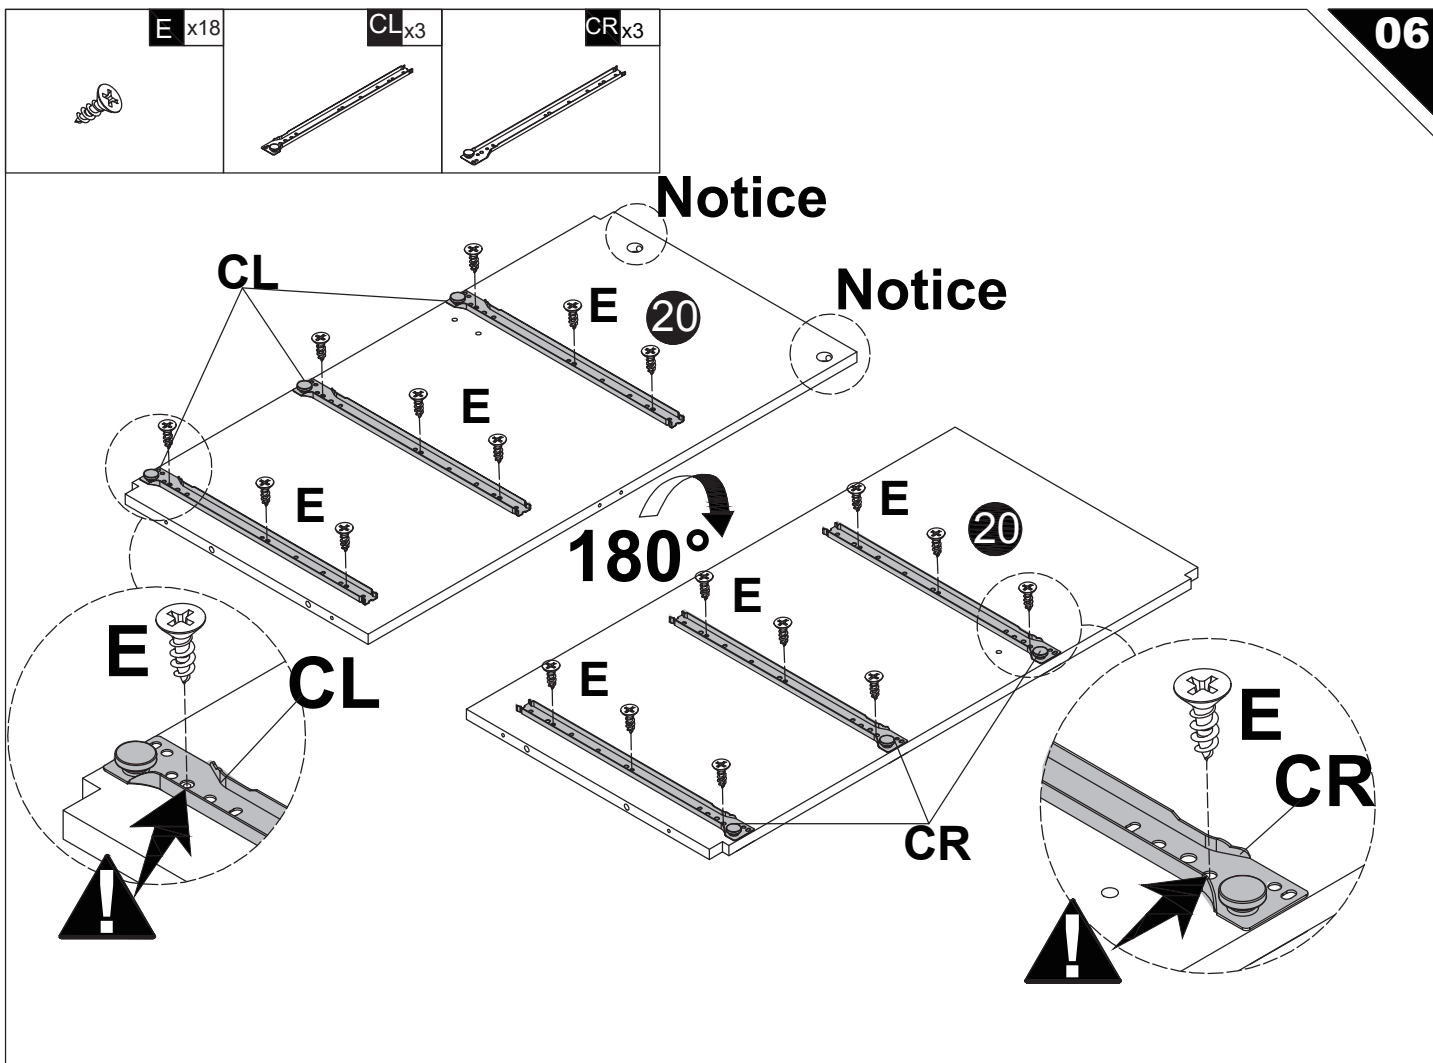

A x7


07

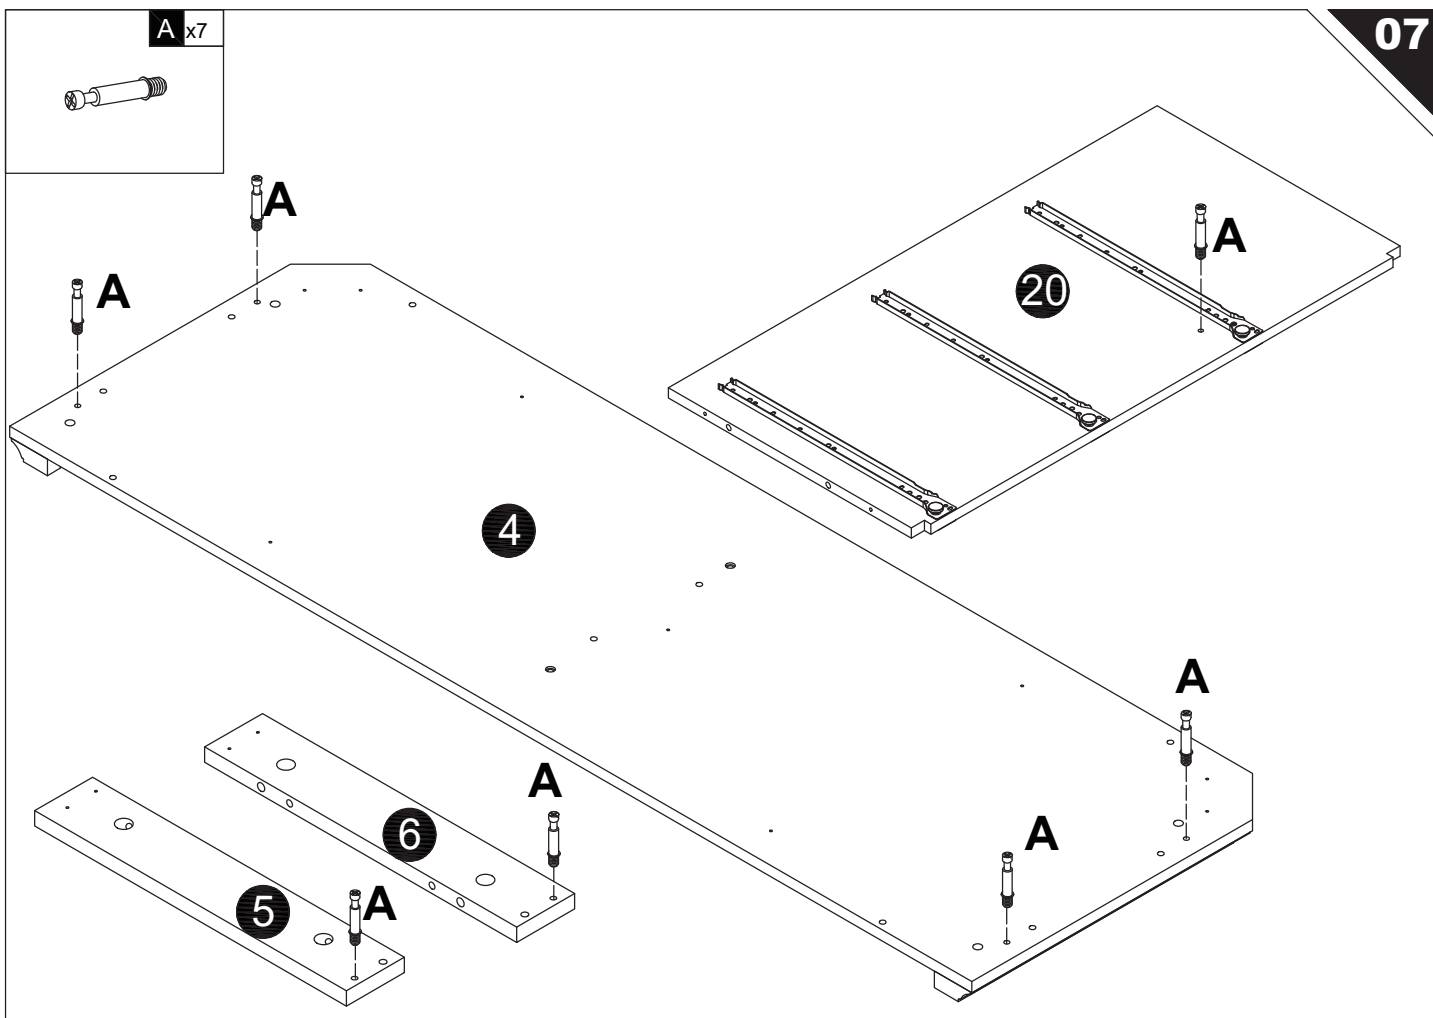

B x3




Note: Since the bottom of the side mounting of 2 # plate and 20 # plate is uneven, use a piece of 25mm thick foam that has been removed from the product packaging to pad it under 20 # plate to make 20 # plate flush with 2 # plate, as shown in the figure.

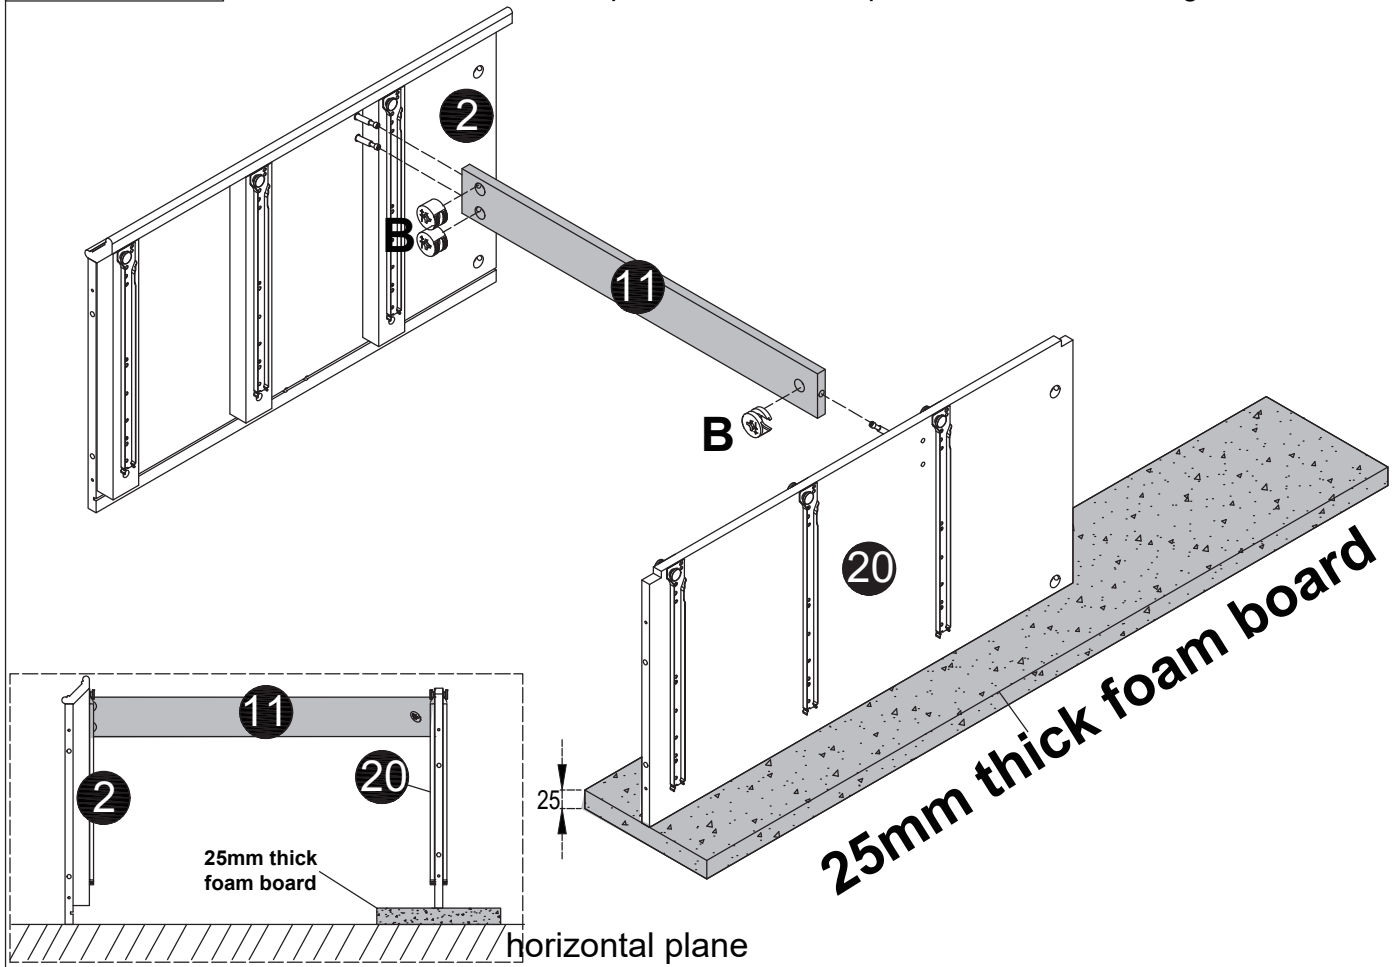


A x2

C x4


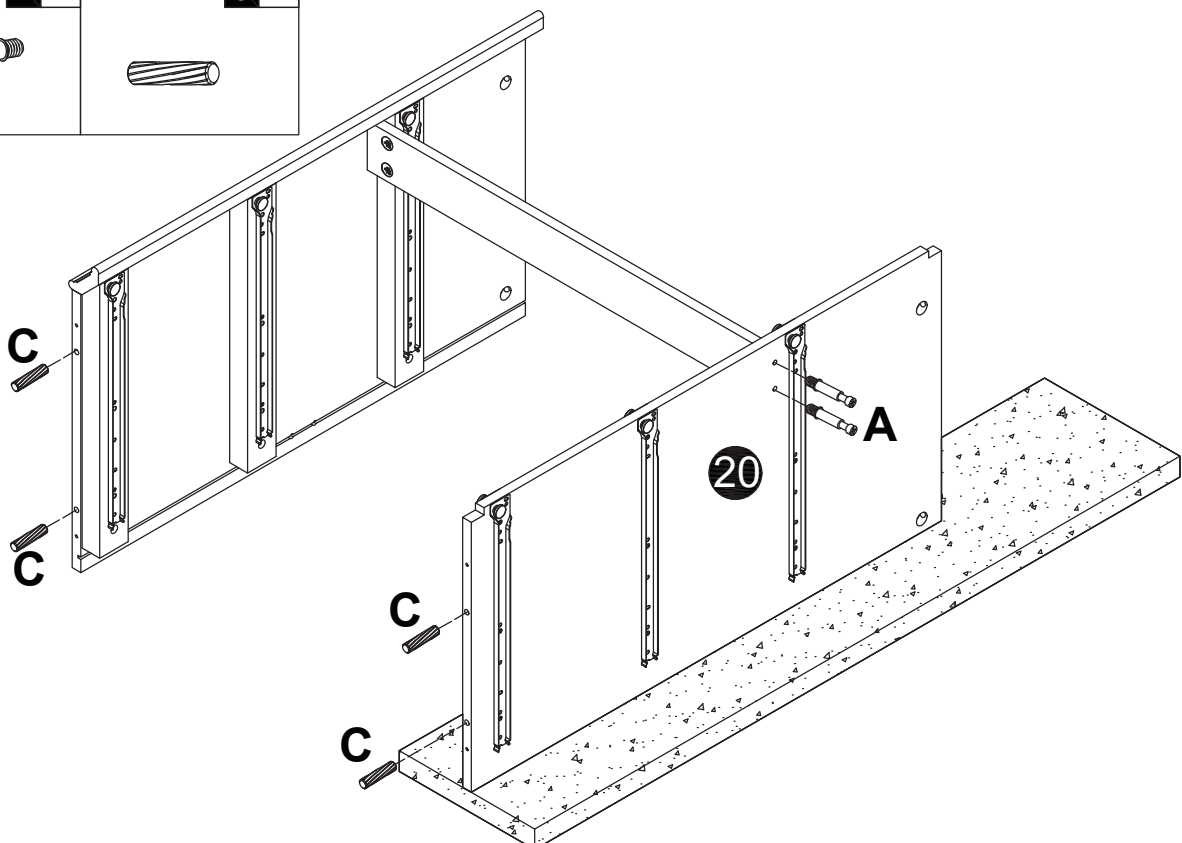


B x3

C x2

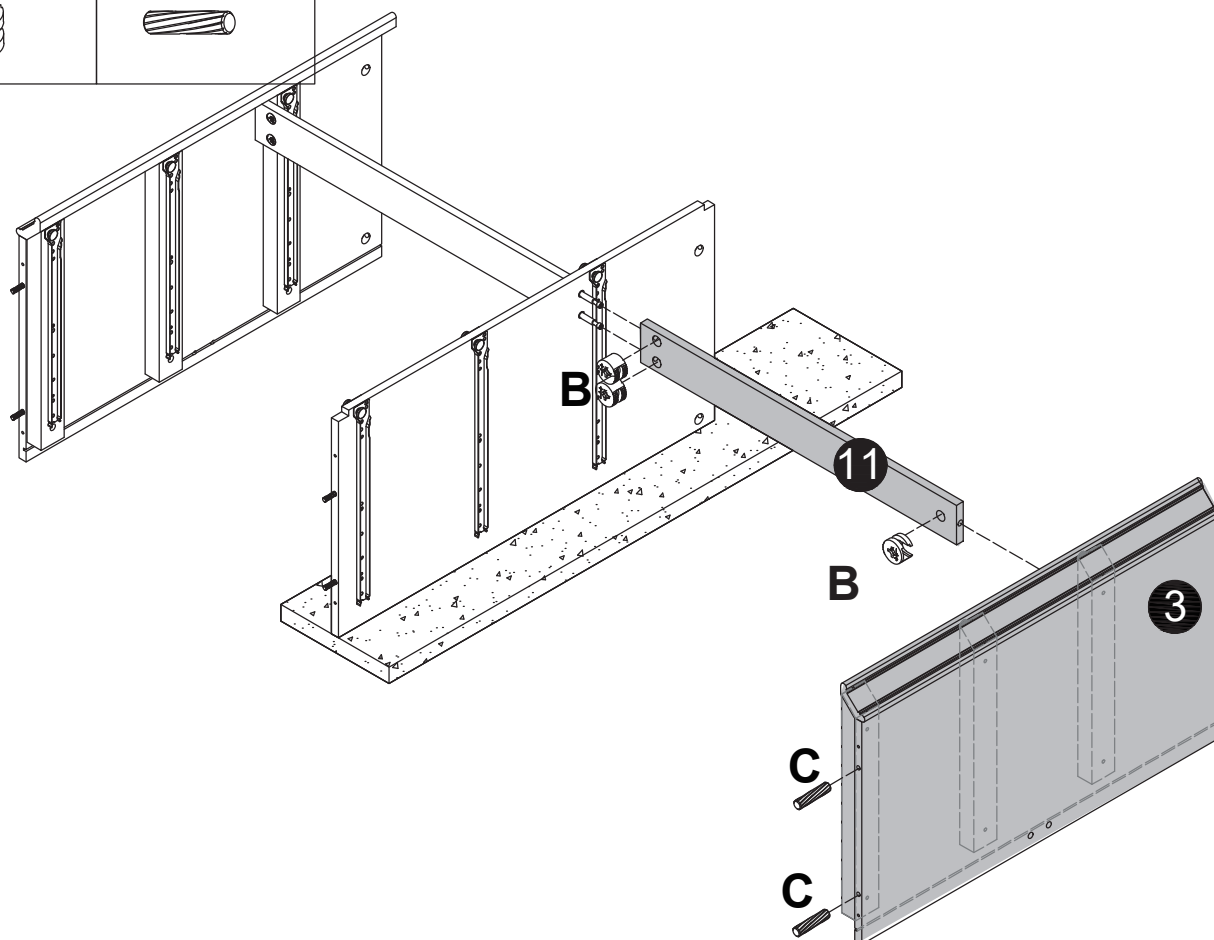


K x4

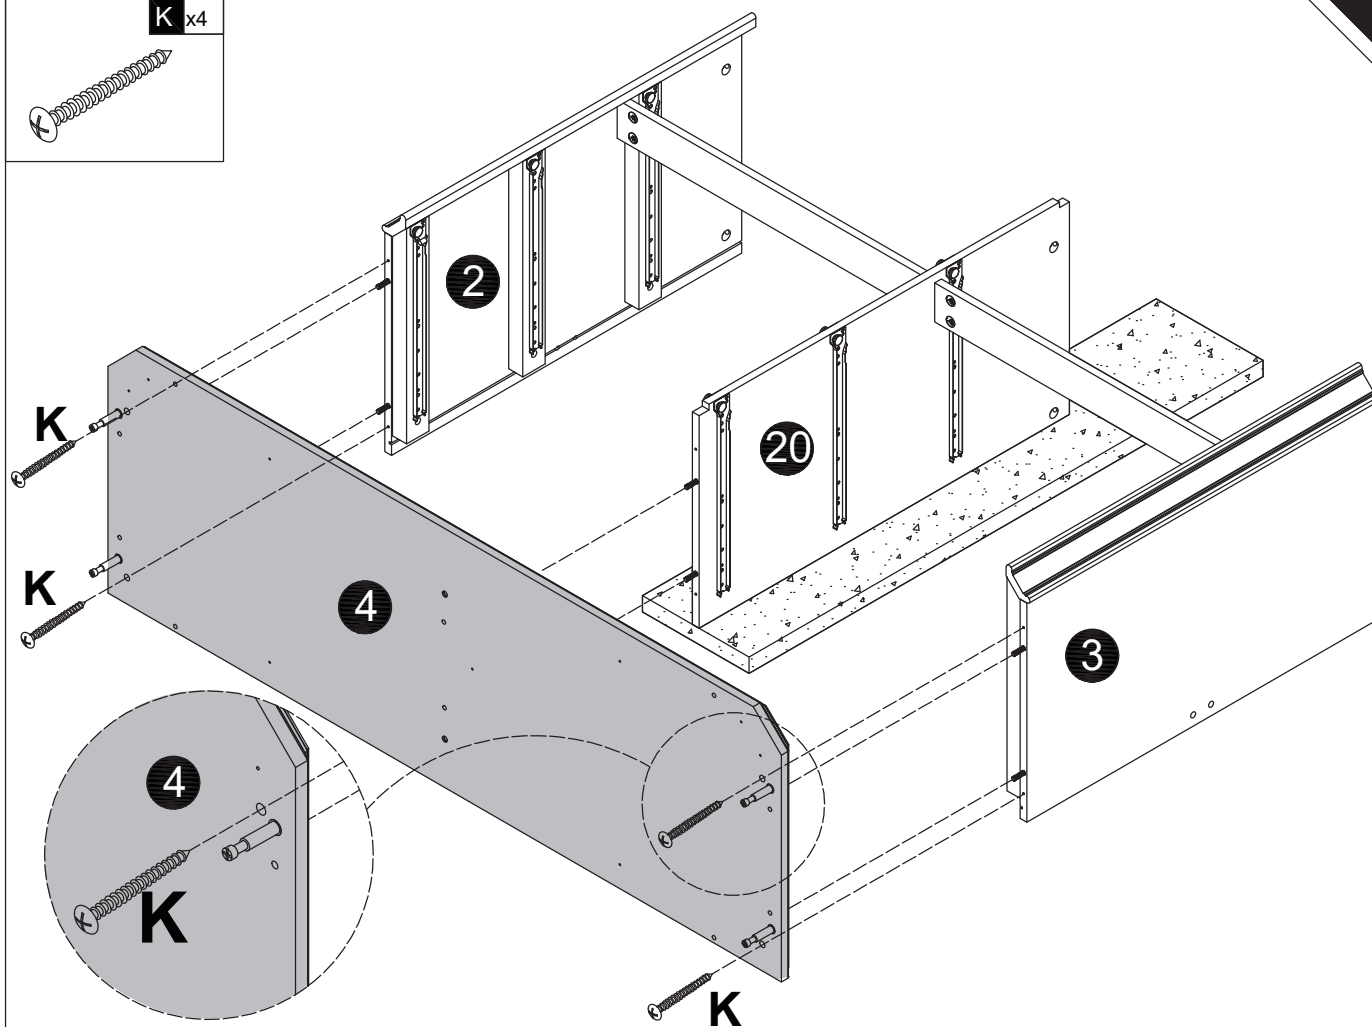

D x2

12

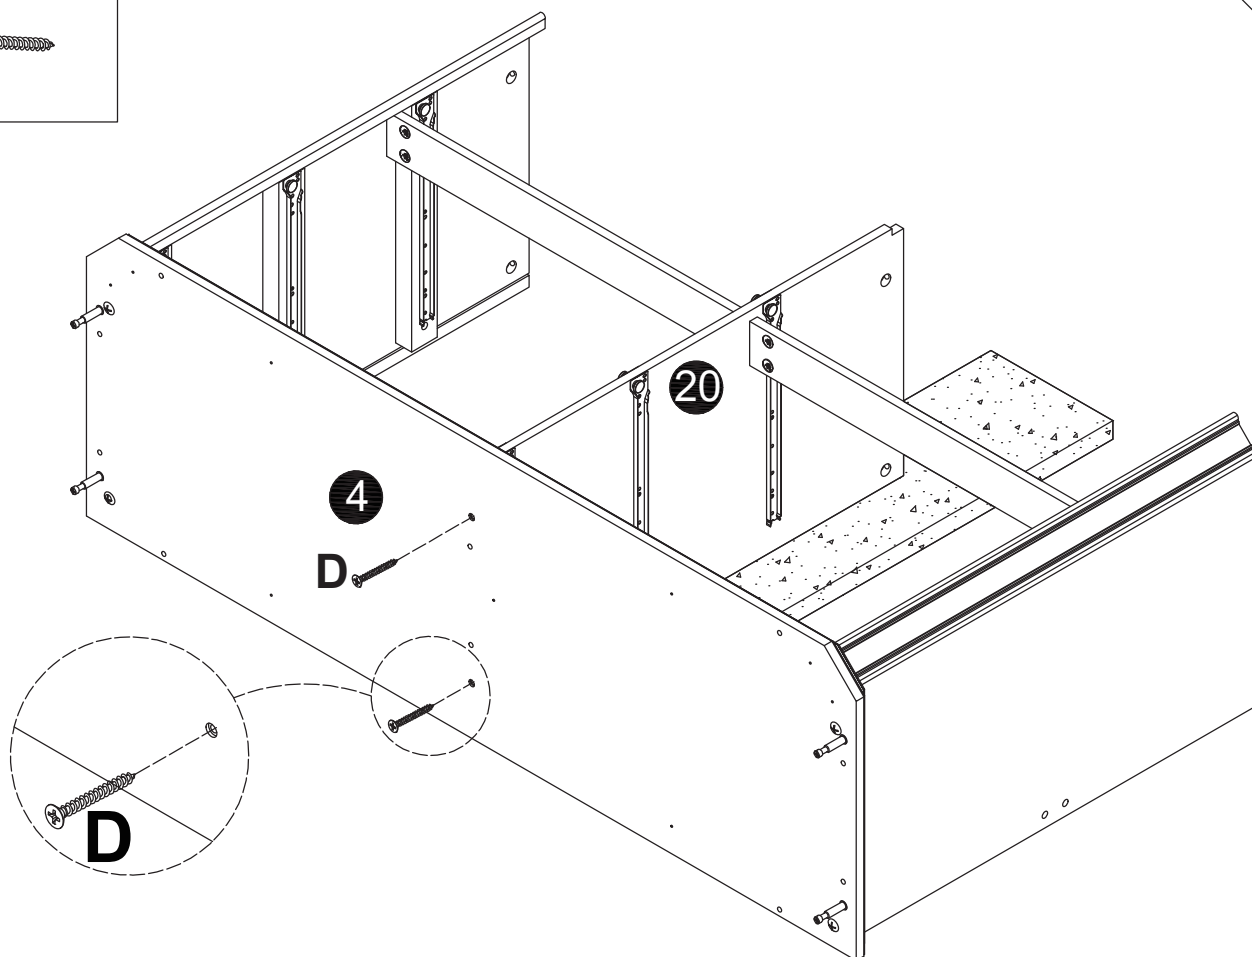


C x2

E x7


N x7

13

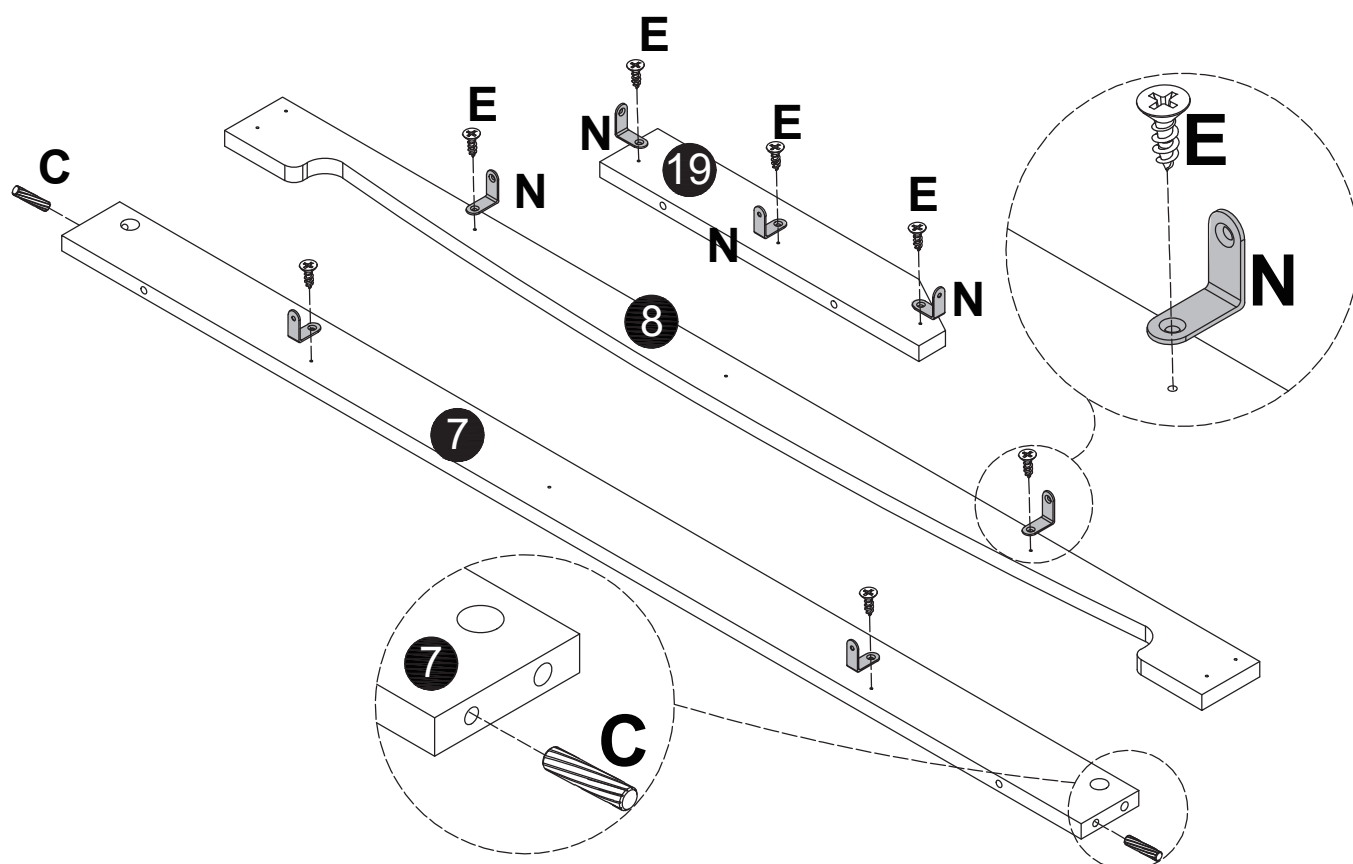




B x2

C x6

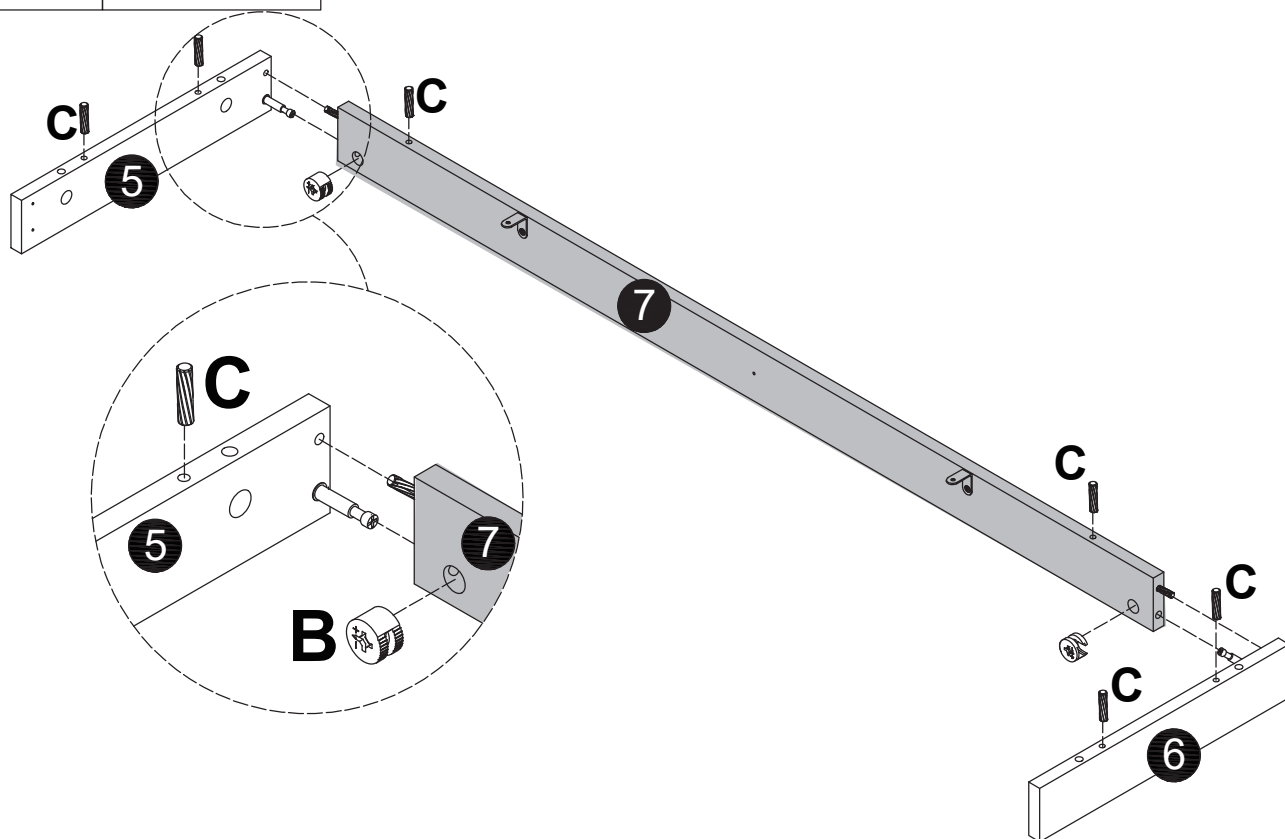

B x4

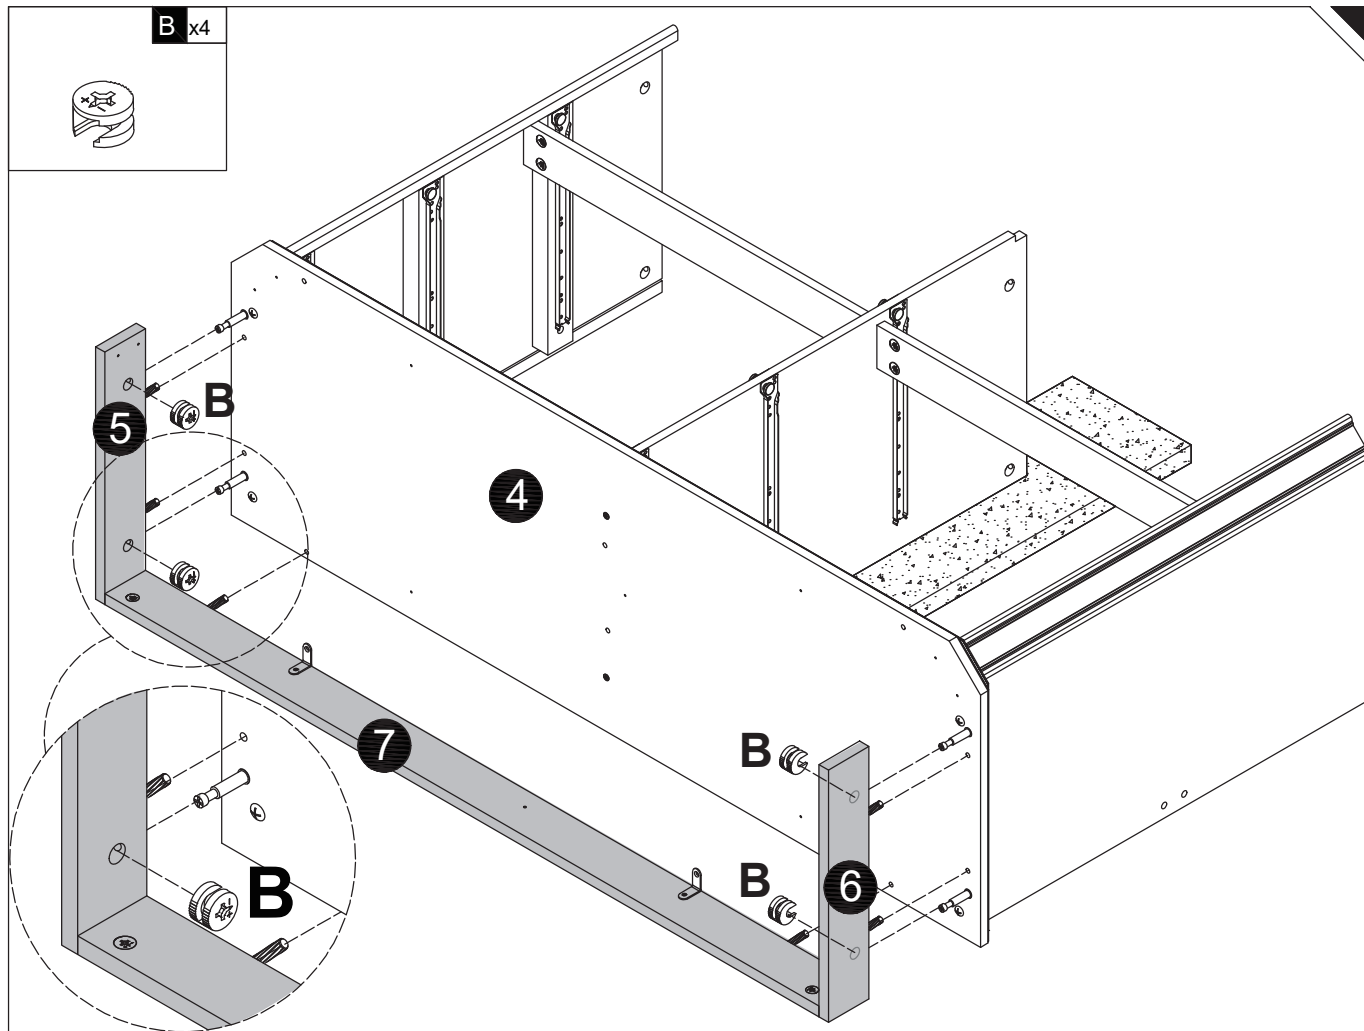


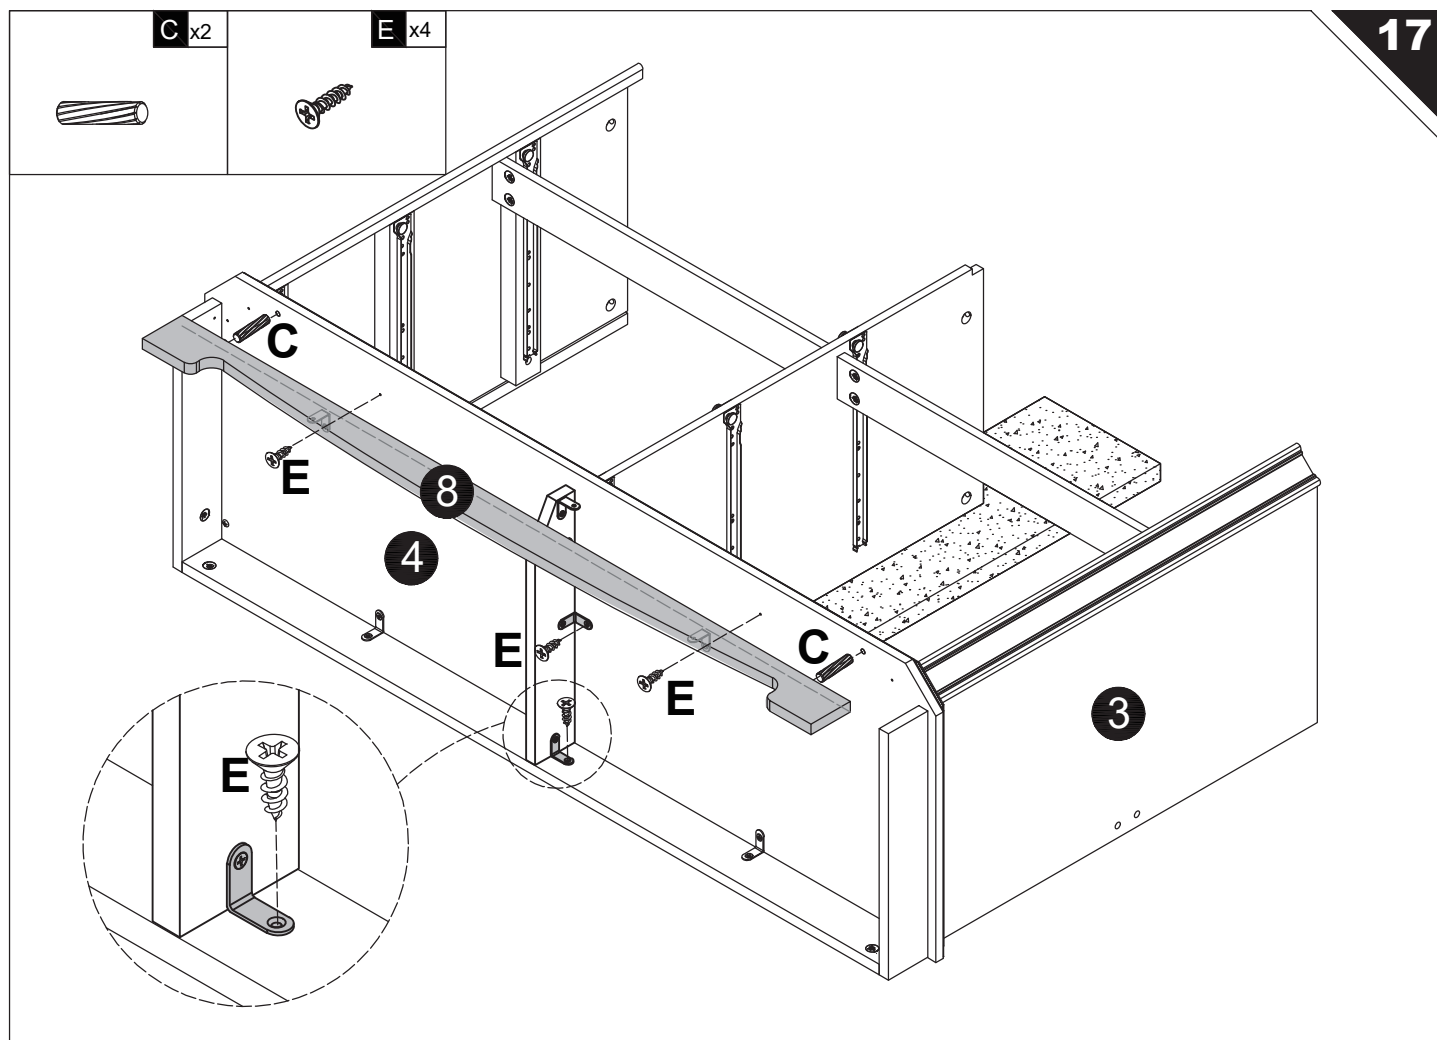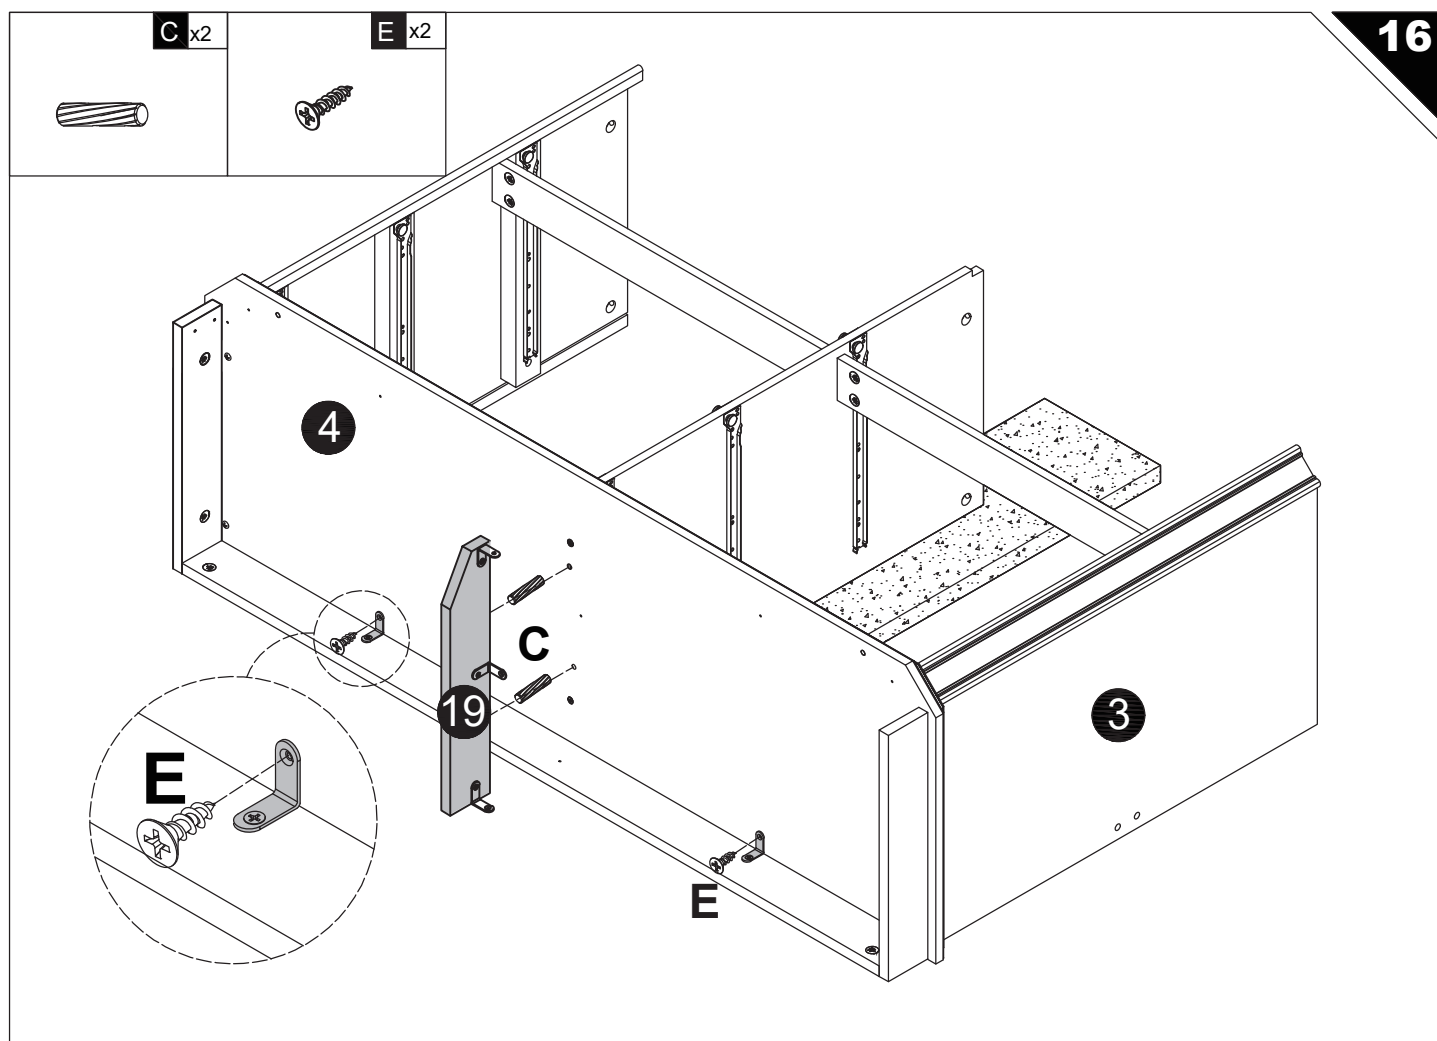

C x6




18

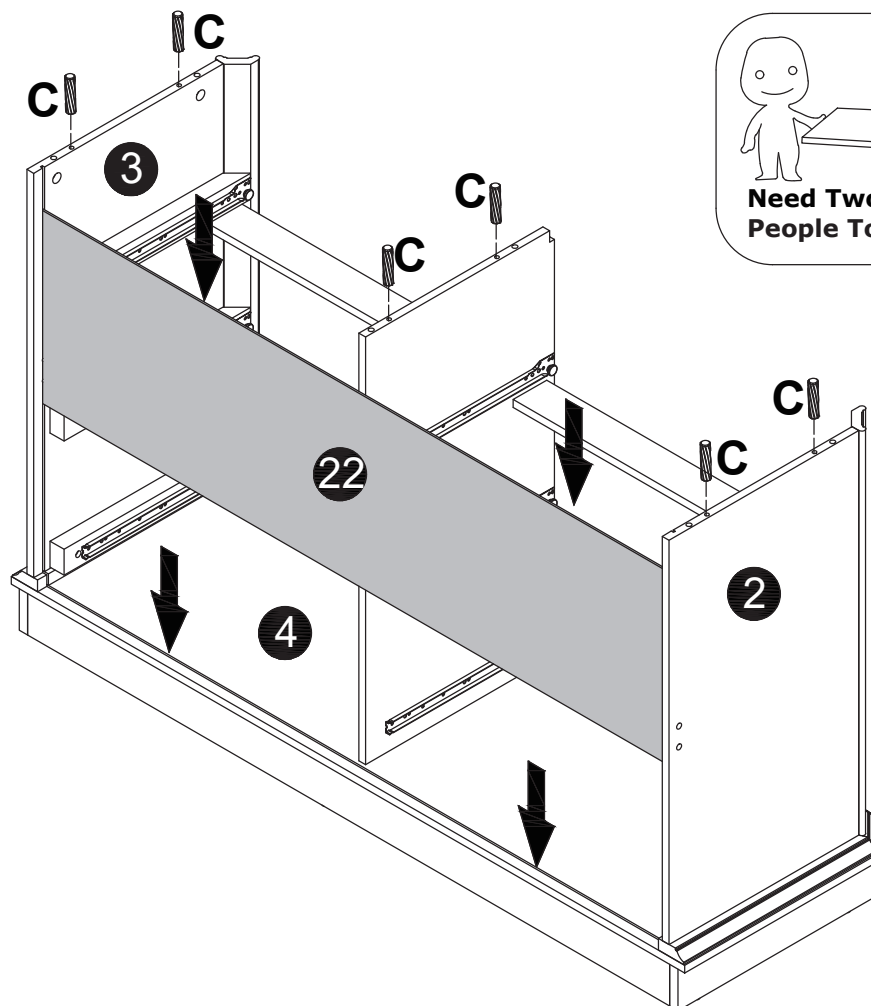

M x6




19

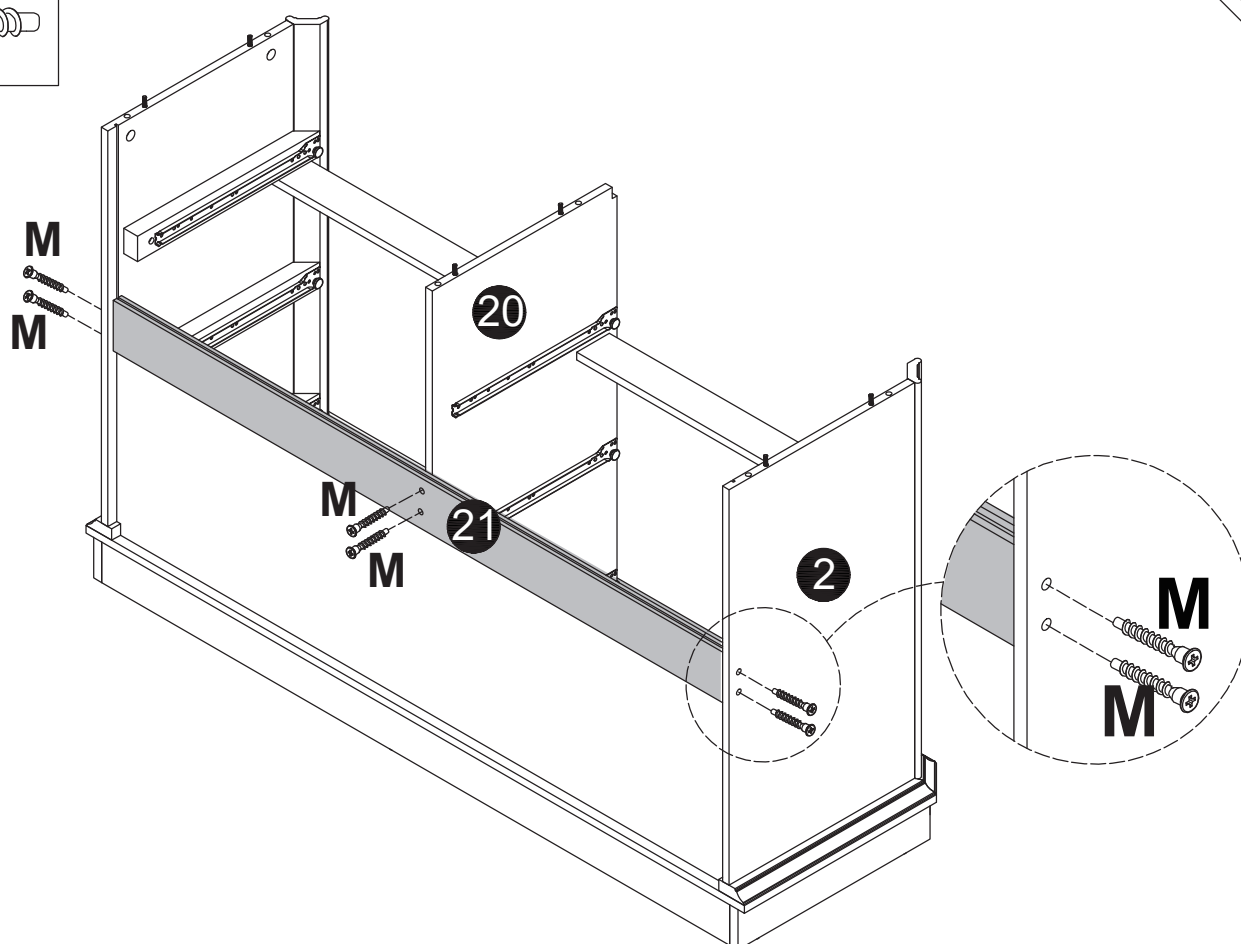



L x4

20

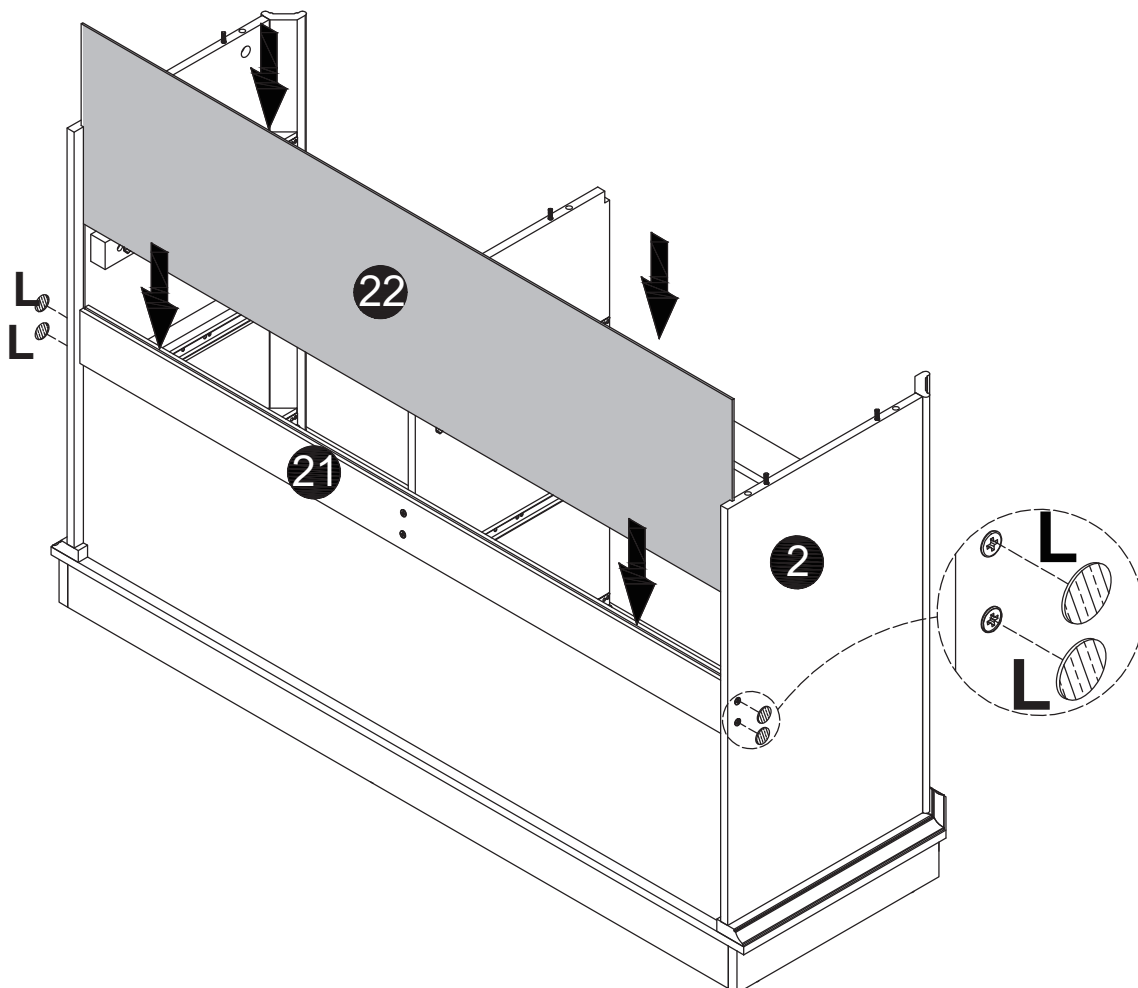

A x6


21

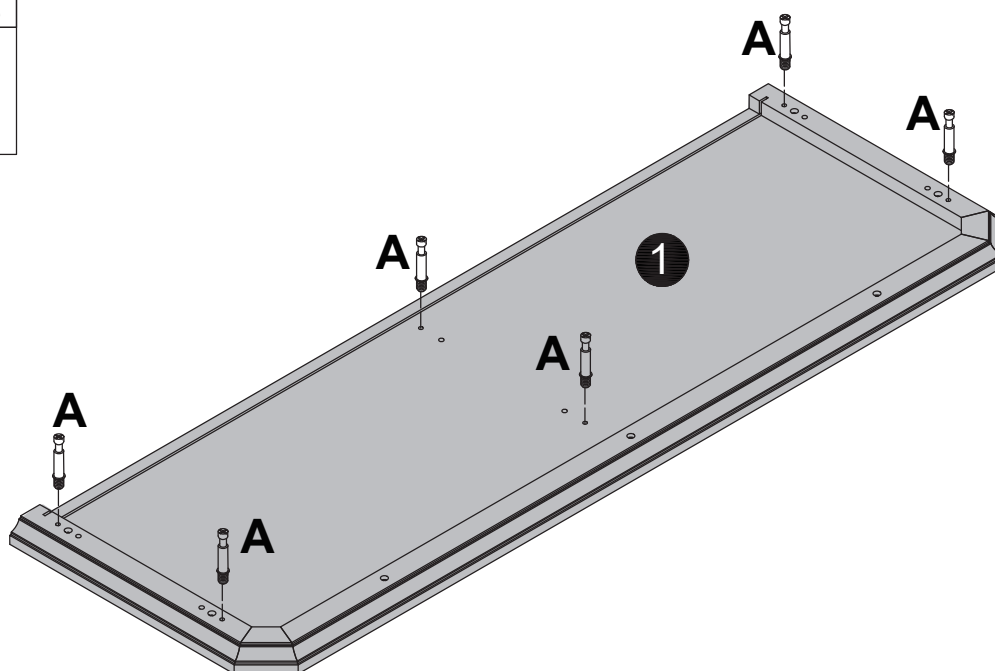



B x6



22

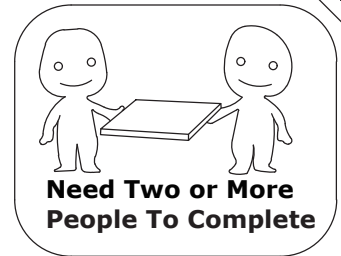

Need Two or More
People To Complete

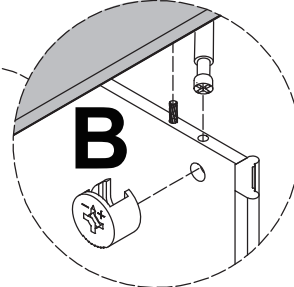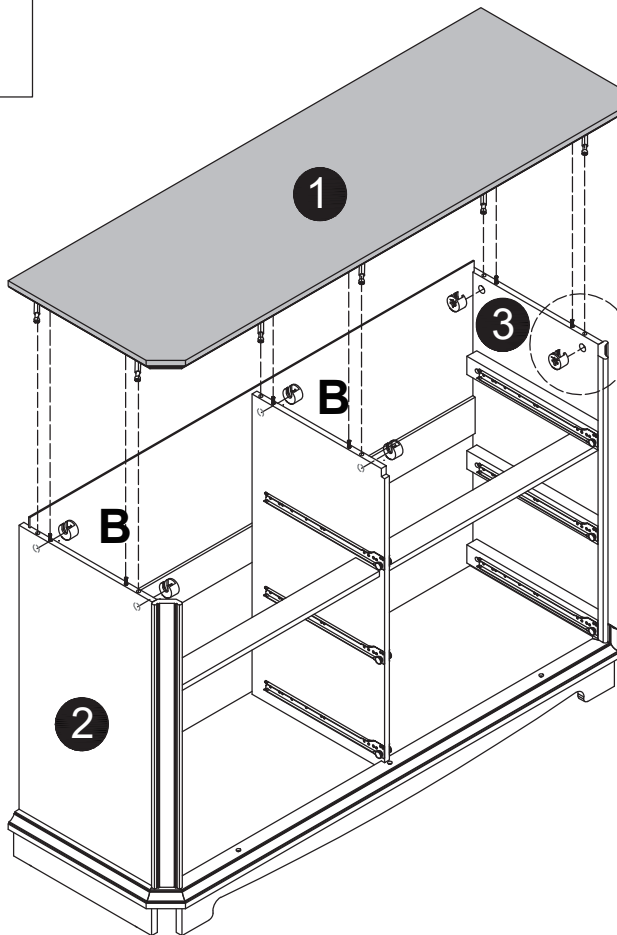

J x12




E x1



Attention: Screw J should be locked to 90%, not to 100%.

23

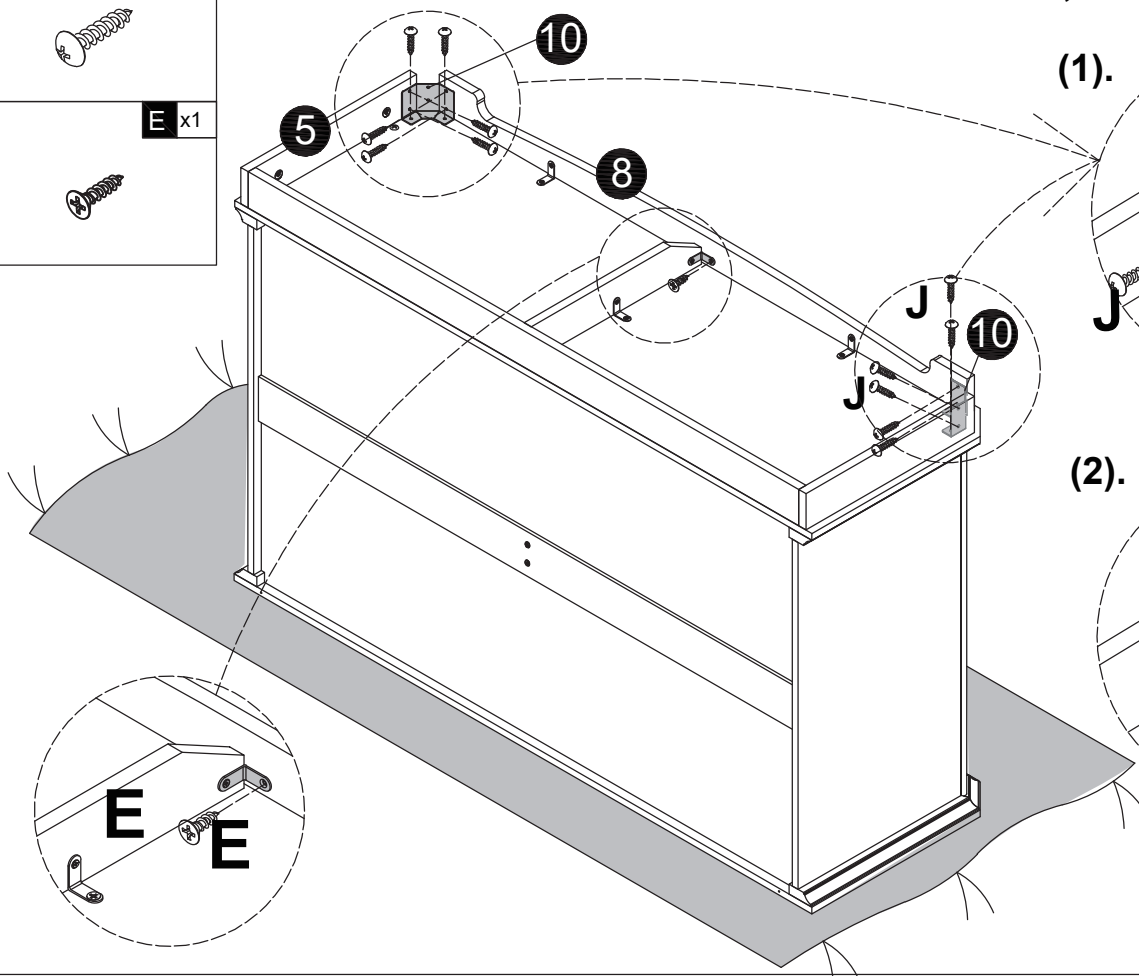

(1).


(2).

4



Need Two or More
People To Complete


J x4


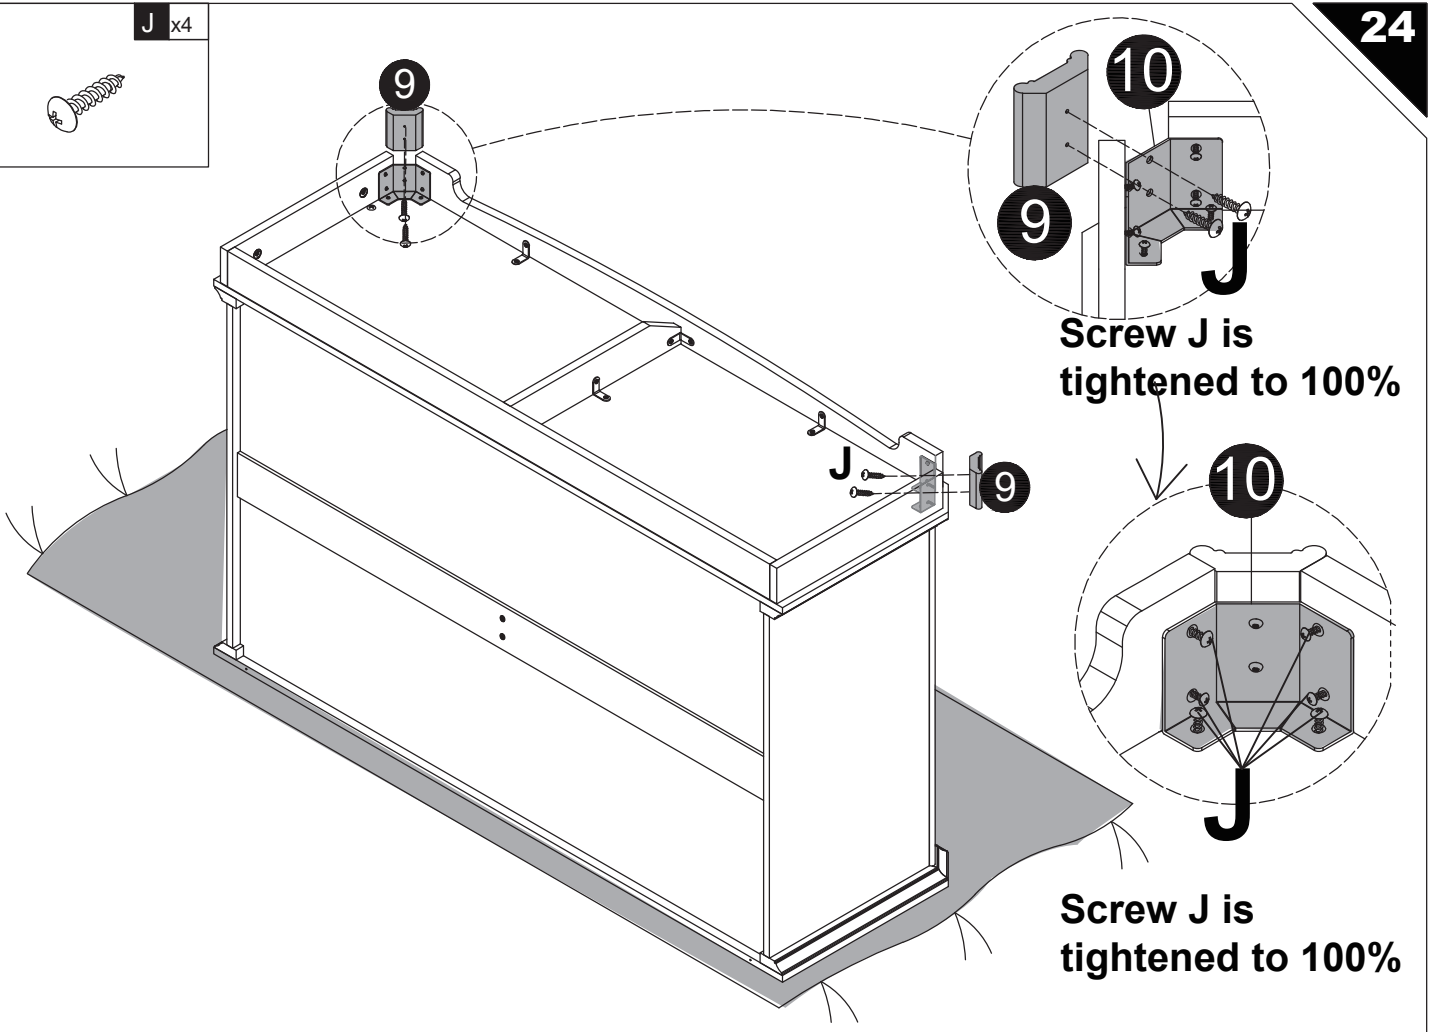


H1

H x18

H2

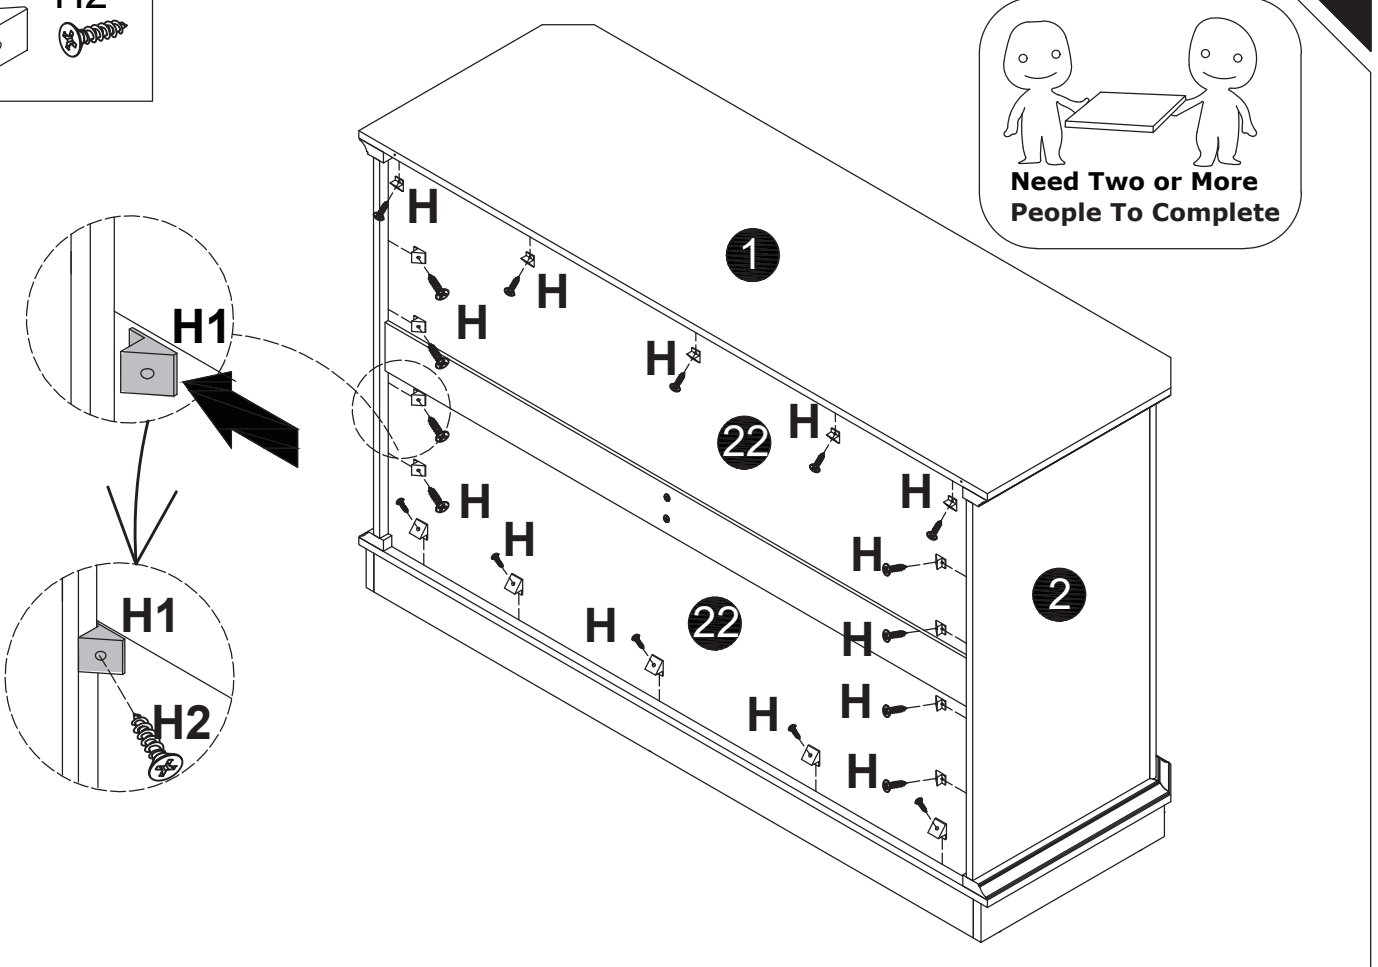

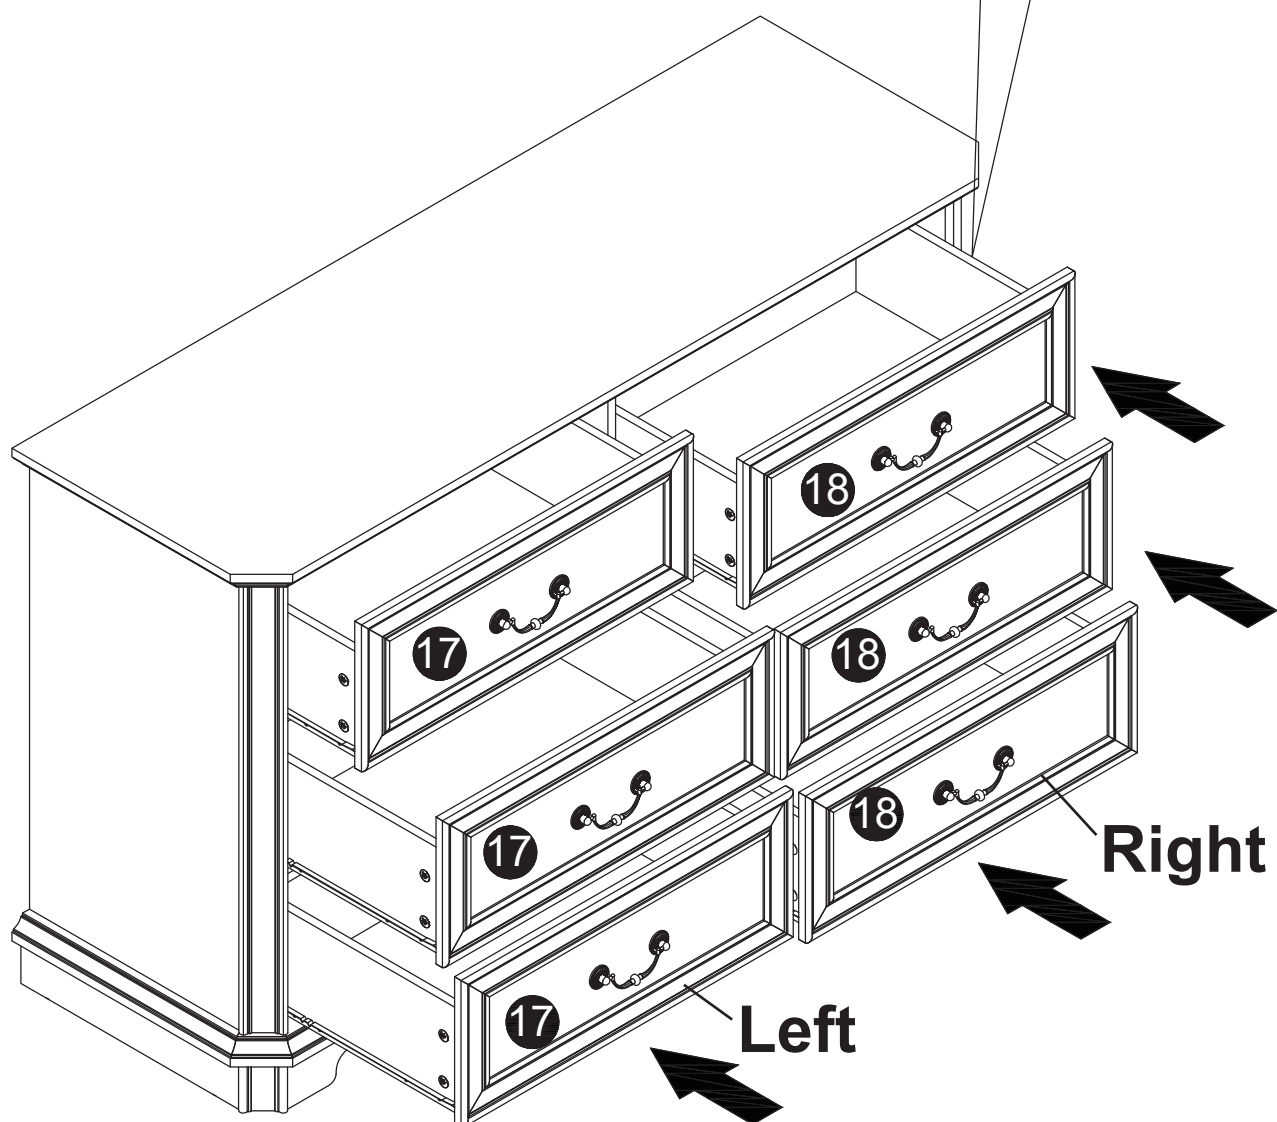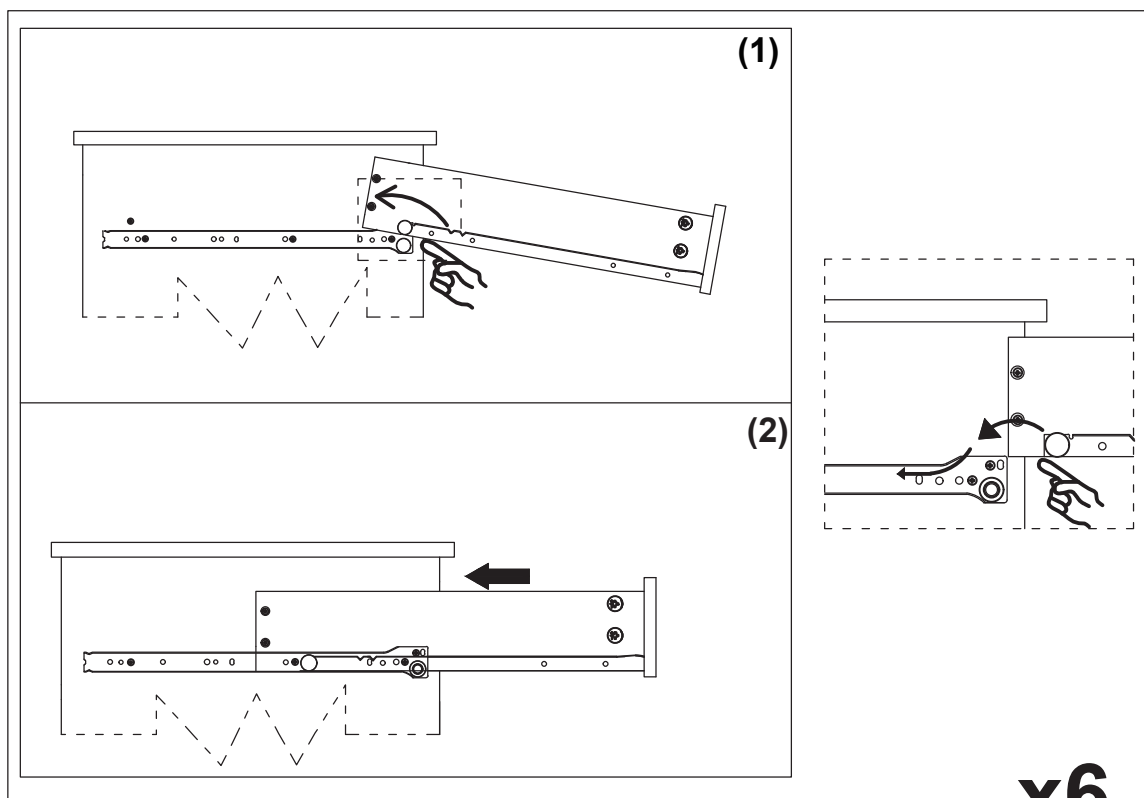

D x2



I x2




J x2




O x2




Done

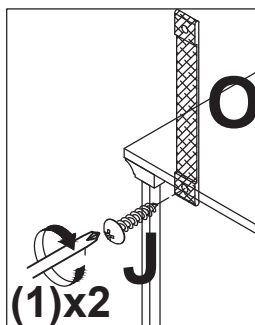


First fix the anti-rewind screw in the reserved hole of the product.

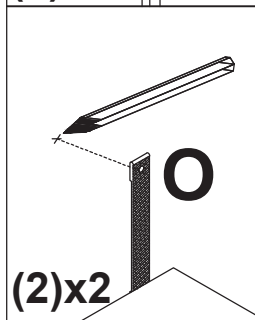


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

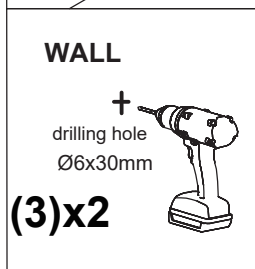

Then use a tape drill to make holes in the wall that are suitable for the product screws.

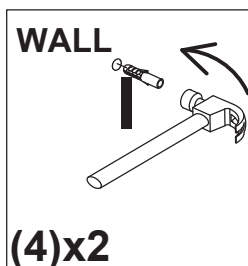

Then, put the expansion bolt into the hole

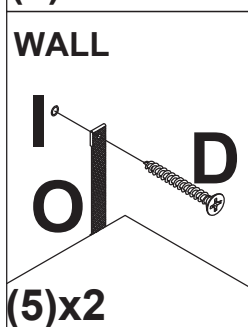

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

