



User Manual

ASSEMBLY INSTRUCTION

MH-TS001GR

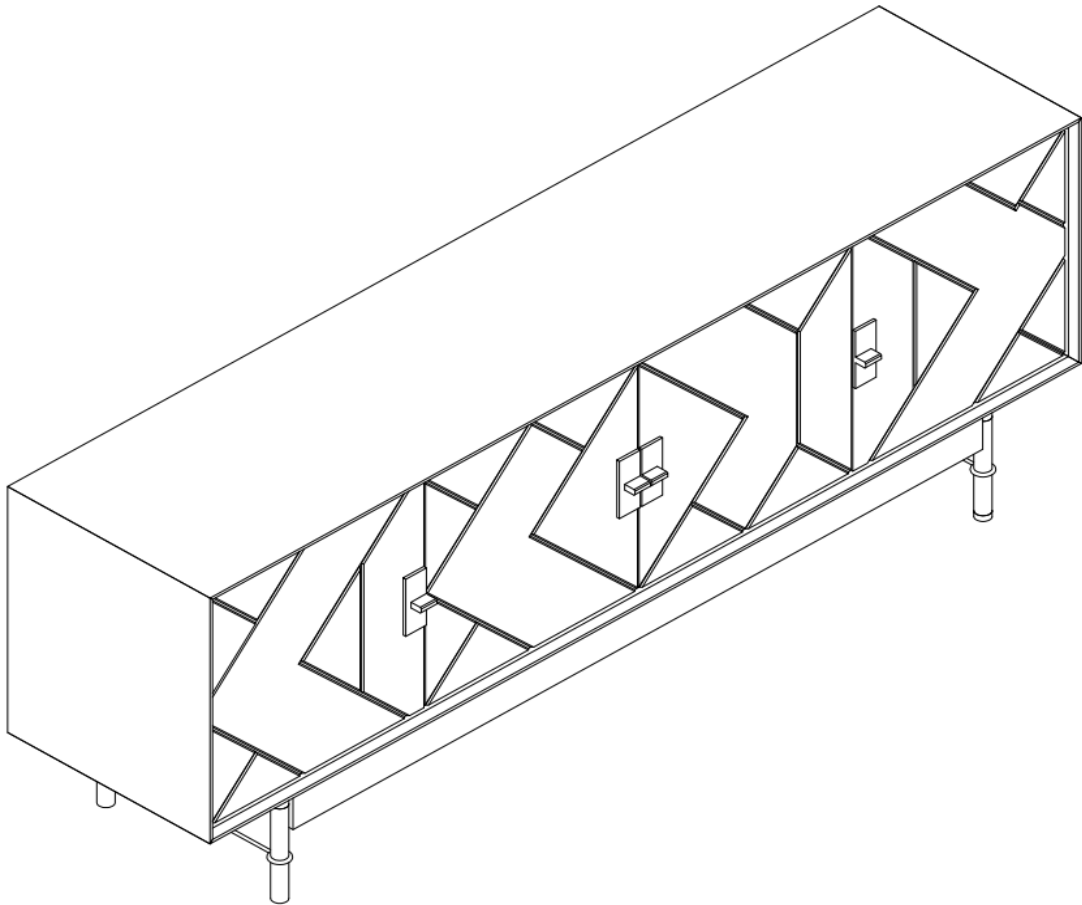

Parts List

NO.	Drawing	Dimension	QTY
1		1680*390*15mm	1
2		430*390*15mm	2
3		400*358*15mm	2
4		400*358*15mm	1
5		1680*390*15mm	1
6		404*340*15mm	2
7		395*340*15mm	2
8		415*205*4.5mm	2
9		407*205*4.5mm	2


NO.	Drawing	Dimension	QTY
10		415*205*4.5mm	2
11		407*205*4.5mm	2
12		394*409*18mm	1
13		394*409*18mm	1
14		394*409*18mm	1
15		394*409*18mm	1
16		1330*70*15mm	2
17		1331*25*25mm	2
18		360*25*200mm	2
19		260*25*200mm	1

Hardware Fitting


NO.	Drawing	QTY
A		12
B		12
C		4
D		32
E	 3.0*14mm	32
F	 3.5*14mm	48
G	 6*35mm	22
H	 4*18mm	4

NO.	Drawing	QTY
I	 6*22mm	1
J	 L405mm	2
K	 L397mm	2
L		8
M		16
N	 3.5*35mm 3.5*14mm	2
O		4
P		4
Q	 6*10mm	1



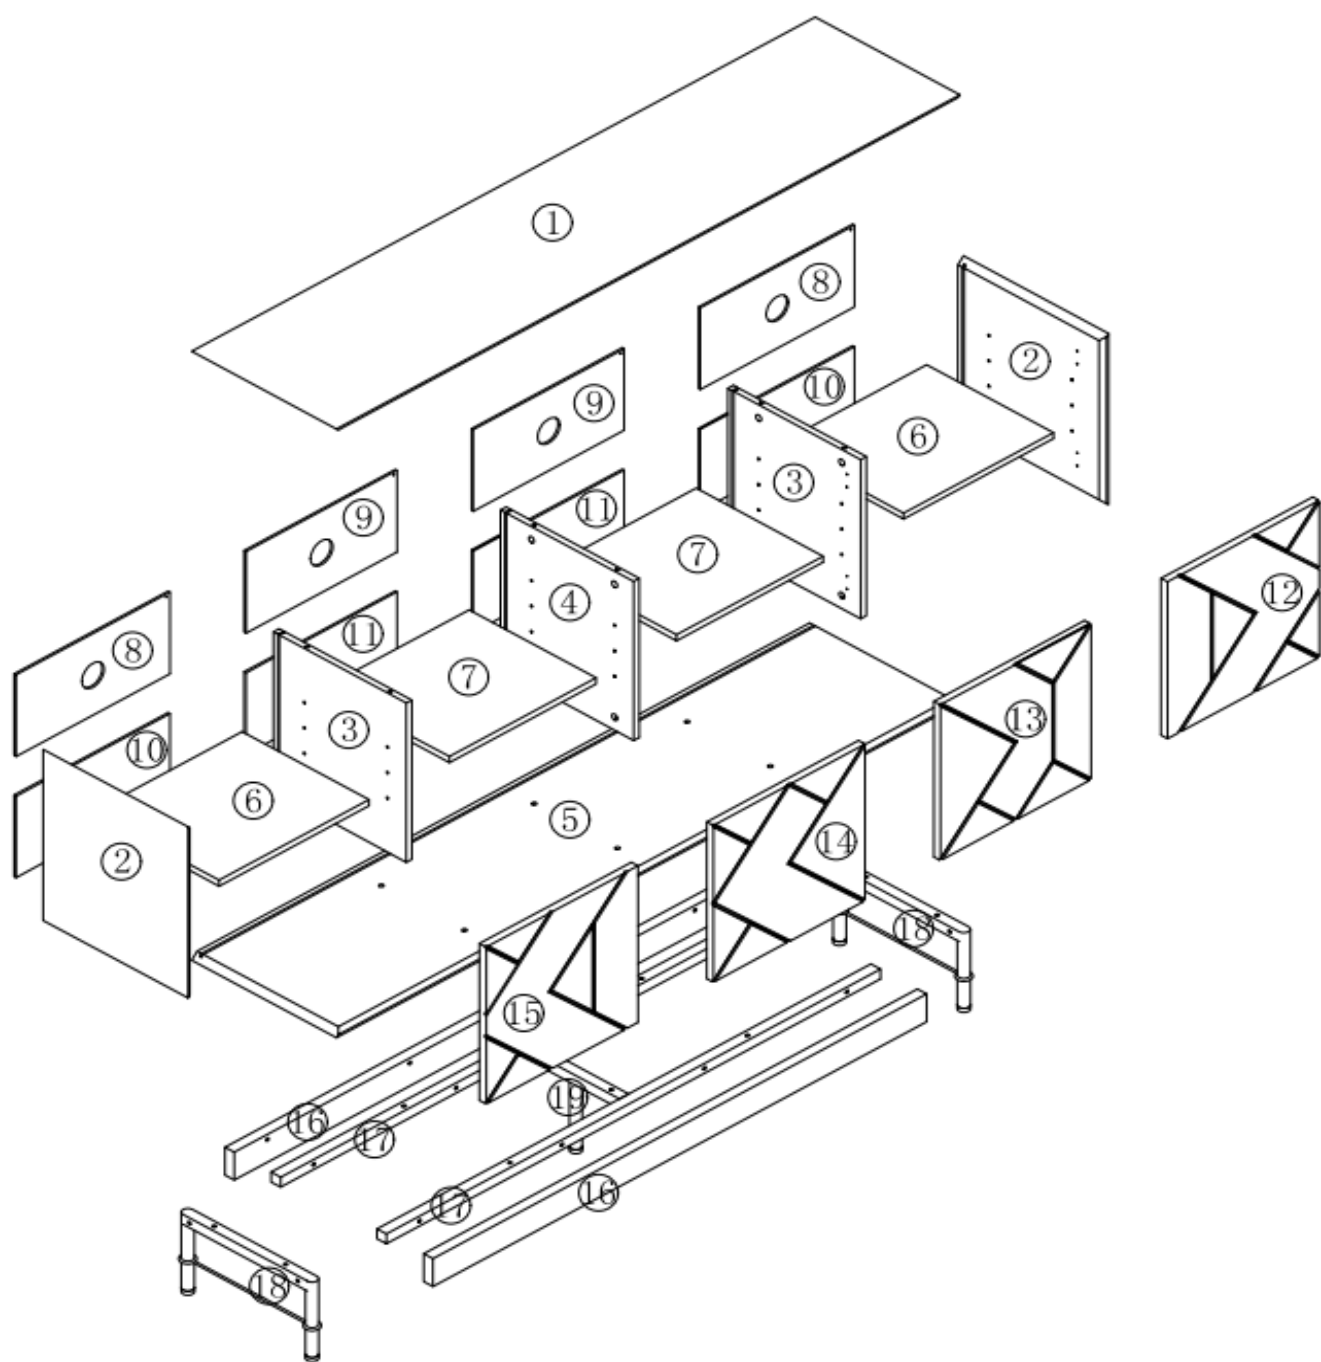


Cam Coupling Using Methods

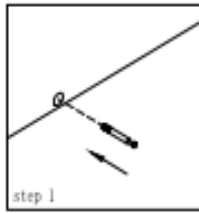


Step1.

Connect the cam coupling A as directed in the assembly instructions using hand.

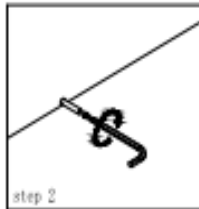


Step2.

Screw the cam coupling A as directed in the assembly instructions.

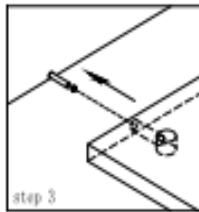


Step3.

Push the cam coupling A into the entry hole.

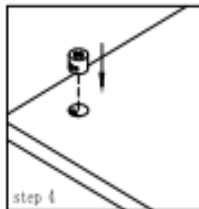


Step4.

Insert the cam coupling B as shown in the instructions.

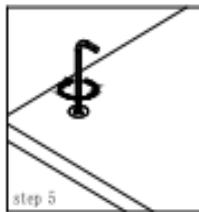


Step5.

Turn the cam coupling B clockwise with a screwdriver

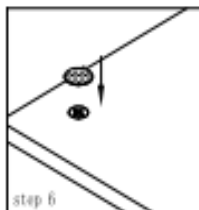

Step6.


Put on Beautycam.

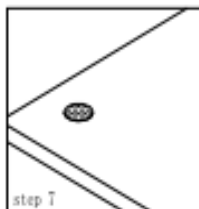


Step7.


Finished.


You should feel a click when the camlock is locked in place.
The joint is now secure.

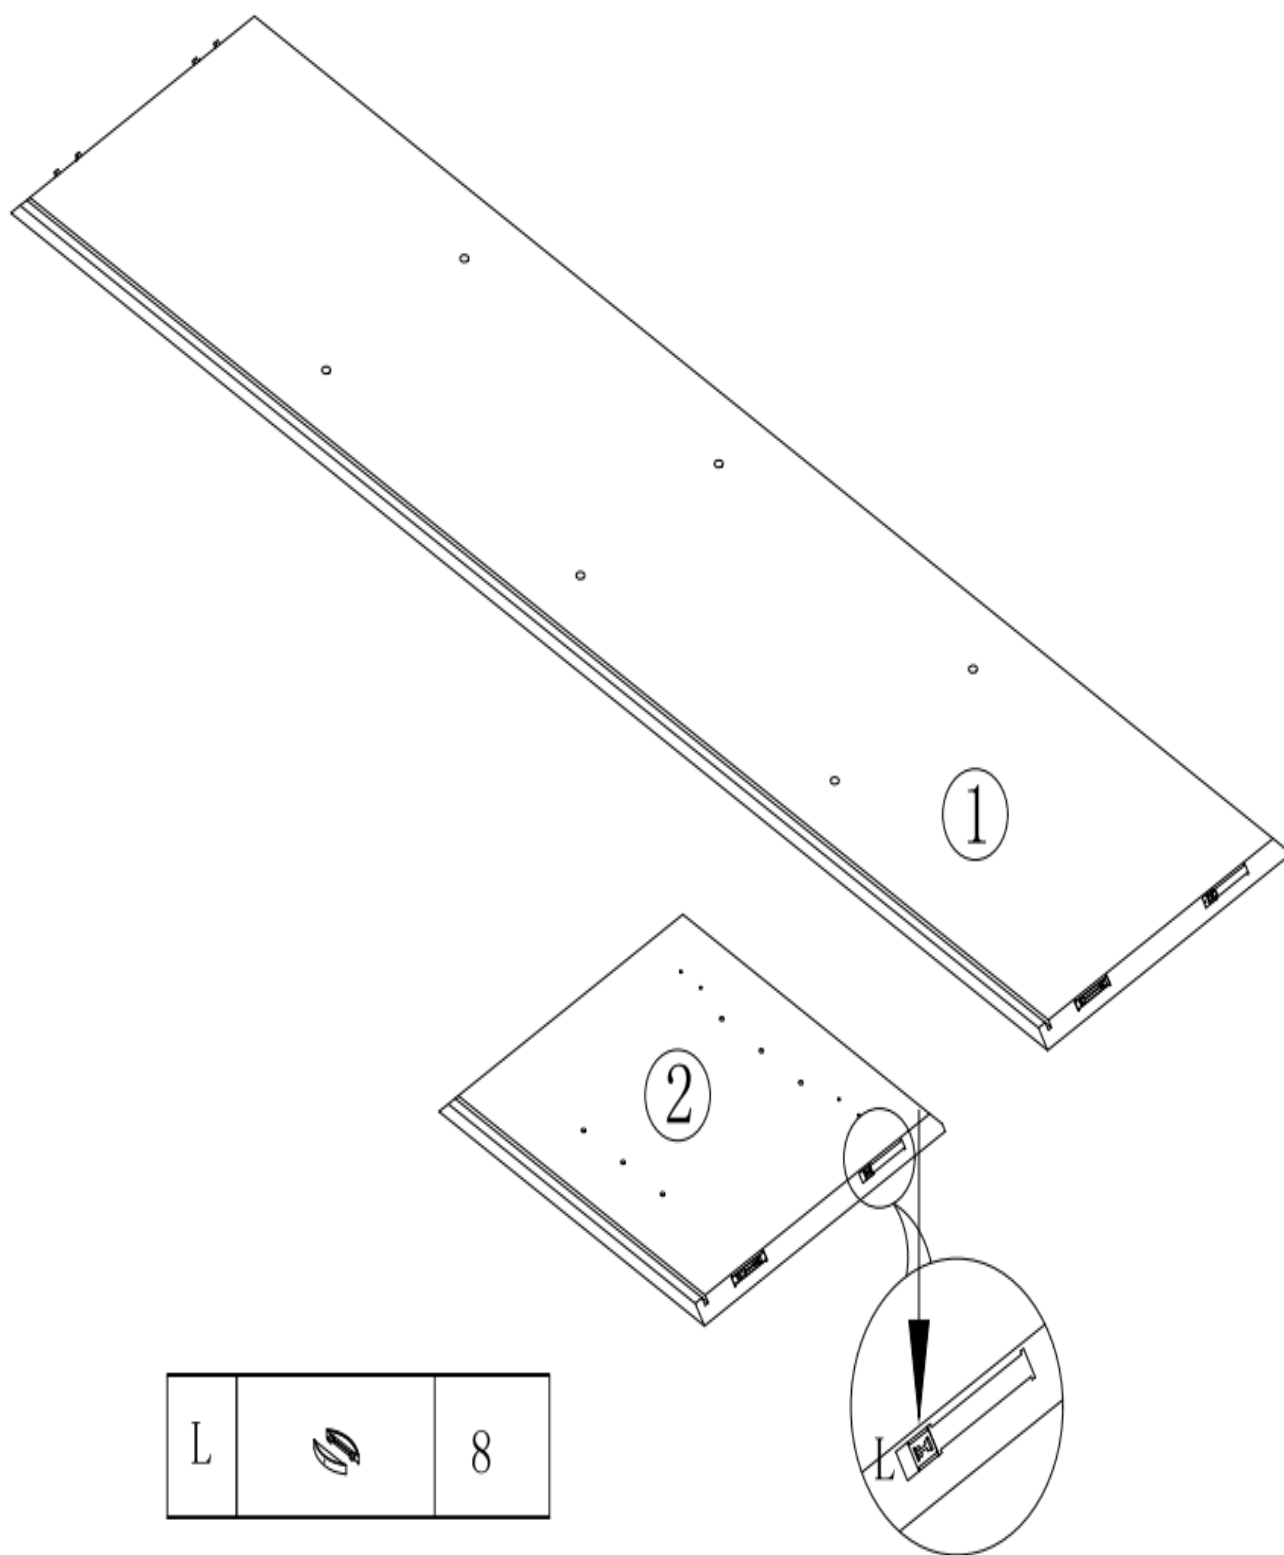



L		8
---	---	---

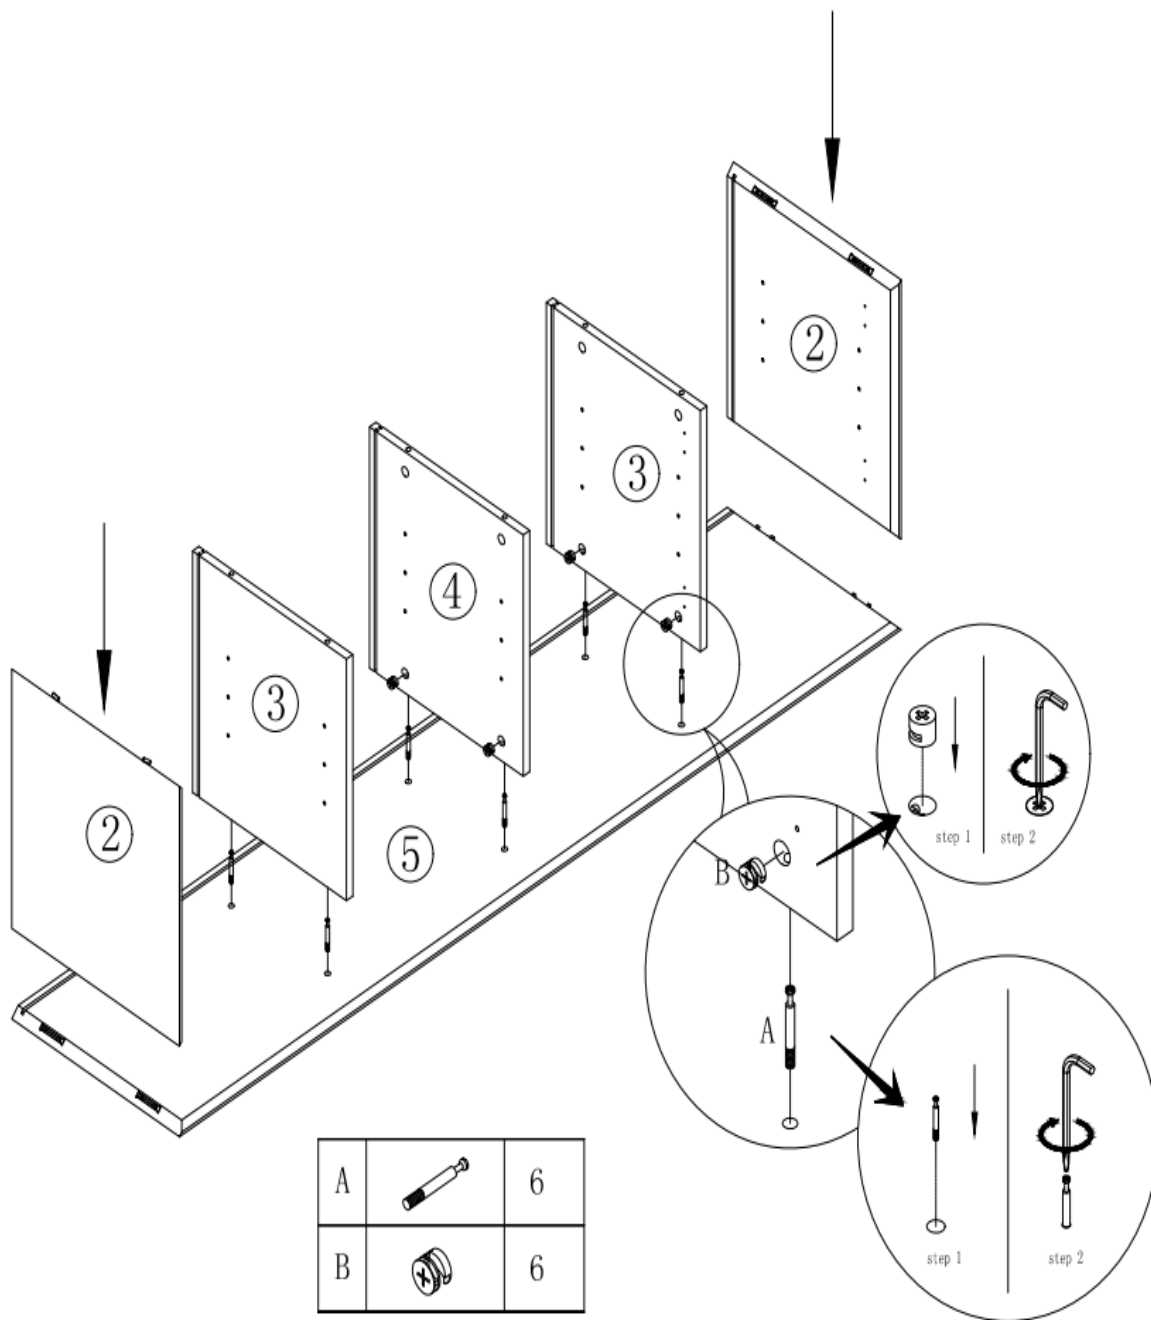

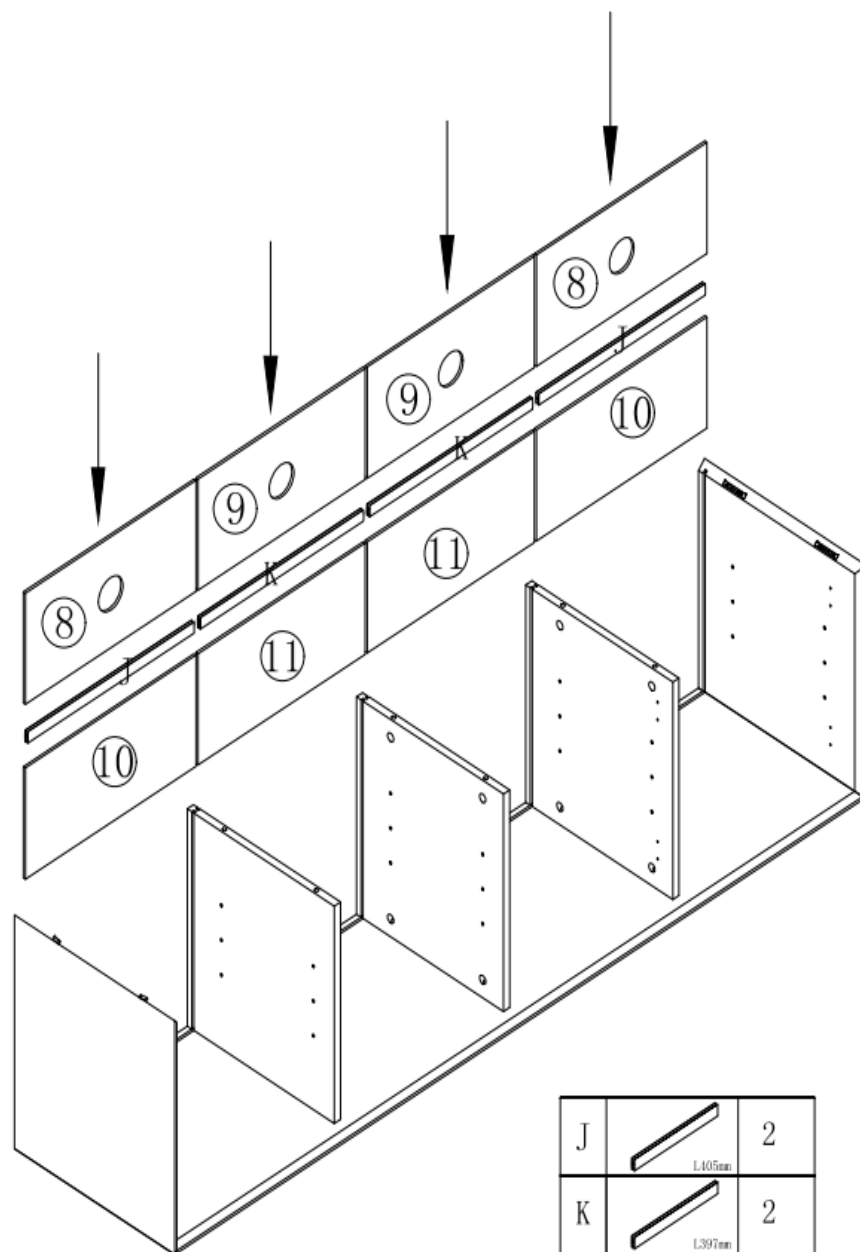


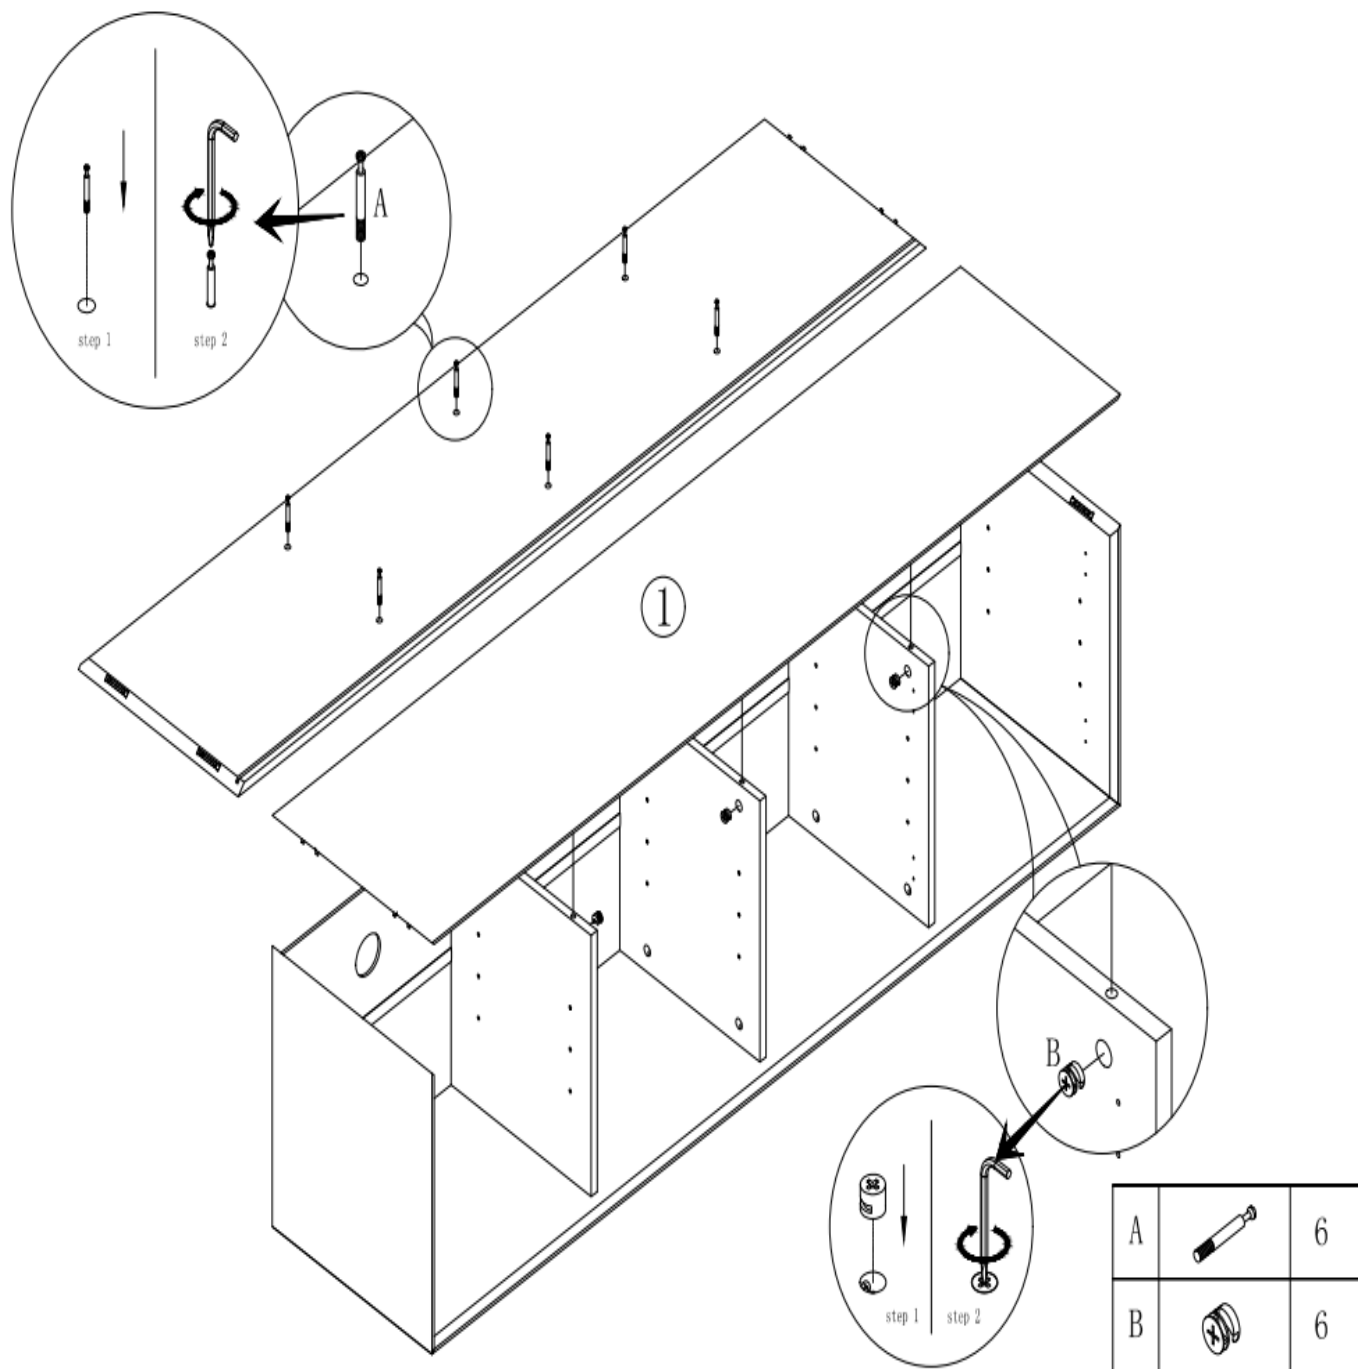

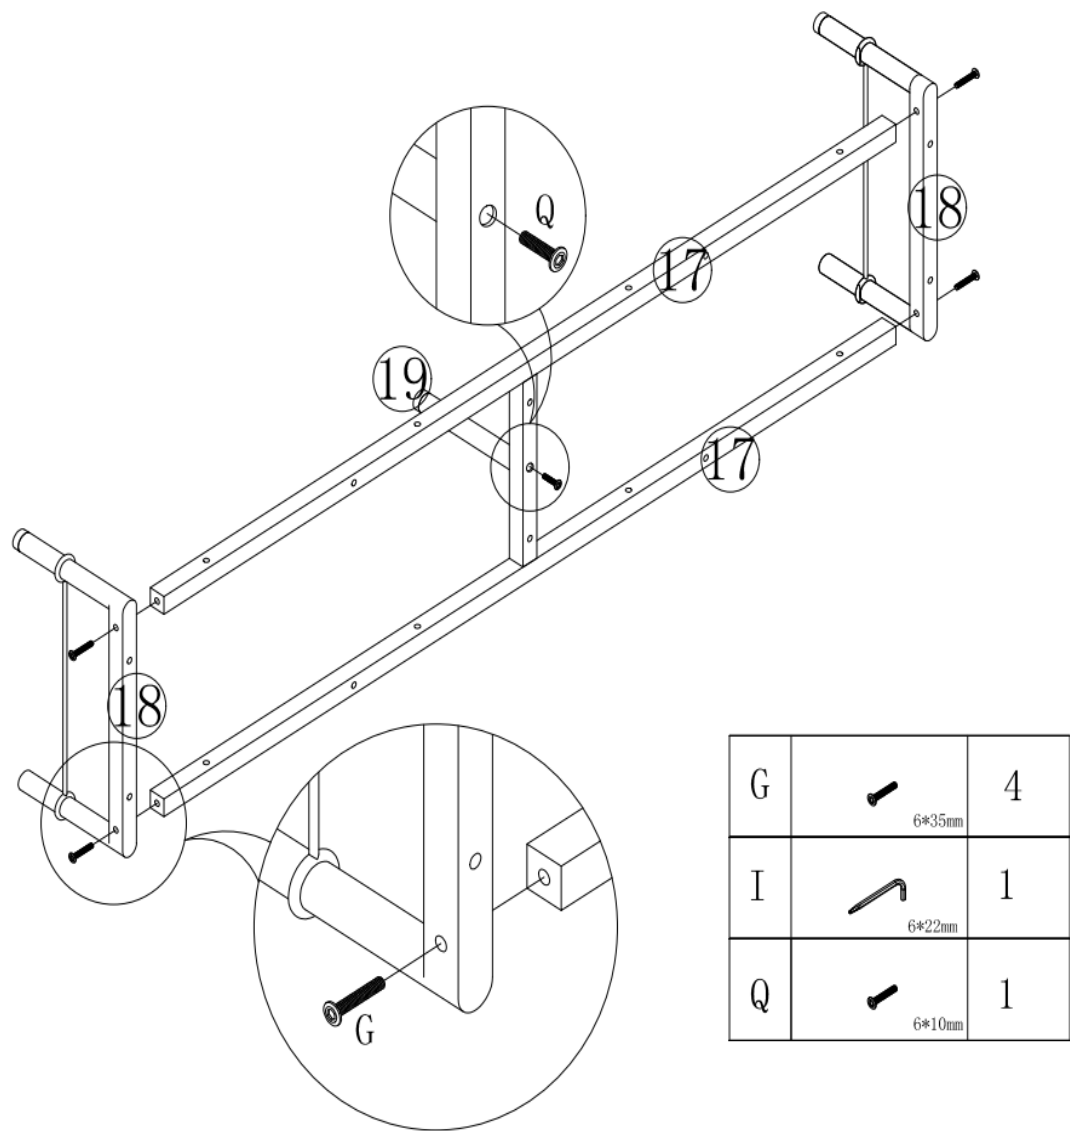


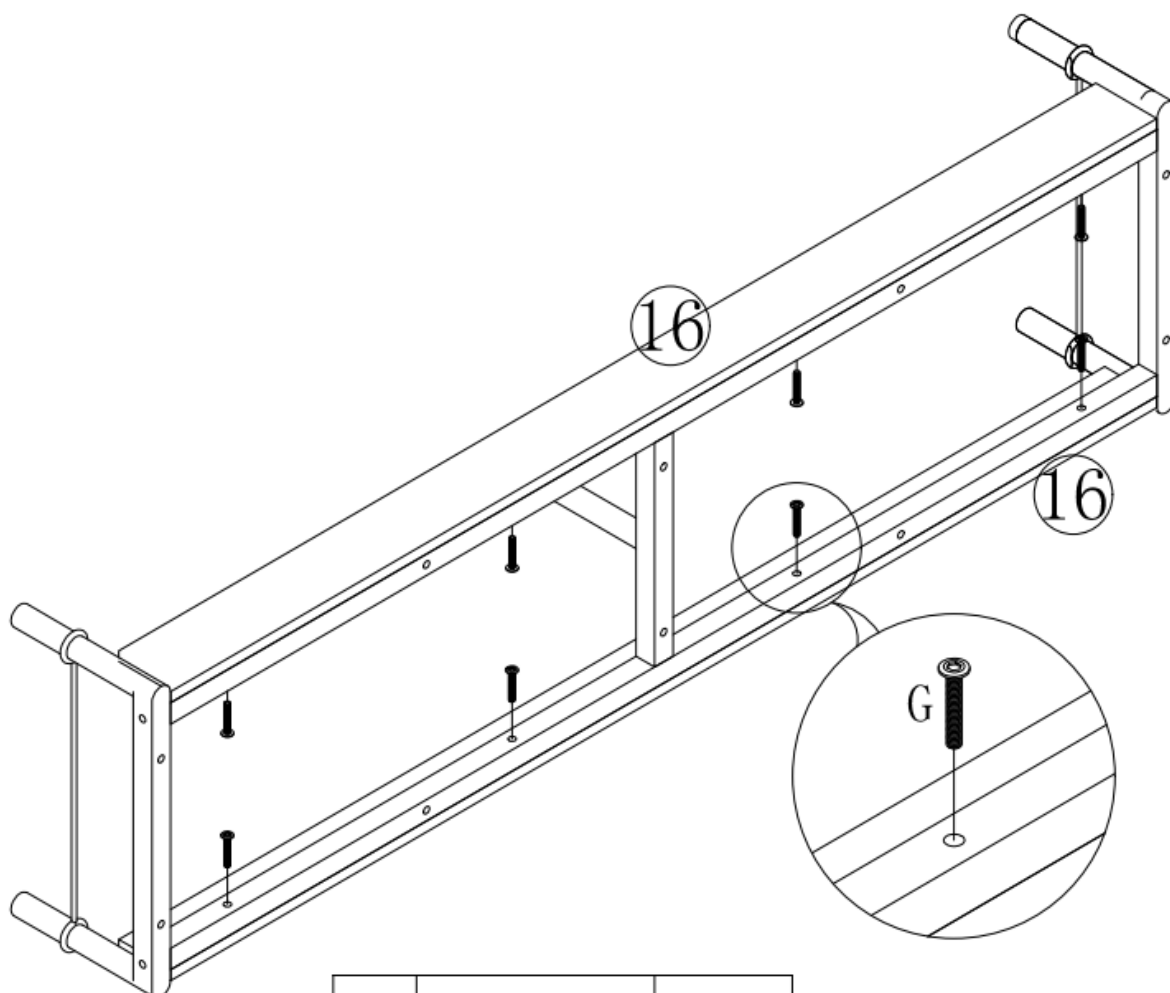



G	 6*35mm	8
I	 6*22mm	1

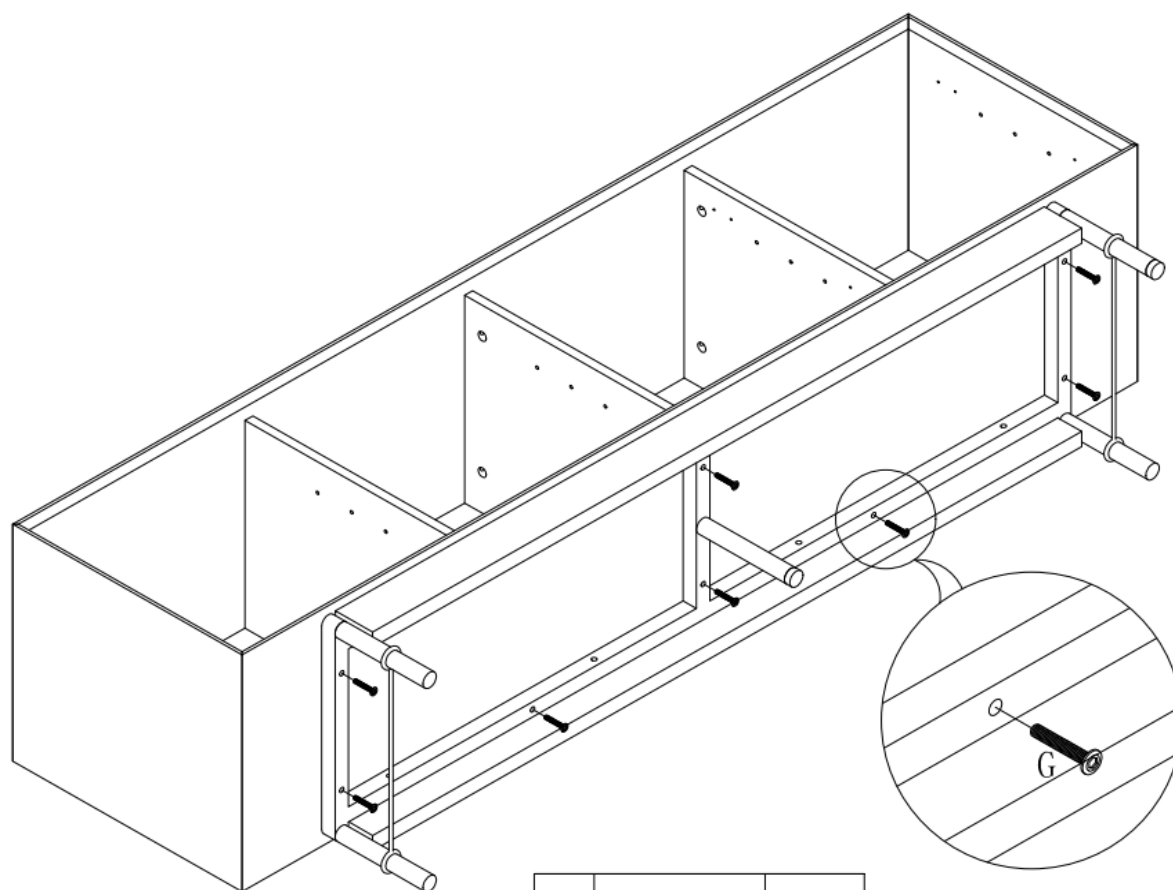



G	 6*35mm	10
I	 6*22mm	1

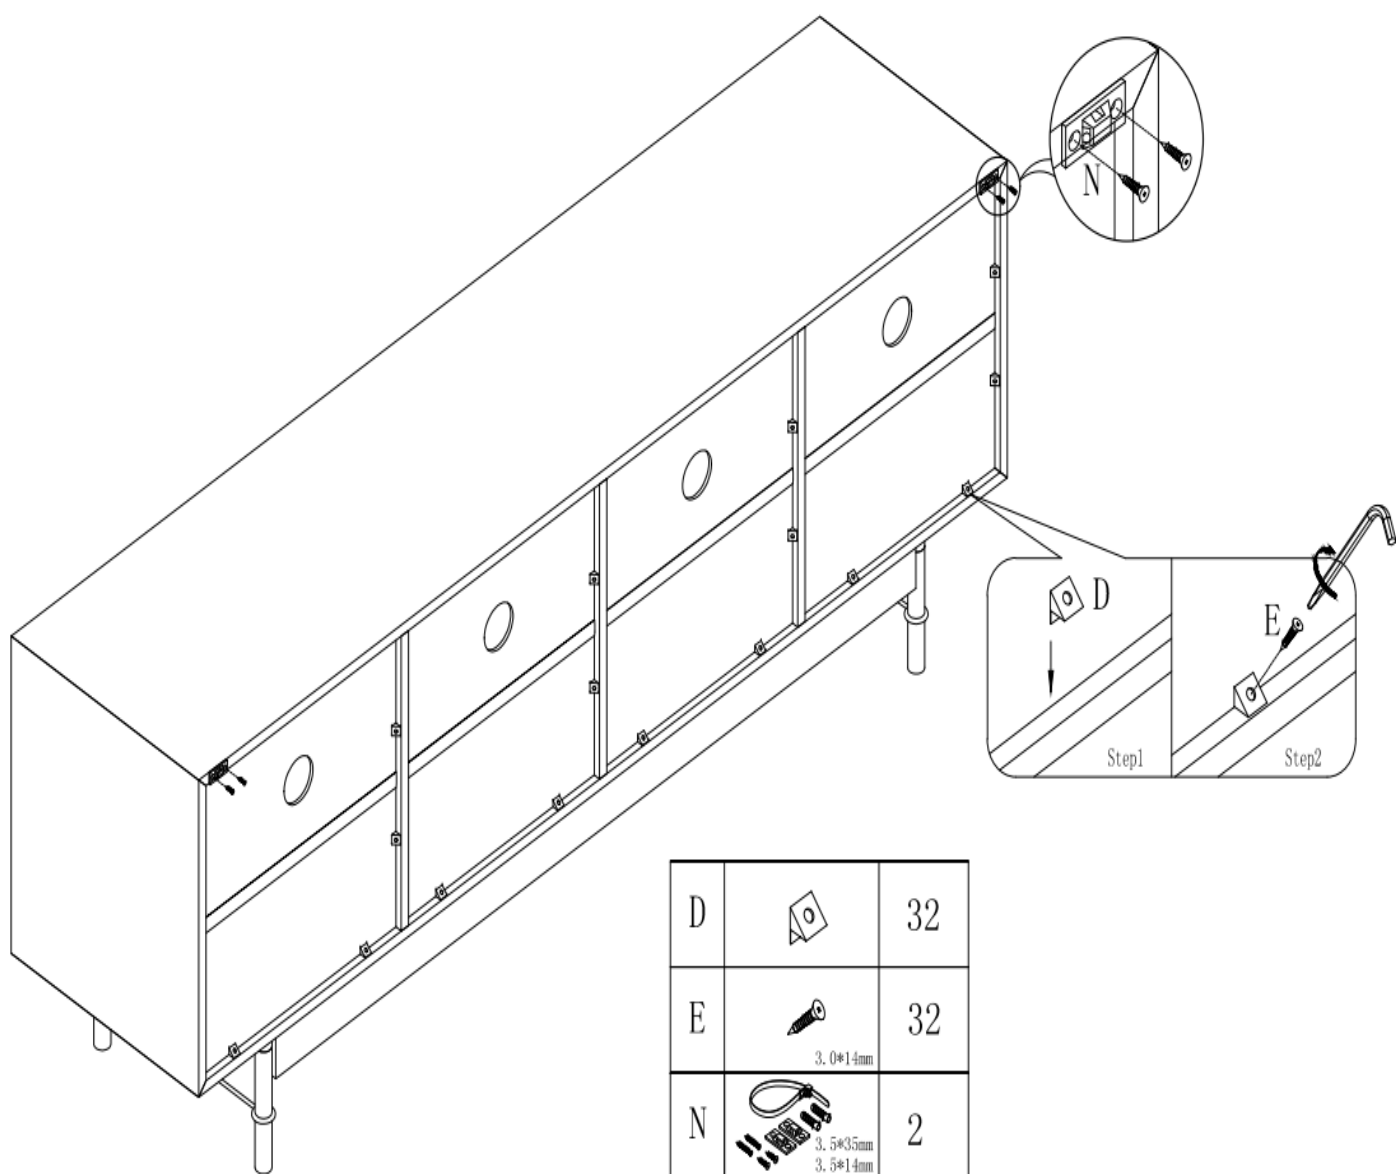


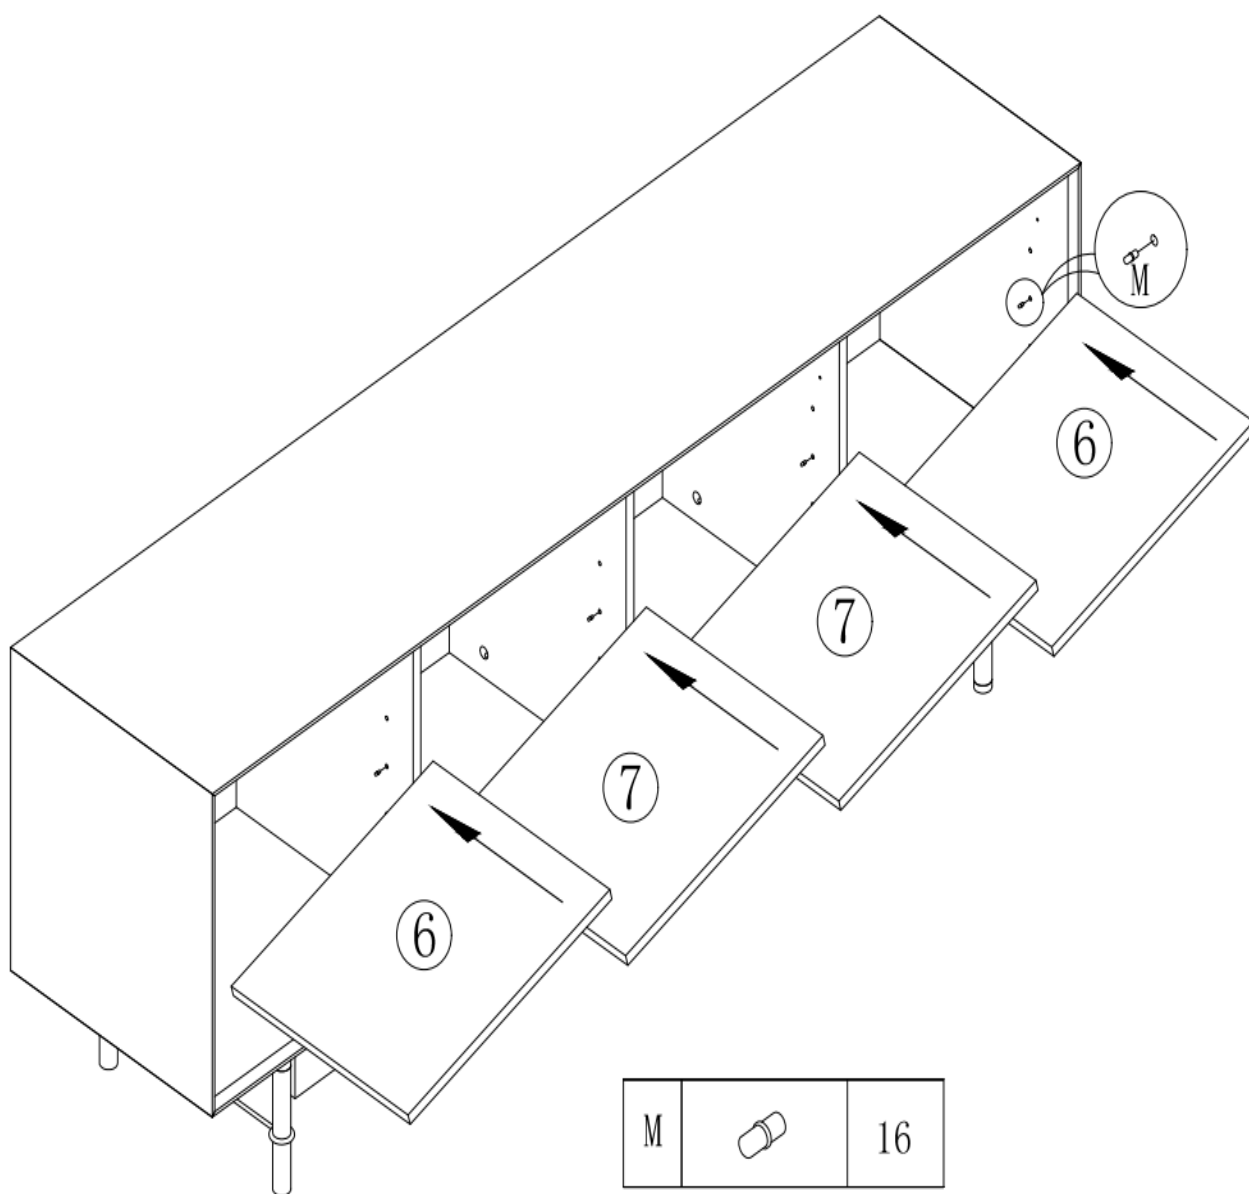

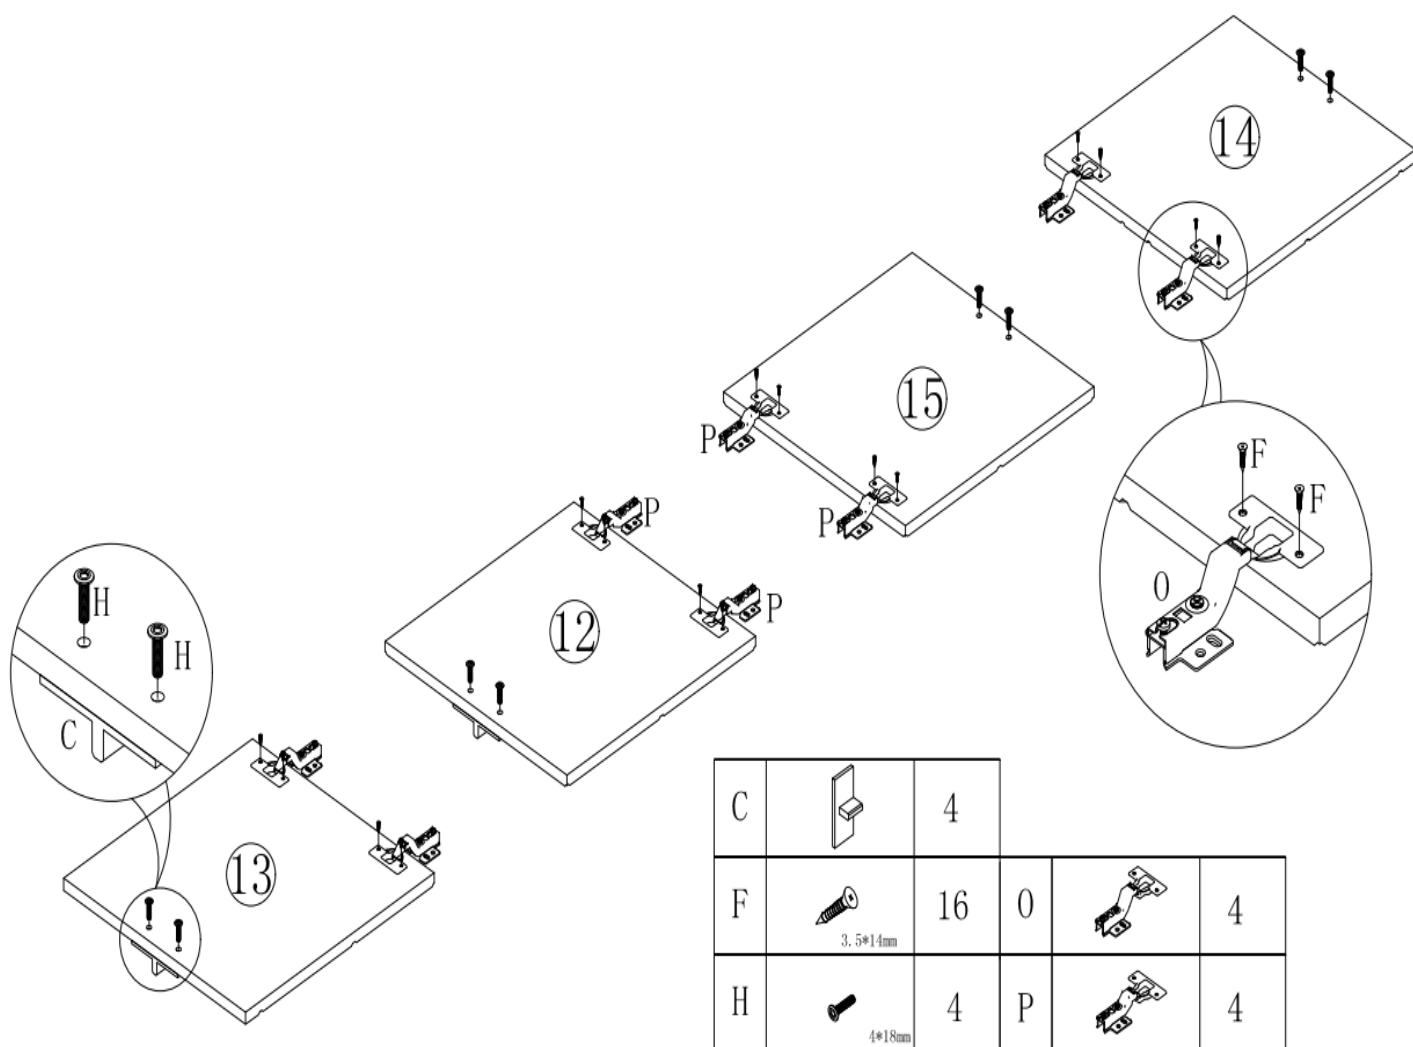

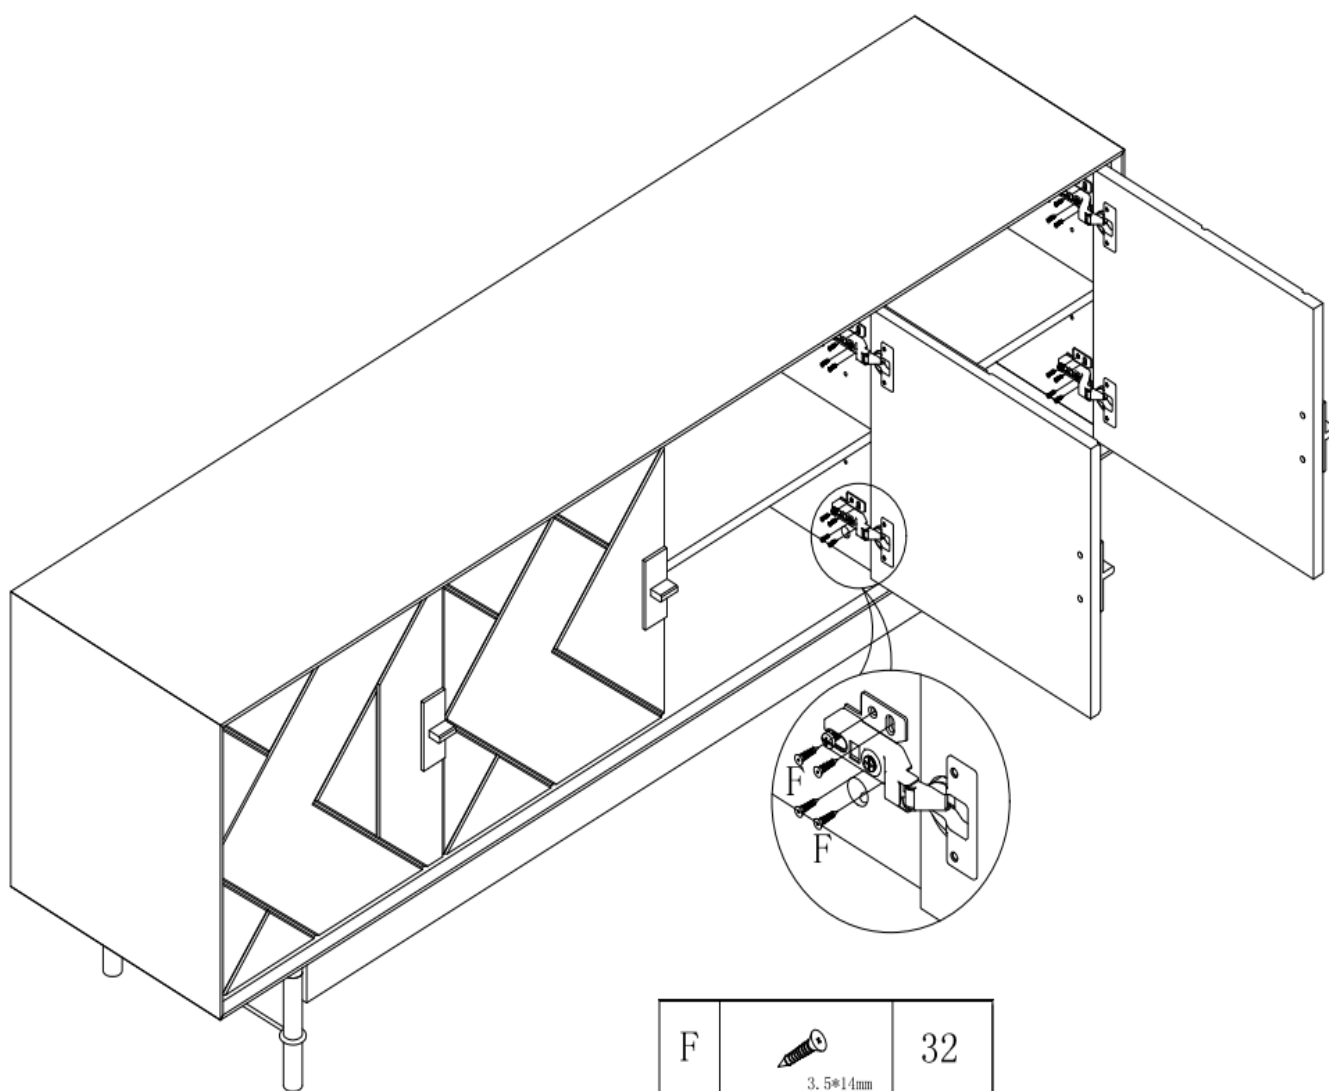

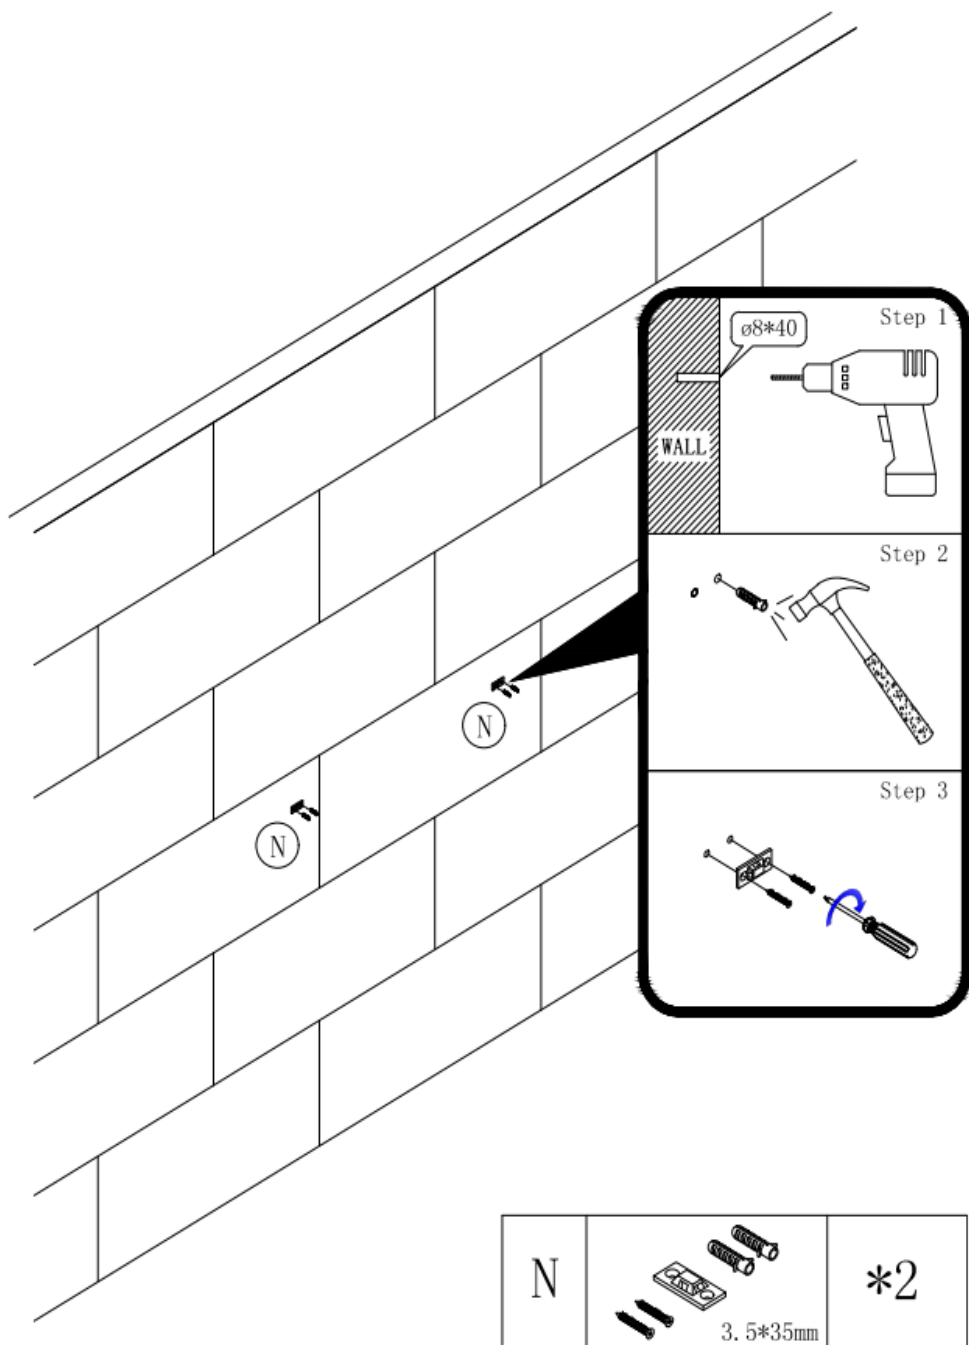

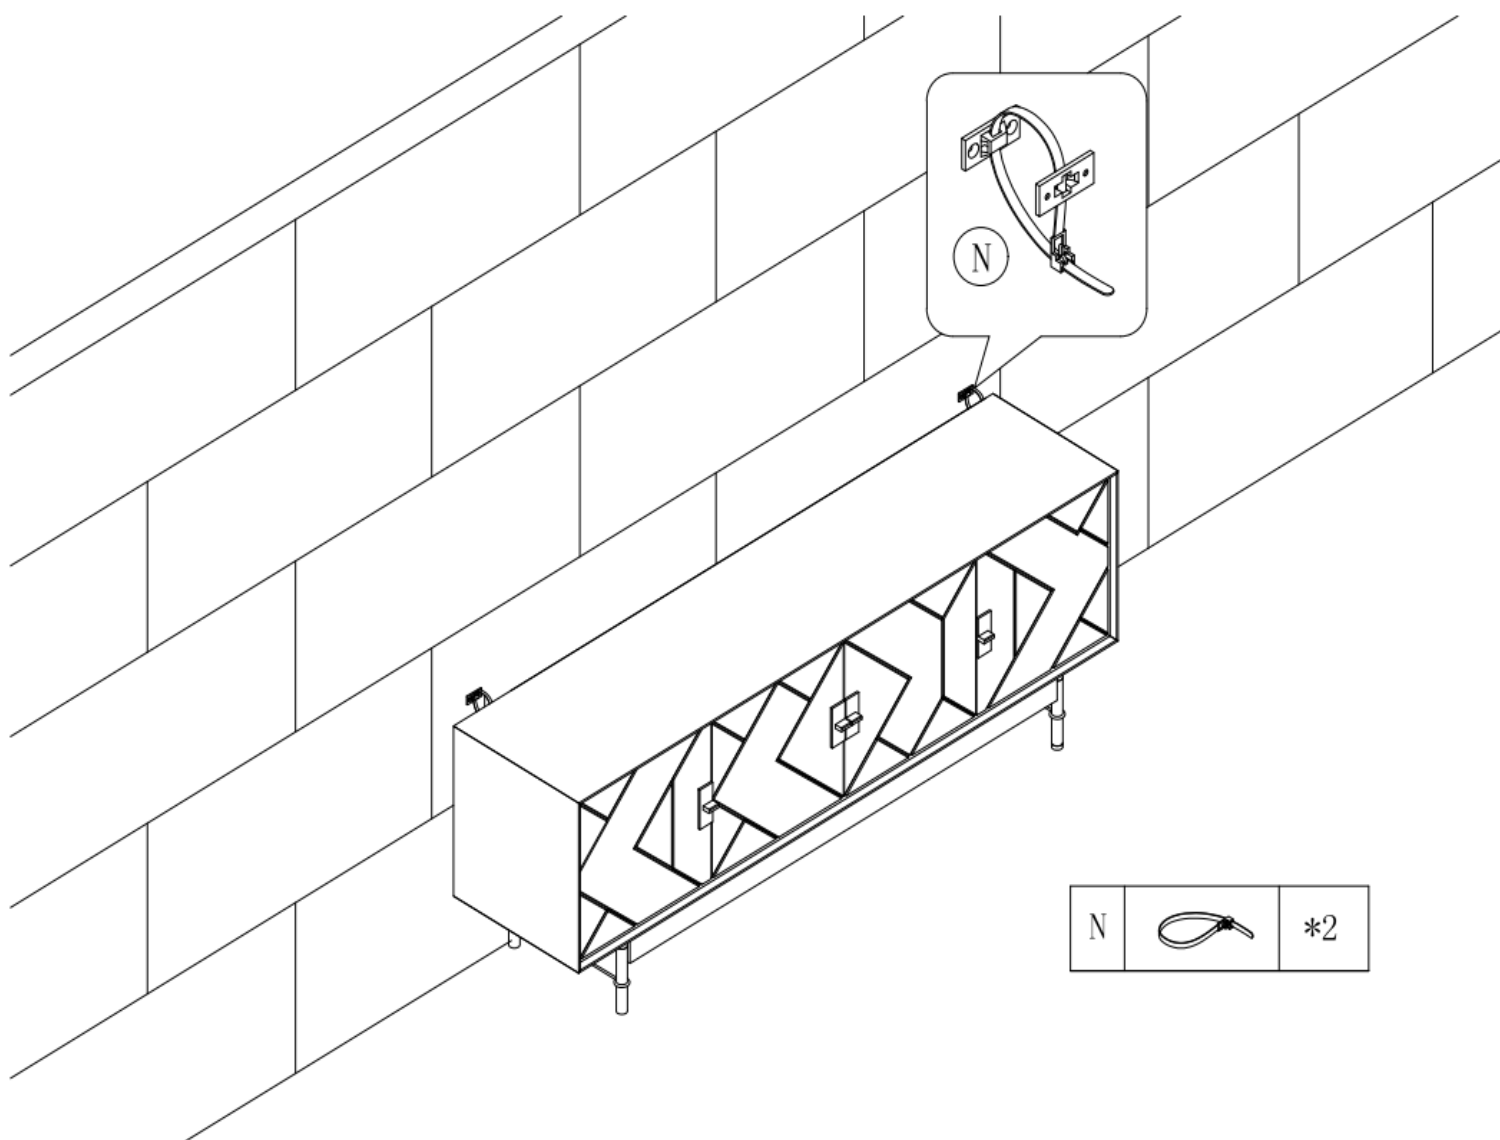

N		*2
---	---	----

PLEASE DO NOT RETURN TO STORE



Please do not return this product to the retailer!
We are able to assist you in ANY way!

If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.