JAMIE YOUNG Cº

SEAWALL BEADED CONE SCONCE BLUE

4SEAW-COBL

SAFETY, INSTALLATION & CARE INSTRUCTIONS

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS

READ THESE INSTRUCTIONS COMPLETELY BEFORE STARTING

We strongly recommend that all direct-wired lighting products be installed by a licensed electrician. Two people may be required for installation. DO NOT EXCEED the rated bulb wattage. Keep flammable materials away from bulb. This light fixture is shipped with all internal wiring intact. Do not open the product or alter the wiring in any manner.

Installation requires an electrical junction box in the wall sufficient to support the weight of the fixture.

This fixture weighs: 1.800 Kgs / 3.96 lbs

WARNING: Be certain that the power to the electrical junction box is turned off at the Circuit breaker before installation. Turning the power off at a light switch is not Sufficient to prevent electrical shock.

CAUTION: Prior to installation, locate All INCLUDED PARTS before disposing of packaging materials.

Tools Required For Installation	
Screwdriver	Pliers
Electrical Tape	Wire Connectors
Wire Cutters	Adjustable Wrench

Parts not included but required	
A.	Wall Outlet Junction Box
B.	Ground Junction Box Wire
C.	Hot Junction Box Wire
D.	Neutral Junction Box Wire

Parts Included / Referenced (See Figure 1):			
E.	Sconce Cord	K.	Neutral Fixture Wire
F.	Mounting Bracket	L.	Wire Connectors
G.	Mounting Screws	M.	Backplate
H.	Ground Screw	N.	Backplate Screws
I.	Ground Wire	O.	Backplate Top Screws
J.	Hot Fixture Wire		

JAMIE YOUNG Co

SEAWALL BEADED CONE SCONCE BLUE

4SEAW-COBL

SAFETY, INSTALLATION & CARE INSTRUCTIONS

Installation Procedure (Refer to figure on pg.3):

1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER.
2. Carefully unpack all fixture parts and hardware and lay them out on a clean work surface.
3. Now, remove the shade from the backplate of the fixture by rotating all four (4) top screws in a counter-clockwise motion (Fig.1 on Page 3). Place the shade aside for now.
4. Adjust the fixture's power cord (E) position from the Backplate (M) based on the wall outlet junction box.
5. If needed, cut off any extra length of wire cord cable (E). When cutting the power cord, be sure to cut it so that it is at least 6" (152.4mm) long inside the Ceiling Outlet Junction Box (A). To prepare the cut power cord for installation process, use wire strippers to prepare the ends of the two wires so that there is about 1/2" of exposed wire for the Plastic Wire Connectors (L).
6. Gently pull existing Ground Wire (B), Hot (C), and Neutral (D) Junction Box Wires down from the wall Junction Box (A) (Fig.2 on Page 4).
7. Carefully inspect the Wall fixture's wires. The Neutral Fixture Wire (K) is White. The Hot Fixture Wire (J) is Black, and the Ground Wire (I) is Green.
8. Attach the Ground Wire (I) from the fixture to the Ground Junction Box Wire (B); It usually has green insulation around it or is bare wire. Fasten them together with a plastic wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands area exposed. If your Wall Outlet Junction Box (A) does not have a Ground Junction Box Wire (B), insert the Ground Screw (H) into the Mounting Bracket (F) where it's marked "Ground", and wrap the fixture's Green Ground wire around the Ground Screw (H). Tighten the screw to clamp the Ground Junction Box Wire (B) between the Ground Screw (H) head and the Mounting Bracket (F). It is imperative that the Wall Junction Box (A) in your home be properly grounded.

9. Connect the Neutral Fixture Wire (K) to the Neutral Junction Box Wire (D); it usually has white insulation around it. Fasten them together with a plastic wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands area exposed.
10. Connect the Hot Fixture Wire (J) to Hot Junction Box Wire (C); it usually has black insulation around it. Fasten them together with a plastic wire Connector (L) and wrap the connection with electrical tape. Make sure that no wire strands area exposed. Do not reverse the hot and neutral connections or safety will be compromised.
11. Gently tuck the wire connections neatly into the wall outlet junction box (A).
12. Attached the Mounting Bracket (F) to the wall outlet junction box (A) using the mounting screws (G). Tighten the screws with the screw driver until secure.
13. Attach the backplate along with the fixture onto the wall.
14. Secure the backplate (M) to the wall by screwing the decorative screws (N) into backplate and mounting bracket.
15. After securing the backplate, loosly attach the shade by placing it on the backplate's alignment corner brackets with the top corner holes on the backplate using top screws (O). Do not over tighten at this point (Fig. 3 on Page 5).

16. Insert the Backplate Top Screws (O) into the bottom holes of Backplate and tighten them. Then, tighten the top shade screws completely

17. Insert One (1) 60W- maximum lightbulb Type A incandescent lightbulb (not included). Do not exceed the specified wattage.

18. Restore power to Wall Outlet Junction Box (A) and test the fixture.

CARE AND CLEANING

To clean, wipe the light fixture ONLY with a soft, dry cloth.

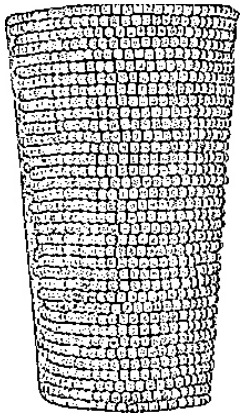
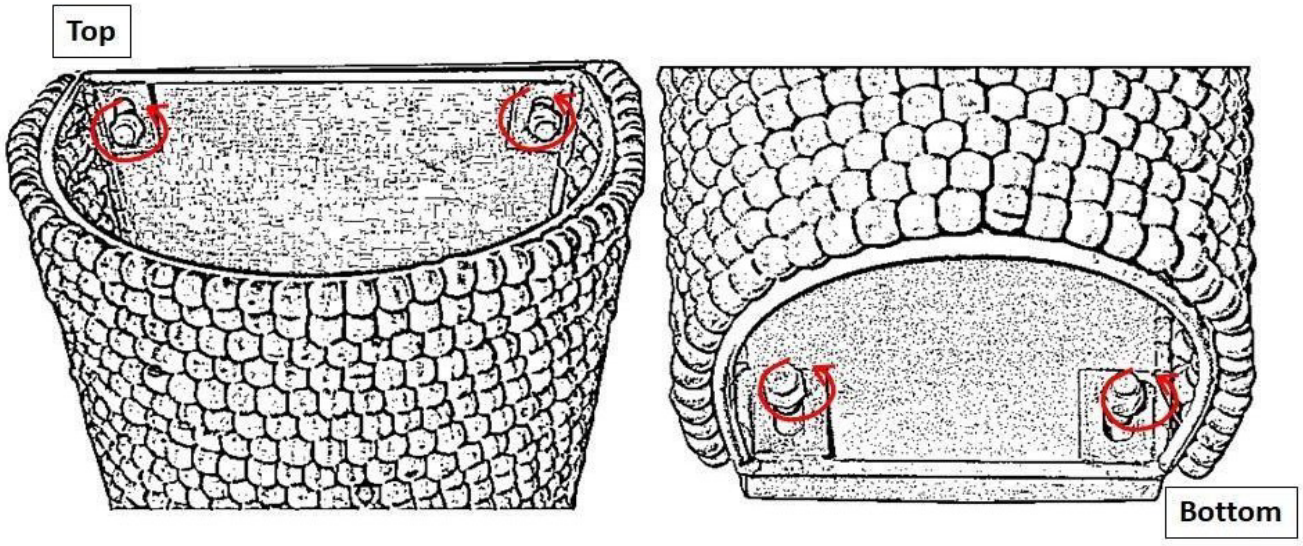


Fig1.






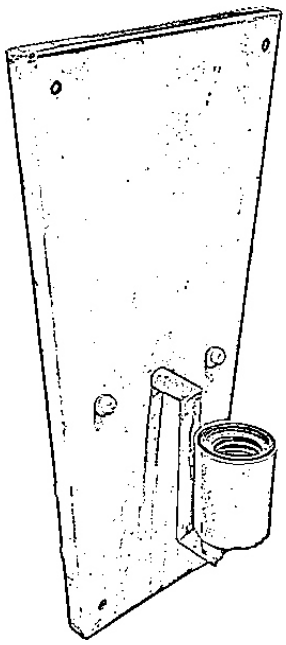


Fig2.

TOP VIEW:-

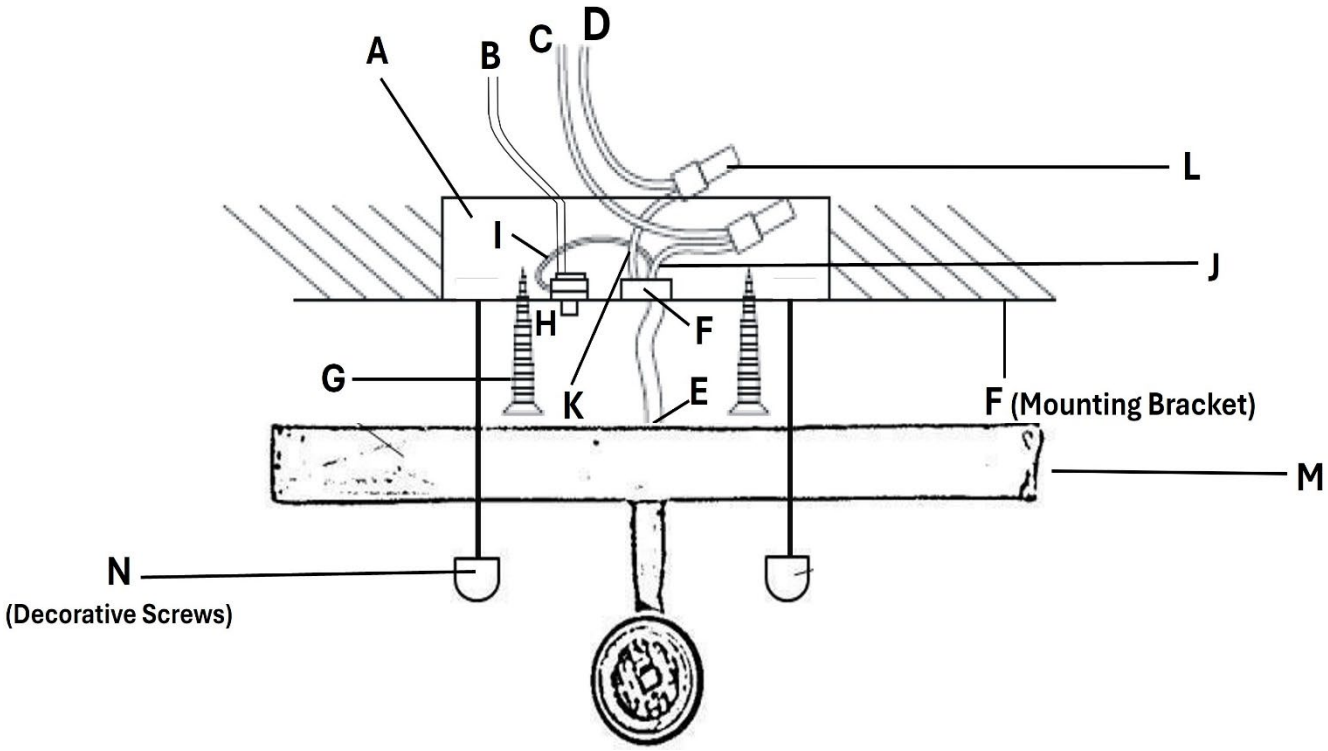

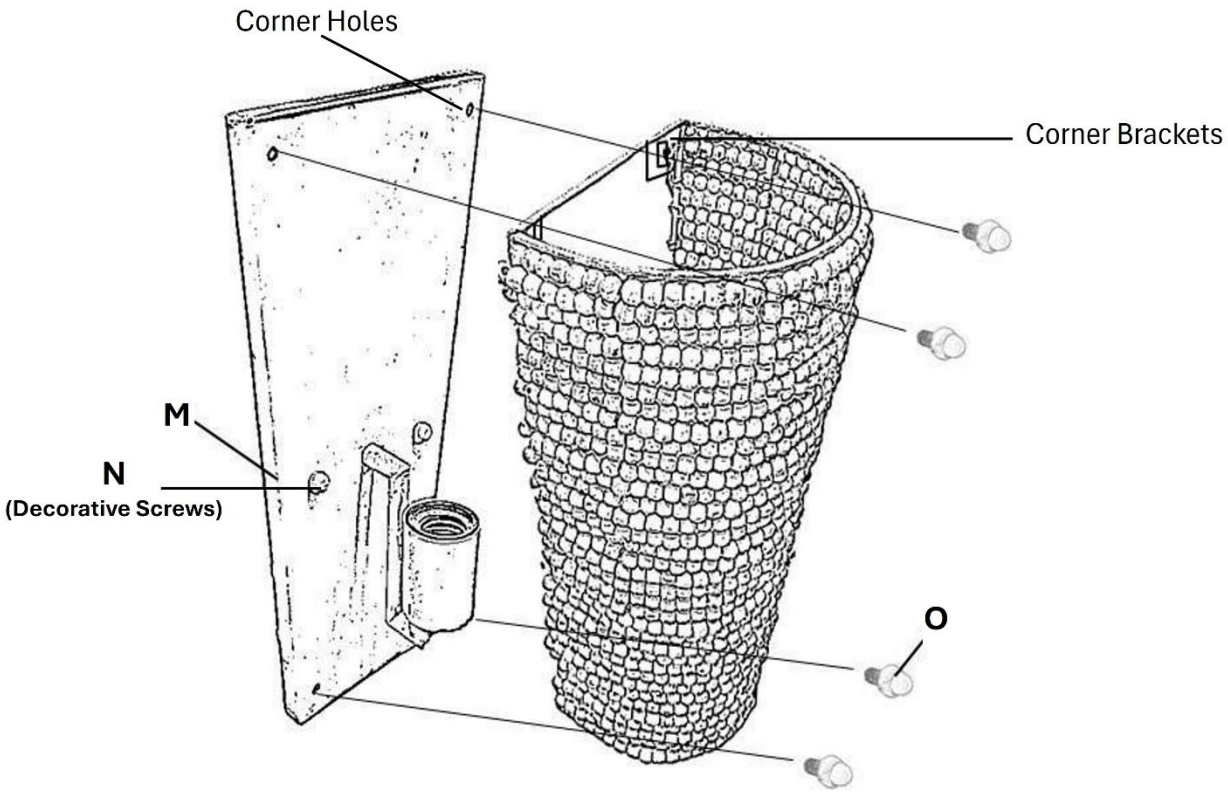

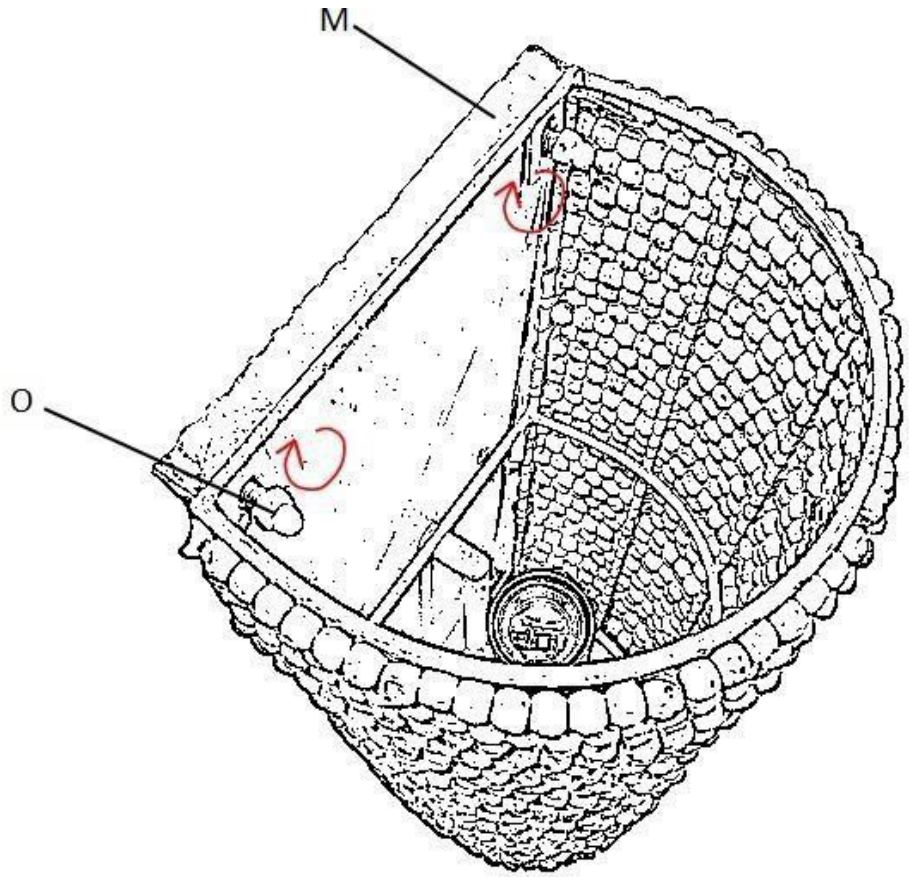

www.jamieyoung.com