

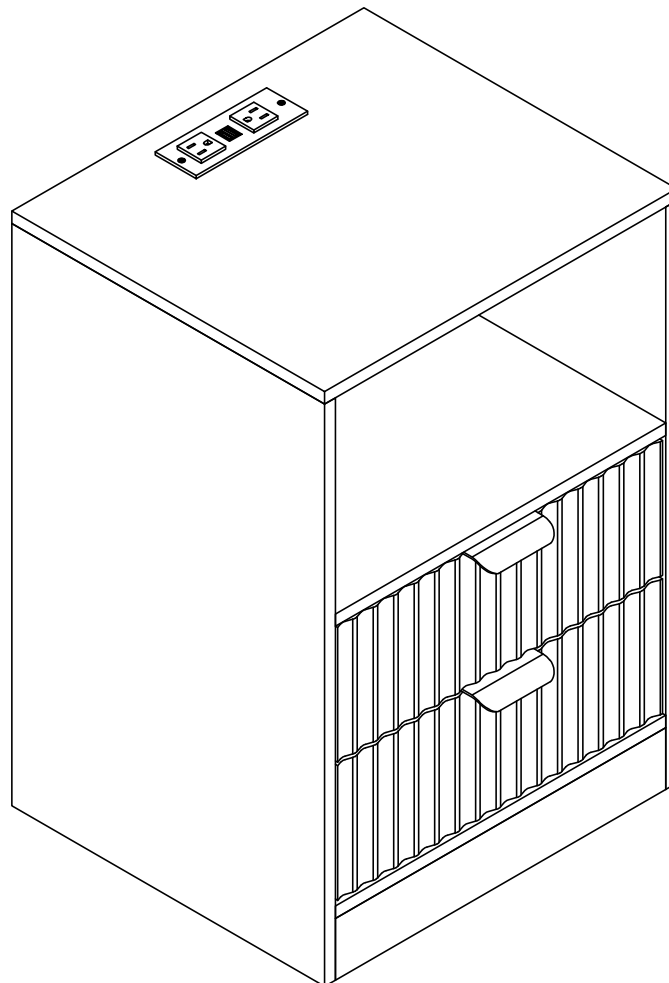
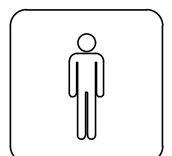


Installation & Assembly


Version:1.0

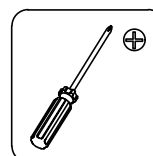


x2

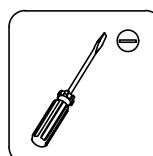


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

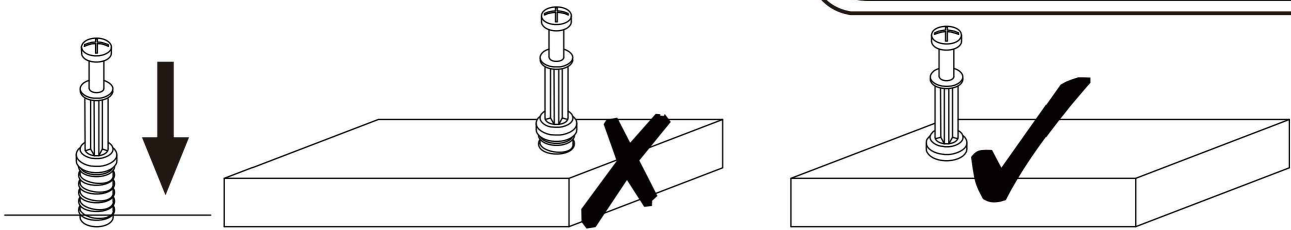


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

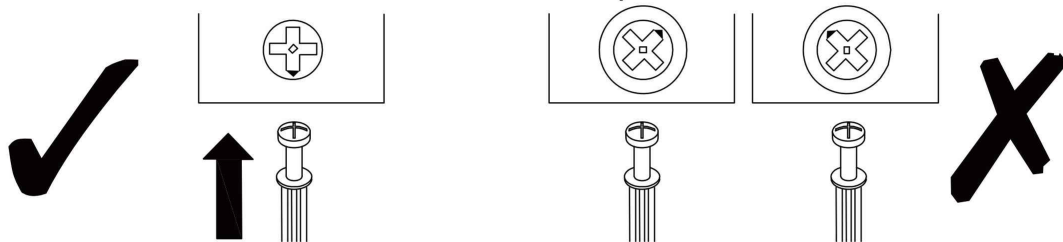









EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




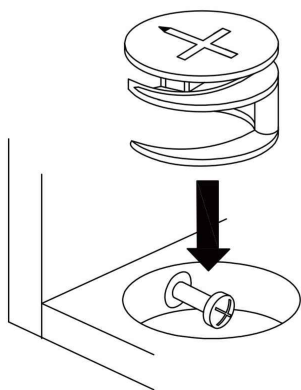



EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

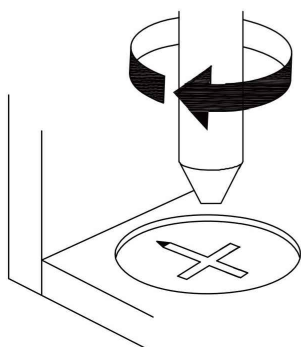


EN_Turn cam lock clockwise to tighten.

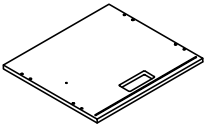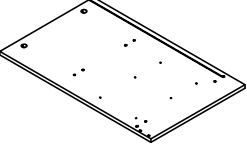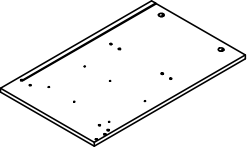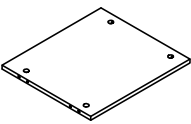NO.	PARTS	QTY	SPARE
1		x2	
2		x2	
3		x2	
4		x2	
5		x2	
6		x2	
7		x2	
8		x2	
9		x4	
10		x4	

NO.	PARTS	QTY	SPARE
11		x4	
12		x4	
13		x4	
14		x4	
	 Hardware Kit	x1	

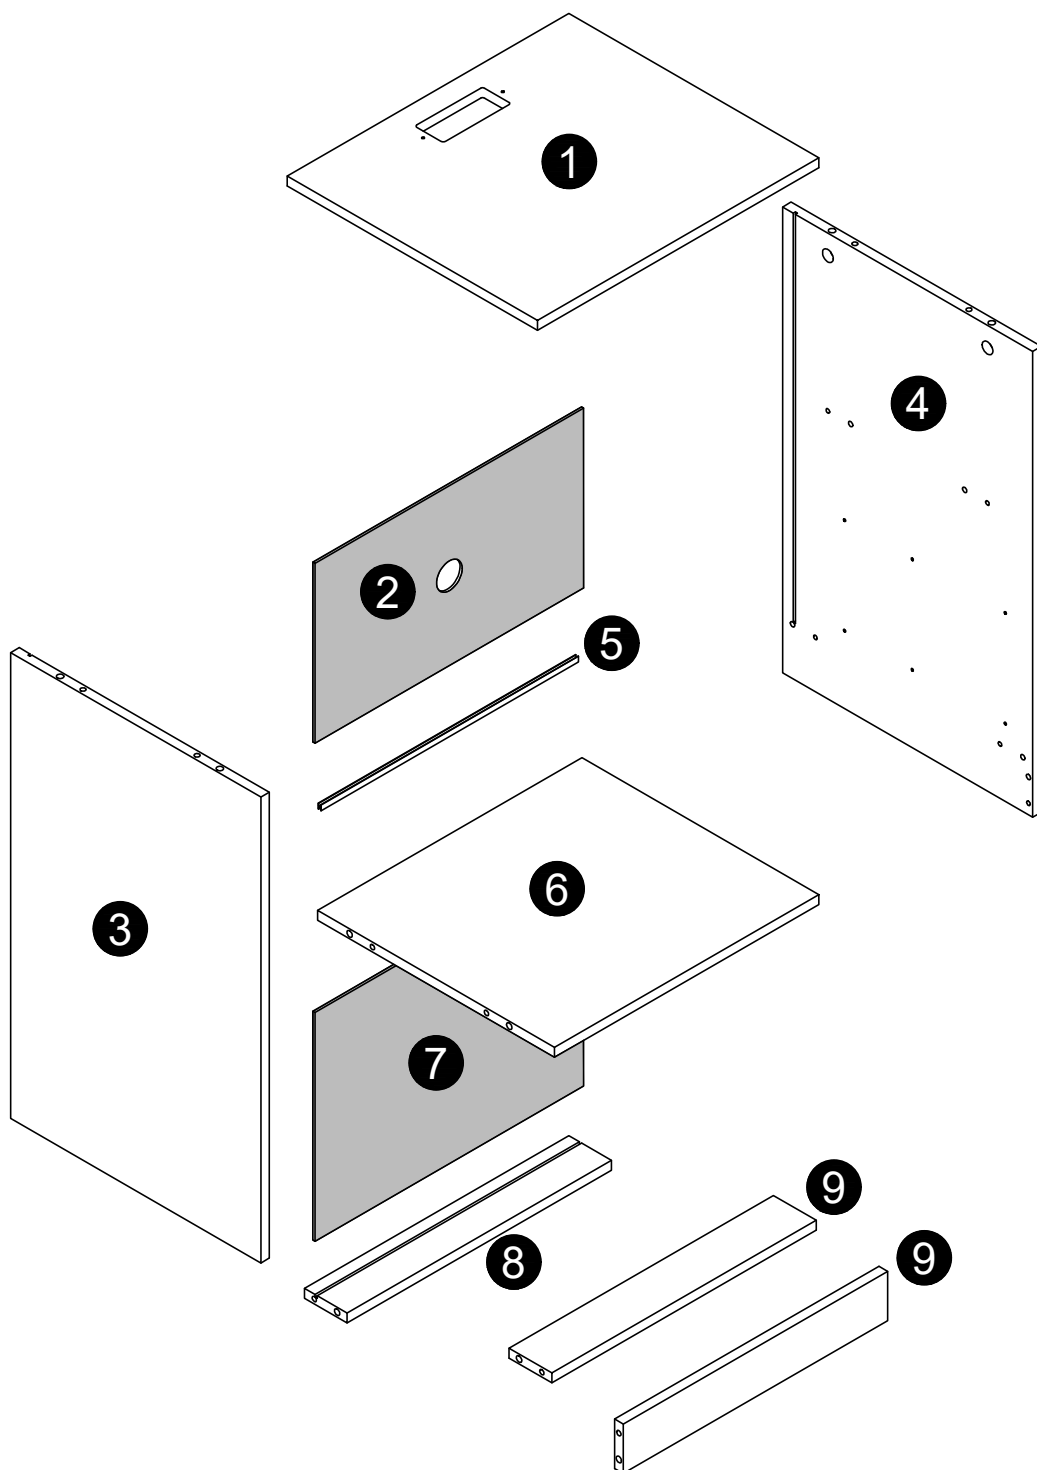

x2




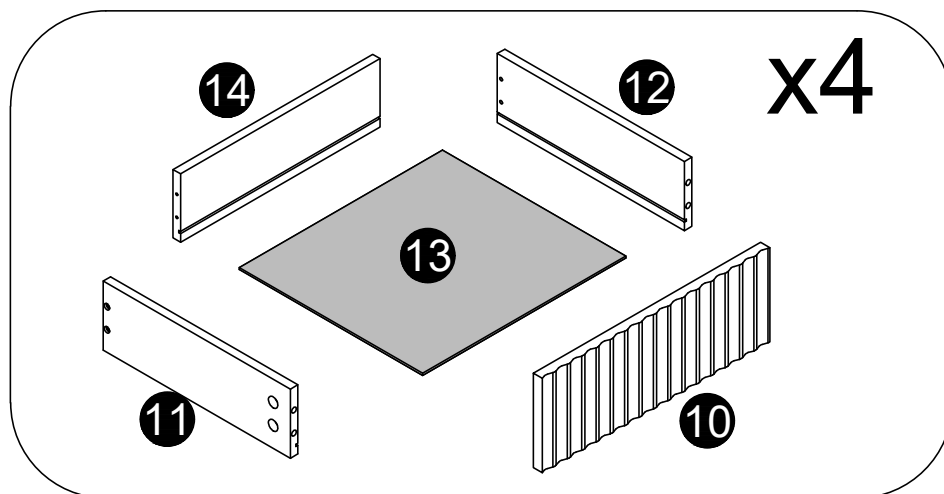




A x44 Ø6x35mm +3(spare)	B x44 Ø15x10mm +3(spare)	C x28 Ø6x30mm +2(spare)	D x16 Ø4x35mm +1(spare)	E x48 Ø3.5x12mm +4(spare)	F x4
G x2 G-1 G-2	H x16 Ø3x16mm +1(spare) H-1 H-2	I x2	J x2 Ø3x10mm J-1 J-2	DL x4 L300mm	DR x4 L300mm
CL x4 L300mm	CR x4 L300mm				

A x16	B x16	D x16
--------------	--------------	--------------

x4

01

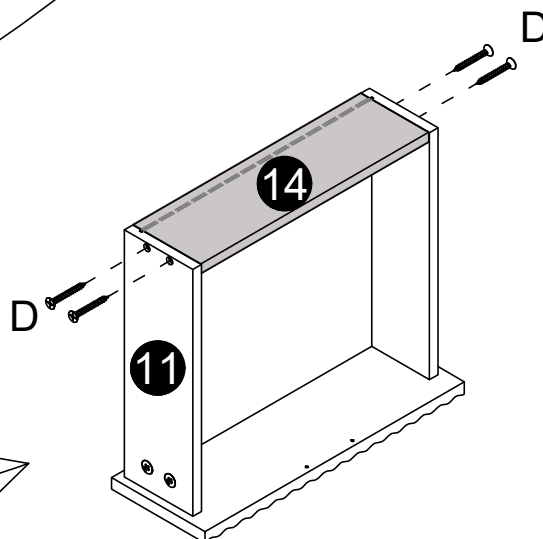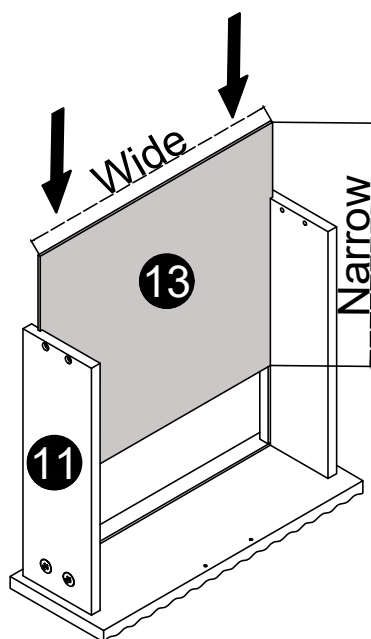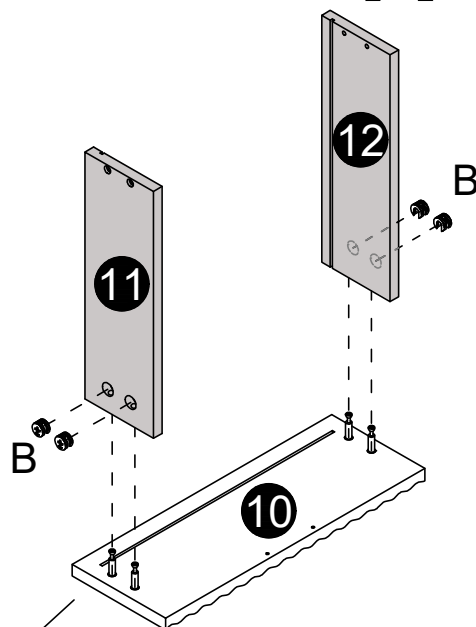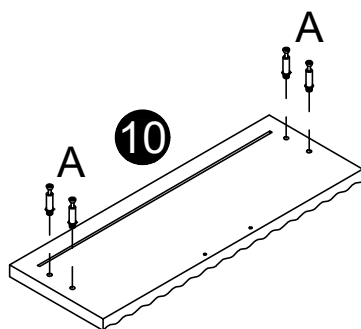

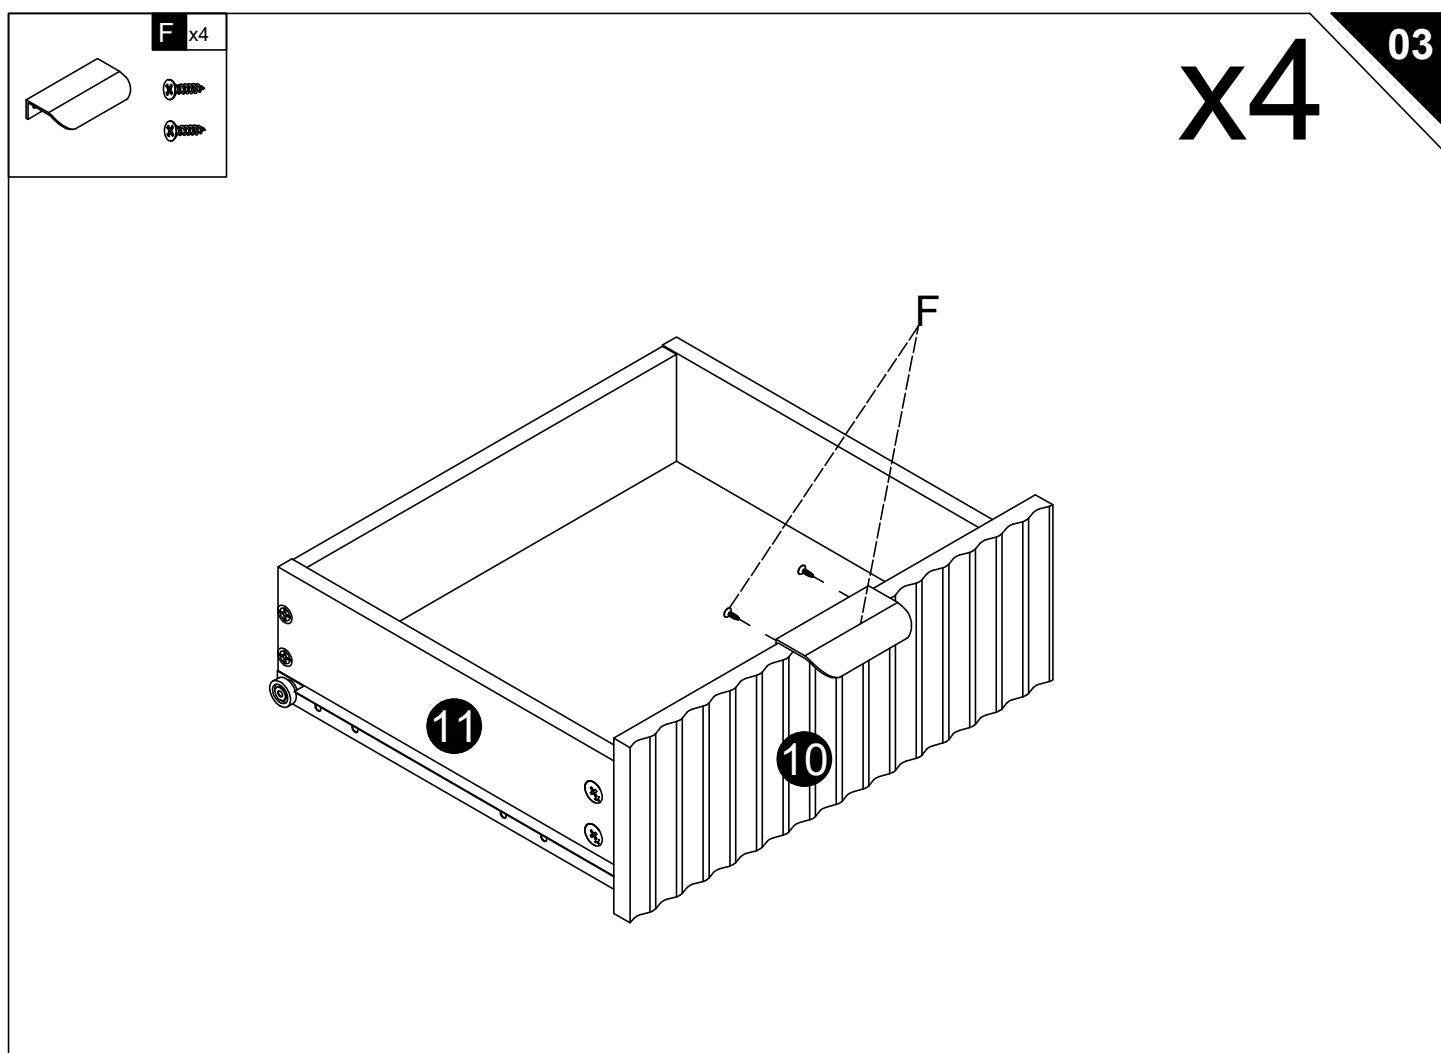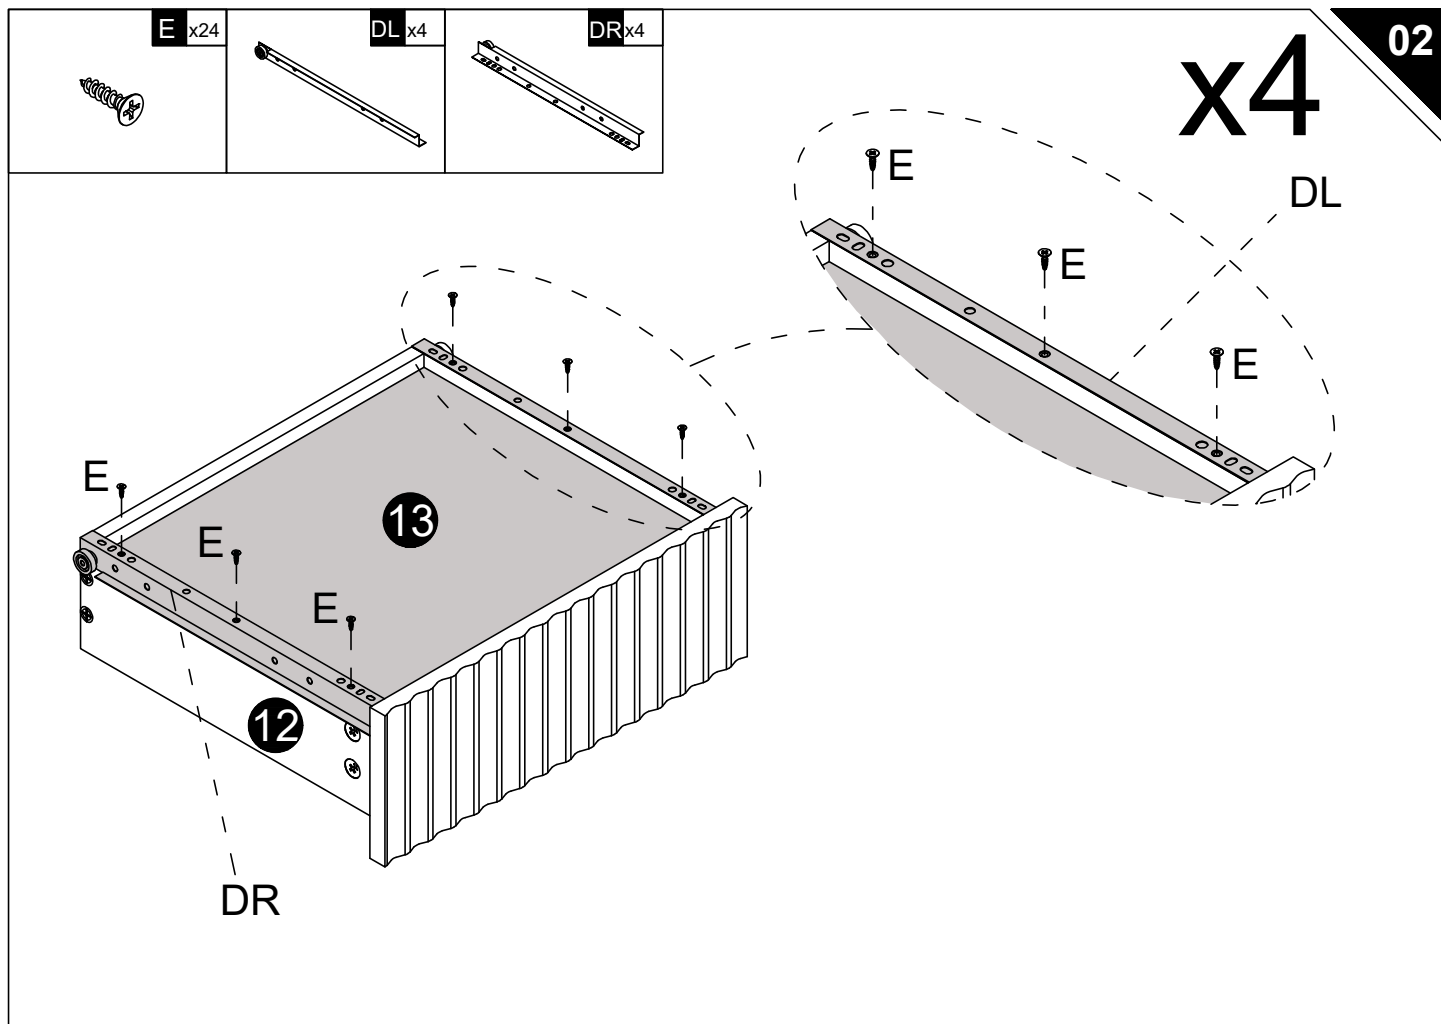


E x12

CL x4

x2

04

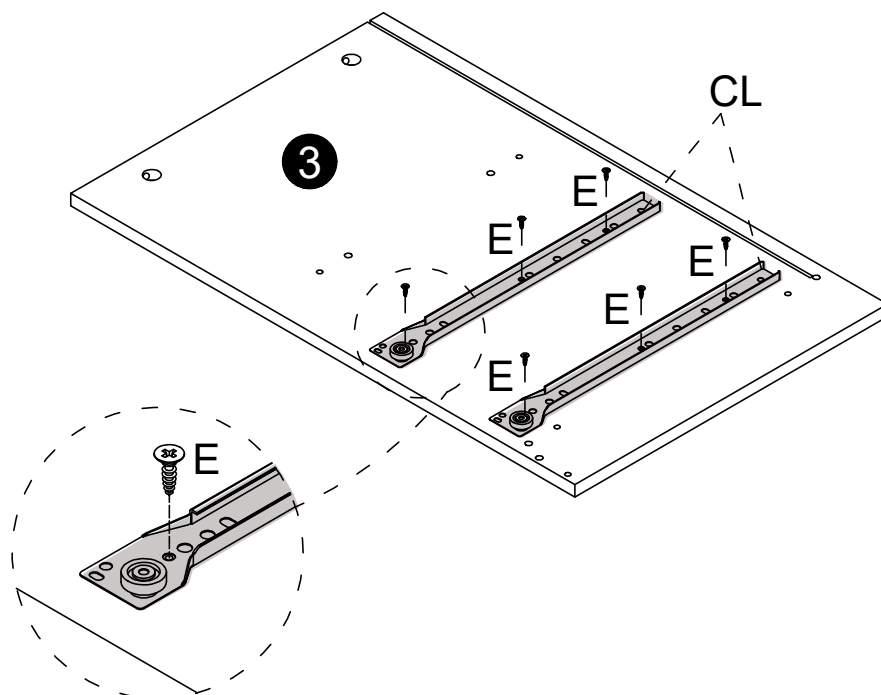


E x12


CR x4

x2

05

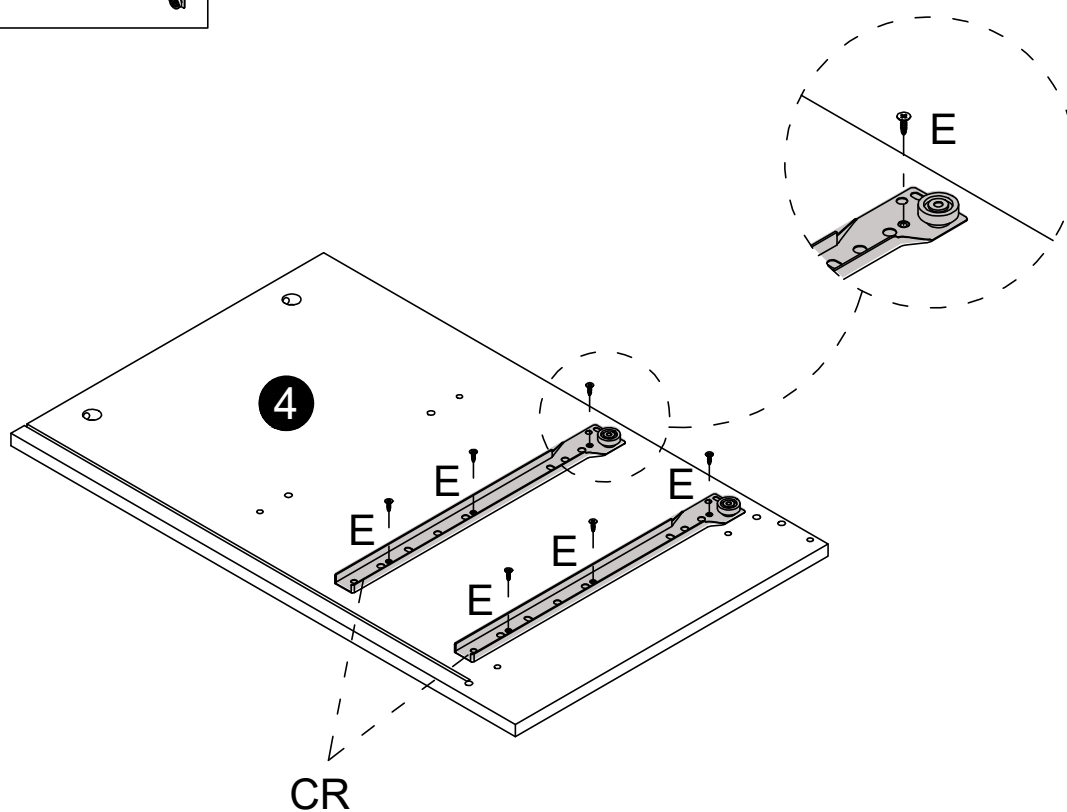


A x10




x2

06

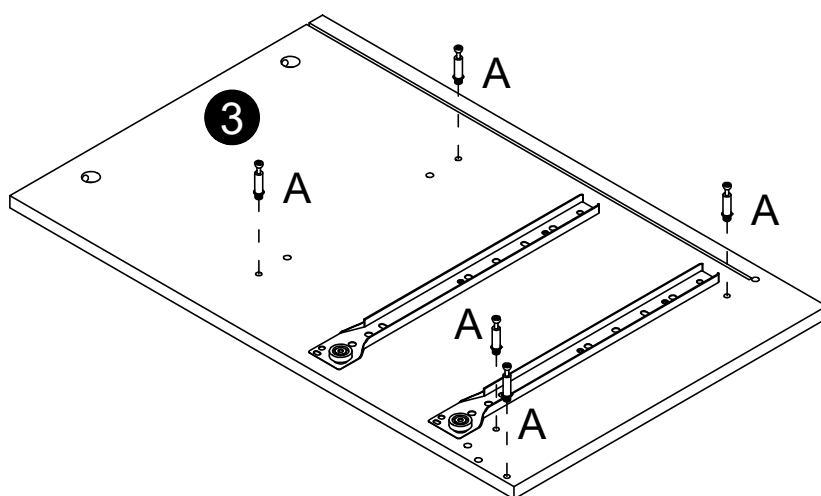


A x10



x2

07

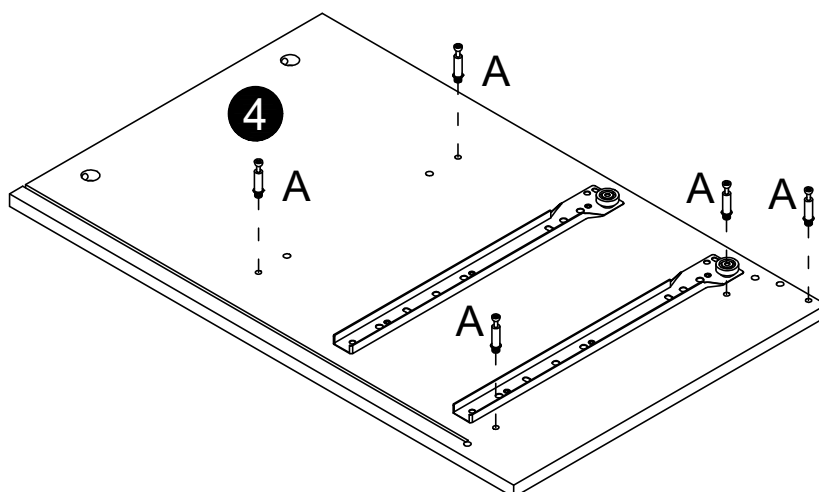


B x10

C x10



x2

08

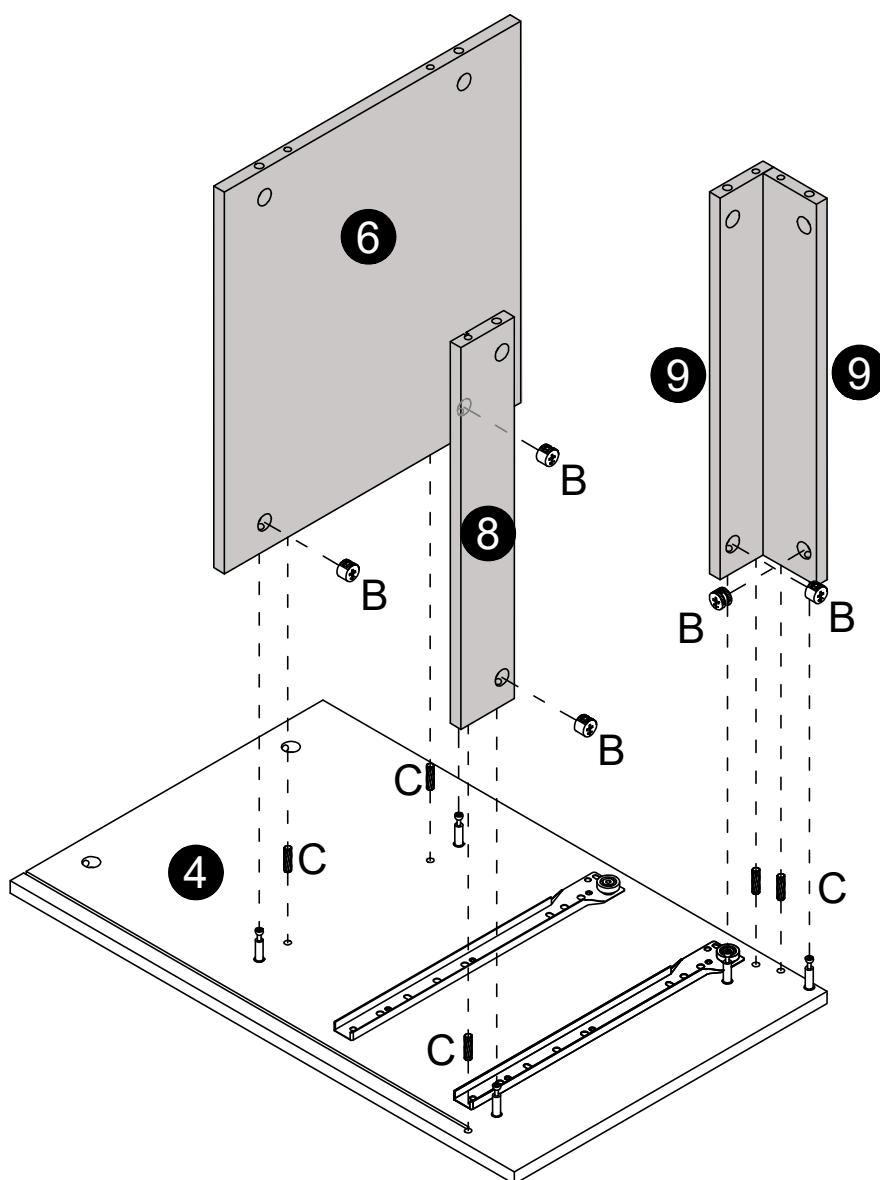


B x10

C x10







x2


09

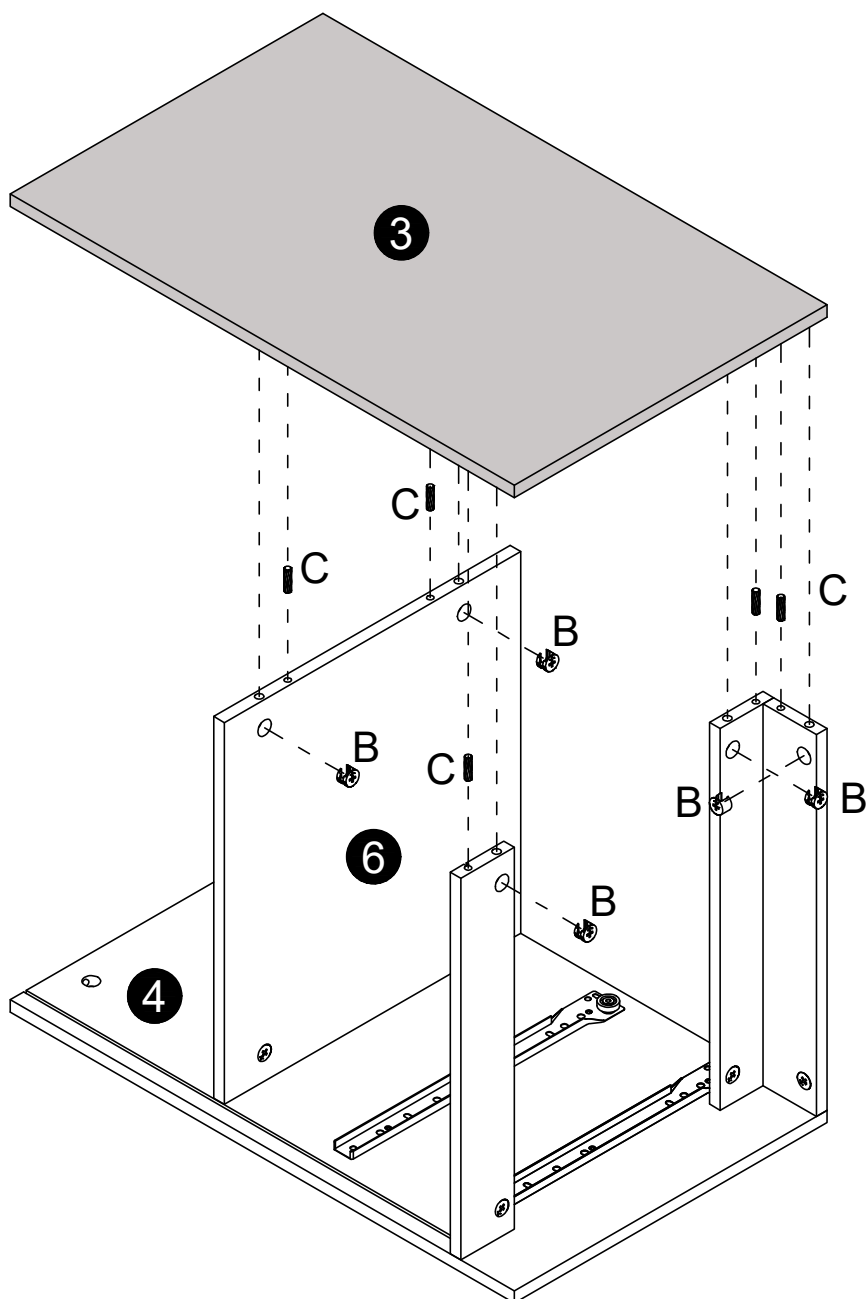

x2

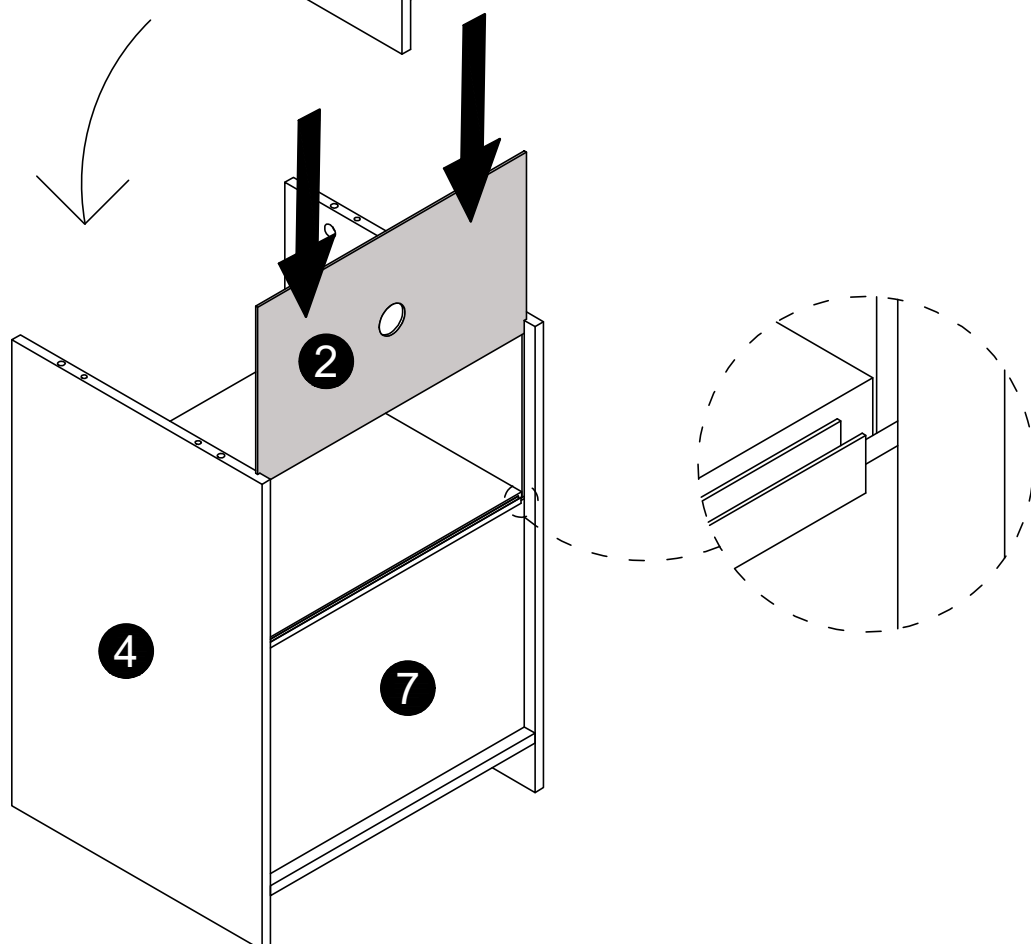
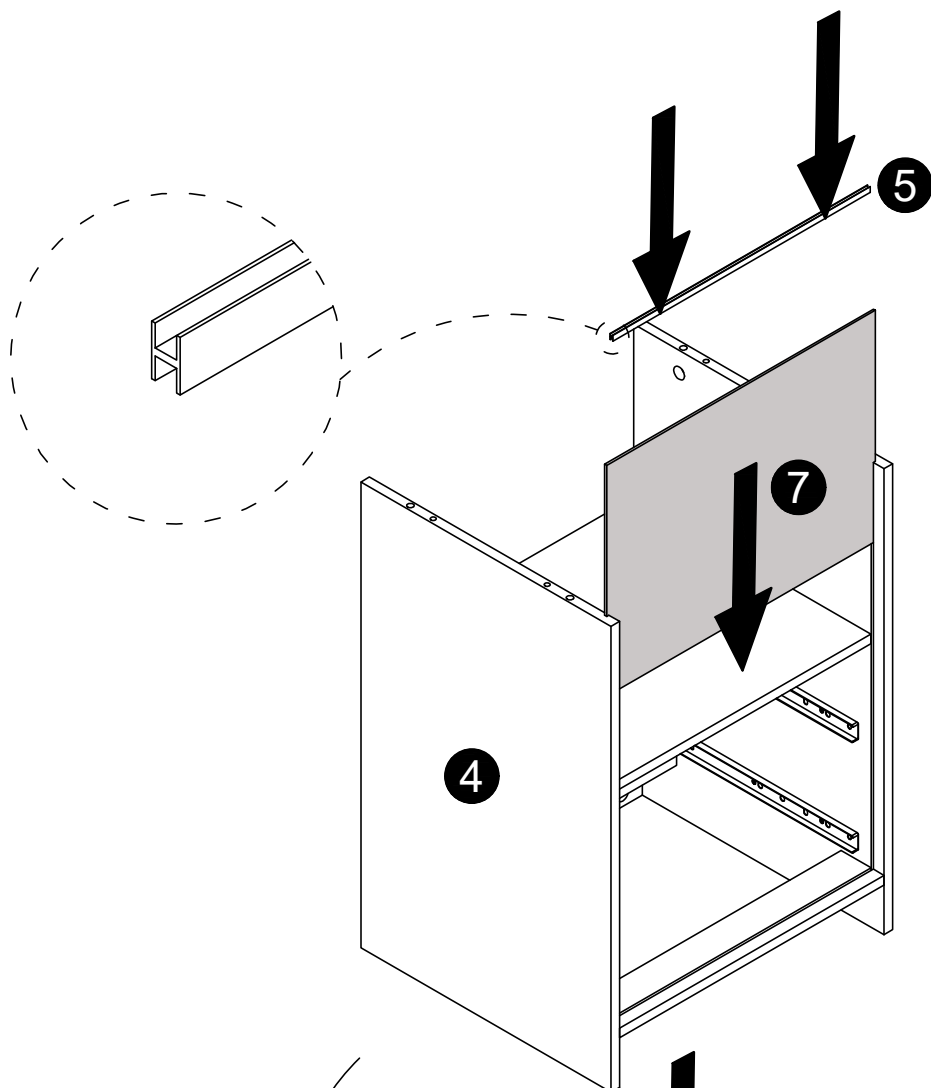


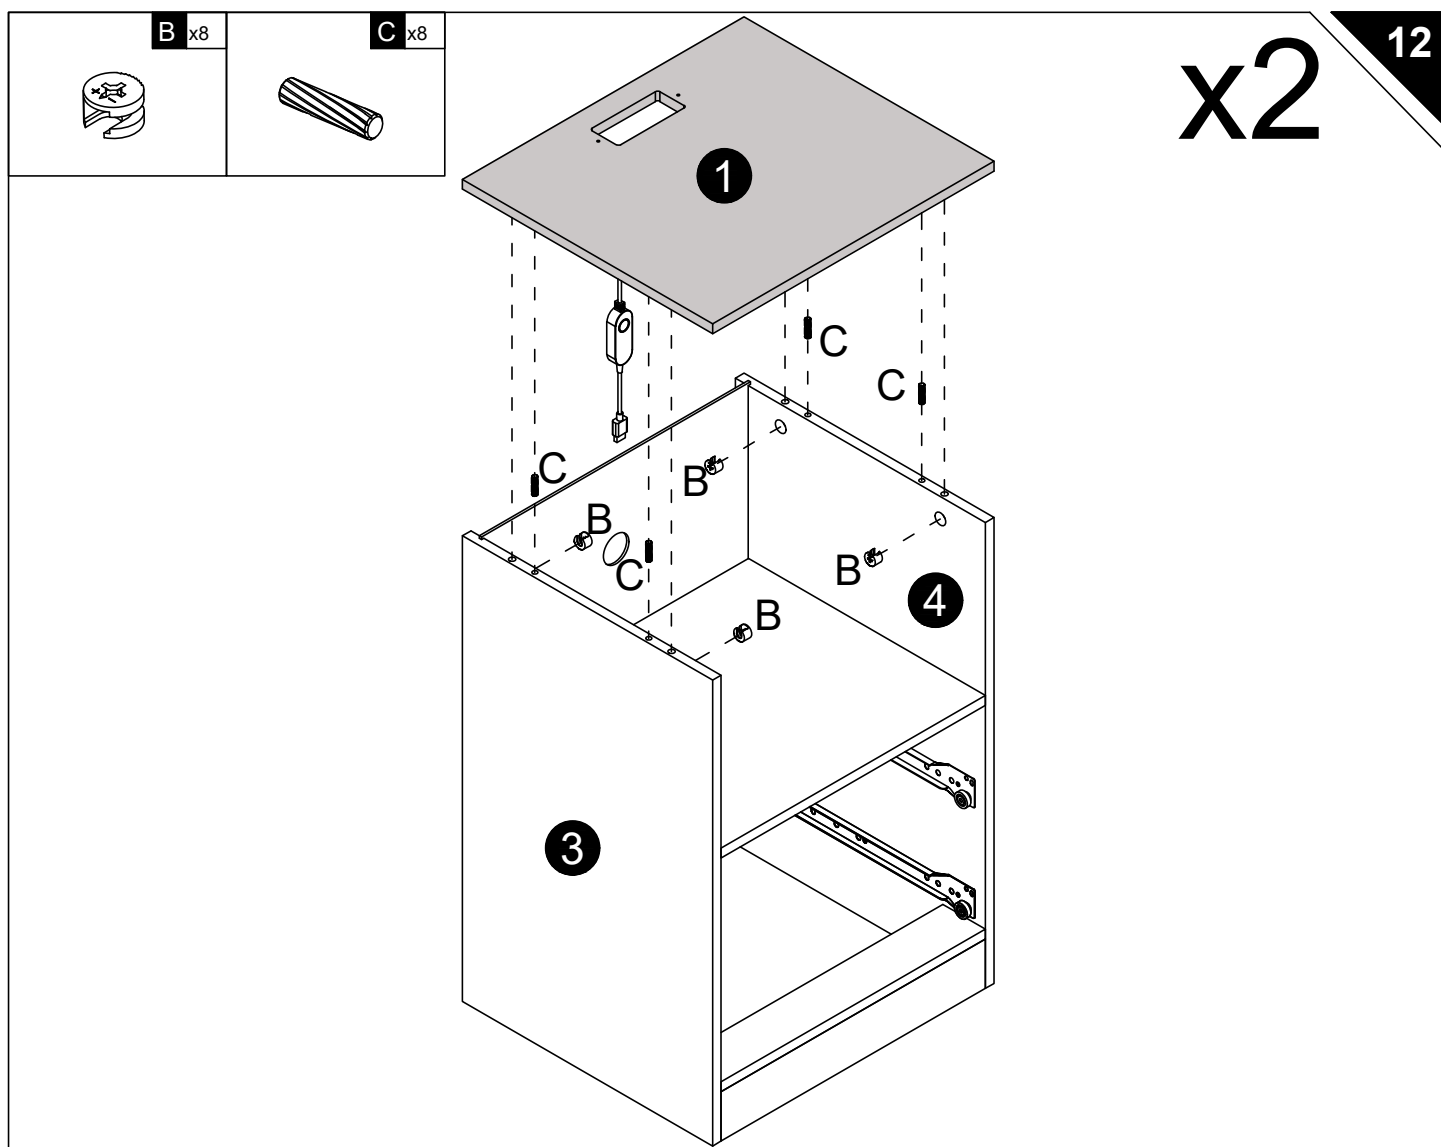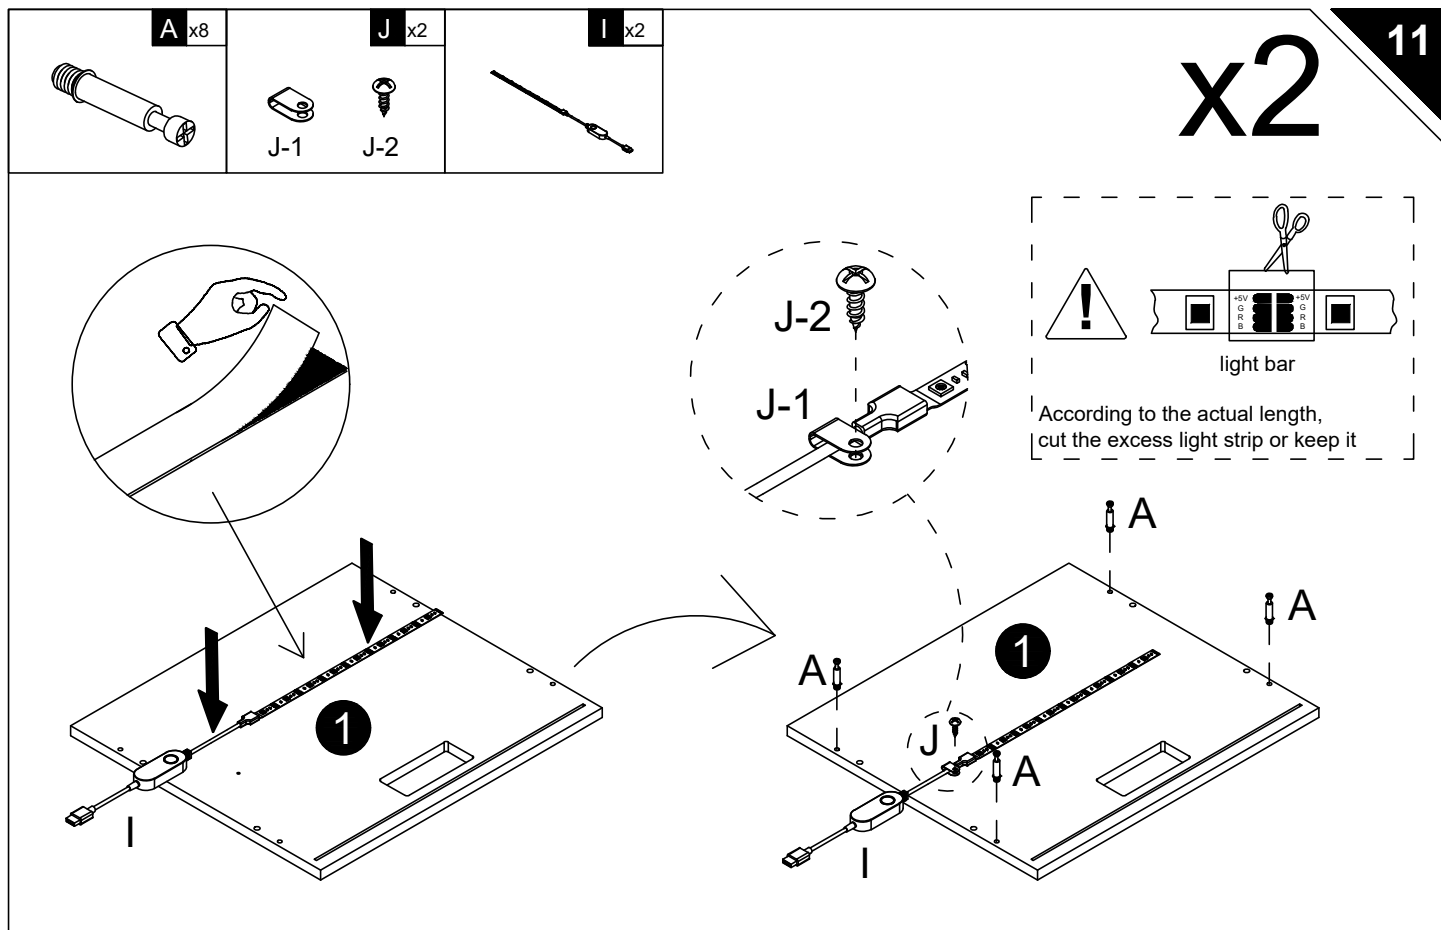


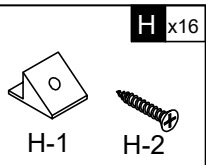

x2


13

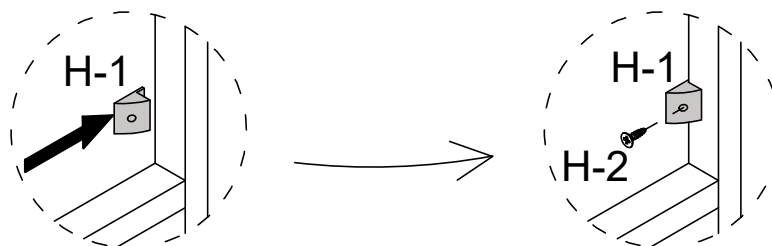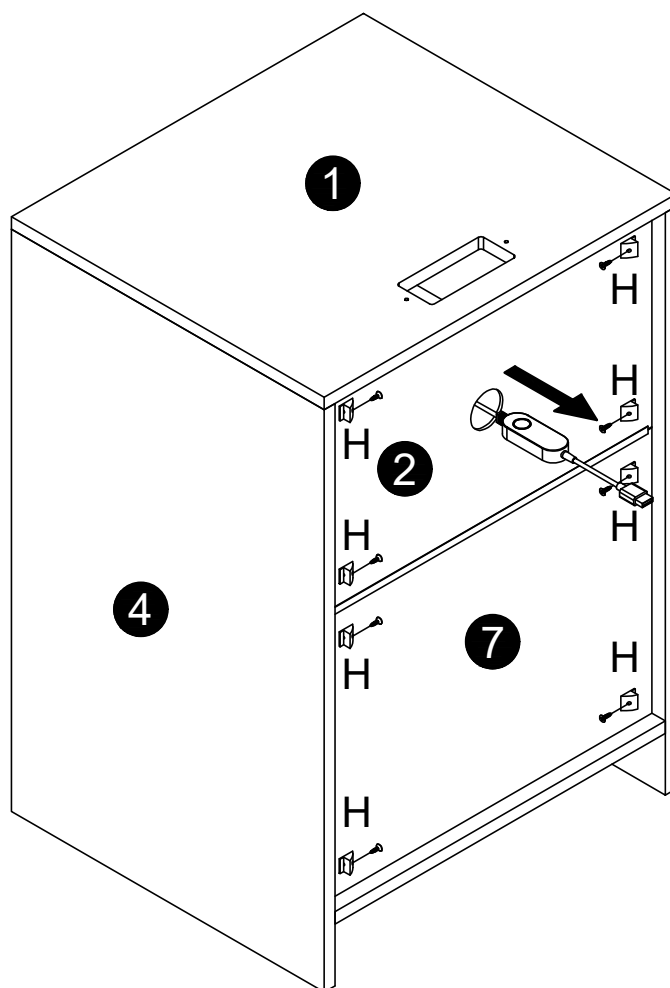

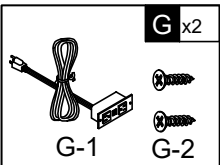


x2



14

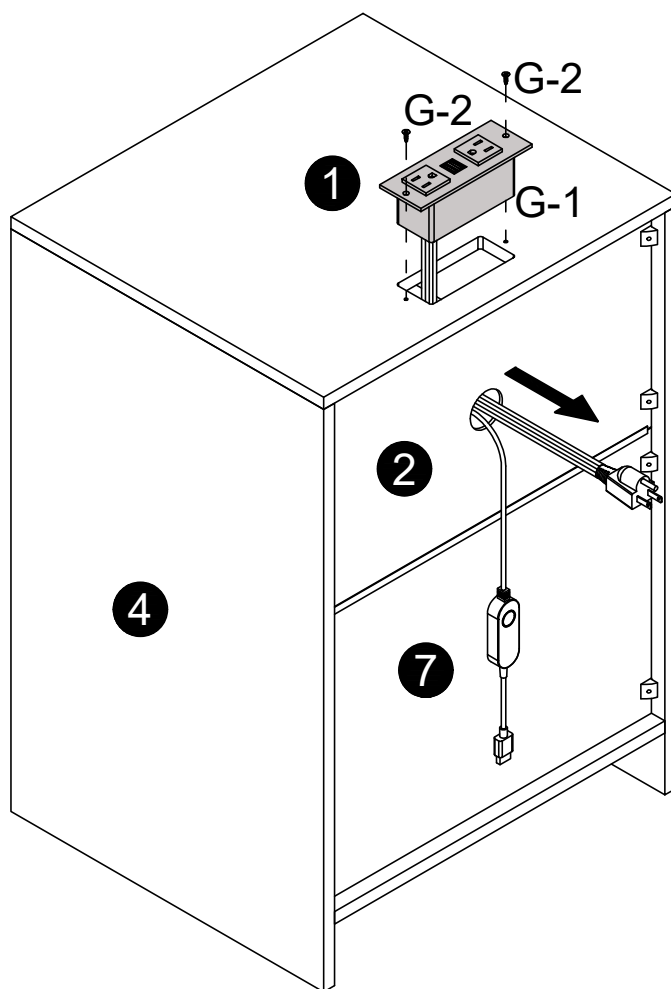


(1)

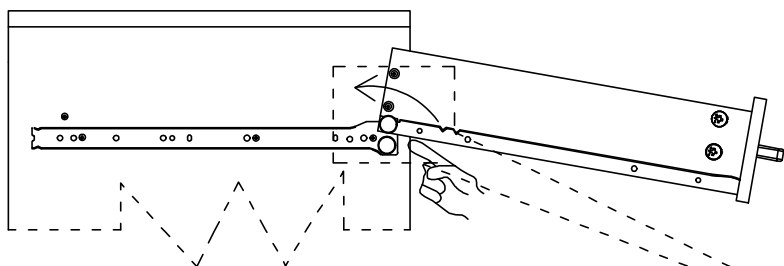

(2)

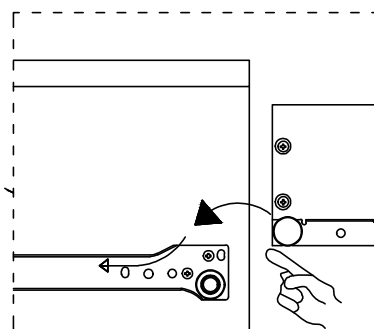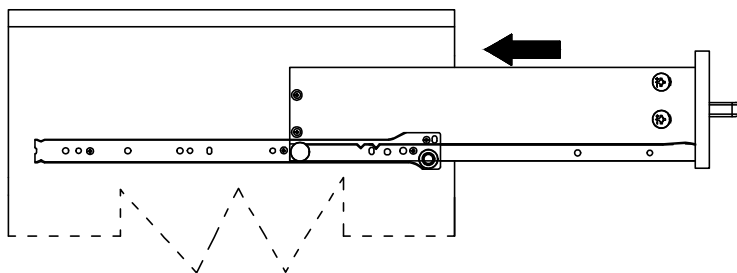

x2

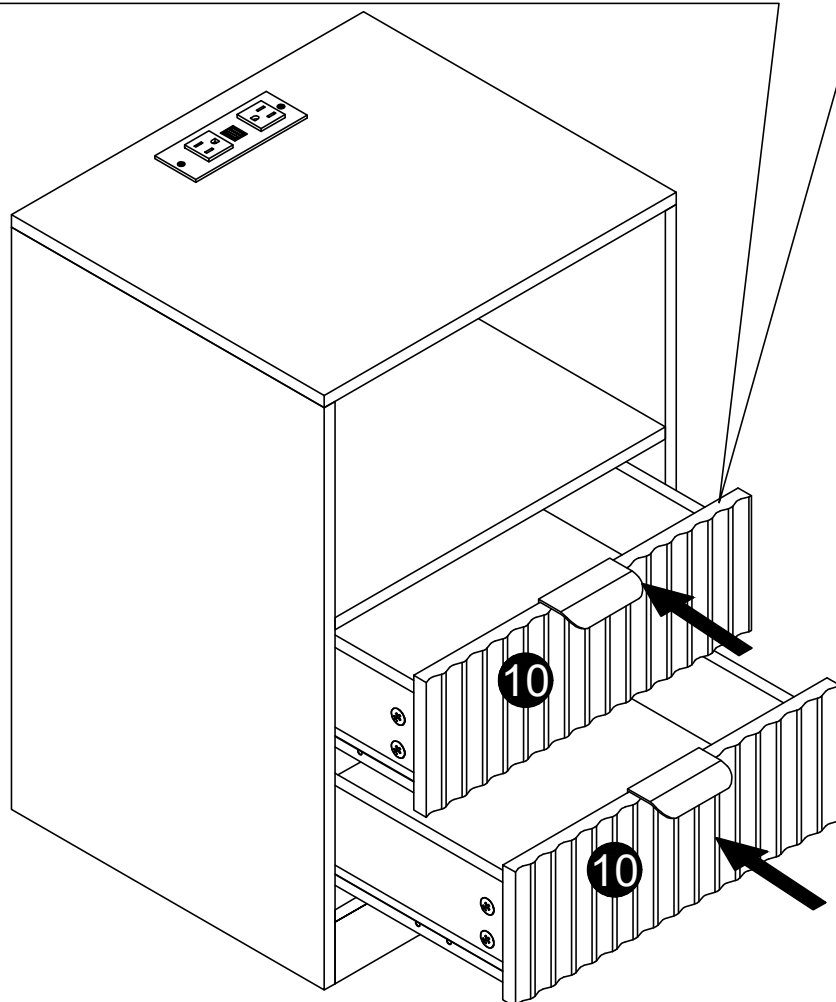

x2

