



ASSEMBLY INSTRUCTIONS

FULL BED WITH BOOKCASE AND TRUNDLE

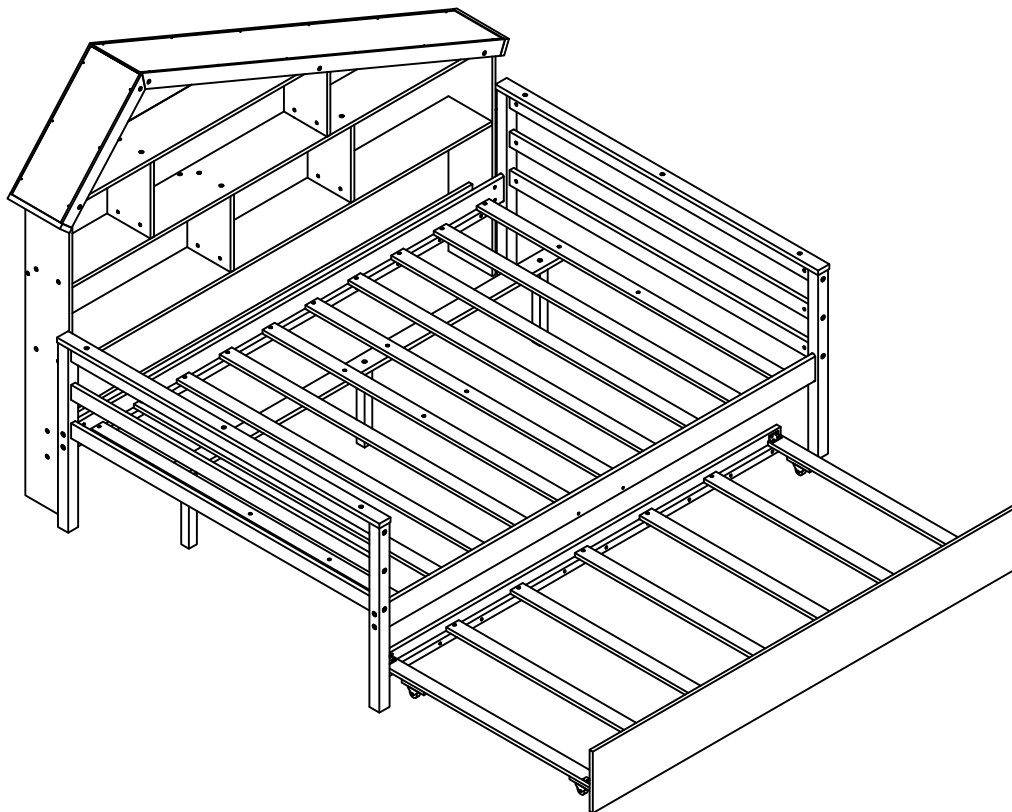










WF295481/WF295482

Detail View

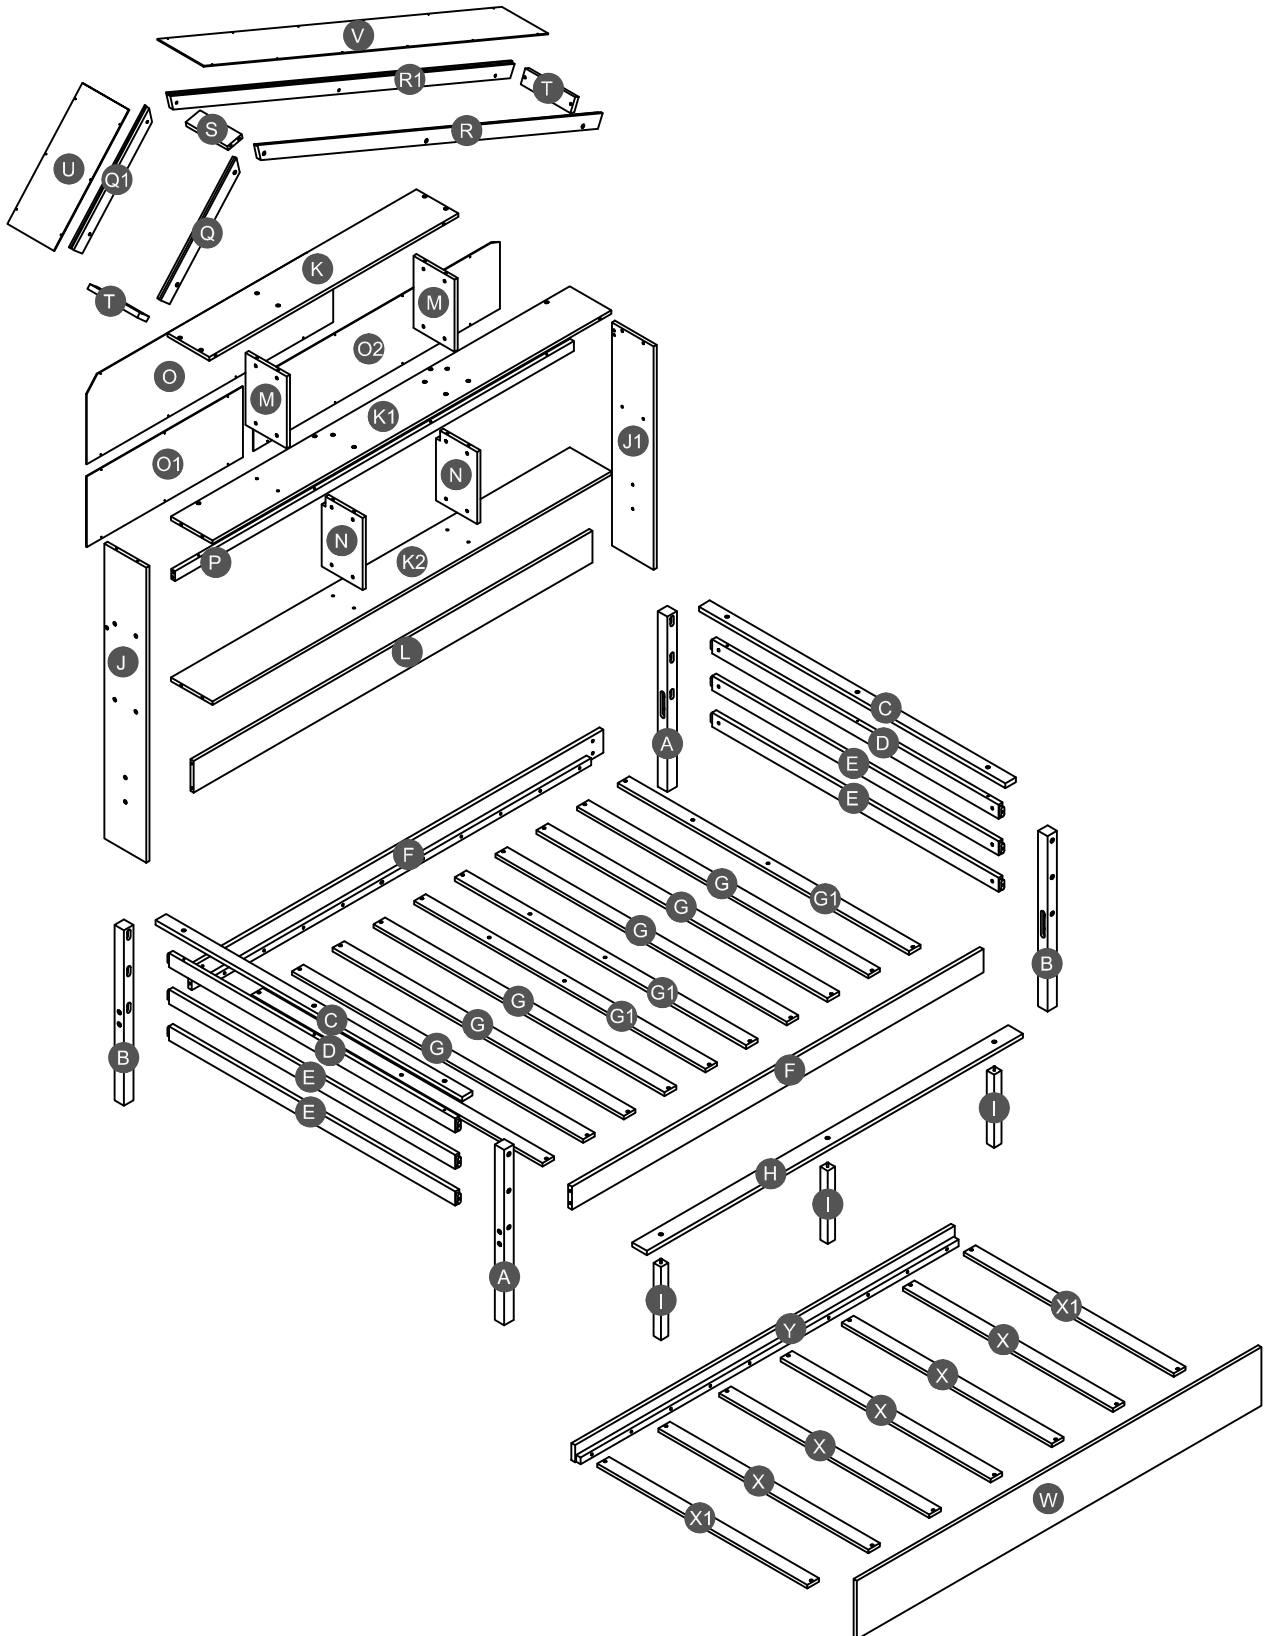












Part List

Hardware List WF295481









A  Leg Left Front /Right Back- 2pcs	B  Leg Left Back/Right Front - 2pcs	C  Cap for lower - 2pcs
D  Horizontal bar - 2pcs	E  Horizontal bar - 4pcs	F  Side rail - 2pcs
G  Slats - 6pcs	G1  Slats - 4pcs	H  Lower support slat - 1pc
I  Leg support - 3pcs	P  Horizontal bar (Back) - 1pc	W  Front panel side rail of trundle - 1pc
Y  Back panel side rail of trundle - 1pc		

Part List


WF295482

J  Side panel (left) - 1pc	J1  Side panel (right) - 1pc	K  Upper shelf panel - 1pc
K1  Middle shelf panel - 1pc	K2  Lower shelf panel - 1pc	L  Horizontal bar support - 1pc
M  Upper divider panel - 2pcs	N  Lower divider panel - 2pcs	O  Upper back panel - 1pc
O1  Back panel (Left) - 1pc	O2  Back panel (Right) - 1pc	Q  Upper (Left Front) - 1pc
Q1  Upper (Left Back) - 1pc	R  Upper (Right Front) - 1pc	R1  Upper (Right Back) - 1pc
S  Upper horizontal bar - 1pc	T  Upper horizontal bar - 2pcs	U  Top panel (Left) - 1pc
V  Top panel (Right) - 1pc	X  Trundle Slats - 5pcs	X1  Trundle Slats - 2pcs

Hardware List WF295481


1	 Ø8*30mm Wood dowel (2pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (42pcs)	5	 40*18*18*2mm Metal bracket (2pcs)	6	 50*24*24*2mm Metal bracket (2pcs)
7	 (Ø12)1/4"*40mm Hex-Head bolts (14pcs)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(62pcs)	9	 Ø4*30mm Wood screws (50pcs)
10	 70*35*19 mm Drawer stopper (2pcs)	11	 Ø3.5*15mm Wood screws (64pcs)	12	 100*63*20mm Wheels (4pcs)
13	 (1/4")4.5*58mm Allen key (1pc)	14	 95*95*18*3mm Metal bracket (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

STEP 1:

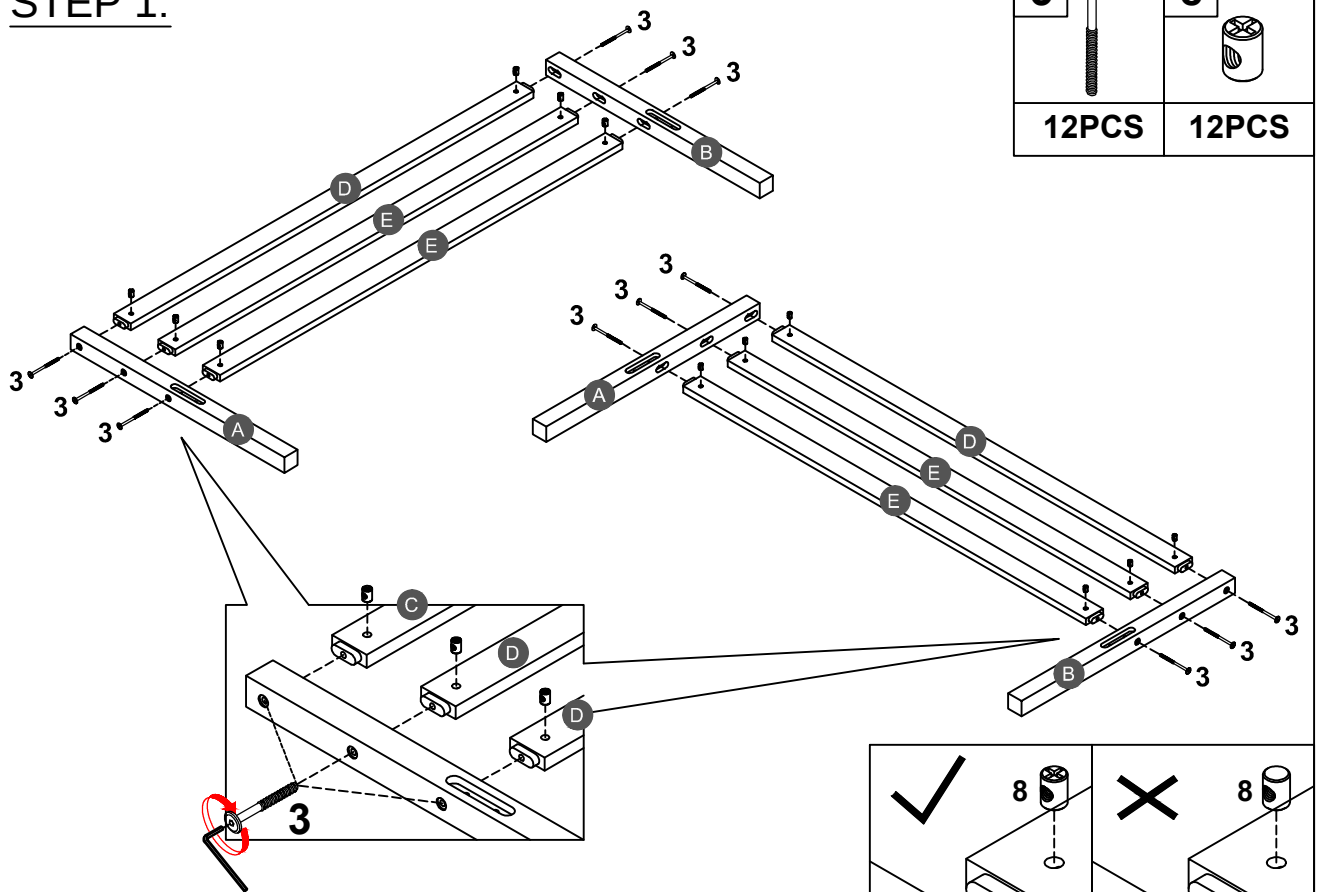


Note: Part 8 will face up with the "x" mark on it, otherwise it cannot be tightened

STEP 2:

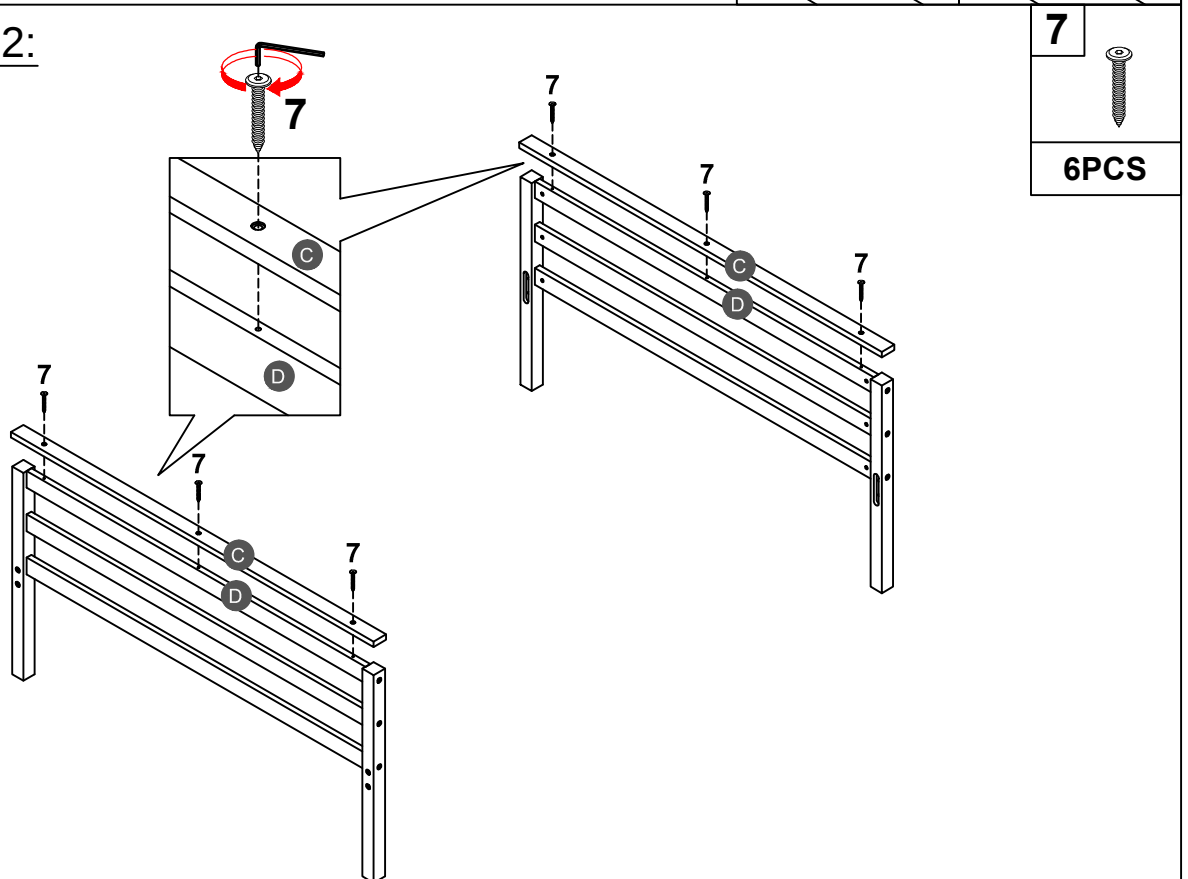

STEP 3:


9		10	
4PCS		2PCS	

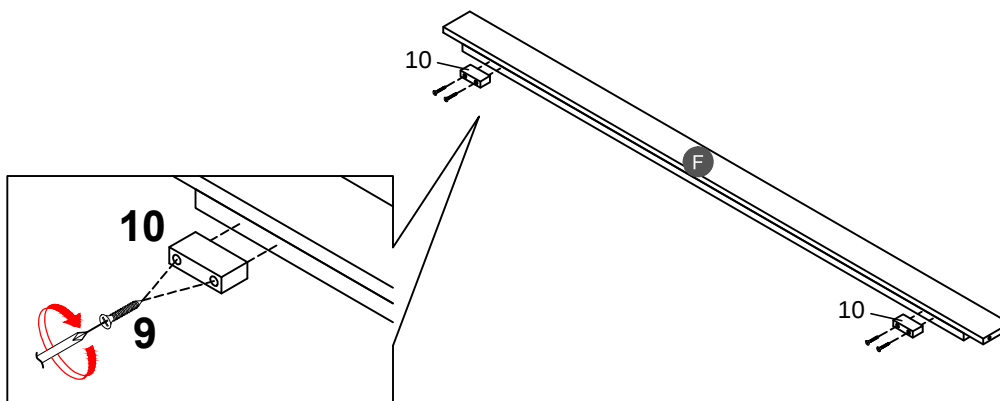


Drawer stopper (10) with lower side rail front (F) by using screw (9).

STEP 4:

2		8	
8PCS		8PCS	


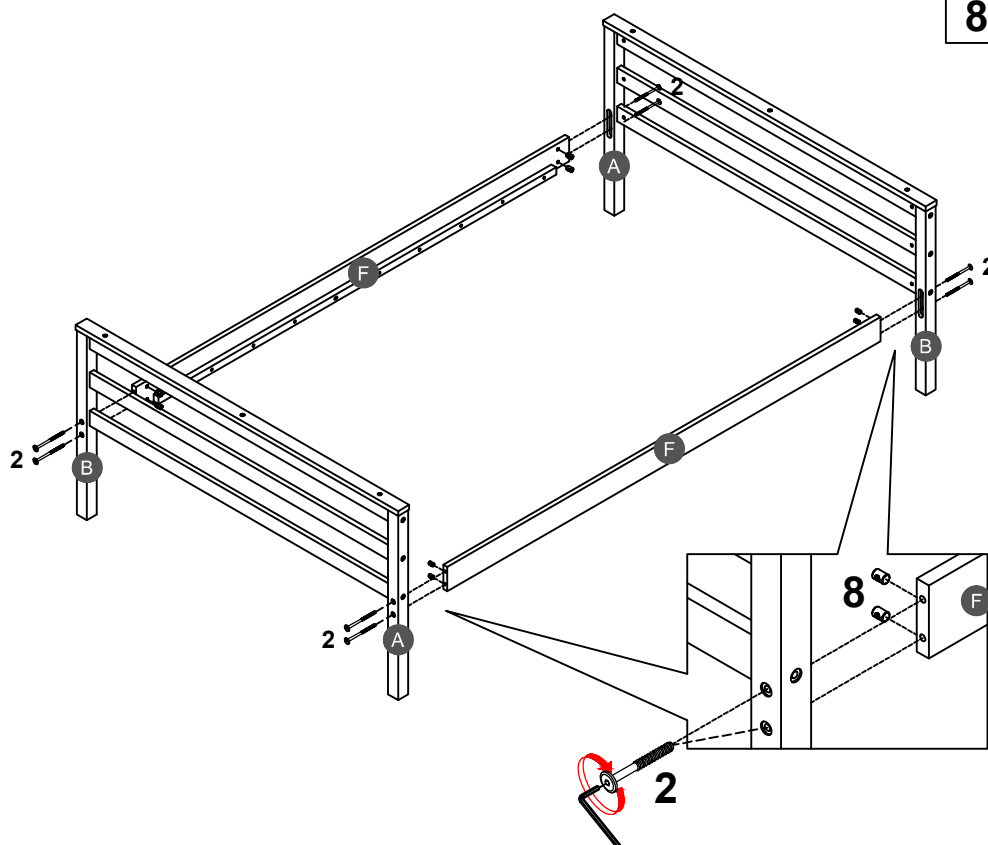


STEP 5:

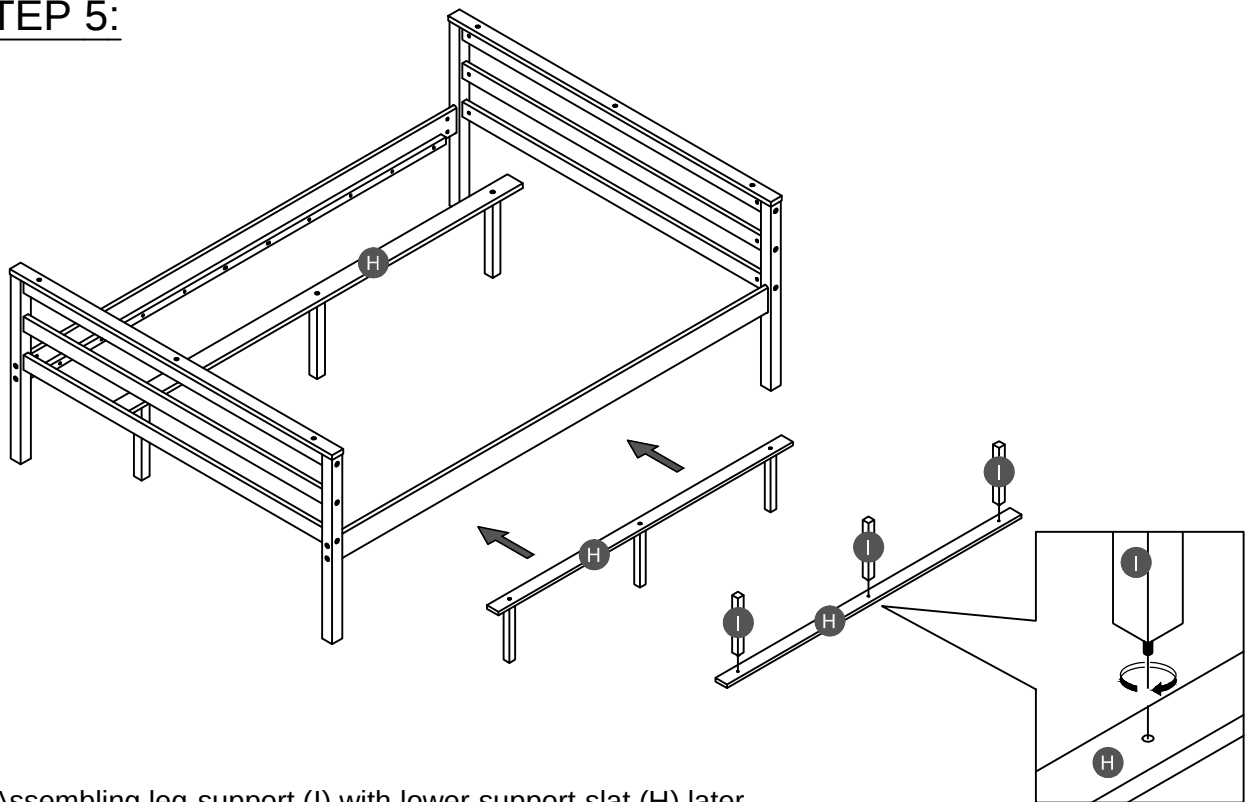

Assembling leg support (I) with lower support slat (H) later rotate, Move support slat inside Full bunkbed.

STEP 6:

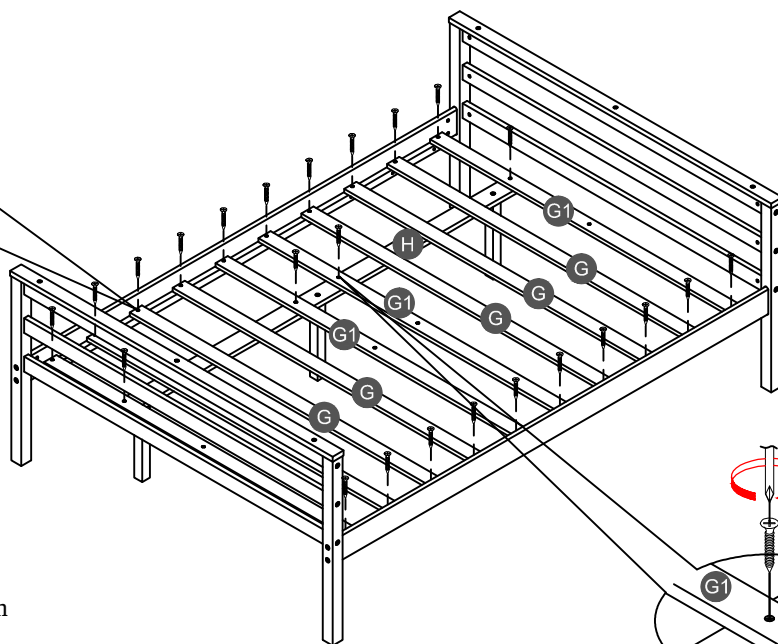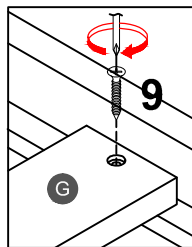


9




24PCS

5.4" 139mm 5.4" 139mm 2.5" 64mm

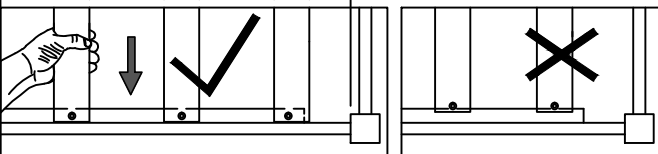


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.


STEP 7:

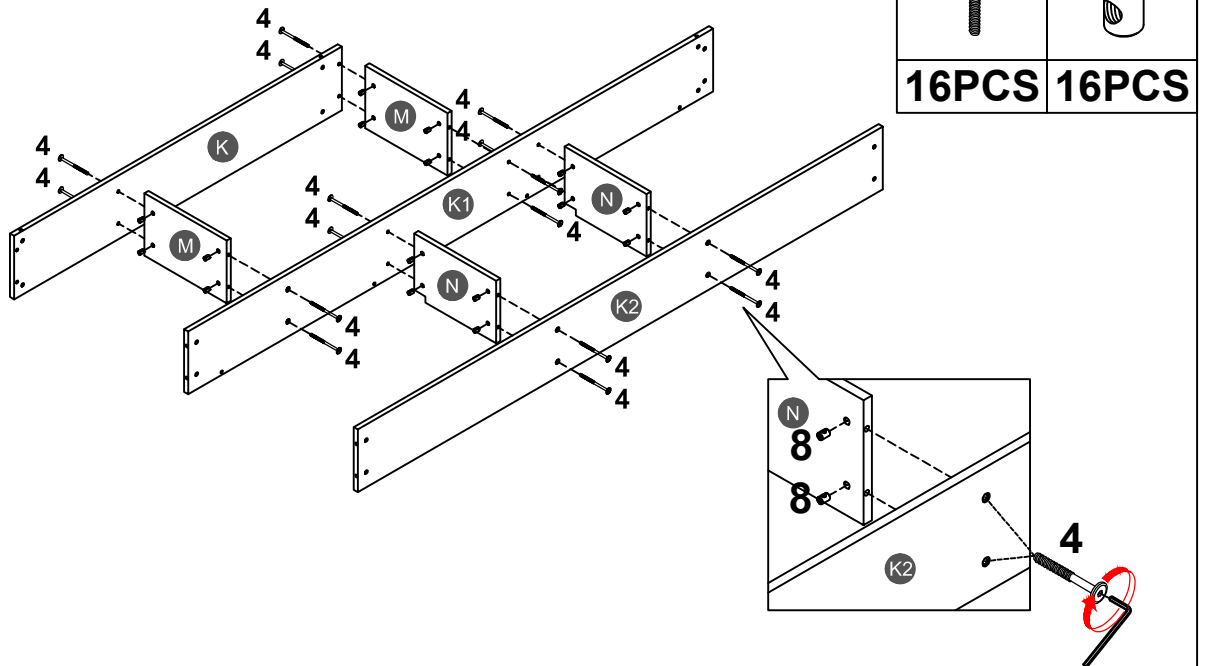

STEP 8:

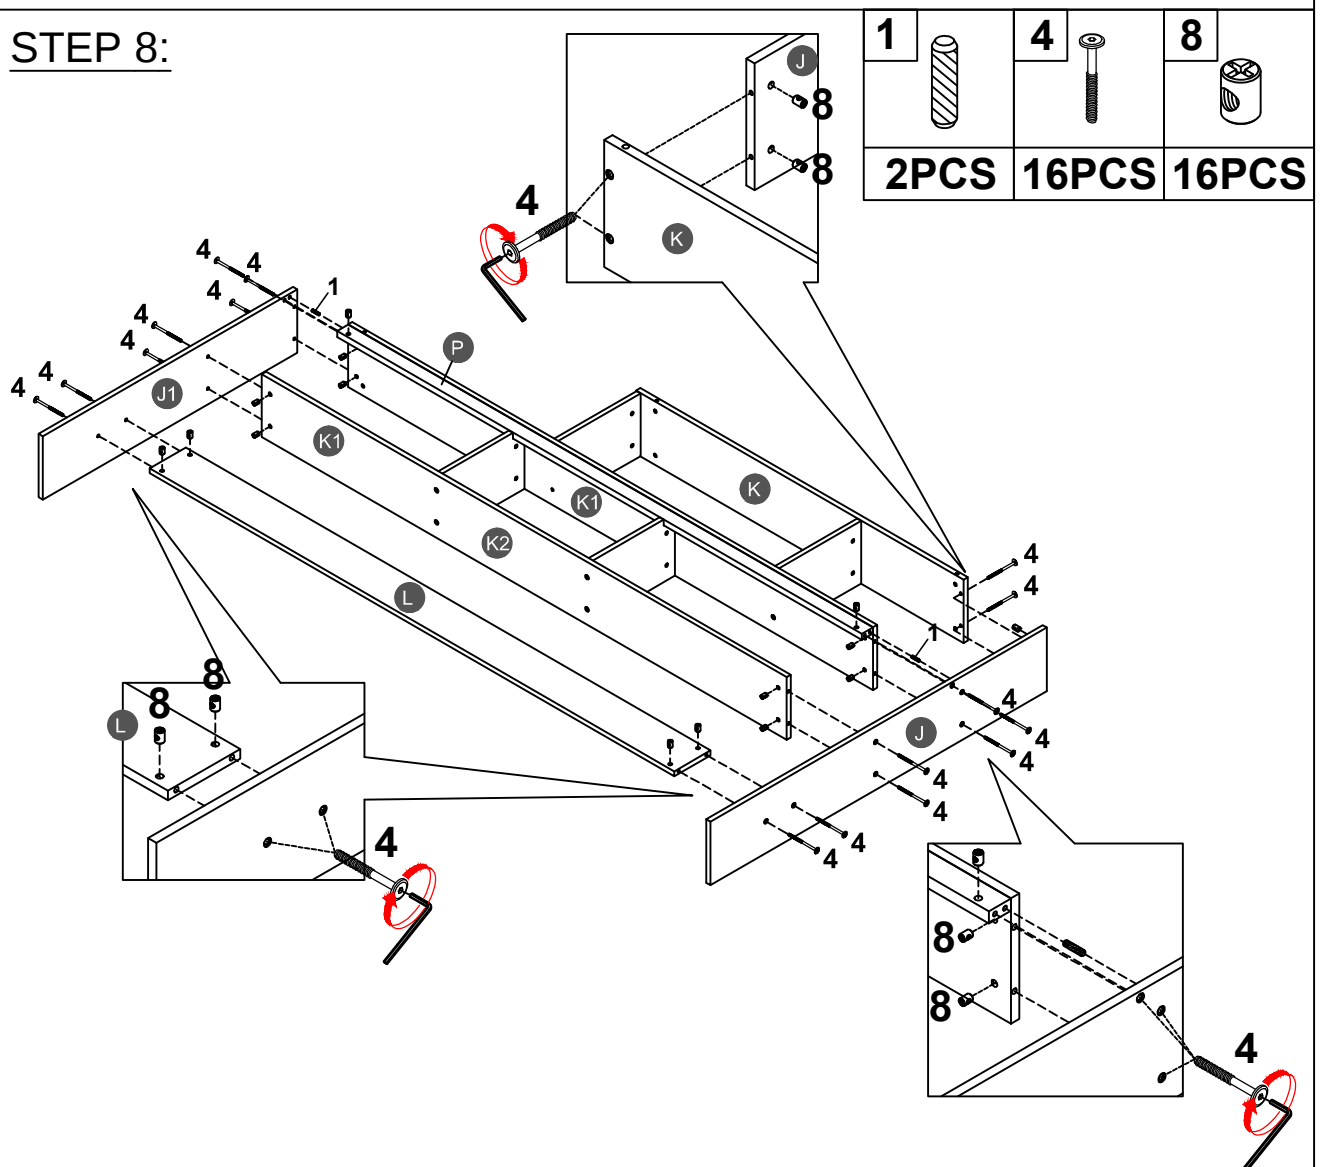

STEP 9:

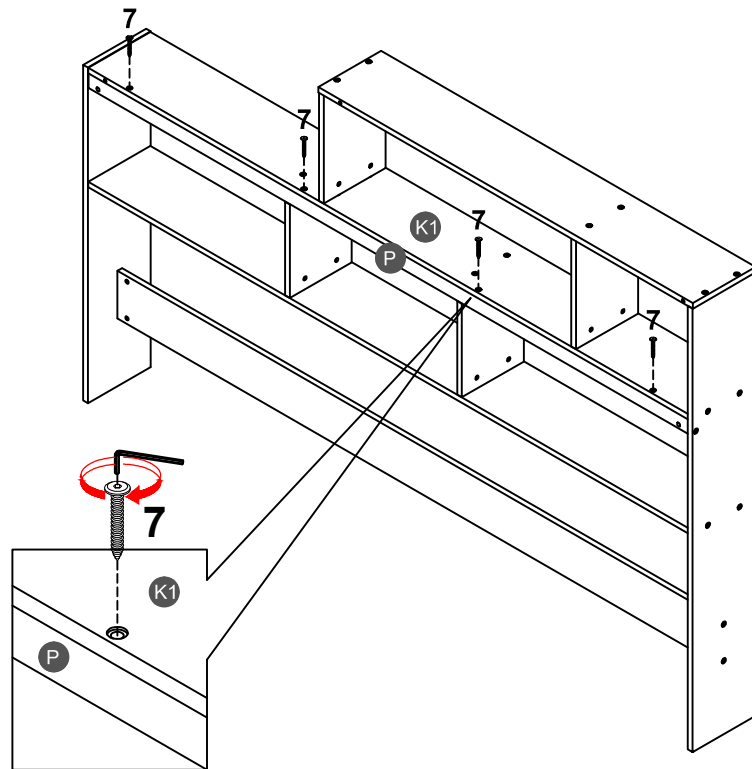


7



4PCS

STEP 10:

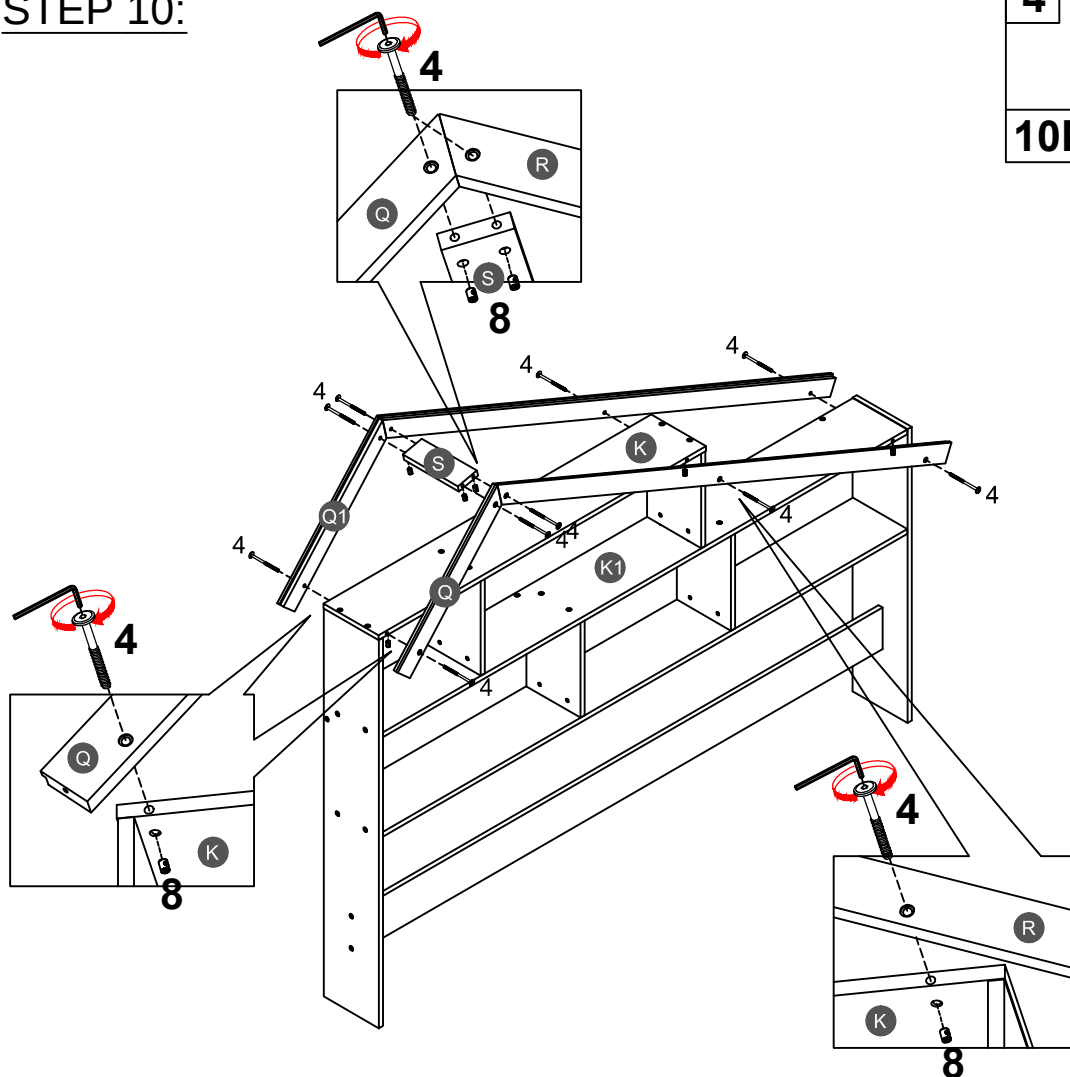

4




10PCS

8



10PCS

STEP 11:

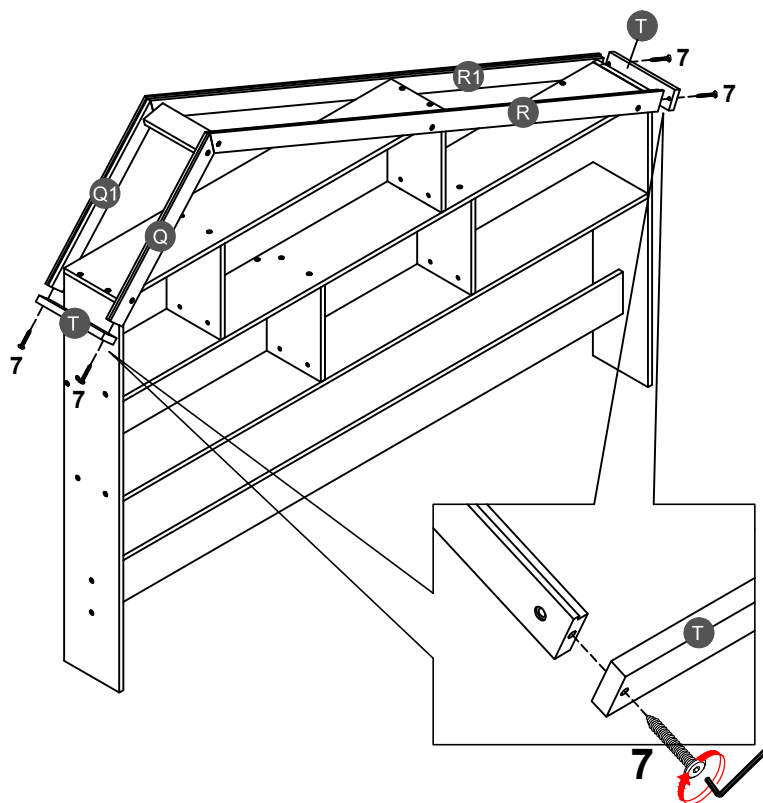


7



4PCS

STEP 12:

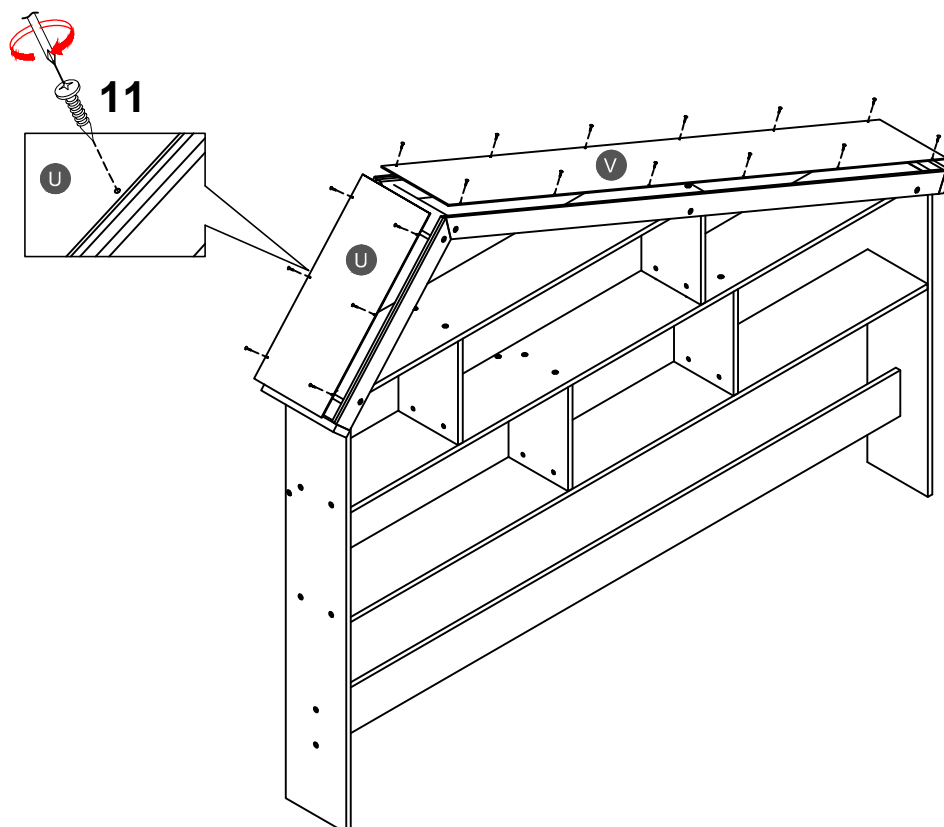

11




18PCS

STEP 13:


11




22PCS

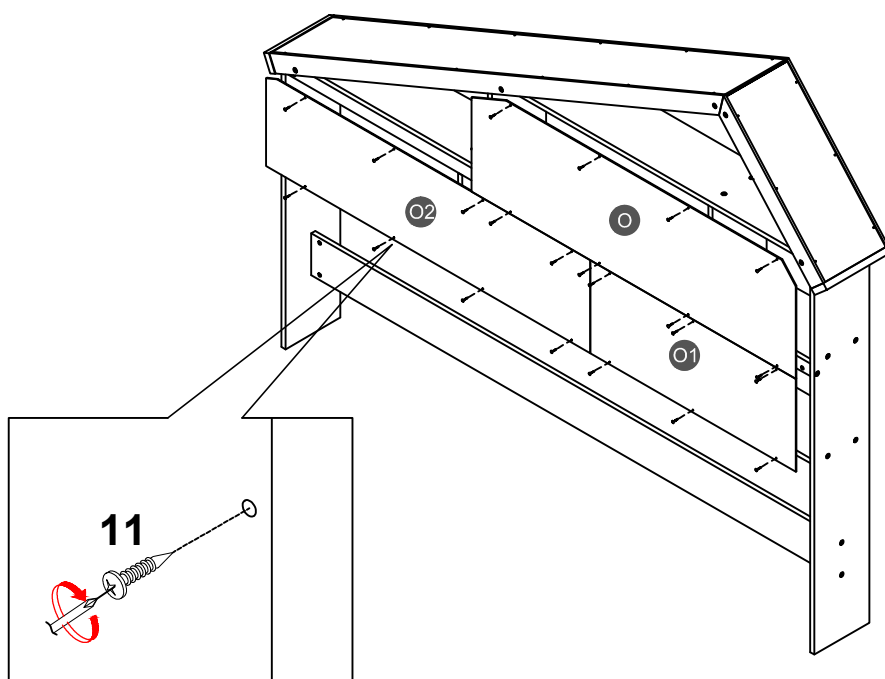


STEP 14:

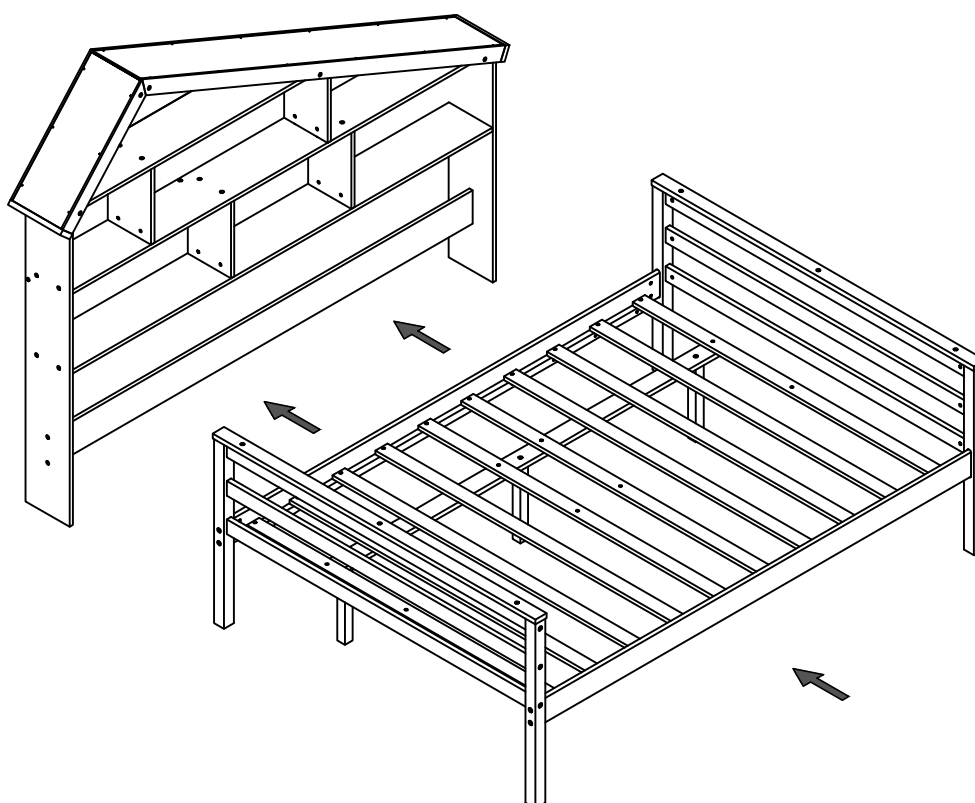

STEP 15:

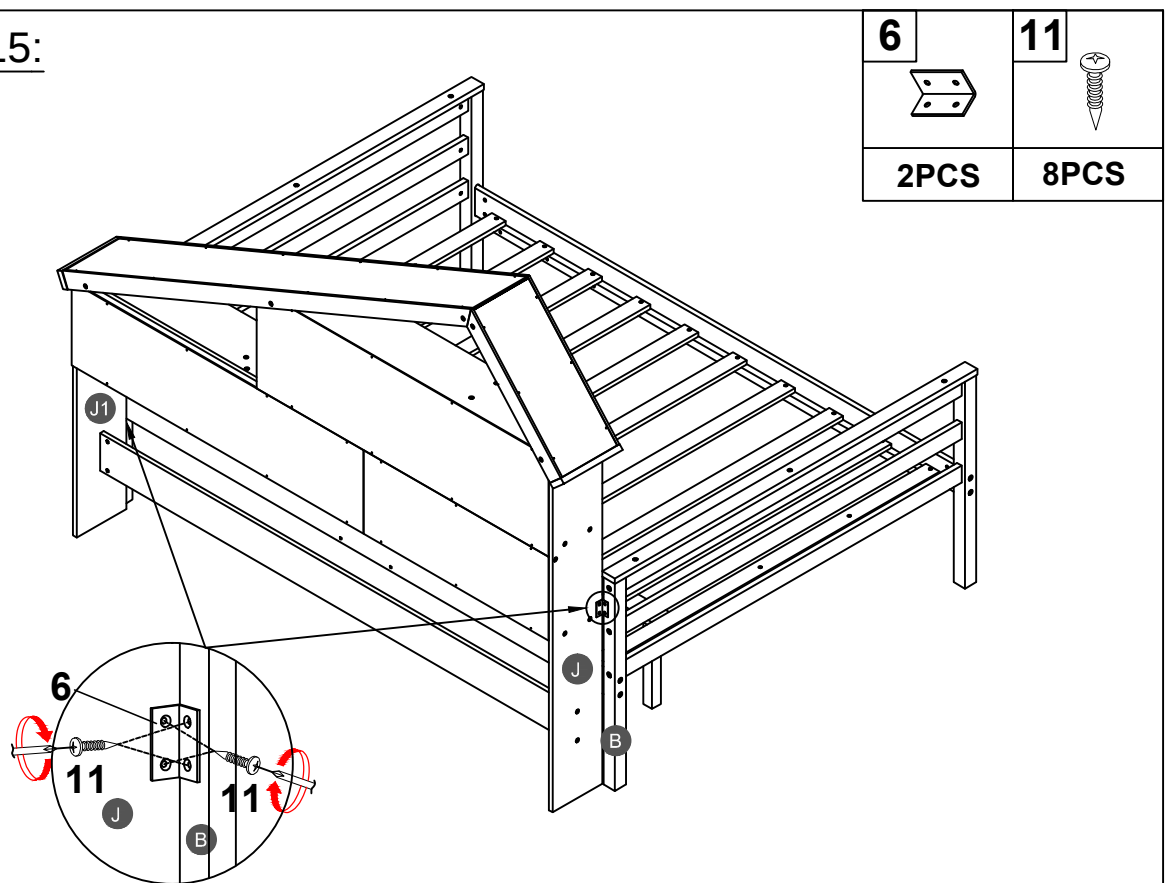

STEP 16:




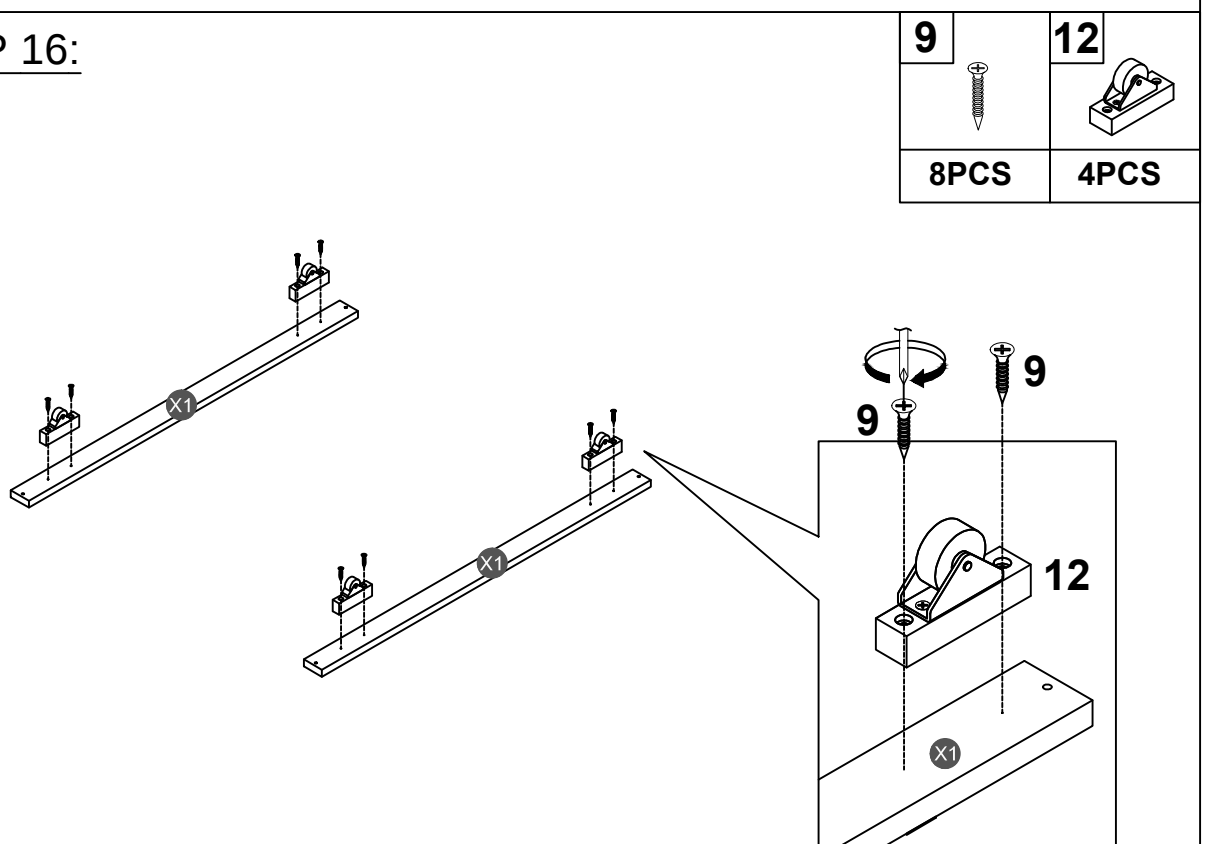


STEP 17:

9



14PCS

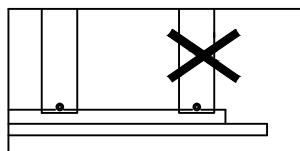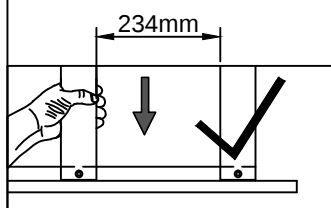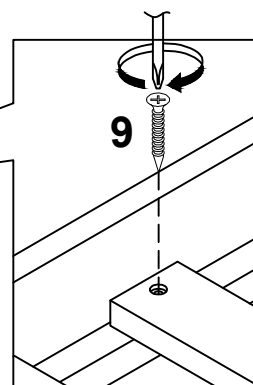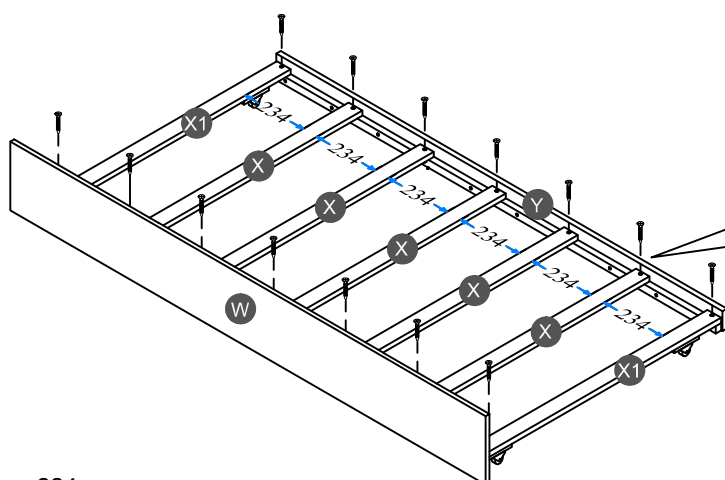

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

STEP 18:

11





8PCS


14



2PCS

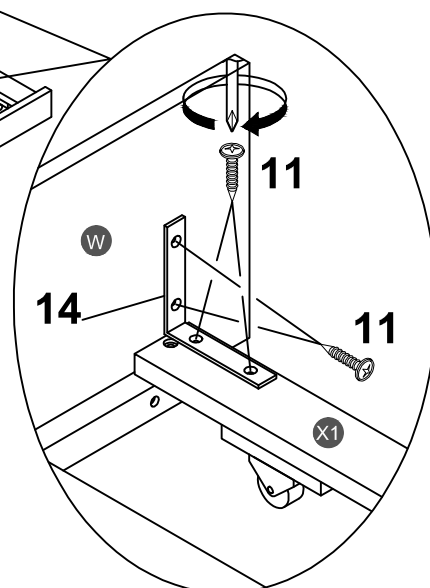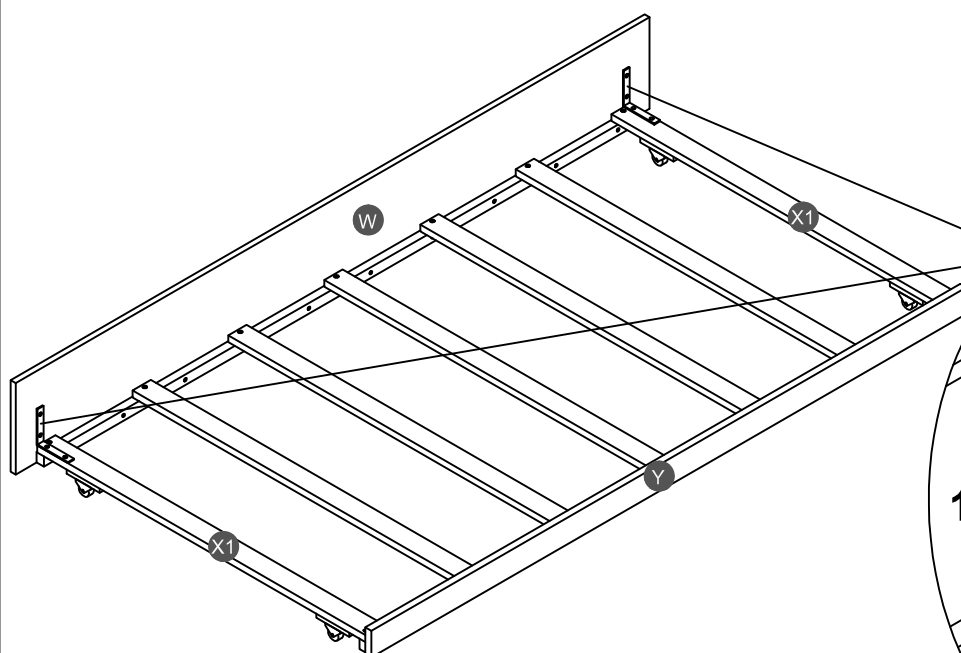


STEP 19:

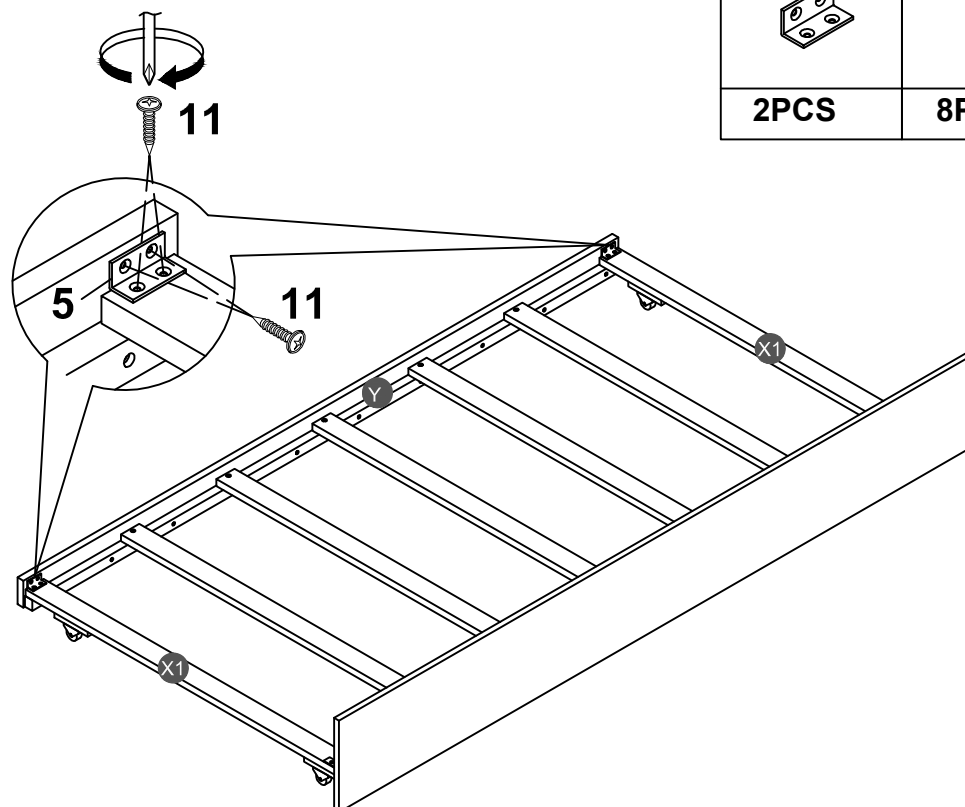


5	11
	
2PCS	8PCS

STEP 20:

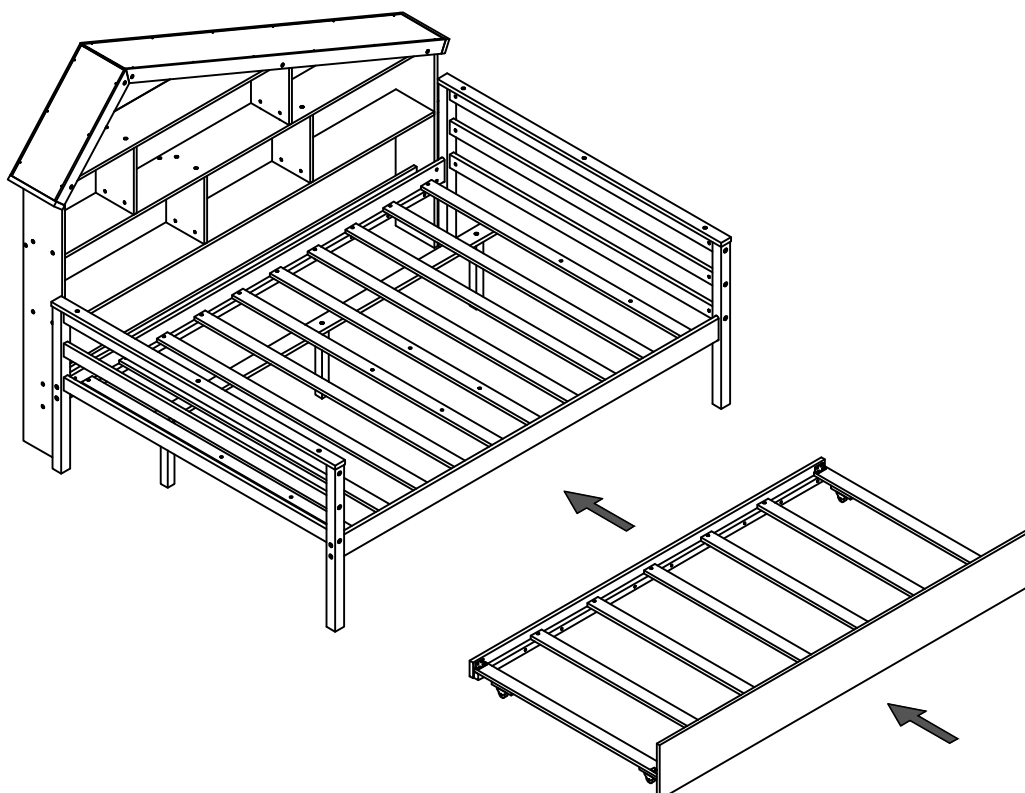

STEP 21:

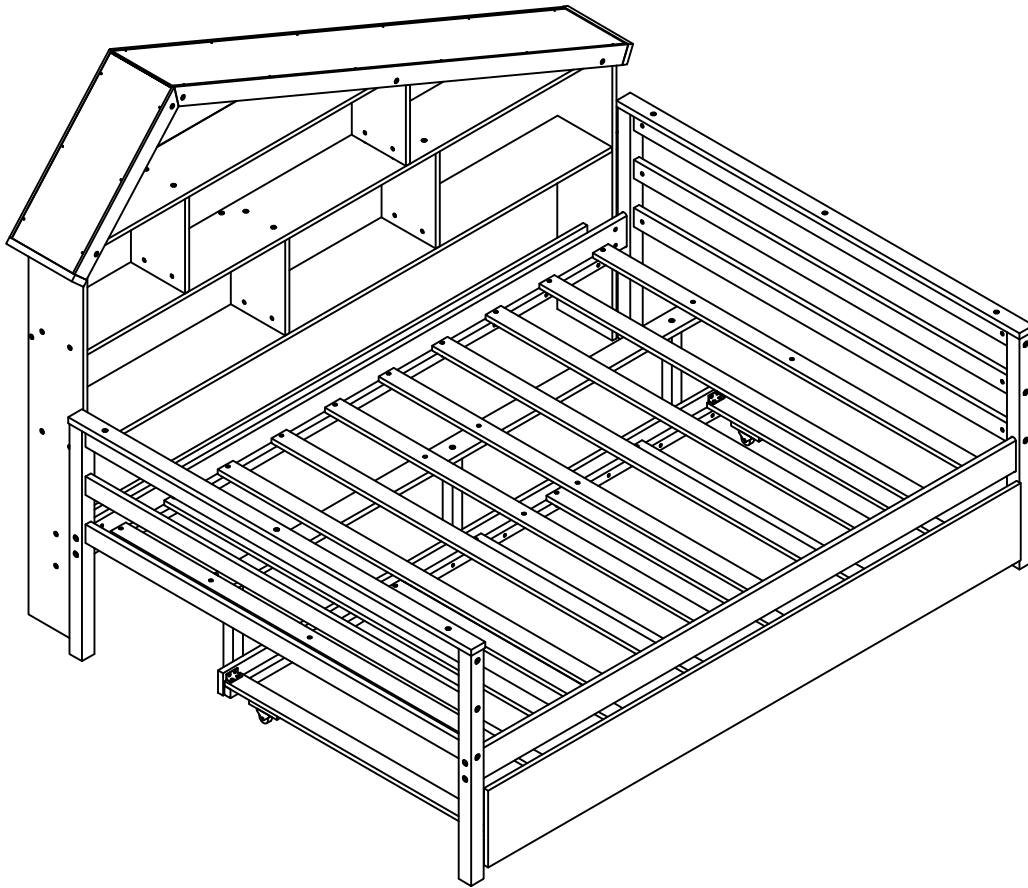

Push Trundle and Drawer under the bottom of Bunkbed.