

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please Email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


WOOD CARE: Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on nonabrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

UPHOLSTERY CARE: To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.



ITEM ID: MED5900A

ITEM DIMENSION: L 47.2 x W 17.7 x H 20.4

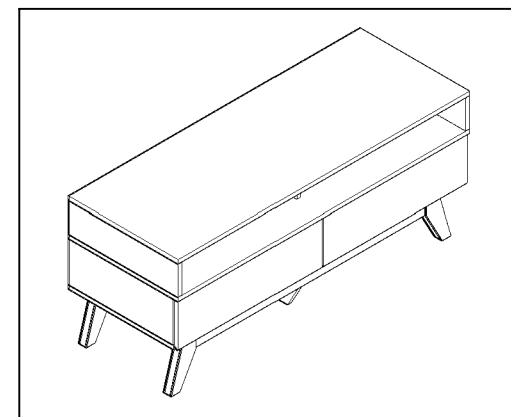

Total Weight Capacity : 196 lbs.
Warning: Do not stand on the cabinet.
Warning: Do not over torque bolts.



Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
1	Upper Top Panel		1x	6	Down Side Panel (R)		1x	11	Down Bottom Panel		1x
2	Upper Bottom Panel		1x	7	Down Center Panel		1x	12	Leg Long Frame		2x
3	Upper Side Panel		2x	8	Back Mdf Board		1x	13	Leg Short Frame		2x
4	Upper Center Panel		1x	9	Down Front Top Panel		1x	14	Leg Support Panel		2x
5	Down Side Panel (L)		1x	10	Down Back Top Panel		1x	15	Leg Center Support Panel		1x

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
16	Drawer Face Panel (L)		1x	21	Leg Panel (L)		2x				
17	Drawer Face Panel (R)		1x	22	Leg Panel (R)		2x				
18	Drawer Side Panel		4x								
19	Drawer Back Panel		2x								
20	Drawer Mdf Board		2x								

Part List and Hardware List

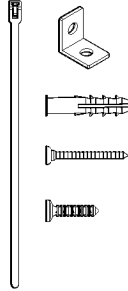
PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY	PIECE	DESCRIPTION	PICTURE	QTY
A	Cam Pin M5x24MM		25x	F	Screw M6x50MM		8x	K	Allen Key M4 x M4		1x
B	Cam Lock M15 x 12MM		25x	G	Screw M4x28MM		4x		Tip Over Kit		1x
C	Wood Dowel M8x30		44x	H	White Leg Pin M14 x 13MM		6x				
D	Drawer Slide 14" Screw M3.5x12MM		2x 24x	I	Screw M4x38MM		16x				
E	JCBC Screw M6x35MM		8x	J	Screw M3.5x16MM		5x				

PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly (included): Allen Key.

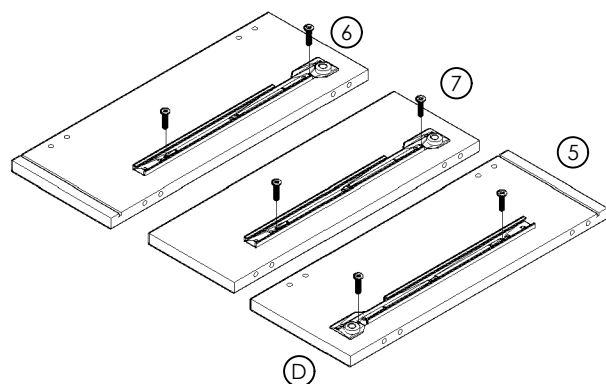


Step 1: Take the moving part of the slide. Align it with your marks on the side of the drawer. Make sure the slides are positioned evenly and level. Screw the slides into the drawer using the screws provided.

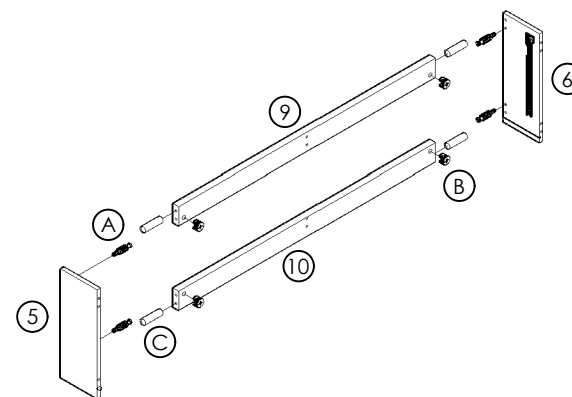


Step 2: As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key then turn the minifix housing so it tighten over the mini fix bolt.

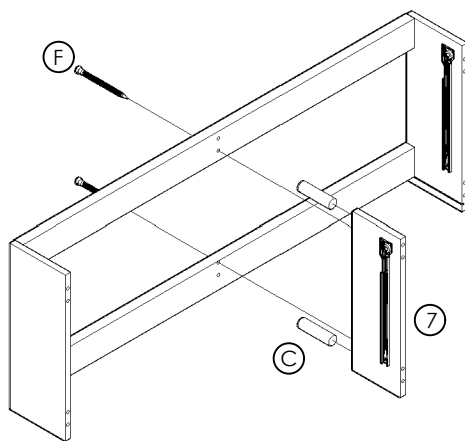


Step 3: Install the hardware and insert the screw (F) on holes of panel using allen key (K). Hold the allen key firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

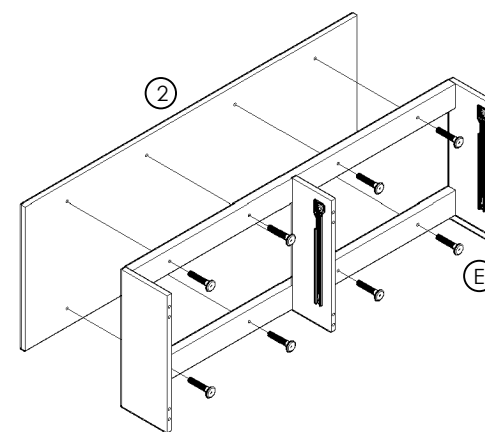


Step 4: Please insert the screw (E) on holes of panel using a allen key(K). Hold the allen key firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

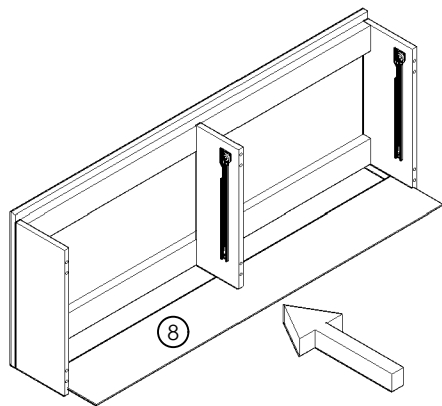


Step 5: On the position, Installation the Back Mdf Board. Insert the Back Mdf Board into the groove of panel.

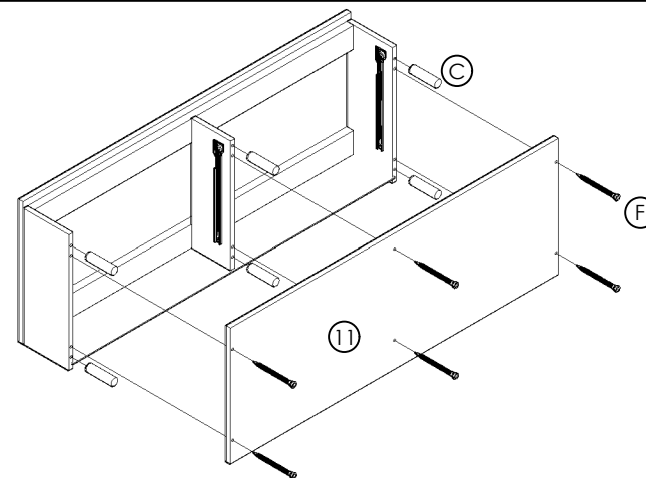


Step 6: Install the hardware and insert the screw (F) on holes of panel using allen key(K). Hold the allen key firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

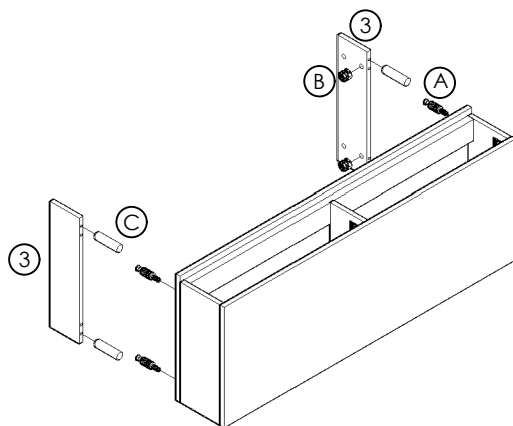


Step 7:As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key then(K) turn the minifix housing so it tighten over the mini fix bolt.

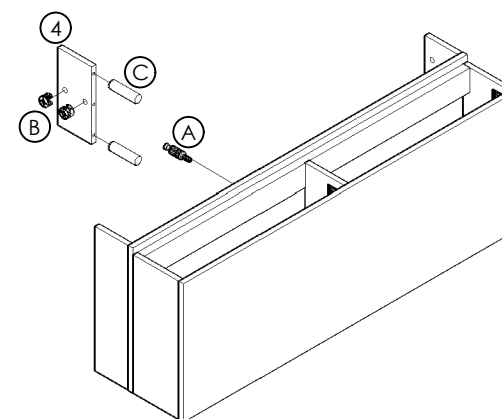


Step 8:Attach the panel on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key(K) then turn theminifix housing so it tighten over the mini fix bolt.

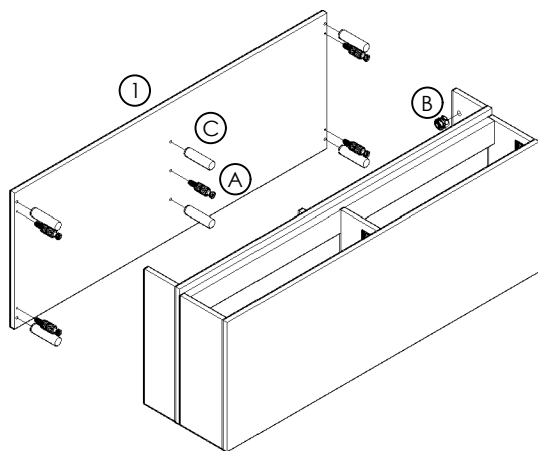


Step 9: As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key(K) then turn the minifix housing so it tighten over the mini fix bolt.

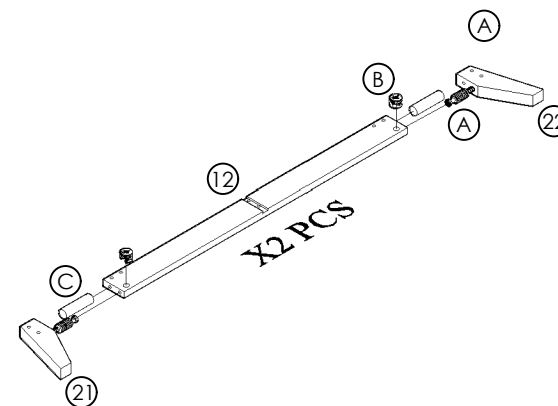


Step 10: As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key(K) then turn the minifix housing so it tighten over the mini fix bolt.

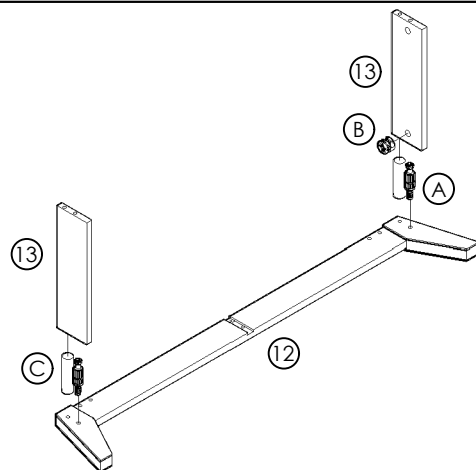


Step 11: As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key(K) then turn the minifix housing so it tighten over the mini fix bolt.

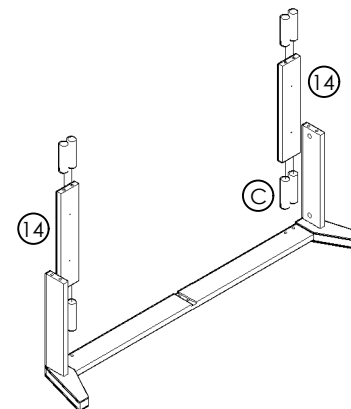


Step 12: Attach panel using the hardware provide.

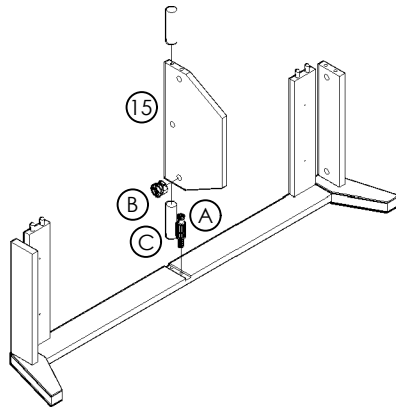


Step 13: As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key(K) then turn the minifix housing so it tighten over the mini fix bolt.

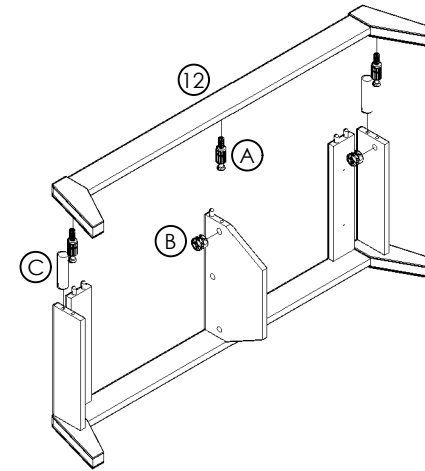


Step 14: Attach the panel with the hardware provide. As shown,the head of minifix housing goes into the open mouth of the mini fix bolt. Use Allen Key then turn the minifix housing so it tighten over the mini fix bolt.

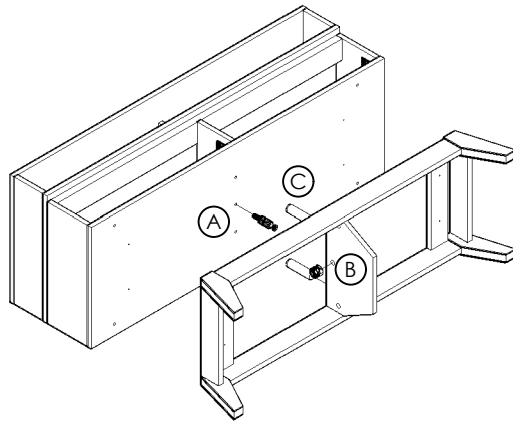


Step 15: As shown, on the position with using the hardware provide, the head of minifix housing goes into the open mouth of the mini fix bolt, Use Allen Key then turn the minifix housing so it tighten over the mini fix bolt.

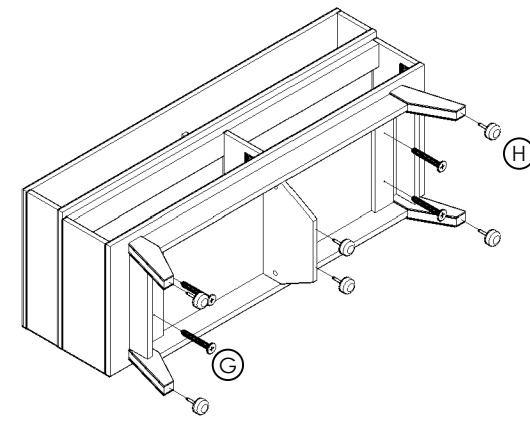


Step 16: Position the panel in the place. Align screw with use a screwdriver to secure them into place. And then, insert the white leg pin using a hammer.

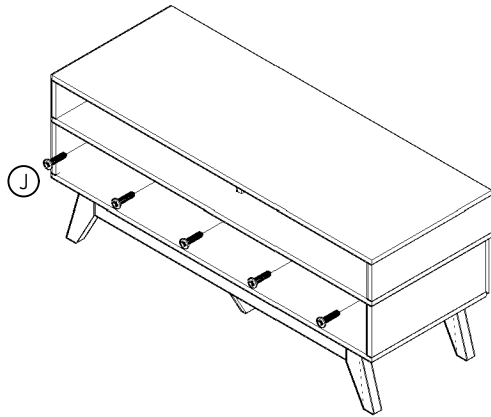


Step 17: Please insert the screw (J) on holes of panel using a screwdriver. Hold the screwdriver firmly and turn it clockwise to tighten the screw. Make sure the panel is firmly secured without being overtightened.

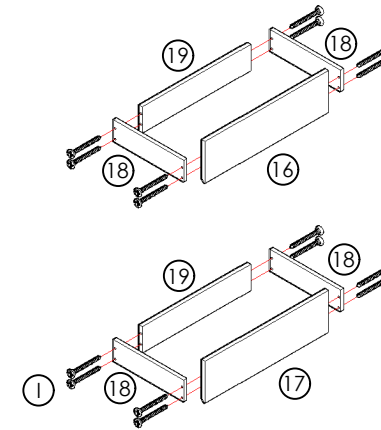


Step 18: Position the panel in the place. Align screw with use a screwdriver to secure them into place. Hold the screwdriver firmly and turn it clockwise to tighten the screw.

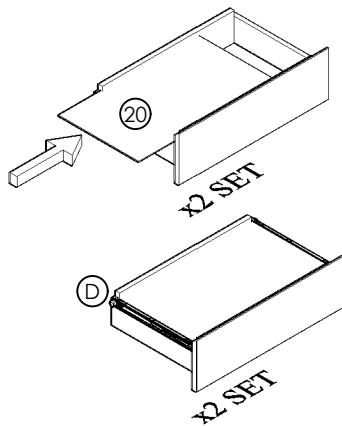

Step 19: Installation the Back Mdf Board. Insert the Back Mdf Board into the groove of panel. Then tight the drawer slide with screw provide using screwdriver.

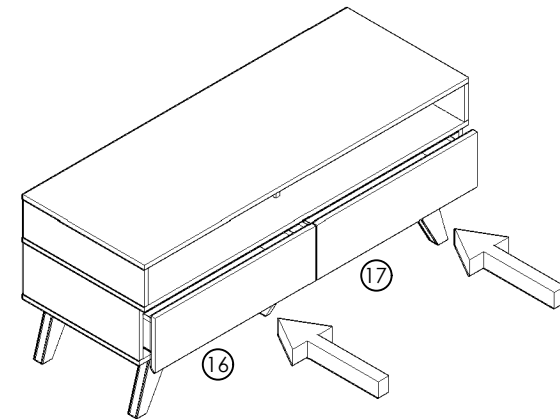

Step 20: Slide the drawer into the cabinet.

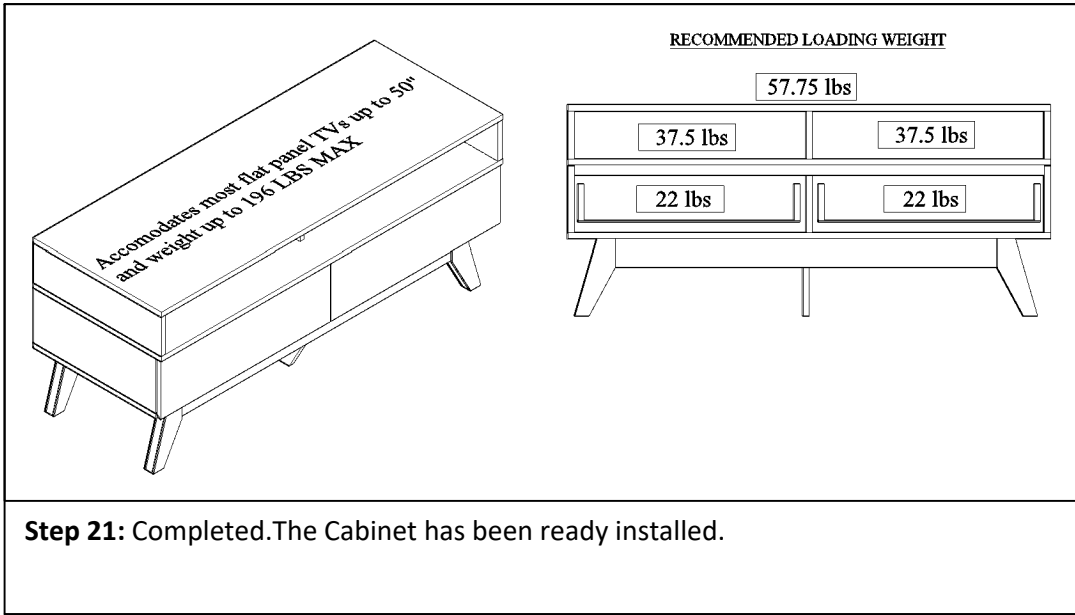

ANTI-TIP DEVICE INSTALLATION INSTRUCTION

IMPORTANT SAFETY INSTRUCTIONS

Read and follow all instructions when using the range to prevent the risk of personal injury or damage. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.



This is the safety alert symbol. This symbol alerts you to potential hazards that can result in property damage and/or serious bodily harm or death. All safety messages will follow the safety alert symbol and either the word **WARNING** or **CAUTION**. These words means:



WARNING - Indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION - Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

ANTI-TIP DEVICE

! WARNING

- TO REDUCE THE RISK OF TIPPING, THE APPLIANCE MUST BE SECURED BY A PROPERLY INSTALLED ANTI-TIP DEVICE, TO CHECK IF THE DEVICE IS INSTALLED PROPERLY, VERIFY THAT ANTI DEVICE IS ENGAGED, OR GRASP THE TOP REAR EDGE OF THE RANGE BACK GROUND AND CAREFULLY ATTEMPTED TO TILT IT FORWARD. Refer to the installation section for instructions.
- A child or adult can tip the range and be killed.
- Install the anti-tip device to the structure and/or the range. Verify the anti-tip device has been properly installed and engaged following the instructions on the anti-tip bracket template.
- Engage the range to the anti-tip device following the instructions on the anti-tip bracket template. Ensure the anti-tip device is re-engaged when the range is moved by following the instruction on the anti-tip bracket template.
- Re-engage the anti-tip device if the range is moved. Do not operate the range without the anti-tip device in place and engaged.
- See installation instruction for details.
- Failure to do so can result in death or serious injury to children or adults.
- Never remove the dresser/chest of drawer legs. The range will not be secured to the anti-tip bracket if the legs are removed.
- Do not step or sit on drawers. The range could be tipped and injury might result.
- Do not rest large heavy items on the open drawer. The range could tip forward and cause injury.
- Re-engage the anti-tip device after pulling the range out for moving or any other reason.
- Failure to follow these instructions can result in serious injury or death to children or adults.

ANTI-TIP	WITH ANTI-TIP	WITHOUT ANTI-TIP

Installation Instruction :

A tip restraint must be attached to a wall stud using the 2" screw enclosed.

1. Attach a bracket to the back top rail or back top edge of the furniture using the 5/8" screw provided.
2. Locate the second bracket on the wall over a wall stud and 2 inches below the mounting strap secured to the back of your unit. Attach to the wall stud using the 2" screw provided, through the smaller hole.
3. Place the furniture into position so both mounting strap are vertically in line.
4. Lace the end of the restraint releasable zip tie through the larger hole in each mounting releasable zip tie. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Confirm that the releasable zip tie is securely laced and locked.

Part Include :

- 1 Pc
- 2 Pcs
- 1 Pc
- 1 Pc
- 1 Pc

