Product Assembly Instructions

Malory 26" Barstool / Malory 30" Barstool

Helpers needed to assemble: 2

Estimate time frame to assemble: 10 minutes


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may come loose inside the carton during shipment. Please identify and count all parts and compare with the HARDWARE LIST below.


Caution: Please read instructions carefully before unpacking assembly parts. Sharp. exposed staples can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

1. We recommend to assemble this product with the assistance of another person. This will provide a smooth assembly process, and can help eliminate self injuries or damage to the product during assembly.
2. Please do not over tighten screws or bolts until the assembly is completed.
3. Please put all parts on a smooth, flat surface before assembly, and carefully follow the assembly steps to assemble your newly purchased product correctly and efficiently.


Retain the Allen key for regular maintenance. We recommend tightening all screws every three months to ensure continued stability and performance.

STEP1:
Turn the Seat (B) upside down and place the Seat Base Frame (A) underneath the seat to align the mounting holes. Attach the seat to the seat base using the 4 Bolts (1), Spring Washers (2) and Flat Washers (3) as shown in the diagram. Tighten the bolts securely using the provided Allen key (4).

#	Picture	Description	Q'TY
A		Seat Base Frame	2
B		Seat	2
1		Ø1/4" x 1 1/8" Bolts	8
2		Ø1/4" x Ø10 Spring washer	8
3		Ø1/4" x Ø16 Flat washer	8
4		Allen key	2

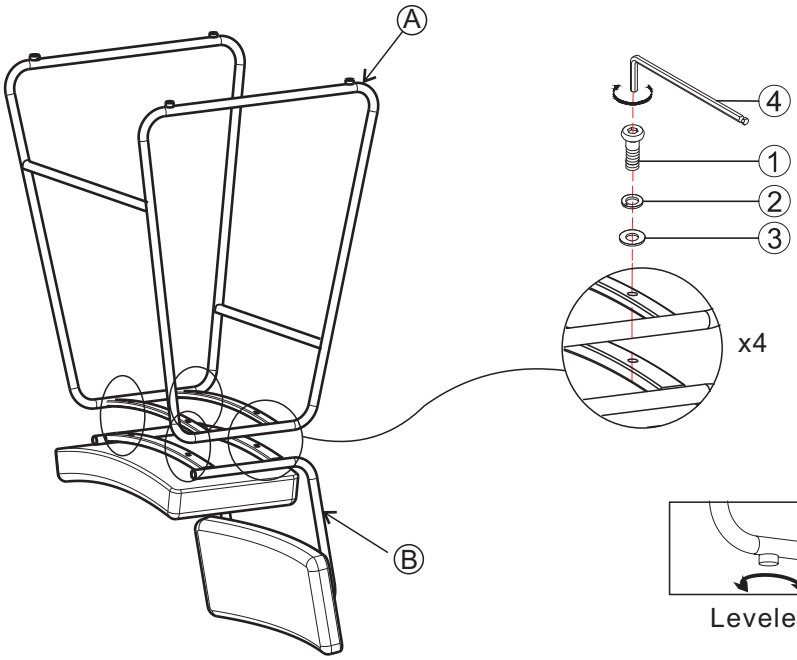

Assembly Is Complete

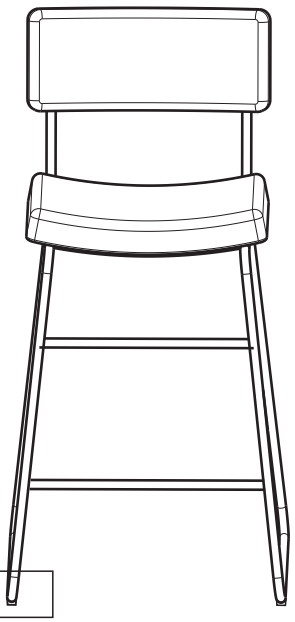

CONGRATULATIONS ON YOUR PURCHASE!



MISSING PARTS? CALL US!



FOR ANY PRODUCT RELATED QUESTIONS, YOU MAY CALL OR EMAIL THE MANUFACTURER AT

818-767-6626

info@armenliving.com